



Step3

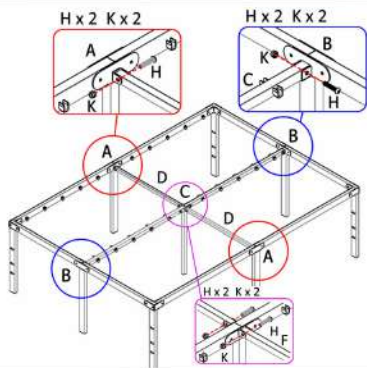

Step4

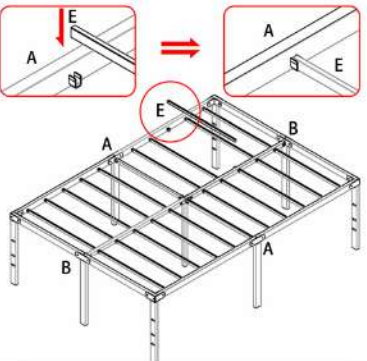














Platform Bed (F/Q/K/CK) SET-UP INSTRUCTION




Spare screws
 ■ short bolt X 1 pc
 ■ long bolt X 1 pc

Note:
 Please insert all bolts into their respective holes and turn the bolts by hand just enough to hold them in place, avoiding full tightness. Once all bolts are positioned, secure them firmly. This approach to aligning and initially securing the bolts ensures a snug fit, thereby enhancing the overall stability of the bed frame.

 L X 2 pcs	 R X 2 pcs	 A X 2 pcs	 B X 2 pcs	 C X 1 pc
 DX 2 pcs	 EX 20 pcs	 long bolt M8*50mm  G X 4 pcs  short bolt M8*38mm  H X 14 pcs	 M8 K X 14 pcs	

Step1

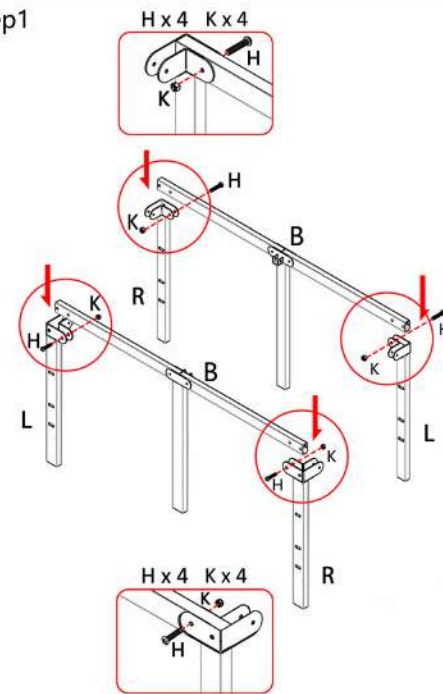

Step2

