


Assembly Instructions

Dressing table

Model:VT02

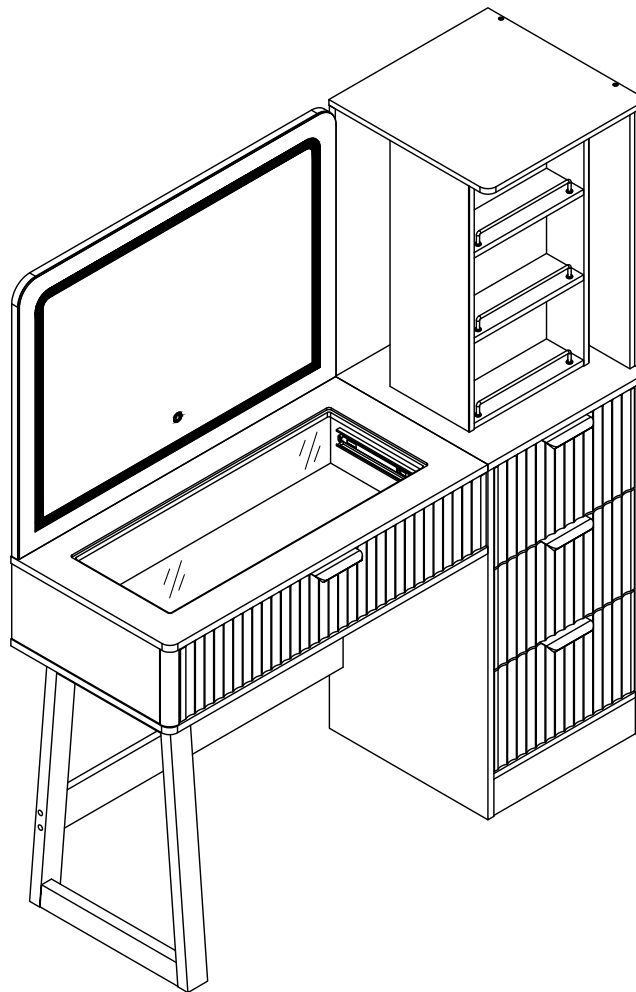

If you encounter any issues , please contact us at ohoholive-service@outlook.com for support



Scan the QR code below to watch the installation video




Missing parts or need help?


Email us at ohoholive-service@outlook.com

YouTube  @Ohoholive


We recommend using a **mat** or **cardboard** to protect your floor. For safety and easier handling, **two people** are required.

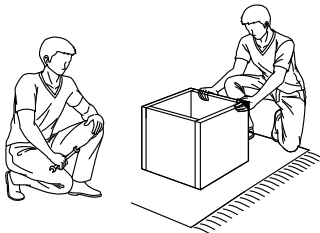

Before starting, please double-check the **Part List** and **Hardware List**. Sorting parts by **number** and hardware by **letter** will make assembly easier.

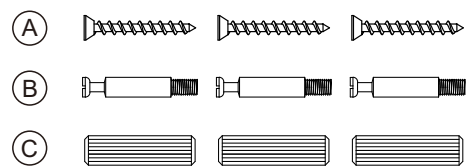

To avoid damaging the wooden boards or screws, we do not recommend using an electric drill. If used, please set it to **low torque**.

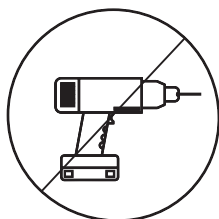

If any parts are **missing** or **damaged**, or if you experience **issues during assembly**, please contact us at ohoholive-service@outlook.com




Contents
















Part List	3-6
Hardware List	7-8
Lower Cabinet Body	9-12
Lower Table Structure	13-17
Upper Rotating Cabinet	18-27
Desktop & Mirror Assembly	28-32
Drawers & Other Parts	33-40



Parts List

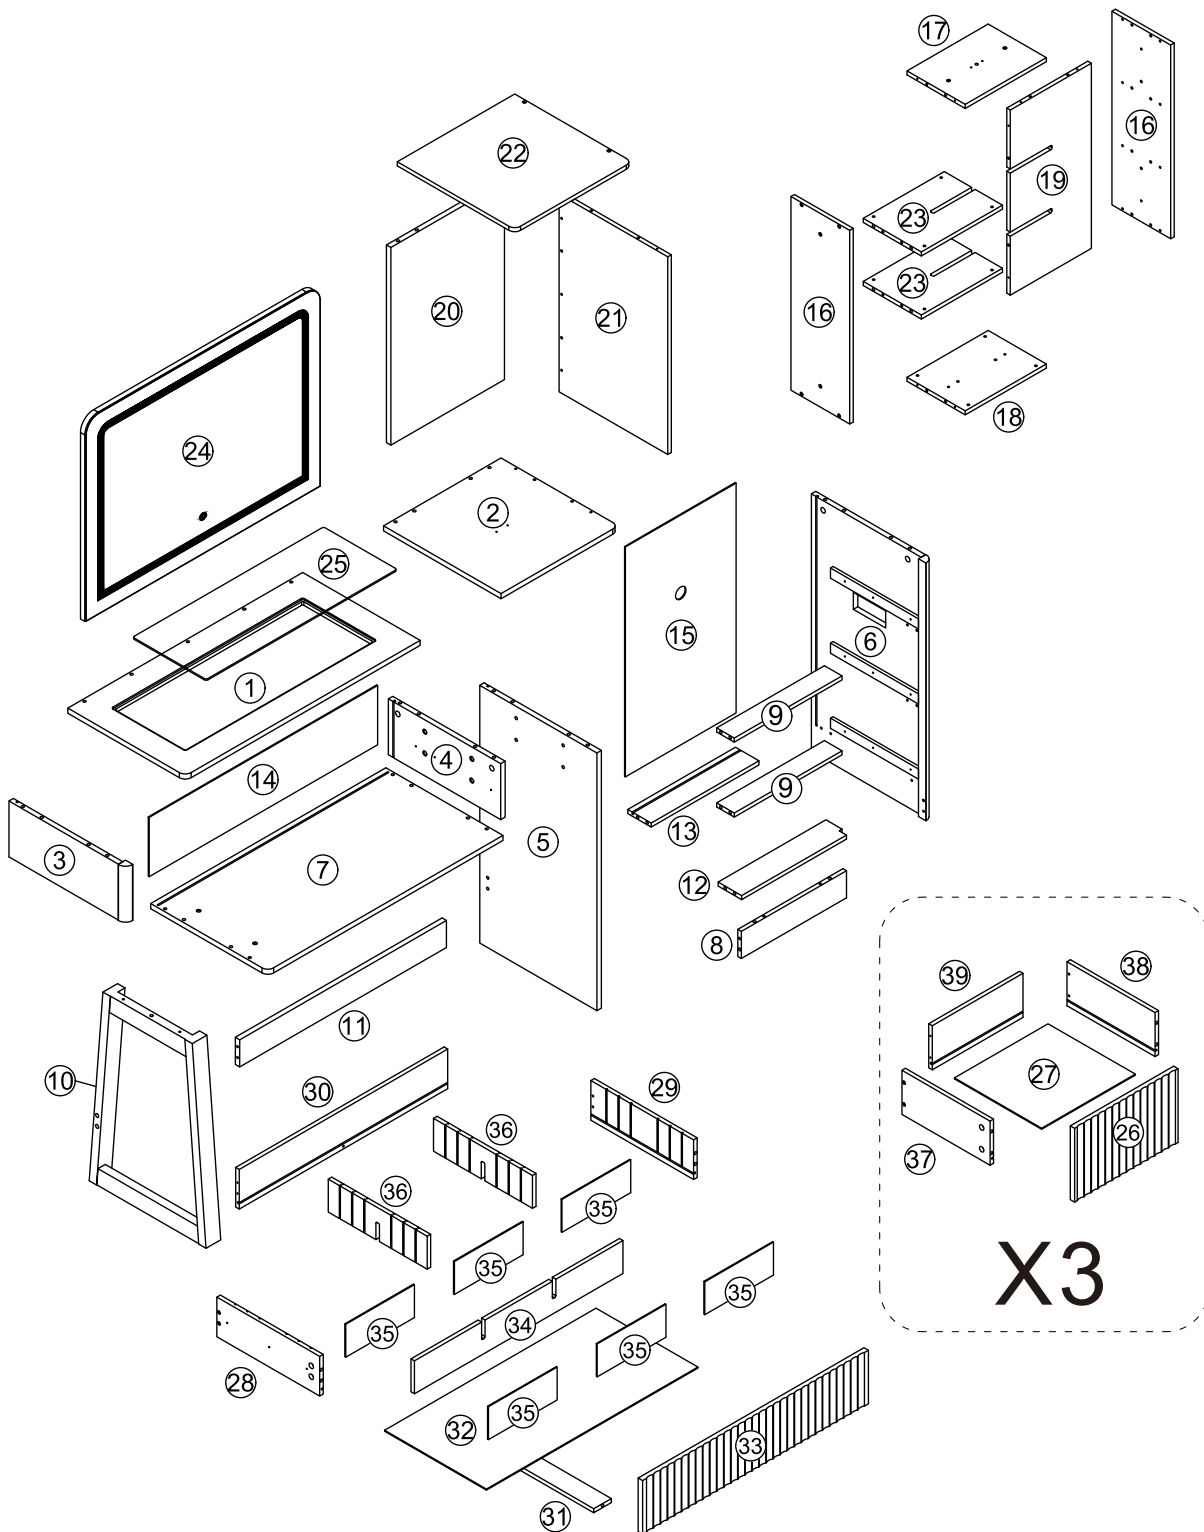

Parts List

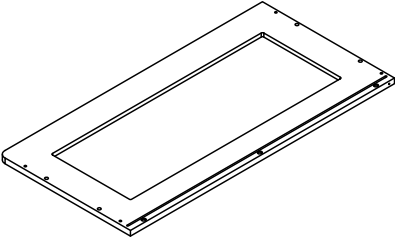
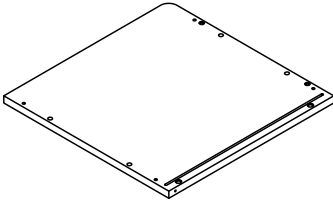
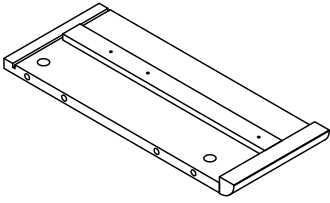
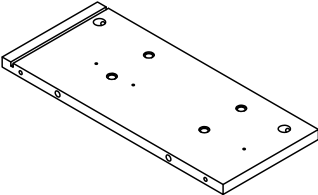
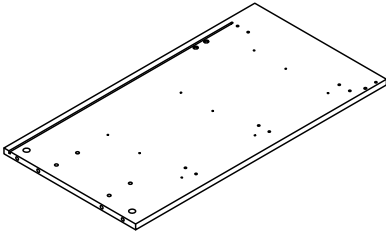
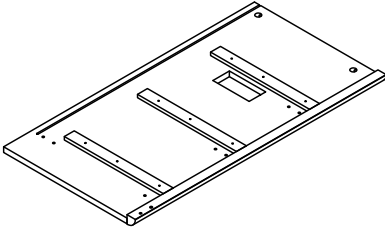
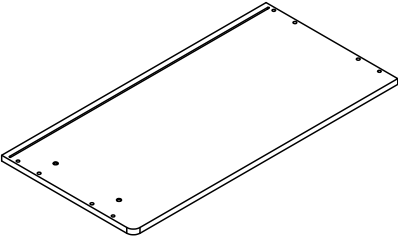
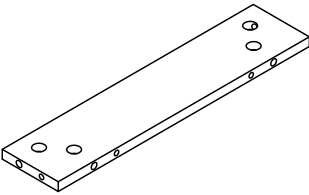
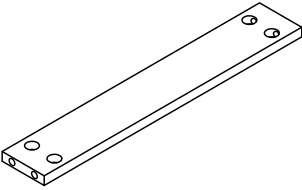
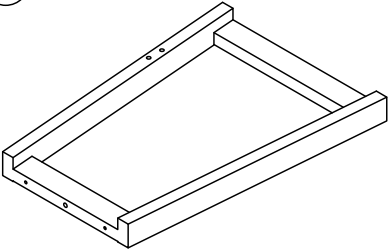
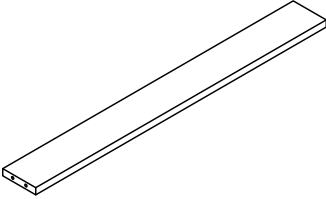
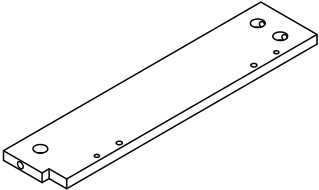
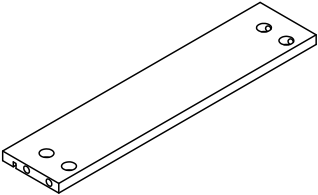
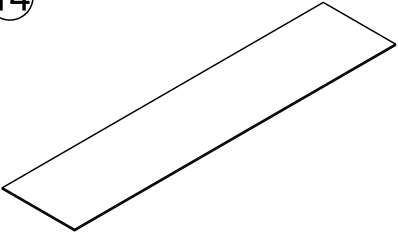
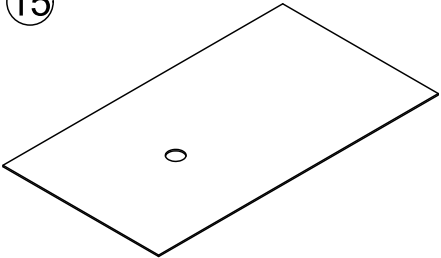
①  1pc	②  1pc	③  1pc
④  1pc	⑤  1pc	⑥  1pc
⑦  1pc	⑧  1pc	⑨  2pcs
⑩  1pc	⑪  1pc	⑫  1pc
⑬  1pc	⑭  1pc	⑮  1pc



Missing parts or need help? Email us at ohoholive-service@outlook.com










Part List | 4

Parts List

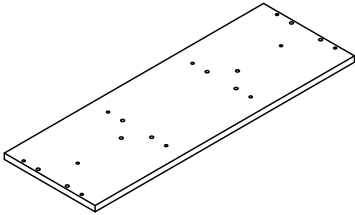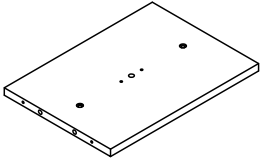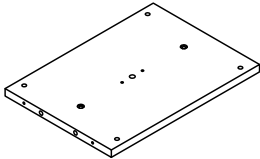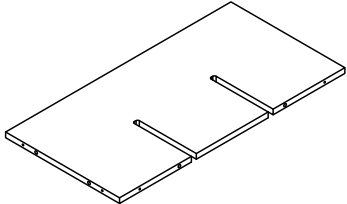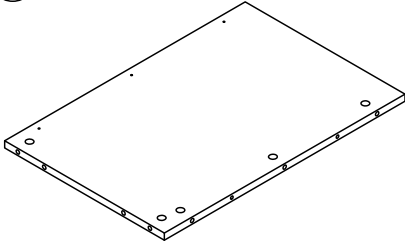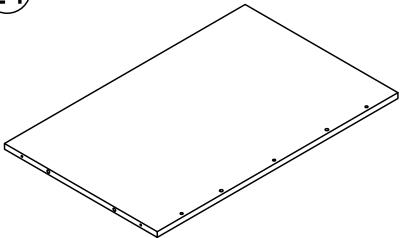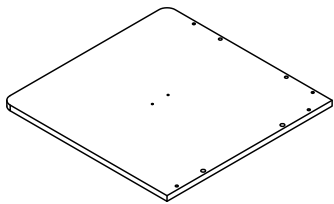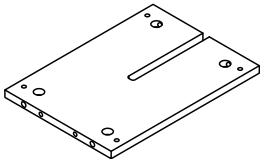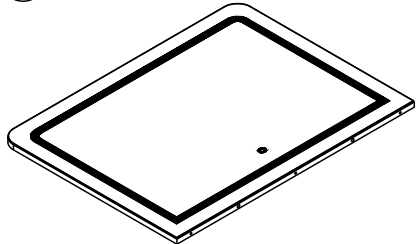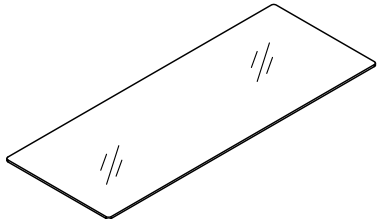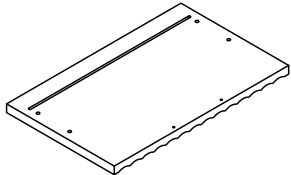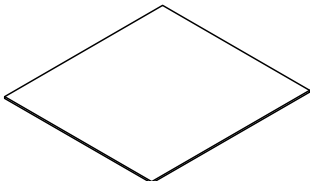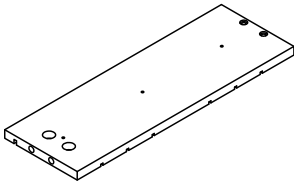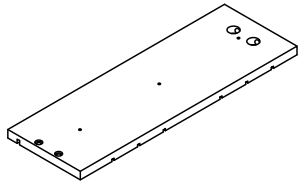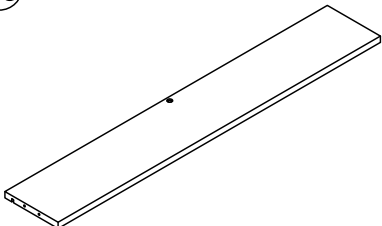①⑥  2pcs	①⑦  1pc	①⑧  1pc
①⑨  1pc	②⑦  1pc	②⑧  1pc
②②  1pc	②③  2pcs	②④  1pc
②⑤  1pc	②⑥  3pcs	②⑦  2 pcs + 1 red velvet cover
②⑧  1pc	②⑨  1pc	③⑦  1pc

















Parts List

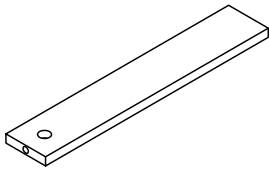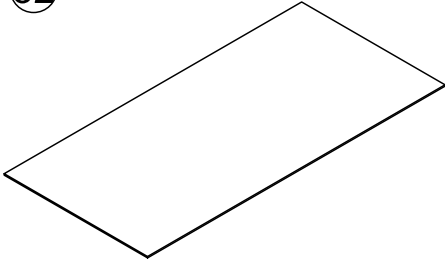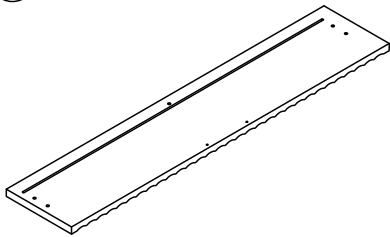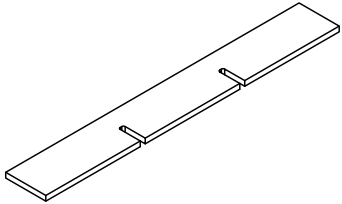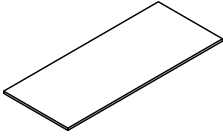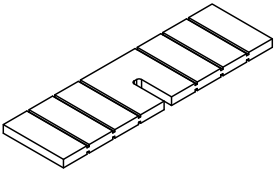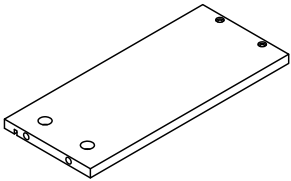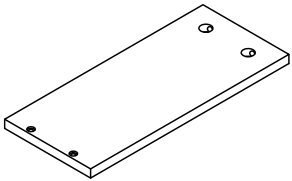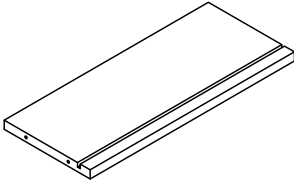31  1pc	32  1pc	33  1pc
34  1pc	35  6pcs	36  2pcs
37  3pcs	38  3pcs	39  3pcs










Hardware List

Notation Explanation: "X52 + 3" = 52 required + 3 spares included.

A X57+3  Ø15*9.5	B X57+3  Ø6.5*35	C X21+2  Ø8*30	D X32+2  Ø6*30
E X72+3  Ø3.5*12	F X2+1  Ø3*12	G X35+2  Ø4*35	H X4  45*12
I X2+1  Ø4*14	J X13+1  Ø6.3*50	K X4  120*38*17	L X1  109*99*38.5
M X3  CL L=300	M X3  DL L=300	M X3  CR L=300	M X3  DR L=300
N X1  145*55*45	O X2+1  Ø5*40	P X2+1  Ø6.3*70	Q X2set Q-1 Q-2  




Hardware List


Ⓡ X1set 	Ⓢ X1 	Ⓣ X4+1  M6*25	Ⓤ X18+1 
Ⓥ X6 	Ⓦ X2  566*198	Ⓧ X1 	Ⓨ X1set 
Ⓩ X1set 			

Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

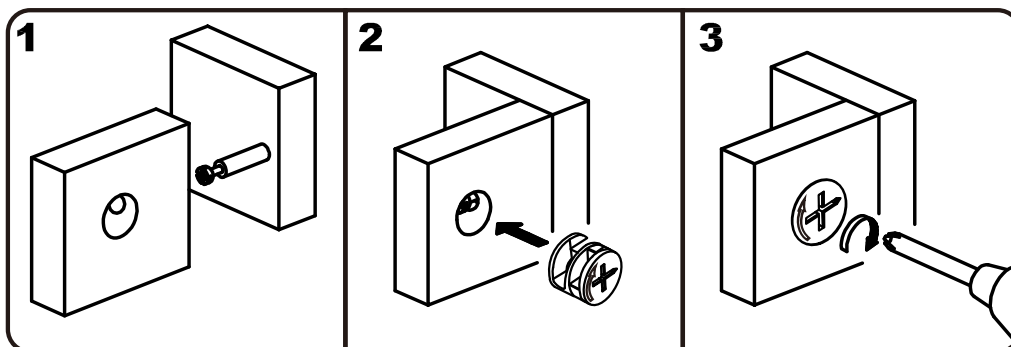



Step 1

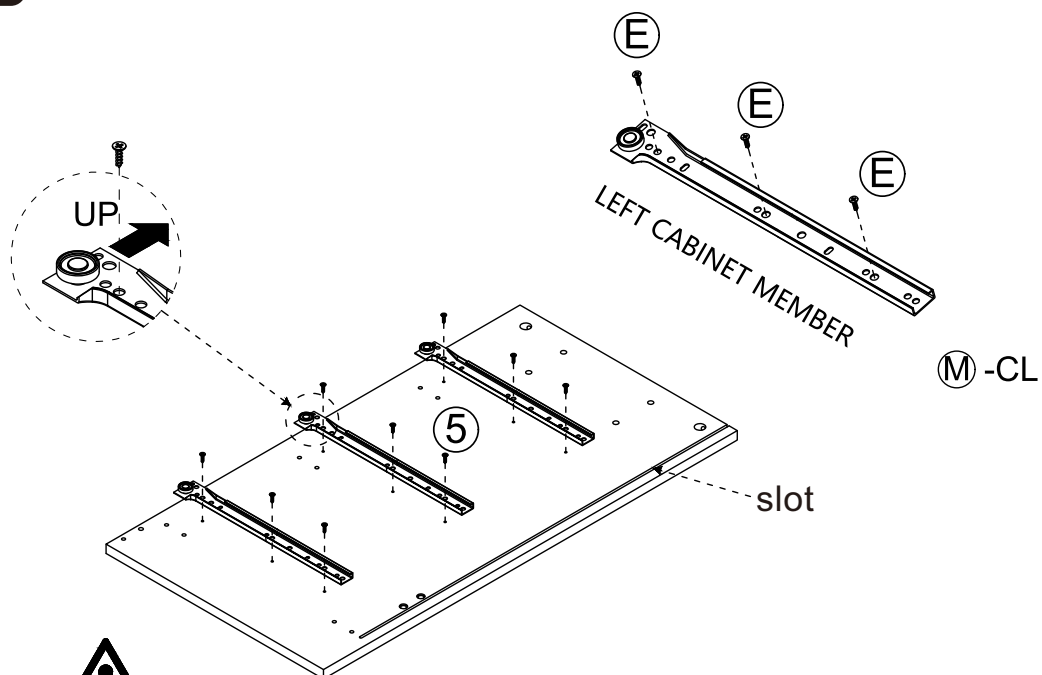


Pay attention to the installation position of 'E' on the slide rail.

(M)	 CL 300	x 3
(E)	 Ø3.5*12	x 9


Step 2

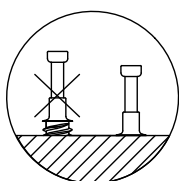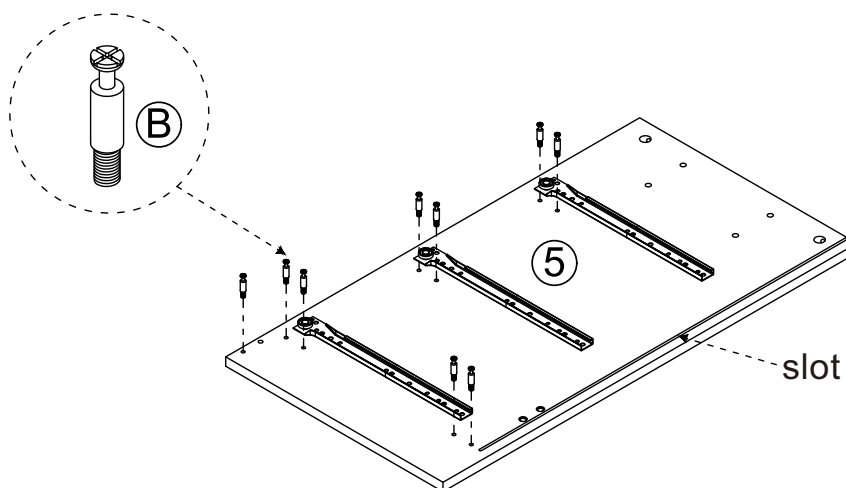

(B)	 Ø6.5*35	x 9
-----	---	-----





Step 3

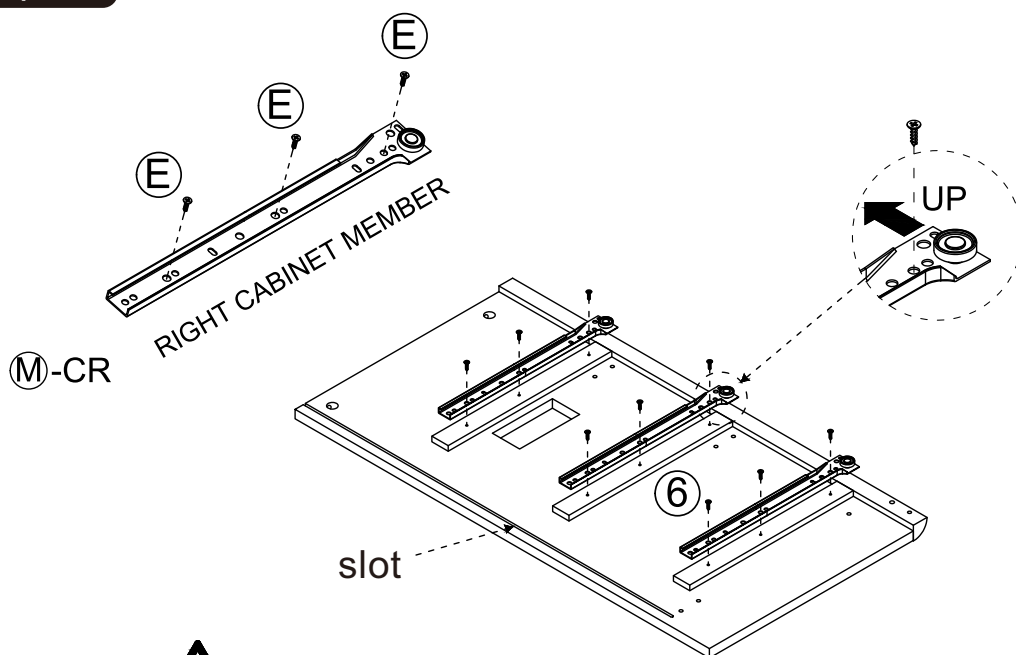


Pay attention to the installation position of 'E' on the slide rail.

(M)	 CR 300	x 3
(E)	 Ø3.5*12	x 9



Step 4

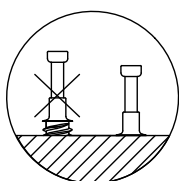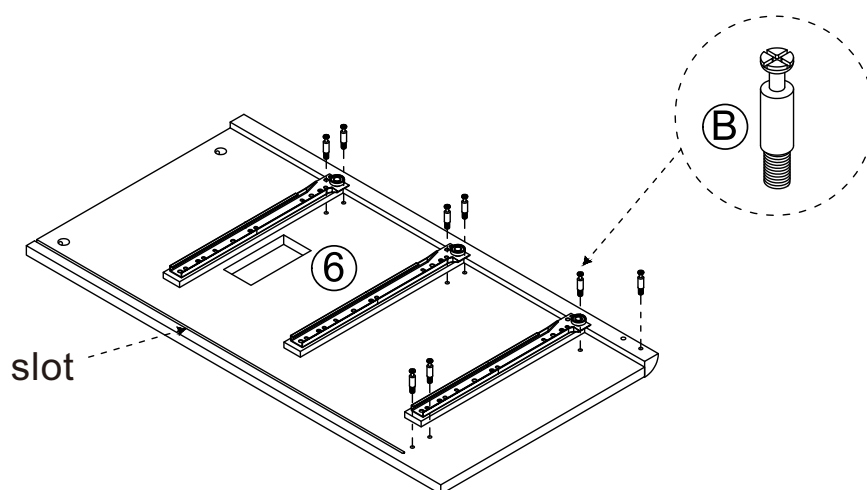

(B)	 Ø6.5*35	x 8
-----	---	-----



Step 5

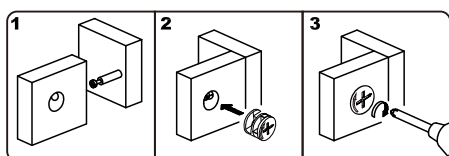
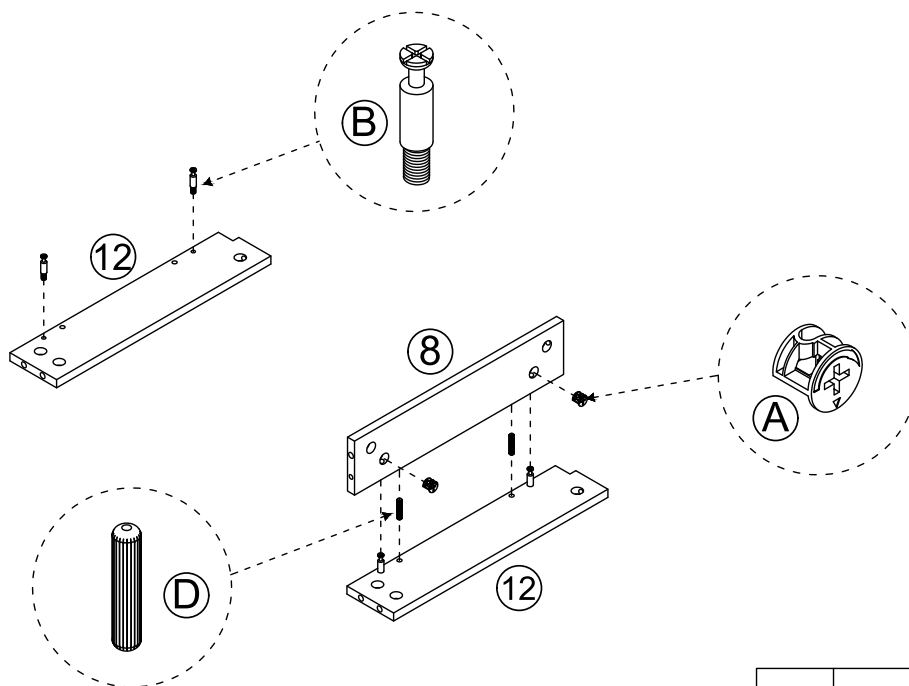


(D)	 Ø6*30	x 2
(B)	 Ø6.5*35	x 2
(A)	 Ø15*9.5	x 2

Step 6





Note the direction of the groove on panel 13

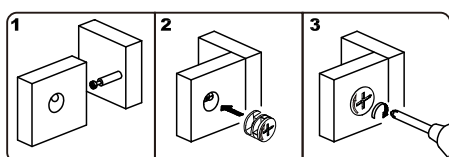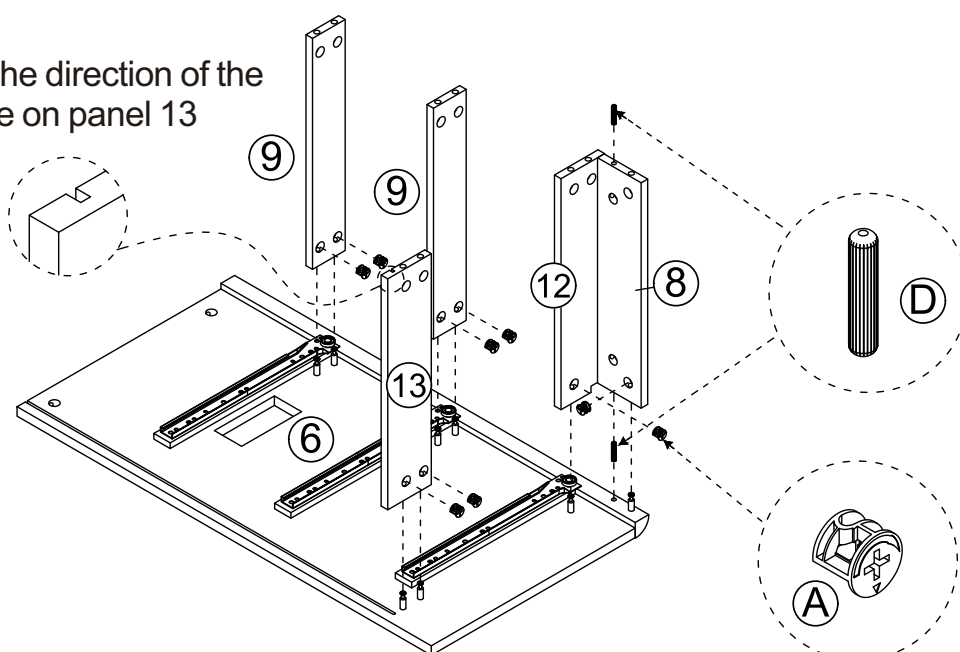

(D)	 Ø6*30	x 2
(A)	 Ø15*9.5	x 8





Step 7

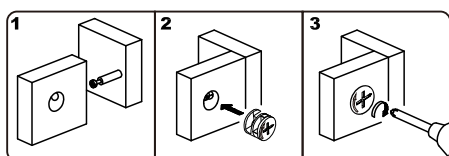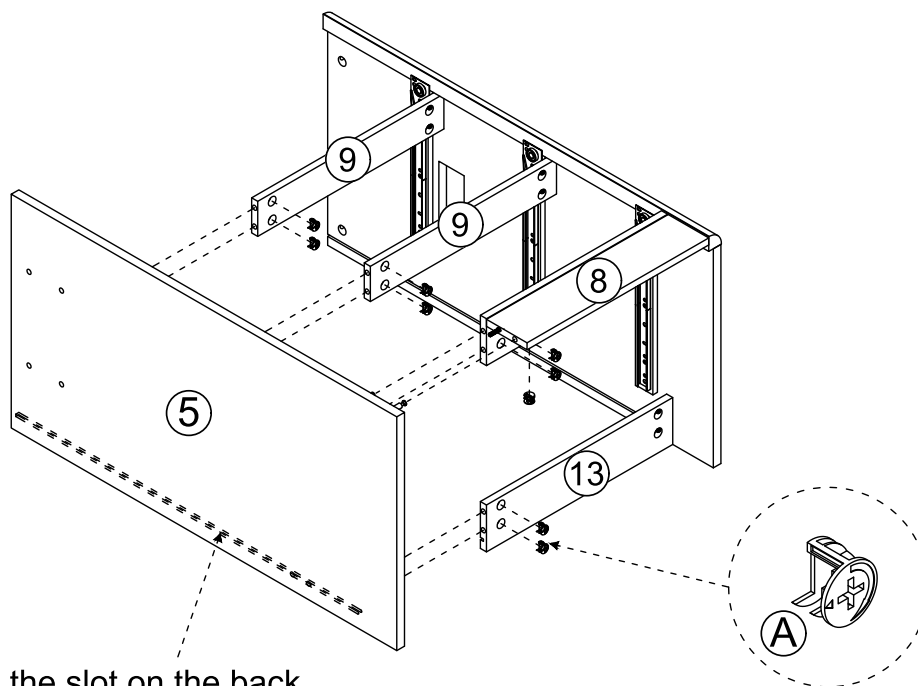

(A)		Ø15*9.5	x 9
-----	---	---------	-----

Step 8

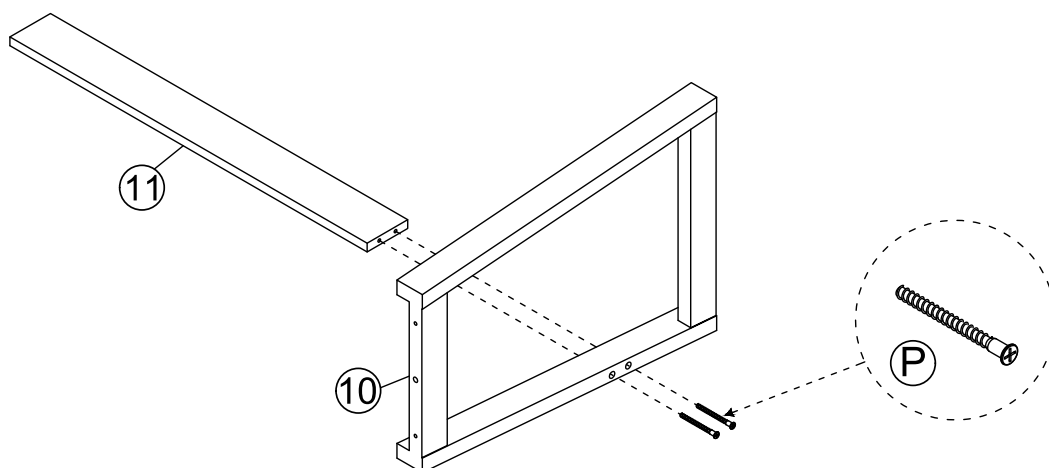

(P)		Ø6.3*70	x 2
-----	---	---------	-----




Step 9


WARNING

How To Separate Three-Section Drawer Slide.


- 1) Pull toward arrow to open the slide until its stops and then flip it over.




- 2) Push plastic lever down and pull apart.




Cabinet Slide Rail




Drawer Slide Rail




Step 10

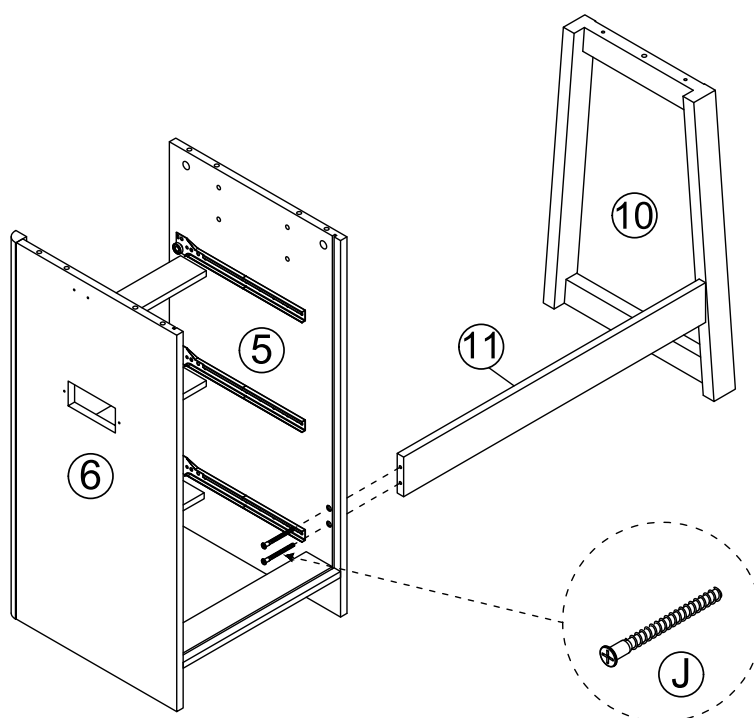

J	 Ø6.3*50	x 2
---	--	-----

Step 11

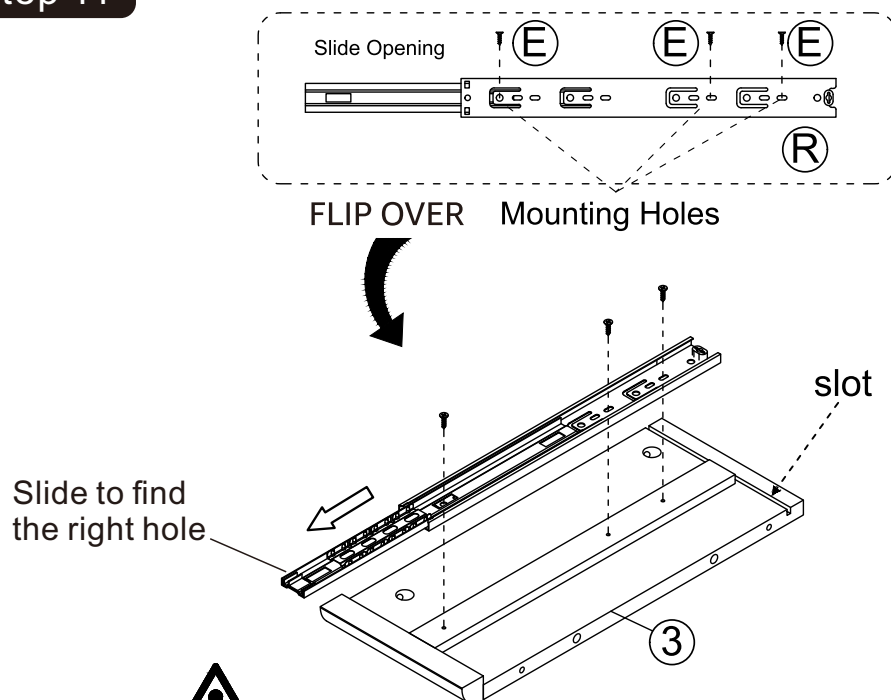


Pay attention to the installation position of 'E' on the slide rail.

E	 Ø3.5*12	x 3
R		x 1




Step 12

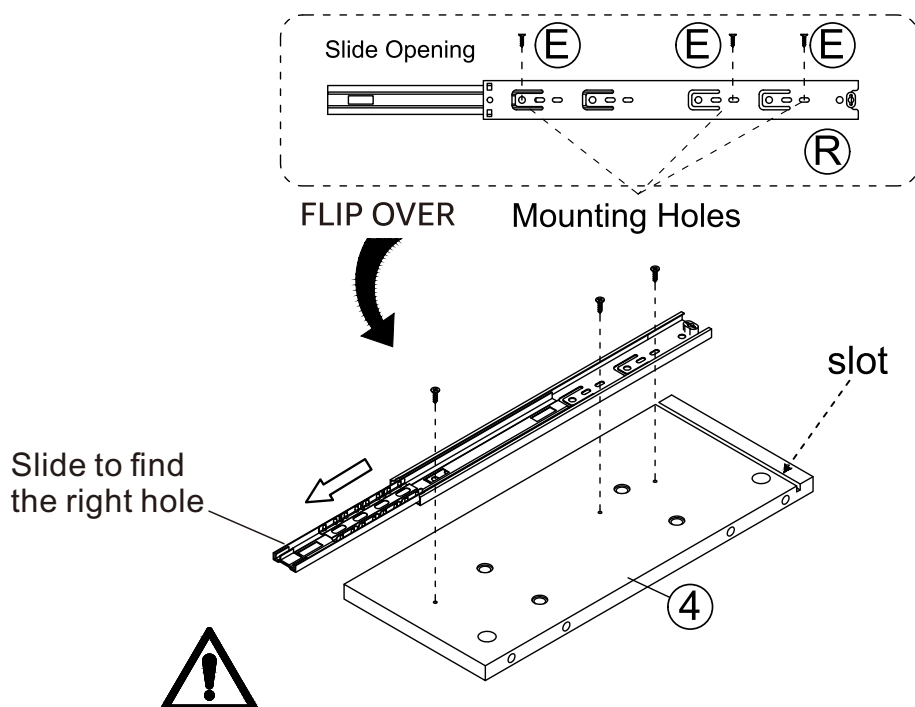

Pay attention to the installation position of 'E' on the slide rail.

(E)	 Ø3.5*12	x 3
(R)		x 1


Step 13

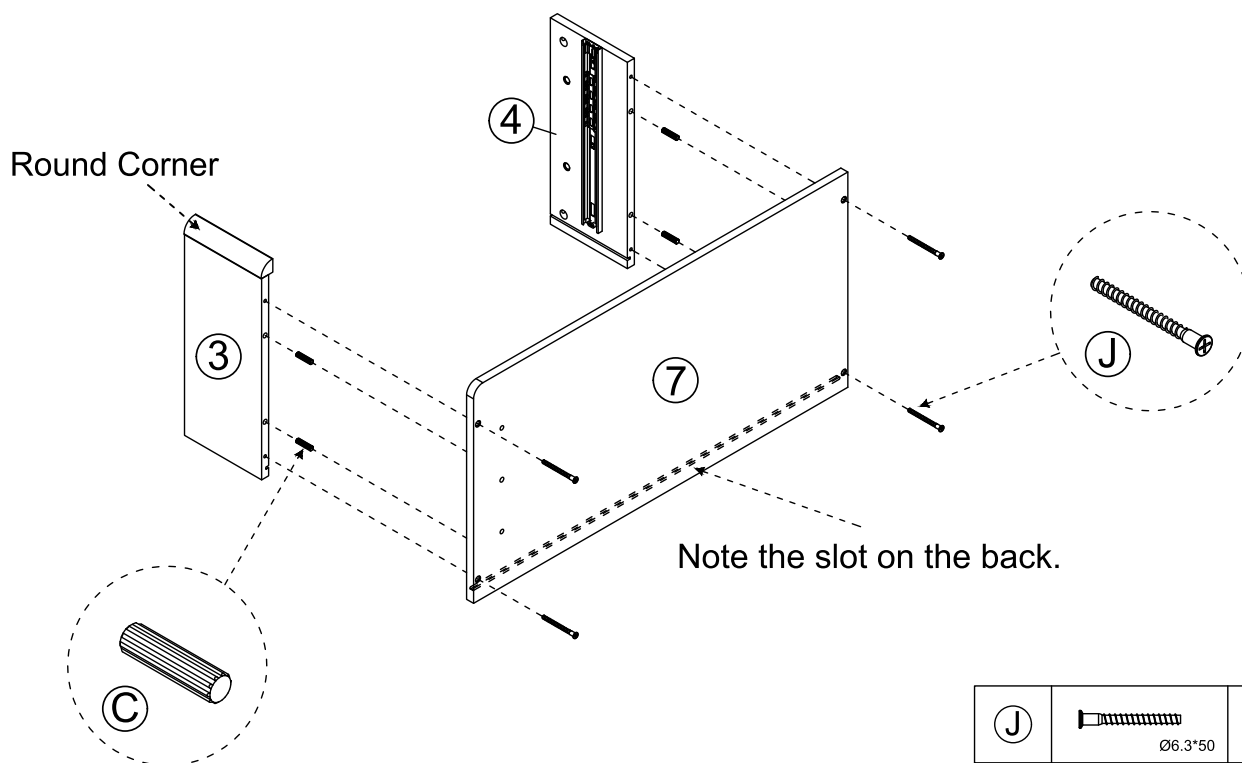


(J)	 Ø6.3*50	x 4
(C)	 Ø8*30	x 4




Step 14

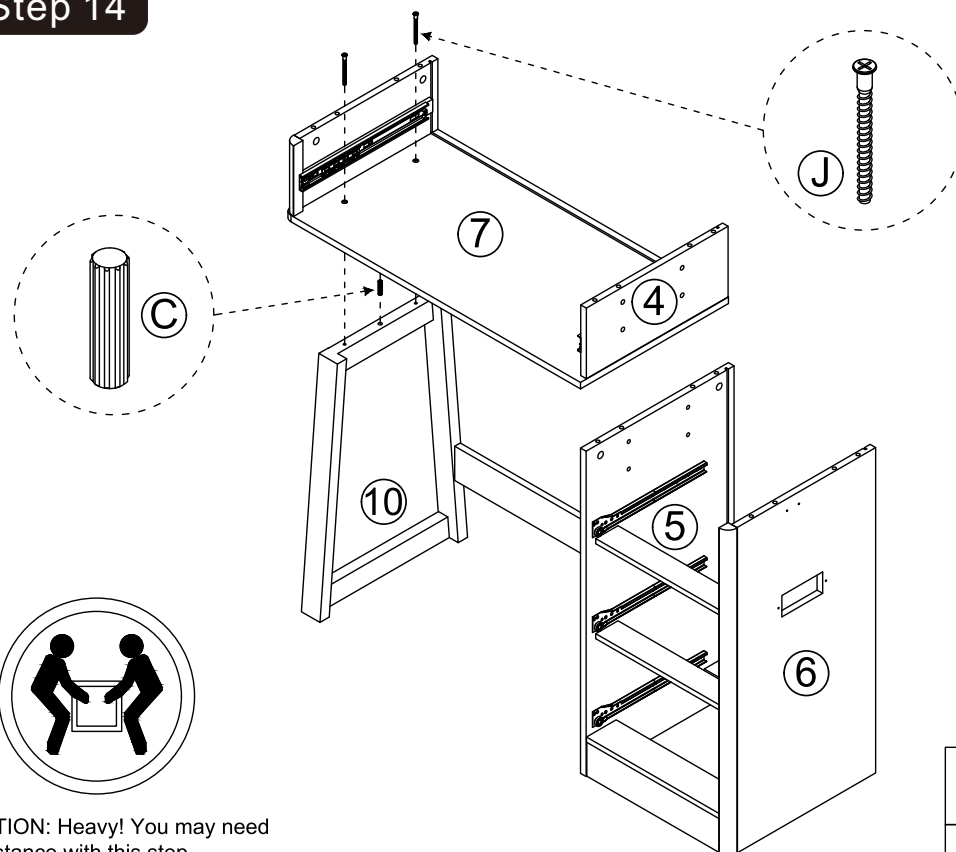

CAUTION: Heavy! You may need assistance with this step.

J	 Ø6.3*50	x 2
C	 Ø8*30	x 1

Step 15

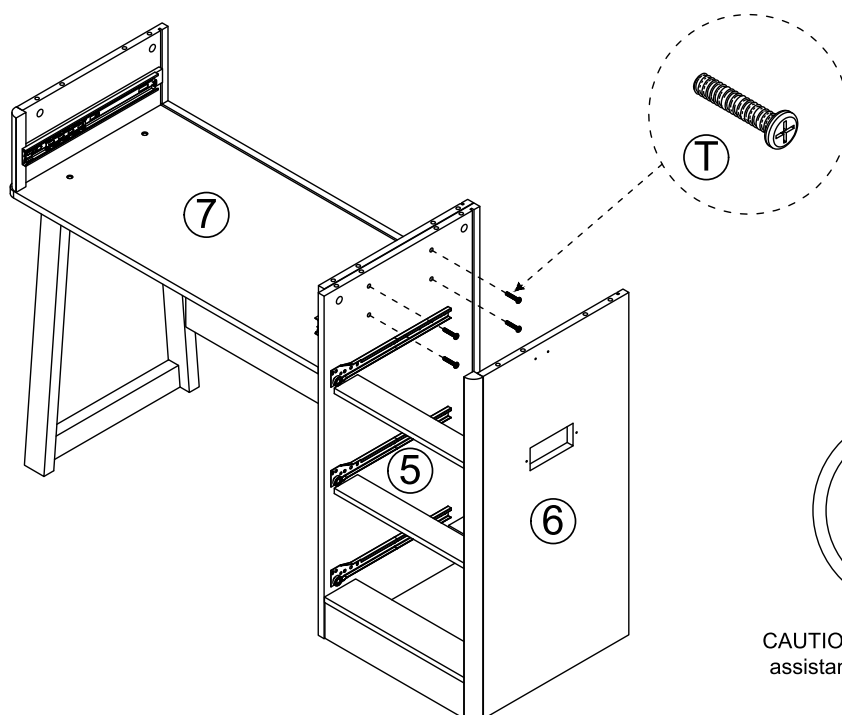


CAUTION: Heavy! You may need assistance with this step.

T	 M6*25	x 4
---	--	-----





Step 16

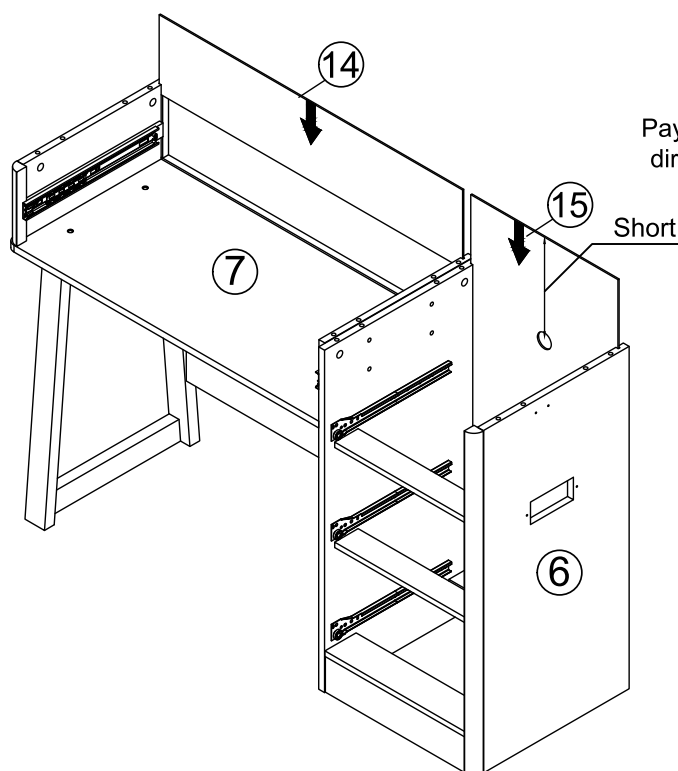

Pay attention to the installation direction of the 15 board.

Step 17

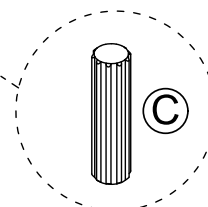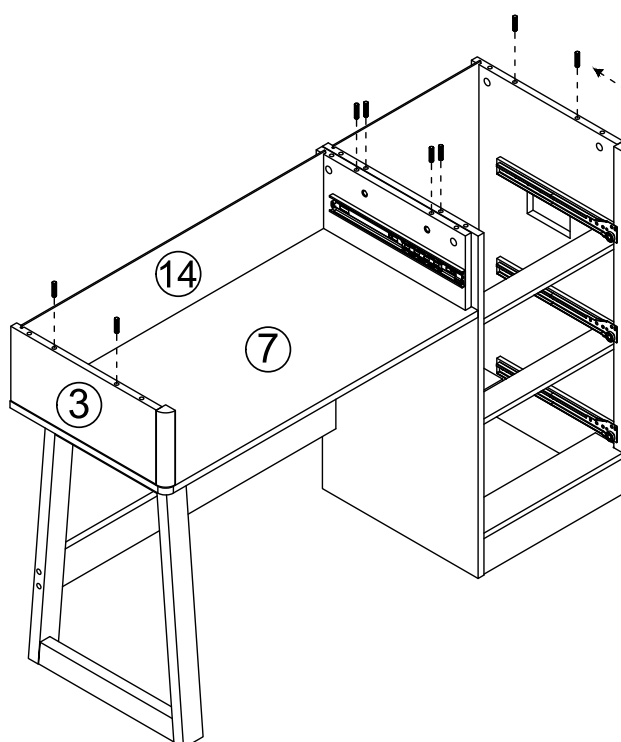

(C)




Ø8*30


x 8



Step 18

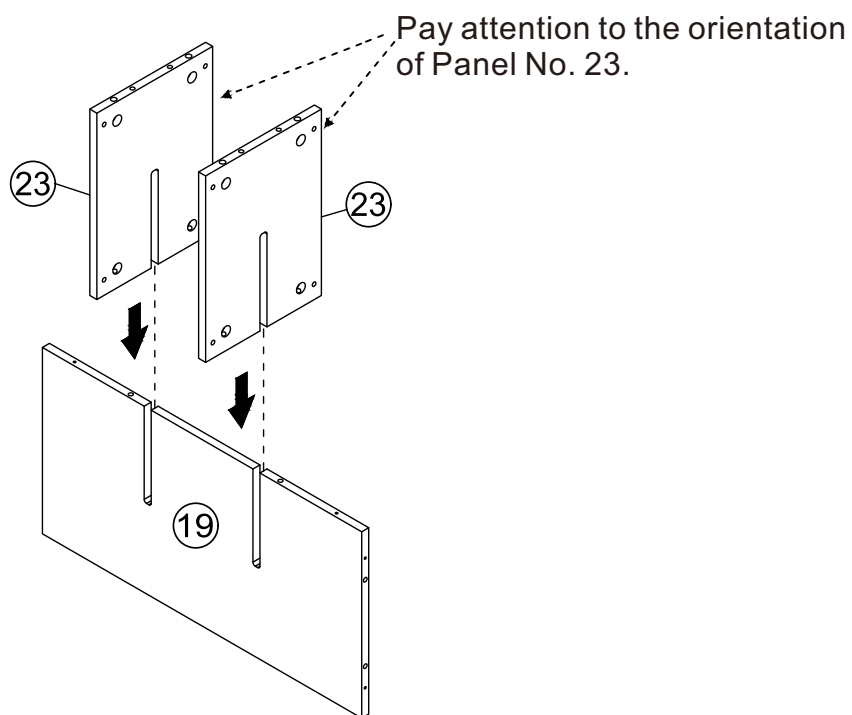


Step 19

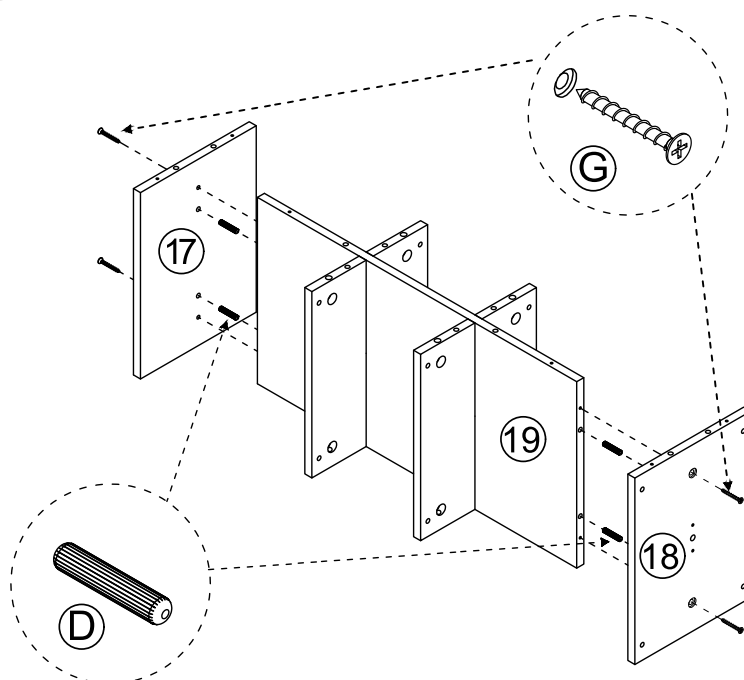

G	 Ø4*35	x 4
D	 Ø6*30	x 4




Step 20

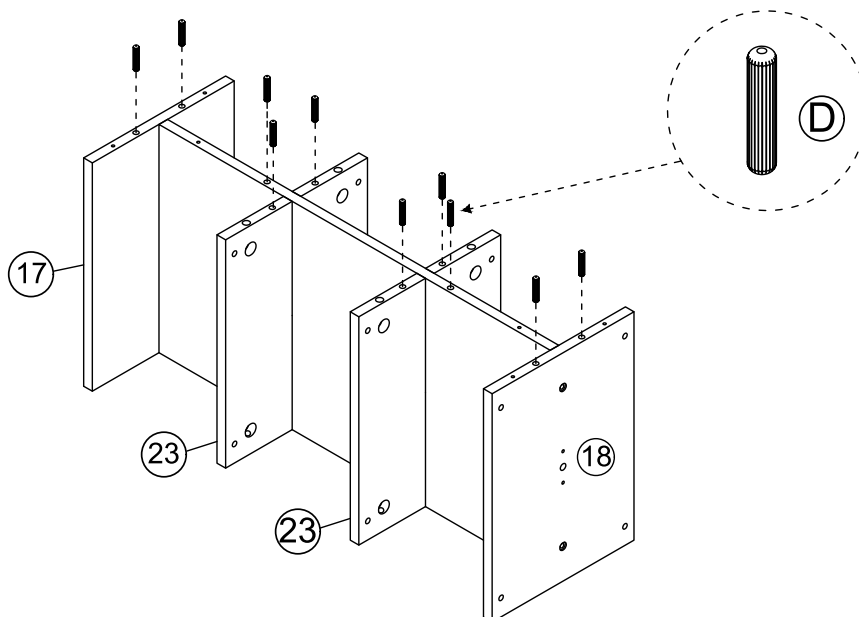



(D)		x 10 Ø6*30
-----	---	---------------

Step 21

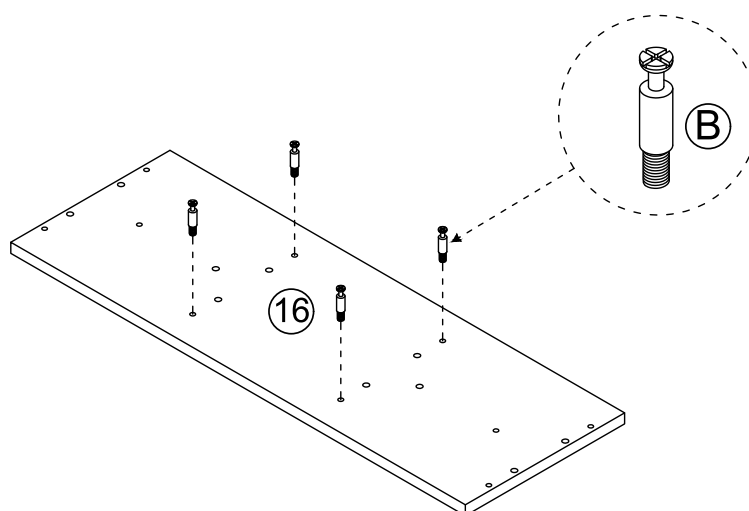



X2

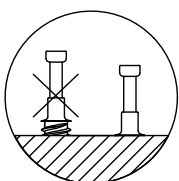

(B)		x 8 Ø6.5*35
-----	---	----------------




Step 22

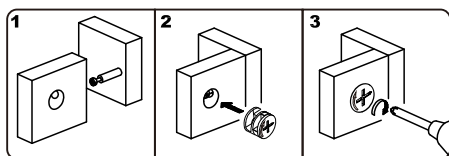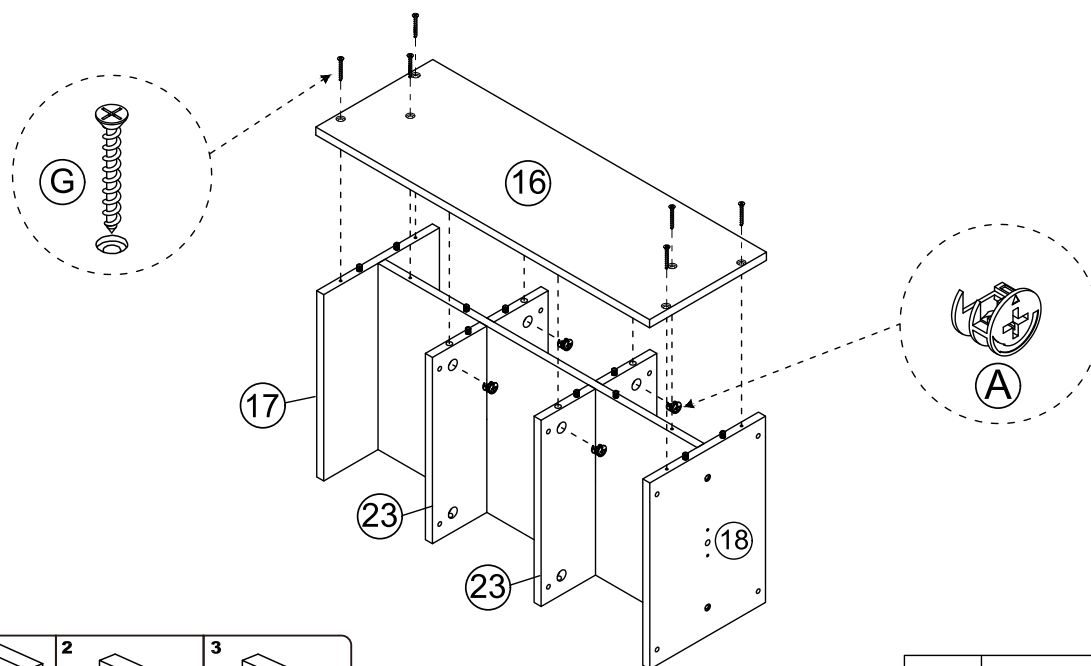

FLIP OVER

(G)	 Ø4*35	x 6
(A)	 Ø15*9.5	x 4

Step 23

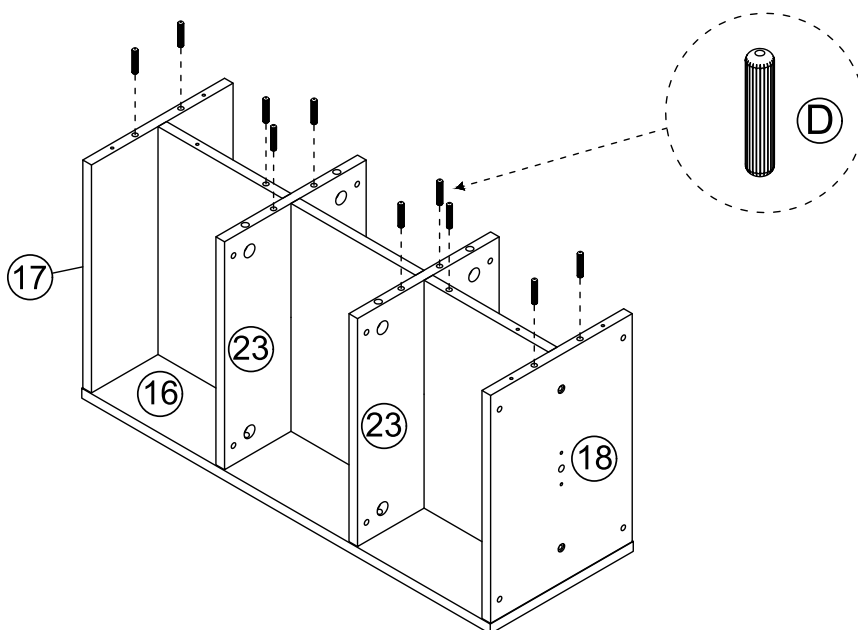



(D)	 Ø6*30	x 10
-----	---	------




Missing parts or need help? Email us at ohoholive-service@outlook.com

Upper Rotating Cabinet | 20



Step 24

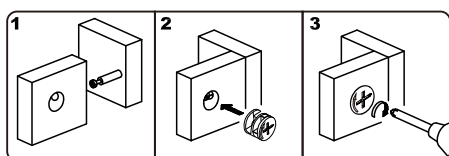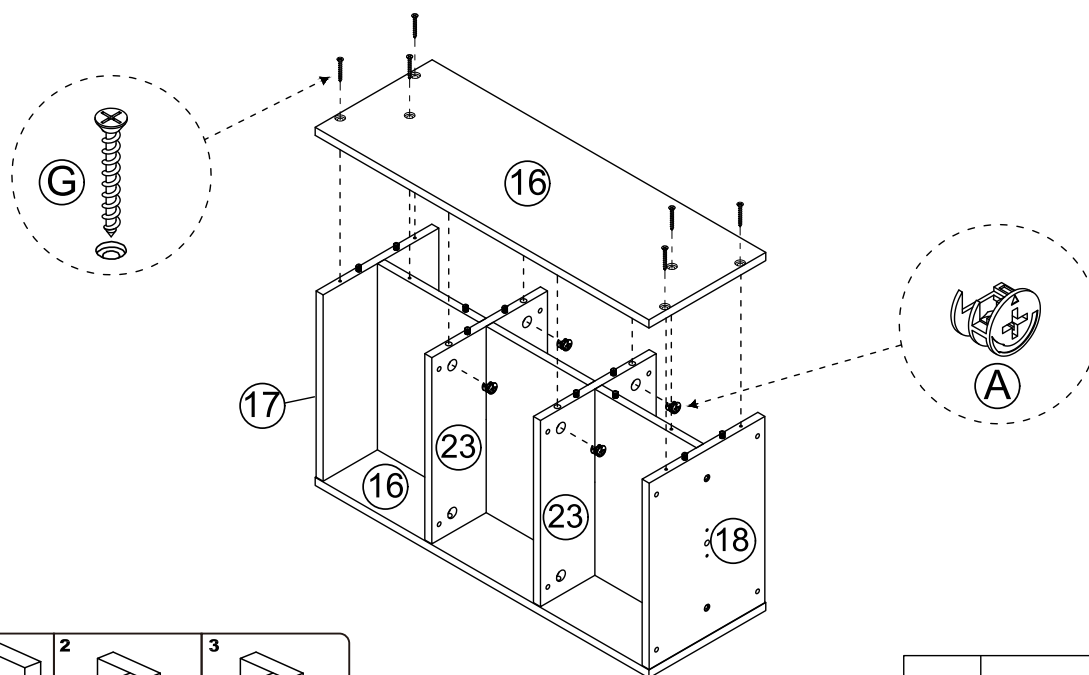


(G)	 Ø4*35	x 6
(A)	 Ø15*9.5	x 4

Step 25


Optional Step

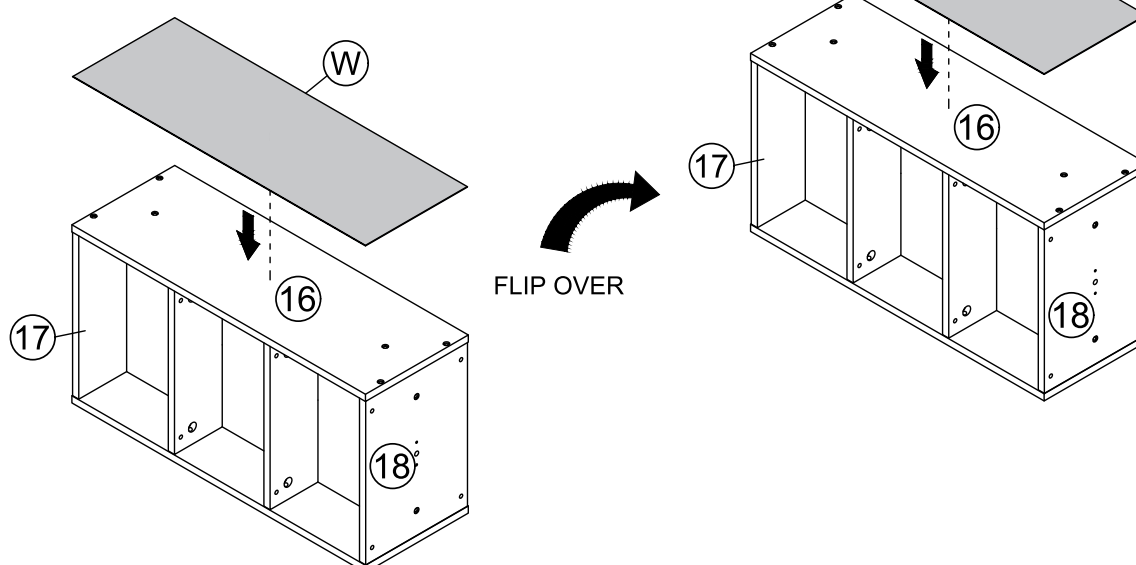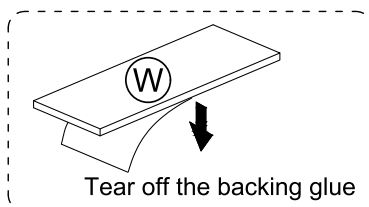

(W)		x 2
-----	---	-----





Step 26

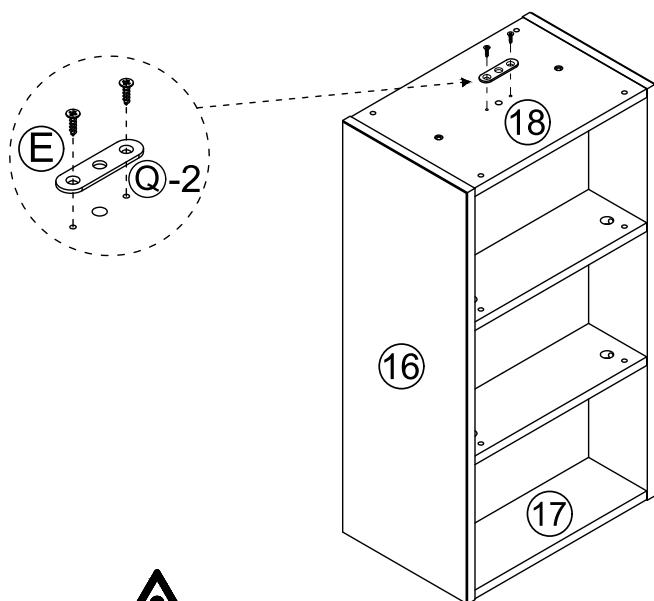


Note the countersunk head on this surface. Tighten securely for stability.

Q	 Q-2	x 1
E	 Ø3.5*12	x 2



Step 27

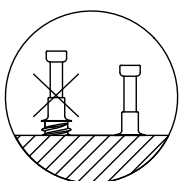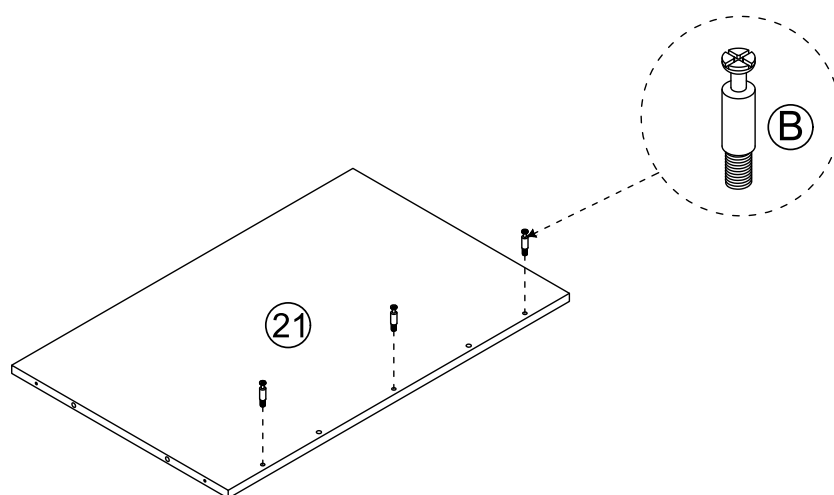

B		x 3
---	---	-----




Step 28

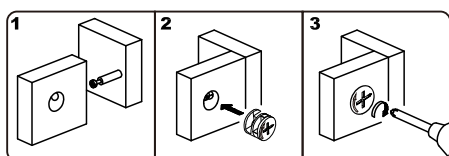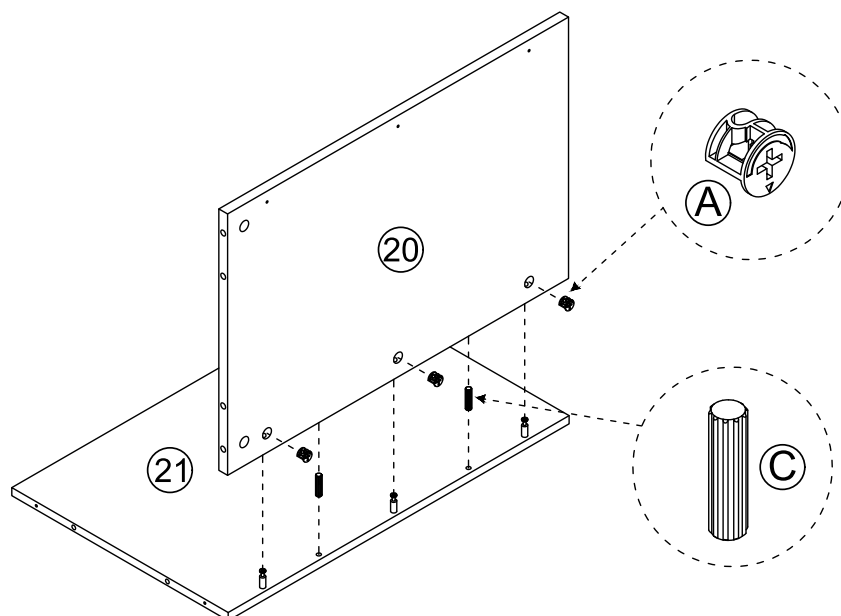

C	 Ø8*30	x 2
A	 Ø15*9.5	x 3

Step 29

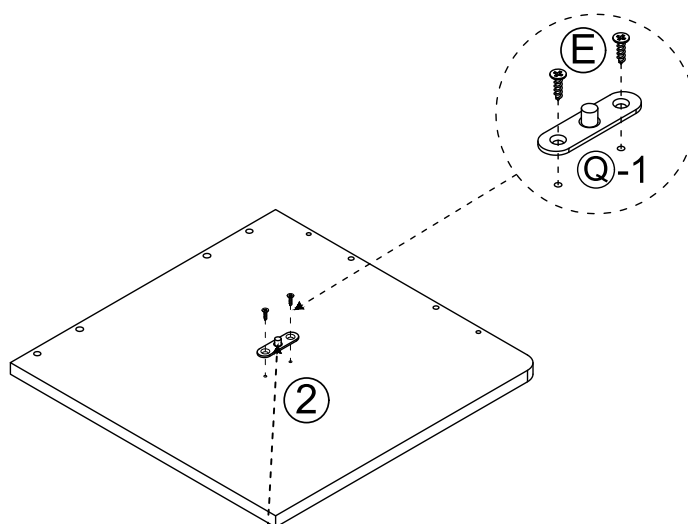


Pay attention to the installation direction of Q-1 .

Q	 Q-1	x 1
E	 Ø3.5*12	x 2



Step 30

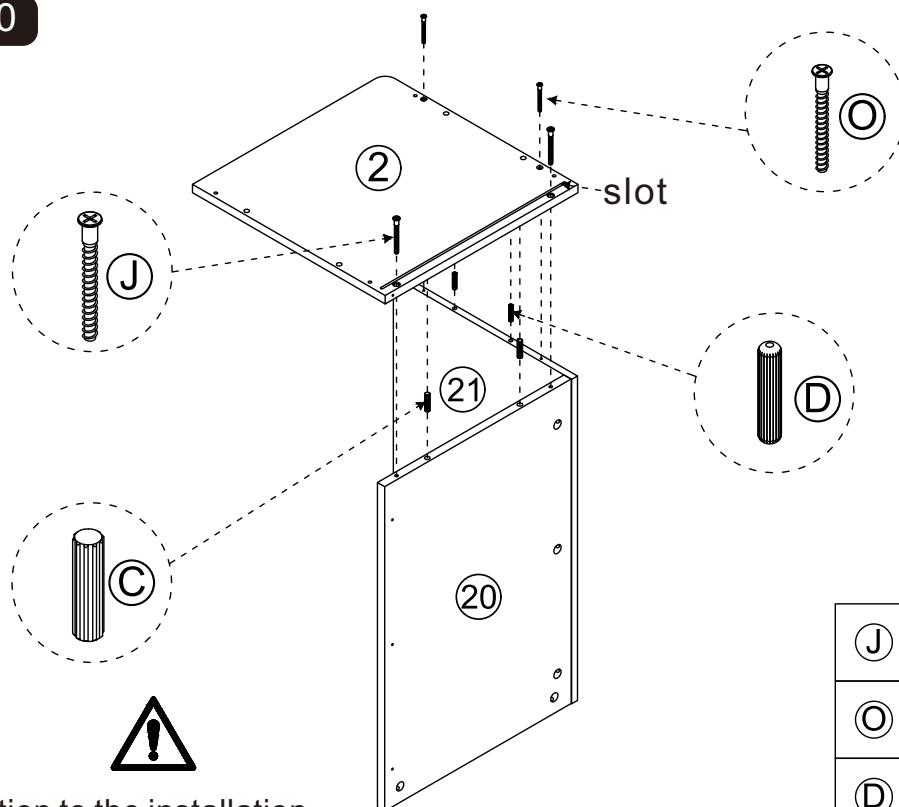


Pay attention to the installation position of the C(for 20) and D(for 21)


FLIP OVER

J	 Ø6.3*50	x 2
O	 Ø5*40	x 2
D	 Ø6*30	x 2
C	 Ø8*30	x 2


Step 31

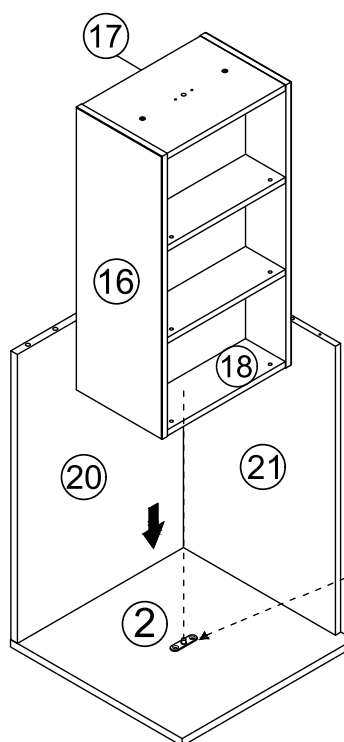

"For easier alignment, place the unit flat on the floor (as shown in the installation video)."

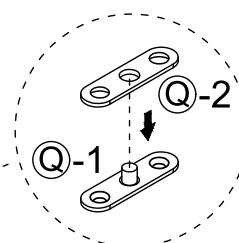

Step 32

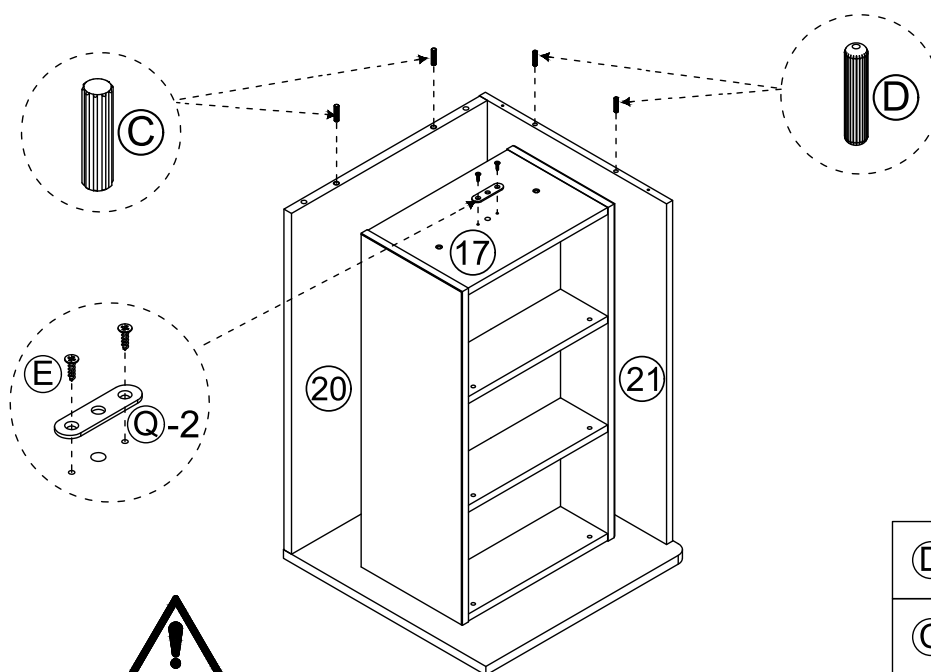


Note the countersunk head on this surface. Tighten securely for stability.

D	 Ø6*30	x 2
C	 Ø8*30	x 2
Q	 Q-2	x 1
E	 Ø3.5*12	x 2

Step 33


Pay attention to the installation direction of Q-1 .

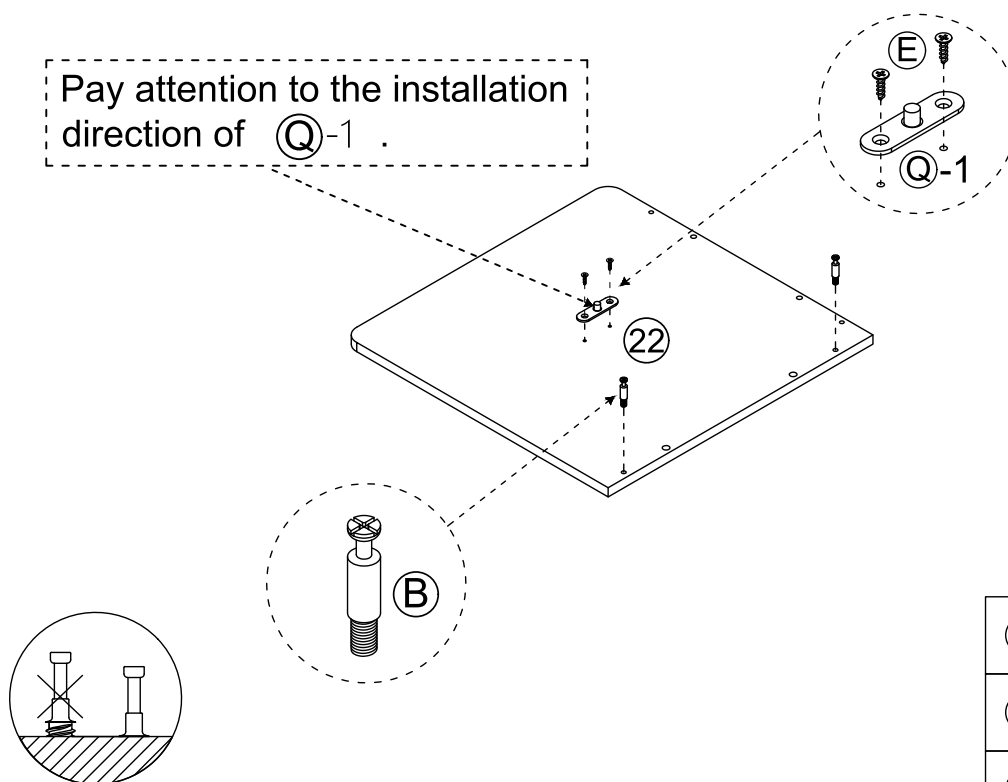


Q	 Q-1	x 1
E	 Ø3.5*12	x 2
B	 Ø6.5*35	x 2




Step 34

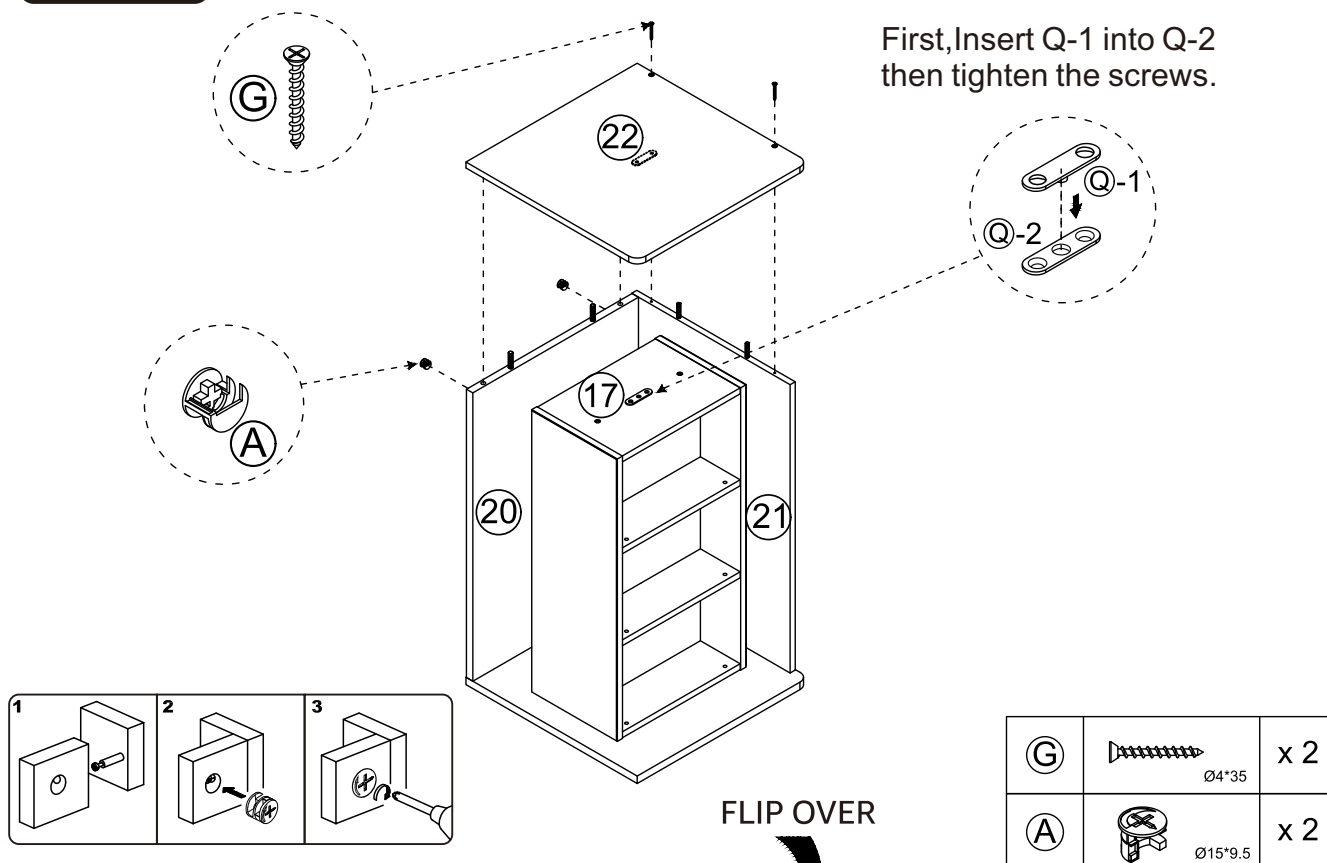



Step 35

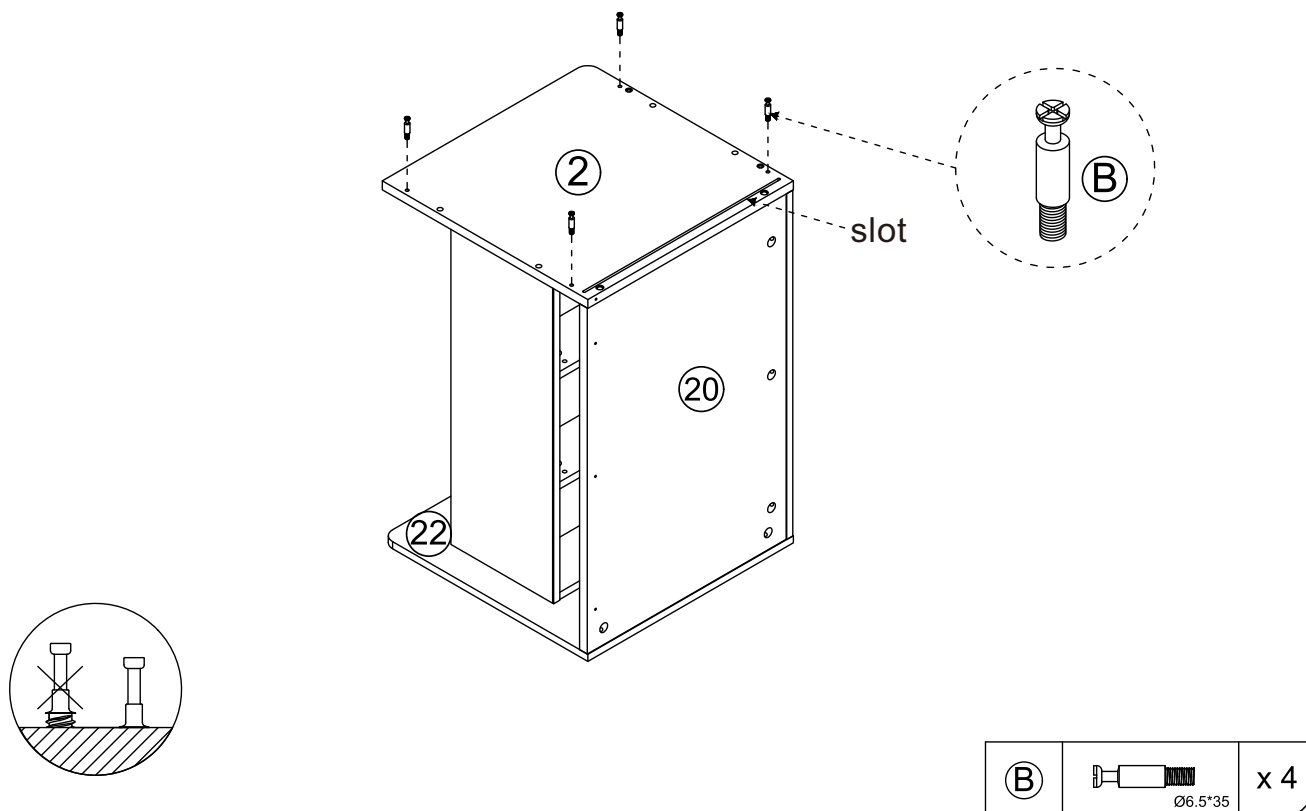

Step 36

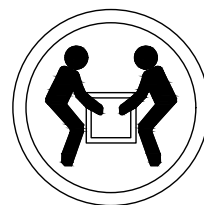

CAUTION: Heavy! You may need assistance with this step.

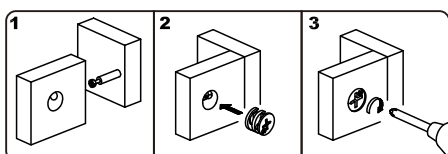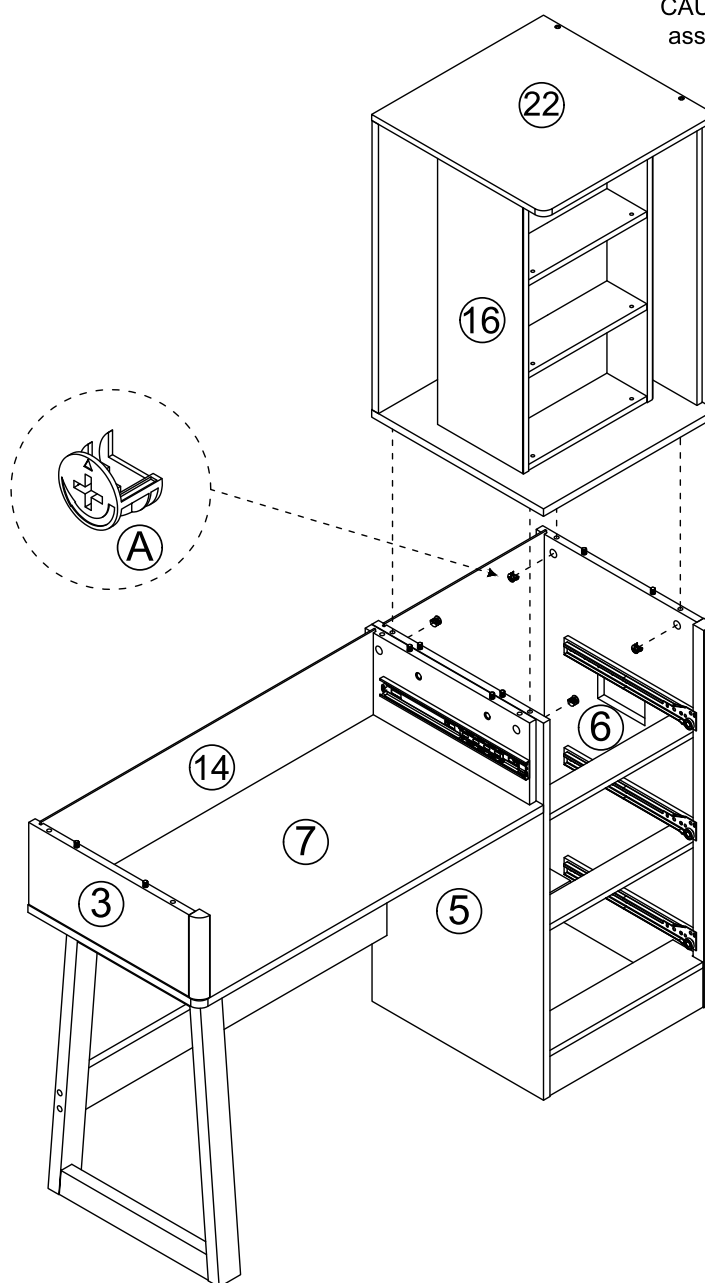

(A)



Ø15*9.5



x 4



Missing parts or need help? Email us at ohoholive-service@outlook.com


Upper Rotating Cabinet | 27

Step 37

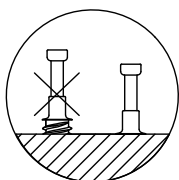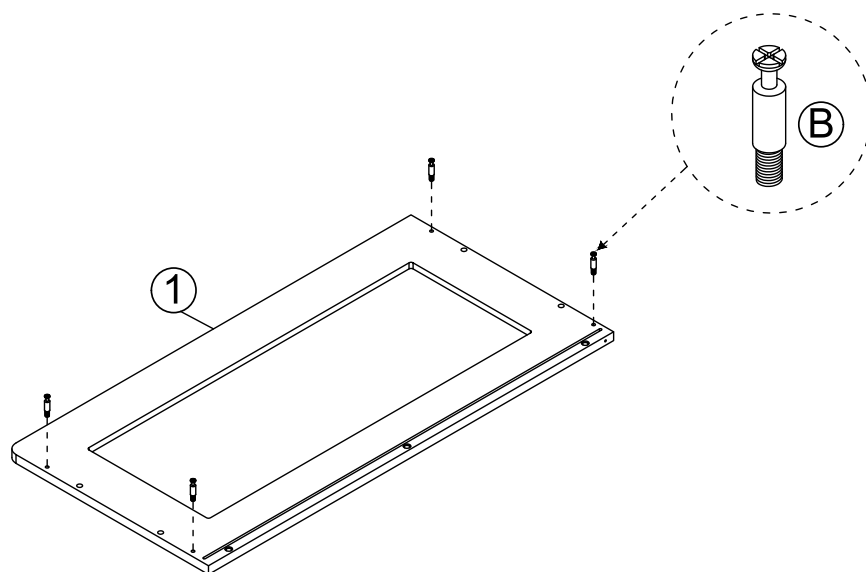

(B)	 Ø6.5*35	x 4
-----	--	-----


Step 38

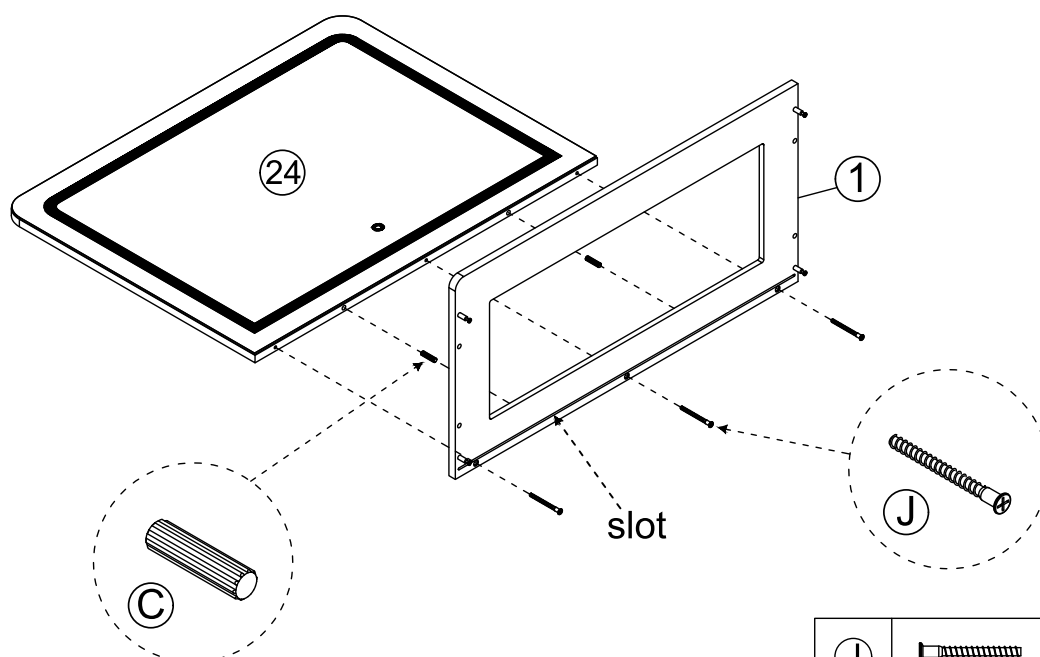




(J)	 Ø6.3*50	x 3
(C)	 Ø8*30	x 2



Step 39

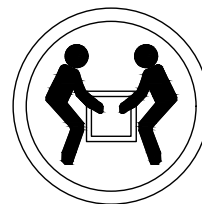


CAUTION: Heavy! You may need assistance with this step.

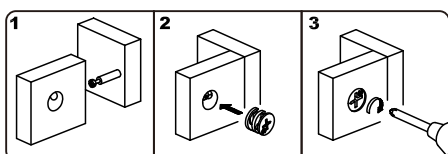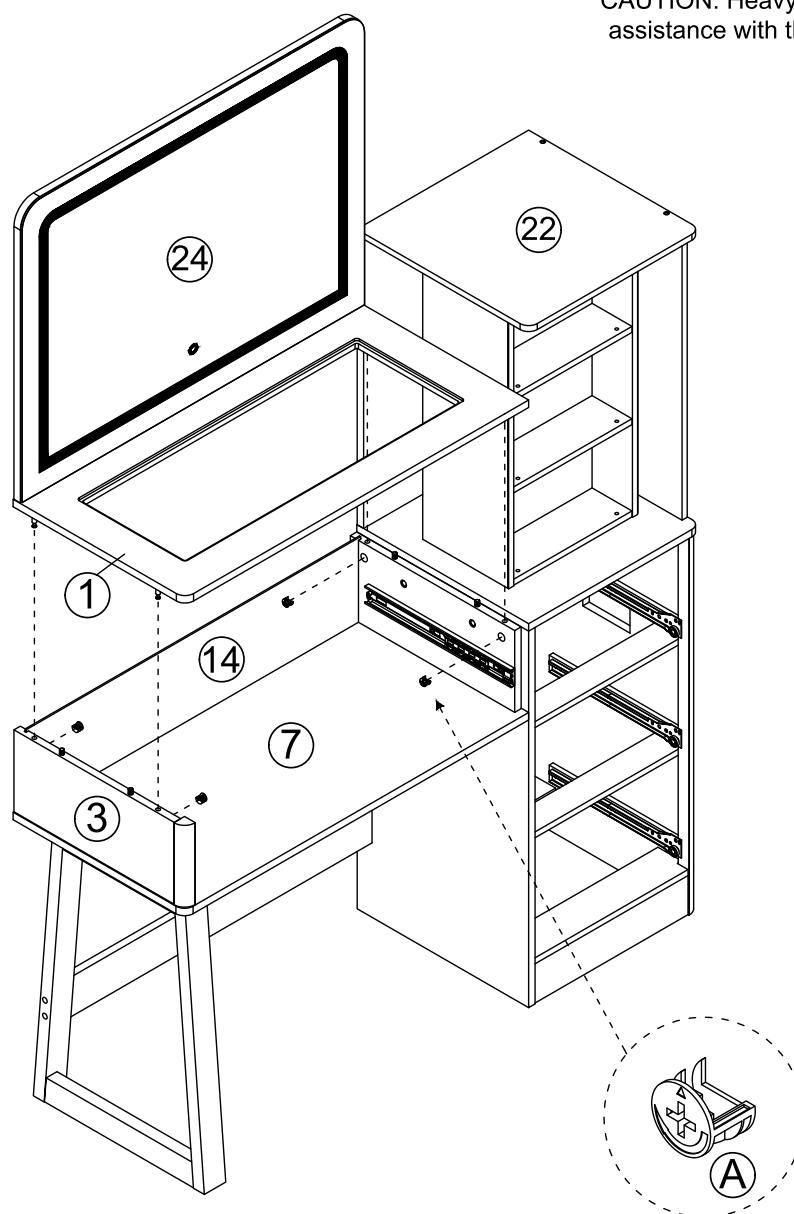

Missing parts or need help? Email us at ohoholive-service@outlook.com

Desktop & Mirror Assembly | 29


Step 40

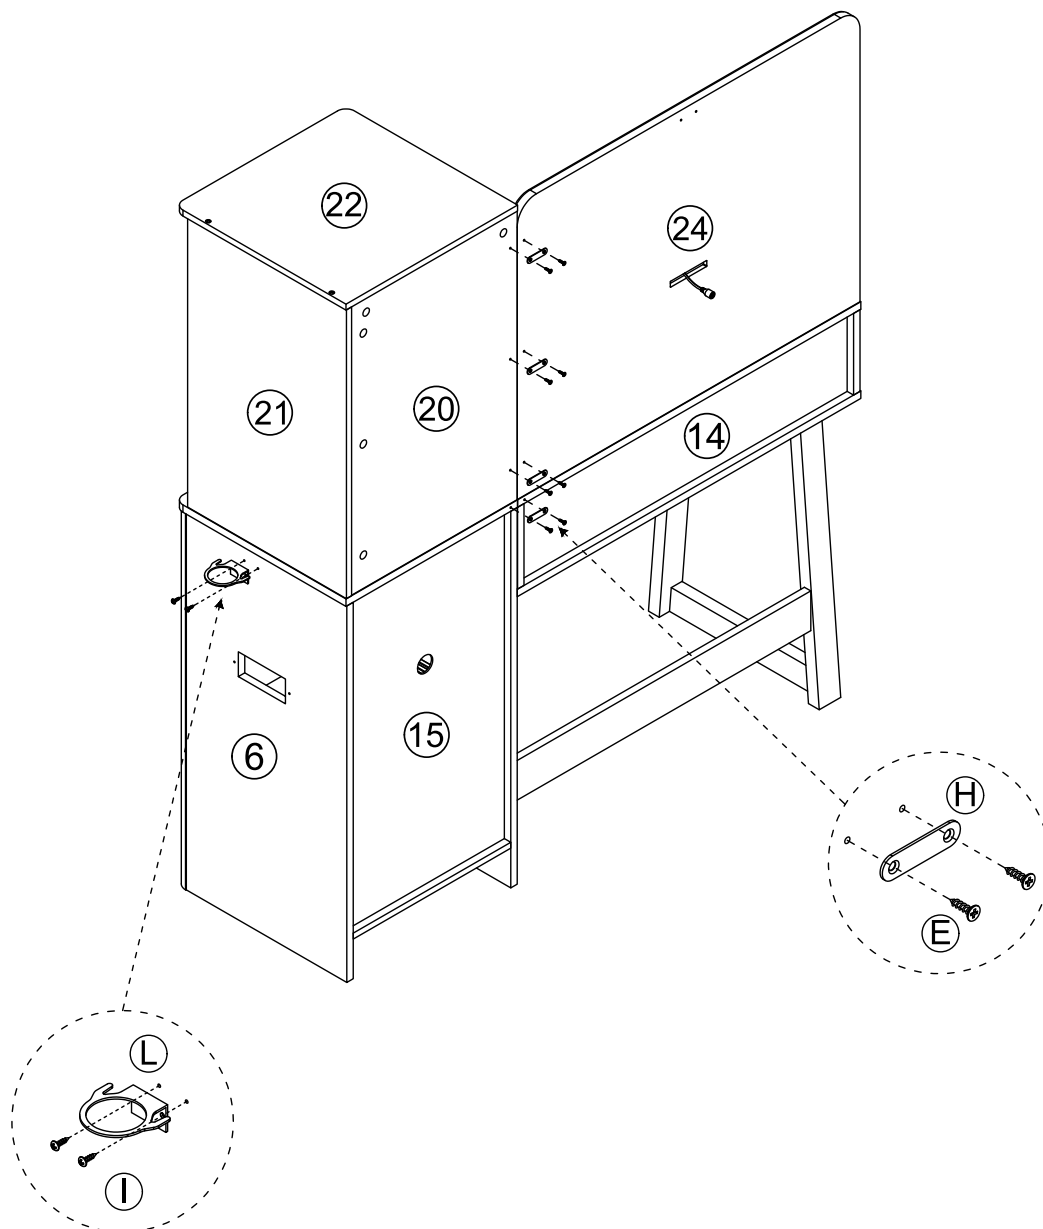

(L)		x 1
(I)	 Ø4*14	x 2
(H)		x 4
(E)	 Ø3.5*12	x 8



Step 41

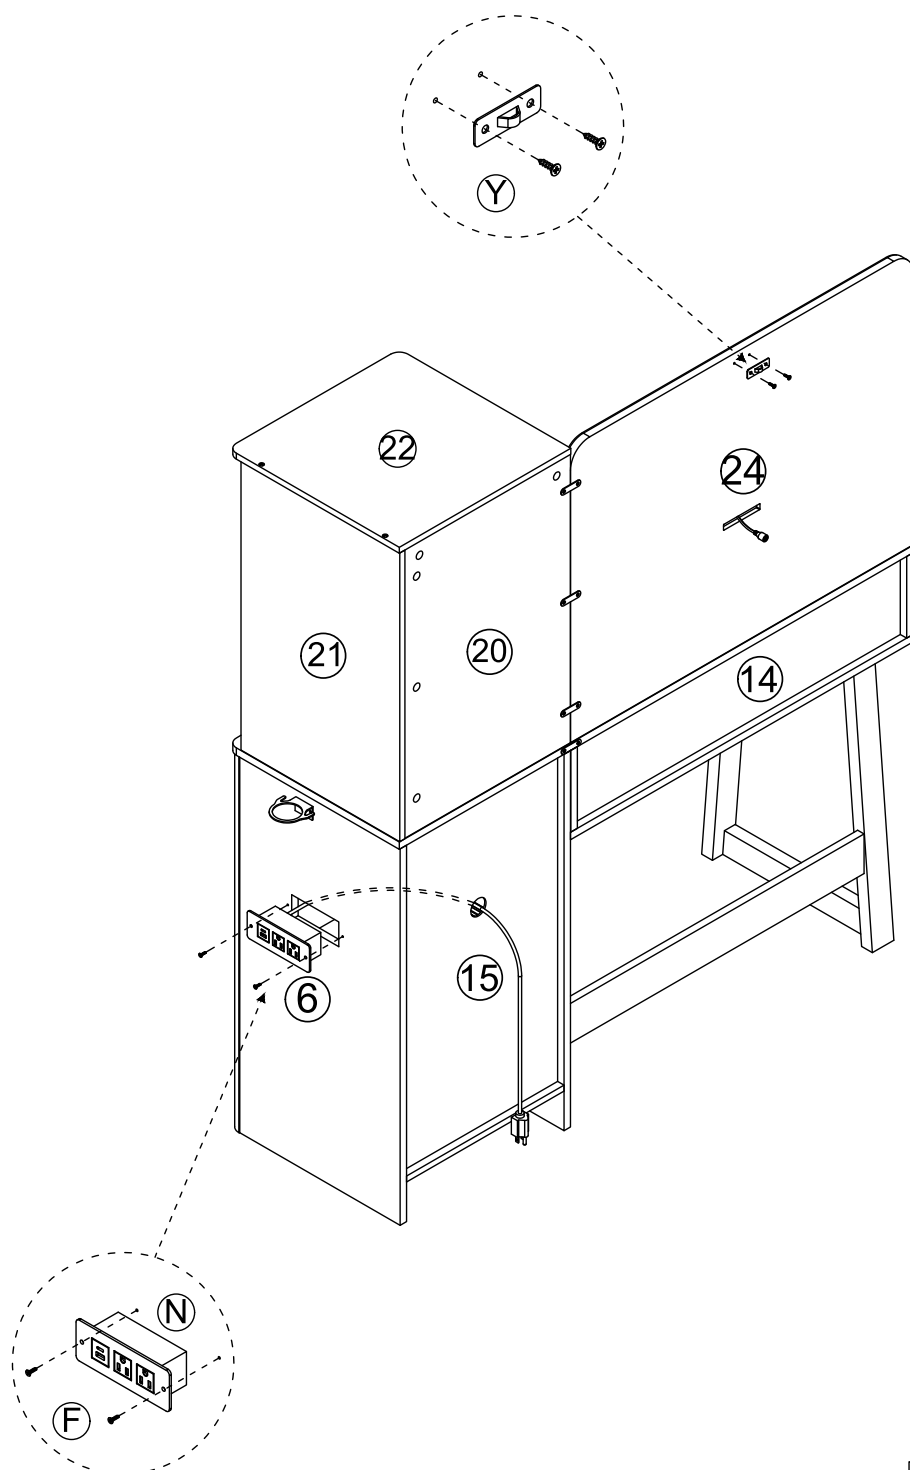

Y		x1set
N		x 1
F		x 2


Ø3*12



Missing parts or need help? Email us at ohoholive-service@outlook.com

Desktop & Mirror Assembly | 31

Step 42


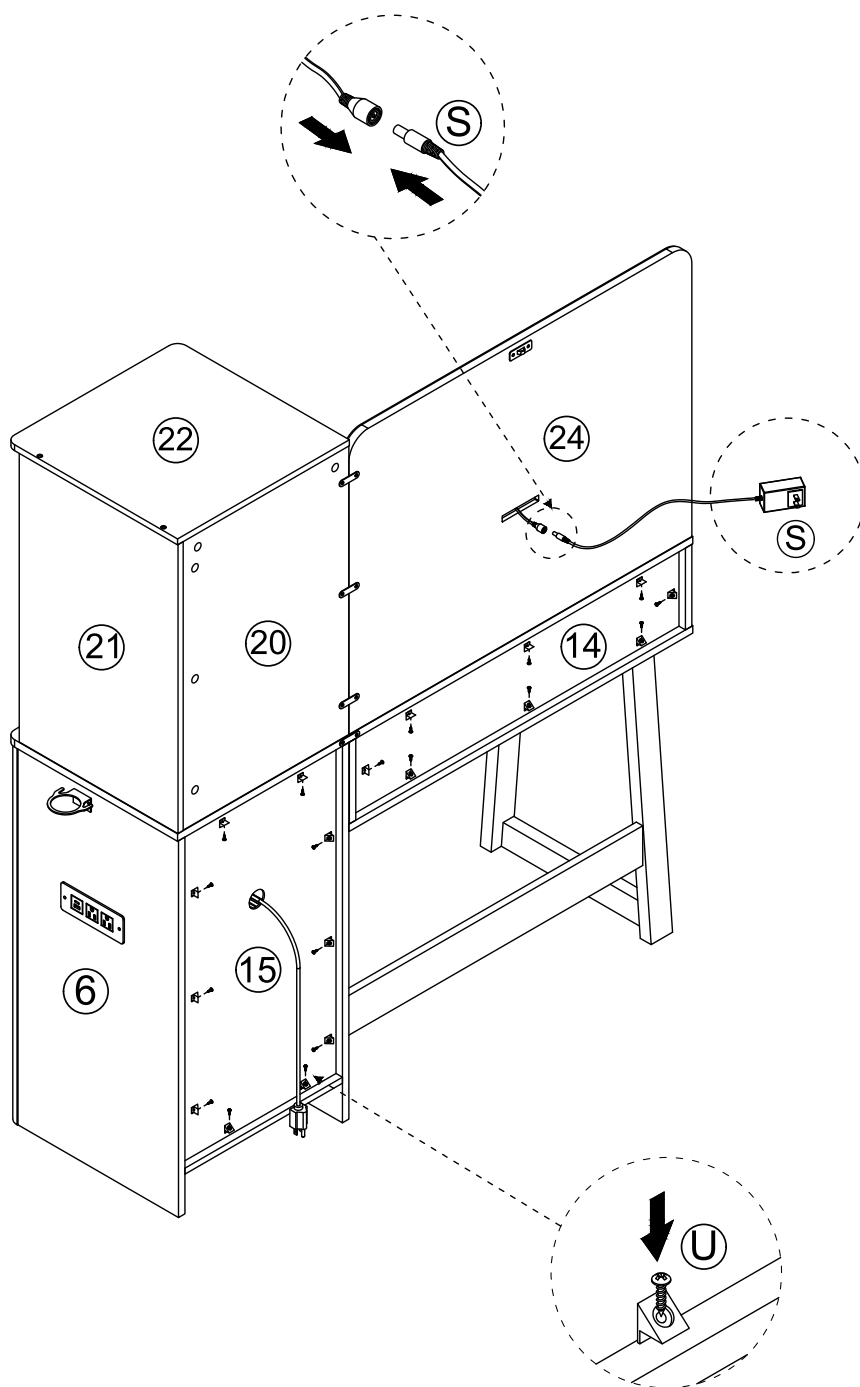



Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.

(S)		x 1
(U)		x18set





Step 43

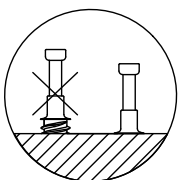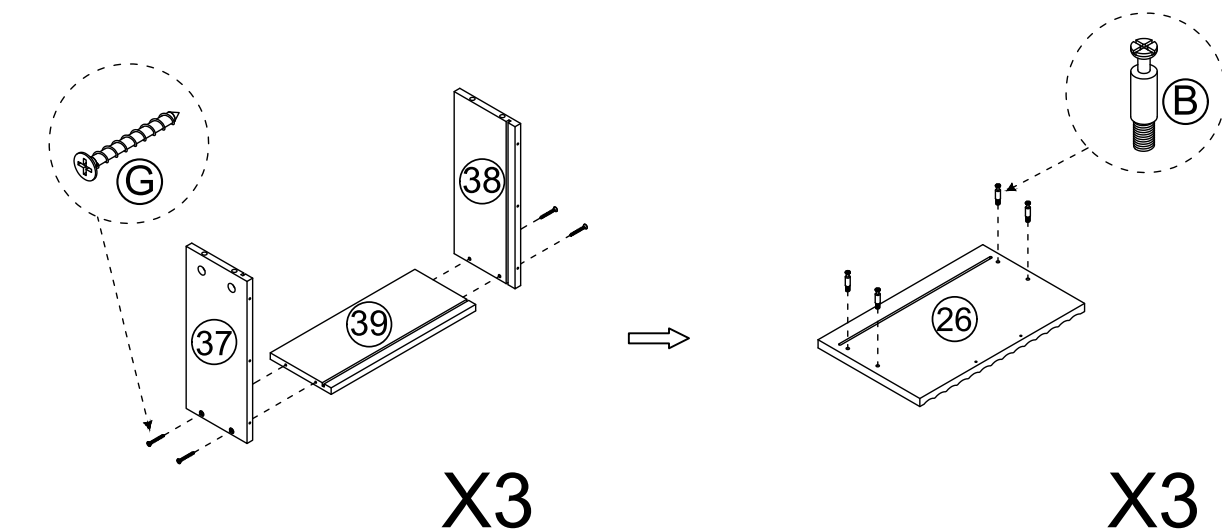

(G)	 Ø4*35	x 12
(B)	 Ø6.5*35	x 12


Step 44

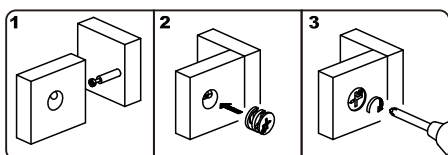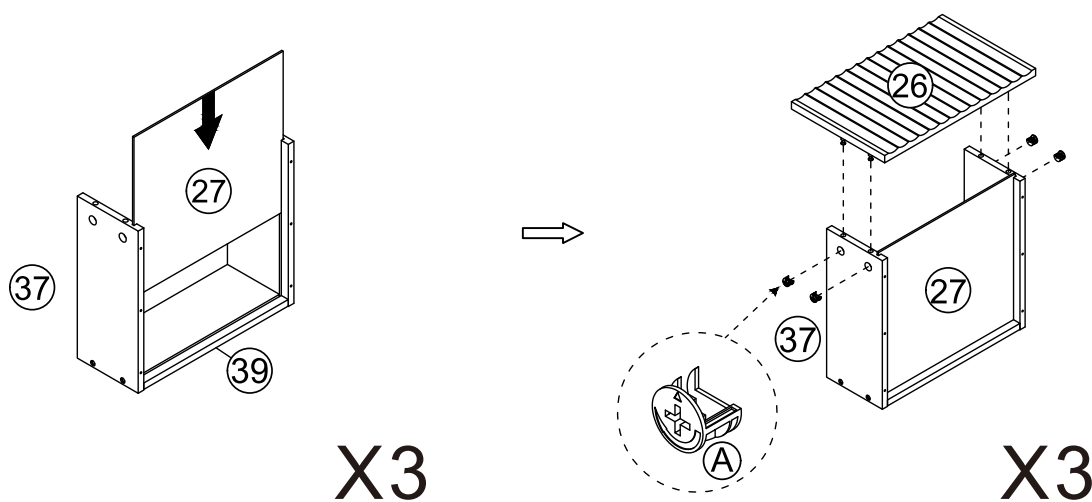

(A)	 Ø15*9.5	x 12
-----	--	------




Step 45

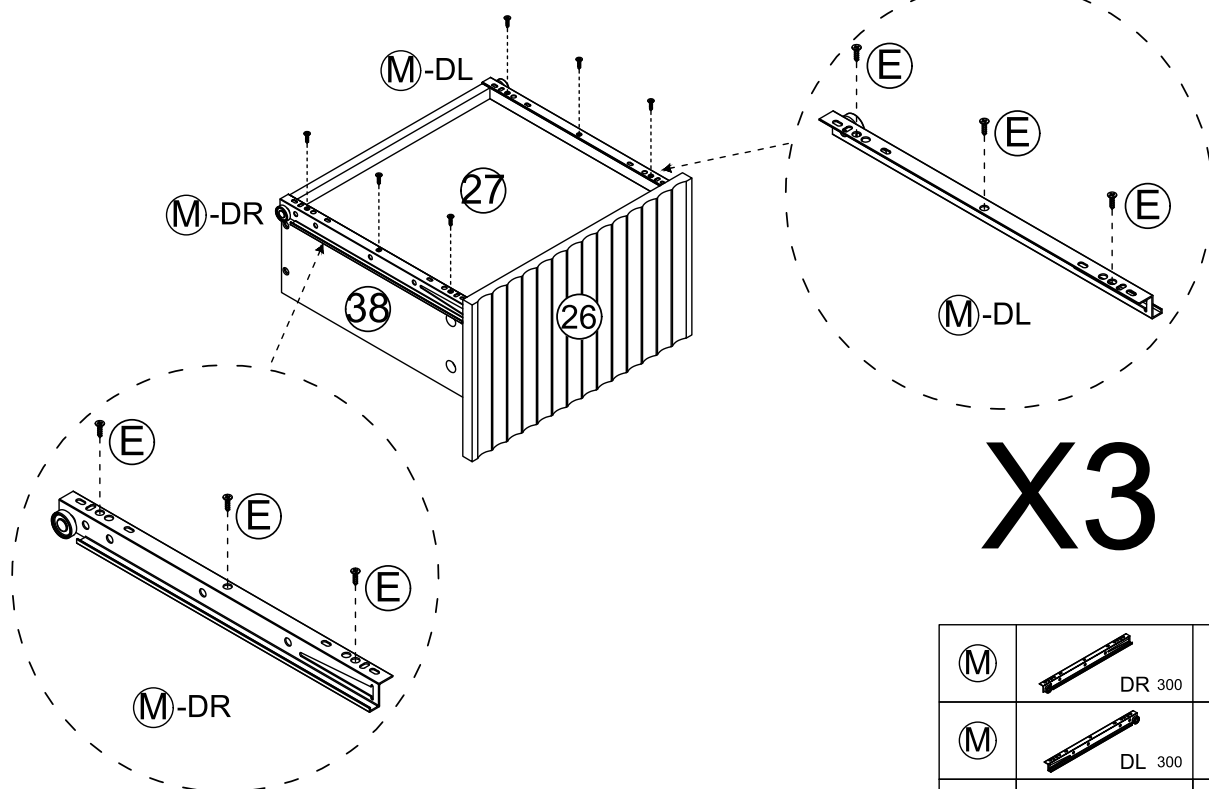

(M)	 DR 300	x 3
(M)	 DL 300	x 3
(E)	 Ø3.5*12	x 18





Step 46

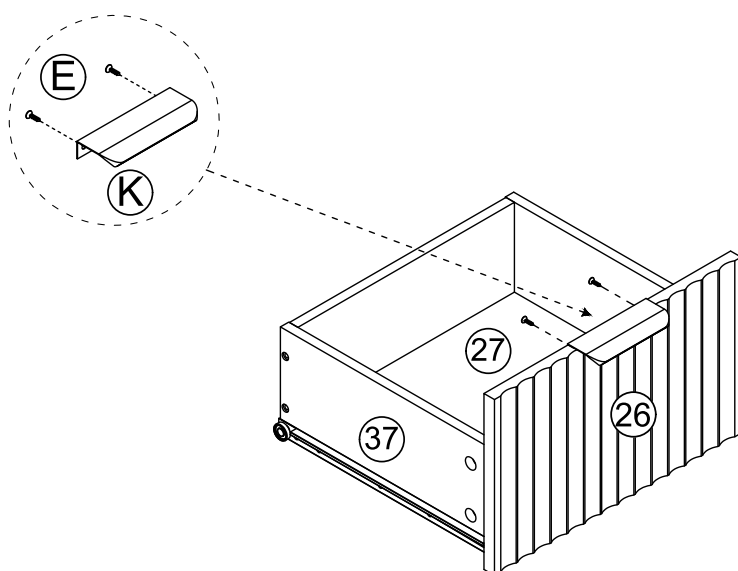


(K)		x 3
(E)	 Ø3.5*12	x 6



Step 47

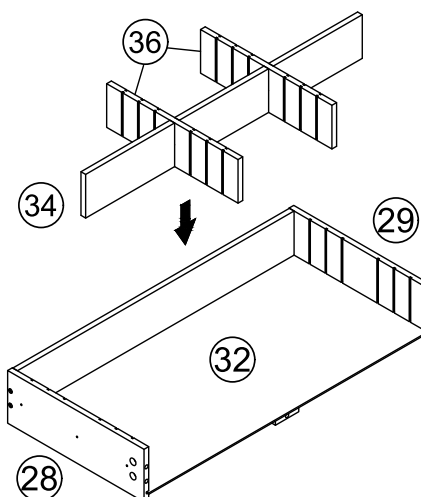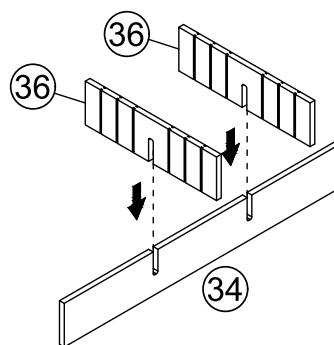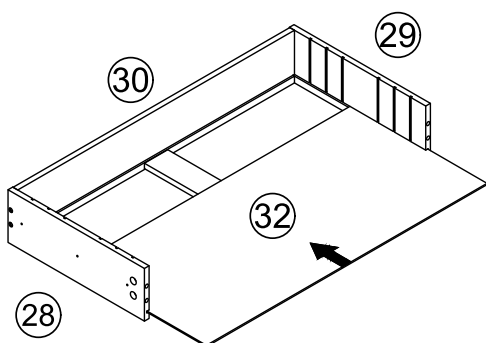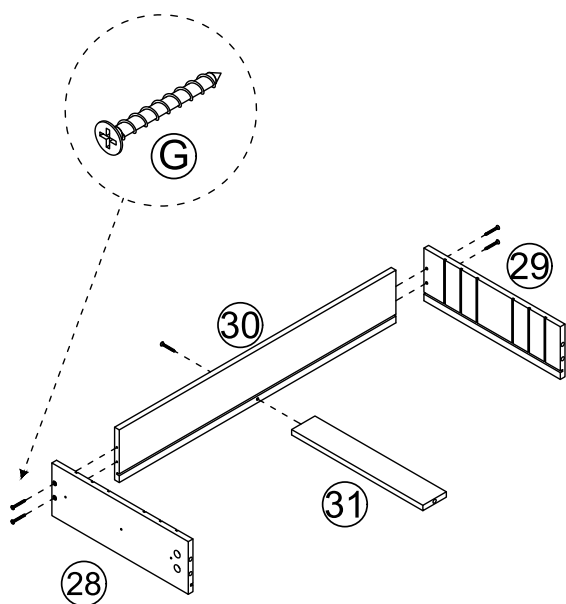

(G)



Ø4*35


x 5




Missing parts or need help? Email us at ohoholive-service@outlook.com

Drawers & Other Parts | 35

Step 48

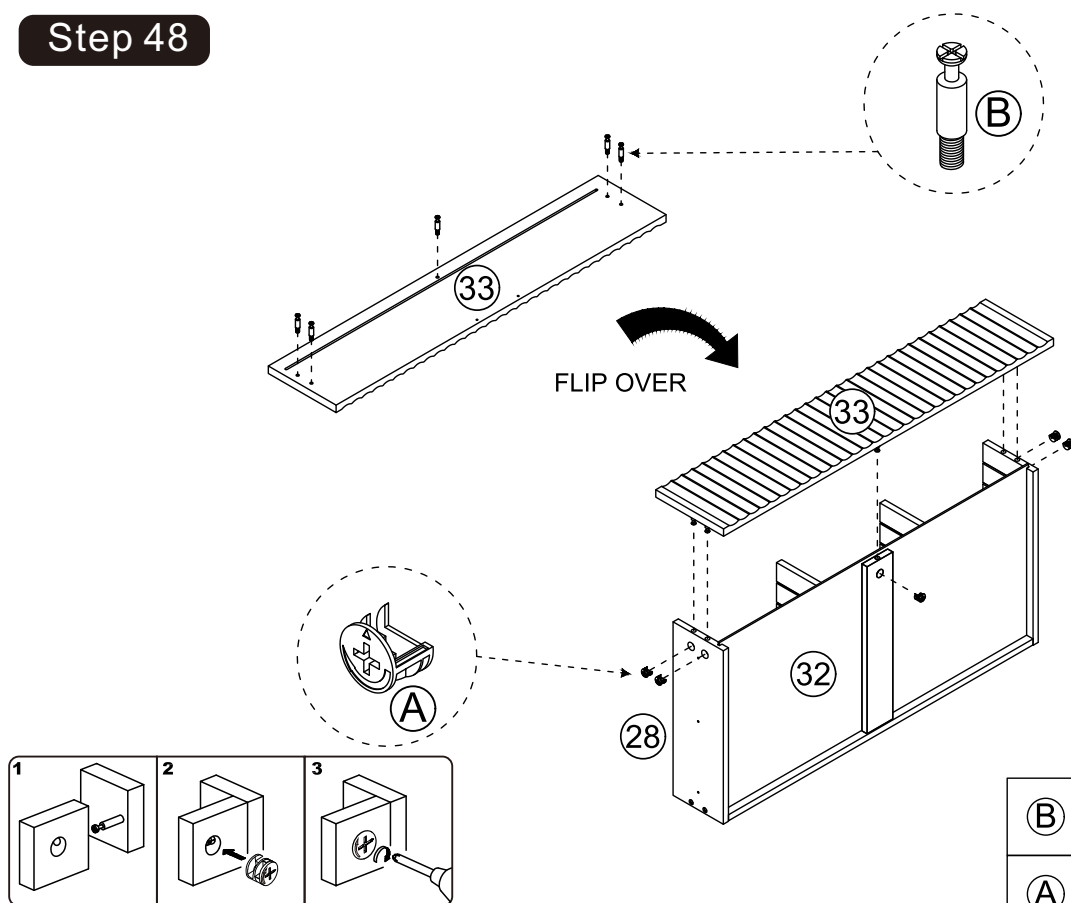


Step 49

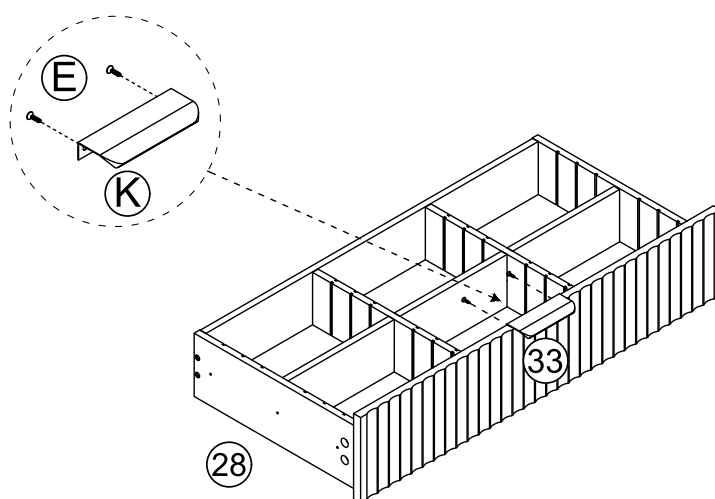



(K)		x 1
(E)		Ø3.5*12 x 2



Step 50

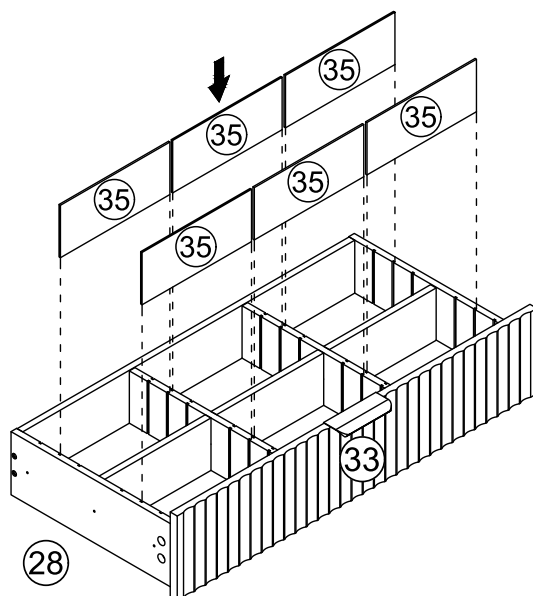


Step 51

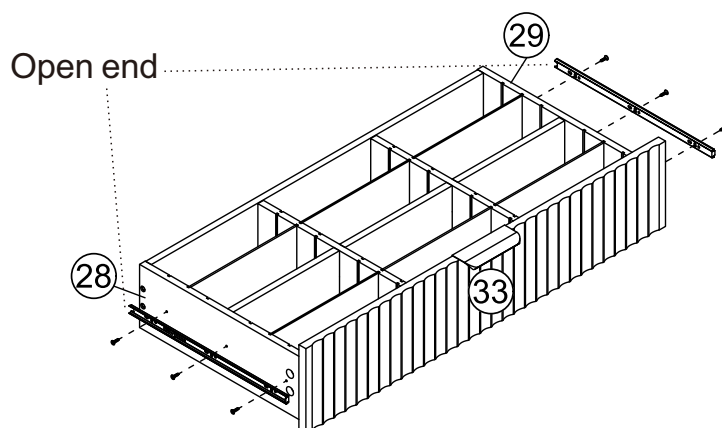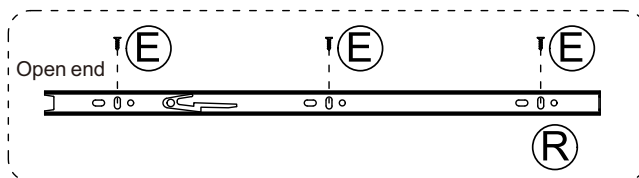

(E)	 Ø3.5*12	x 6
(R)		x 2



Step 52

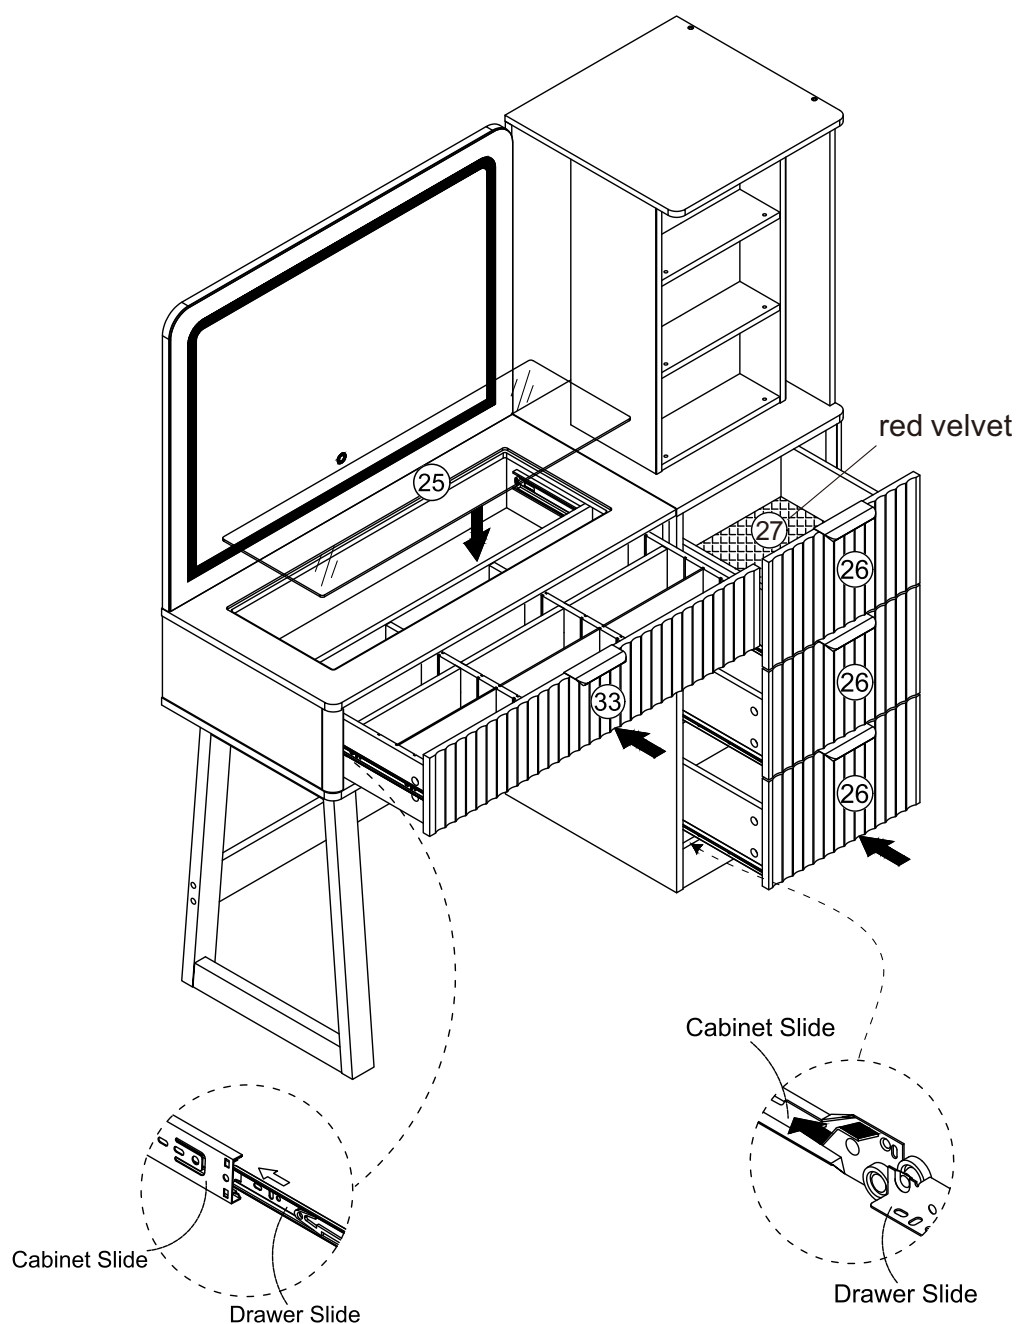


Extend the inner drawer slide to the outermost position, then attach the drawer.

Push both sides of the drawer slide rails into the table grooves at the same time, keeping the drawer level. (note: If serious resistance occurs, do not force it.)




Step 53

On the felt surface, accessories z can be used, DIY at will.

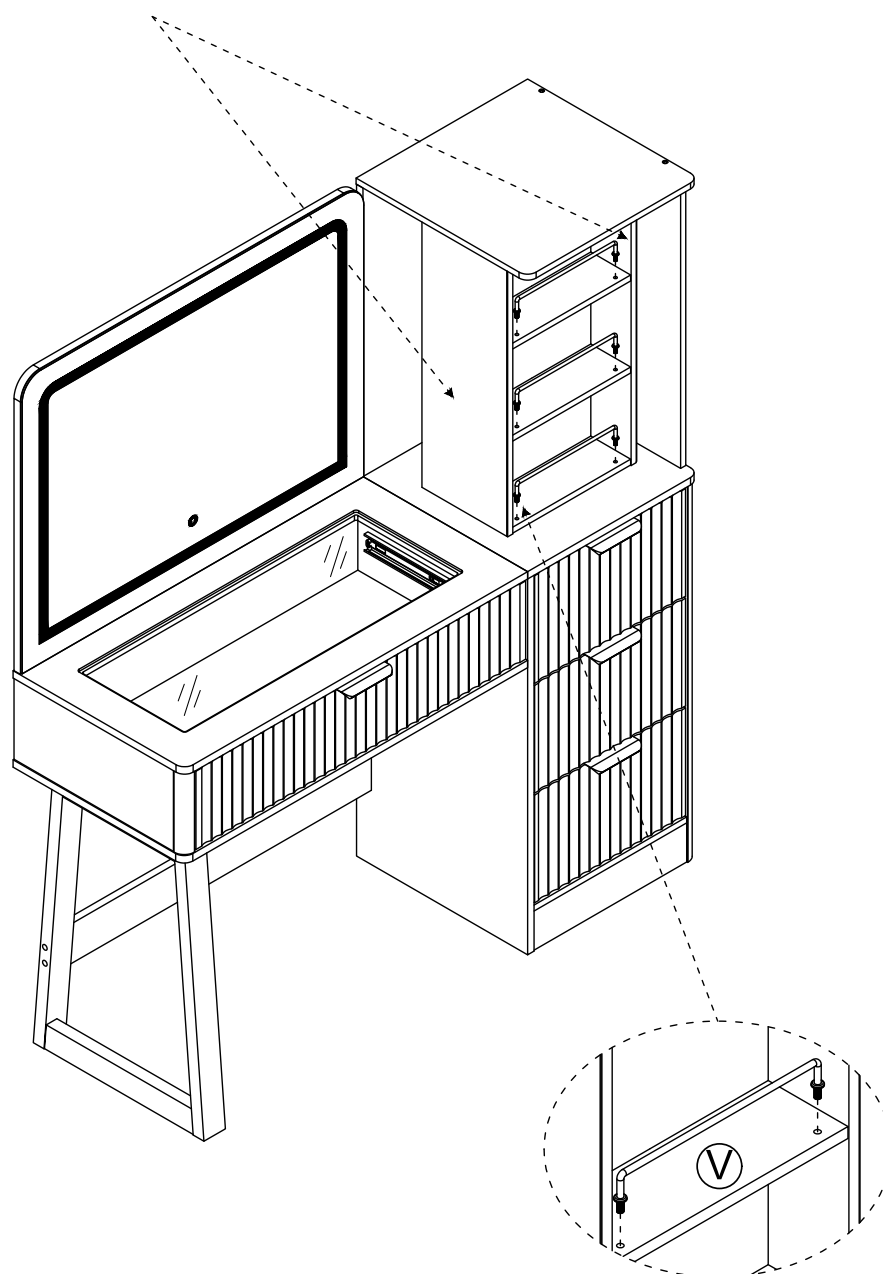

Turn to the other side and repeat this operation.

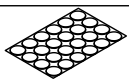(Z)		x1set
(V)		x 6




Well done — your vanity assembly is nearly complete!

To enhance safety and stability, we strongly recommend installing the included tipping-restraint system as the final step. This helps reduce the risk of injury to children.




Note: Different wall constructions may require alternative anchors. The tipping restraint is a safety deterrent, not a substitute for adult supervision, and is not designed for earthquake protection.


Install the tipping restraint hardware

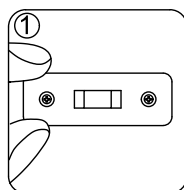


1. make mark on the wall

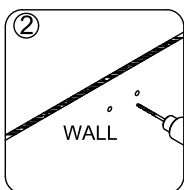


2. drill two Ø8 holes on the wall

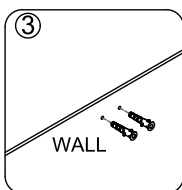

3. put two anchors in the holes

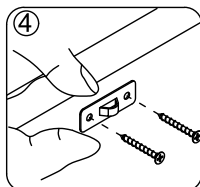

4. fix the device on the wall by the long screws

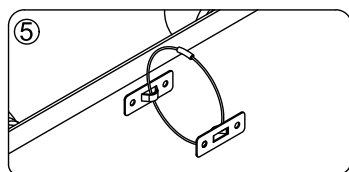

5. Fasten the cabinet to the wall with the nylon tie

