


# ASSEMBLY INSTRUCTIONS

## 36INCH BATH VANITY (COMBO)


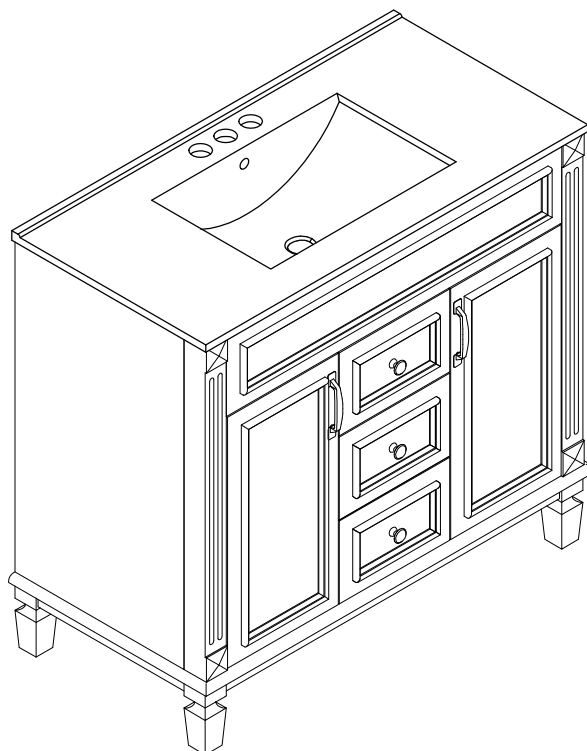


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**


**\* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**  
**\* Please assemble on a clean soft surface to avoid damage.**

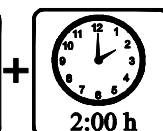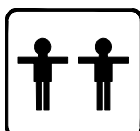

### Tools Required



(Not included)



(Not included)

**IMPORTANT:**

**PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY**

**PLEASE DO NOT RETURN TO STORE**



**Please do not return this product to the retailer!!  
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







# Before Installation

**Important – Please read these instructions fully before starting assembly**


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

## Cam Lock Assembly Instructions



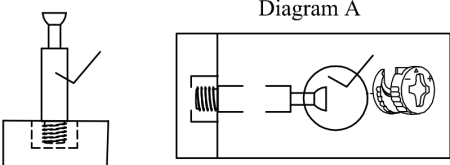
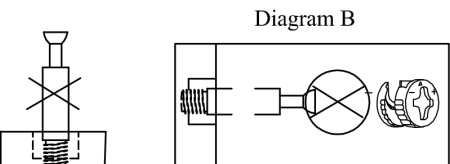
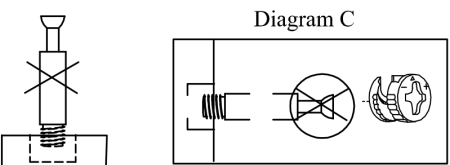
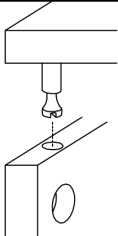
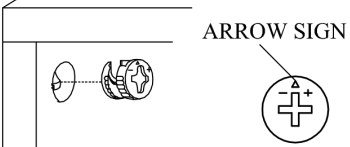
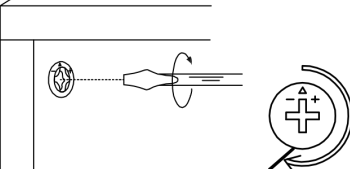






	<p>Diagram A</p> <p>Insert Cam Bolt into hole as shown in diagram A.</p>
	<p>Diagram B</p> <p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p>
	<p>Diagram C</p> <p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p>
	<p>Connect the panels together.</p>
	<p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>
	<p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p>
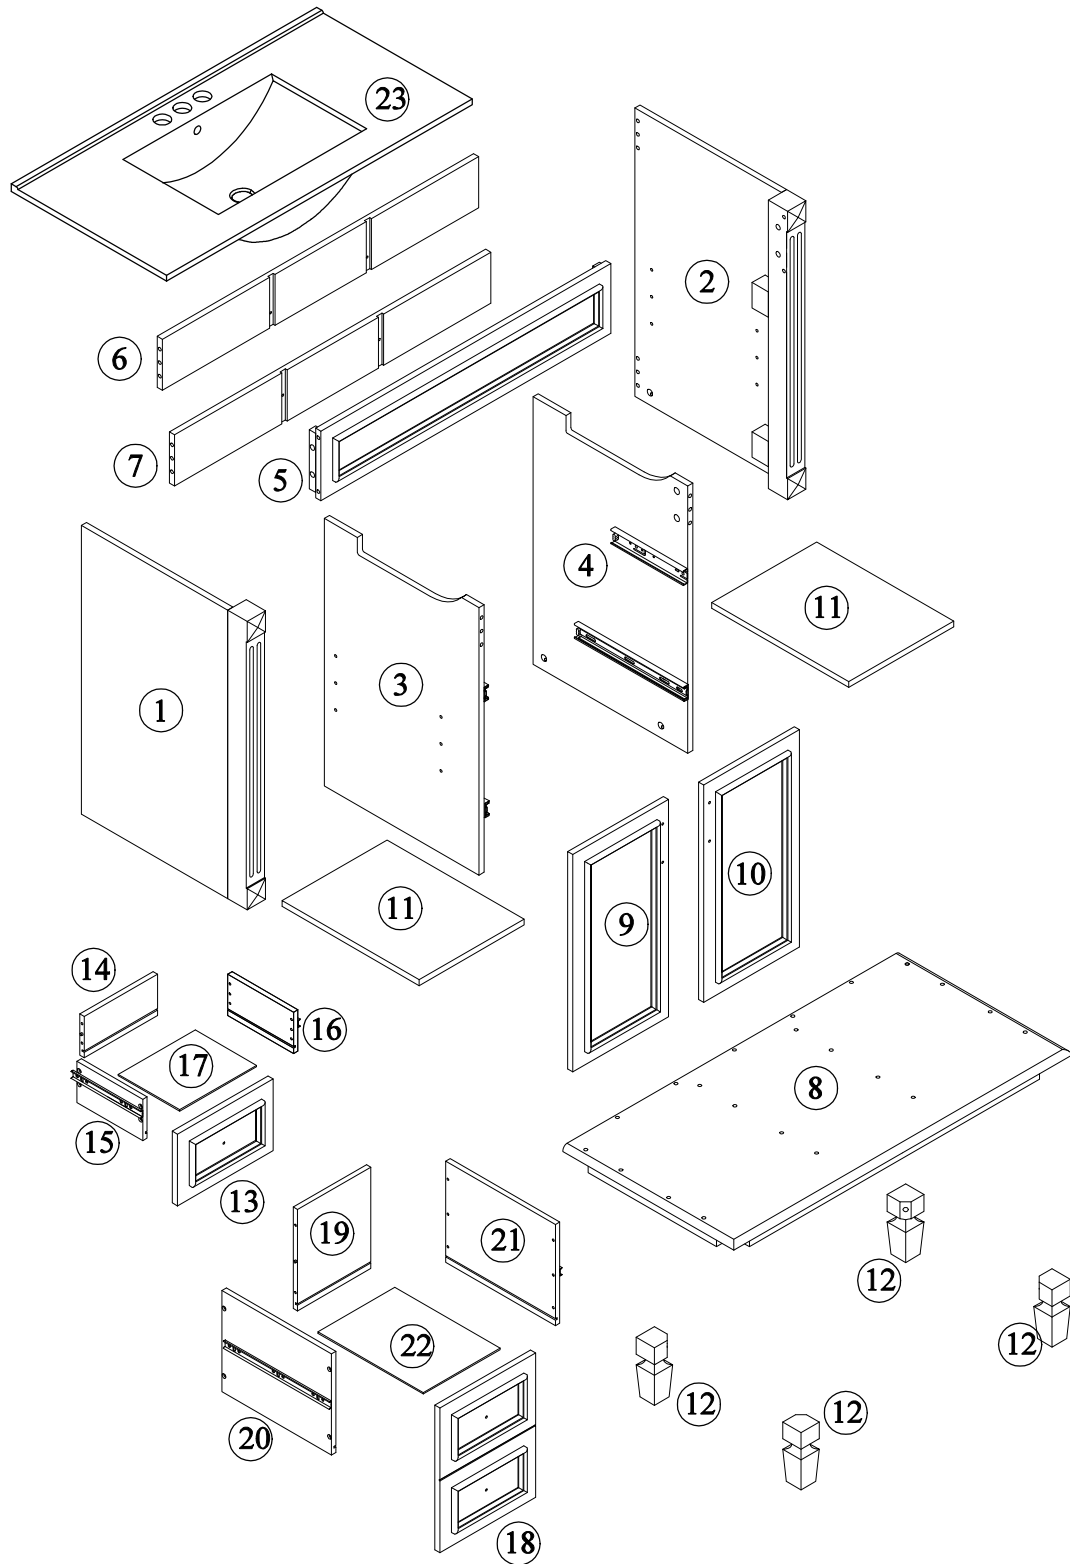
## Detail View












**Identifying the Hardware**-Identify the hardware using the illustrations below.

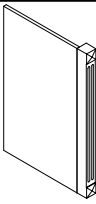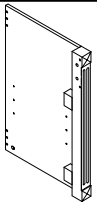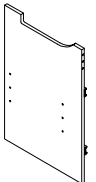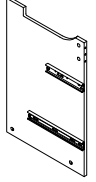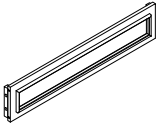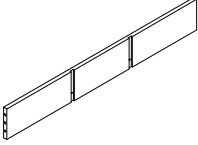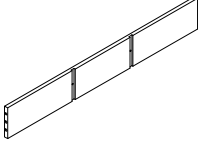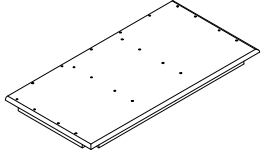

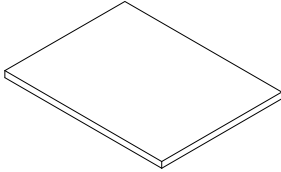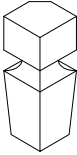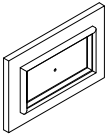
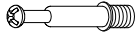


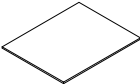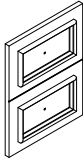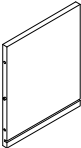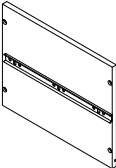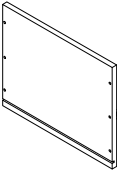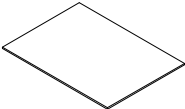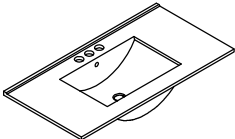




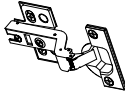
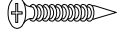



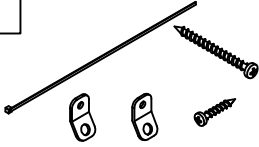
# Part List

1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Mid Panel (L) - 1pc		Mid Panel (R) - 1pc
5		6	
	Front Panel - 1pc		Rear Panel Top - 1pc
7		8	
	Rear Panel Bottom - 1pc		Frame Bottom - 1pc
9		10	
	Left Door - 1pc		Right Door - 1pc
11		12	
	Adjustable Shelf - 2pcs		Foot - 4pcs
13		14	
	Drawer Front Top - 1pc		Drawer Rear Top - 1pc


## Part List

<div data-bbox="199 338 252 376">15</div> <div data-bbox="448 387 528 472">  </div> <div data-bbox="325 530 662 568">Drawer Side Top (L) - 1pc</div>	<div data-bbox="813 338 866 376">16</div> <div data-bbox="1094 383 1169 468">  </div> <div data-bbox="938 530 1278 568">Drawer Side Top (R) - 1pc</div>
<div data-bbox="199 582 252 620">17</div> <div data-bbox="432 631 572 714">  </div> <div data-bbox="368 772 683 810">Drawer Bottom (T) - 1pc</div>	<div data-bbox="813 582 866 620">18</div> <div data-bbox="1062 611 1144 768">  </div> <div data-bbox="927 772 1291 810">Drawer Front Bottom - 1pc</div>
<div data-bbox="199 826 252 864">19</div> <div data-bbox="474 846 555 992">  </div> <div data-bbox="363 1012 702 1050">Drawer Rear Bottom - 1pc</div>	<div data-bbox="813 826 866 864">20</div> <div data-bbox="1010 837 1126 1003">  </div> <div data-bbox="952 1021 1331 1059">Drawer Side Bottom (L) - 1pc</div>
<div data-bbox="199 1070 252 1108">21</div> <div data-bbox="427 1086 544 1254">  </div> <div data-bbox="341 1263 722 1301">Drawer Side Bottom (R) - 1pc</div>	<div data-bbox="813 1070 866 1108">22</div> <div data-bbox="1018 1099 1203 1207">  </div> <div data-bbox="981 1258 1299 1296">Drawer Bottom (B) - 1pc</div>
<div data-bbox="199 1314 252 1352">23</div> <div data-bbox="379 1335 614 1473">  </div> <div data-bbox="394 1496 541 1534">Sink - 1pc</div>	

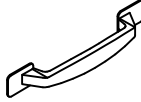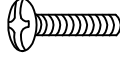
# Hardware List

<b>A</b>  $\varnothing 13 \times 1/4" \times 28 \text{mm}$ Hex-Head bolts(4pcs)	<b>B</b>  $\varnothing 13 \times 1/4" \times 40 \text{mm}$ Hex-Head bolts(4pcs)	<b>C</b>  $\varnothing 1/4" \times 16 \times 1 \text{mm}$ Washer(8pcs)
<b>D</b>  $\varnothing 6 \times 35 \text{mm}$ Three in one bolts(23pcs)	<b>E</b>  $\varnothing 14.5 \times 12 \text{mm}$ Three in one lock(23pcs)	<b>F</b>  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$ Round head screw(4pcs)
<b>G</b>  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$ Round head screw(16pcs)	<b>H</b>  Handle (3pcs)	<b>I</b>  Handle (2pcs)
<b>J</b>  $\varnothing 5/32" \times 15 \text{mm}$ Handle screw(4pcs)	<b>K</b>  $\varnothing 5/32" \times 32 \text{mm}$ Handle screw(3pcs)	<b>L</b>  Damping hinge (4pcs)
<b>M</b>  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$ Flat head screw(24pcs)	<b>N</b>  Laminate pad(8pcs)	<b>O</b>  $\varnothing 8 \times 30 \text{mm}$ Wood dowel(20pcs)
<b>P</b>  4mm Allen key(1pc)	<b>Q</b>  Anti fall hardware(1set)	

## STEP: 1

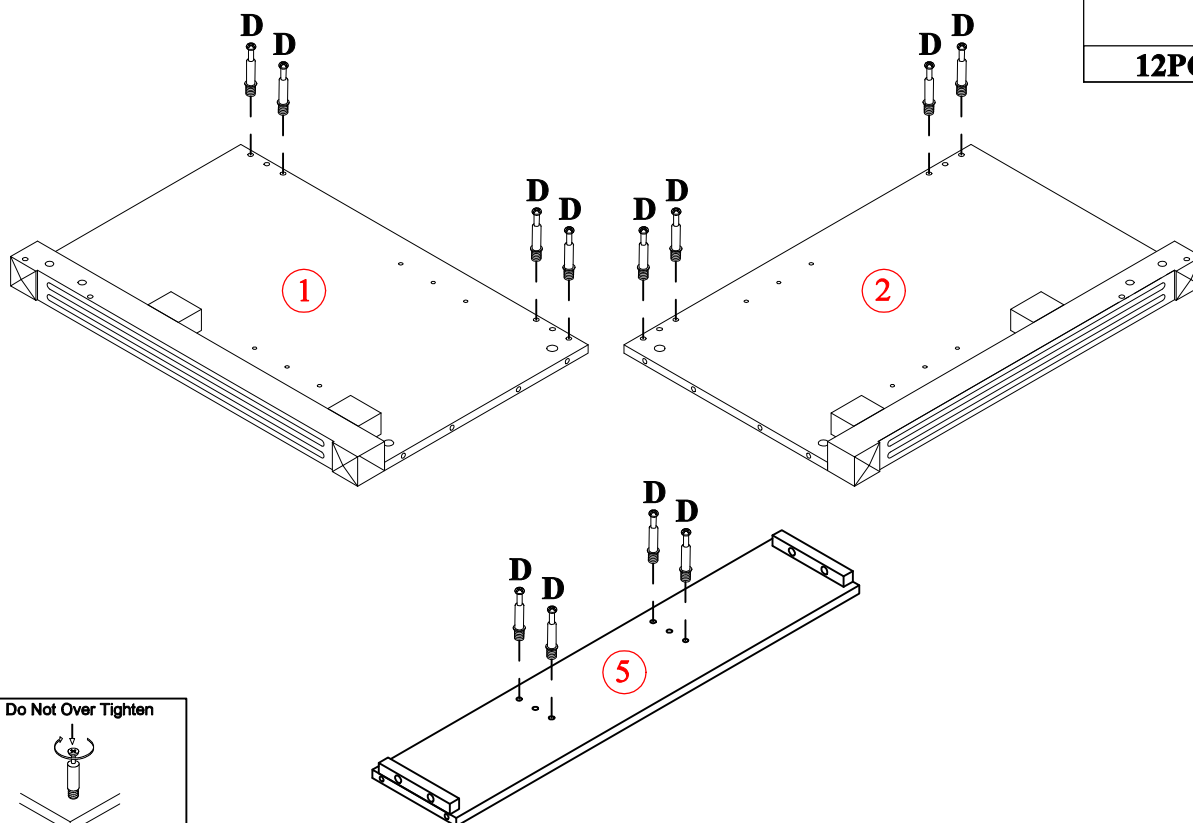


**D**



**12PCS**

## STEP: 2

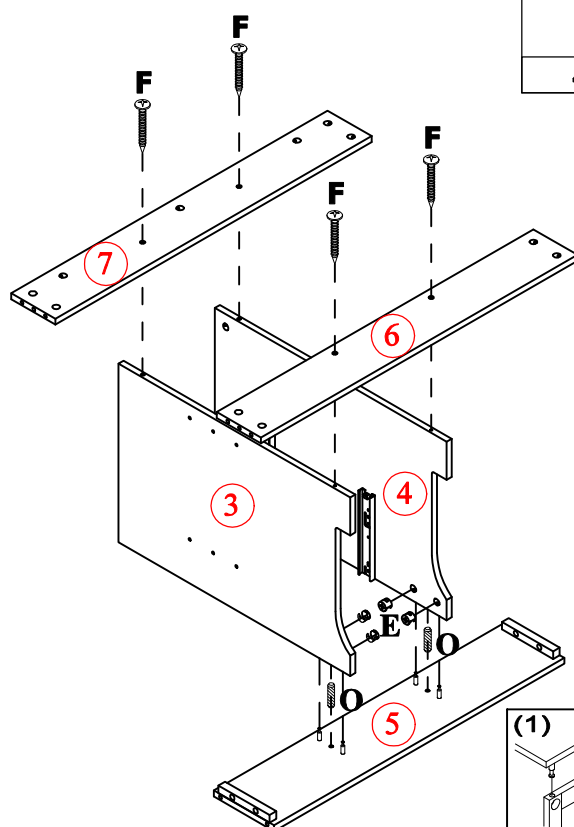

**E**



**4PCS**

**F**




**4PCS**

**O**




**2PC**


(1)



(2)








(3)



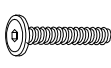



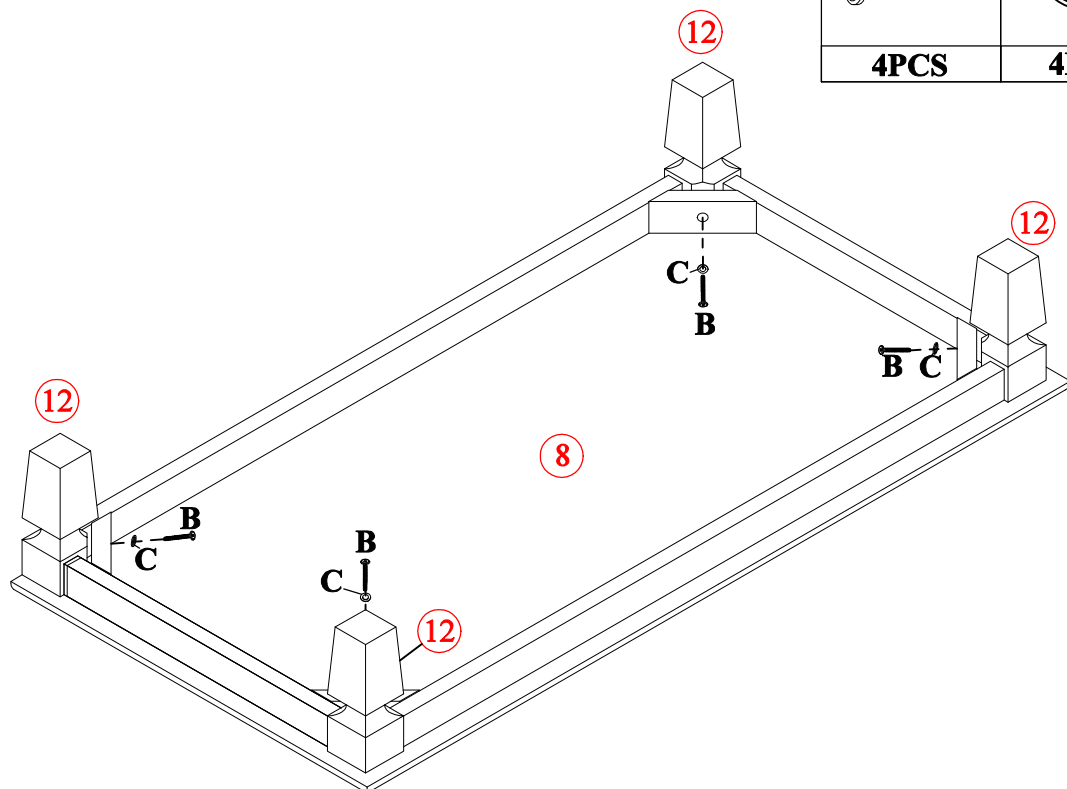
### STEP: 3
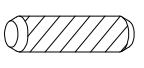
<b>A</b>	<b>C</b>	<b>E</b>	<b>O</b>
			
<b>4PCS</b>	<b>4PCS</b>	<b>8PCS</b>	<b>8PC</b>

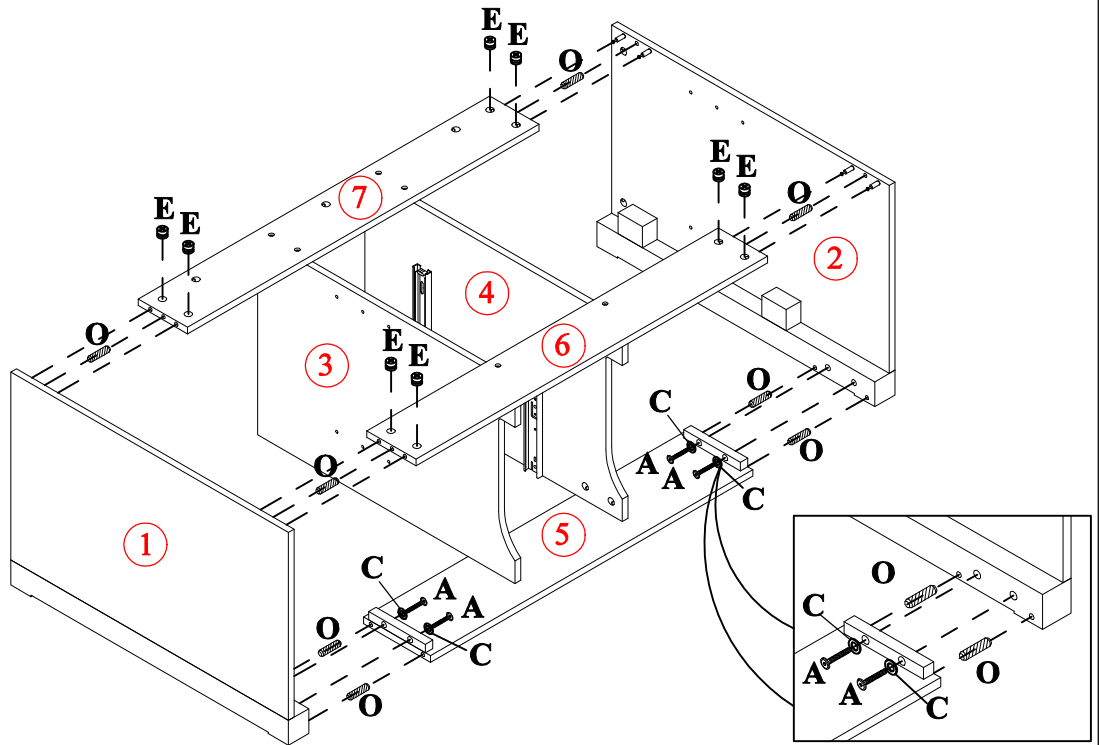

### STEP: 4
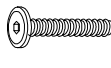
<b>B</b>	<b>C</b>
	
<b>4PCS</b>	<b>4PCS</b>




## STEP: 5

**D**



**11PCS**

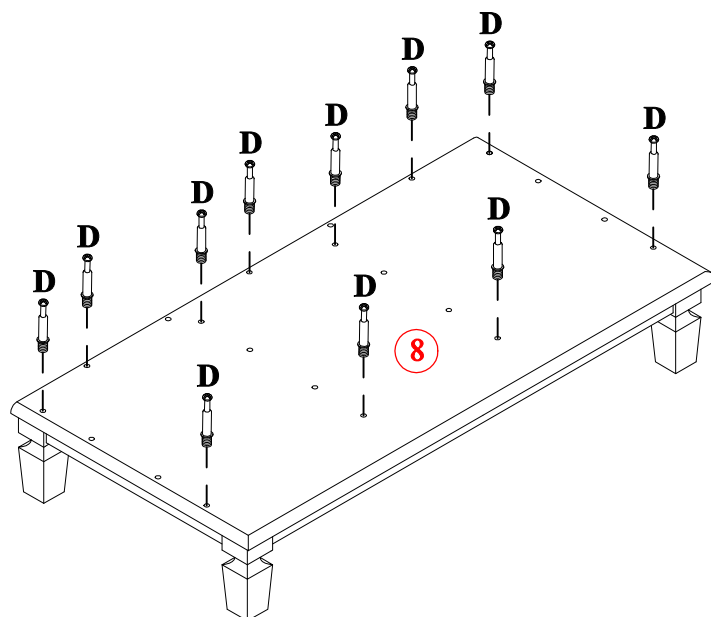

## STEP: 6

**E**




**3PCS**

**O**



**10PCS**

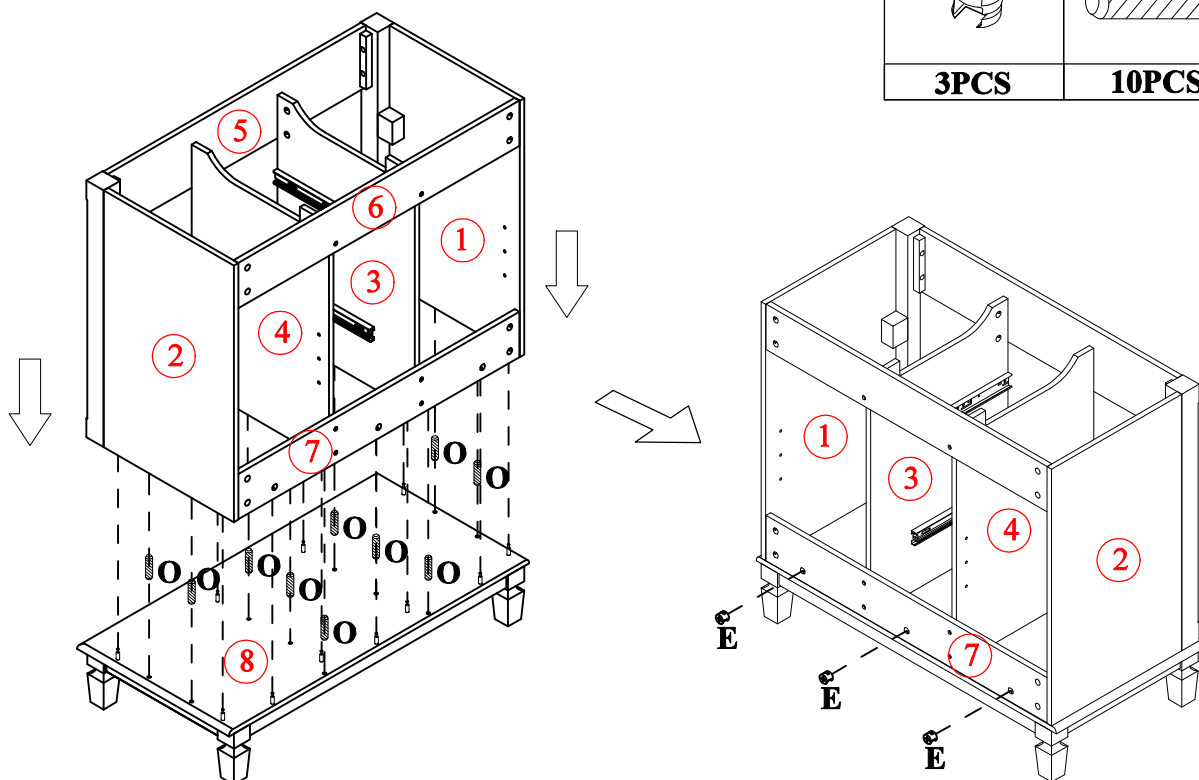


## STEP: 7

**E**



**8PCS**

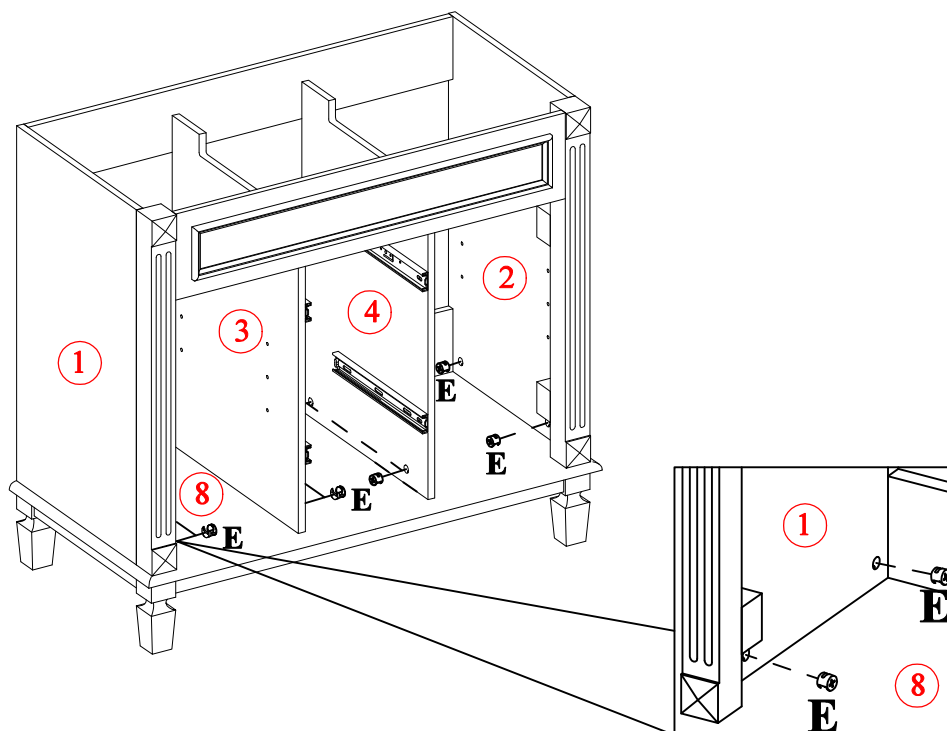

## STEP: 8

**L**




**4PCS**


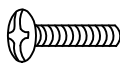

**M**






**8PCS**

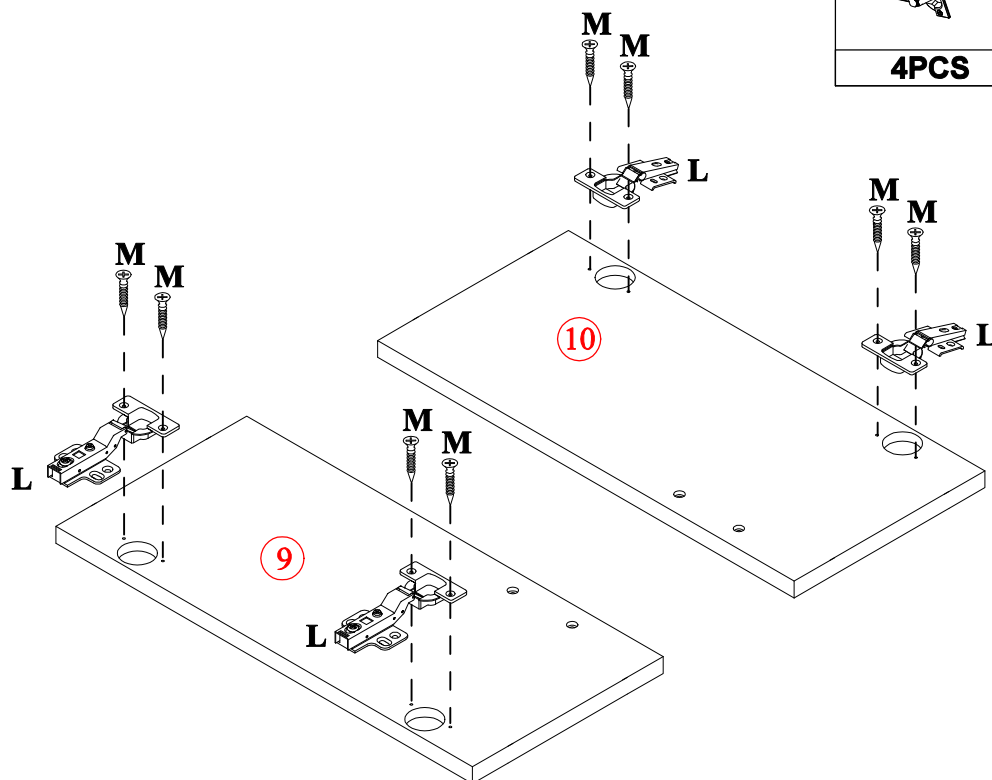




## STEP: 9

<b>I</b>	<b>J</b>	<b>M</b>
		
<b>2PCS</b>	<b>4PCS</b>	<b>16PCS</b>

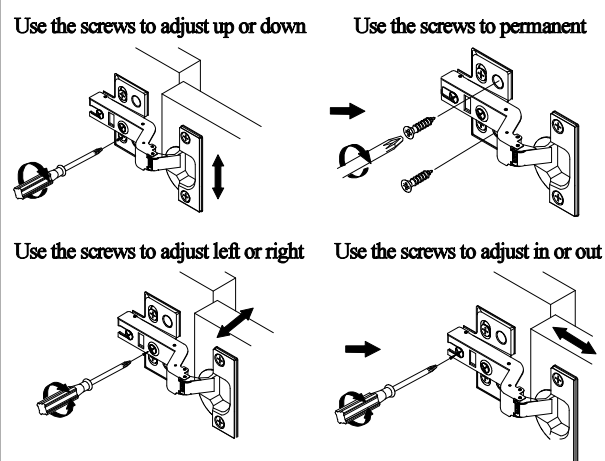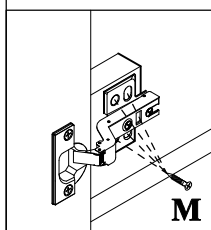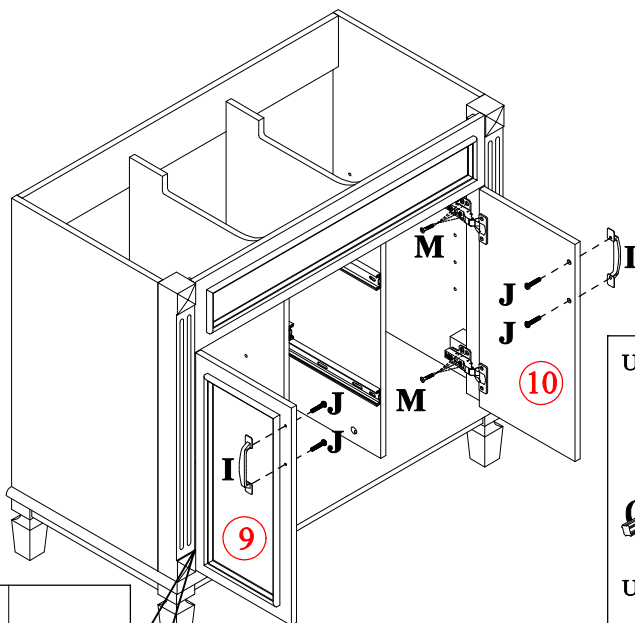



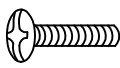

## STEP: 10


<b>N</b>
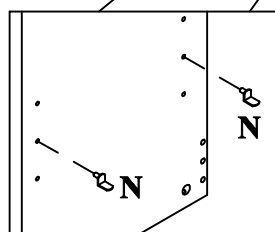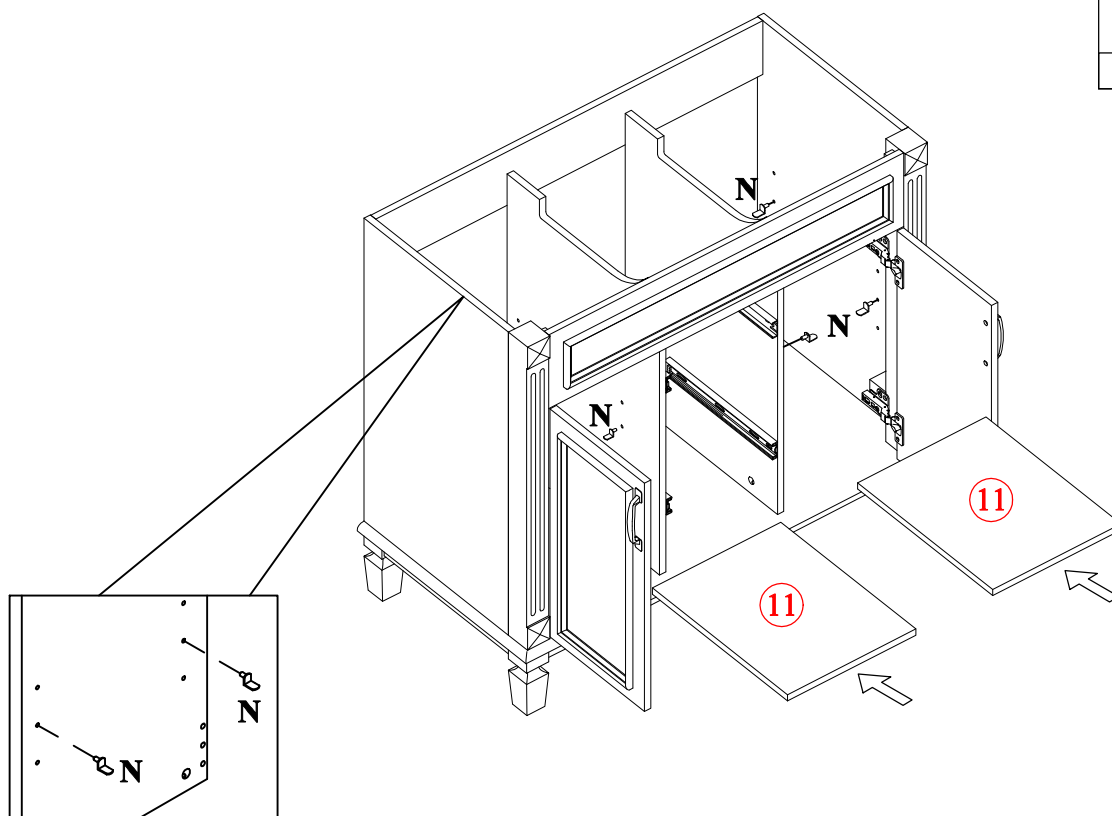
<b>8PCS</b>

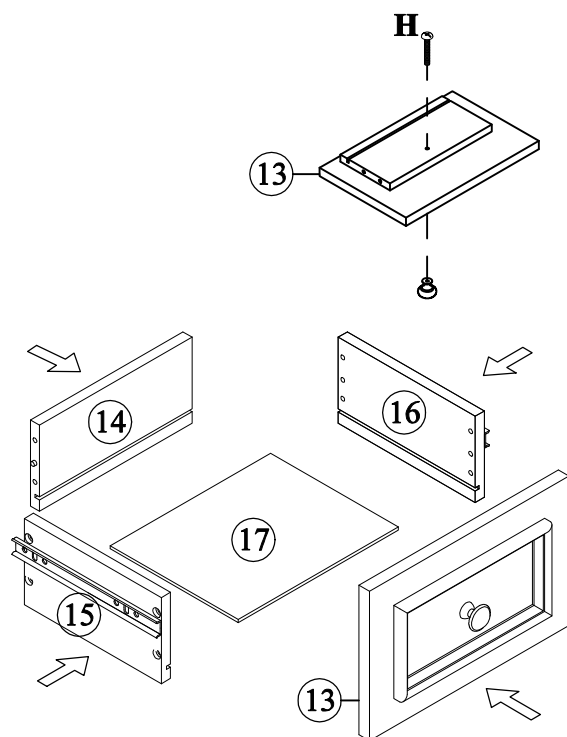


## STEP: 11

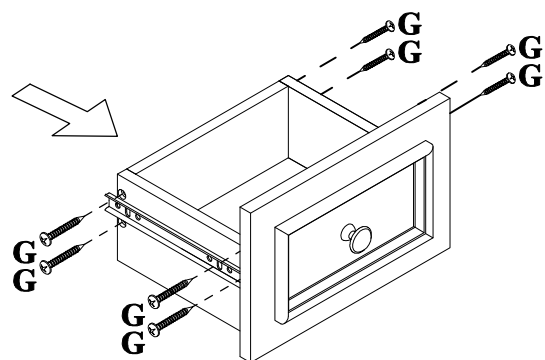


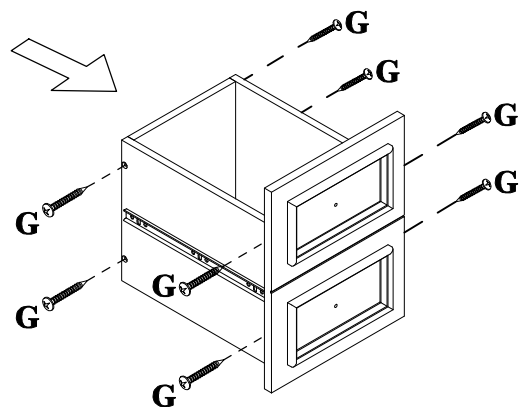
H	K	G
		
1PC	1PC	8PCS




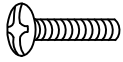
## STEP: 12

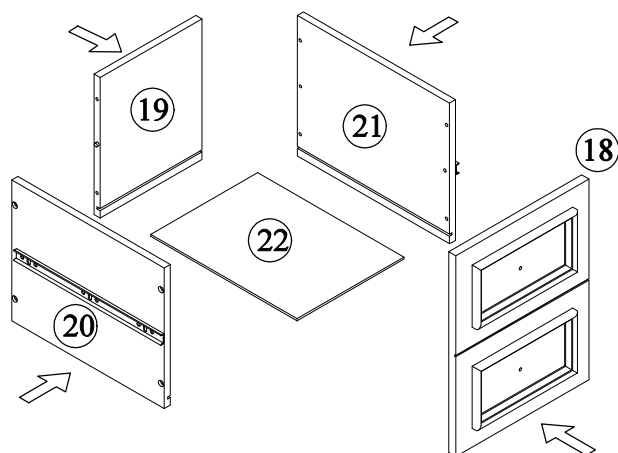


G

8PCS




### **STEP: 13**


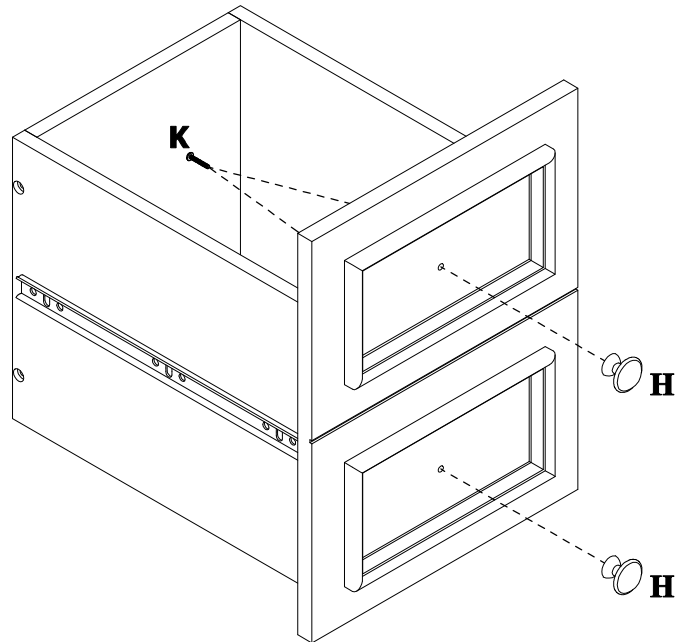
<b>H</b>		<b>K</b>	
<b>2PCS</b>		<b>2PCS</b>	



### **STEP: 14**

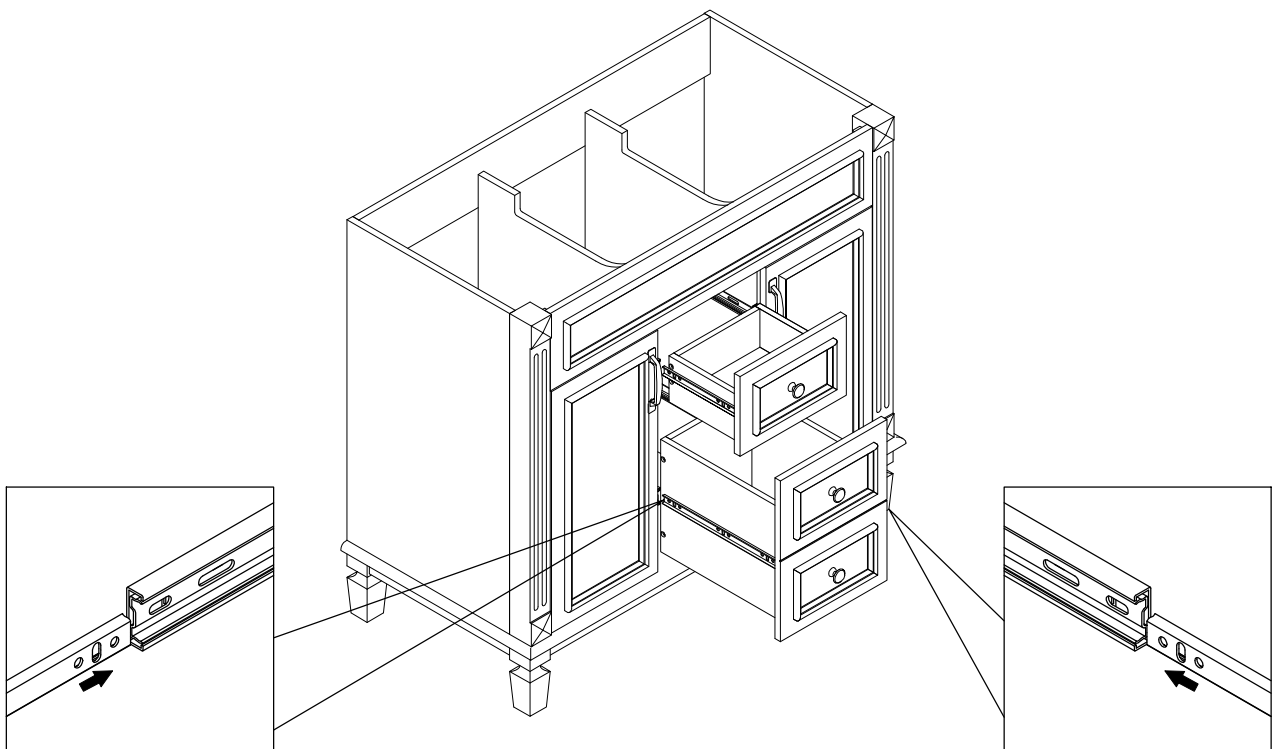


## **STEP: 15**

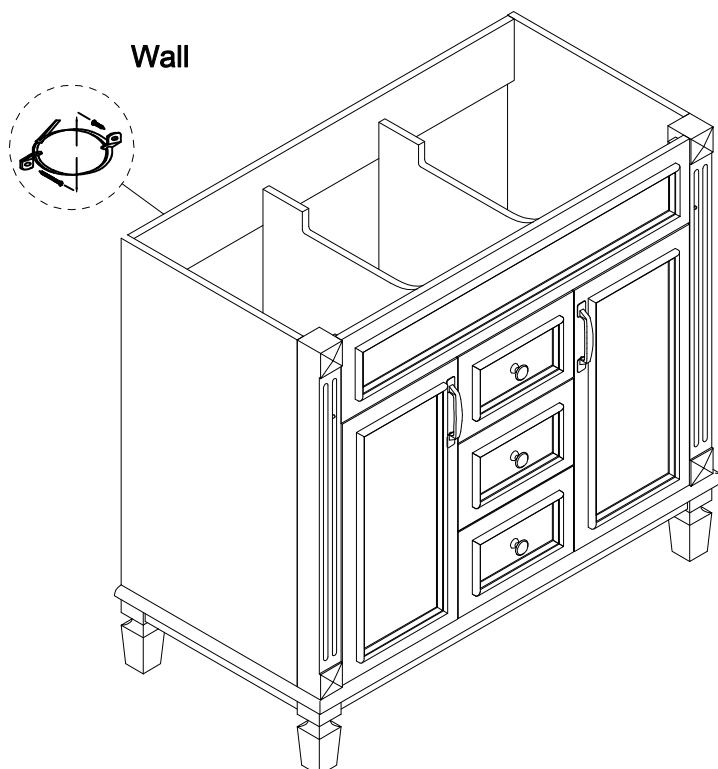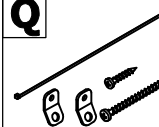**Q**


## **STEP: 16**

Install the sink on the cabinet with glue.  
Let stand for 24 hours

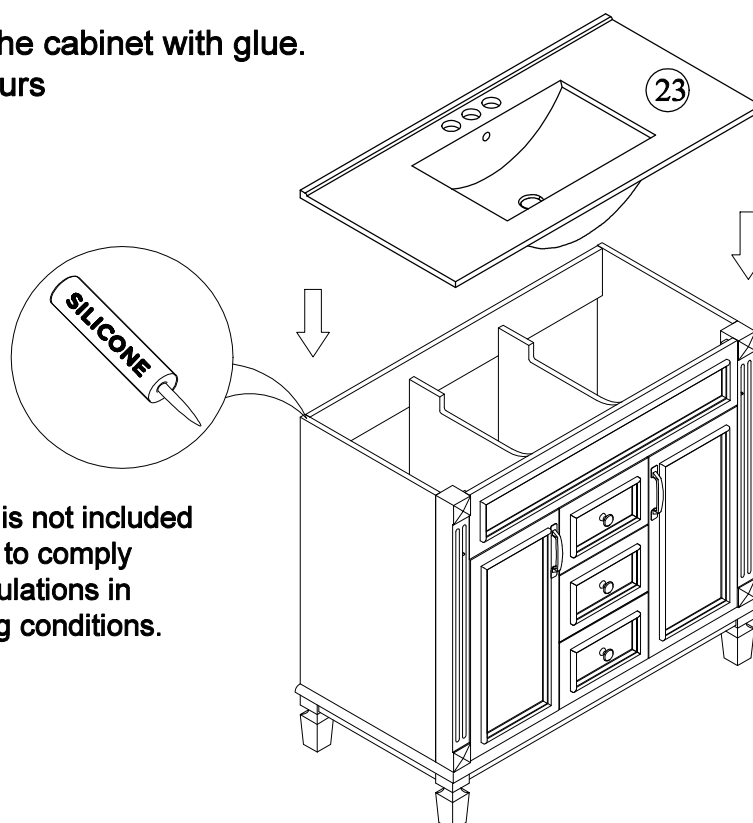


\*Silicone glue is not included  
in the package to comply  
with safety regulations in  
certain shipping conditions.

## **STEP: 17**

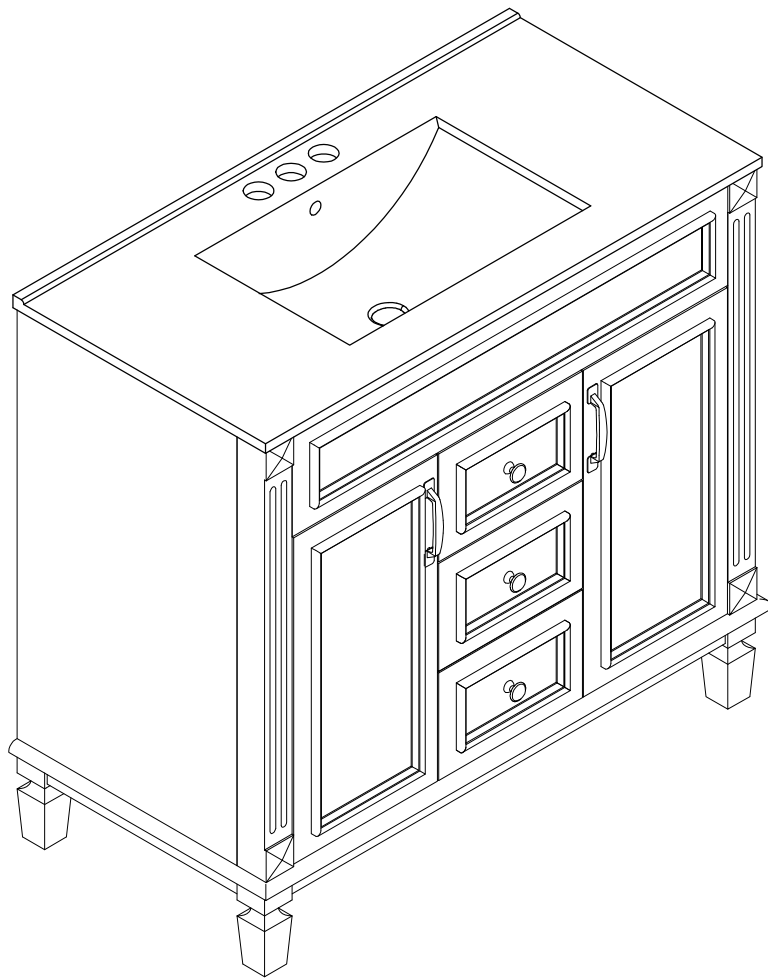




# HINGE ADJUSTMENTS

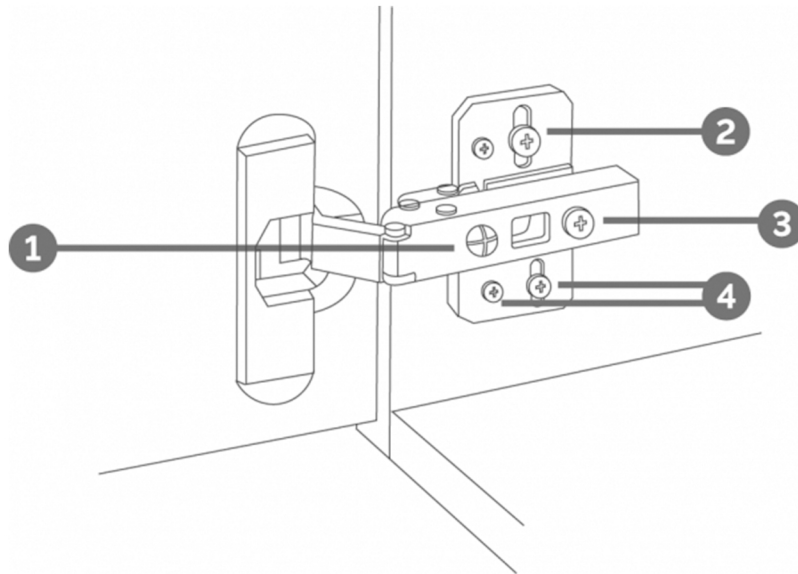


## ① Sideways / Tilt adjustment

Turn the screw  
**clockwise** to move the door further away from  
the side of the cabinet  
**anticlockwise** to move the door closer to the  
side of the cabinet

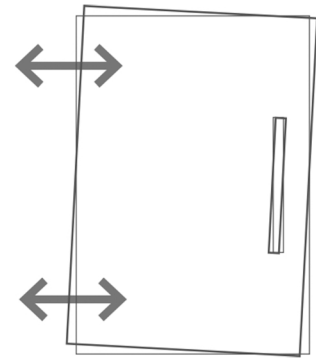

## ② ④ Height adjustment

While supporting the weight of the door, turn the  
screws  
**clockwise** to move the door up  
**anticlockwise** to move the door down

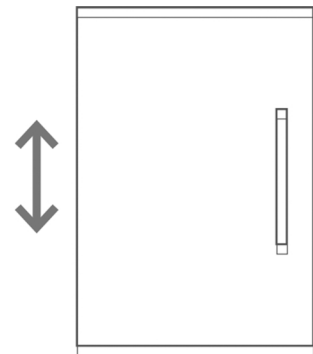

## ③ Forward and back adjustment

If the gap between the back of the door and the  
cabinet is too small, and the door may not close  
fully. Turn the screw  
**clockwise** to decrease the gap between the  
door and the cabinet  
**anticlockwise** to increase the gap between the  
door and the cabinet

