



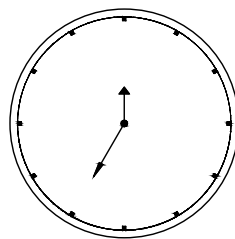


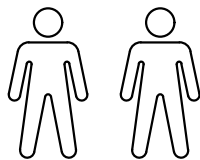

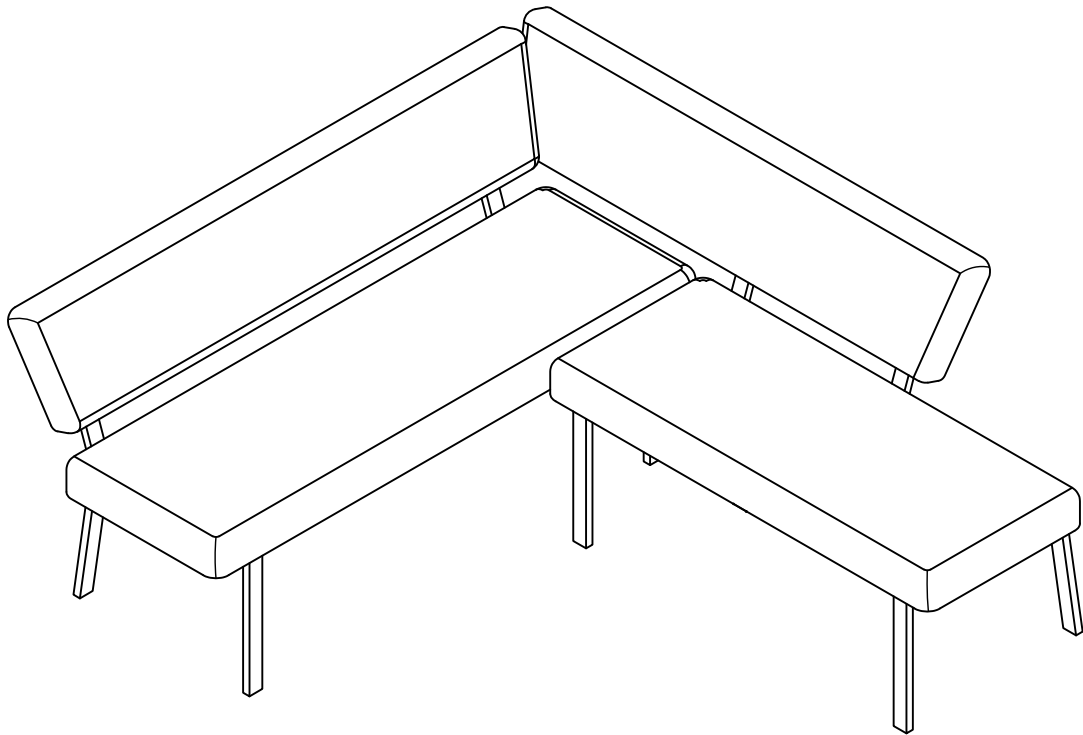


ASSEMBLY INSTRUCTION

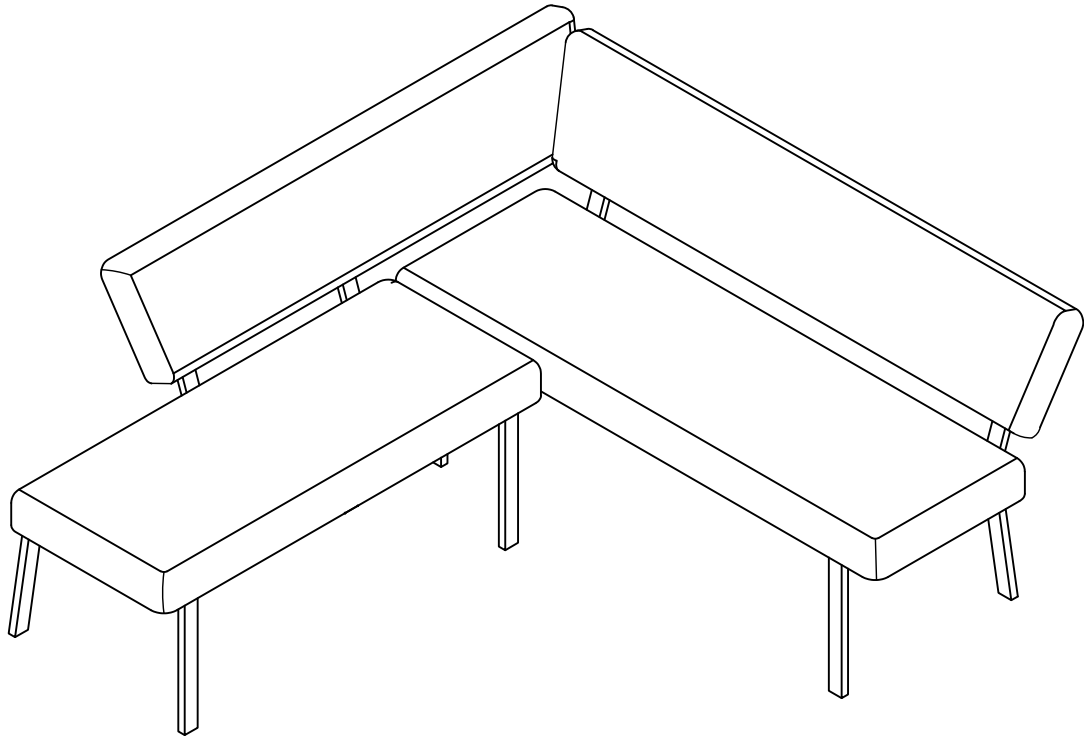

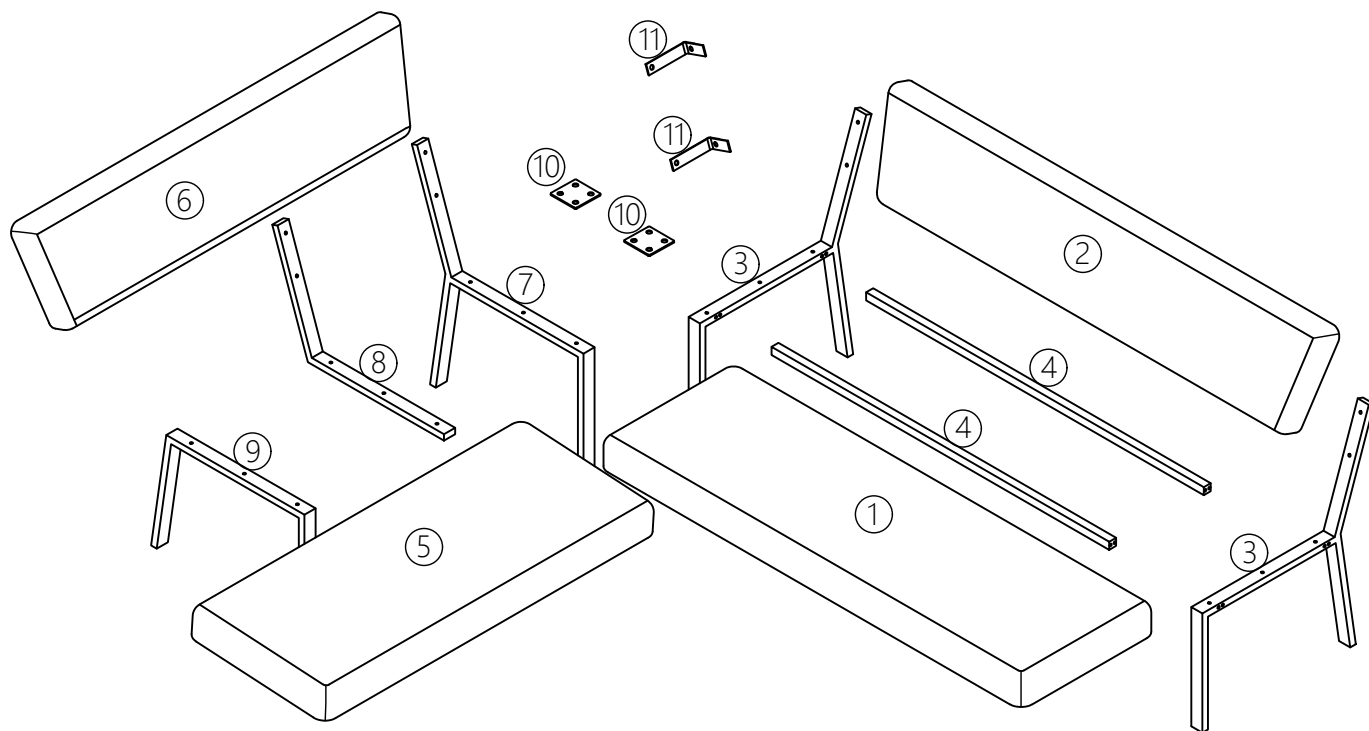


A	x 8+1	B	x 23+1	C	x 12+1	D	x 1
							
M6x60		M6x35		M6x15		M4	


①x1pc

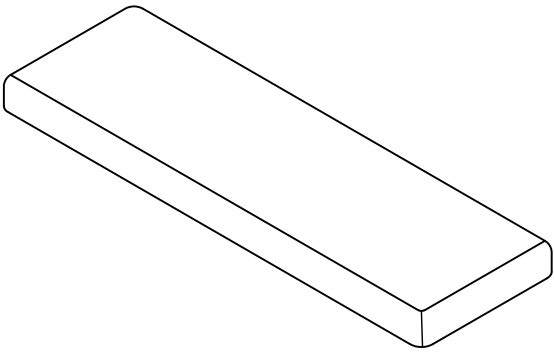


②x1pc

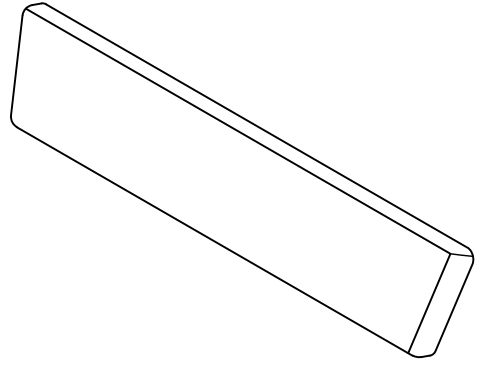


③x2pcs

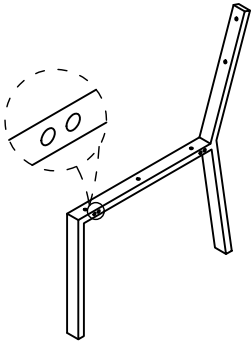


④x2pcs

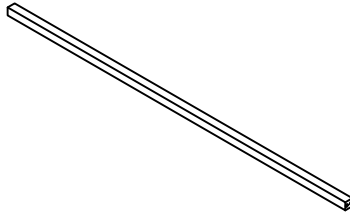


⑤x1pc

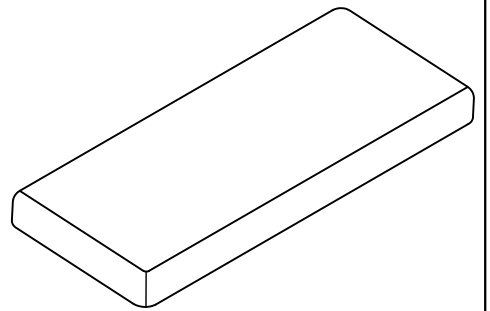


⑥x1pc

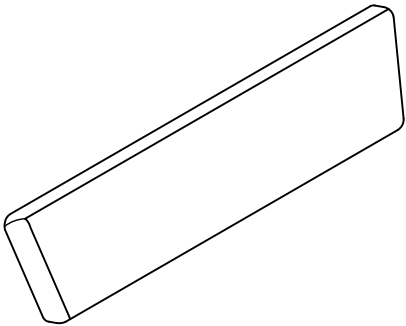


⑦x1pc

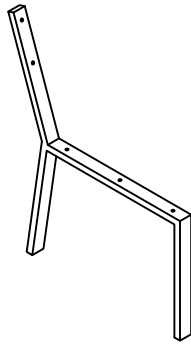


⑧x1pc

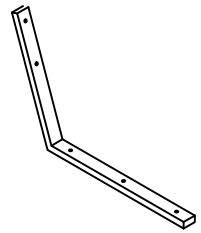


⑨x1pc

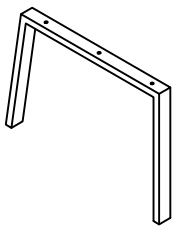


⑩x2pcs





⑪x2pcs

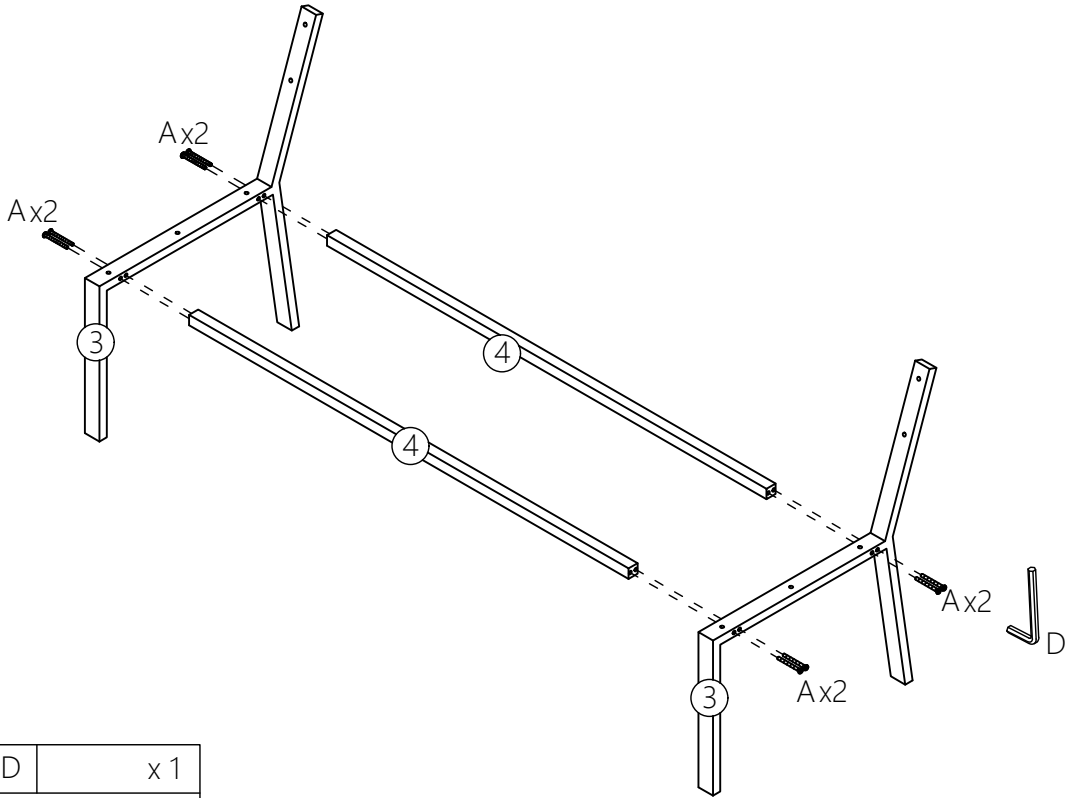



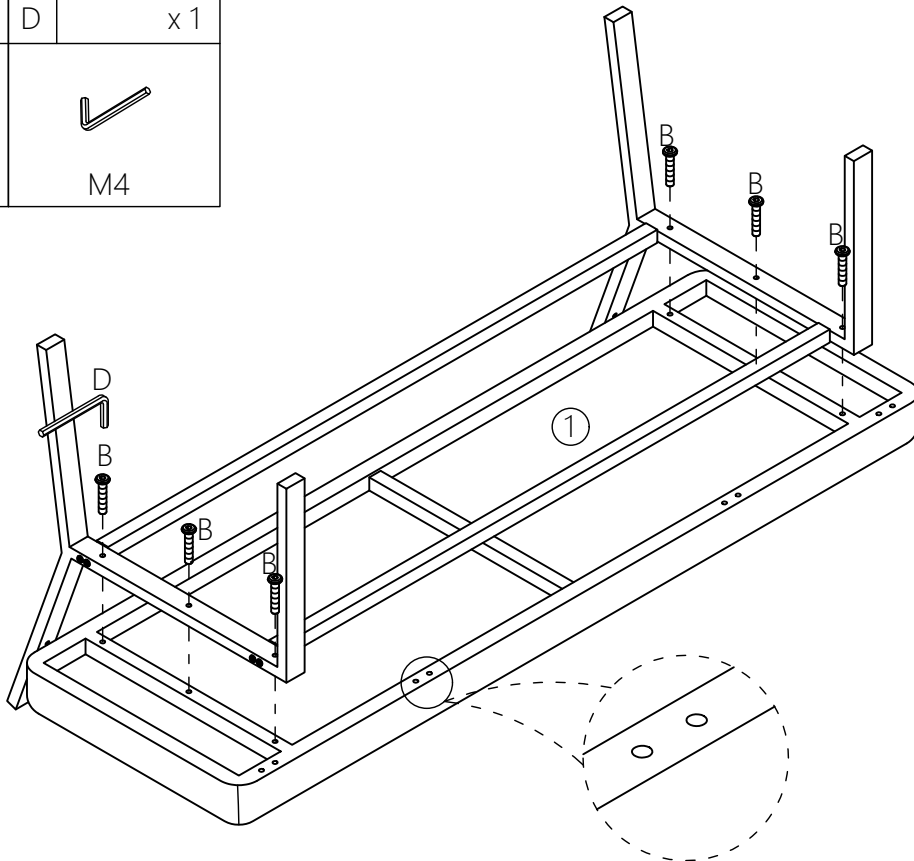
1





A	x 8	D	x 1
			
M6x60		M4	


2

B	x 6	D	x 1
			
M6x35		M4	





3


B	x 4	D	x 1
			
M6x35		M4	

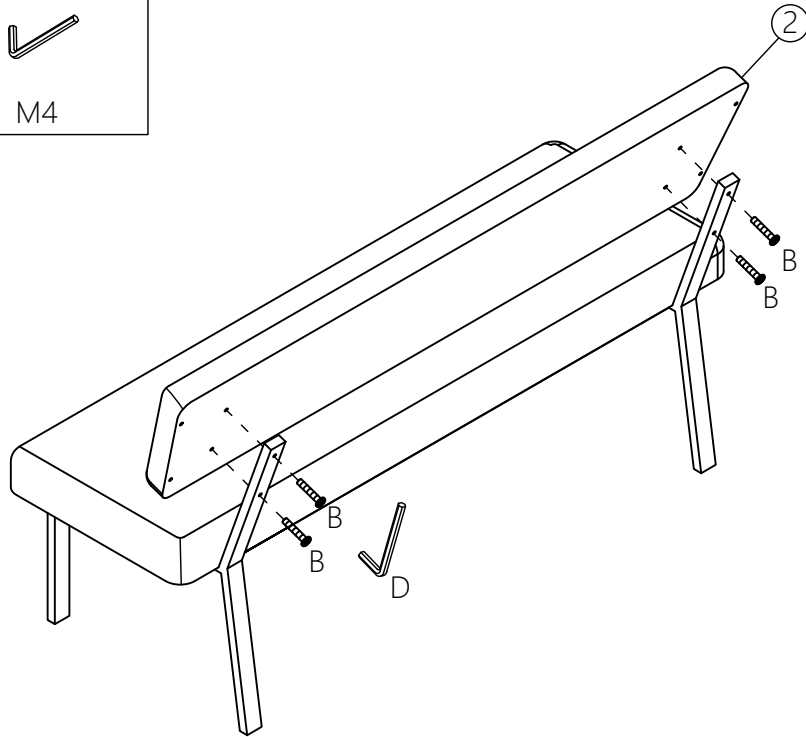



! Note: Align the screw holes and then tighten the screws.


4

B	x 9	D	x 1
			
M6x35		M4	

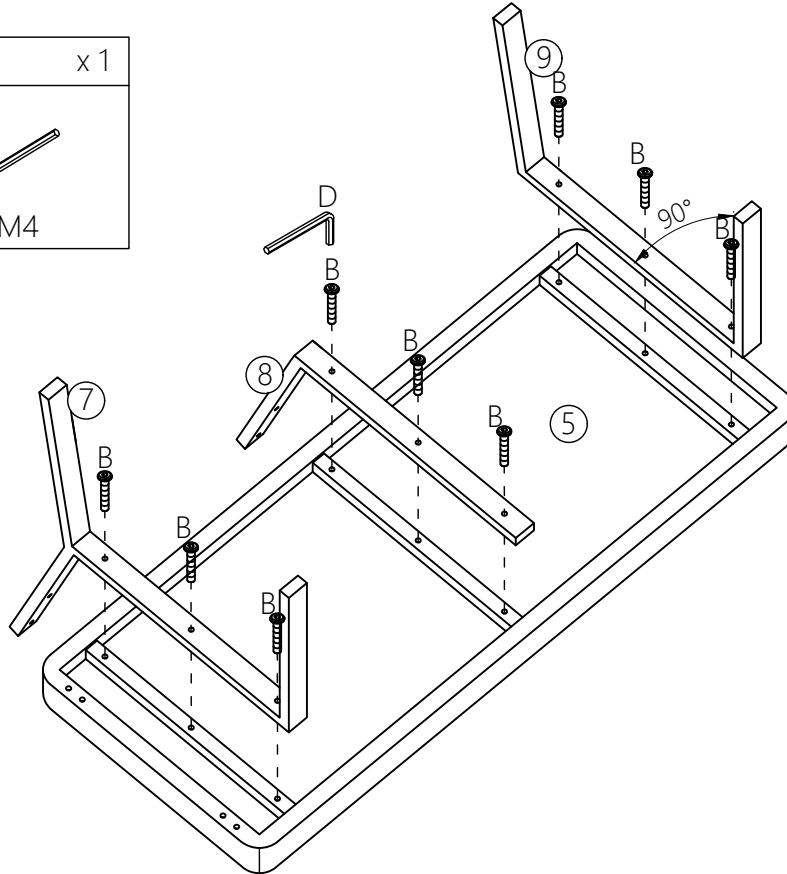


5

B	x 4	D	x 1
			
M6x35		M4	

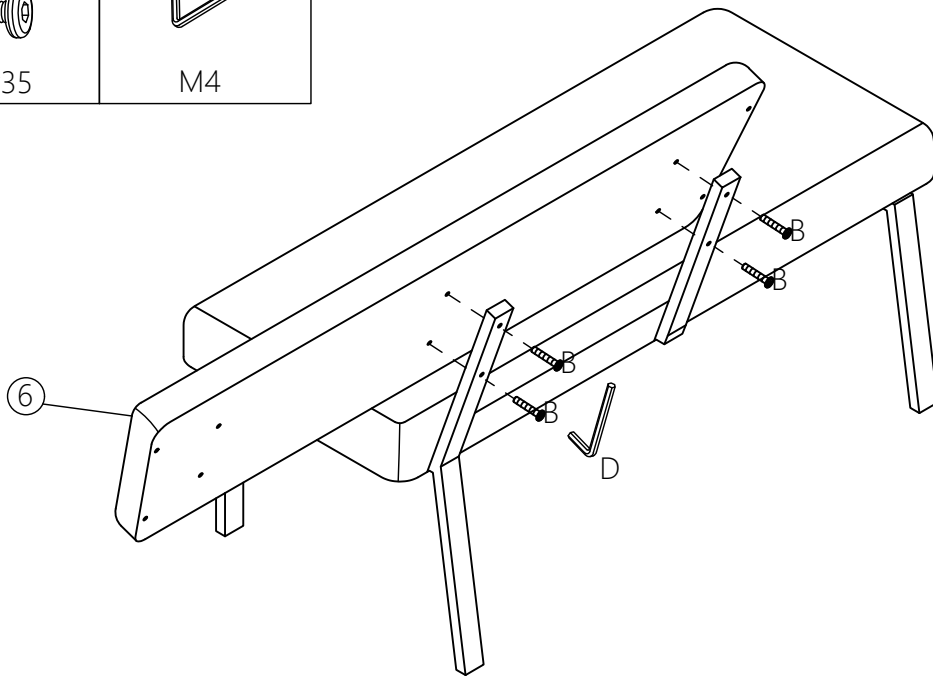




! Note: Align the screw holes and then tighten the screws.

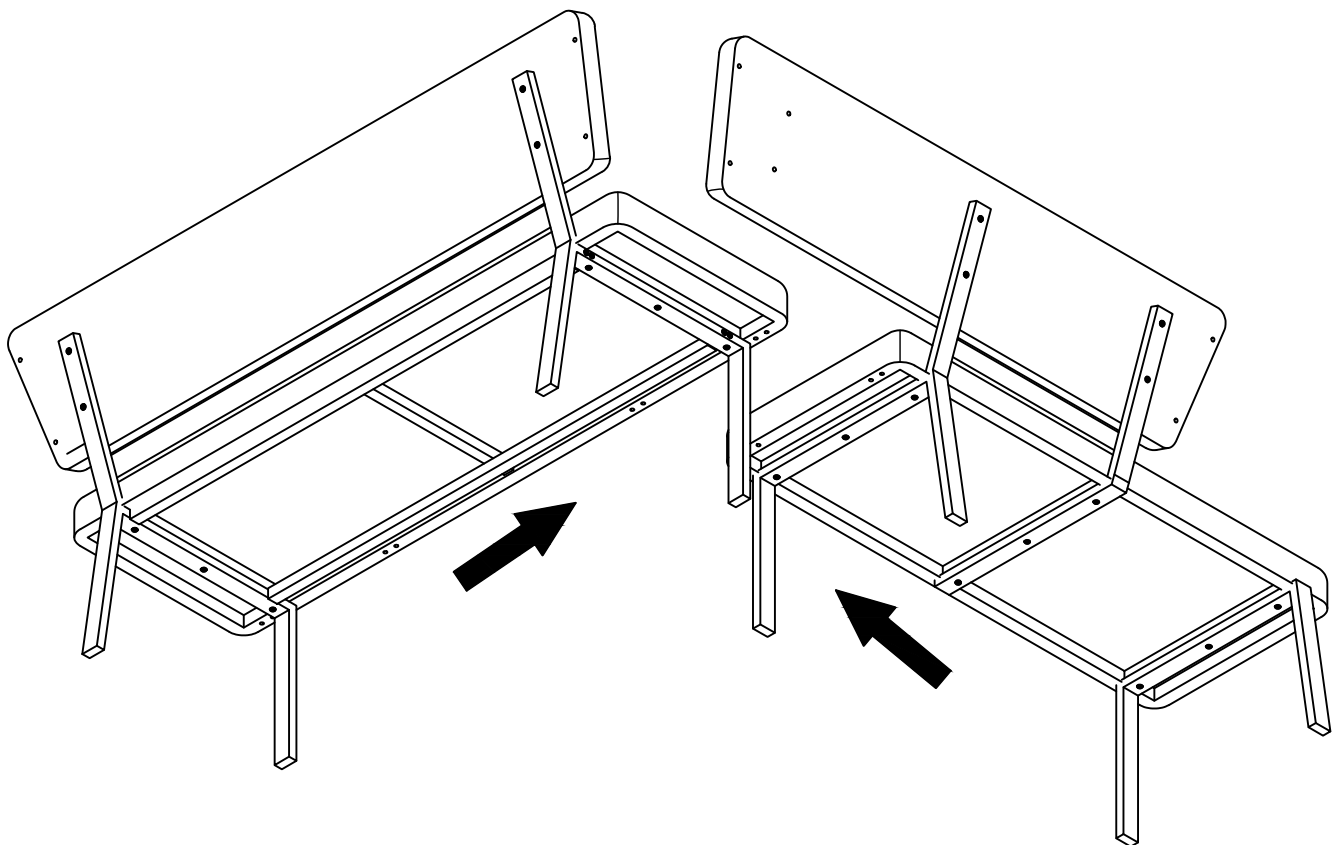6






7

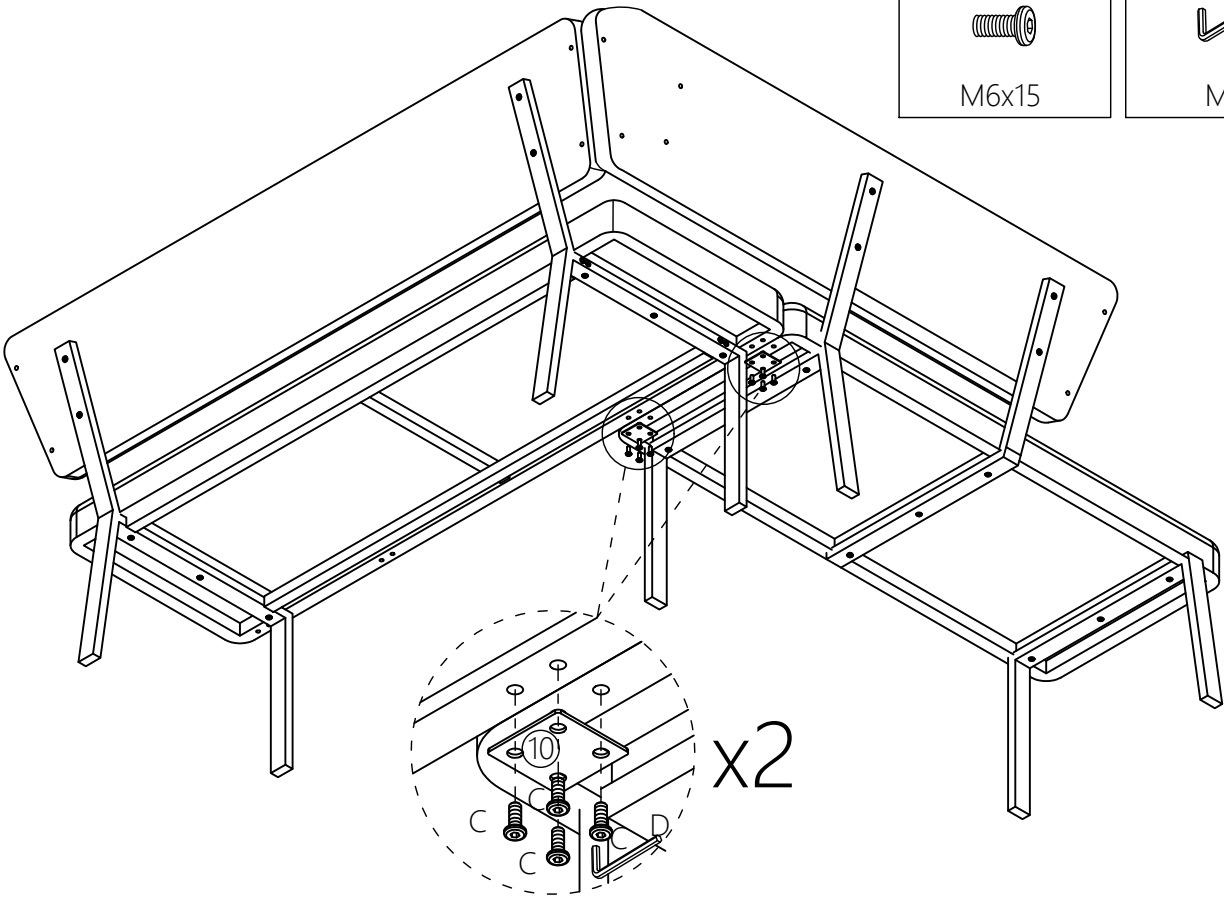
C	x 8	D	x 1
			
M6x15		M4	





8


C	x 4	D	x 1
			
M6x15		M4	

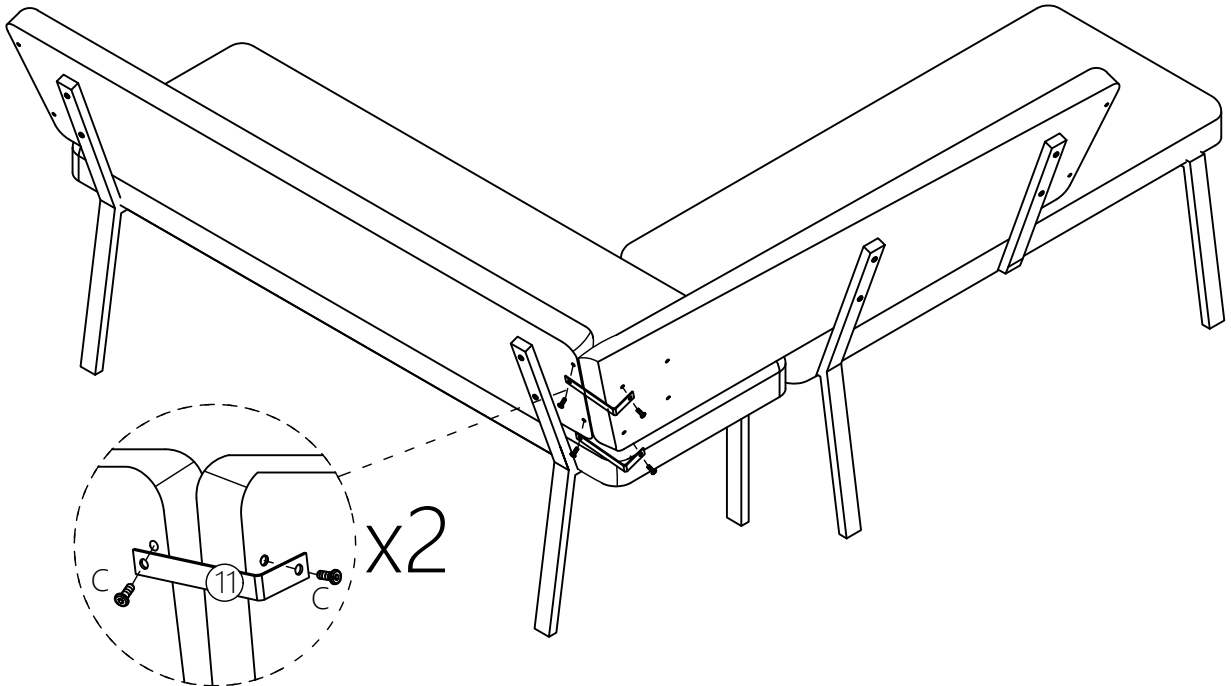

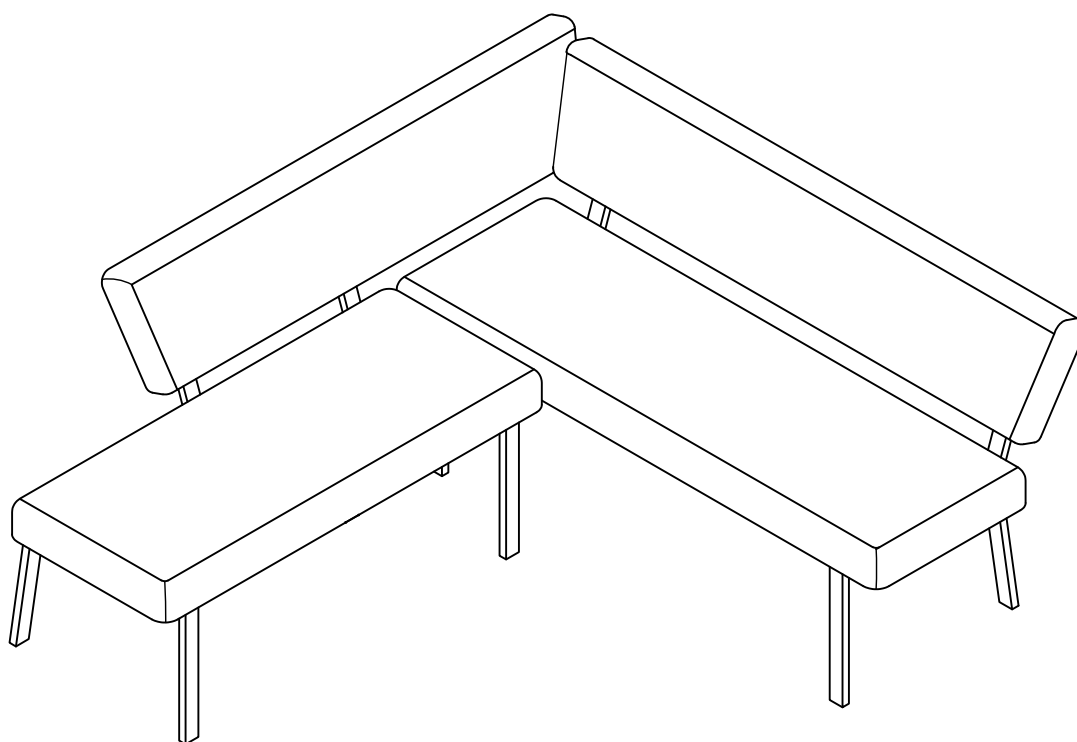



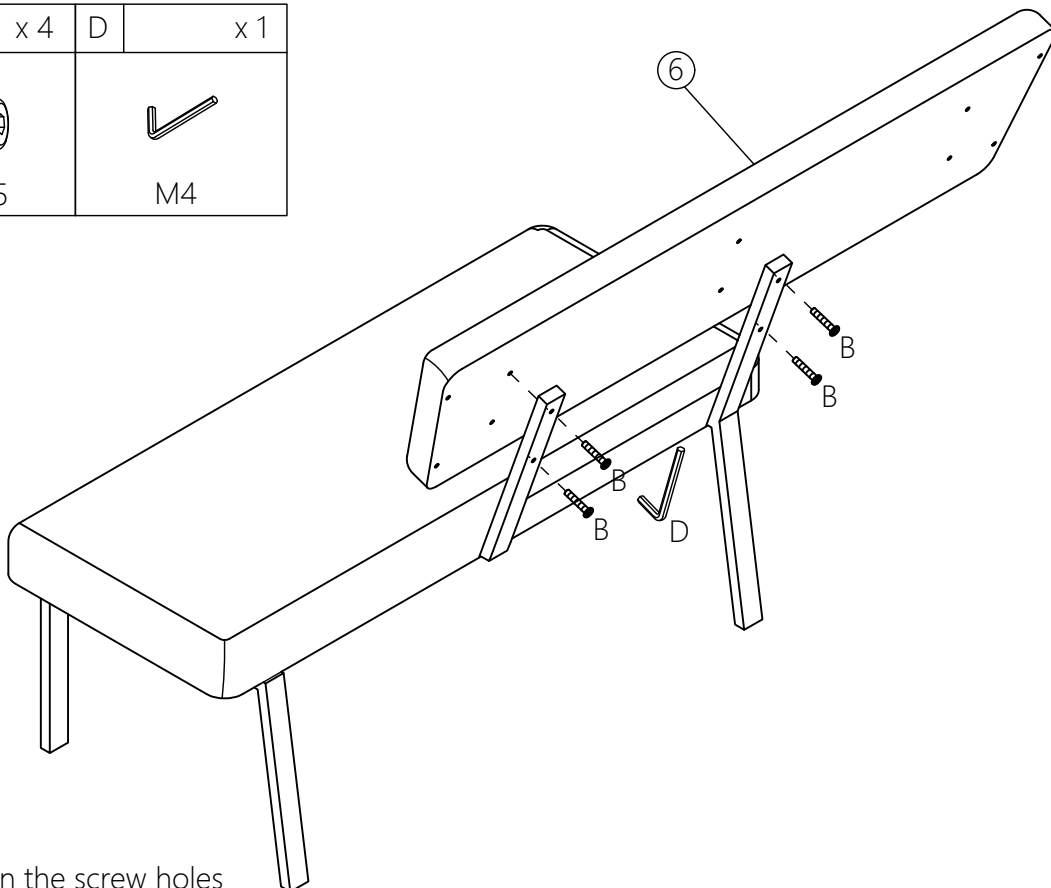
10

B	x 9	D	x 1
			
M6x35		M4	

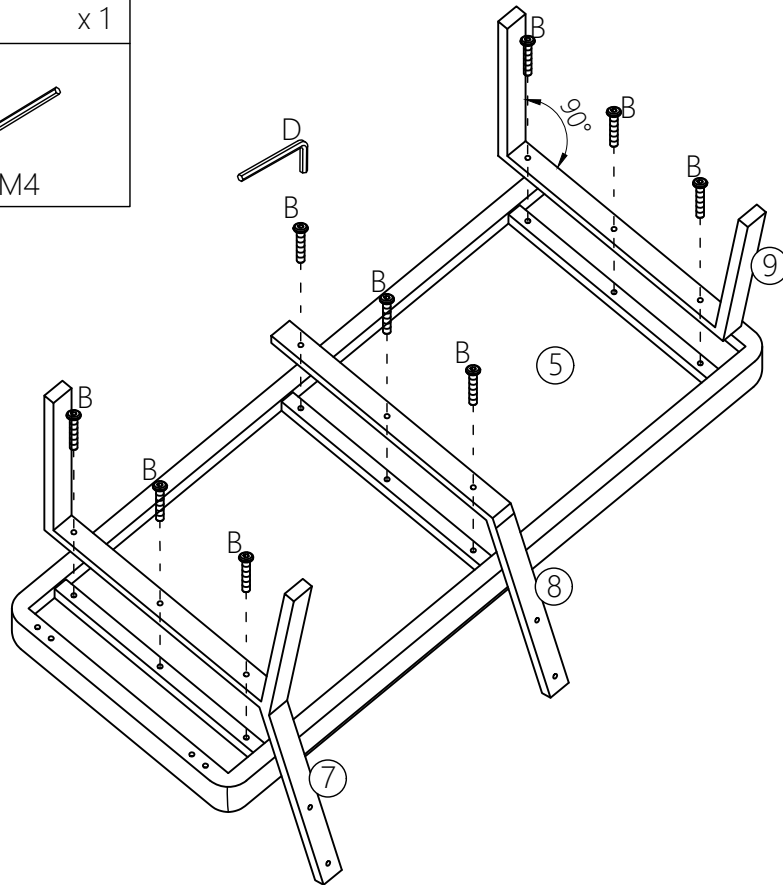


11

B	x 4	D	x 1
			
M6x35		M4	






! Note: Align the screw holes and then tighten the screws.

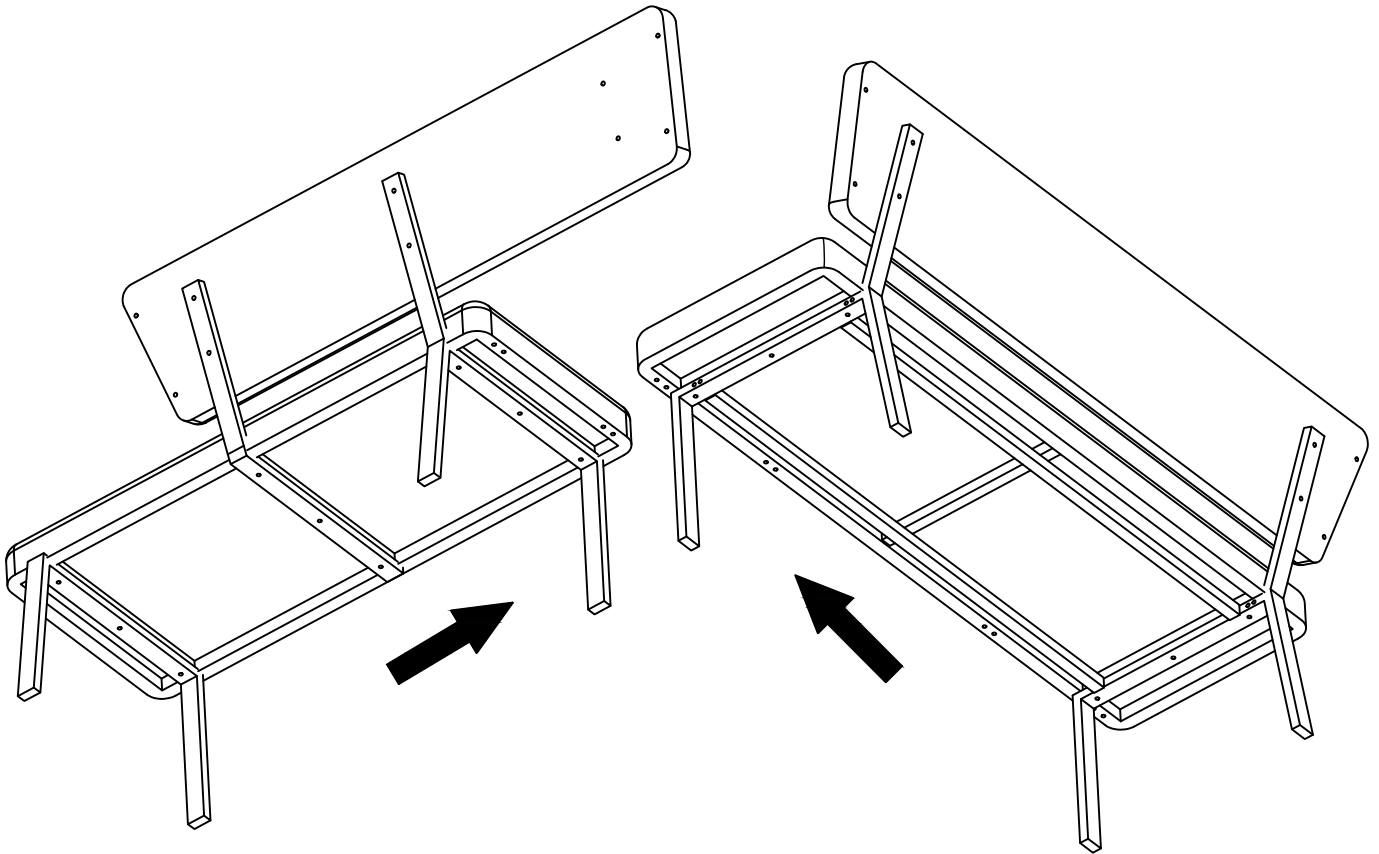12



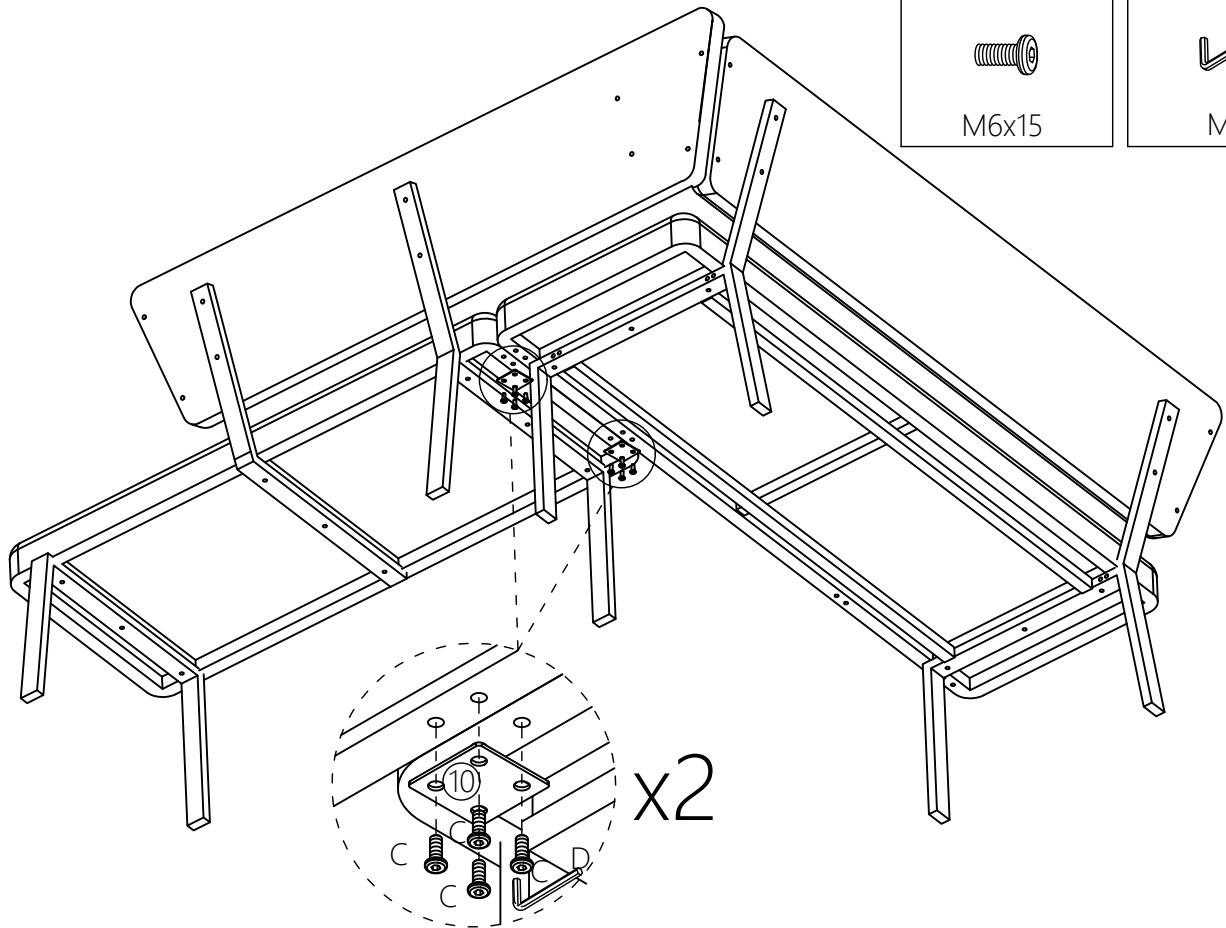


13



C	x 8	D	x 1
			
M6x15		M4	

14

C	x 4	D	x 1
			
M6x15		M4	

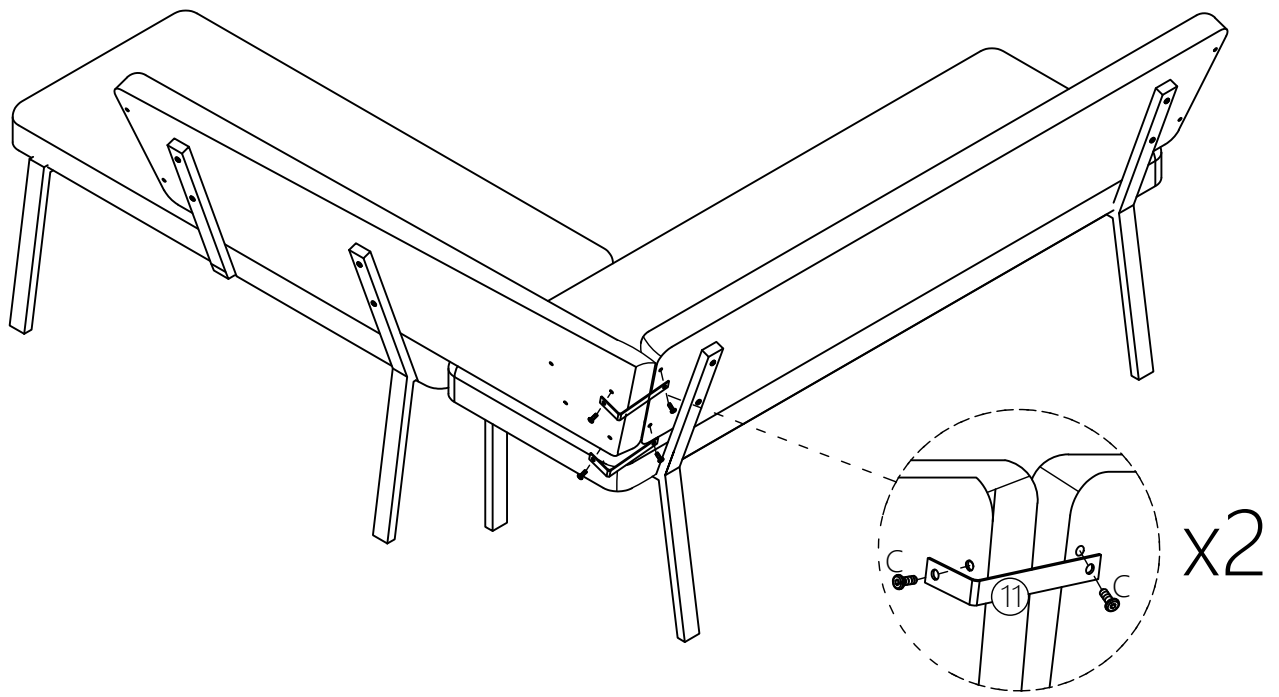

15

