


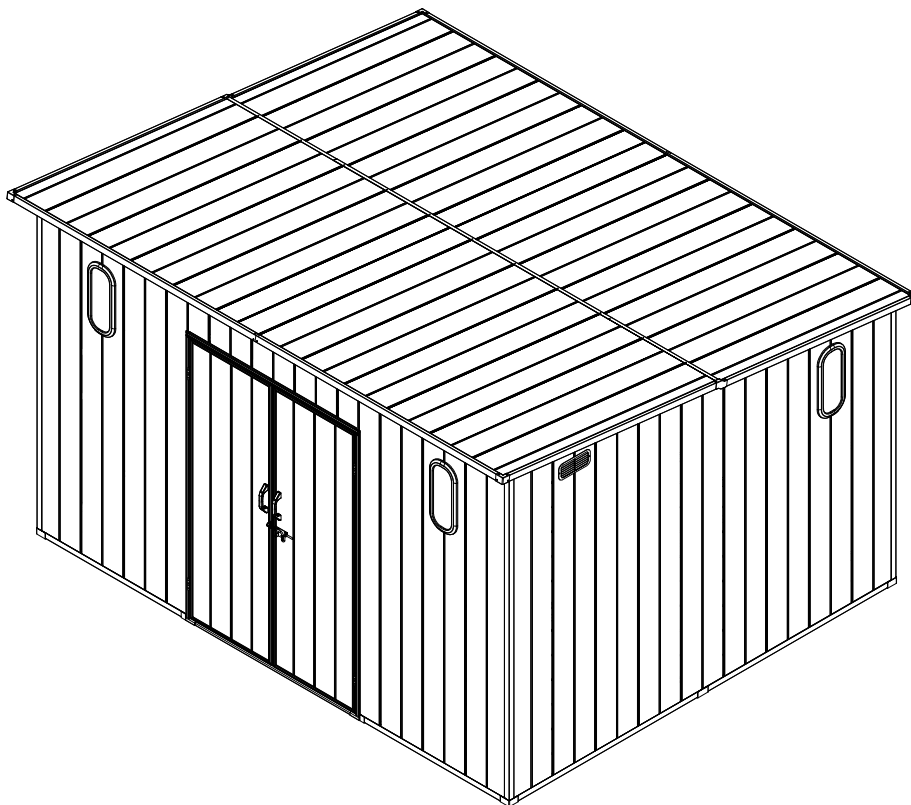

12'x10'

Outdoor Storage Shed

ASSEMBLY MANUAL



MODEL#: LGCZ1811

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2024–2026 domi LLC. All Rights Reserved.



PLAN AHEAD

Before beginning installation, check local building codes regarding footings, location and other requirements.

Study and understand this instruction.

Important information and helpful tips will make your installation easier and more enjoyable.

Tools and Materials: There are some basic tools and materials you will need for the installation. Decide which method of anchoring and the type of foundation you wish to use in order to form a complete list of the materials you will need.

BEFORE YOU BEGIN

Assembly Instruction: Instructions are supplied in this manual and contain all appropriate information for your installation. Review all instructions before you begin, and during assembly, follow the step sequence carefully for correct results.

Parts List: Check to be sure that you have all the necessary parts and quantities in your package. These are packaged within the carton. Note that extra fasteners have been supplied for your convenience.

Explosion Diagram: All parts except screws and bolts are shown in this diagram, review all parts before you begin. Familiarize yourself with the hardware and fasteners for easier use during installation.

Pre-assembly



1. Two or more people are required for assembly.



2. You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4. You may need a safety hat.



5. Please use a Phillips screw driver.



6. For ease of construction, you may need a drill.



7. You may need a safety goggle.



8. Do not fully tighten screws prior to complete assembly.

Warning & Attention

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;

-It would be much easier to assemble the product with three or more people;

-Gaskets must be used.

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

▲ Use bolts to secure the frame to the ground to against the strong wind.

 Please stand inside the shed frame when installing the panels for convenience.

ASSEMBLY TIPS & TOOLS

Watch the Weather Closely: Be sure the day you choose to install your building is dry and calm. Do **NOT** attempt to assemble your building on a windy day. Be careful on wet or muddy ground.

Use Teamwork: Two or more people are required to assemble your building. One person can hold the parts or panels in place while the other person fastens them together and handles the tools. This makes the process of assembling your building faster and safer.


Tools and Materials: Here is a list of some basic tools and materials you will need to assemble your building. Decide which method of anchoring and the type of base you will use to make a complete list of the materials you will need.

WHAT YOU NEED




- Work Gloves
- Safety Glasses
- Step Ladder
- No. 2 Phillips Screwdriver (Magnetic Tip Preferred)
- Utility Knife or Scissors
- Pliers
- Carpenter's Level
- Tape Measure

RECOMMENDED TIME SAVERS

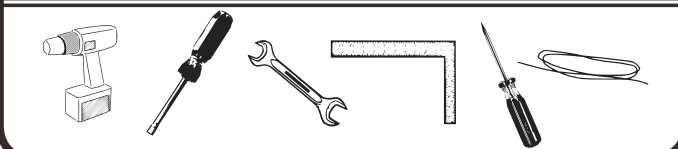

- Power Drill (Cordless, Variable Speed)
- Nut Driver or Wrench
- Square
- String (for squaring the frame)
- Awl (to align holes)

BASE PREPARATION TOOLS

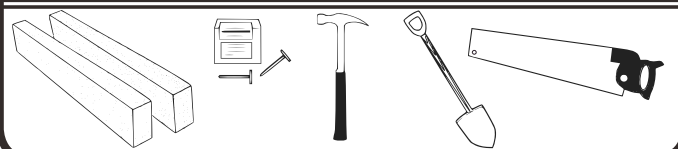

- Lumber and/or Concrete
- Hammer and Nails
- Spade or Shovel
- Hand Saw or Power Saw


How to Select and Prepare Your Building Site: Before you start to assemble your building, you will want to decide on a good location. The best location is a level area with good drainage.

- Allow enough working space so it is not difficult to move parts into position for assembly. Be sure there will be enough space at the entrance for the doors to completely open. Also, there needs to be enough space outside the building to be able to fasten the panel screws from the outside.
- Before assembling any parts, your base should be constructed and an anchoring system should be ready to use.

SAFETY PRECAUTIONS...

*Safety precautions **MUST** be followed at all times throughout the construction of your building!*

sharp edges

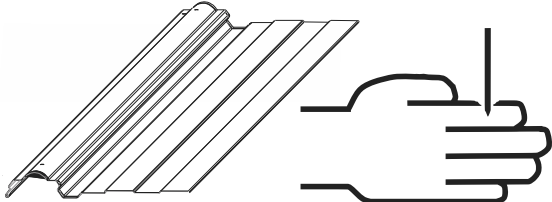


Care must be taken when handling various pieces of your building since many contain sharp edges. Please wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your building.

no children or pets at worksite




Keep children and pets away from the worksite during construction and until the building is completely assembled. This will help avoid distractions and any accidents which may occur.

don't focus weight on roof

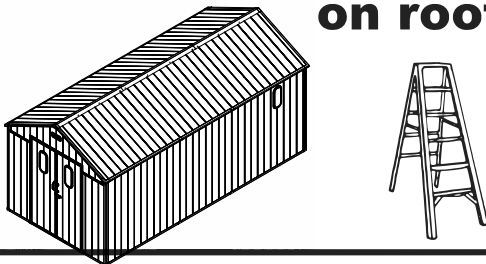

NEVER concentrate your weight on the roof of the building. When using a step ladder make sure that it is fully open and on even ground before climbing on it.

always practice proper tool safety

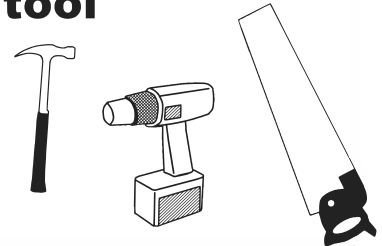


















Practice caution with the tools being used in the assembly of this building. Be especially familiar with the operation of all power tools.




beware of wind





































Do NOT attempt to assemble your building on a windy day. The large panels can catch the wind like a "sail", causing them to be whipped around making construction difficult and unsafe.
















Do NOT attempt to assemble your building before double checking that you have all the parts indicated in the parts lists as well as all hardware. Any building left partially assembled may be seriously damaged by even light winds.

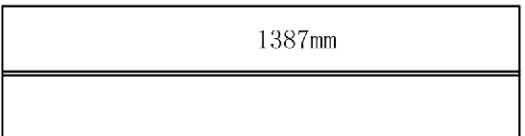

 1182mm  A—x1	 336.3mm  336.3mm
 1674mm  A1—x2	 2121mm  B9—x6
 1046.5mm  A3—x2	 1786mm  Ba—x1
 1362.5mm  A4—x4	 Bb—x1
 1387mm  Aa—x22	 1260mm  C—x1
 1387mm  Ab—x20	 1210mm  C1—x1
 1684mm  Ac—x2	 1579.7mm  C2—x1
 1796mm  Ae—x1	 1579.7mm  C3—x1
 1796mm  Af—x1	 1409.7mm  C4—x1
 2125mm  Ag—x1	 1409.7mm  C5—x1
 2125mm  Ah—x1	 1794.4mm  C6—x4
 1795mm  B1—x1	 1571mm  C8—x2
 1795mm  B2—x1	 1401mm  C9—x2
 2121mm  B3—x2	 1191mm  C10—x6
 2121mm  B4—x1	 2121mm  B4a—x1
 2121mm  B5—x1	 2121mm  B3a—x2
 2121mm  B6—x1	

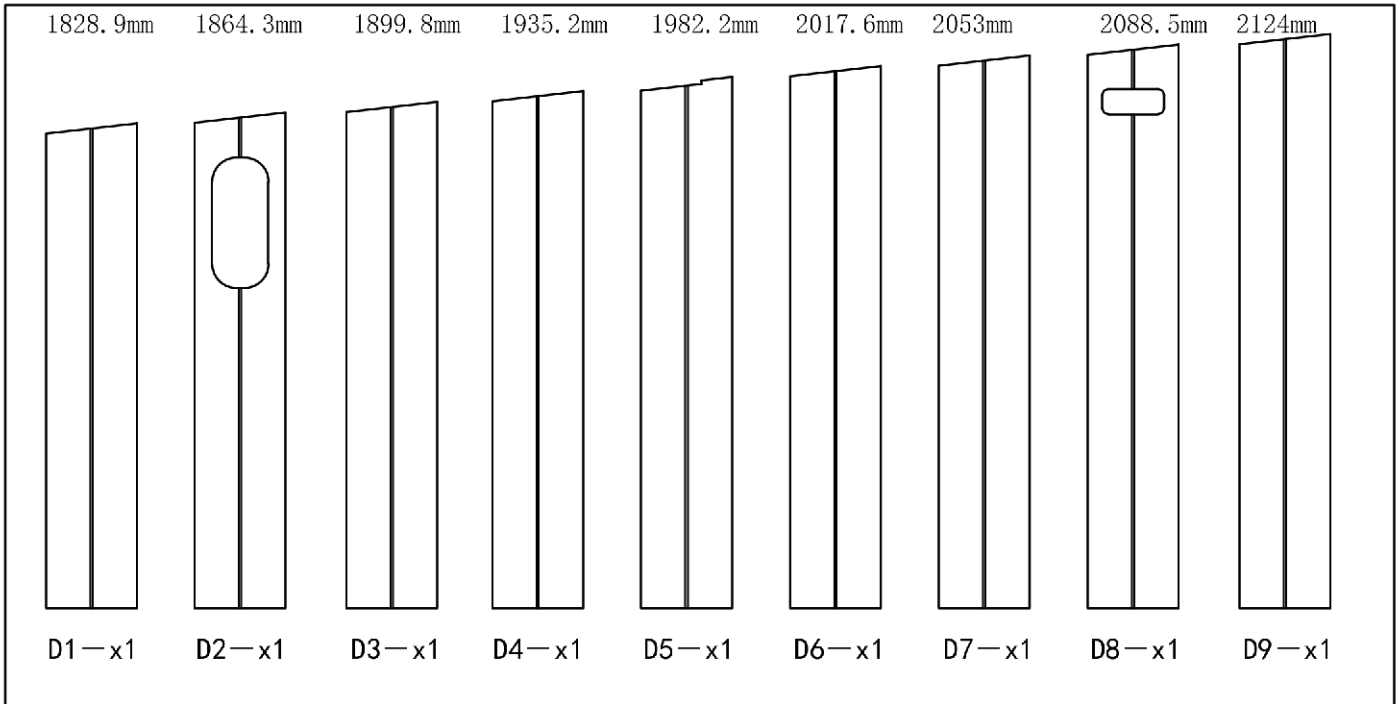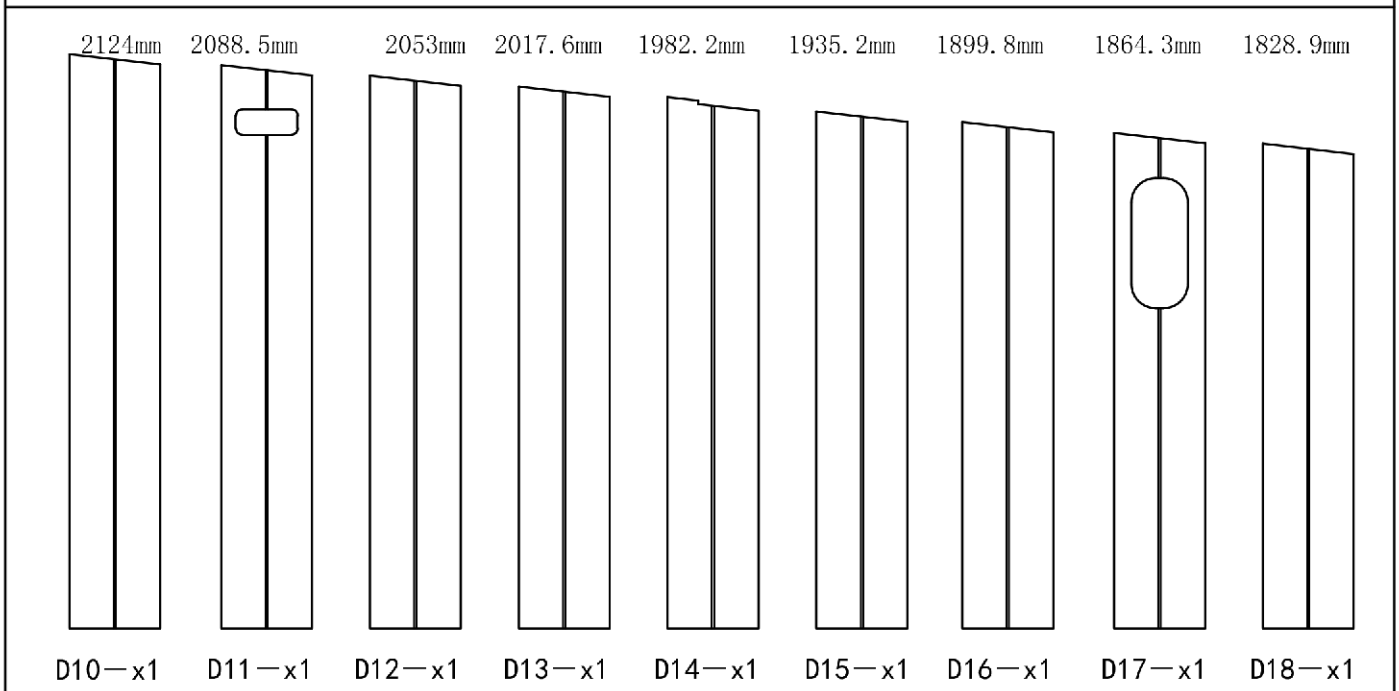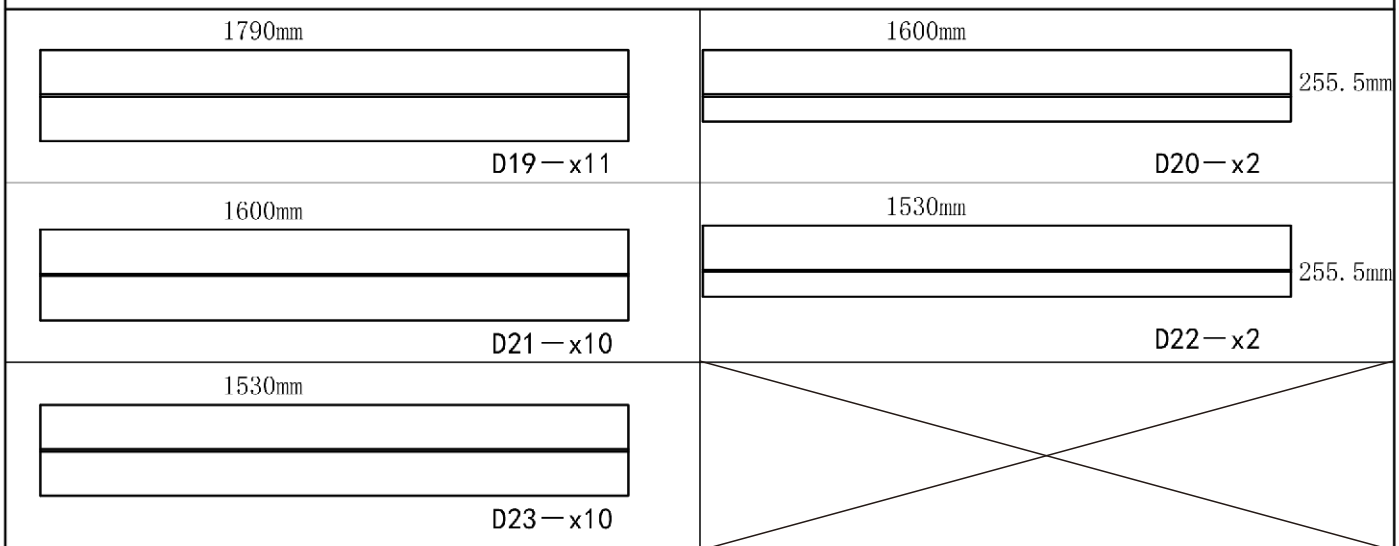

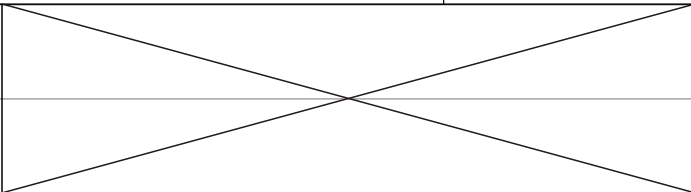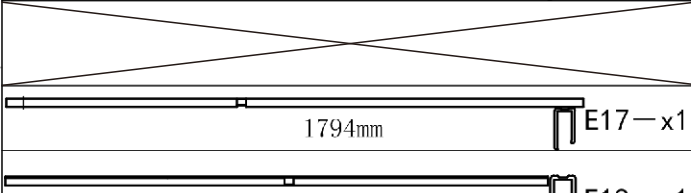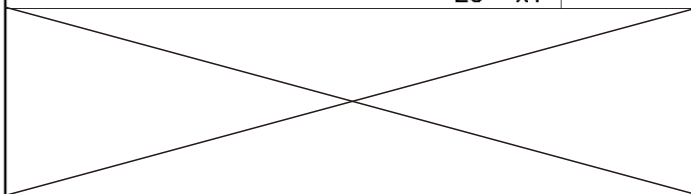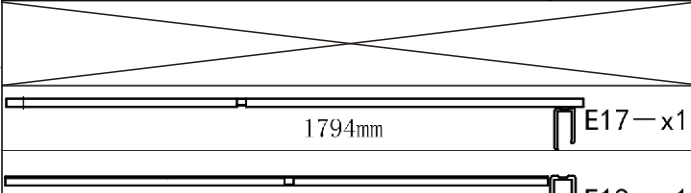
1832mm	1867mm	1902mm	1938mm	1985mm	2020mm	2056mm	2091mm	1790mm	1600mm	1530mm
										
Da—x2	Db—x2	Dc—x2	Dd—x2	De—x2	Df—x2	Dg—x2	Dh—x2	Di—x10	Dj—x11	Dk—x11
								Dm—x1		
								Dn—x1		
								Dp—x1		
					1833.3mm		E1—x1			
					1613.3mm		E2—x1			
					1816mm		E3—x1			
					1596mm		E4—x1			
					1470.7mm		E5—x1			
					1369.7mm		E6—x1			
					1470.7mm		E7—x1			
					1369.7mm		E8—x1			
										
									E11—x1	
									E12—x1	
									E13—x1	
									E14—x1	
									E15—x1	
										
									E17—x1	
									E18—x1	
									E20—x1	

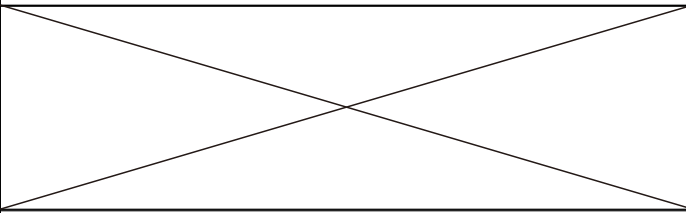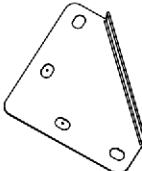 1756mm F1—x2	 1760mm M3—x1	
 2083mm F2—x2		
 1825mm F3—x2		
 1913.5mm F4—x2	 1760mm M6—x2	
 2013.5mm F5—x2	 1765mm N—x2	
 H1—x10	 1765mm N1—x1	
 1708mm G1—x2	 1765mm N2—x1	
 1708mm G2—x2	 591mm N3—x2	
	 596mm N4—x2	
	 1708mm G4—x1	 HY—x4
 1708mm G5—x1	 Q—x1	 Q1—x1
	 $\phi 3.2$ Q3—x2	 $\phi 5$ Q4—x1
	 550mm W—x2	 430mm W1—x1
 1760mm M1—x2	 Q7—x2	 Q8—x1
	 Q9—x1	
 1760mm M2—x1	 Q10—x20	 Q11—x4

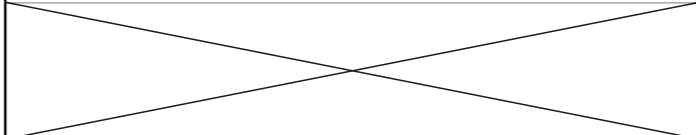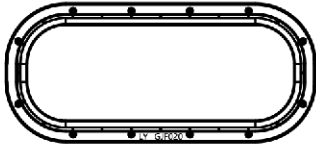 642.5mm		J1—x2	 M5x81# — x32	
 611.5mm		J2—x2	 M6x122# — x10	
 1572mm		J3—x2	 M5x383# — x40	
 579mm		J4—x4	 M4x84# — x8	
 745mm		J5—x4	 4x95# — x312	
 890.9mm		J6—x4	 4x146# — x16	
			 4x147# — x108	
			 4x108# — x257	
 GJF012—x4			 3x89# — x32	
 GJF016—x2			 3x1910# — x48	
 GJF019—x4			 M5x2812# — x4	
 GJF020—x4			 M5x2513# — x7	
 GJF021—x2			 4x1214# — x96	
 GJF022—x4		 GJF023—x3	 4x2815# — x66	
 GJF026A—x1			 4x1016# — x124	
 GJF026B—x1			 4x1617# — x166	
 R—x4			 M6x1218# — x16	
			 Phillips Screwdriver	
			 S4 x1  S10 x1	
				

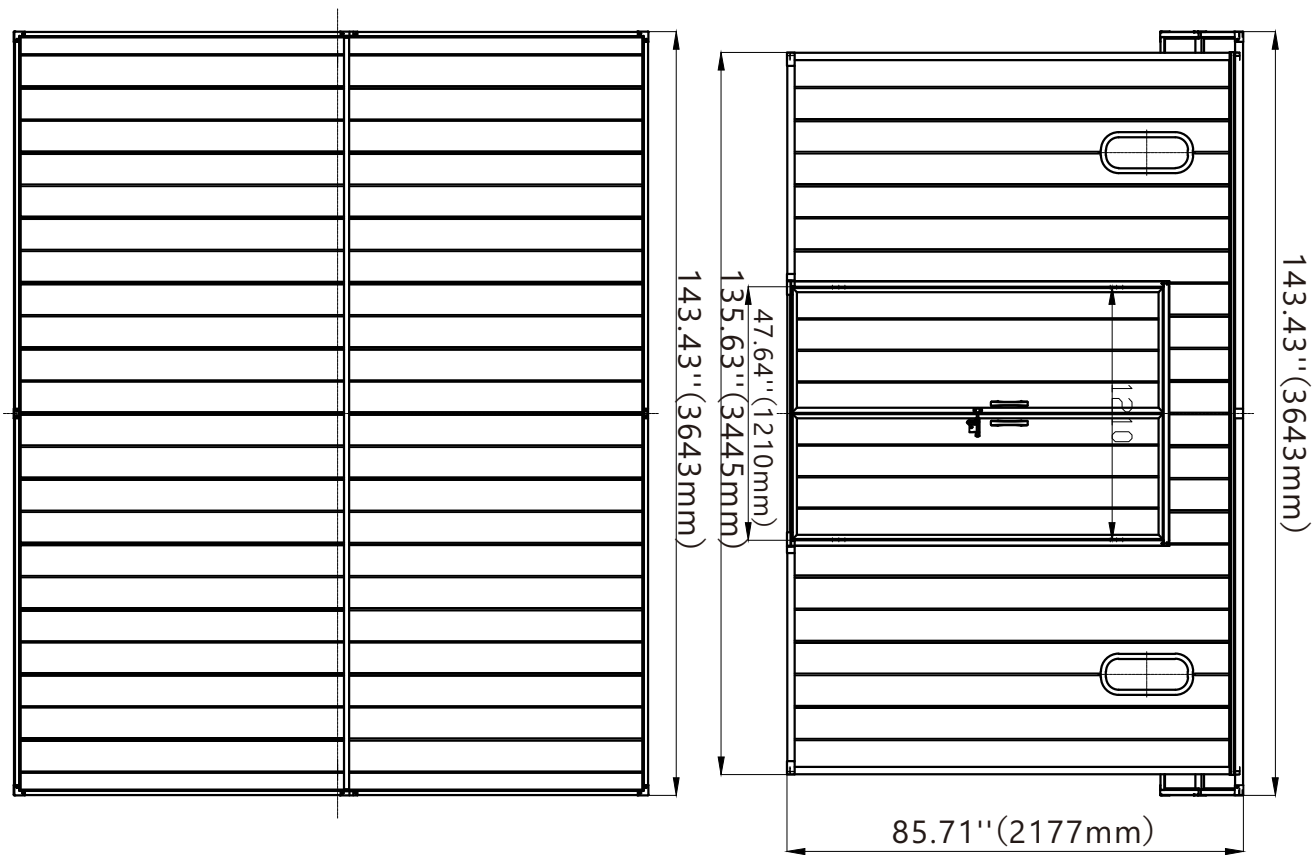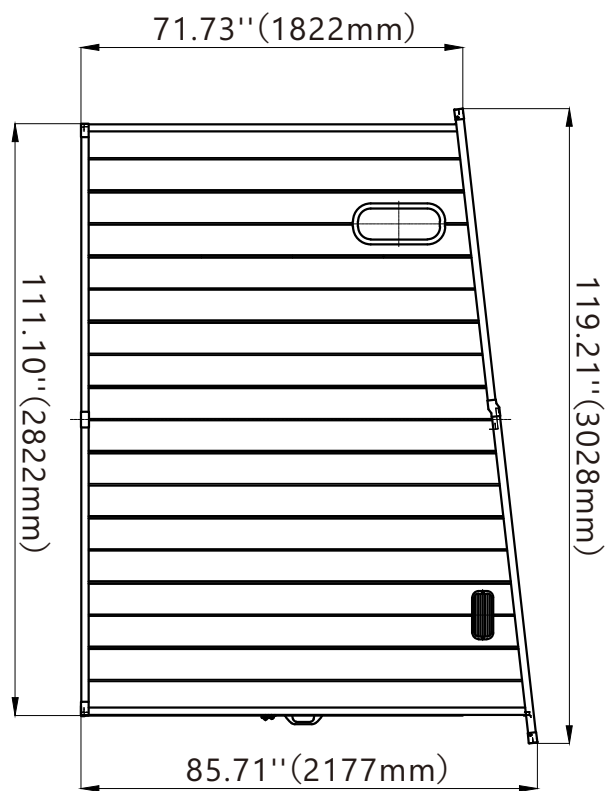

THE BASE FOR YOUR BUILDING

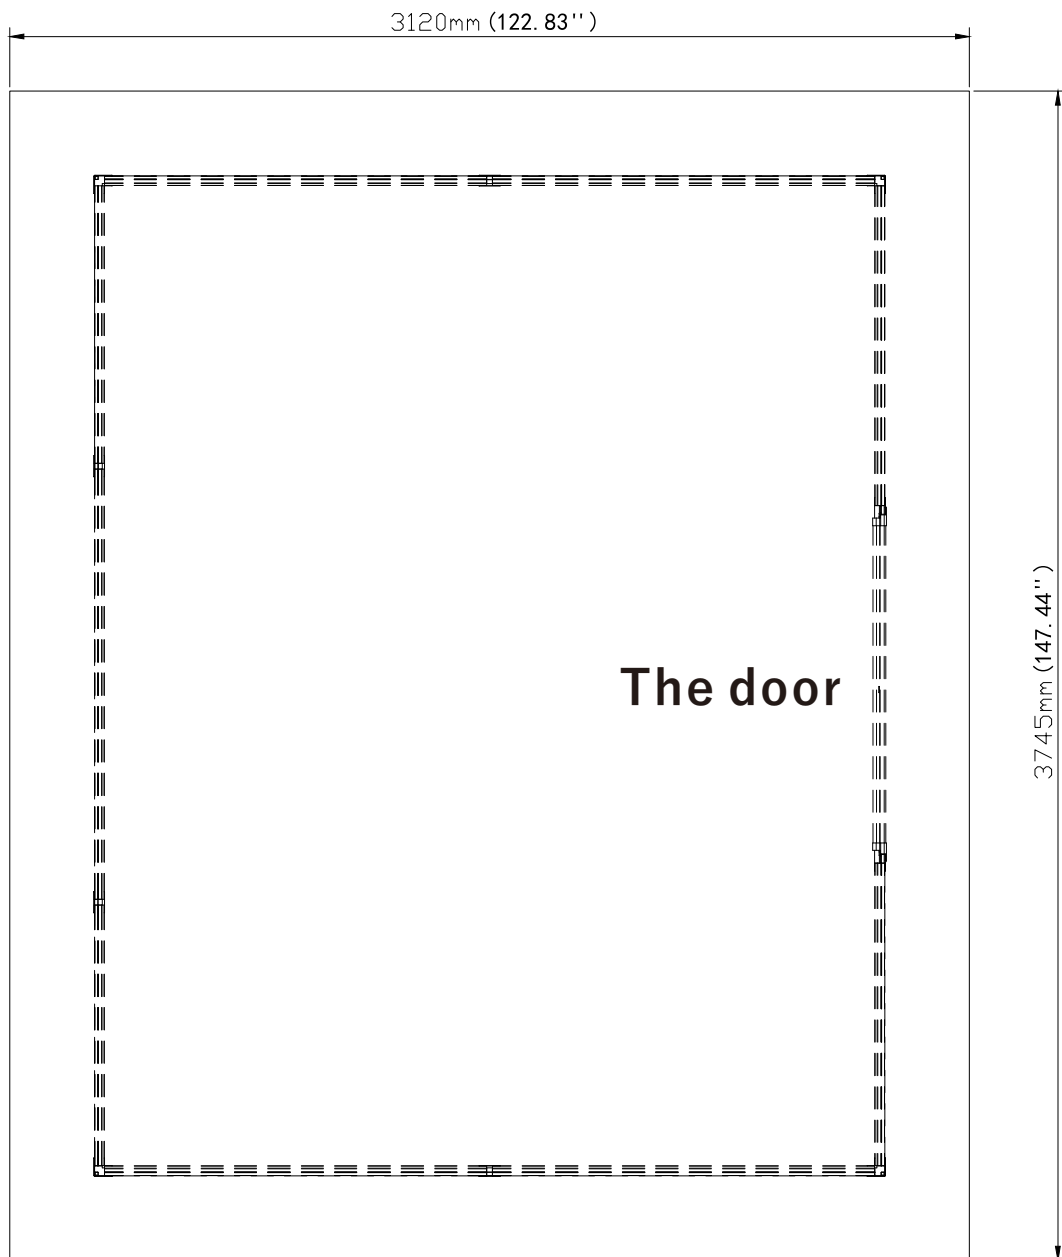

1.Leveling the ground.

2.Set up the base: It is recommended to build a wooden base or concrete base.

Foundation Requirements:

(1)The area of the foundation should not be less than the size range in the figure.

(2) The thickness of the concrete should not be less than 7cm.


(3) The base surface must be measured by the spirit level to be in a flat state.

(4) The base surface must be higher than the ground to prevent water accumulation.




Important Installation Notice


Due to the substantial size of this product, the installation process may require a significant amount of time and may not be completed in a single session. If installation cannot be finished in one go, you **MUST** complete all steps up to and including **Page 30** during the first session. This means the wall panels must be fully installed and securely fastened with the center beam and support tubes.

⚠ WARNING: If you are unable to complete the installation through Page 30 during the first session, you must provide **sturdy and solid support** for the partially installed wall panels before leaving the site. This is mandatory to prevent the structure from collapsing and to avoid damage to the components or potential injury. Proceed with the remaining assembly only after the temporary supports are firmly in place.


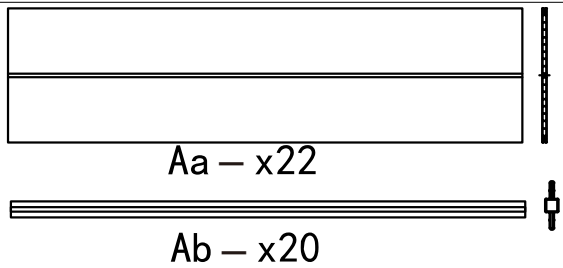


Install the Floor

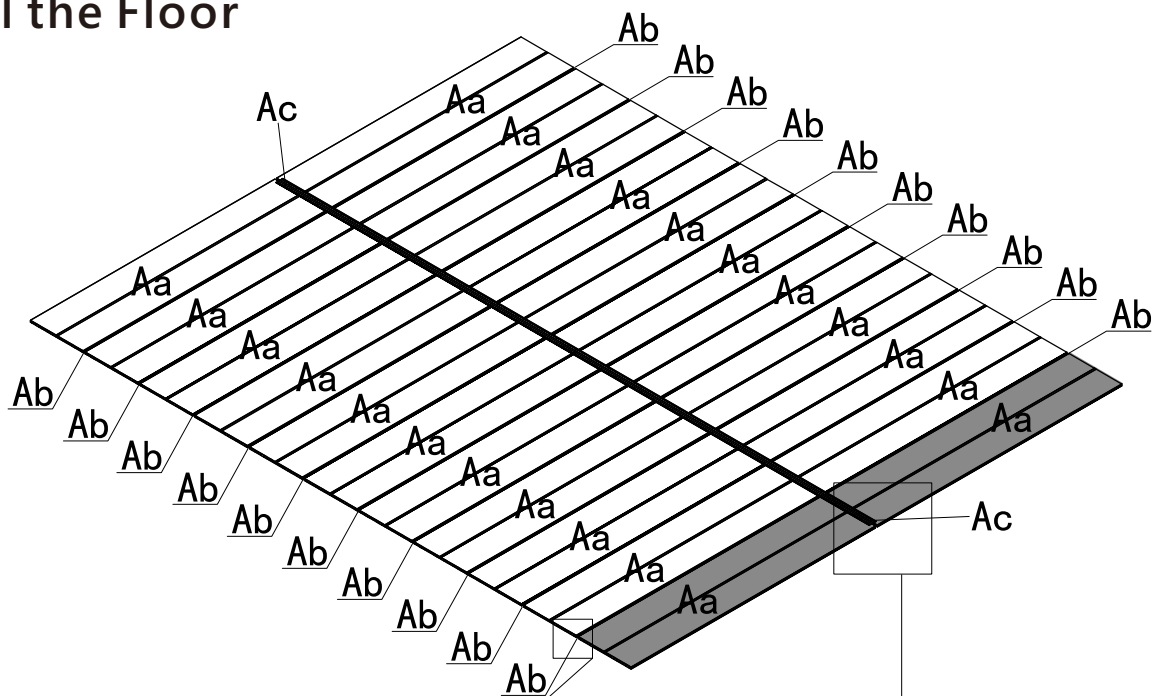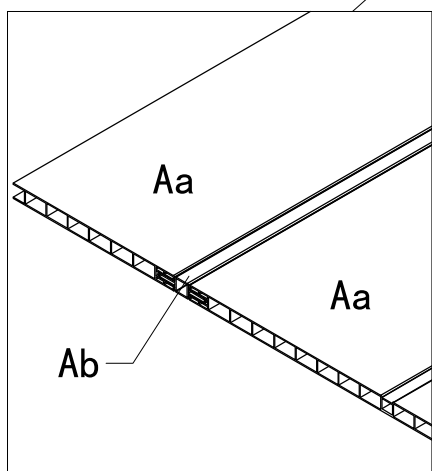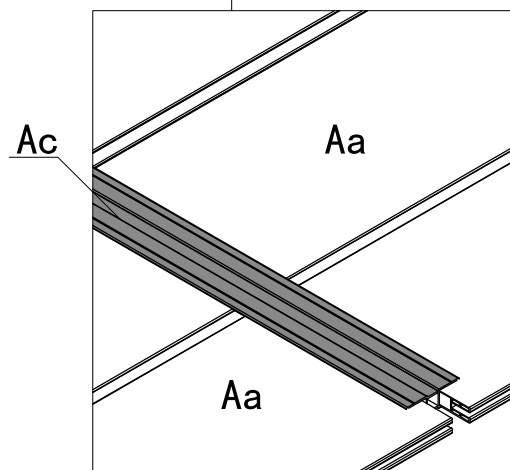




8# – x44

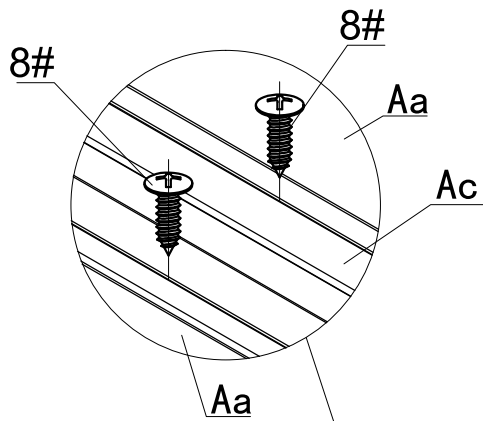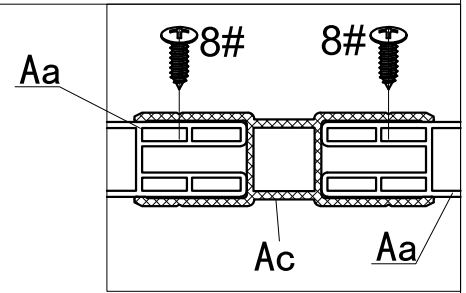


SECTION VIEW


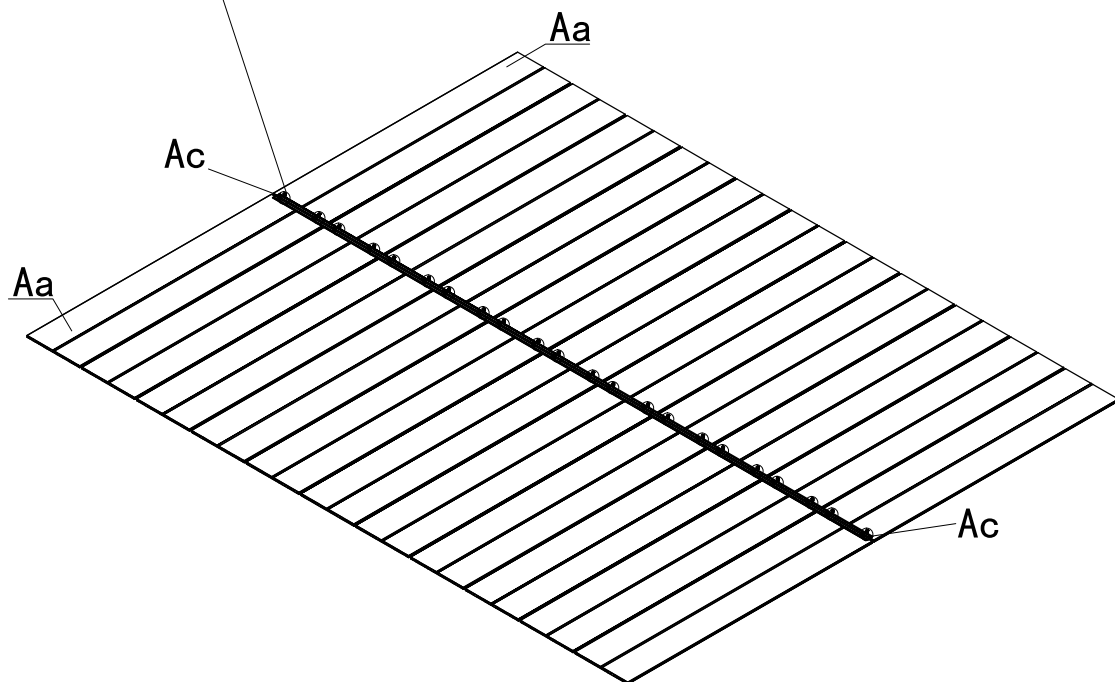


Before fastening the screws, make sure that the spliced floor is rectangular and its edges are aligned.

Use Screw #8 to secure base frame #Ac with each floor as shown (The screws can be installed on the ridges of the #Ac as shown).



5# – x80

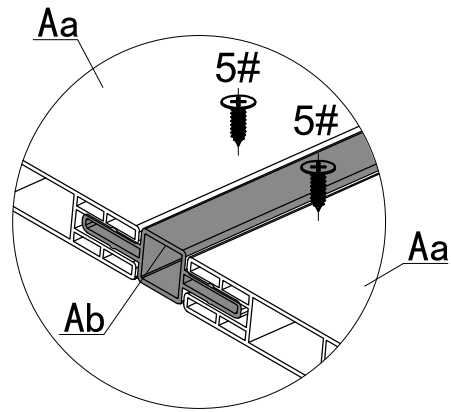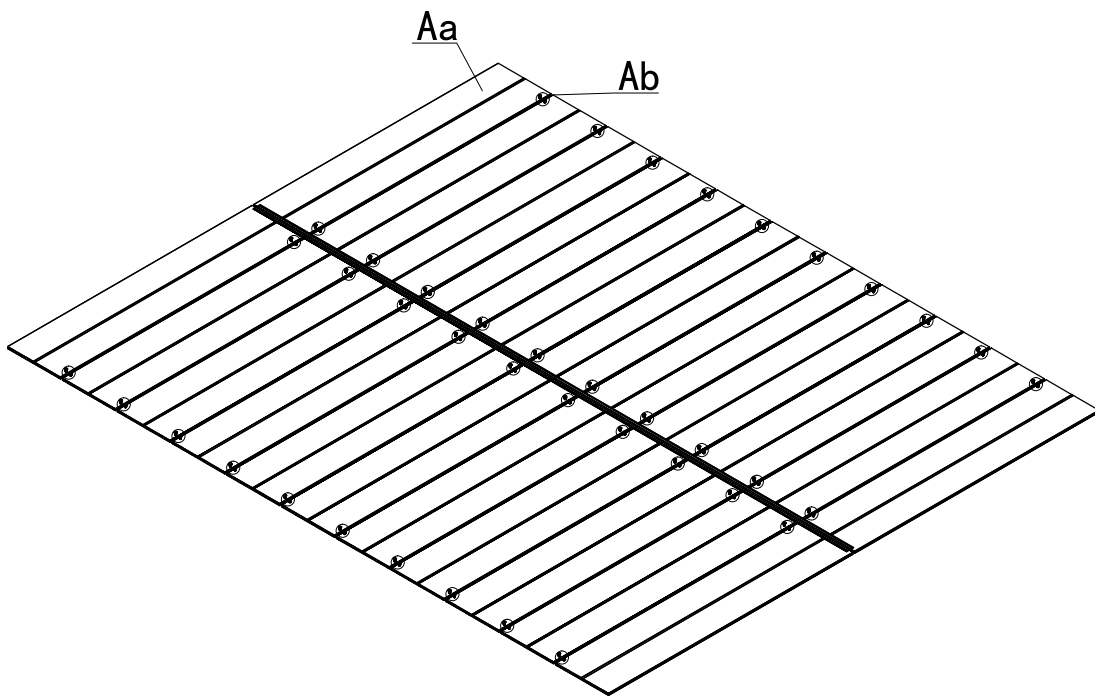

Use Screw #5 to secure each floor panel with connecting rod #Ab as shown (It is recommended to pre-mark straight lines on the floor to ensure that the screws are installed neatly and attractively).


GJF022-x4

GJF026A-x1





GJF023-x3

GJF026B-x1


A-x1
A1-x2
A3-x2
A4-x4

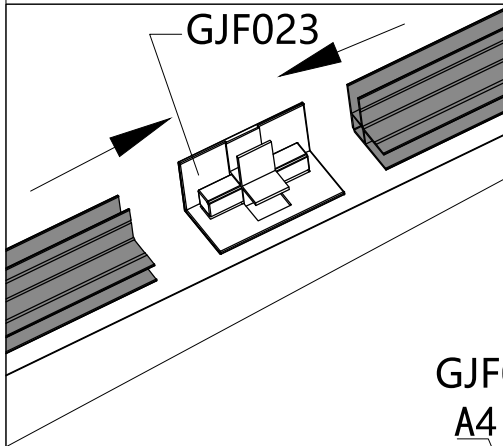


Insert the floor to the groove of the base frame kits.

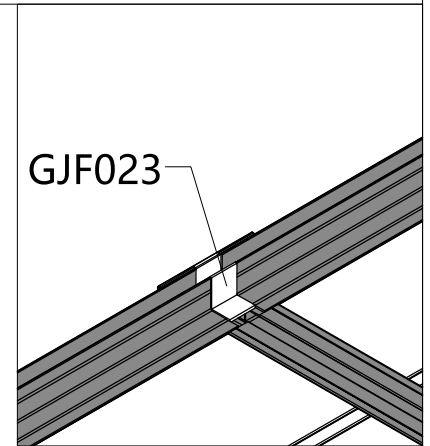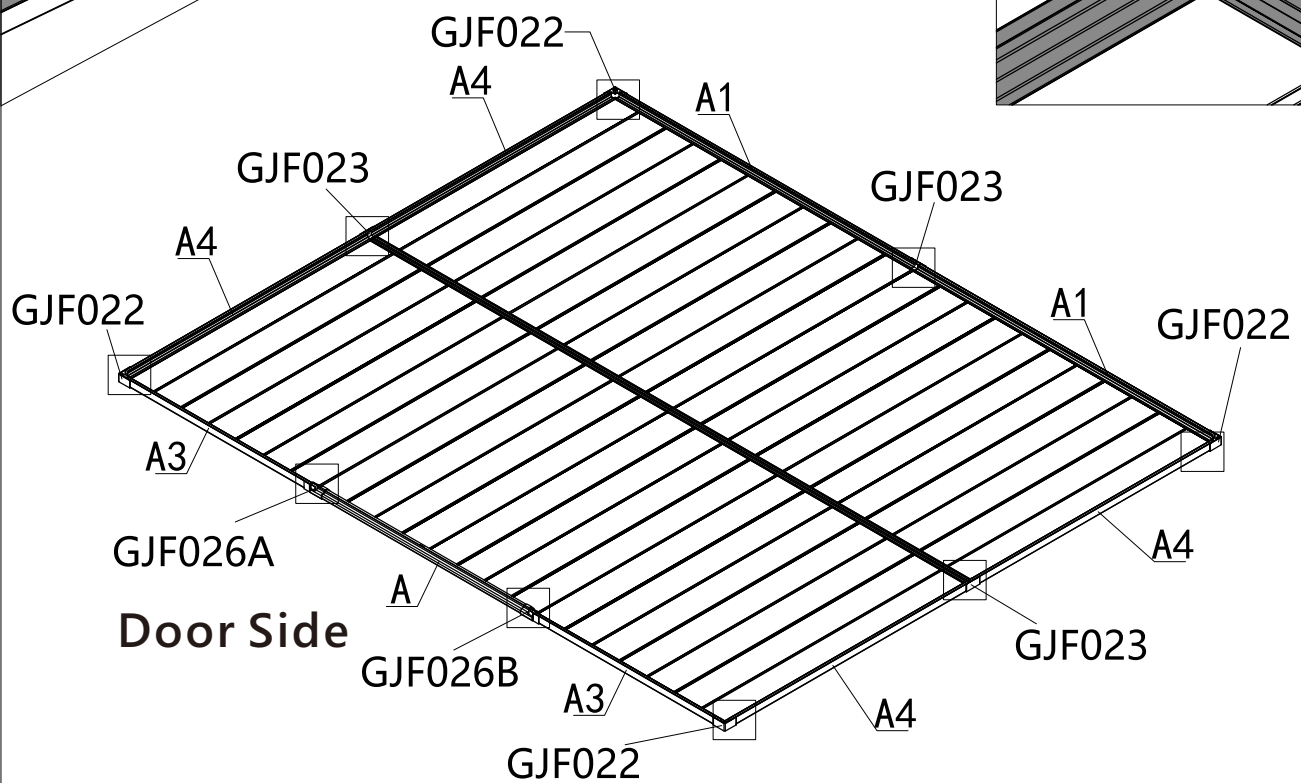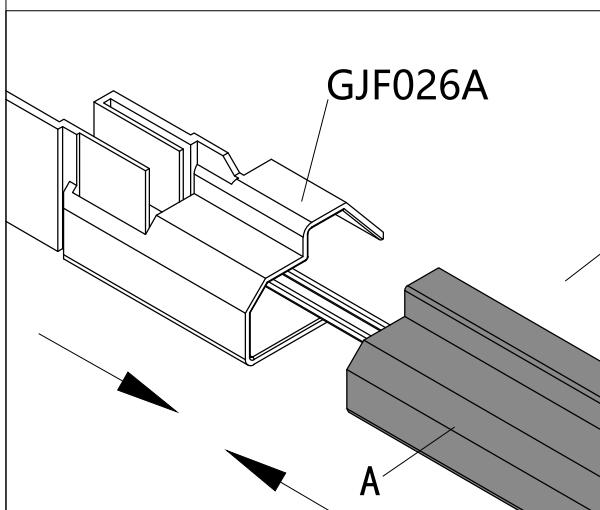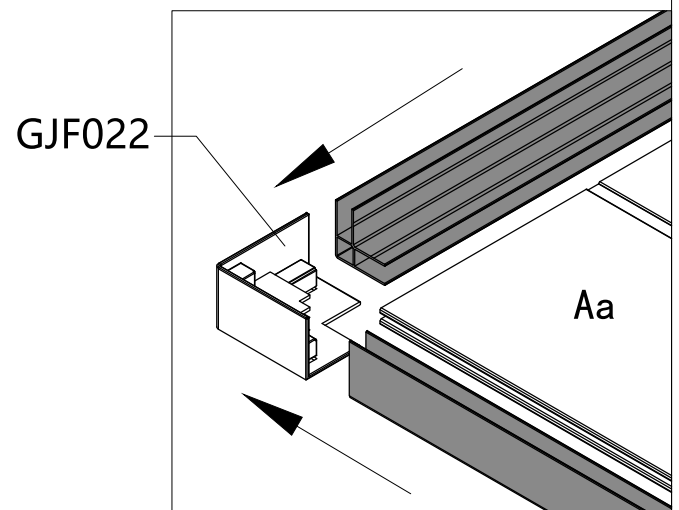


Before screwing down the flooring, make sure the floor and the base frame are rectangular and that the diagonal measurements are equal.

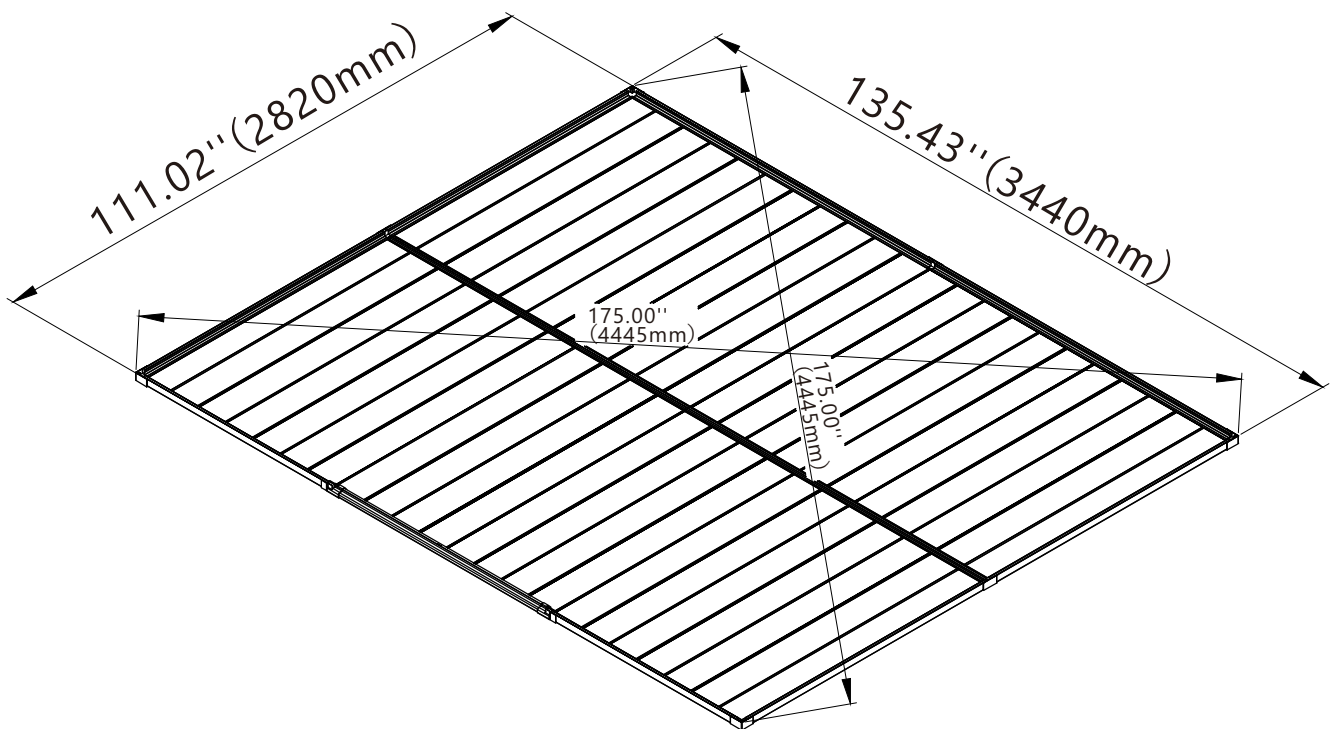


16# – x20

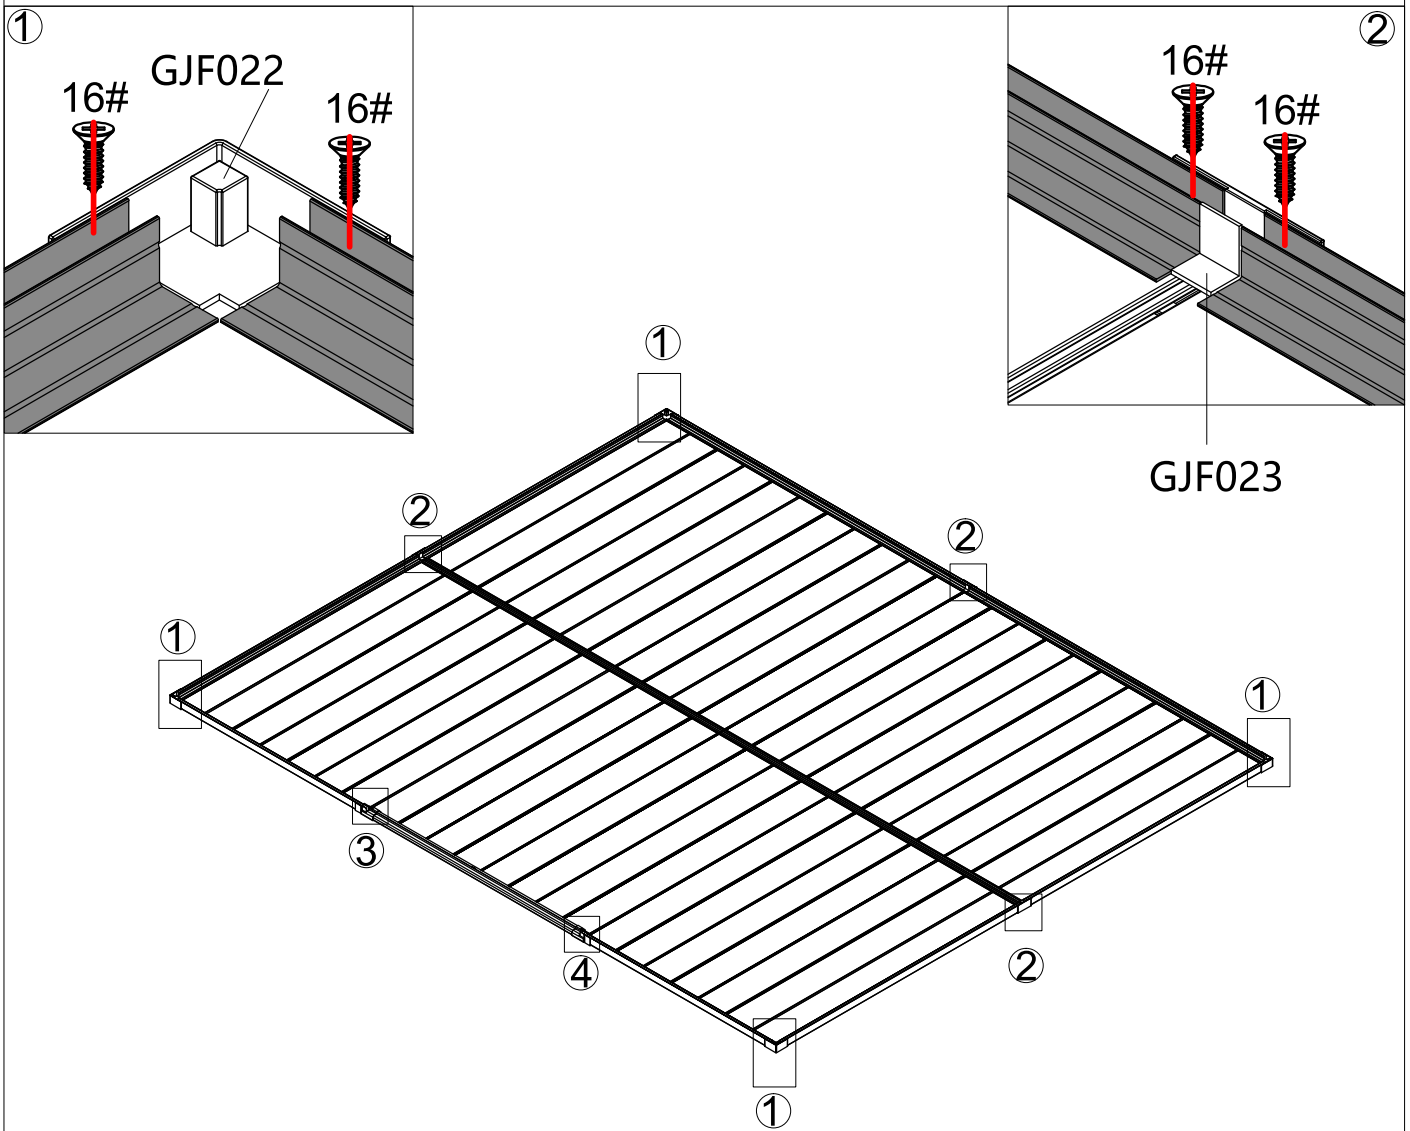

Use 20 Screws #16 to secure the base frame with base connector.
The screws need to be driven into the groove on the base to secure it with the base connector.

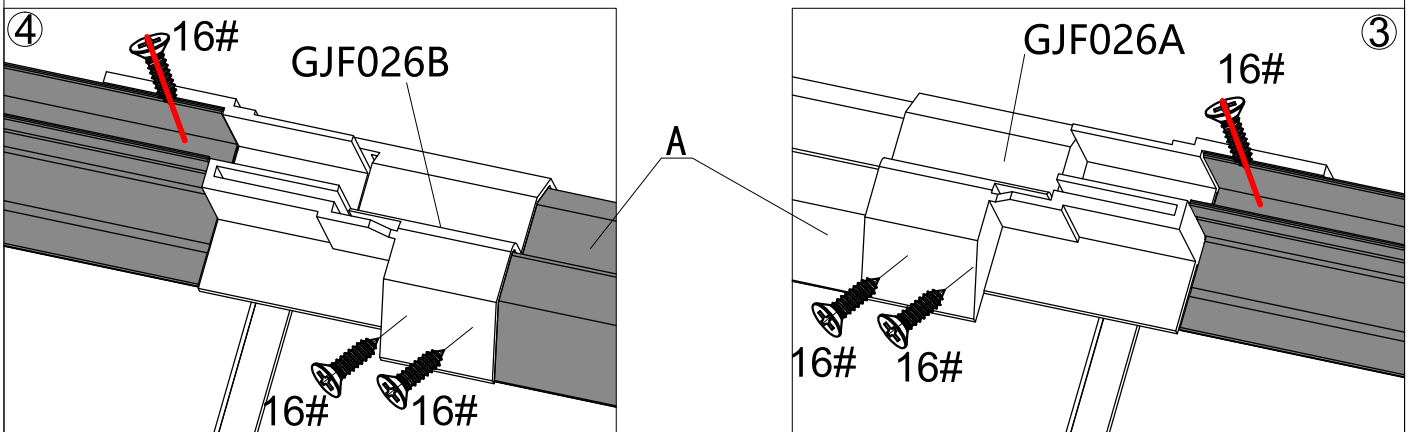





4x10


8# – x35

Use 8 screws #8 to secure the base frame # A3 to the connecting rod #Ab as shown.


Use 16 screws #8 to secure the base frame # A4 and connecting kit to the floor as shown.

Use 11 screws #8 to secure the base frame # A1 and connecting rod #Ab to the floor as shown.

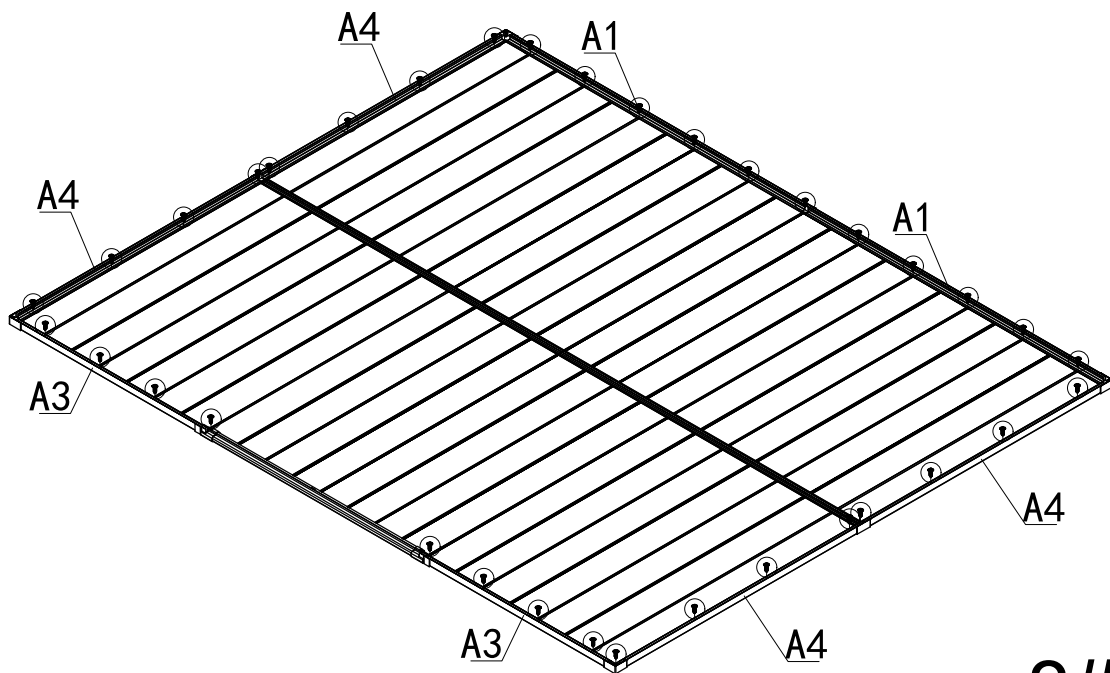
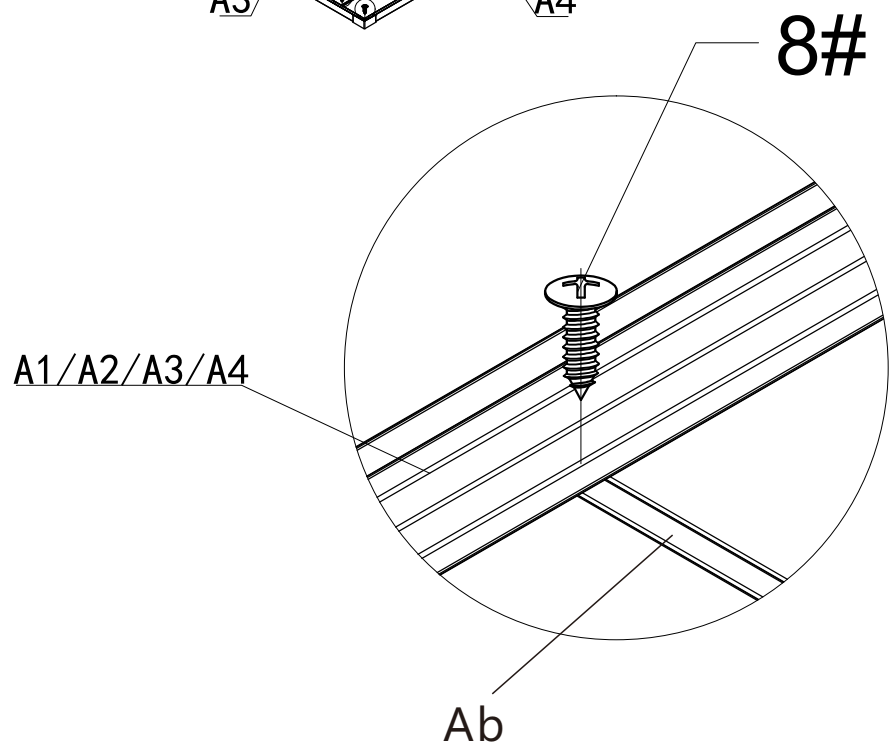


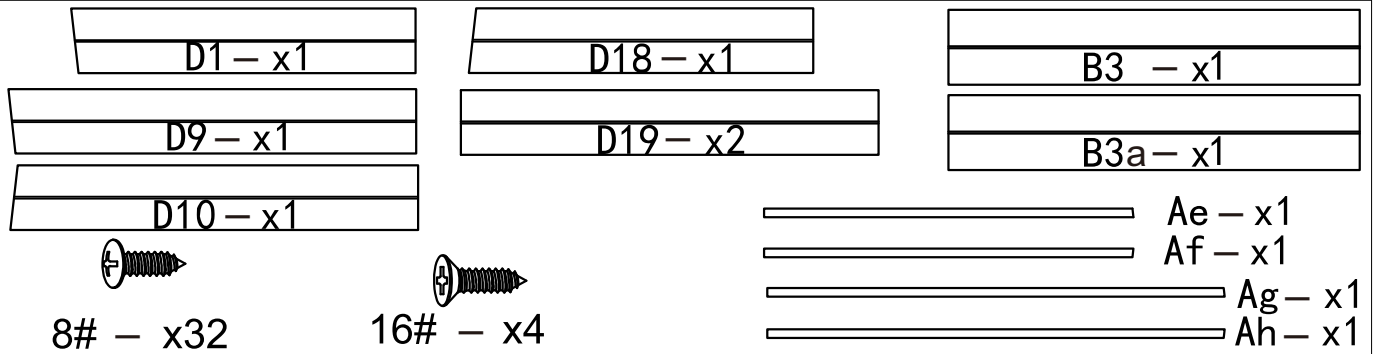



Assemble the corner support tubes #Ae, #Ag, #Ah, #Af first. Insert the wall panels to the groove of base frame and corner support tubes, Secure with 1 screw #16 at the corner.

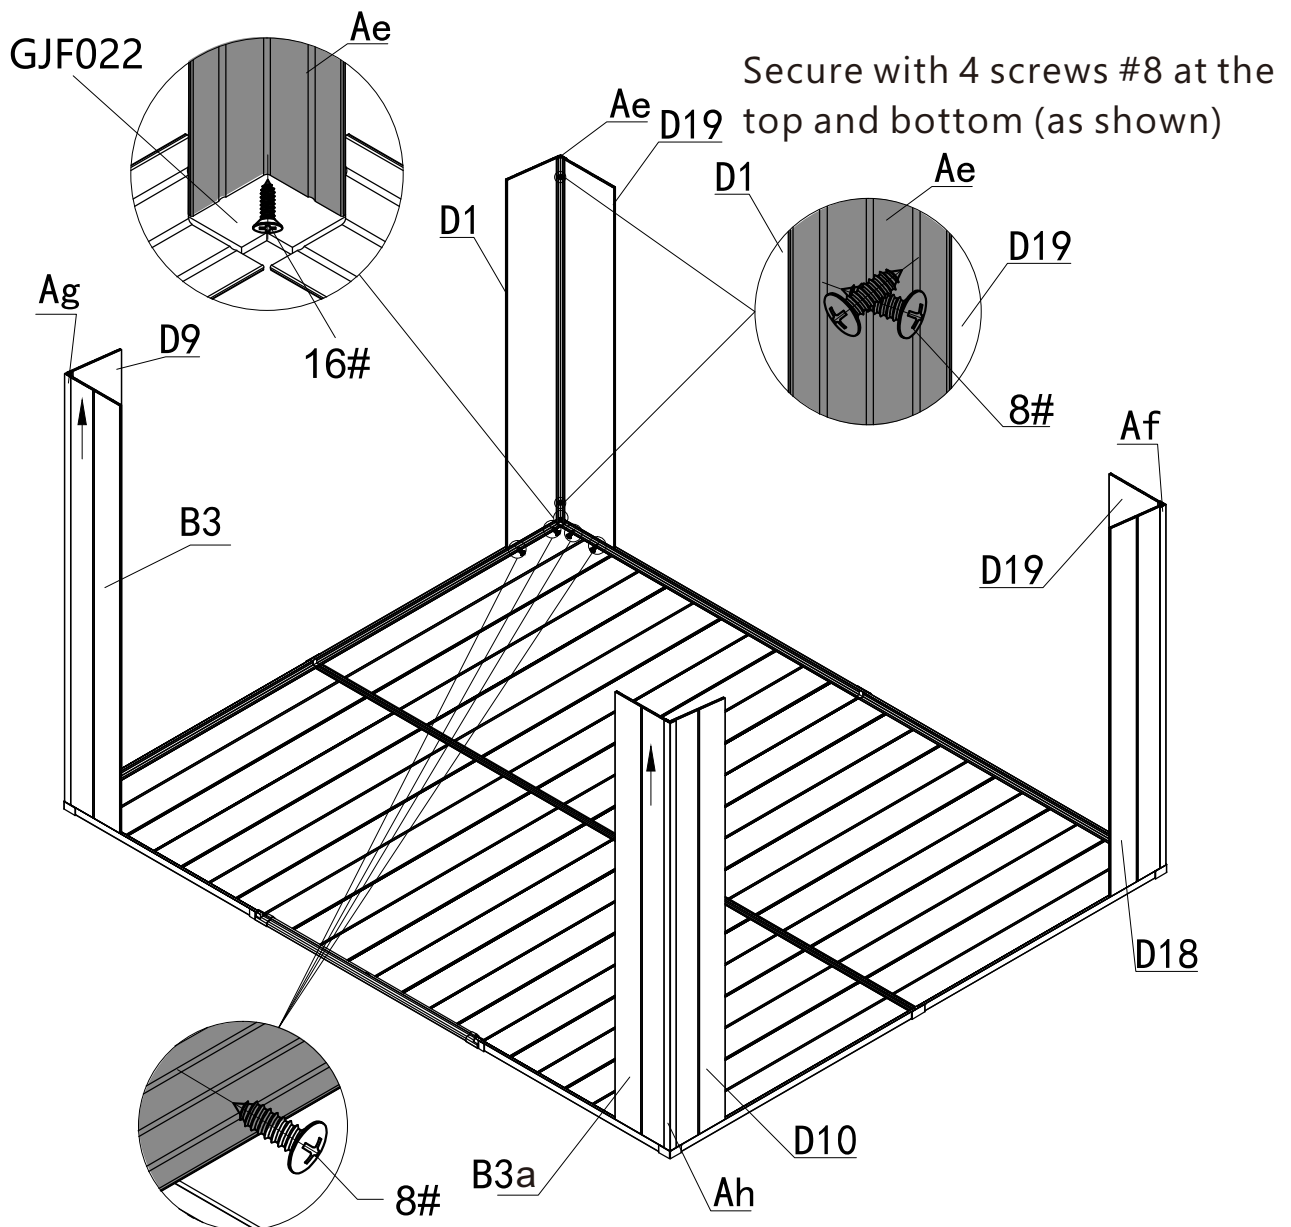

Secure with 4 screws #8 at the base frame.
 Repeat above procedures to assemble the other 3 corners.
 The wall panel #B3/#B3a has an arrow affixed to it.
 Please install it in the direction indicated by the arrow.

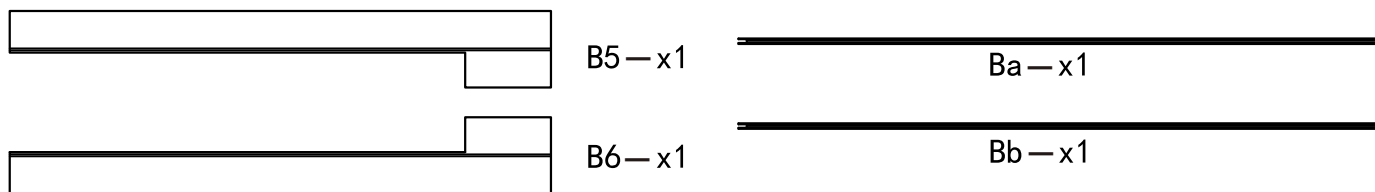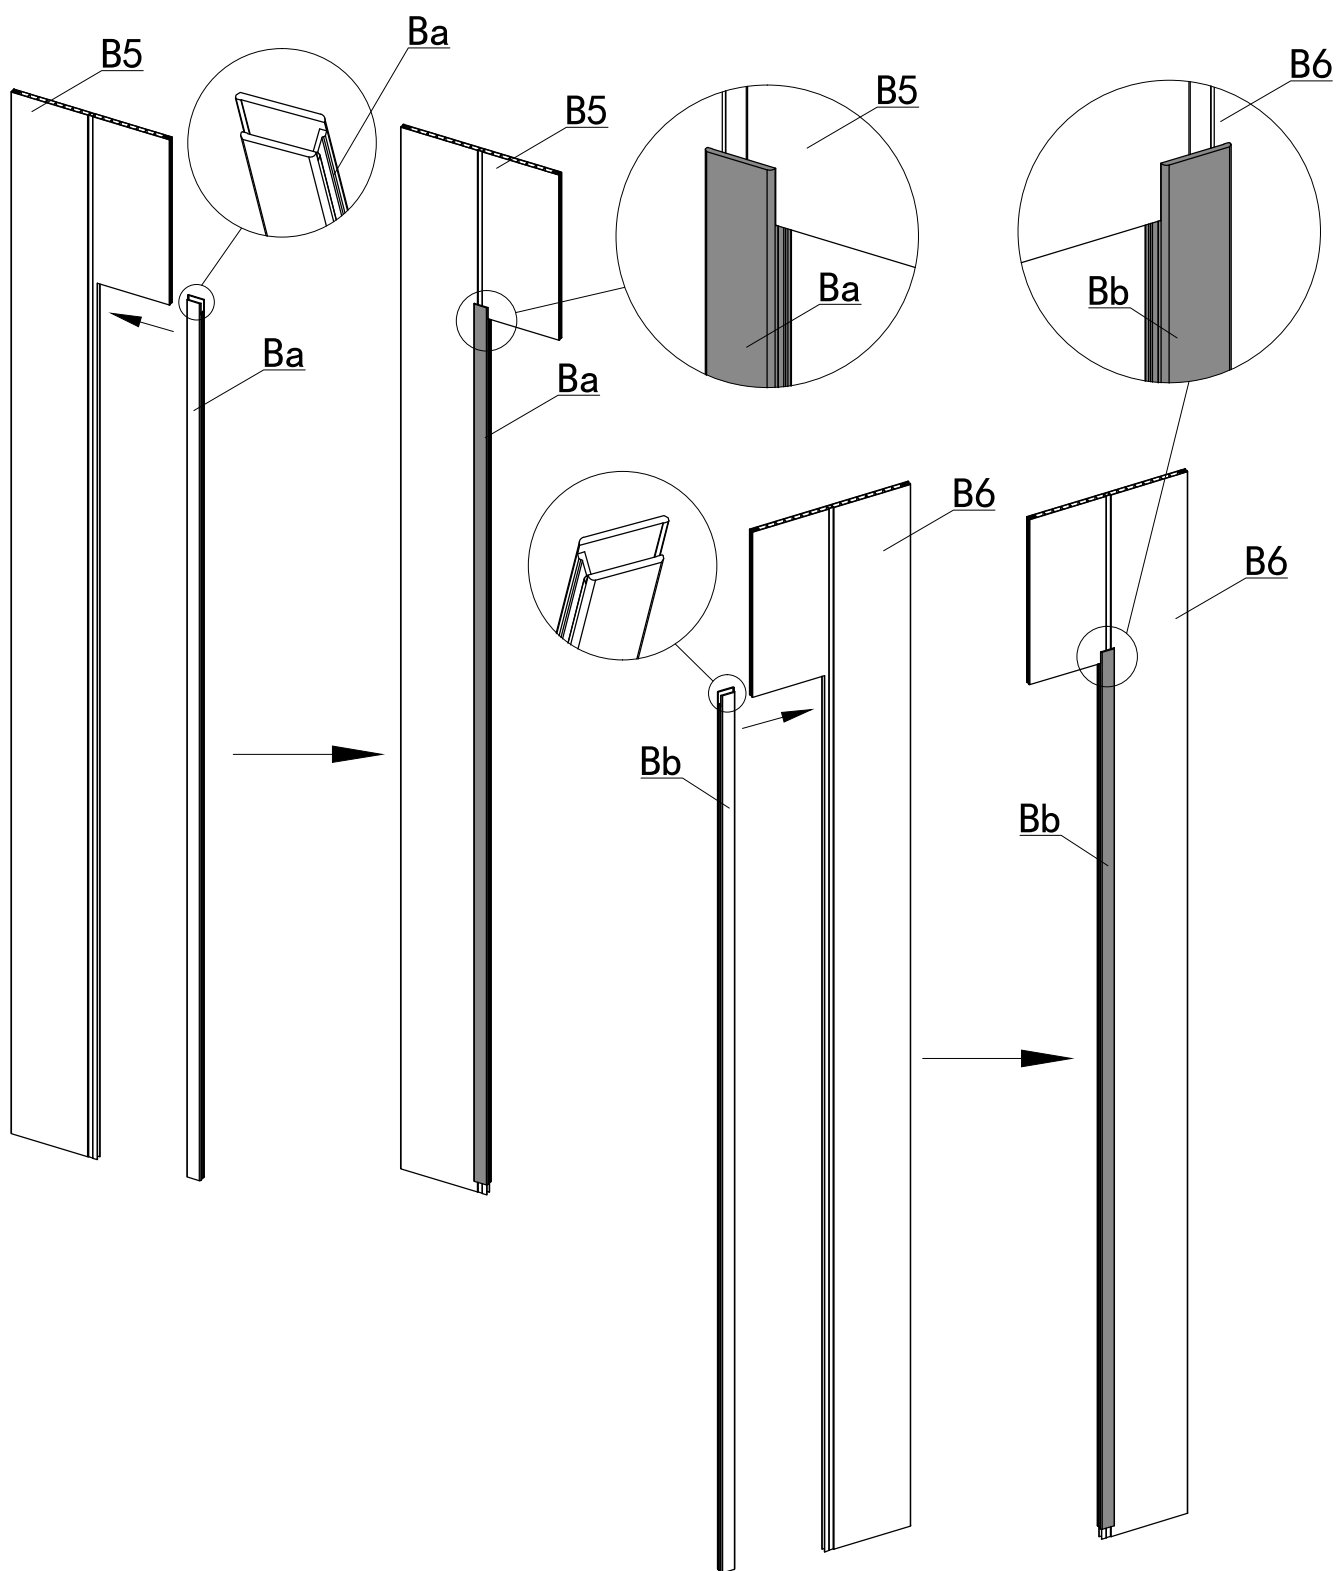


Fit the plastic door frame liner #Ba into the wall panel #B5 as shown.
Fit the plastic door frame liner #Bb into the wall panel #B6 as shown.

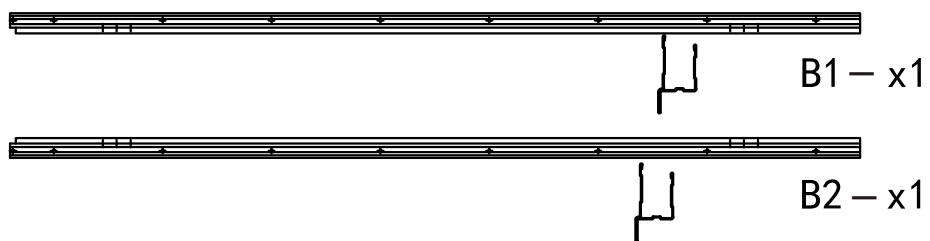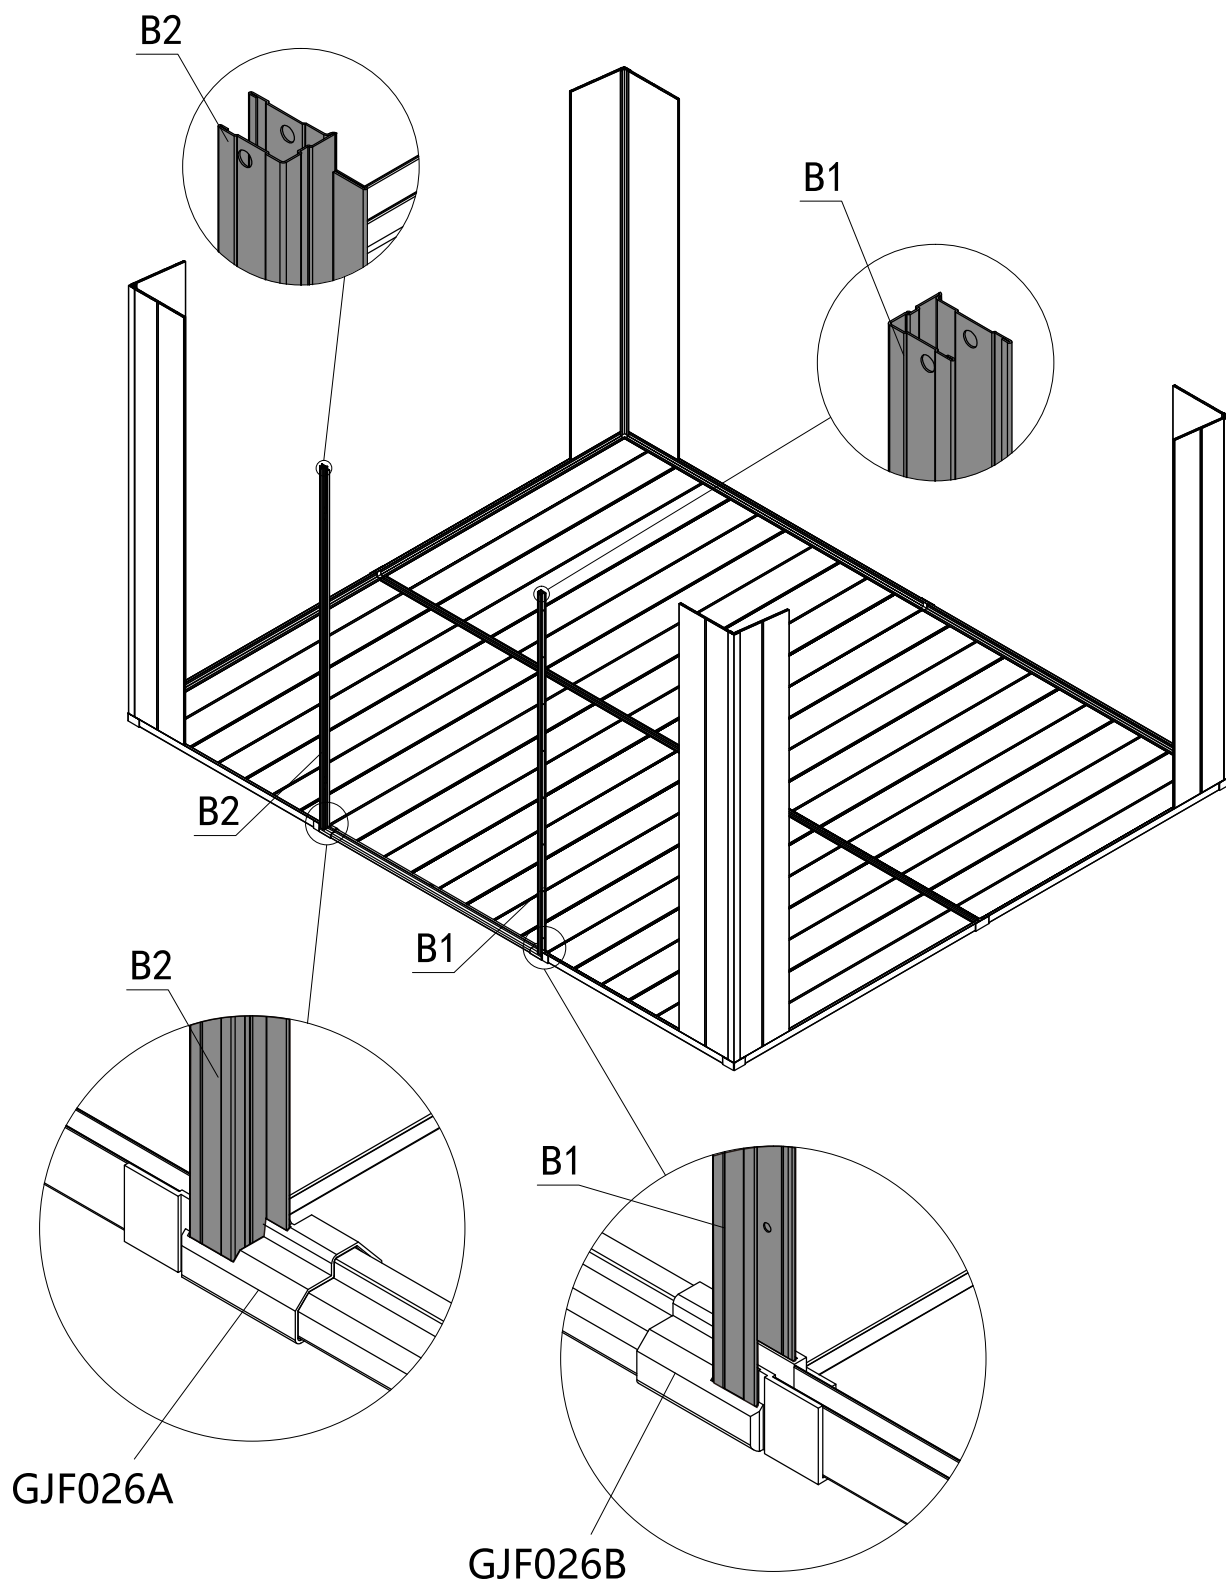


Insert metal door frame #B1 and #B2 into the groove #GJF026B and #GJF026A as shown.




Insert the wall panel #B5 and #B6 into the metal door frame #B2 and #B1 as shown.

Section View

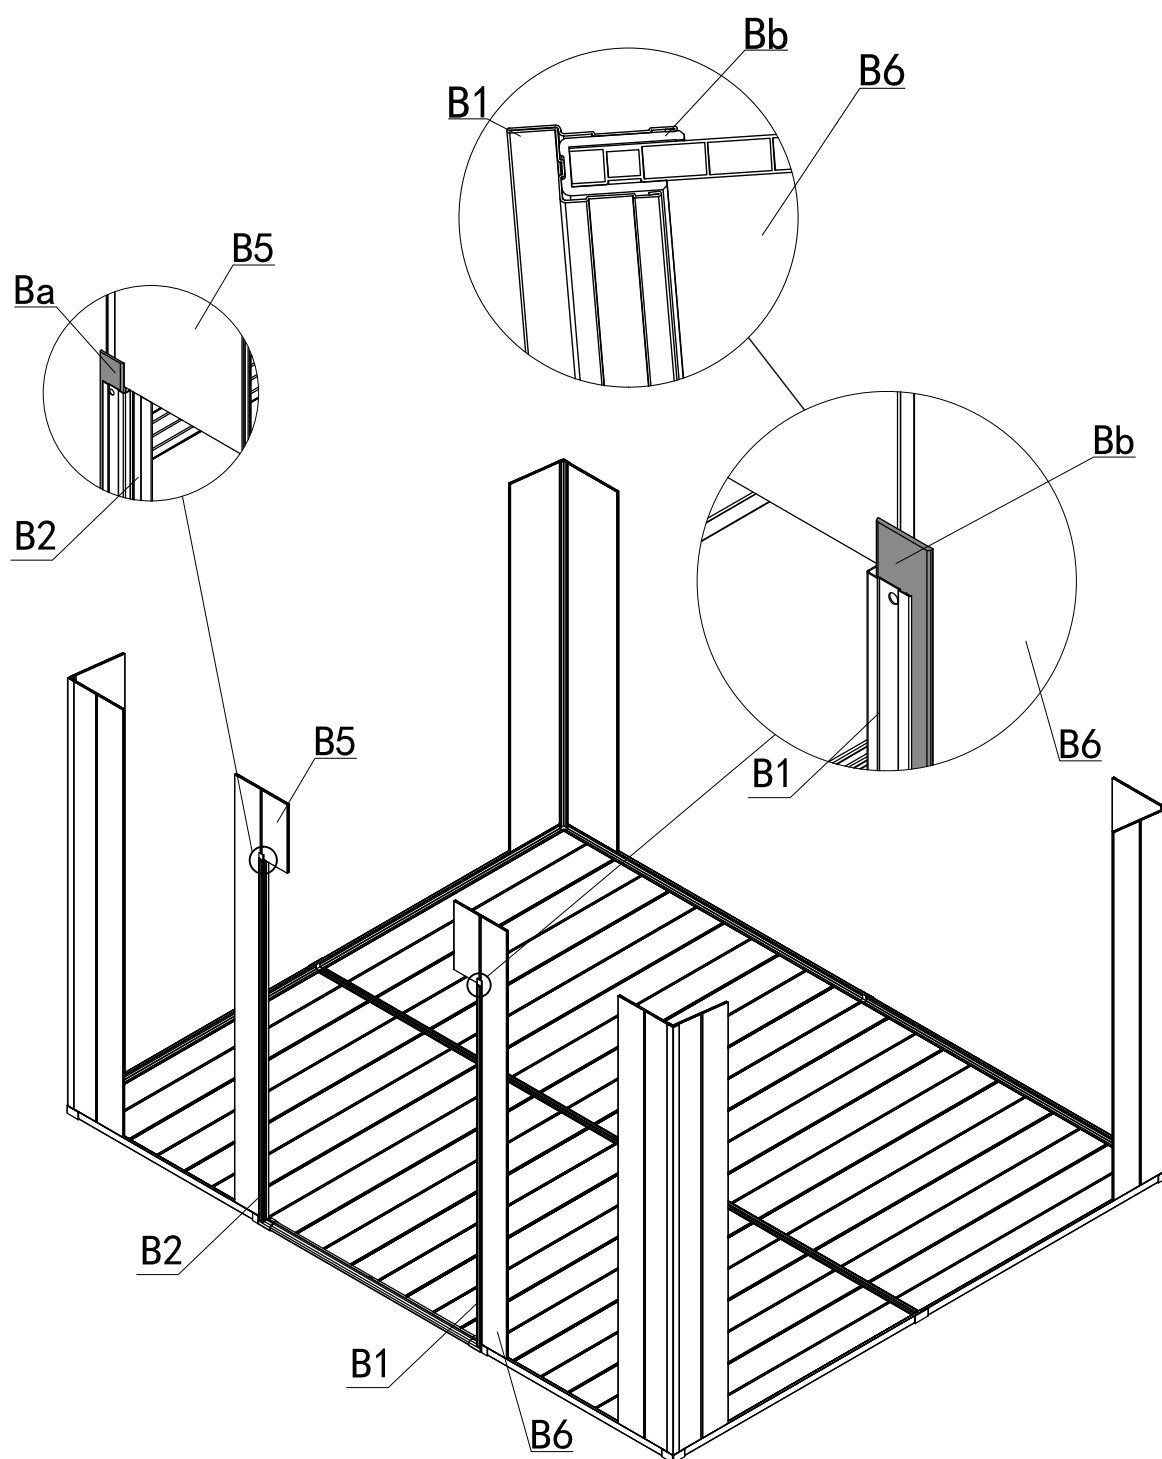






Fit the plastic door frame liner #C1 into the wall panel #B5 and B6 as shown.

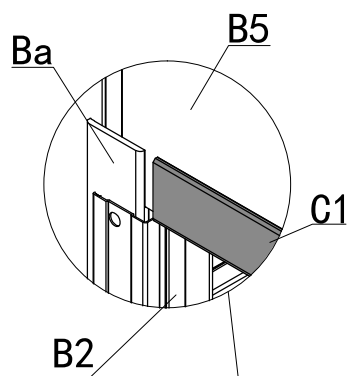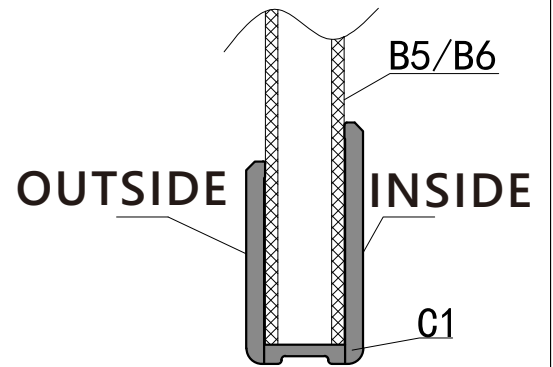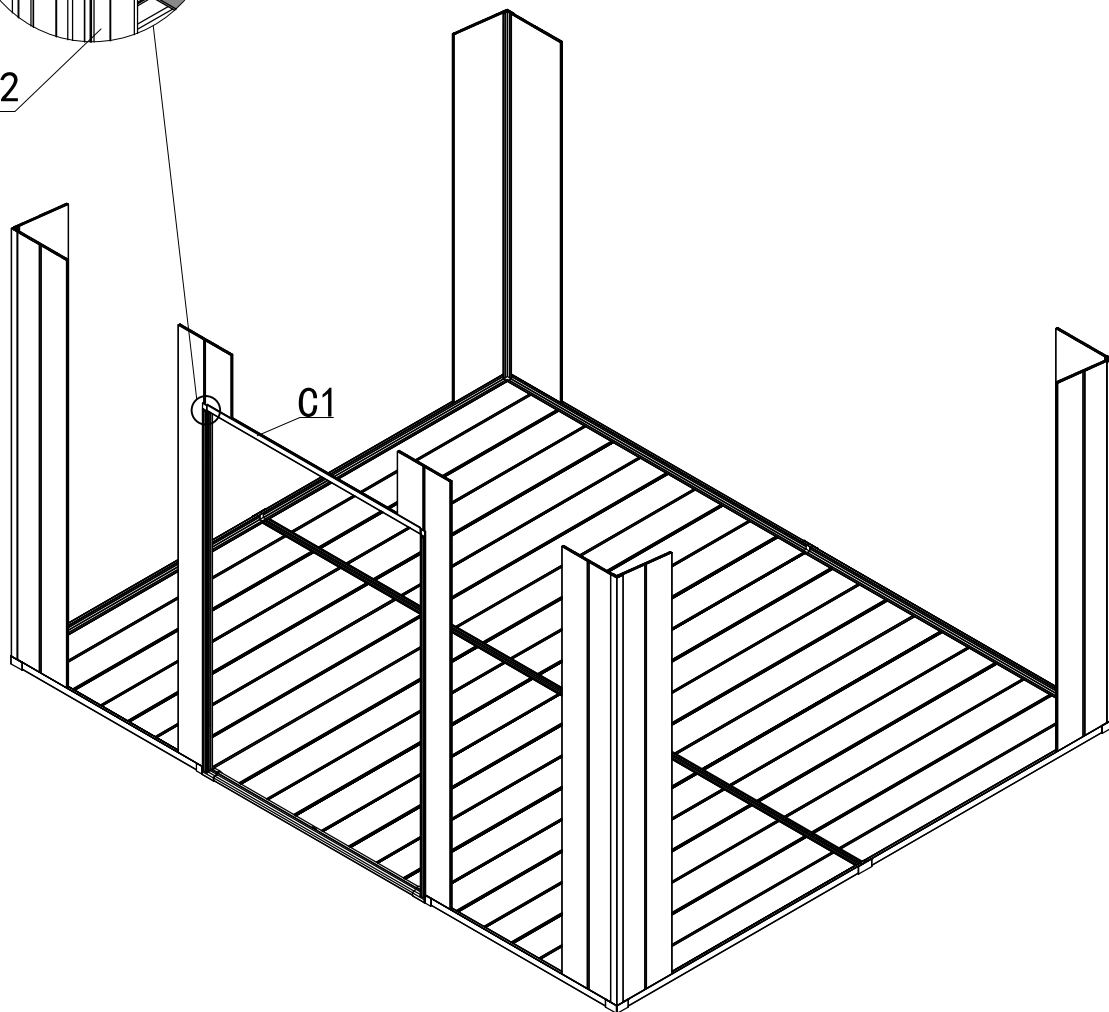




C – x1

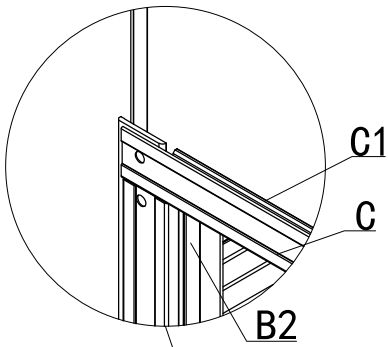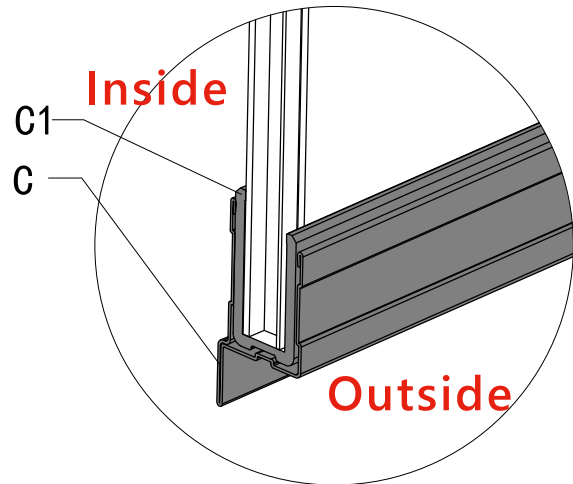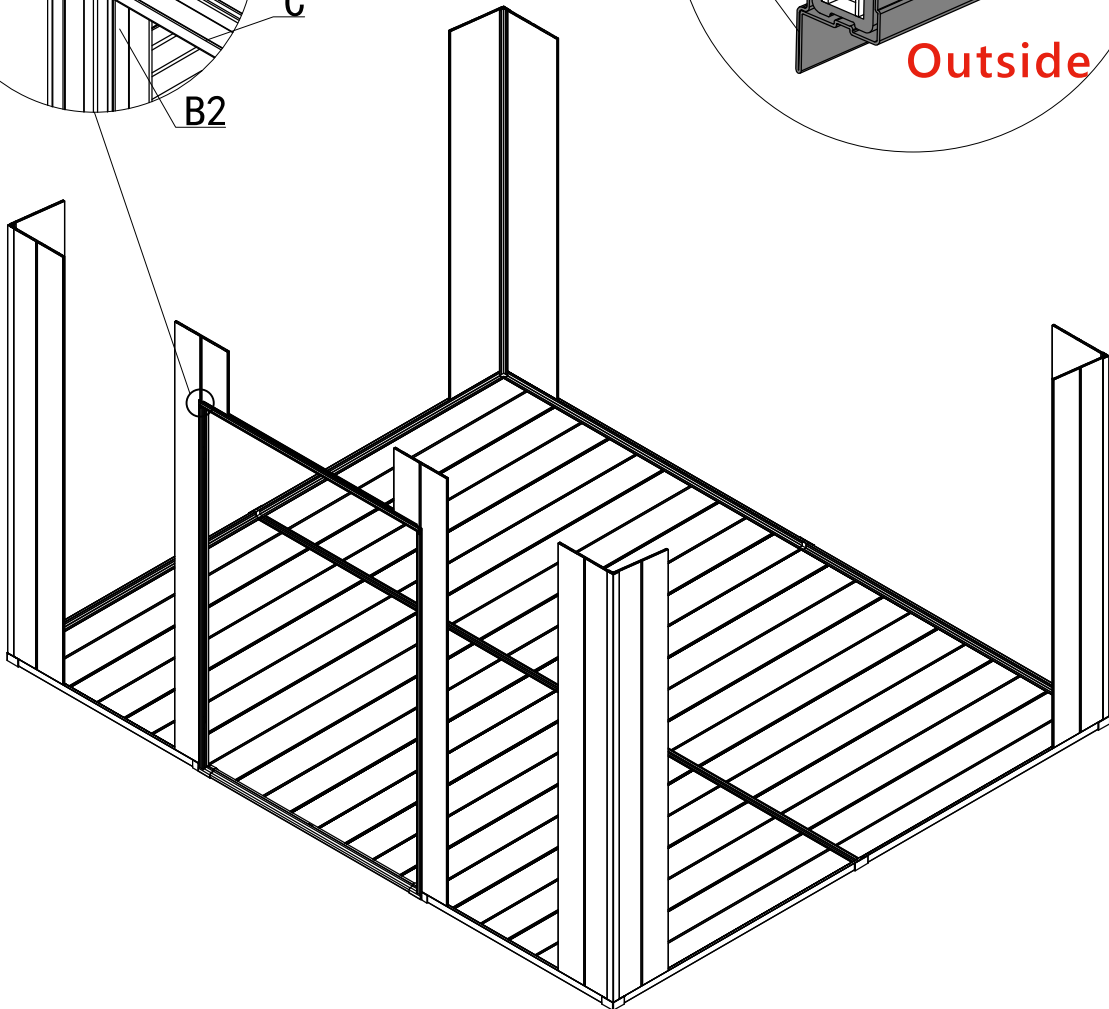

Fit the metal door frame #C over the plastic door frame liner #C1 as shown.

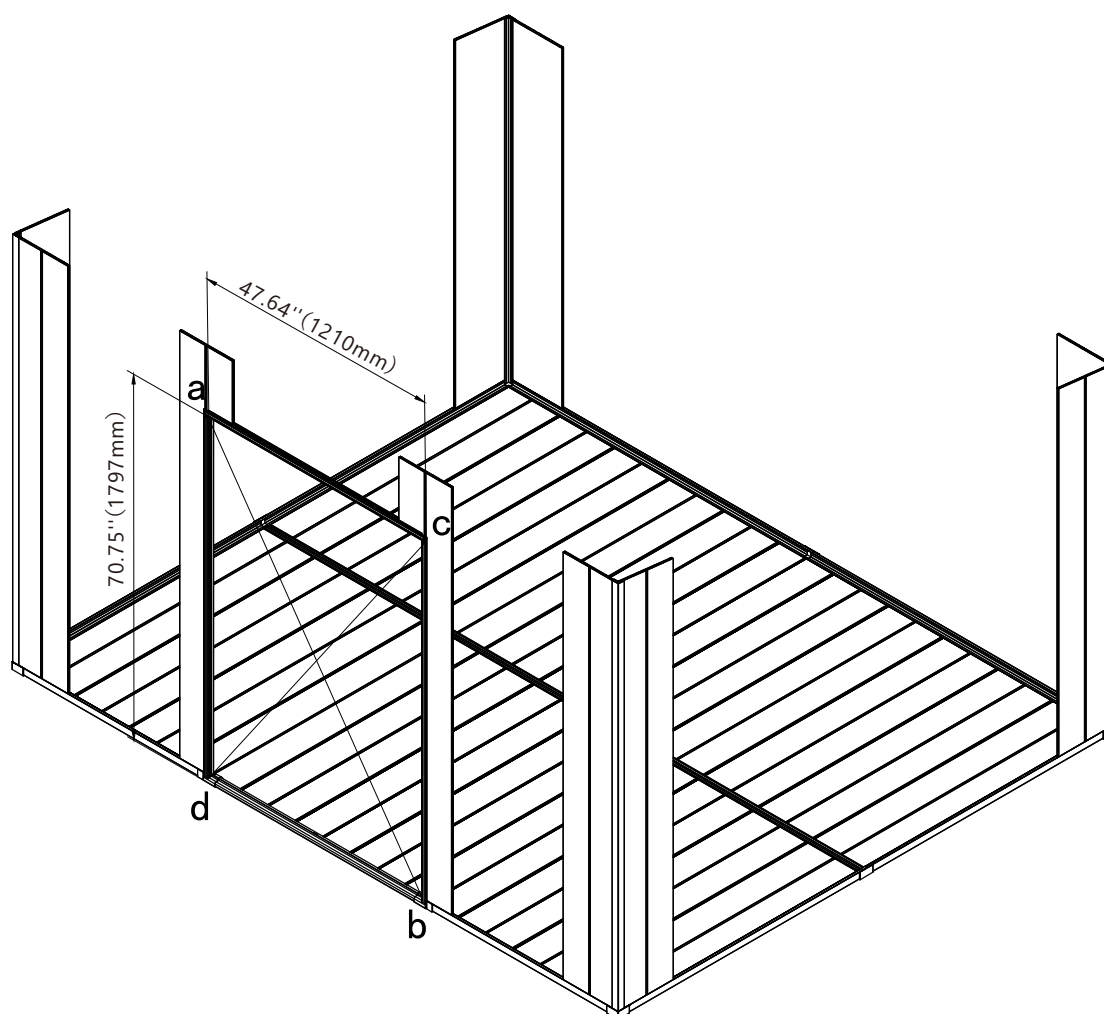

Before securing the screws in the next step, please measure whether the width and height of the door frame match the dimensions marked on the drawings, and then measure whether the diagonal ab of the door frame is equal to cd .




17# – x2






Q3 – x1 $\varnothing 3.2$

Use 3.2 mm drill bit #Q3 to drill holes on the connecting kits and door frame #B1/B2 first.


Note: Drill holes only on the inner edges of the metal door frames #B1/#B2, do not drill all the way through. Secure with 2 Screws #17.

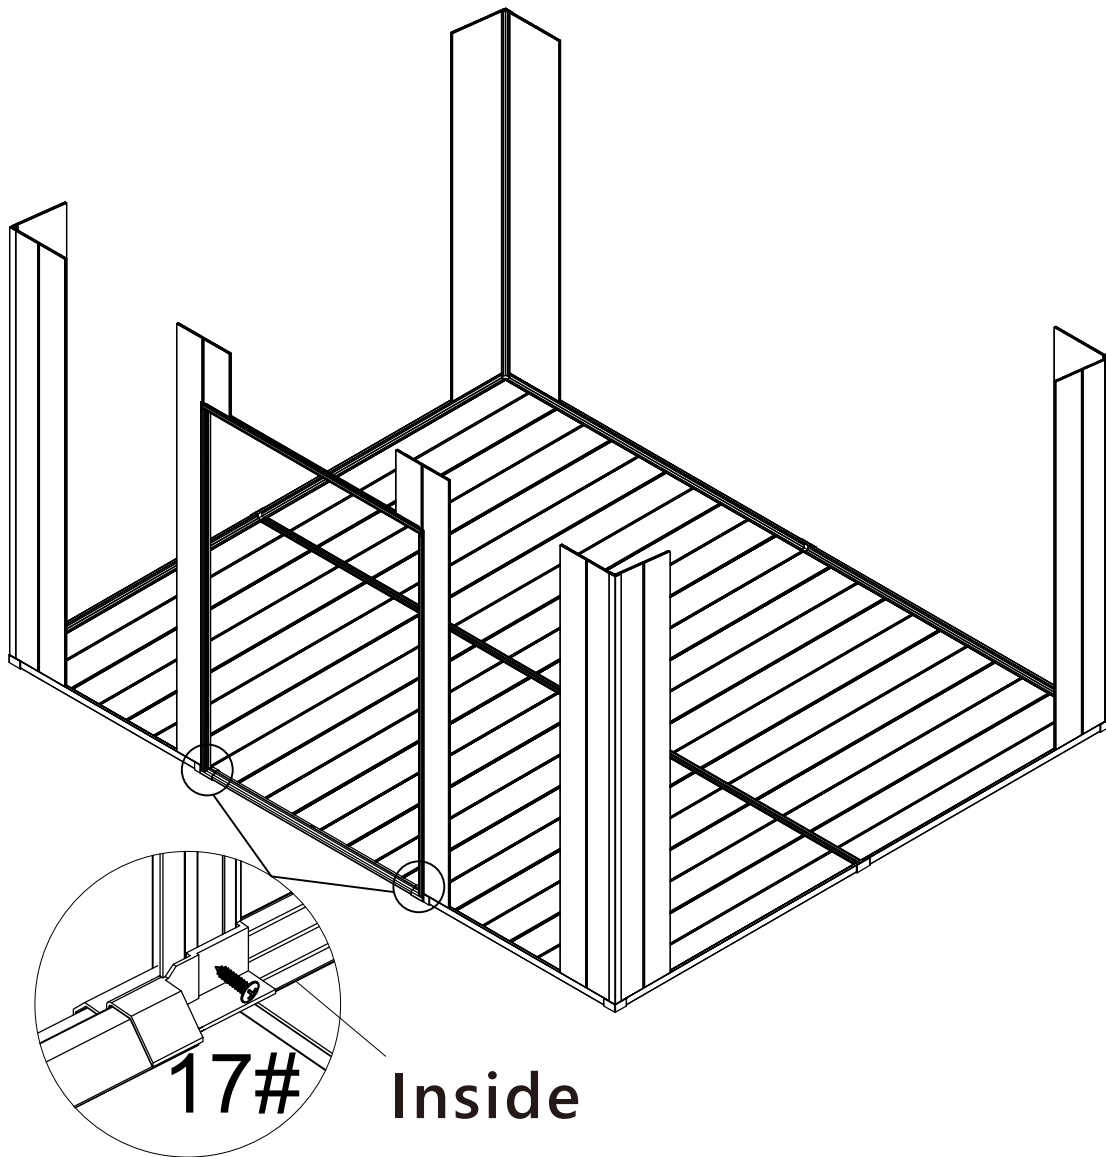

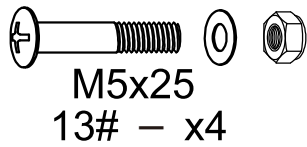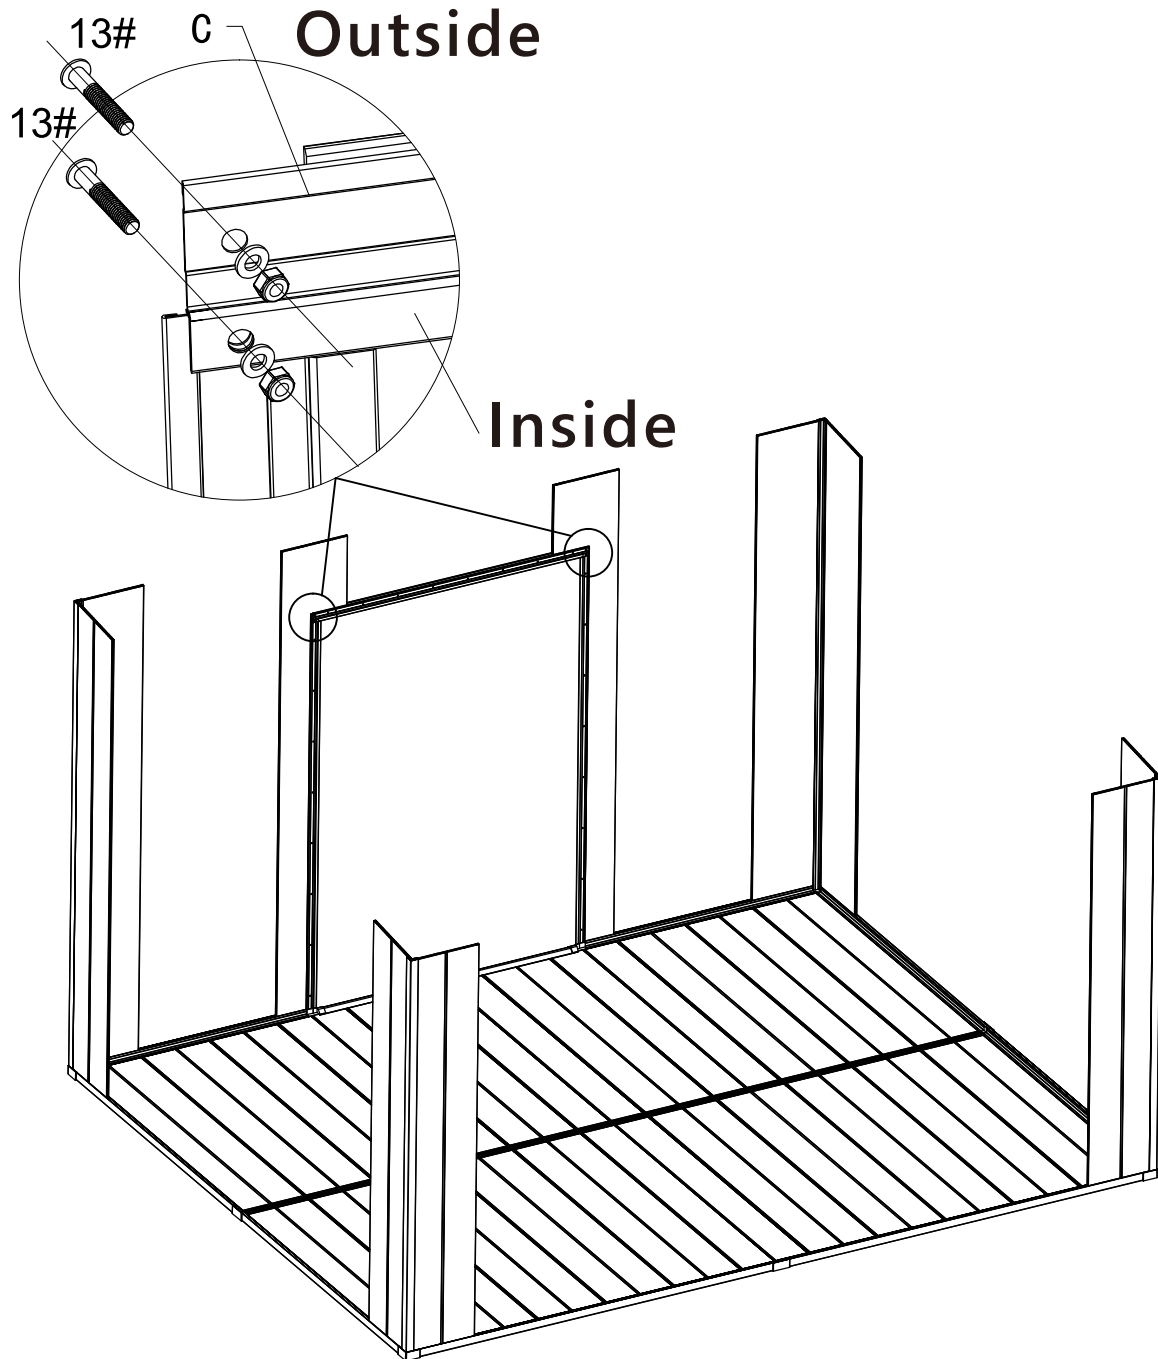


Use 5mm drill bit to drill 2 holes on the connection of door frame #C and #B1. Secure each hole with 2 bolts , washers and nuts #13.



Repeat above procedures to assemble another Side.


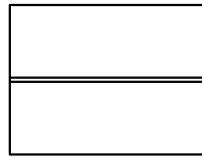


B7 – x3




B8 – x4

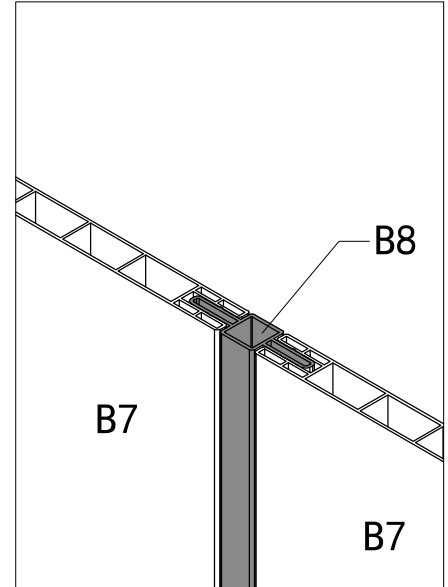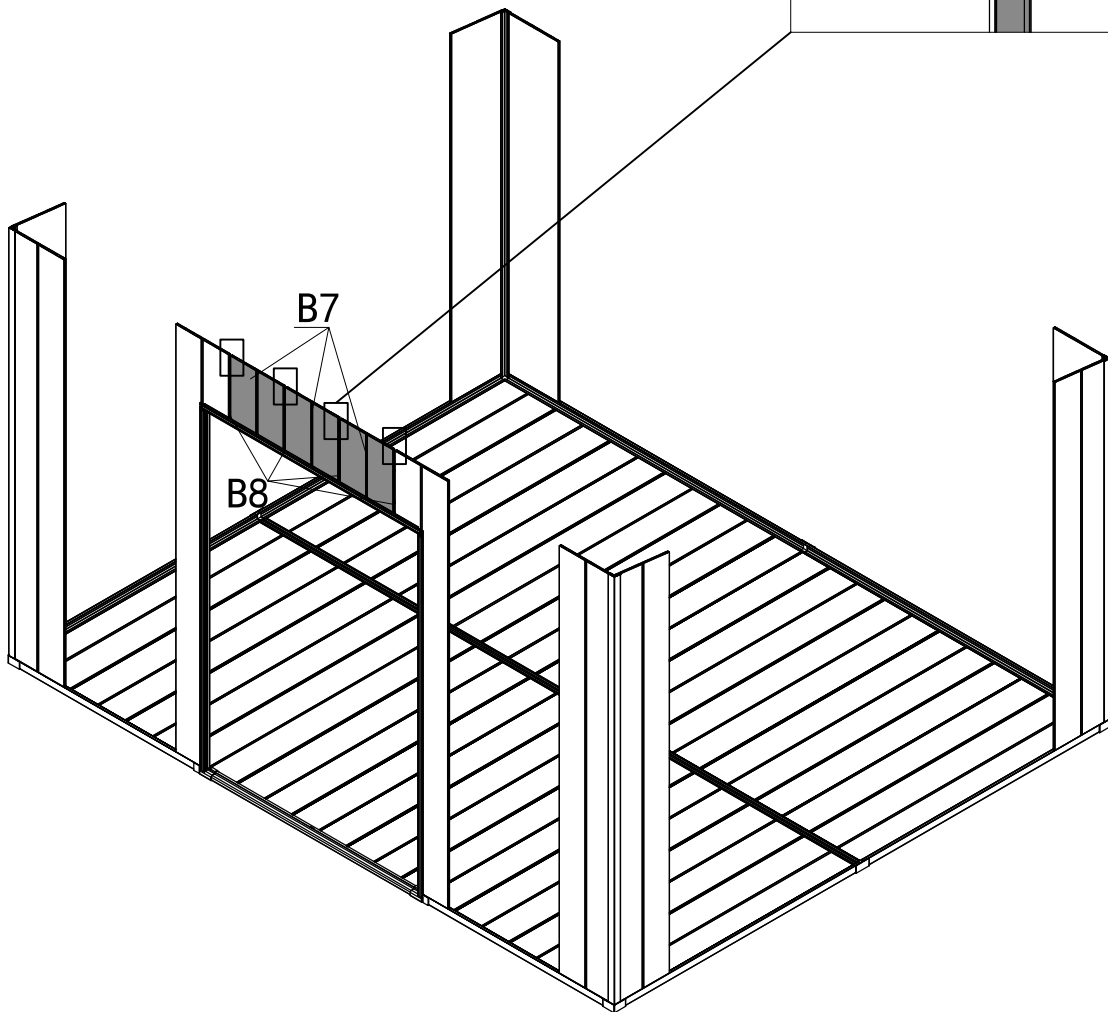


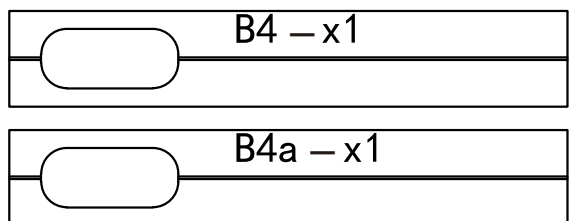

GJF012-x2



GJF020-x2




R — x2



9# — x16





10# — x24

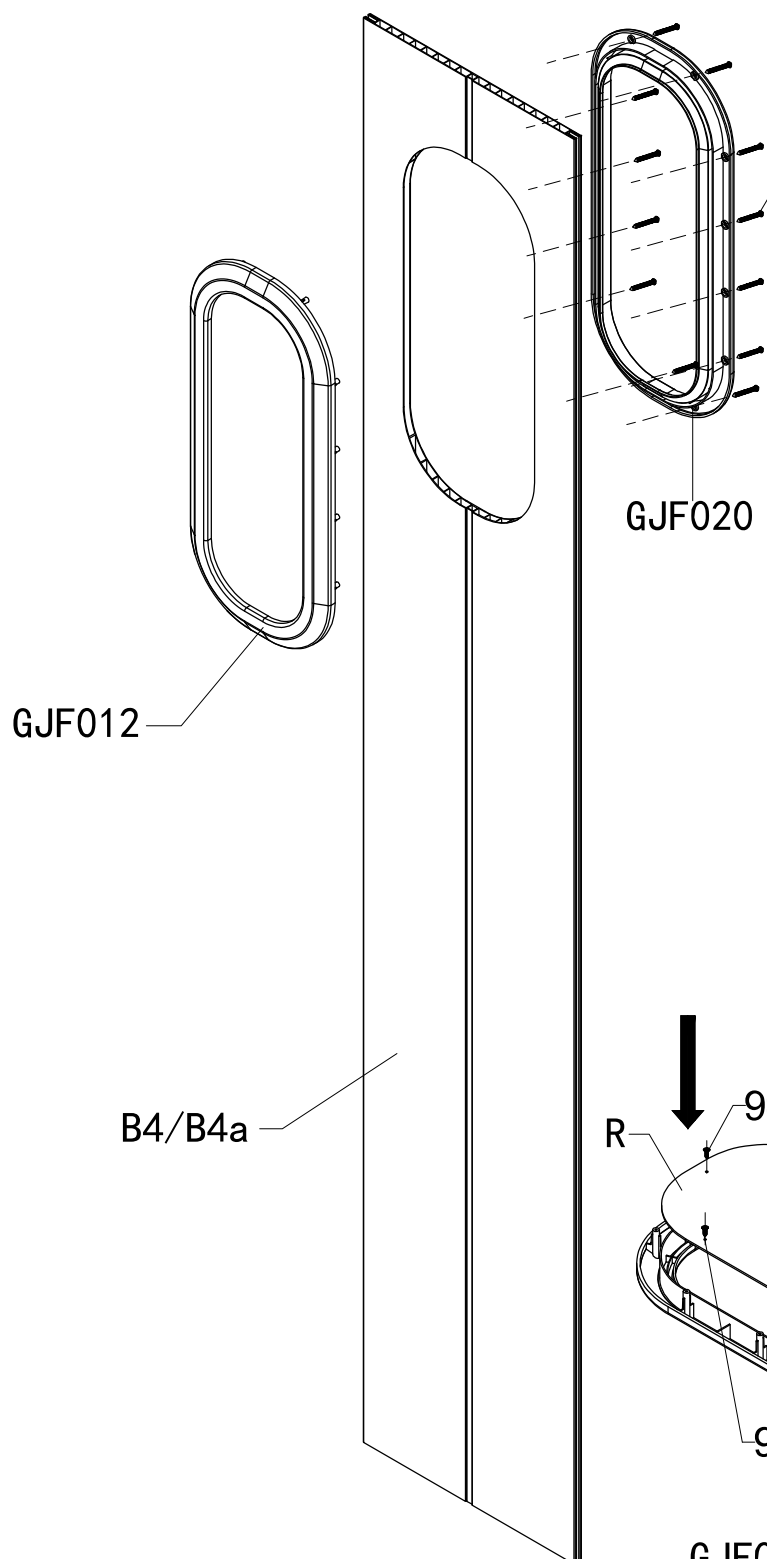


(1) Use 8 screws #9 to secure transparent board #R to outside window frame #GJF012.



(2) Use 12 screws #10 to fix inside window frame #GJF020 and outside window frame #GJF012 to the wall panel #B4.

(3) Repeat the another set.

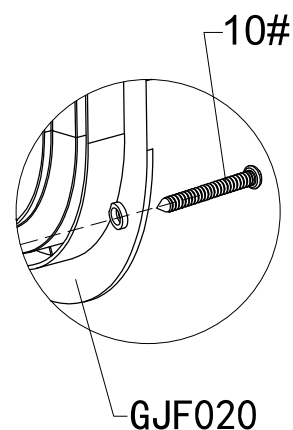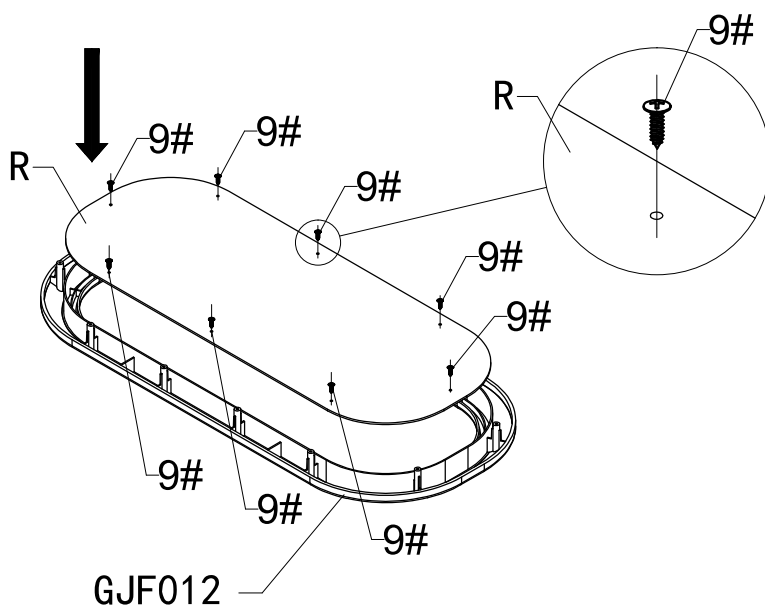


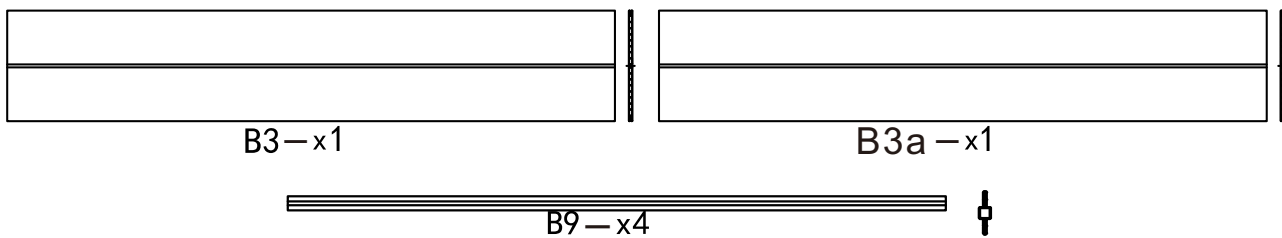


Note: Each panel should tightly lock to each other without any gap. Otherwise, there will not be enough space for last panel.

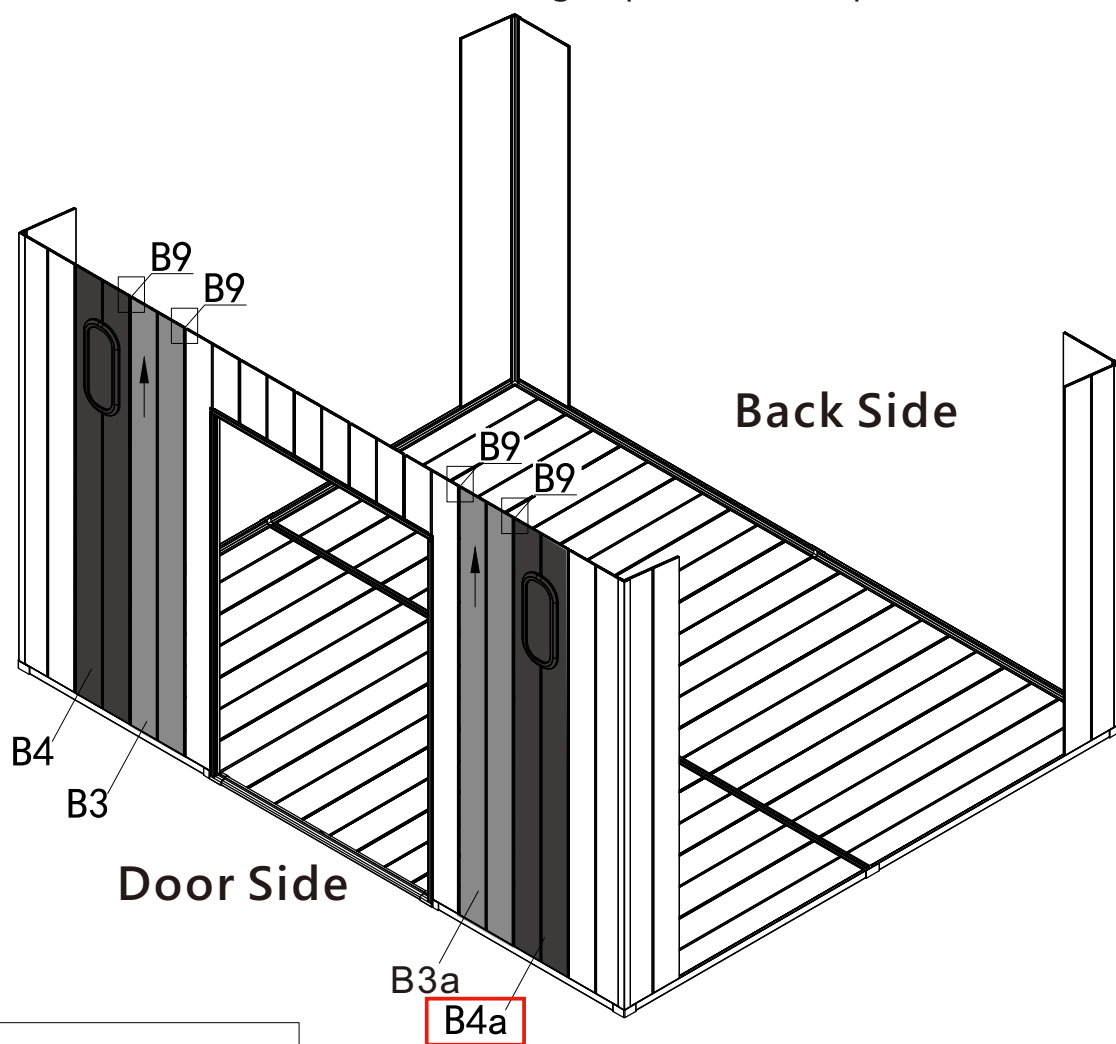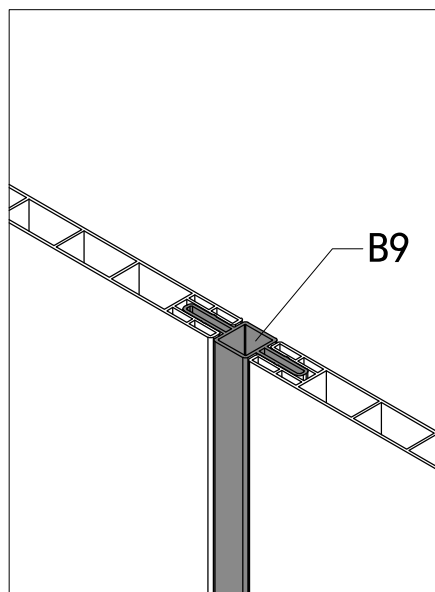

The wall panel #B3/#B3a has an arrow affixed to it. Please install it in the direction indicated by the arrow.




Insert 2 connecting rods to
form a whole front wall.

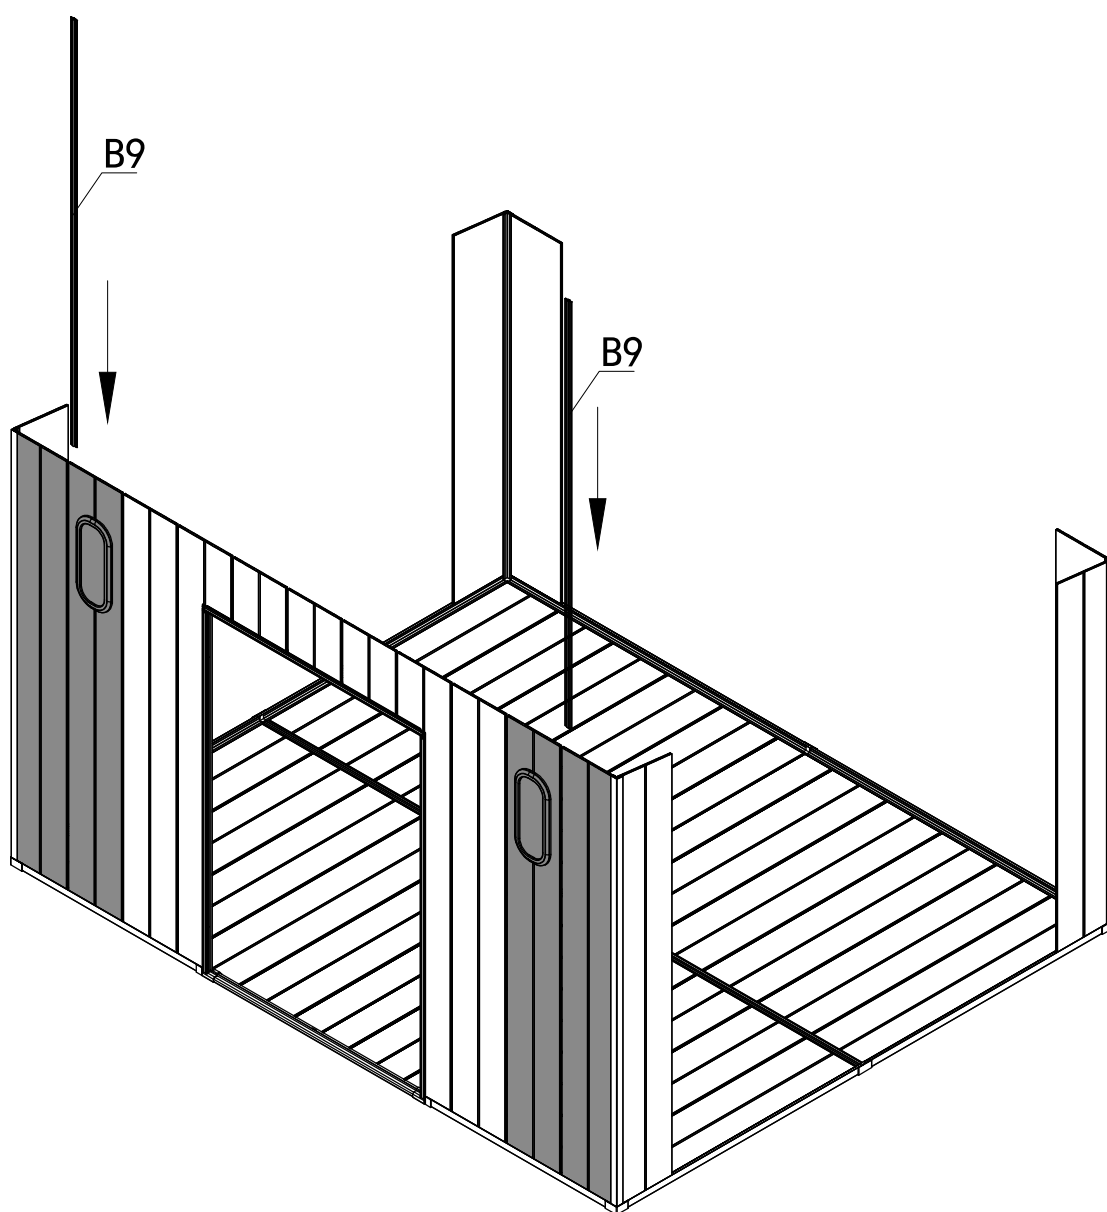




E18 – x1





E20 – x1

During installation, make sure that the notches on top frame Liners #E18 and #E20 are facing inward and installed onto the wall panel.

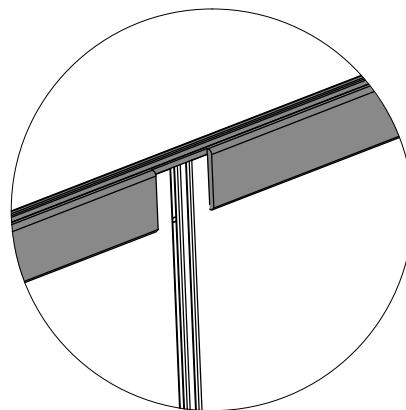

Inside View

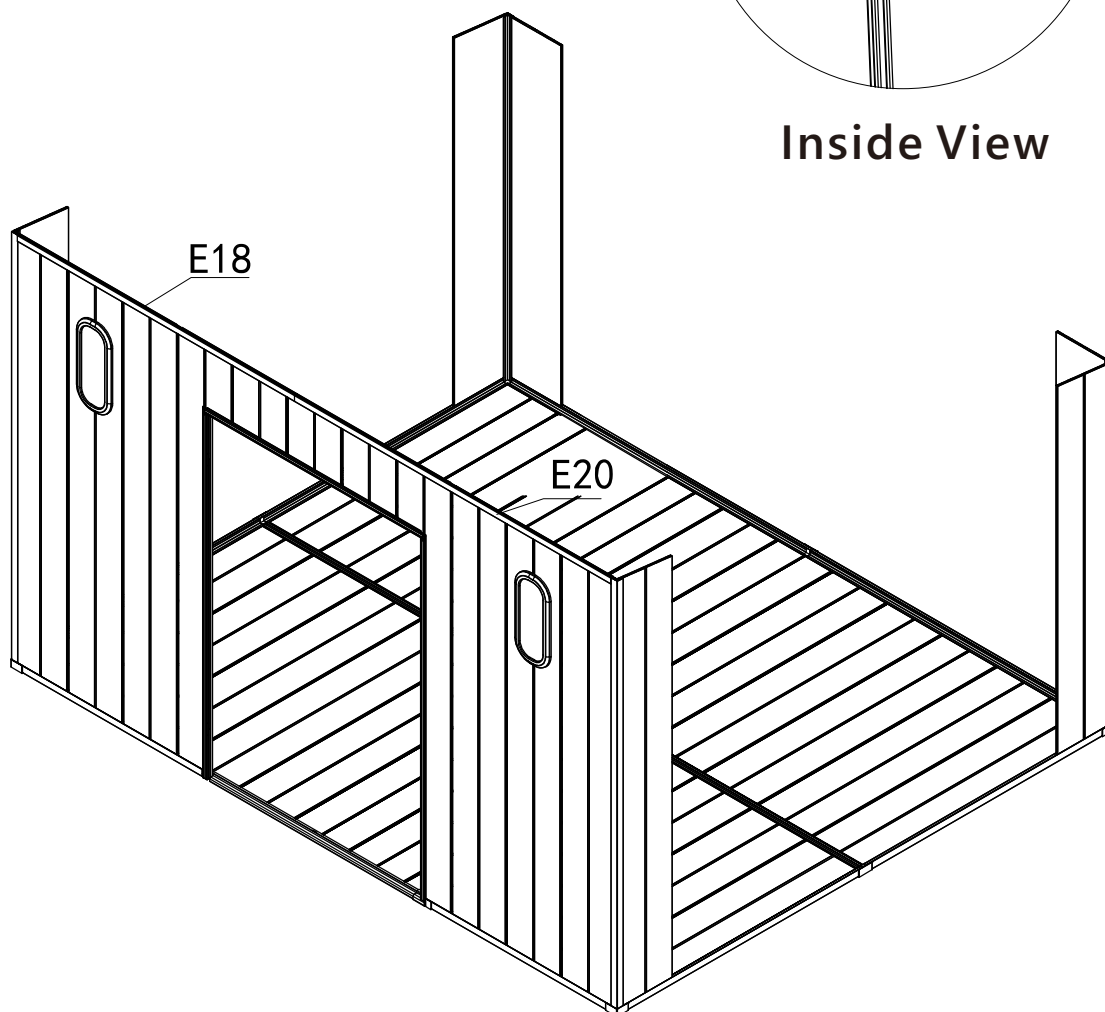


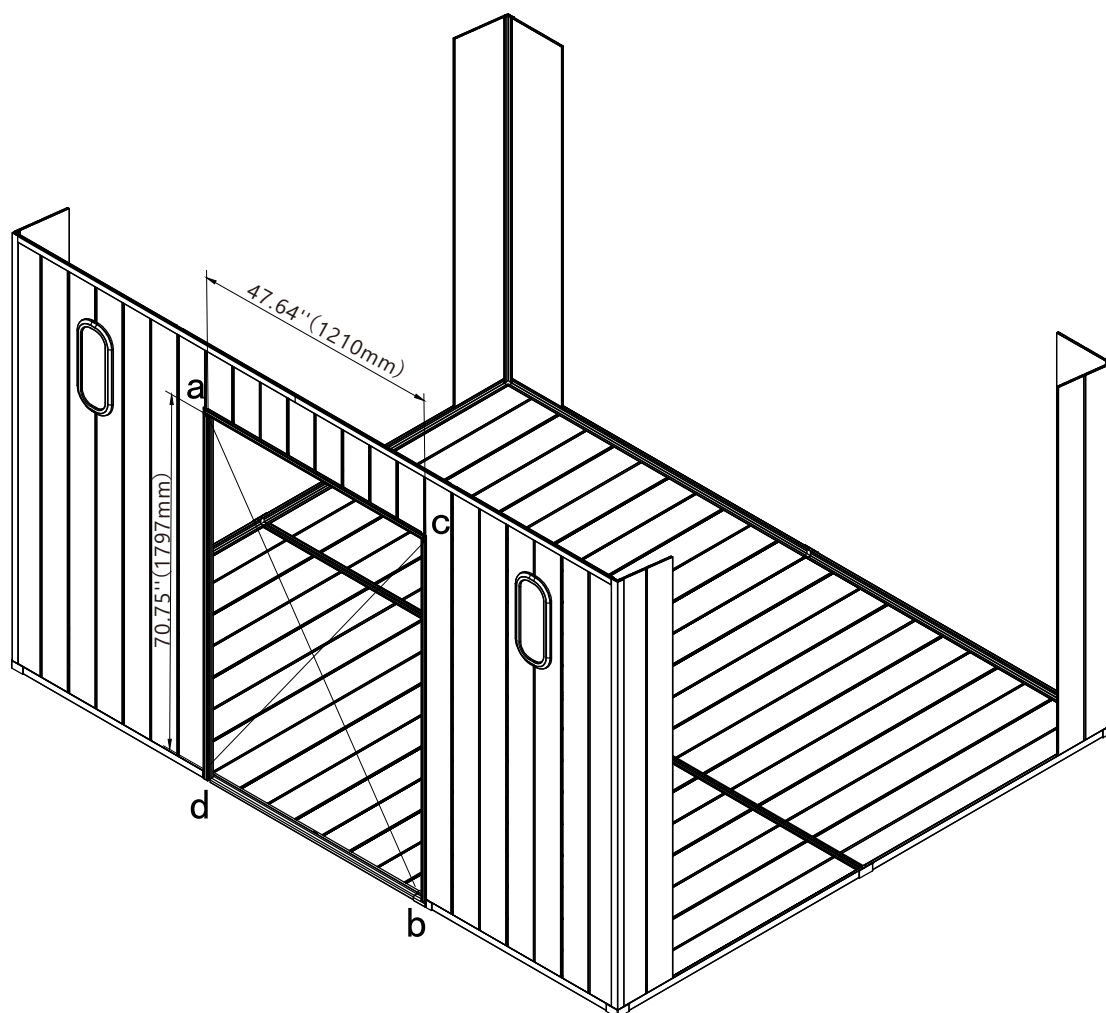




Before securing the screws in the next step, please measure whether the width and height of the door frame match the dimensions marked on the drawings, and then measure whether the diagonal ab of the door frame is equal to cd .


8# – x10




7# – x24

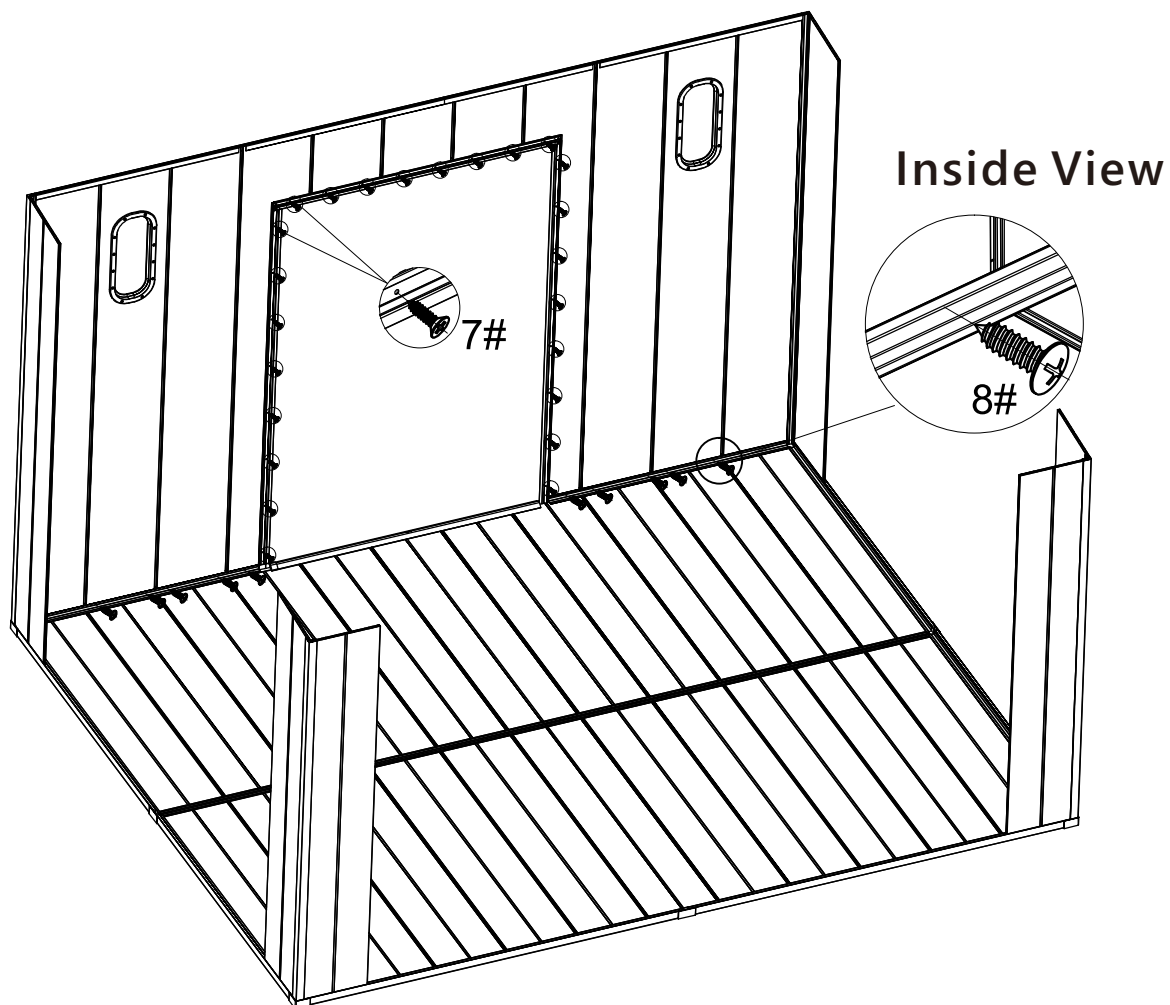



Use 24 screws #7 to secure #B1, #B2 with front wall panels.
Use 10 screws #8 to secure wall panels to the base frame.

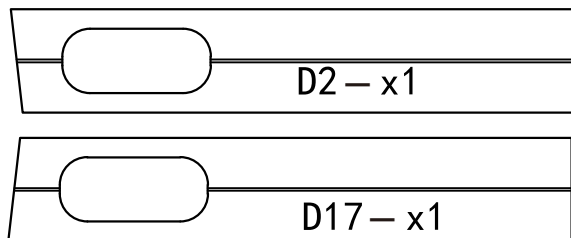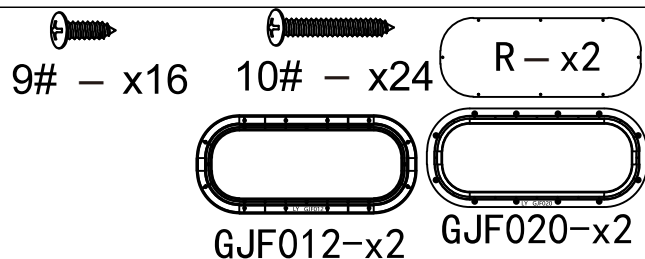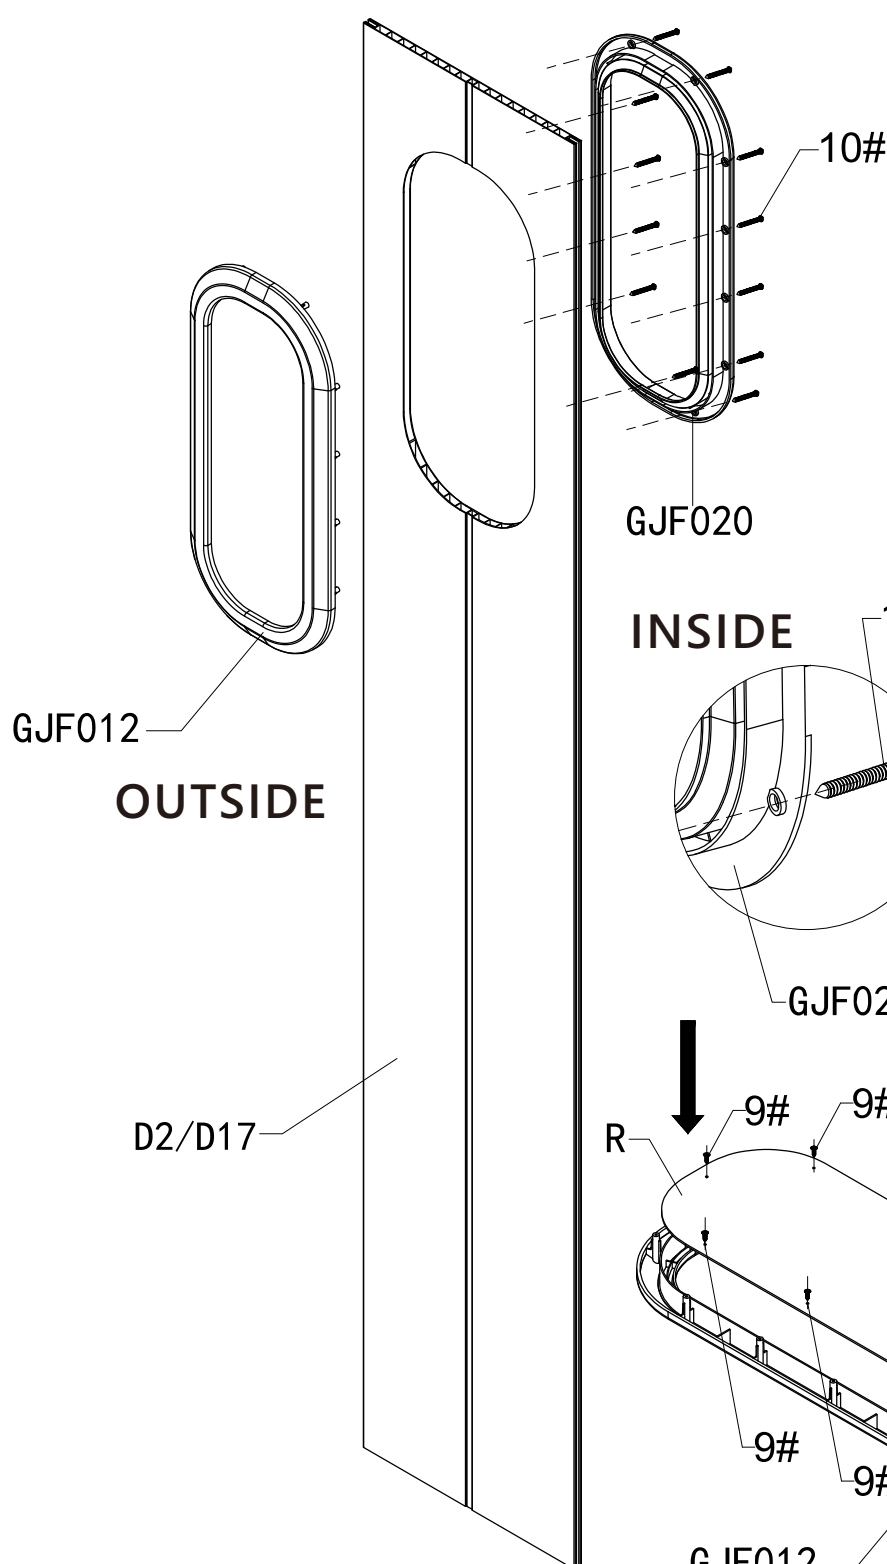

- (1) Use 8 screws #9 to secure transparent board #R to outside window frame #GJF012.
- (2) Use 12 screws #10 to fix inside window frame #GJF020 and outside window frame #GJF012 to the wall panel #D2.
- (3) Repeat above procedures to assemble wall panel #D17.

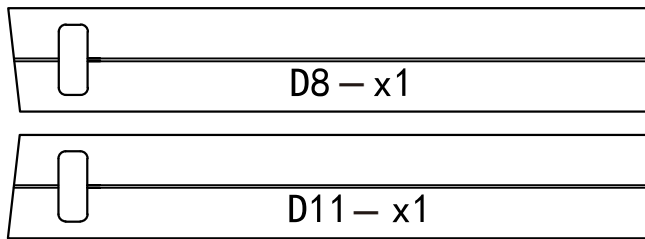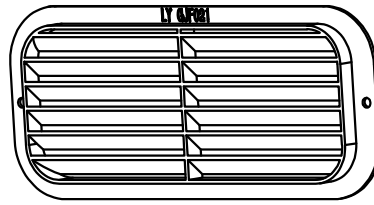

GJF021-x2

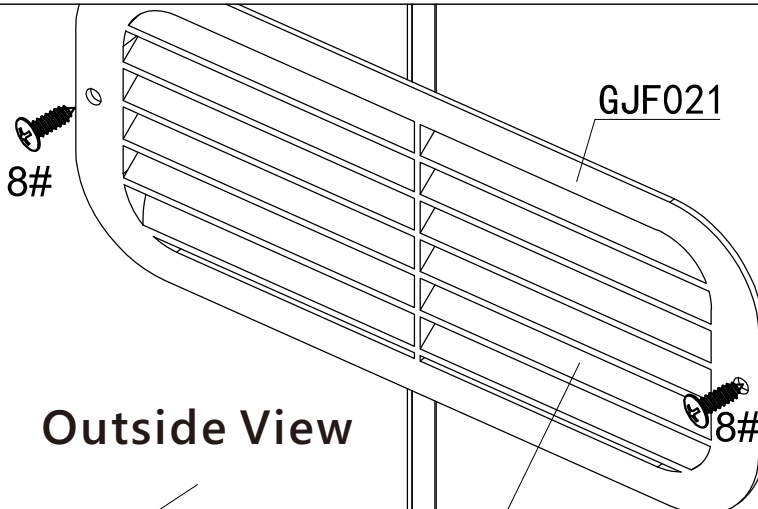


D8/D11

GJF021


During installation, ensure that the louver slots are tilted downward.

D8/D11

Outside View

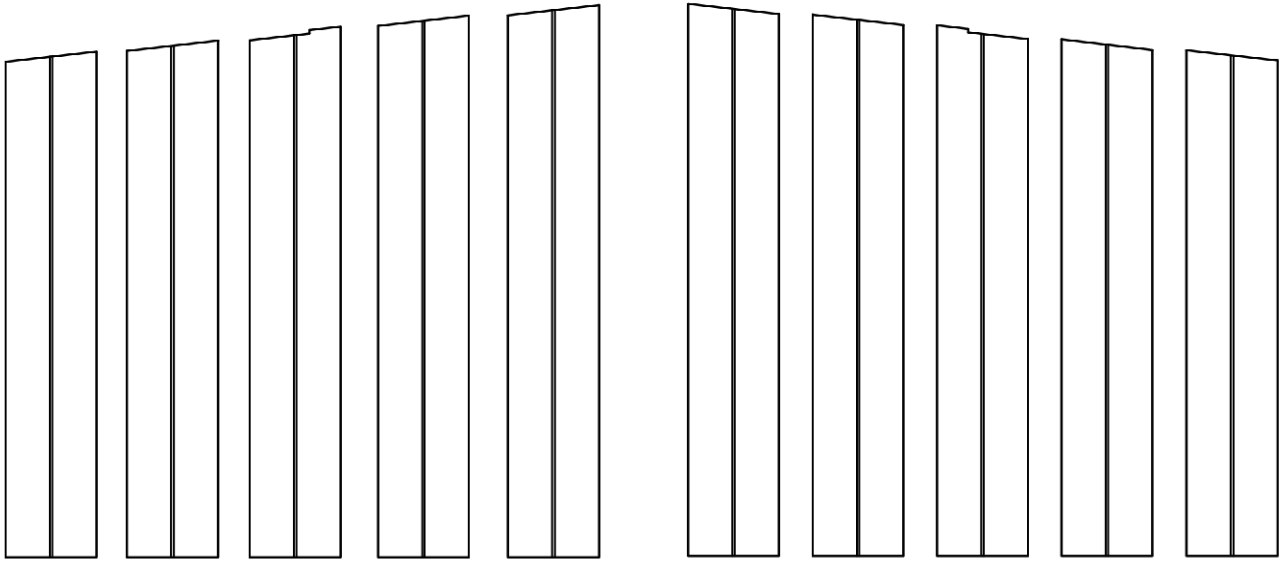


D3—x1 D4—x1 D5—x1 D6—x1 D7—x1 D12—x1 D13—x1 D14—x1 D15—x1 D16—x1

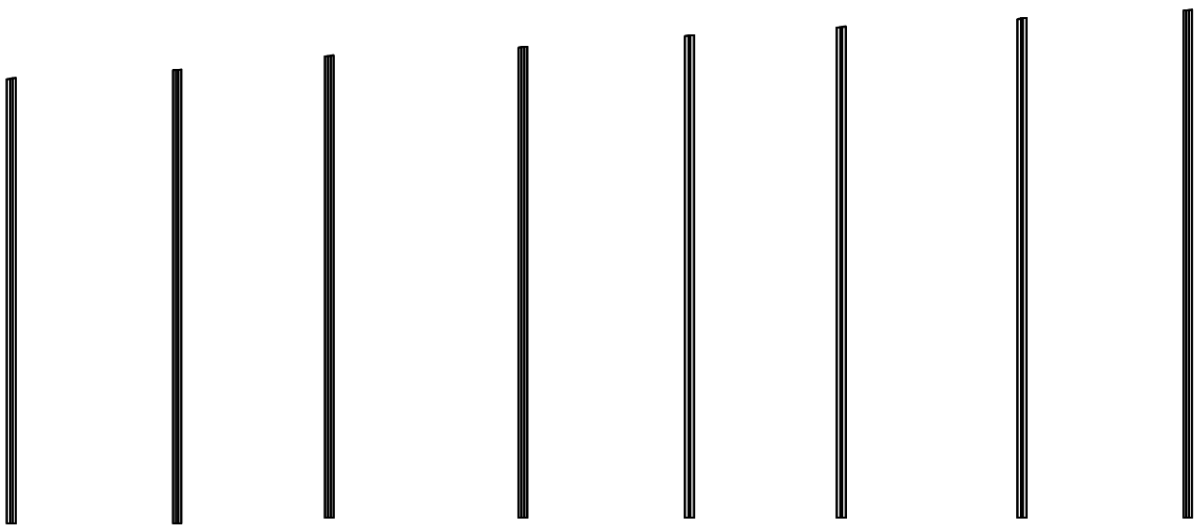


Da—x2 Db—x2 Dc—x2 Dd—x2 De—x2 Df—x2 Dg—x2 Dh—x2




8# — x48

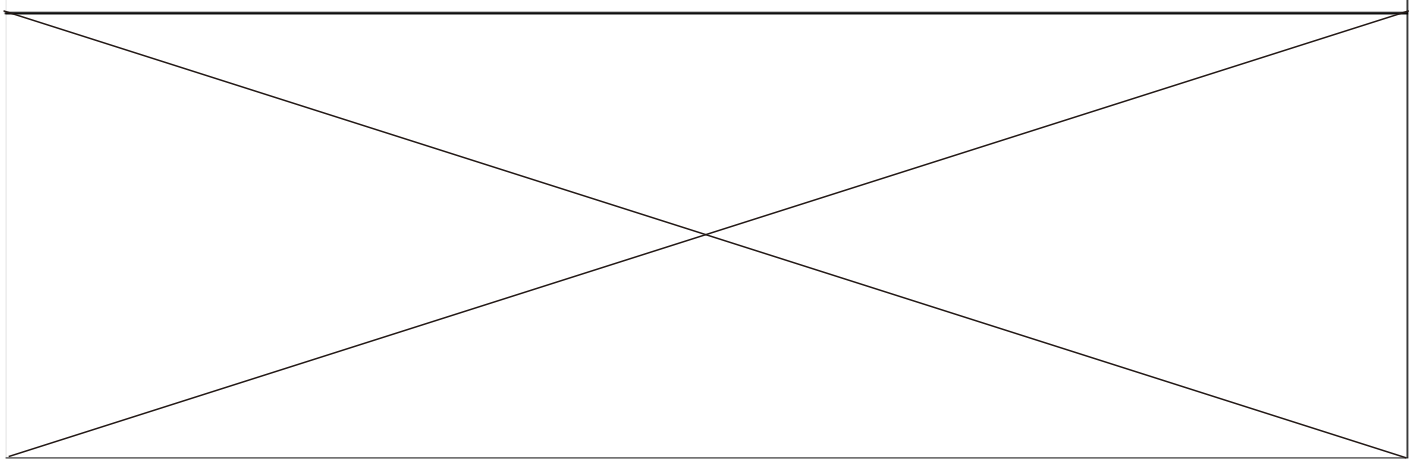


Assemble the side wall panel

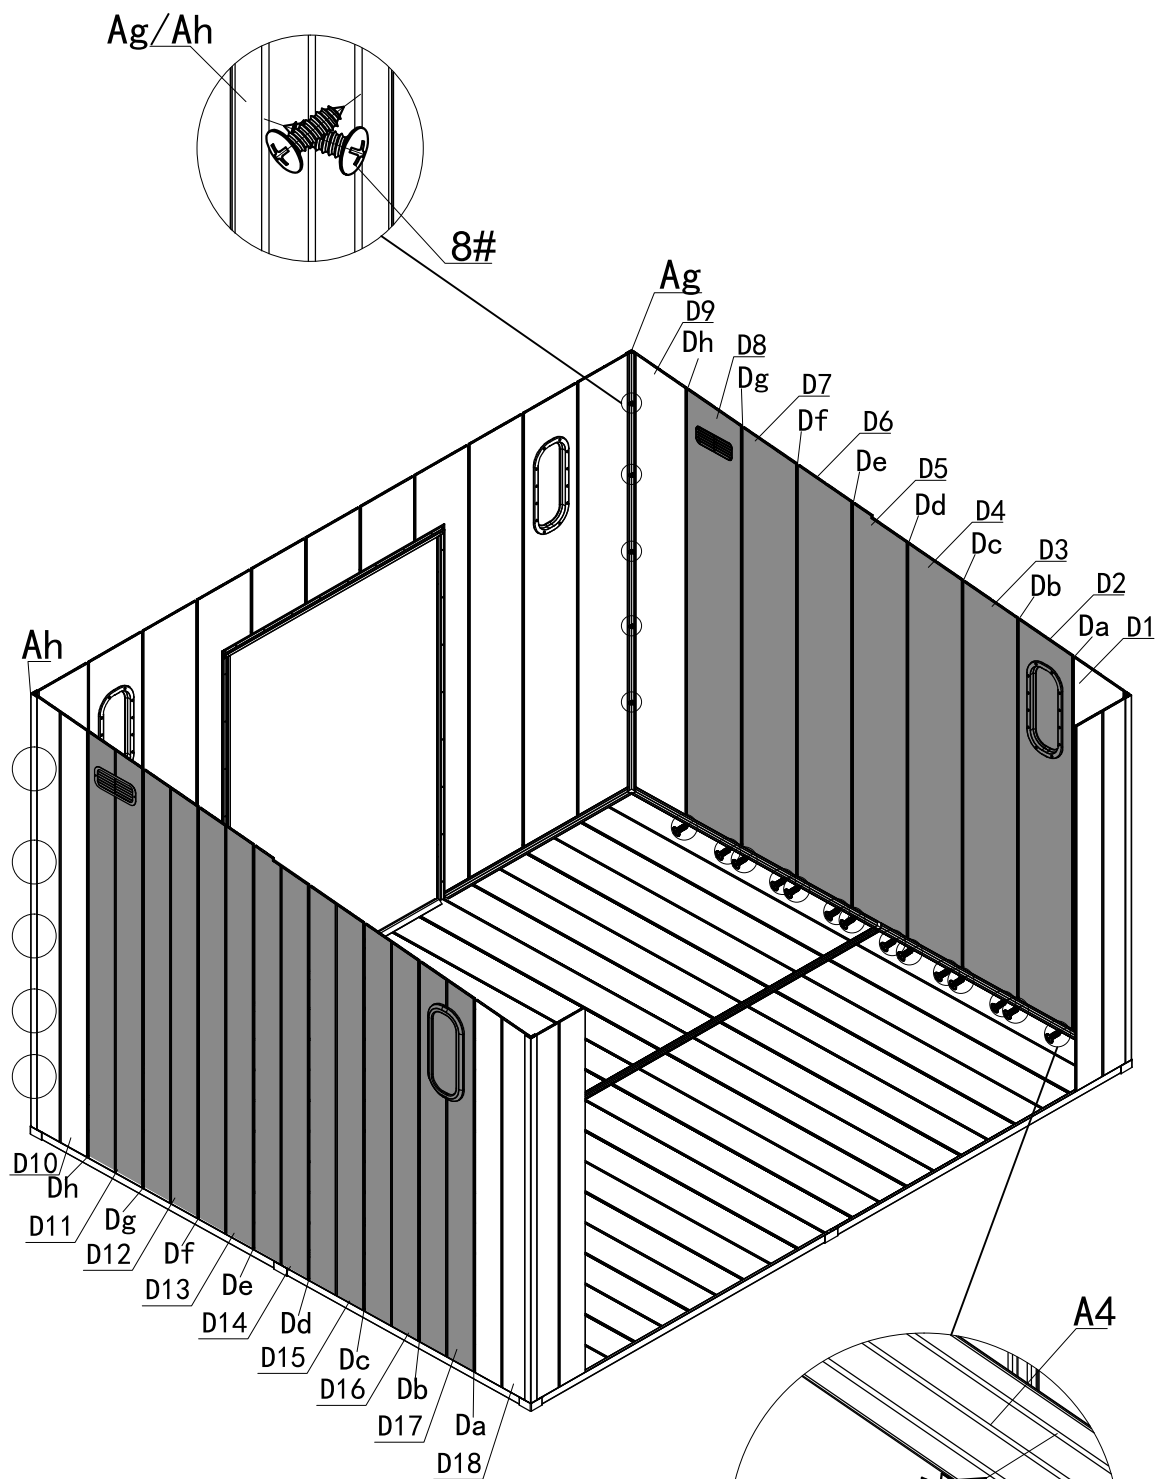


Install the side wall panels and connecting rods first. Use 20 screws #8 to secure the front wall panels with side wall panels to the corner Support tubes #Ah/#Ag . Use 28 screws #8 to secure the base frame with side wall panels and the connecting rods as shown.

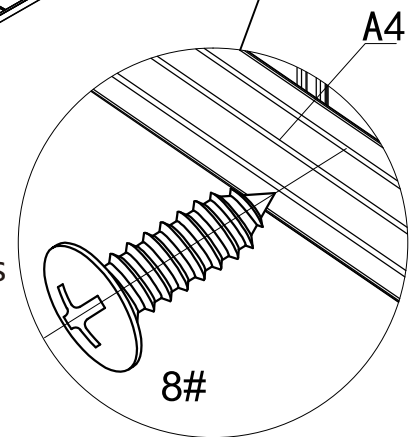

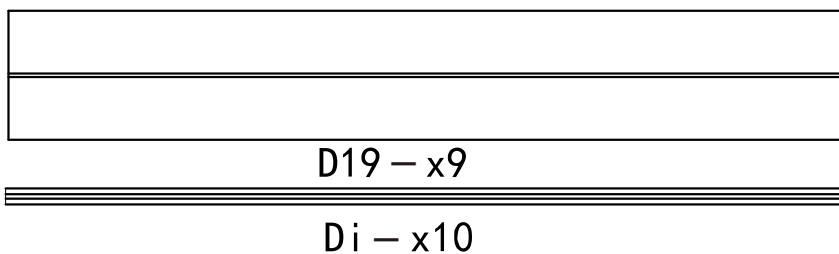



8# - x34

Ae/Af

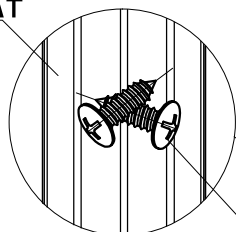

8#

Ae

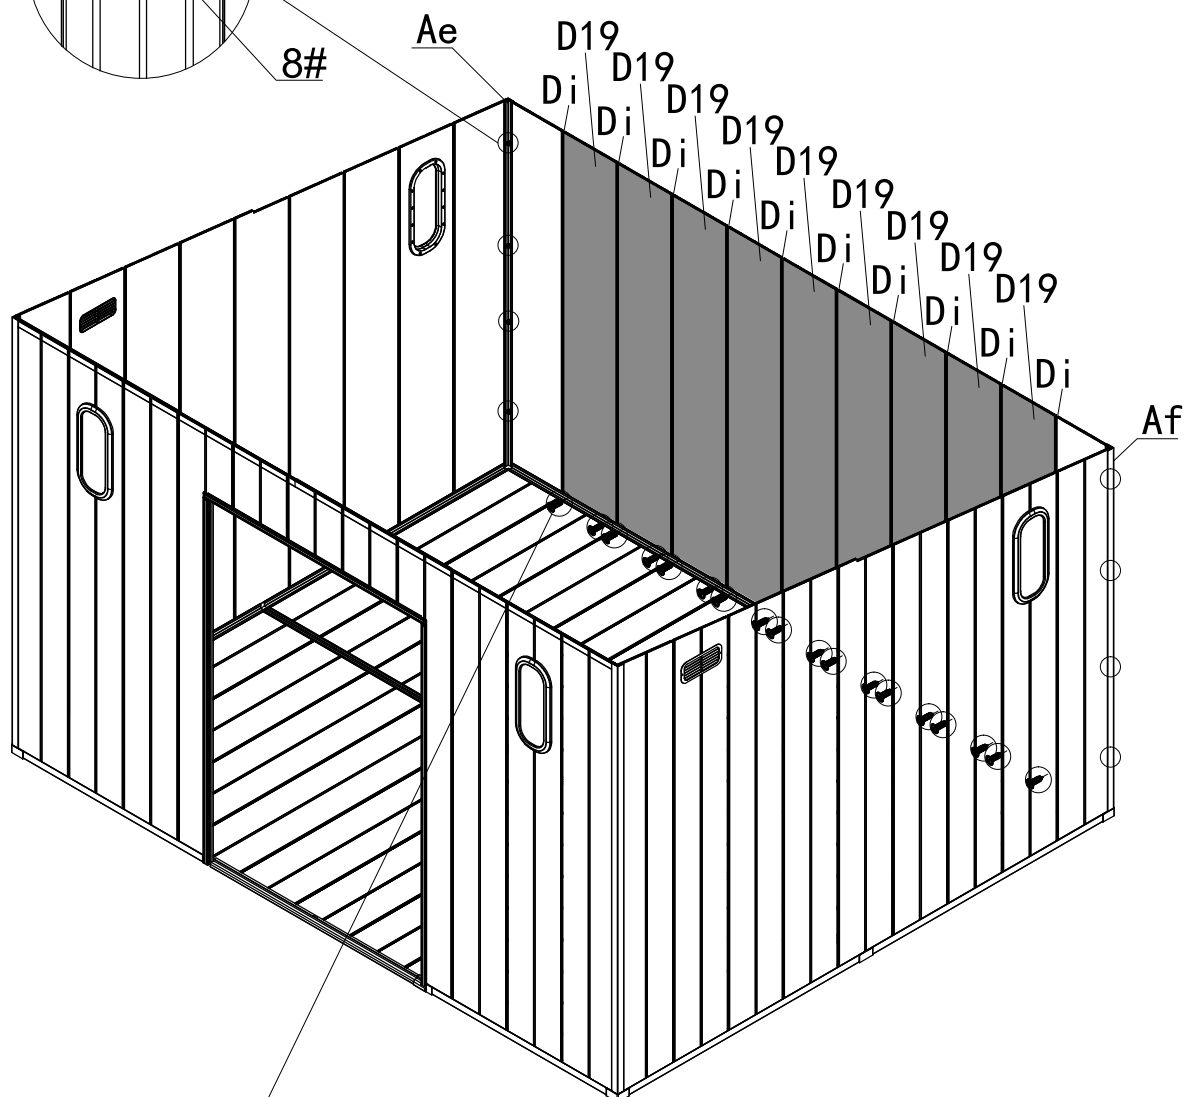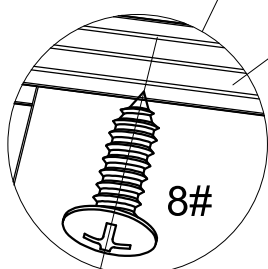

A1/A2

8#


Assemble the back wall panel:


Install the back wall panels and connecting rods first.

Use 16 screws #8 to secure the back wall panels with side wall panels to the corner Support tubes #Ae/#Af.


Use 18 screws #8 to secure the base frame with back wall panels and the connecting rods as shown.

Note: The left and right #Ae/#Af corner support tubes are symmetrical.

 E11 – x1
 E12 – x1
 E13 – x1
 E14 – x1

 E15 – x1
 E17 – x1

During installation, make sure that the notches on top frame Liners #E11-#E15 and #E17 are facing inward and installed onto the wall panel.

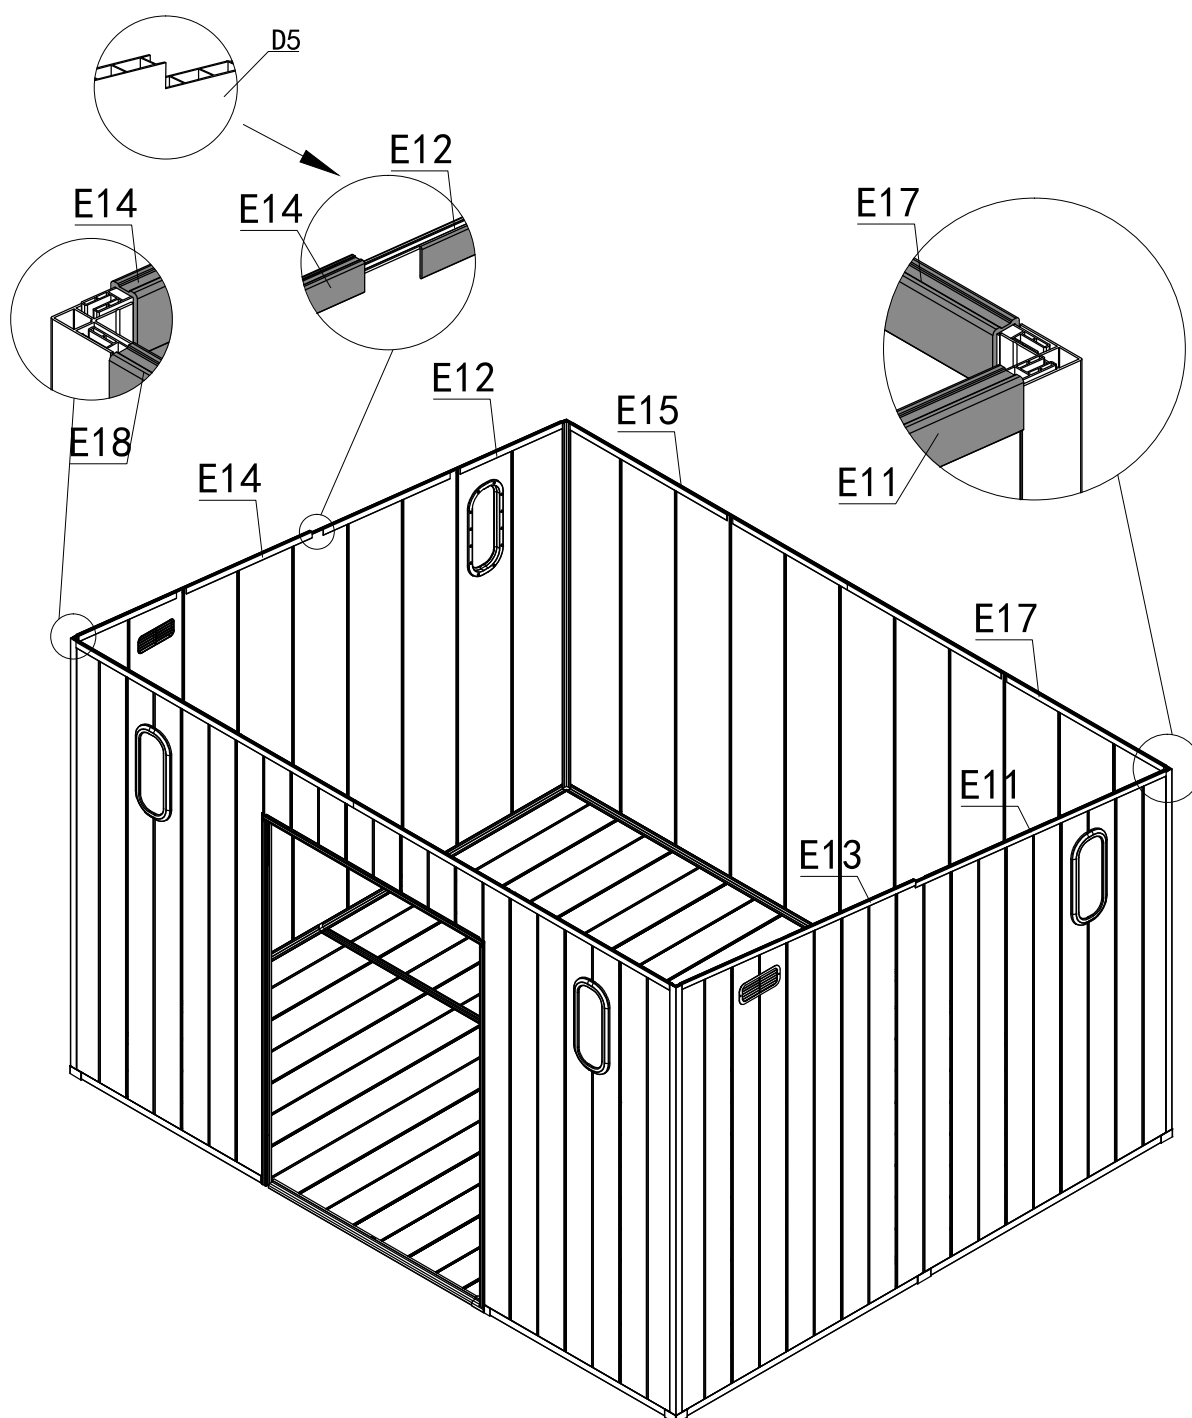



E1 – x1
 E2 – x1
 E3 – x1
 E4 – x1
 E5 – x1

17# – x80



E6 – x1
 E7 – x1
 E8 – x1

Assemble the Metal top frame

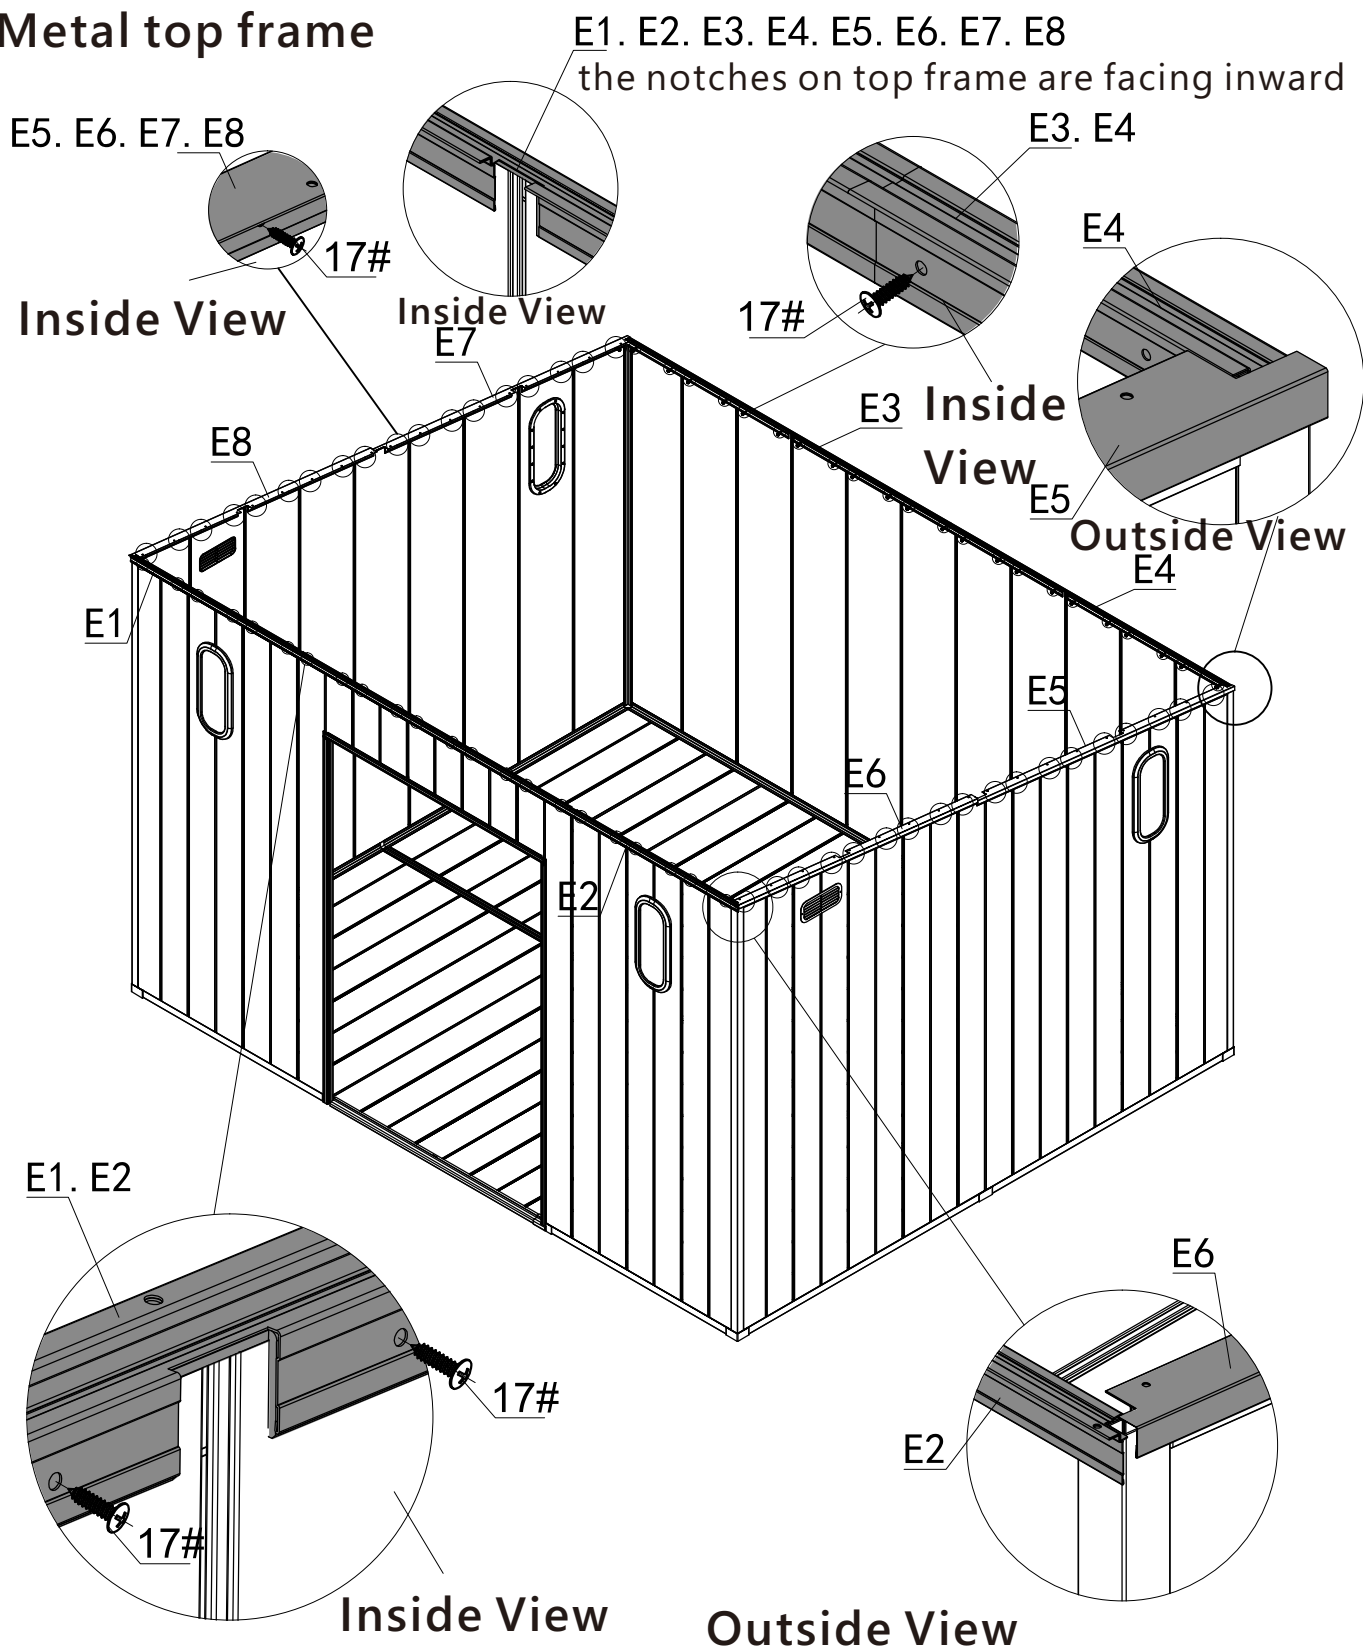




5# – x144

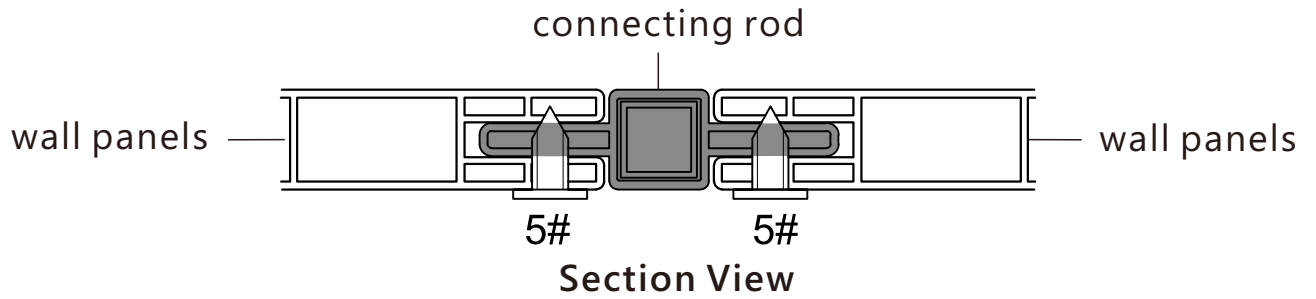
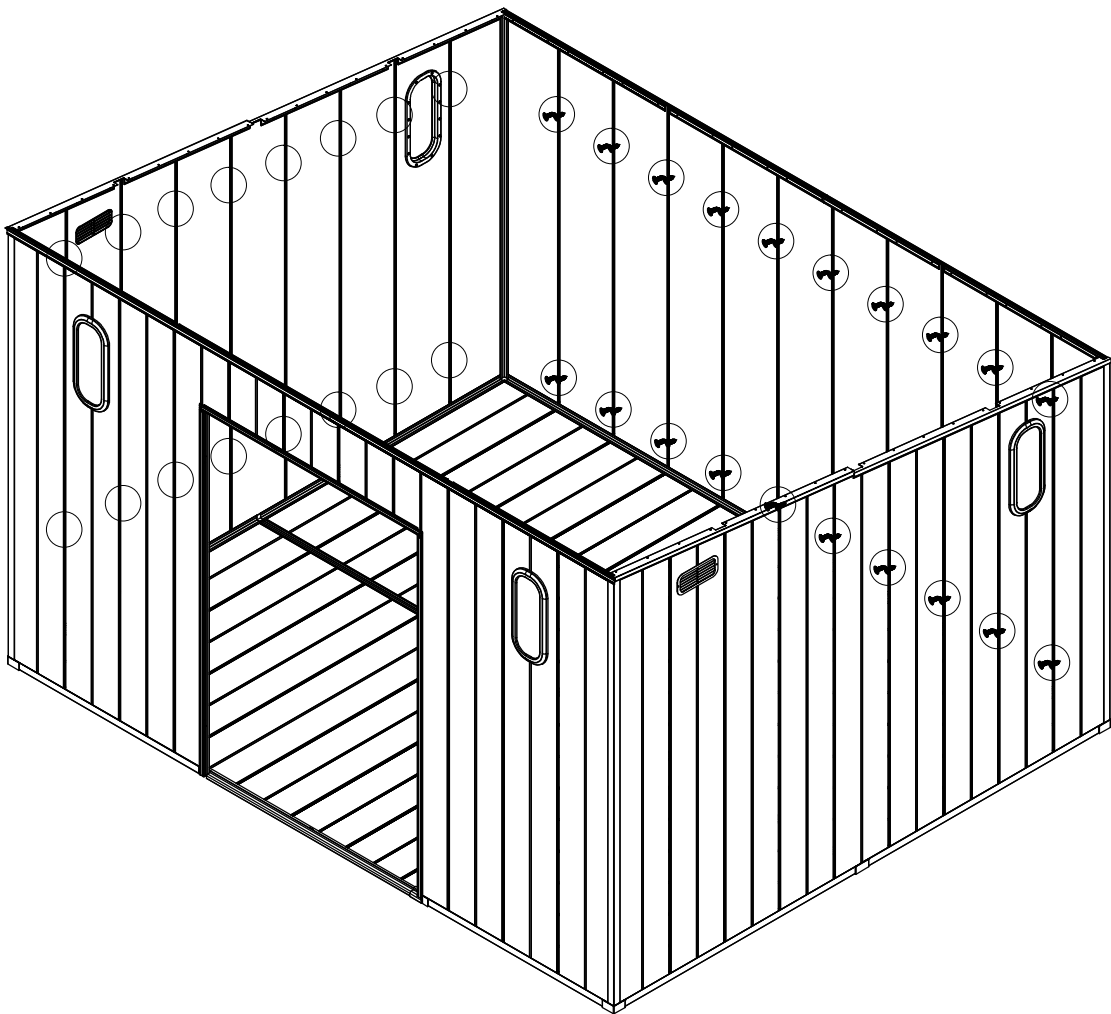


Use 144 screws #5 to secure the wall panels to the connecting rods.




Secure #H1 and #F1/#F2/#F3/#F4/#F5 with 2 bolts #3 and 2 nuts as shown.

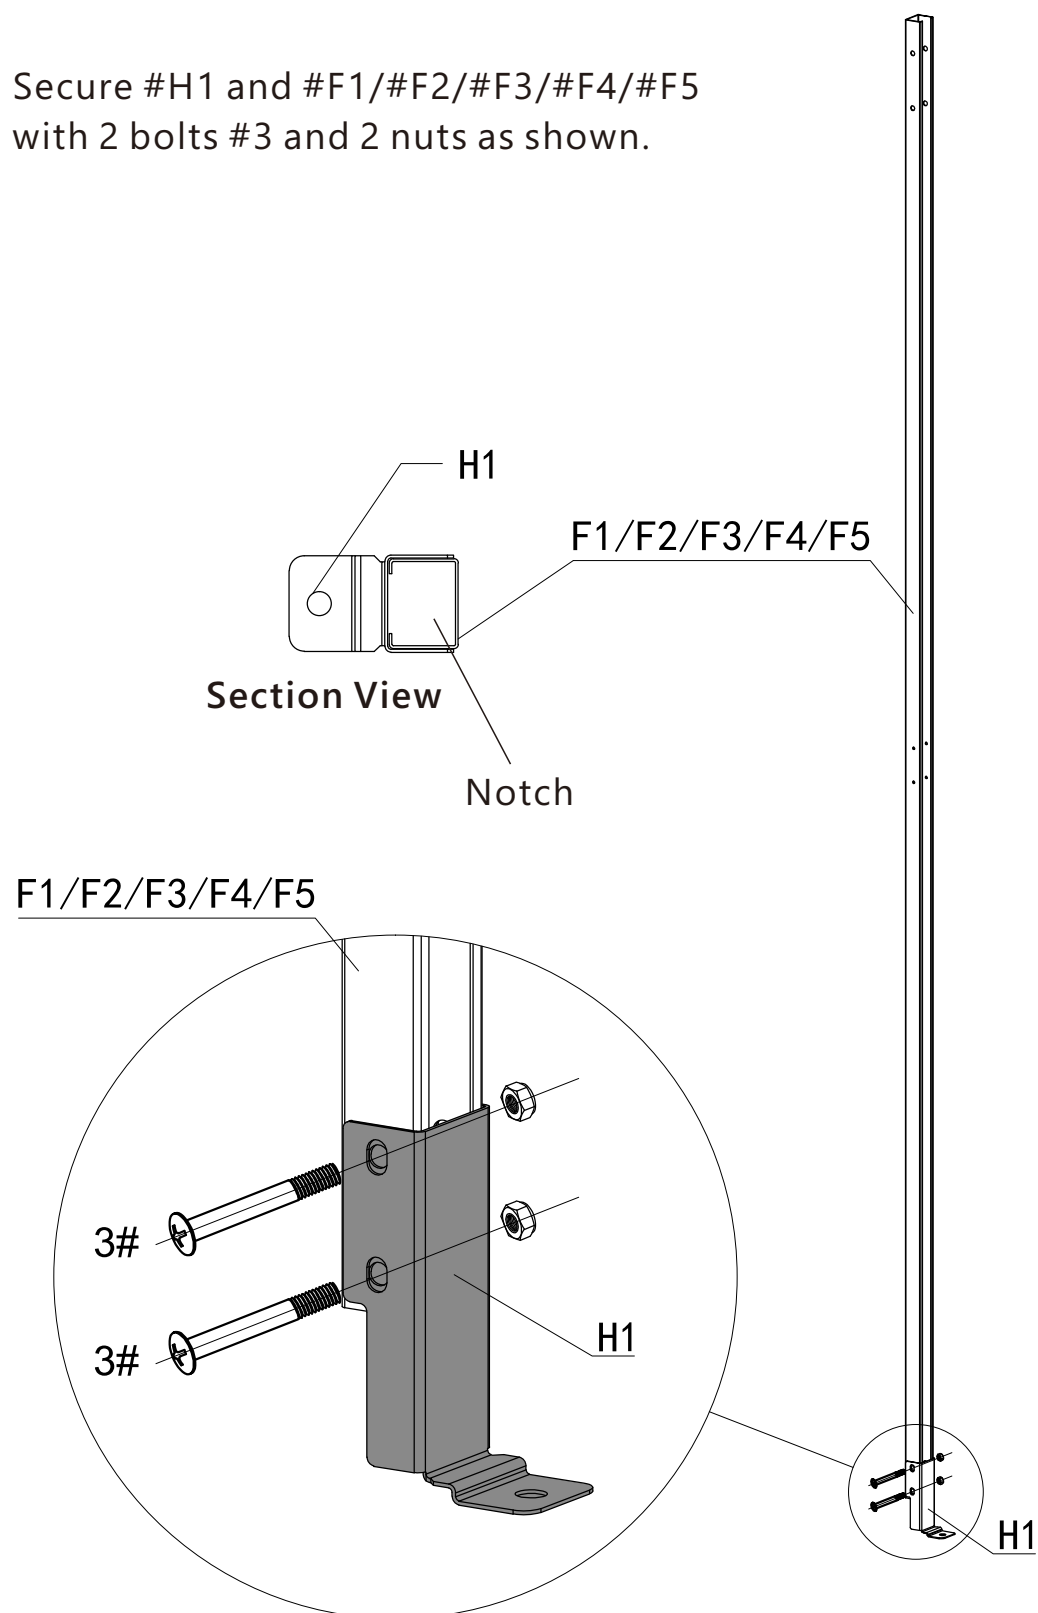


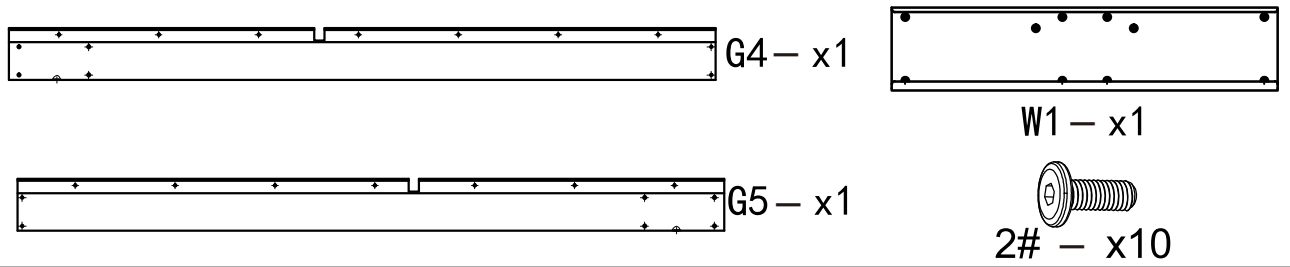

Assemble the centre beam

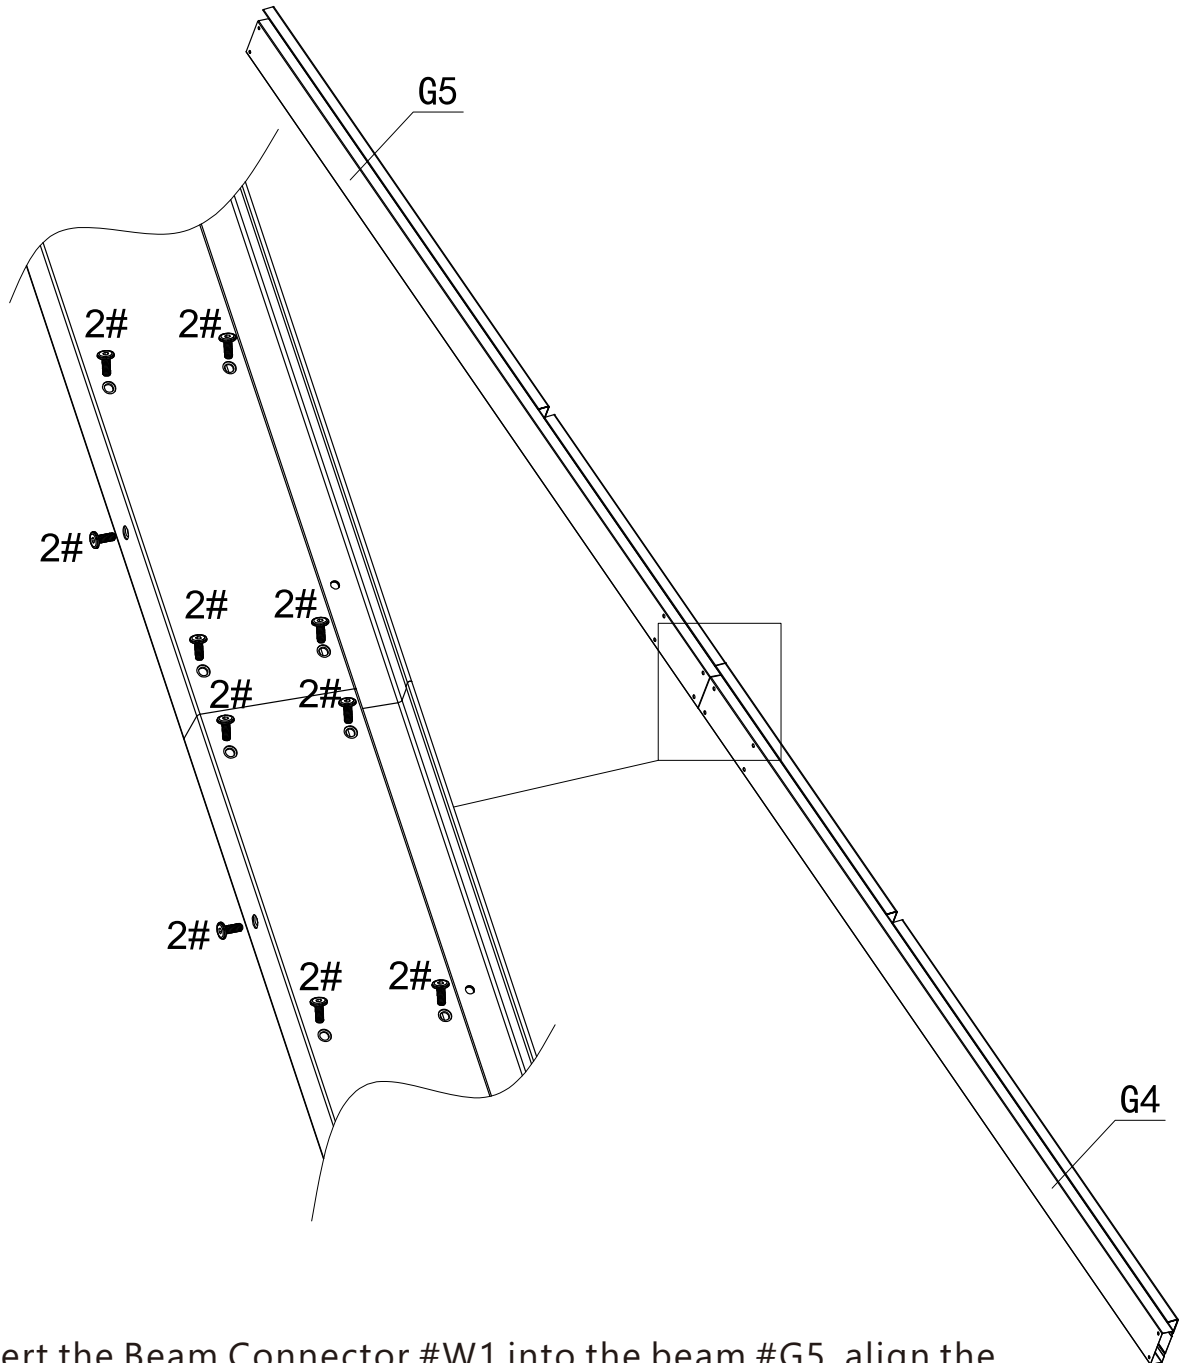


- (1) Insert the Beam Connector #W1 into the beam #G5, align the holes and secure with 4 bolts #2 from front side and 1 bolt #2 from bottom.
- (2) Insert the other side of the Beam Connector #W1 into the beam #G4, align the holes and secure with 4 bolts #2 from front side and 1 bolt #2 from bottom.



3# – x4




Use 4 bolts #3 and 4 nuts to secure 2 support tubes #F4 with centre beam #G5/#G4.

Pay attention to the installation direction when assembling.


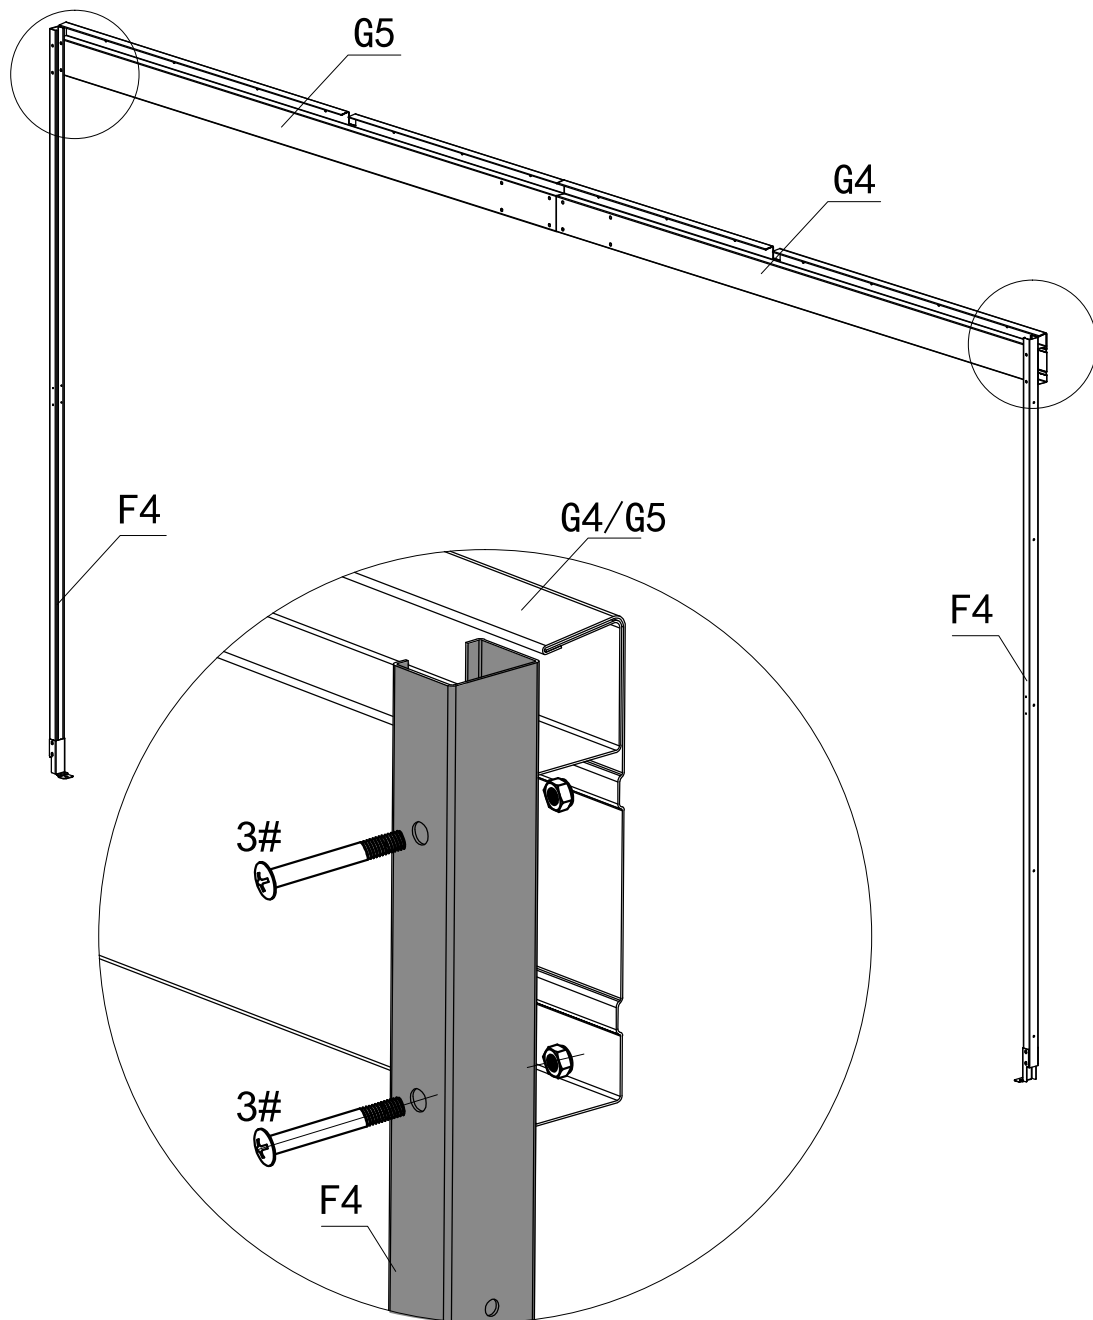




8# – x10

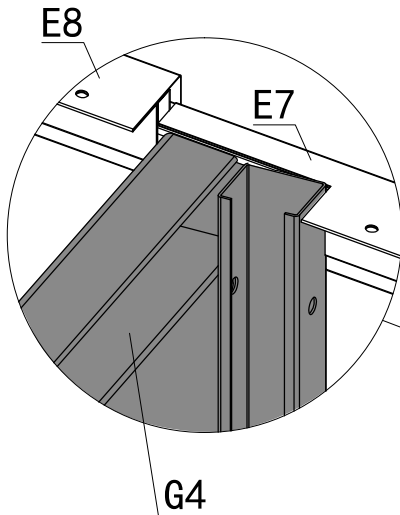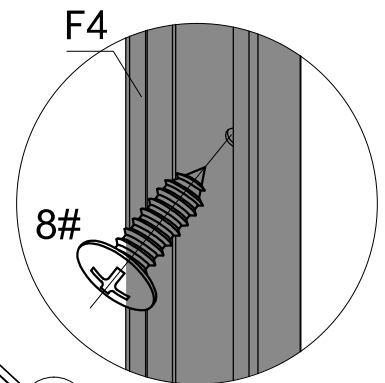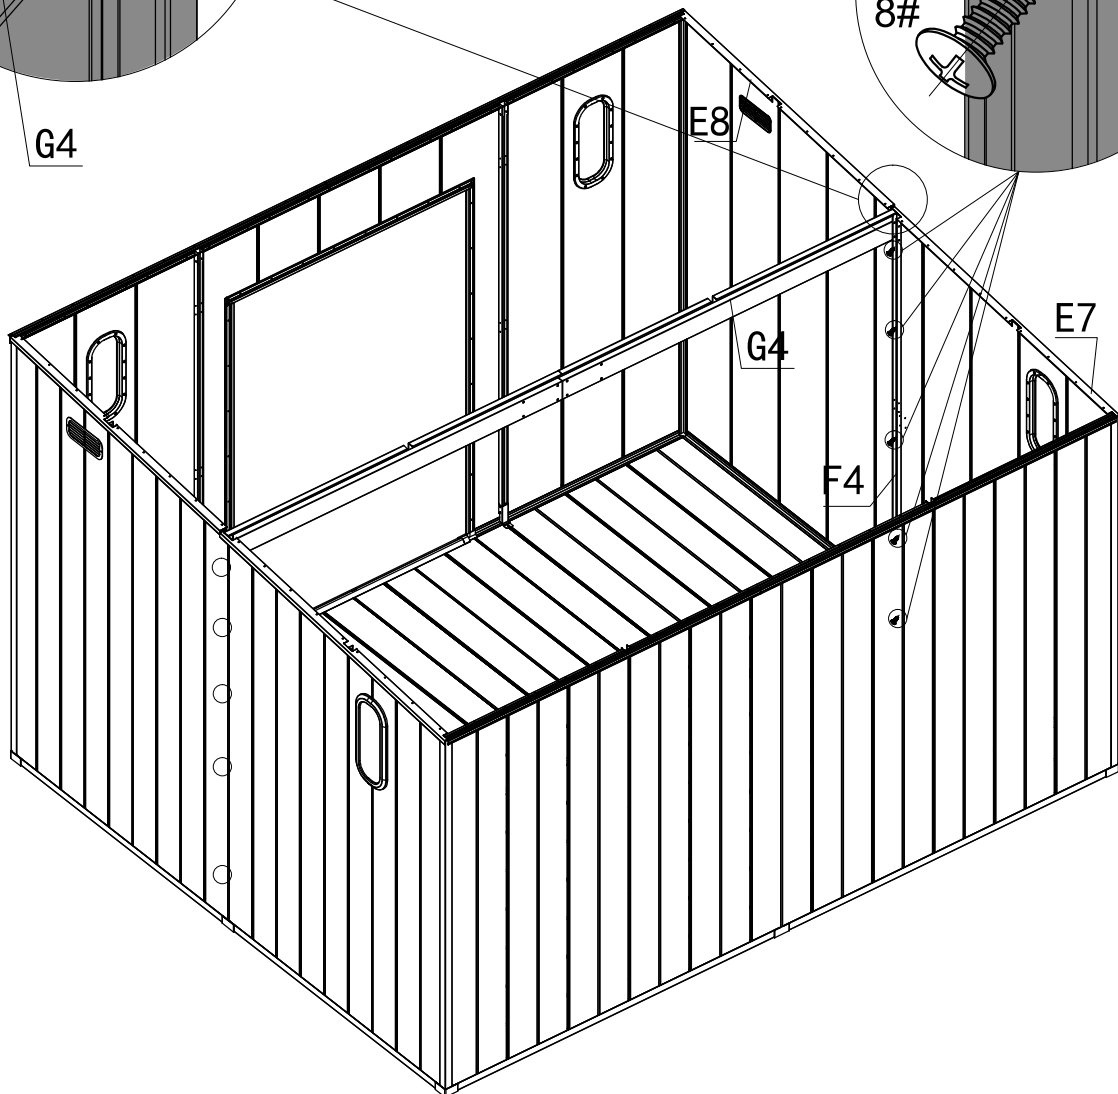



Place the assembled centre beam and support tubes to the side wall as shown. Place support tube #F4 in the centre of panel #D5. Use 10 screws #8 to secure support tubes #F4 to each side wall.
Pay attention to the installation direction when assembling.

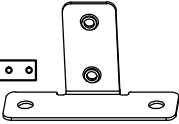J4 – x4 
 J5 – x4 
 J6 – x4  Q10 – x20 
 J8 – x2 

 
 14# – x40



J4. J5. J6. J8

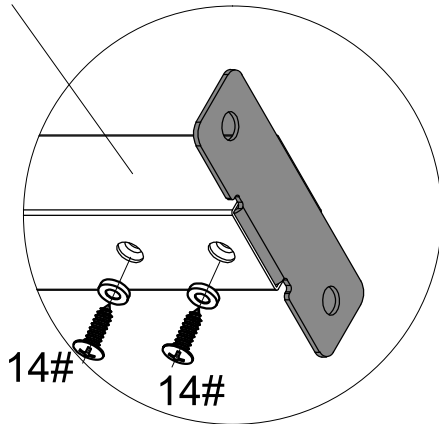

Install the wall horizontal support tubes.




8# – x40




Q3 – x1

CAUTION: Before assemble the support tubes, ensure that the walls are square and that the diagonal measurements are equal.

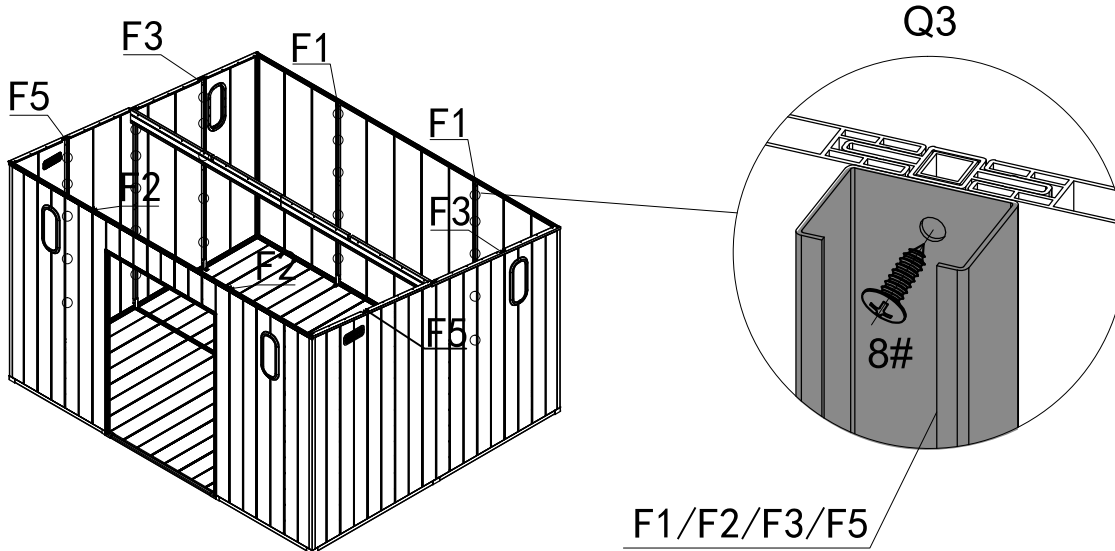


Since the inner linings of the connecting rods are fitted with metal tubes, it is necessary to pre-drill the screw holes with a 3.2mm drill bit #Q3 before installing the #8 screws.

Framing Layout for Wall Panels

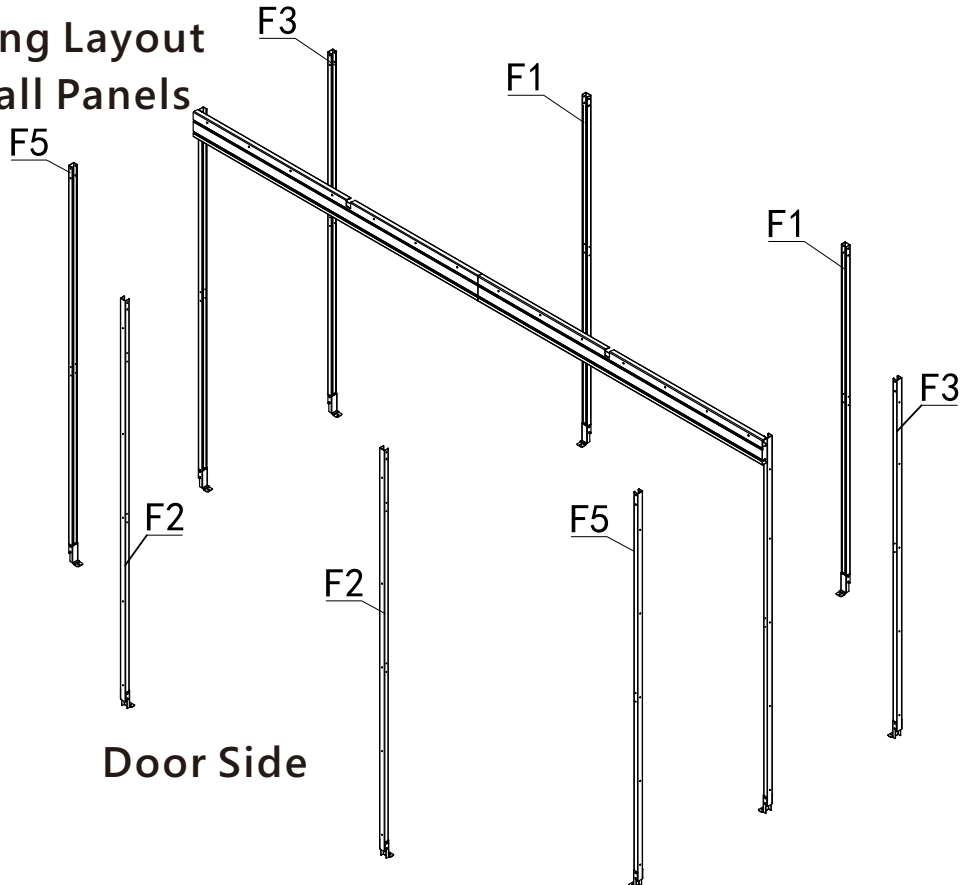

It is recommended to install these together with the next step of horizontal support tubes.

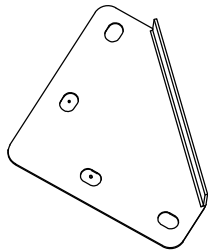

Q11 - x4


14# - x56

15# - x66

Q3 - x1

Framing Layout for Wall Panels




J4/J5/J6/J8

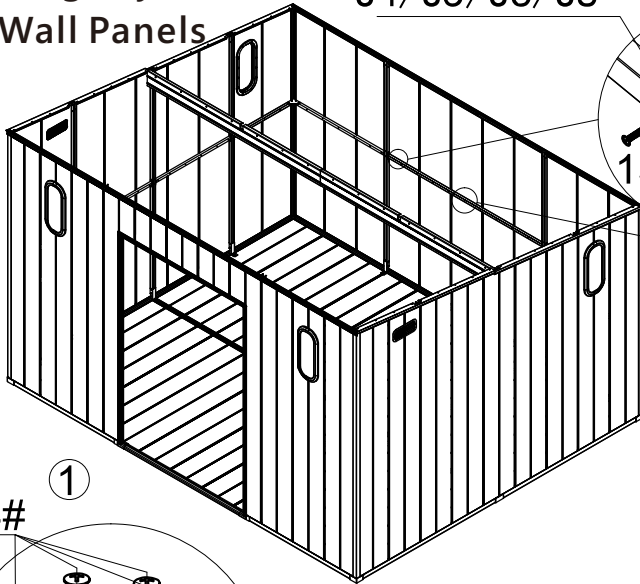

Drill pilot holes with #Q3 bit at panel gaps

15#


No holes in panel centre

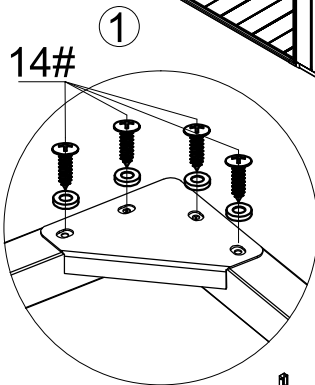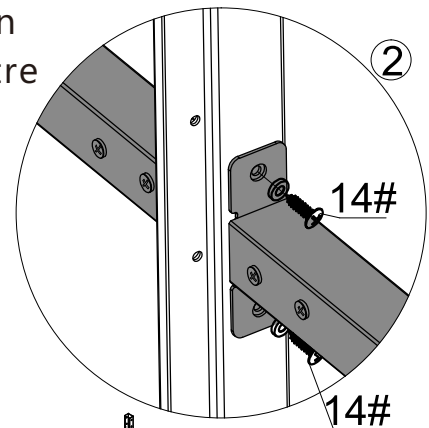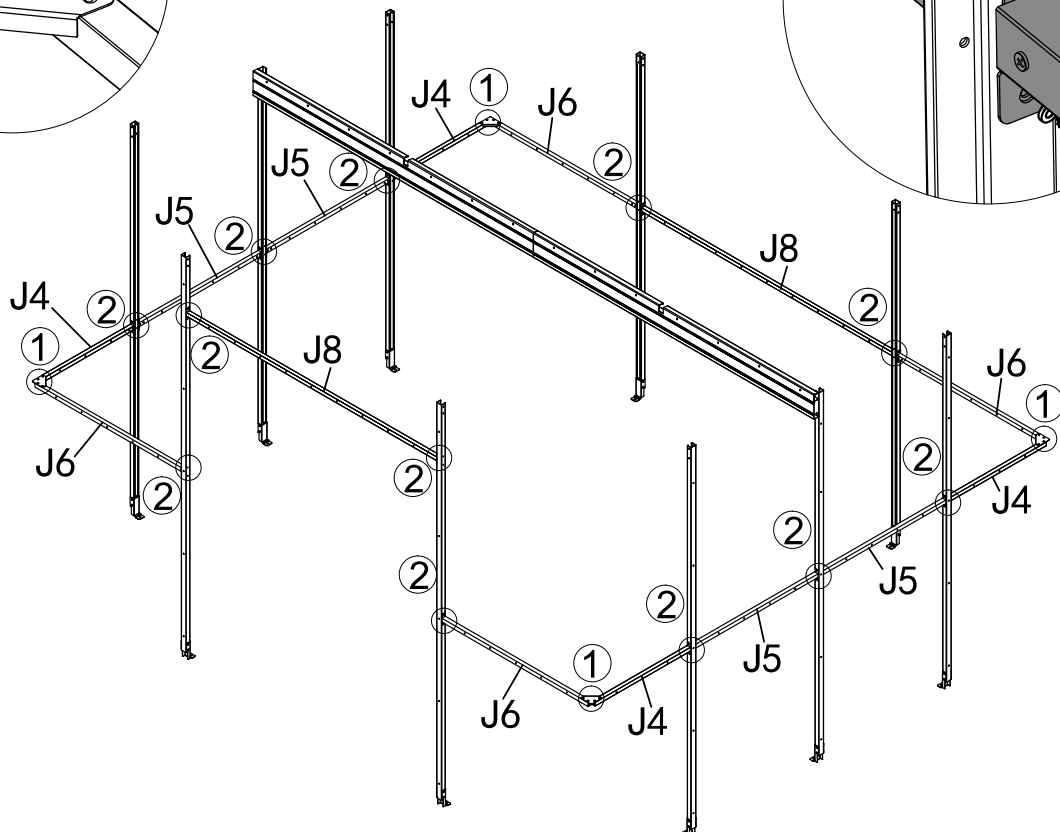


Since the inner linings of the connecting rods are fitted with metal tubes, it is necessary to pre-drill the screw holes with a drill bit #Q3 before installing the #15 screws.




G1 – x2




W – x2



G2 – x2



1# – x16



G1

W


G2


Assemble the side beam

- (1) Insert the Beam Connector #W into the beam #G1, align the holes and secure with 4 bolts #1.
- (2) Insert the other side of the Beam Connector #W into the beam #G2, align the holes and secure with 4 bolts #1.

Repeat above procedures to assemble #W with #G1 and #G2.


x2

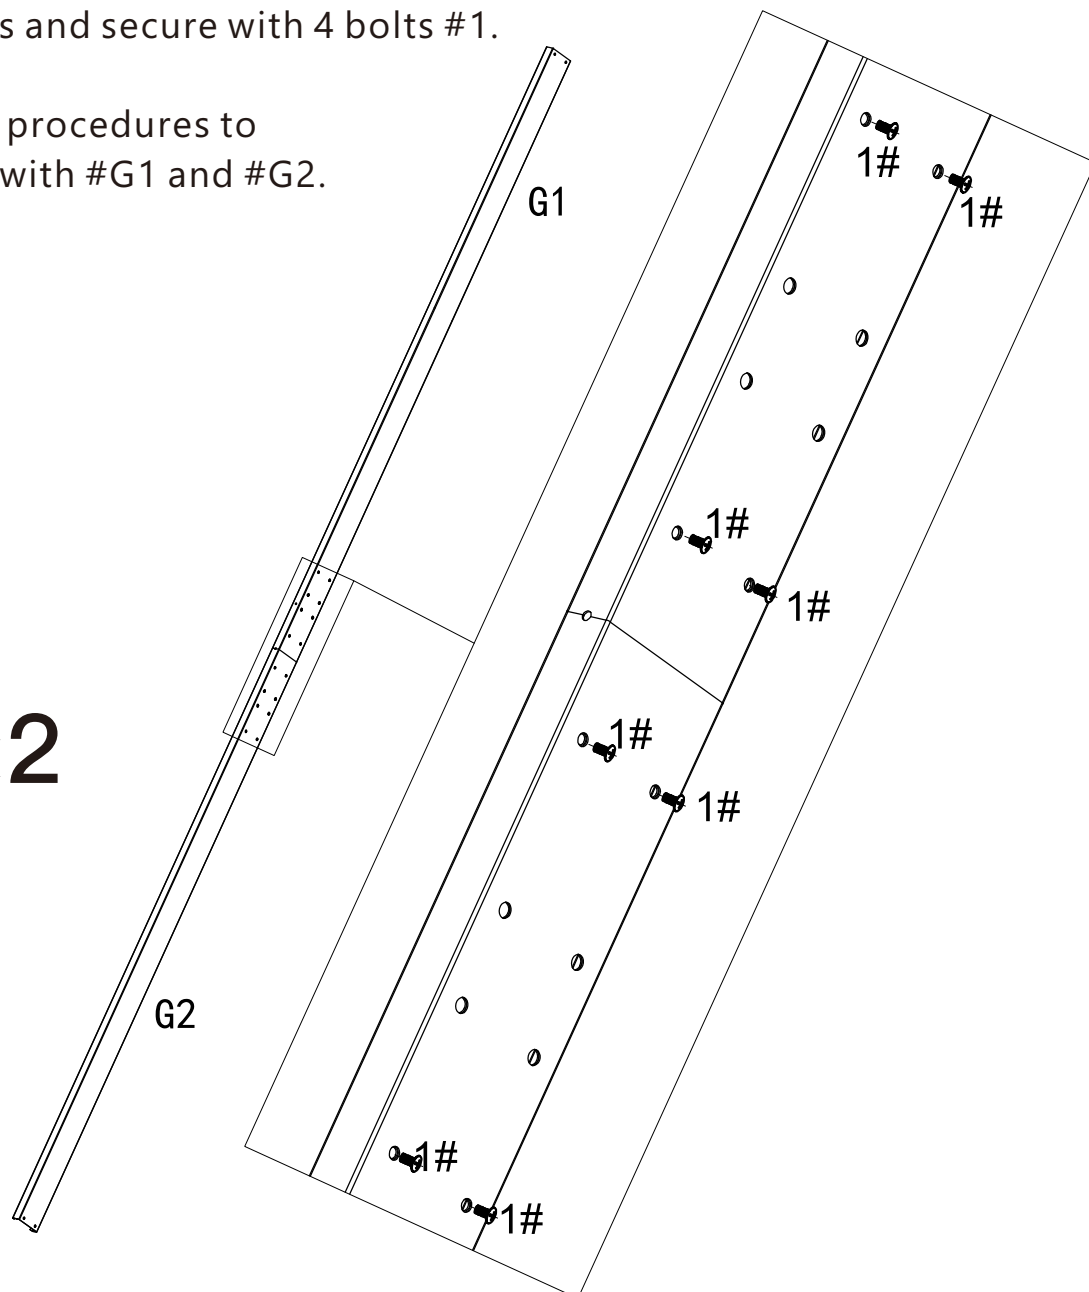




3# — x8




Use 8 bolts #3 and 8 nuts to secure support tubes #F3/#F5 with centre beam #G1/#G2.

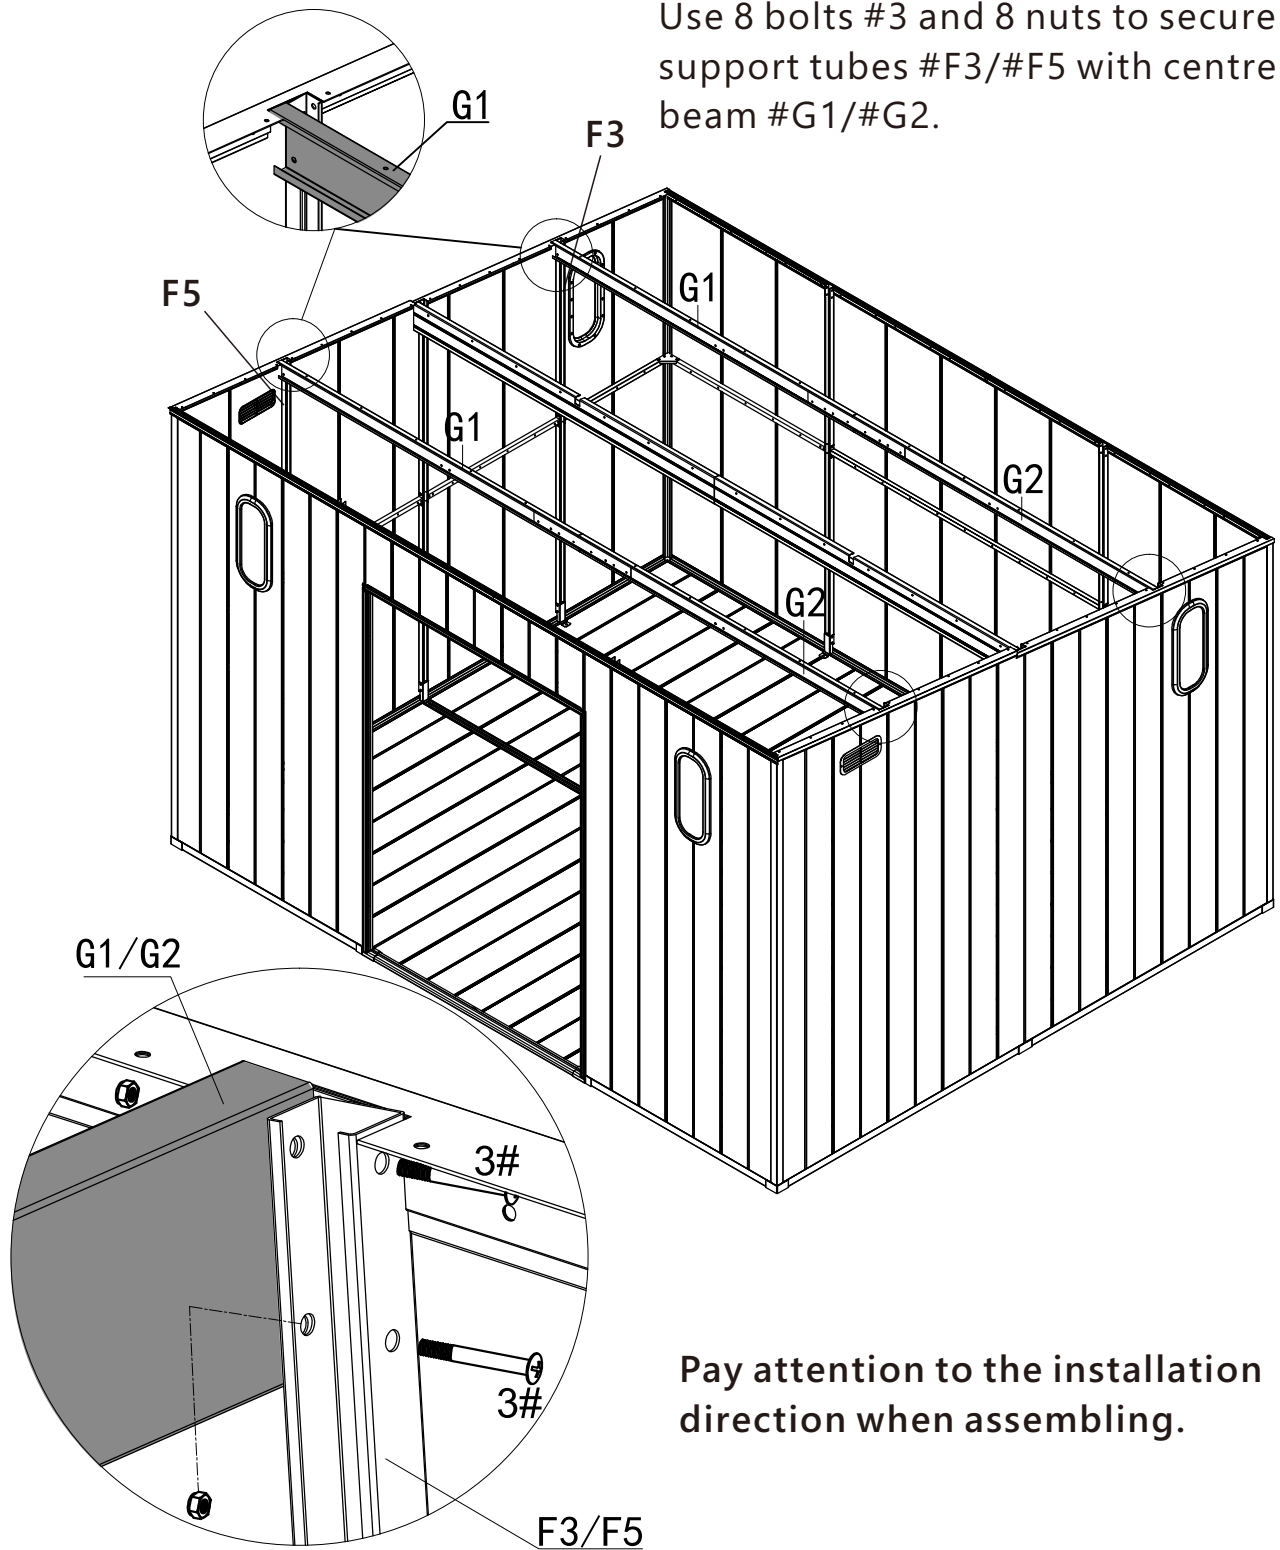



Pay attention to the installation direction when assembling.

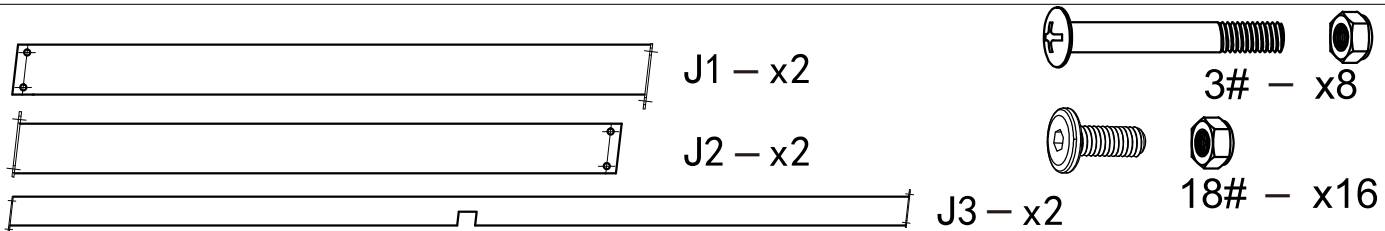


Assemble the crossbeam

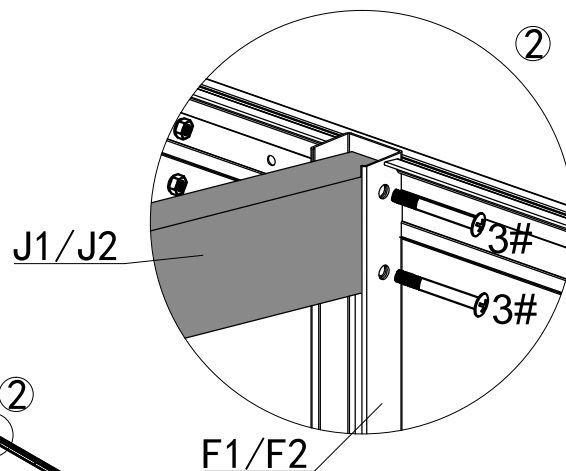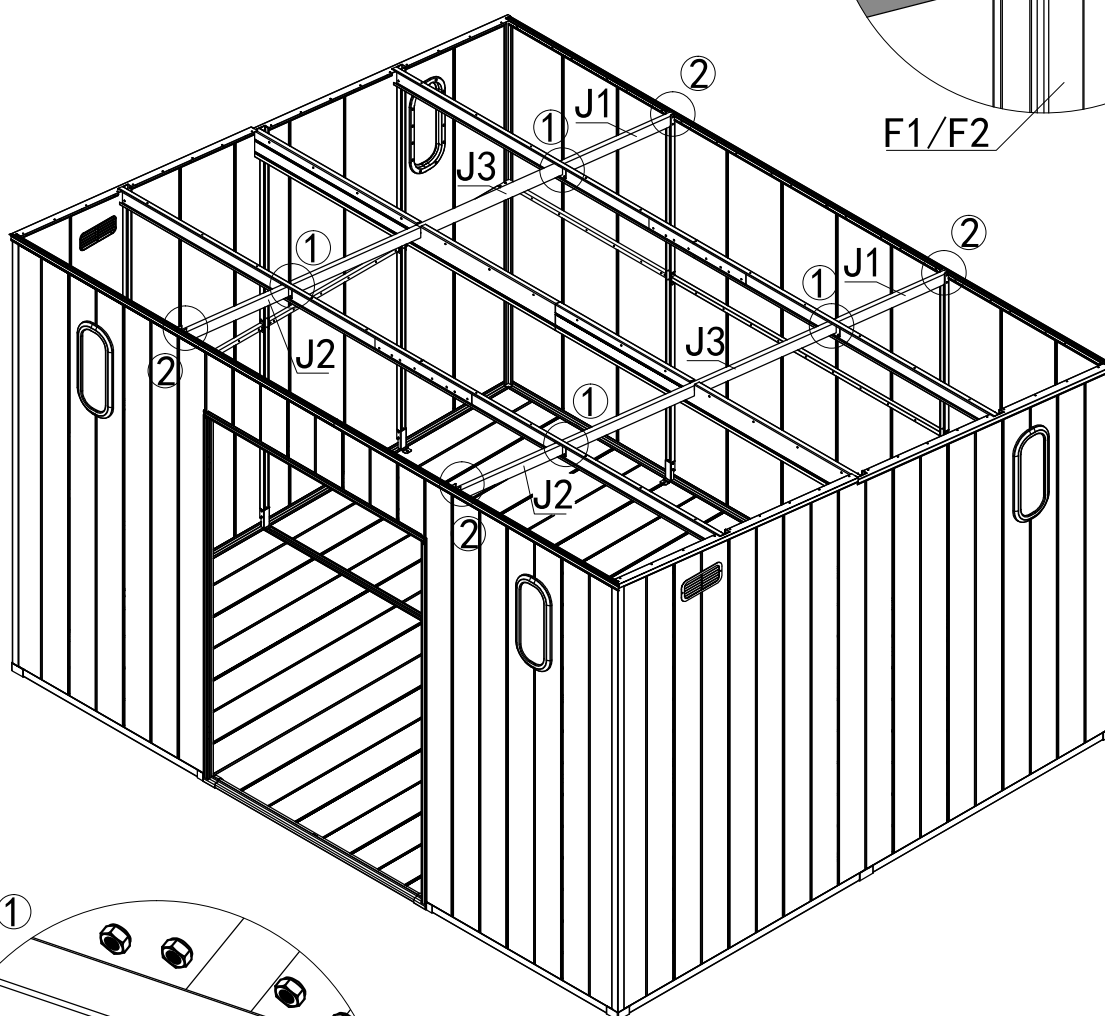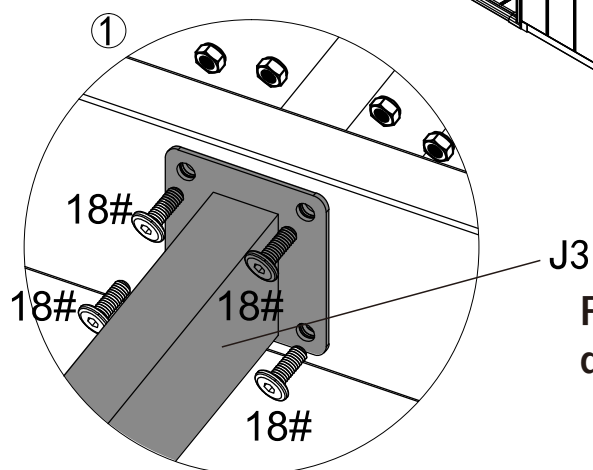


Pay attention to the installation direction when assembling.

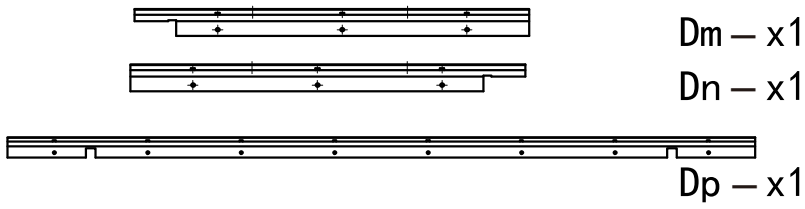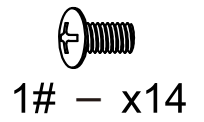

Assemble the roof partition slot panel

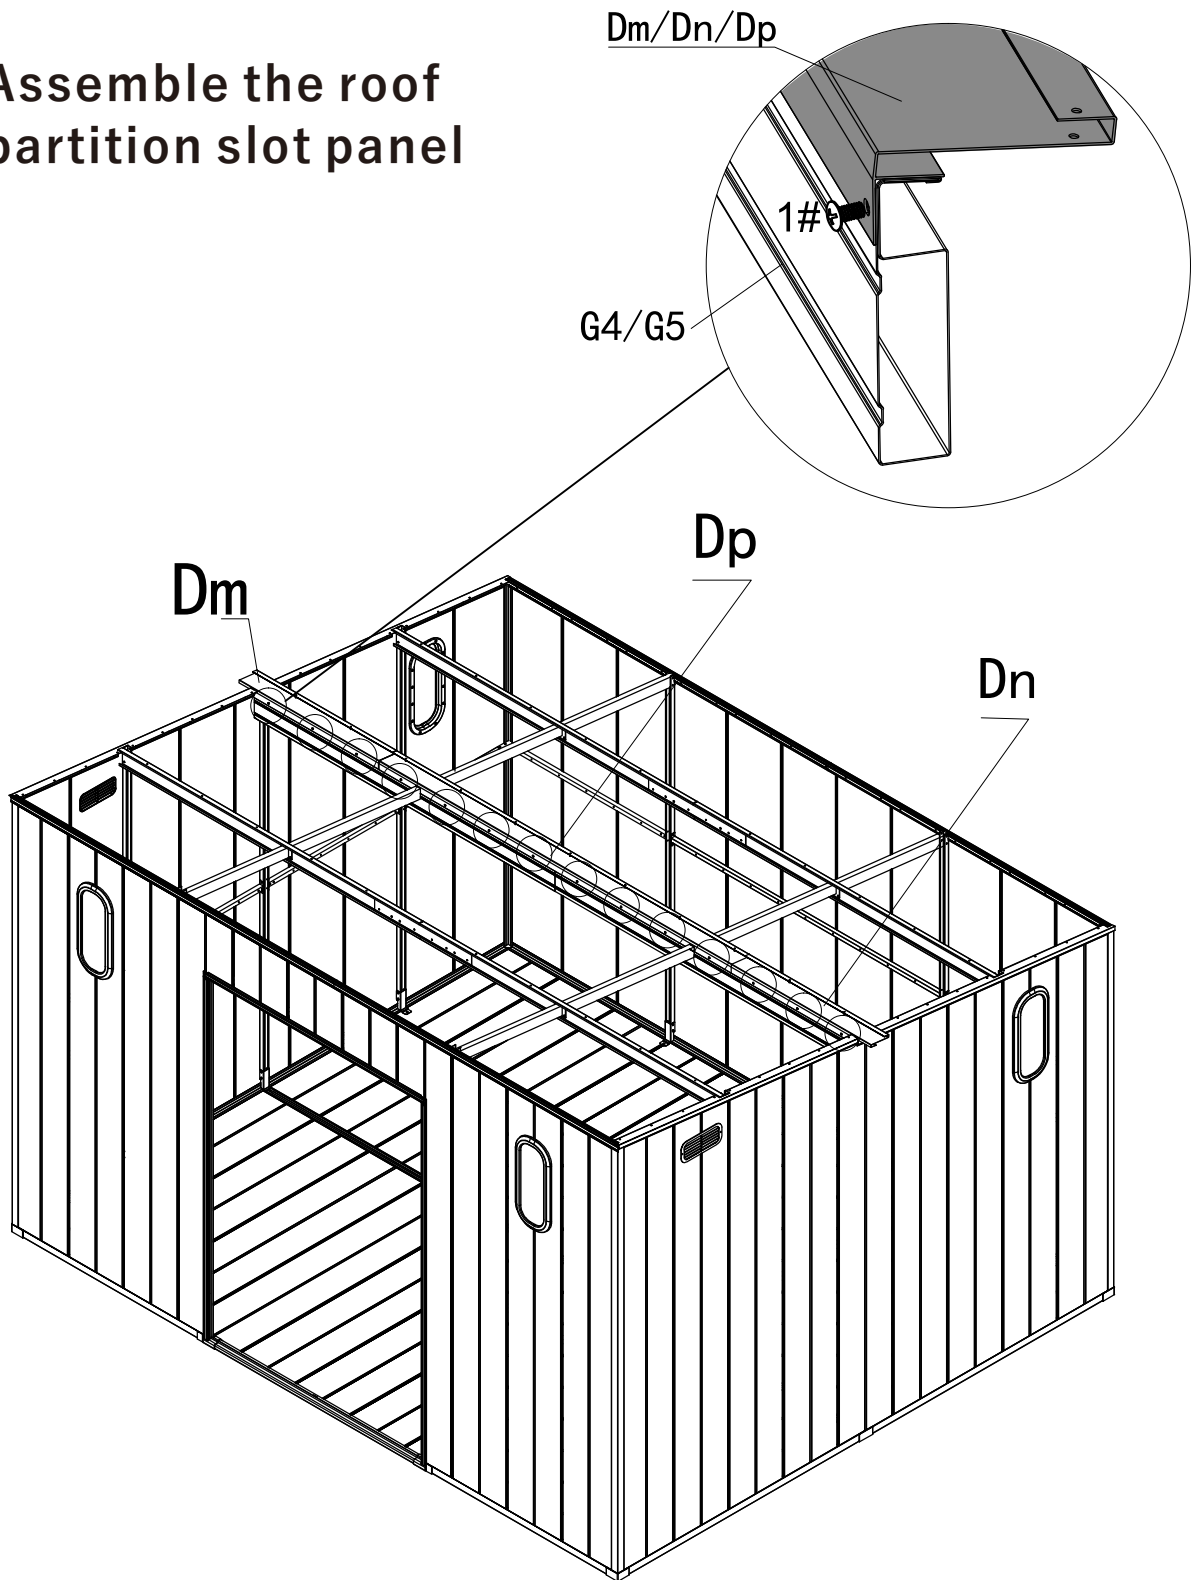

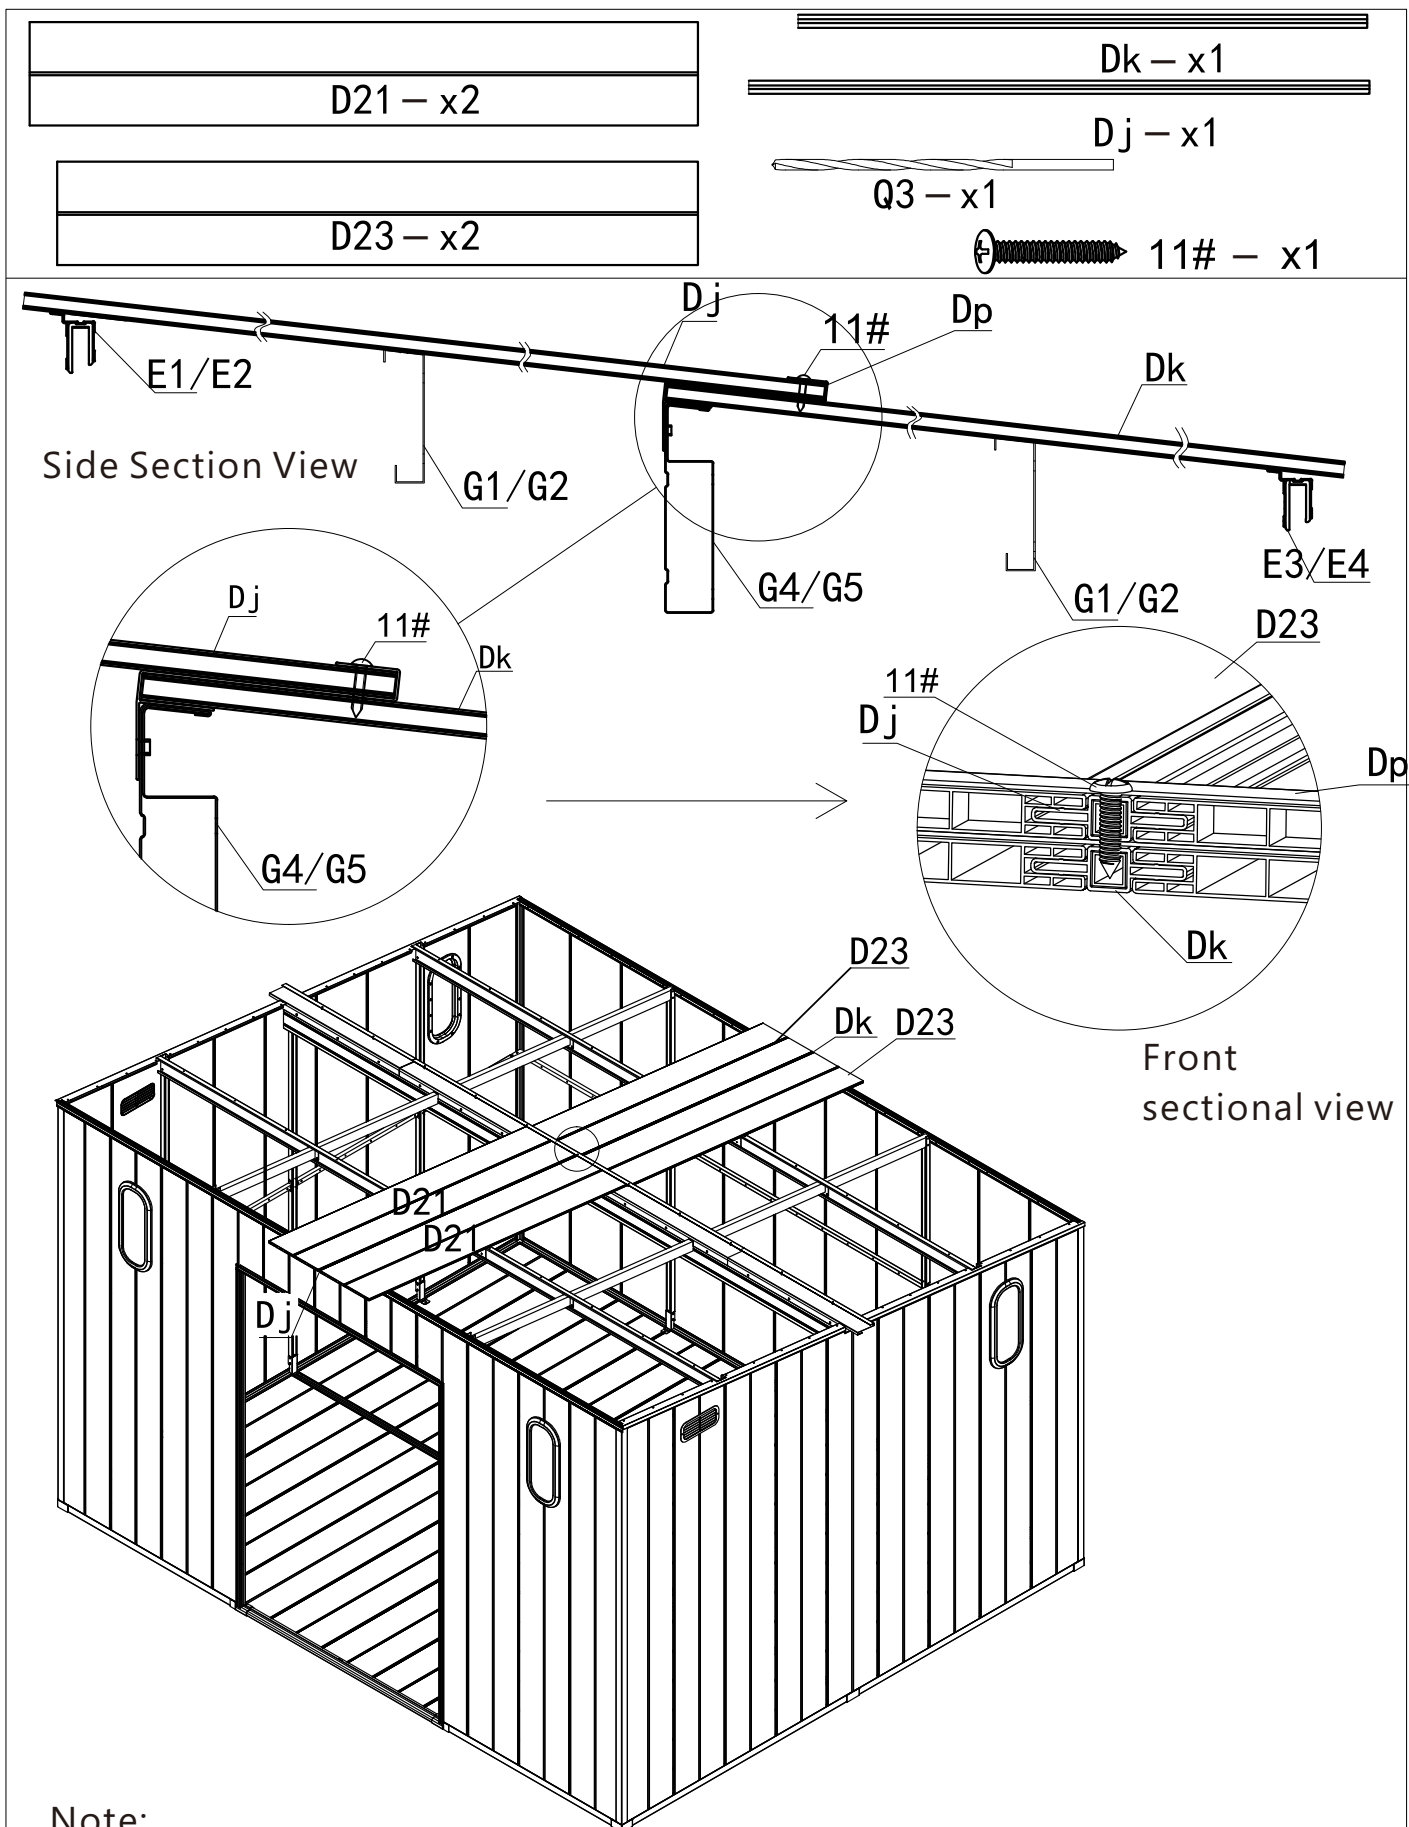


Note:



There are pilot holes on the roof partition slot panel #Dm/#Dn/#Dp, align the holes with the connecting rods #Dj (drill a hole through) and #Dk (DO NOT drill a hole through). Then secure with 1 Screw #11 as shown.

16# — x4


Q3 — x1

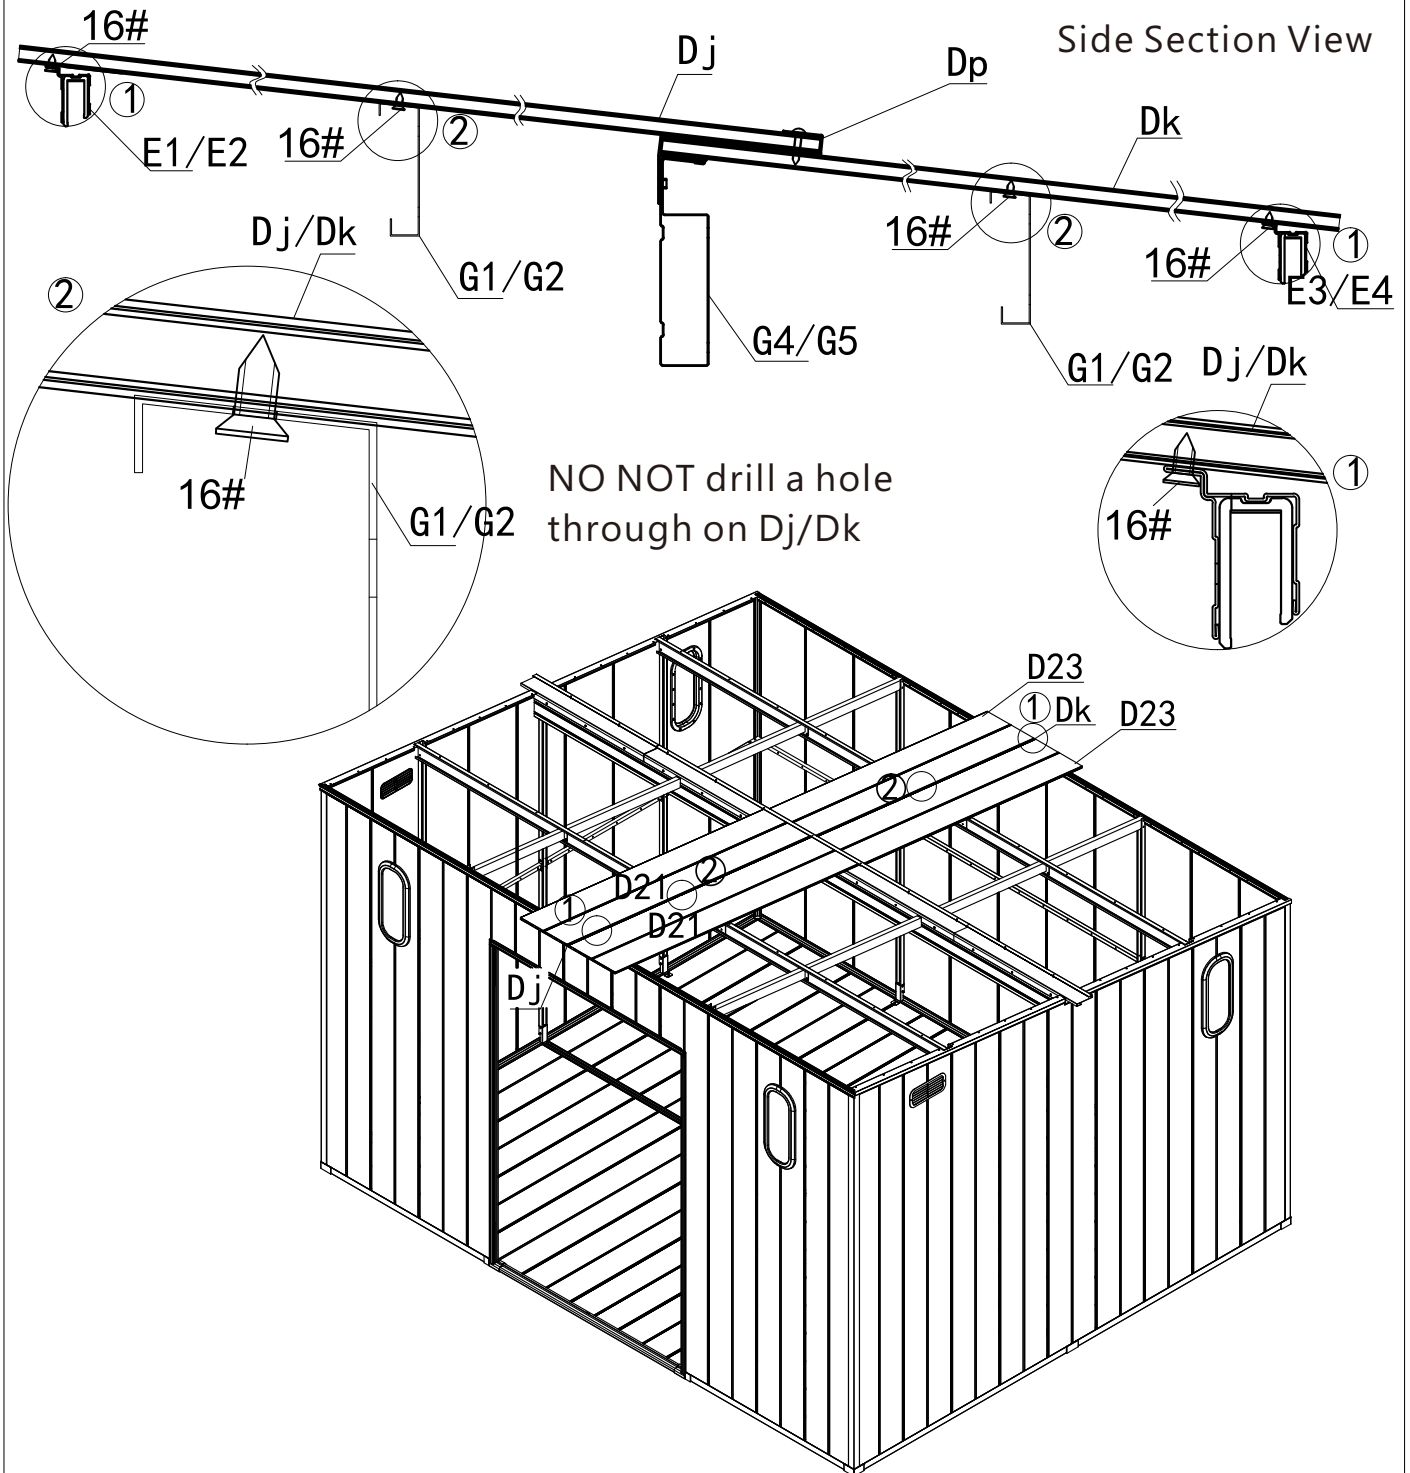





There are pilot holes on the top frame #E1/#E2/#E3/#E4 and side beam #G1/#G2, align the holes with the connecting rods #Dj (DO NOT drill a hole through) and #Dk (DO NOT drill a hole through). Then secure with 1 Screw #16 (from bottom to top).

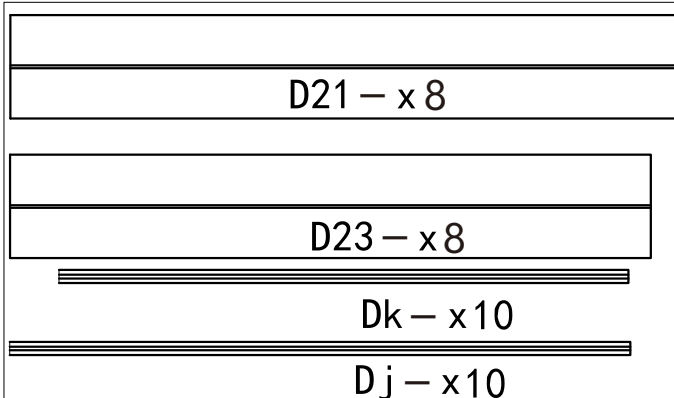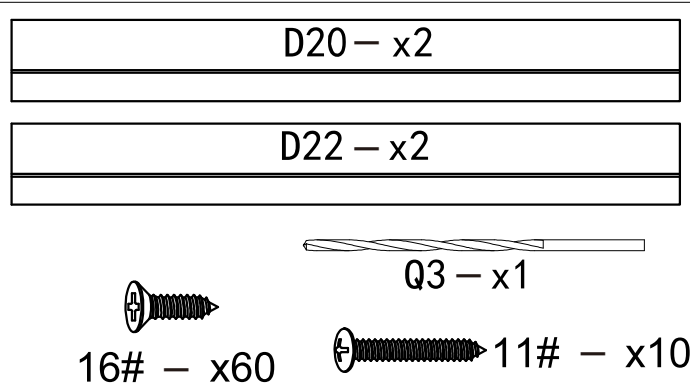

DO NOT drill
a hole through

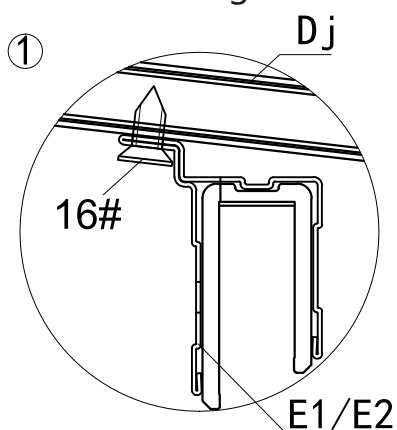

DO NOT drill
a hole through Dj/Dk

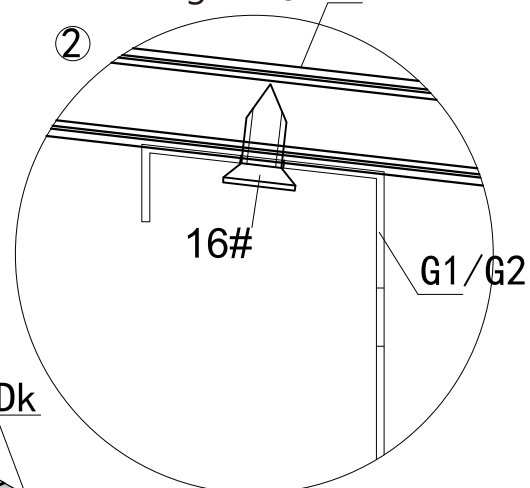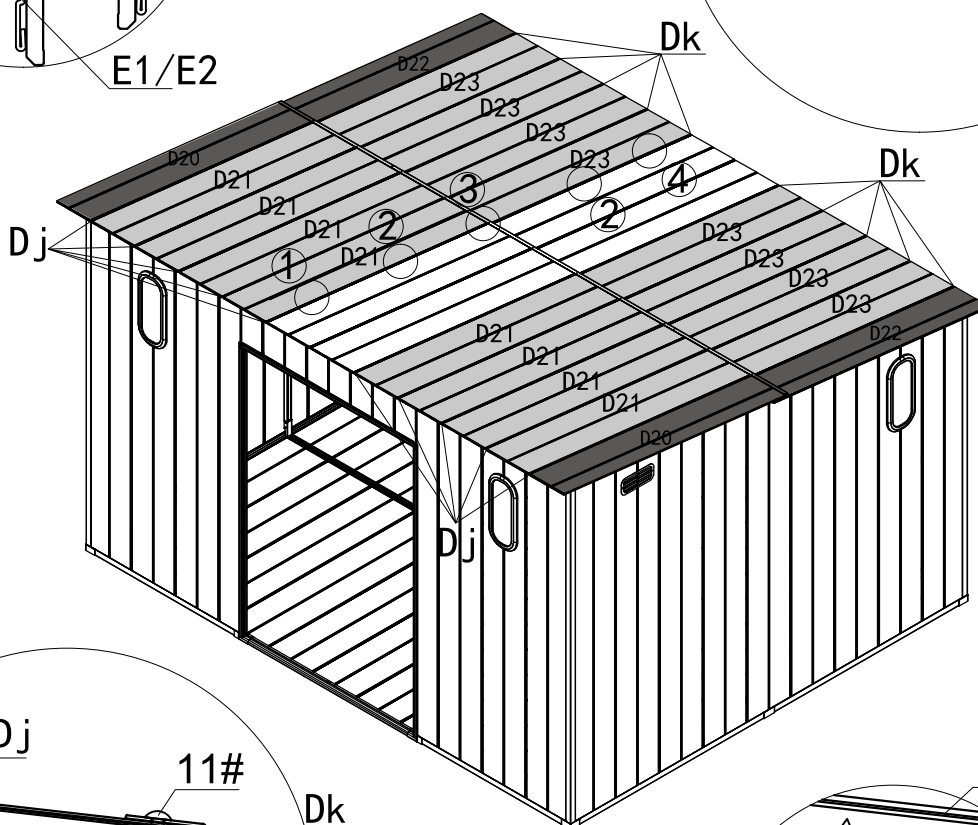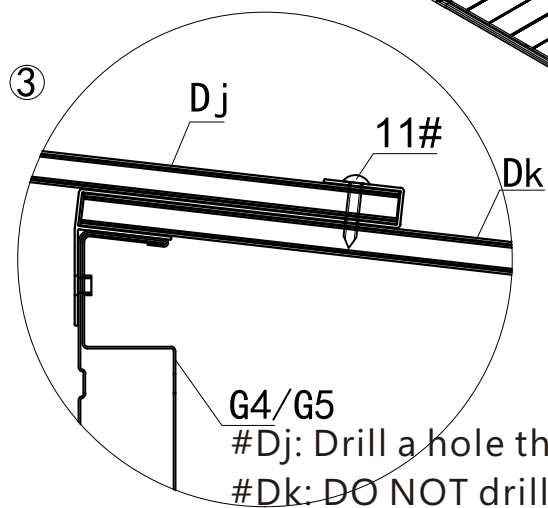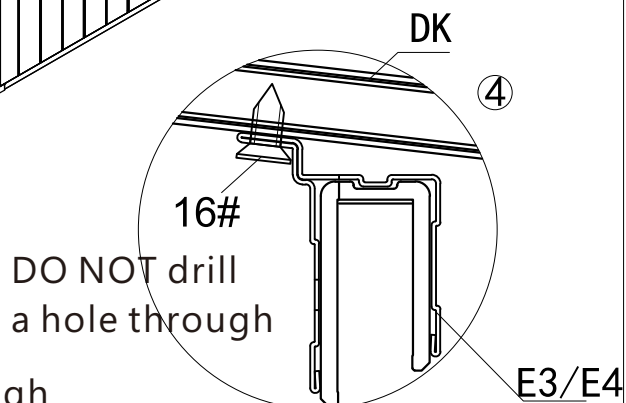

① Use 10 screws #16 to secure the connecting rods #Dj with the metal top frame #E1/#E2. Then use 12 screws #16 to secure the roof panel #D20/#D21/with metal top frame #E1/#E2.

② Use 10 screws #16 to secure the connecting rods #Dj/#Dk with the side beam #G1/#G2.


③ Use 10 screws #11 to secure the connecting rods #Dj (drill a hole through) with #Dk (DO NOT drill a hole through).

④ Use 10 screws #16 to secure the connecting rods #Dk with the metal top frame #E3/#E4. Then use 8 screws #16 to secure the roof panel #D22/#D23 with metal top frame #E3/#E4.

Since the inner linings of the connecting rods are fitted with metal tubes, it is necessary to pre-drill the screw holes with a 3.2 mm drill bit #Q3 before installing screws.




16# – x36

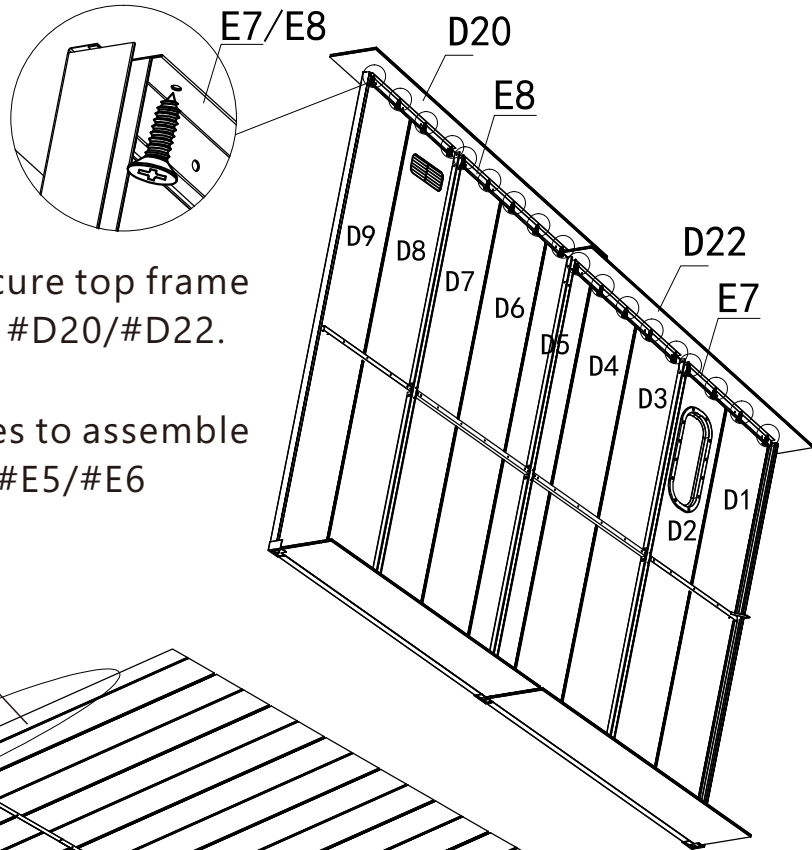


Use 18 screws #16 to secure top frame #E7/#E8 with roof panel #D20/#D22.

Repeat above procedures to assemble another side: top frame #E5/#E6 with roof panel.

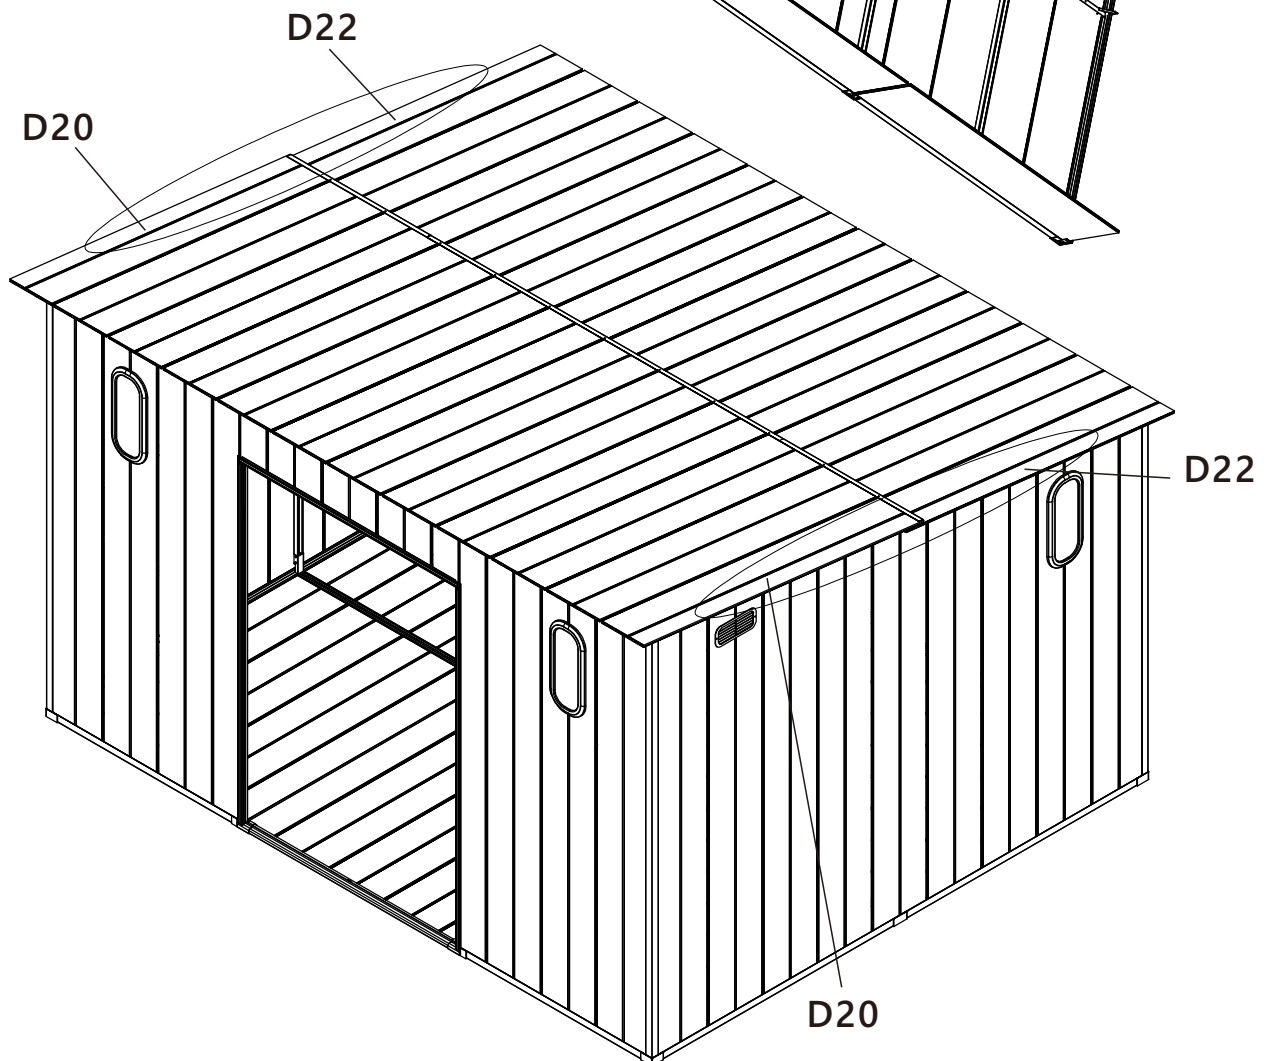




C2 - x1
C3 - x1
C4 - x1
C5 - x1
C6 - x4

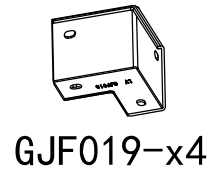

GJF019-x4





4# - x8




17# - x74

Assemble the finishing bar and corner cover:

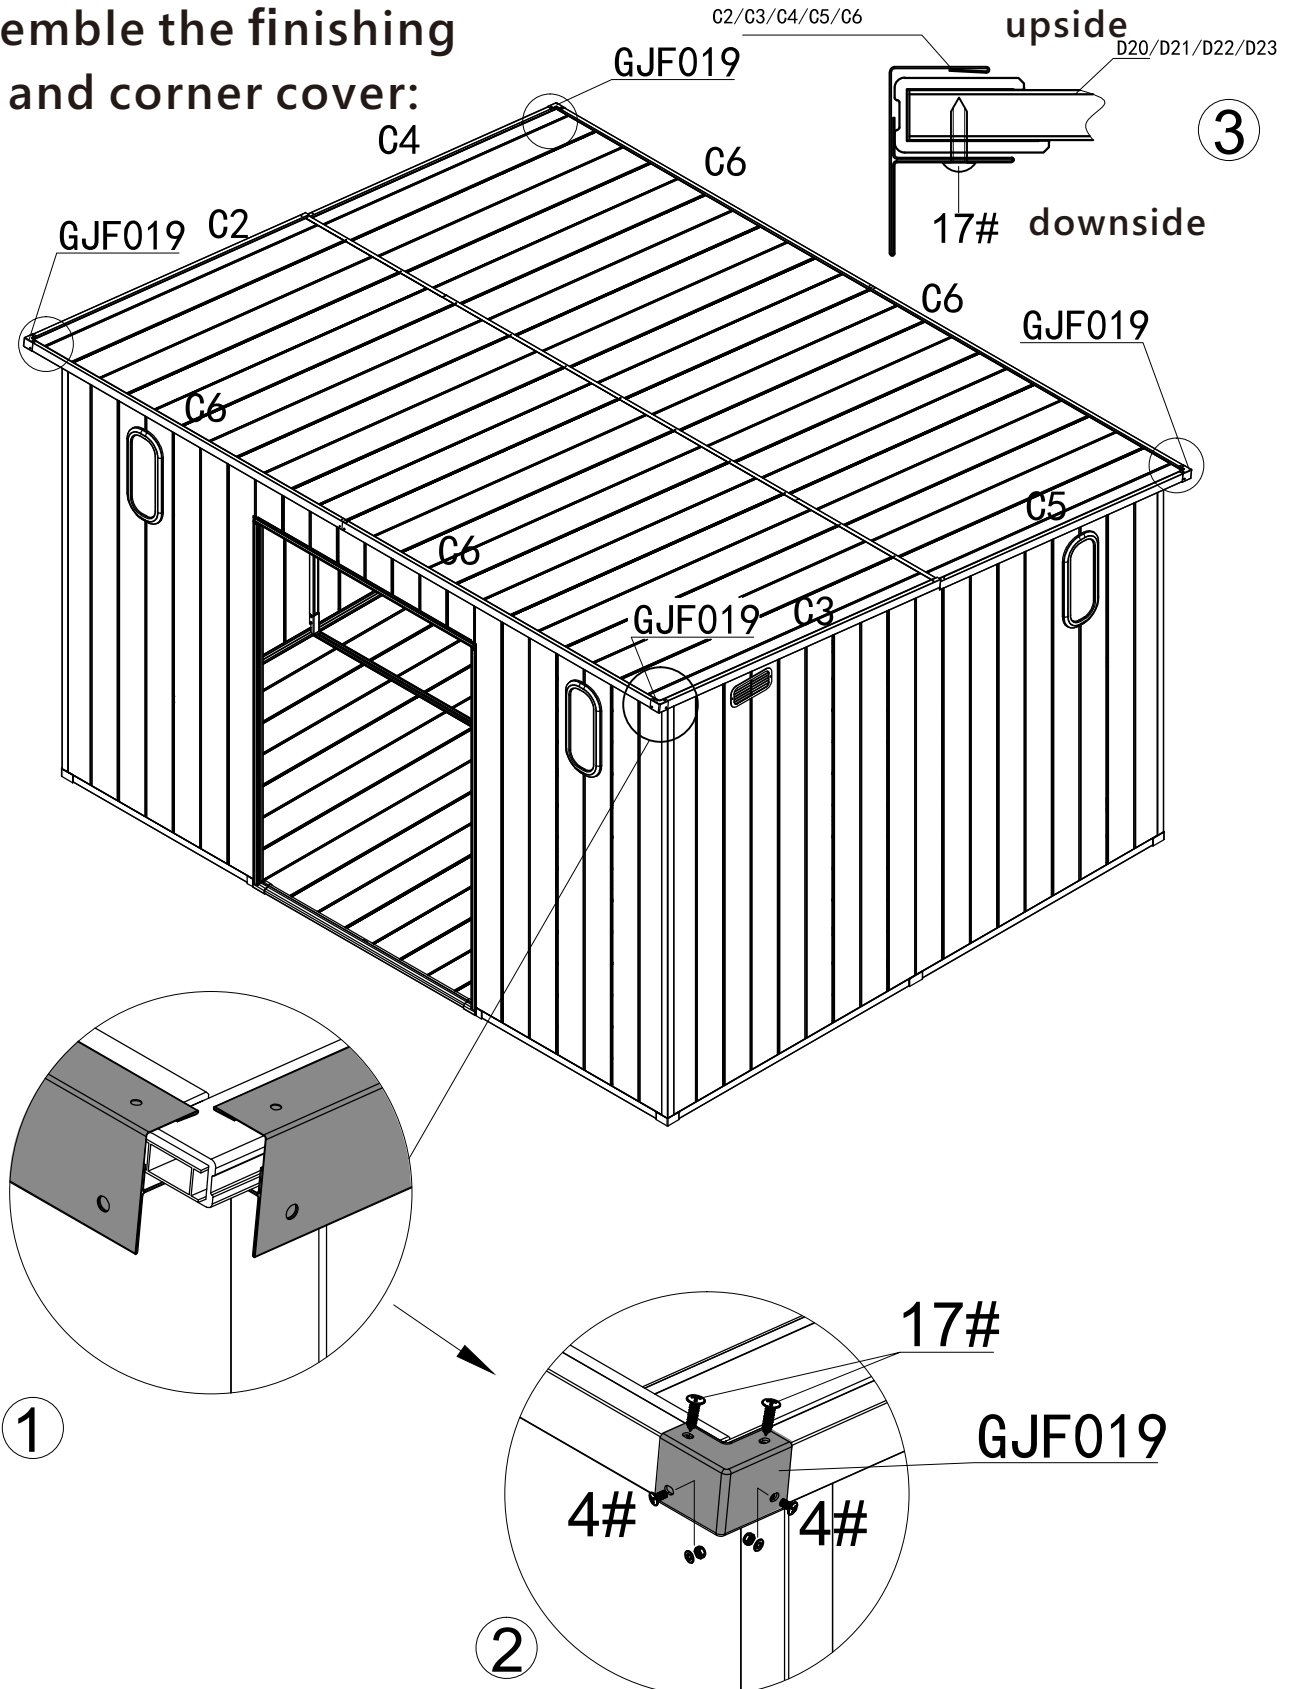


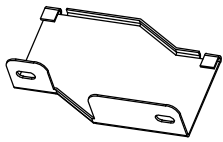


Q5 - x1

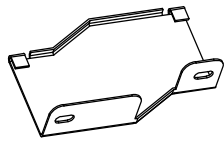

Q6 - x1



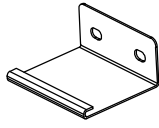



Q7 - x2




17# - x8

Assemble the gap cover

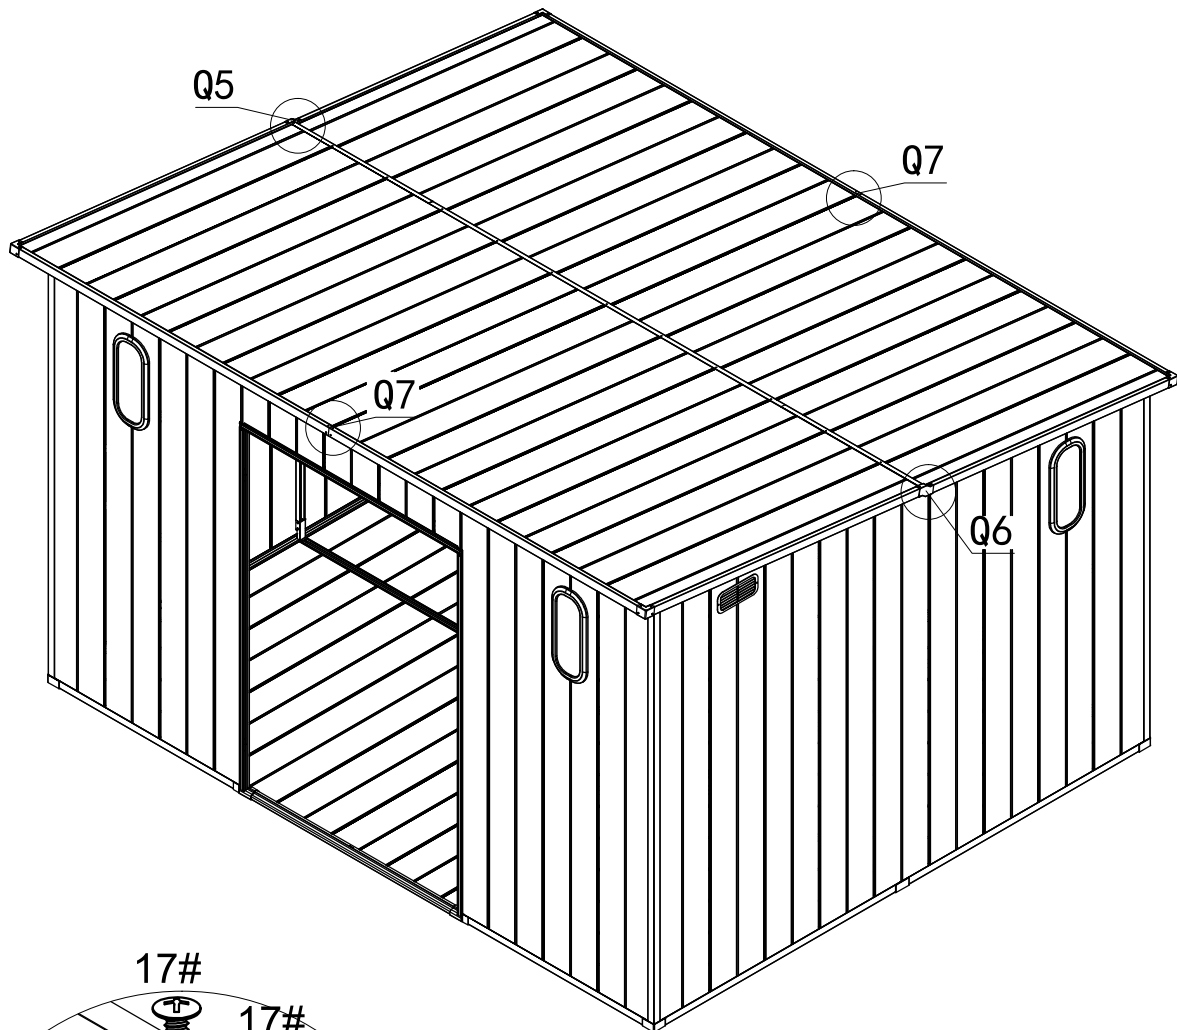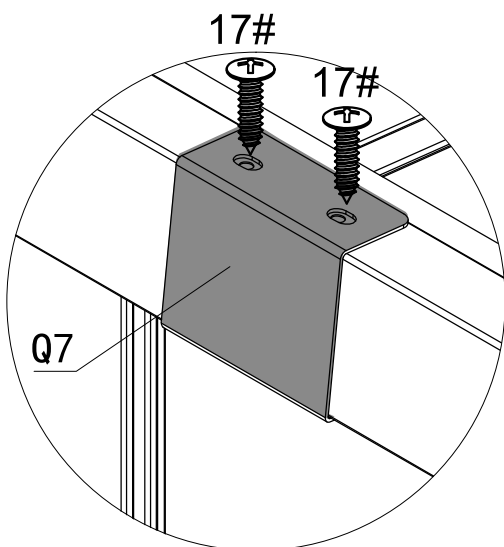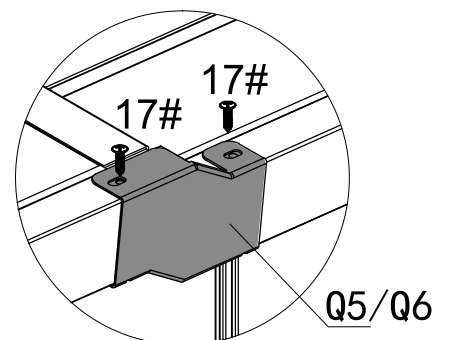




5# – x88




5#

5#

Downside
Section View

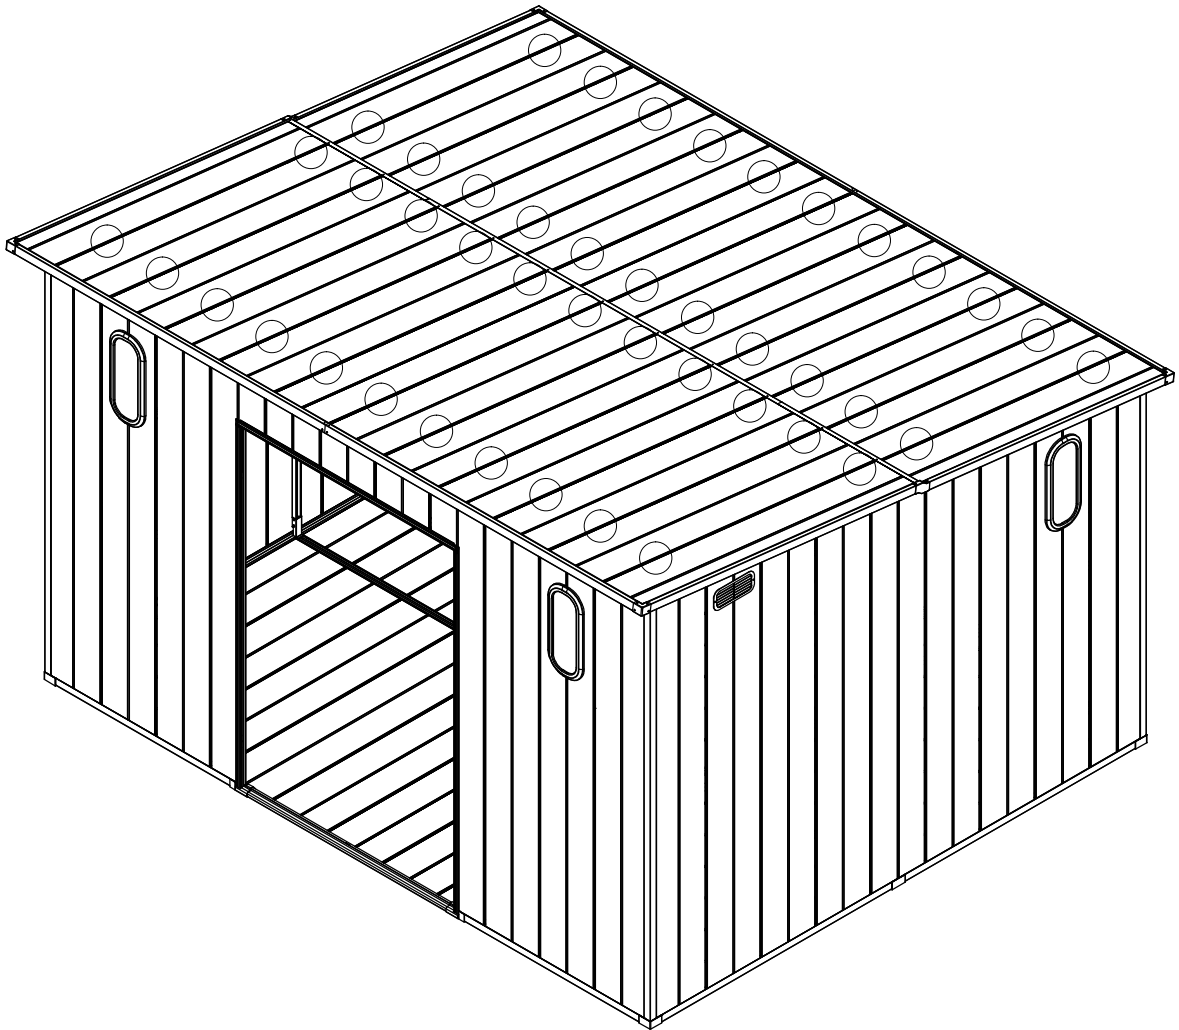

Use 88 screws #5 to secure the roof panels with connecting rods as shown from inside.





HY – x4




7# – x12

Assemble the hinges

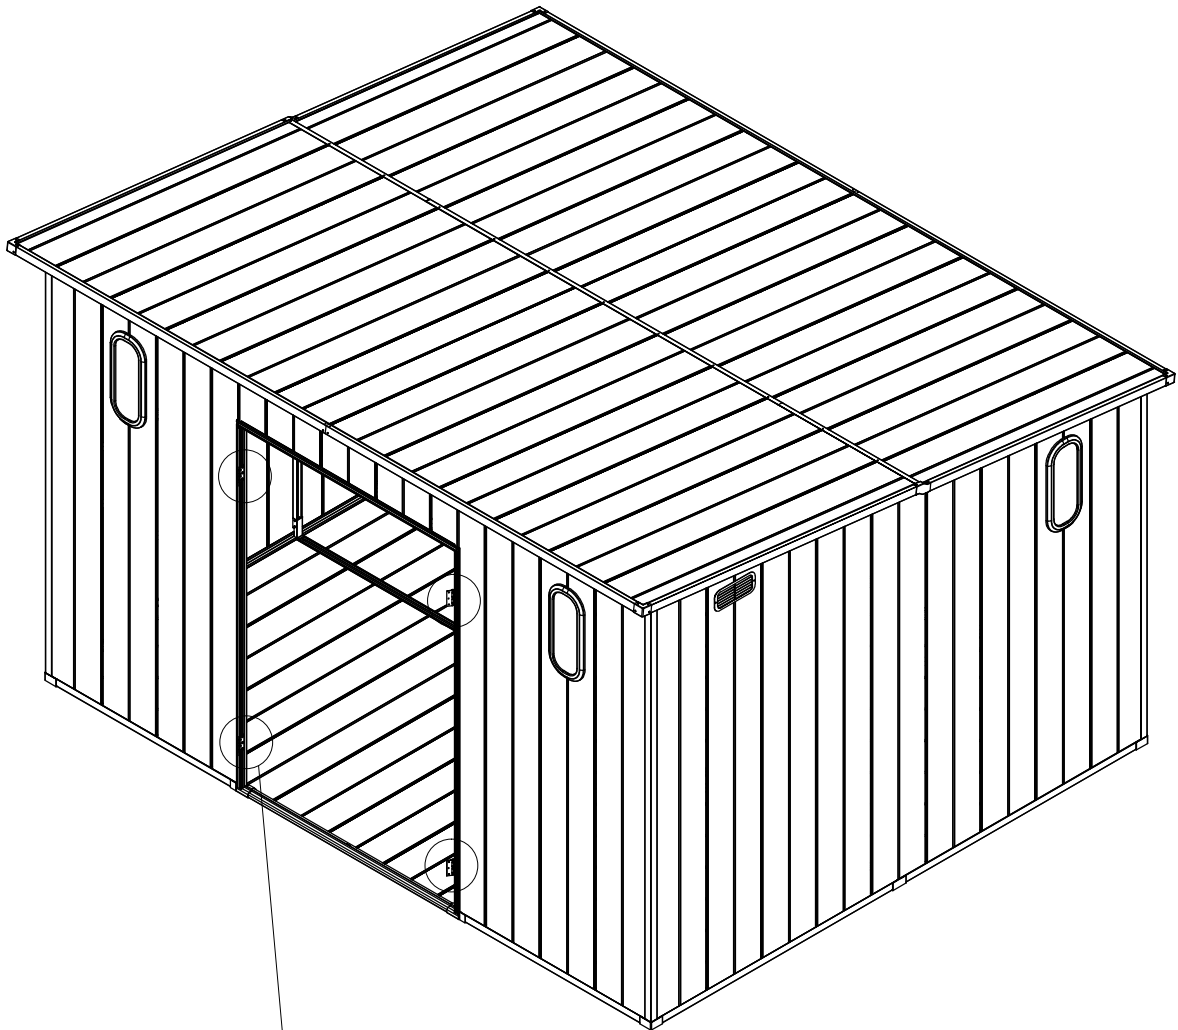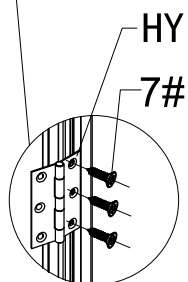


M2 – x1

M1 – x1




M6 – x1

Assemble the left door

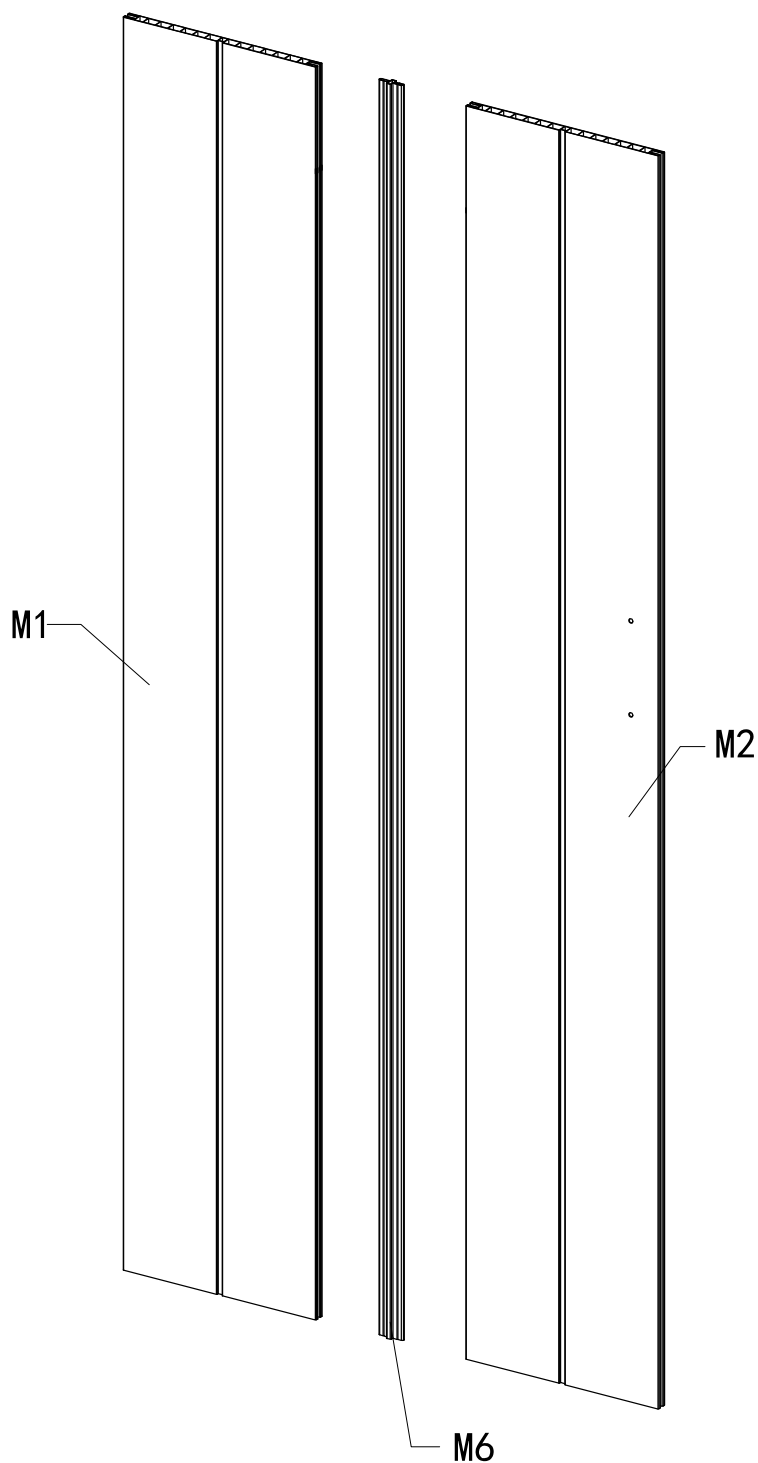


After the door panel is installed, it is necessary to measure whether the dimensions match the reference dimensions shown in the drawings (a small margin of error is acceptable) to ensure that the door can close smoothly.




6# — x8

Inside View

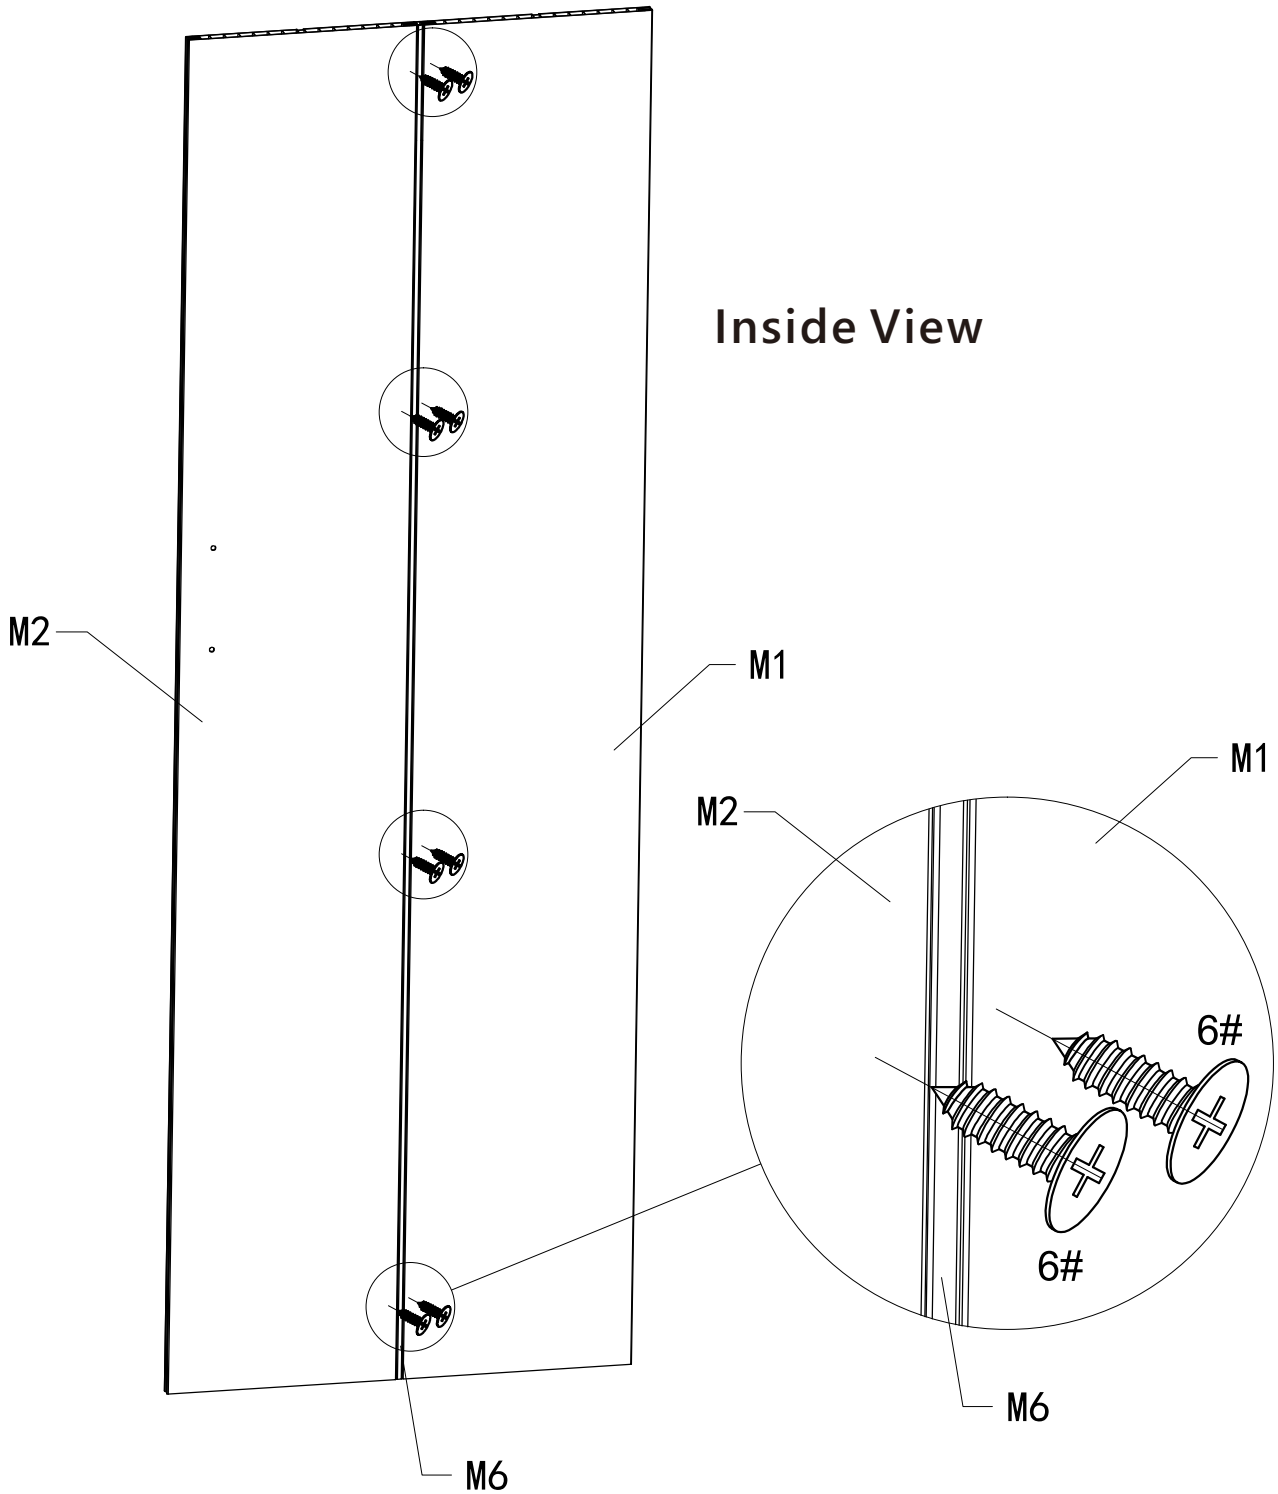




Assemble the door frame

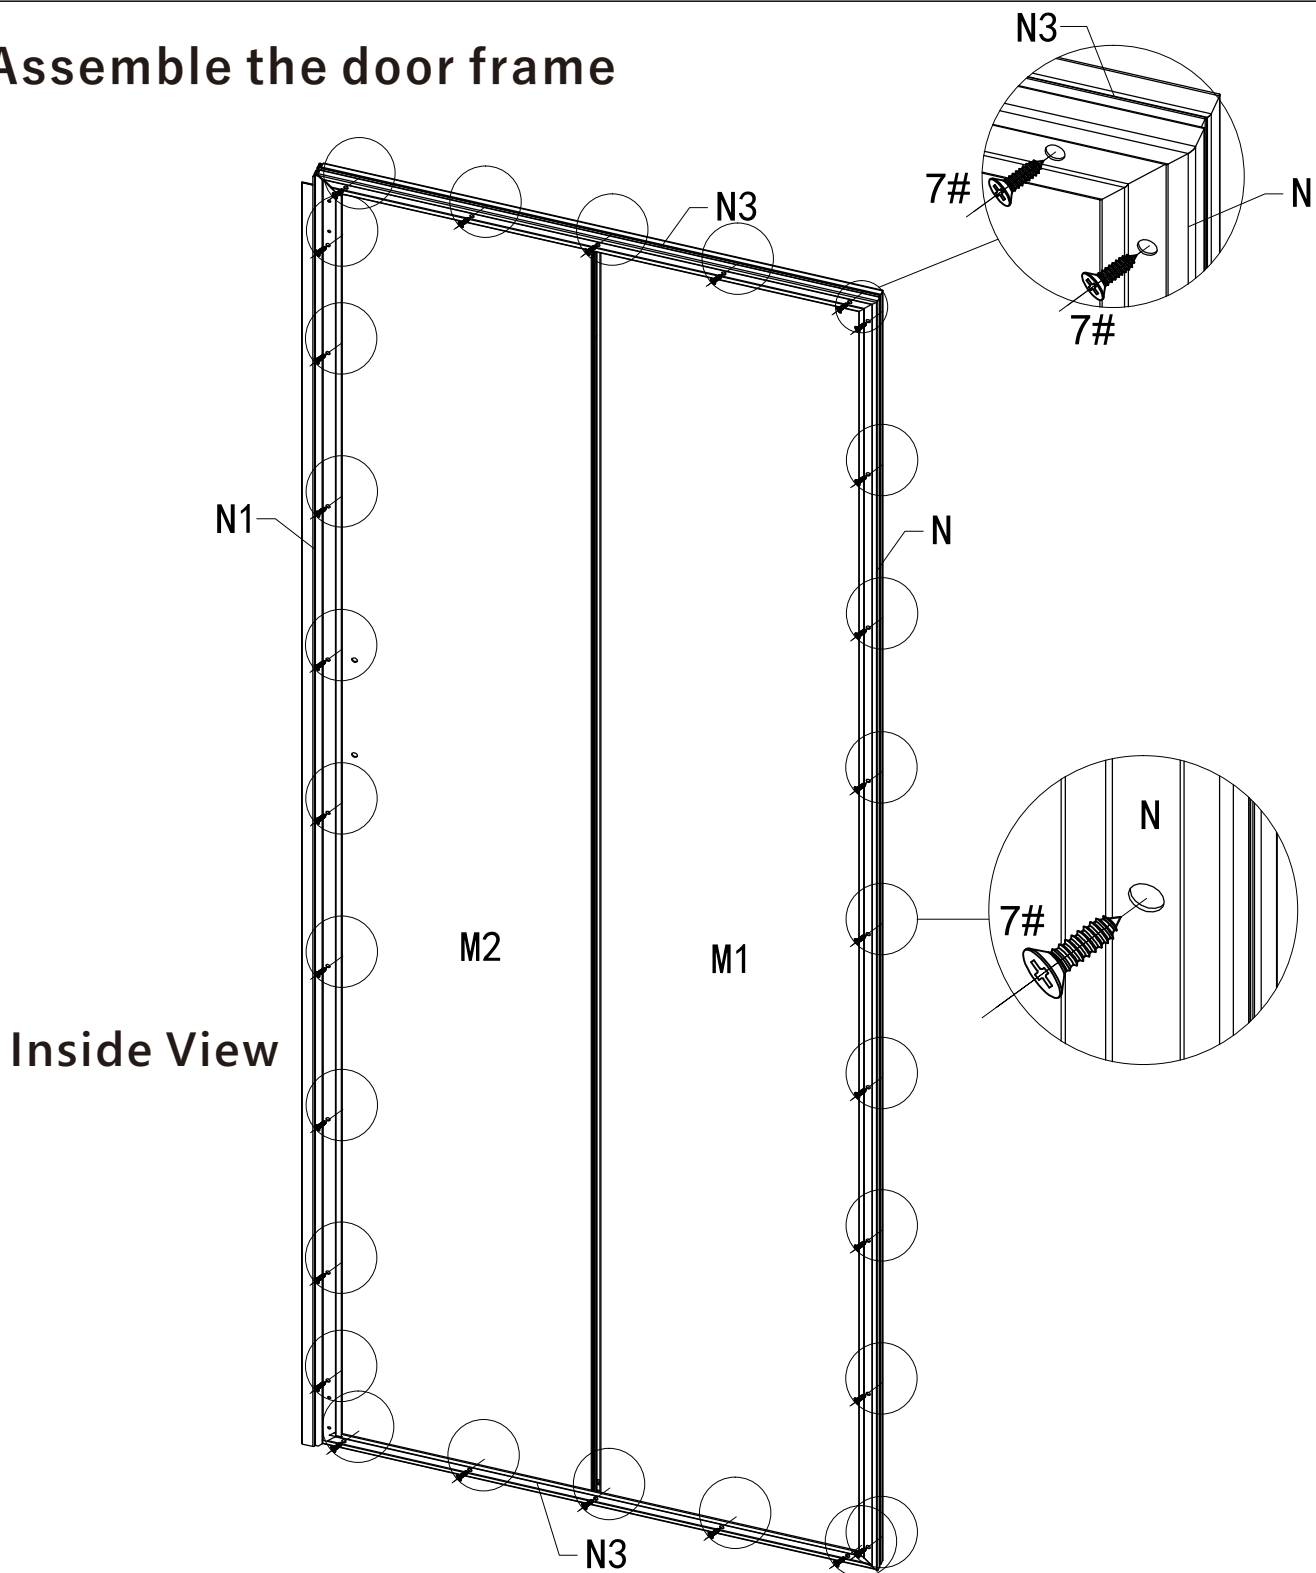





GJF016-x1

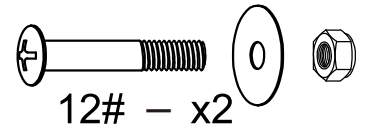


Door Handle Assembly

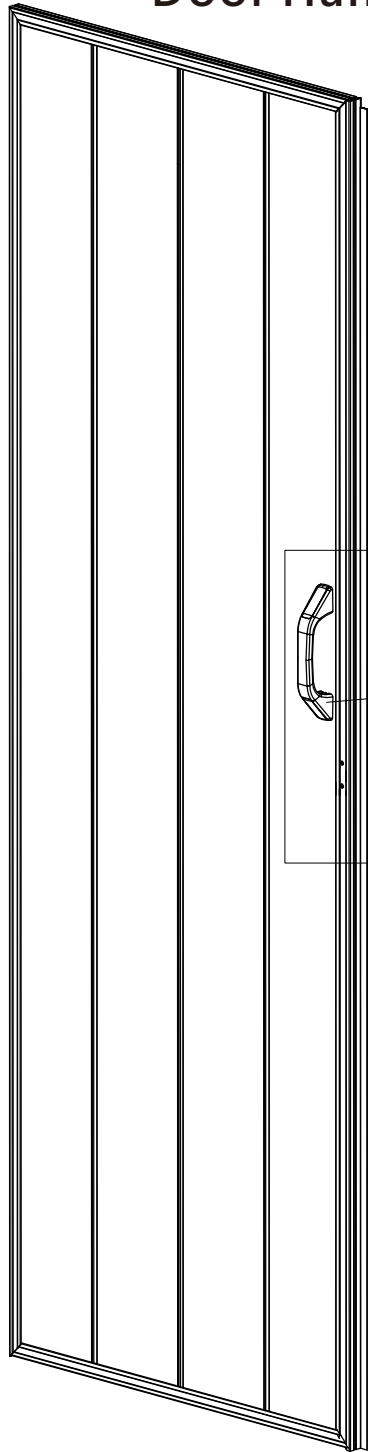

Outside View

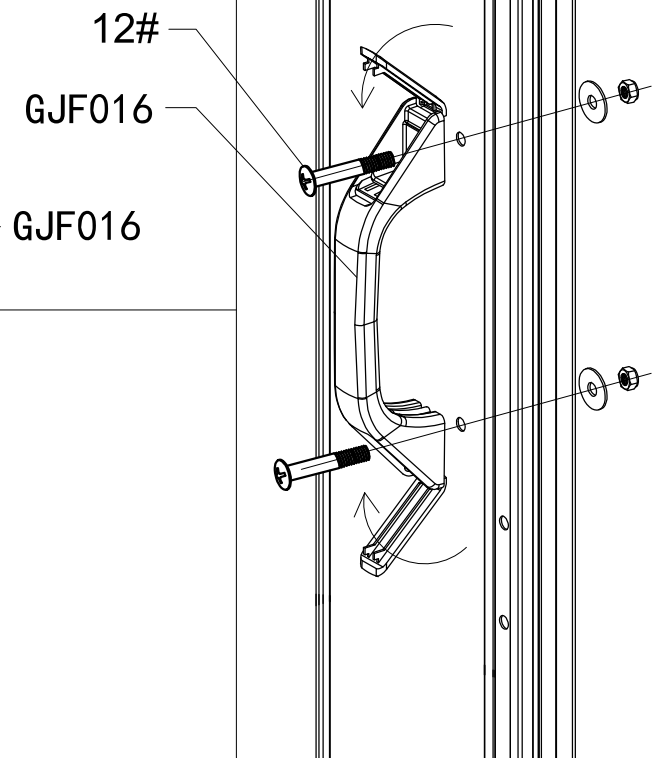

The Door Handle has two covers, close the lid after fixing the 2 Bolts #12 and Nuts.



CX — x2



7# — x4







17# — x2



Q1 — x1

Install the top
and bottom
latches and #Q1

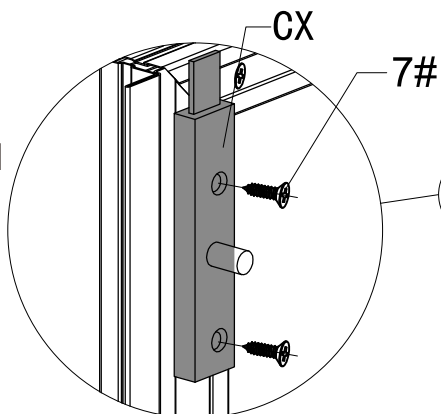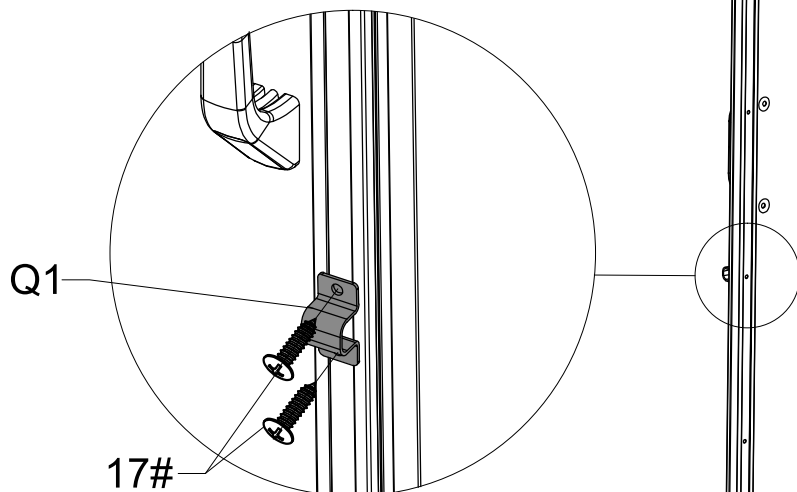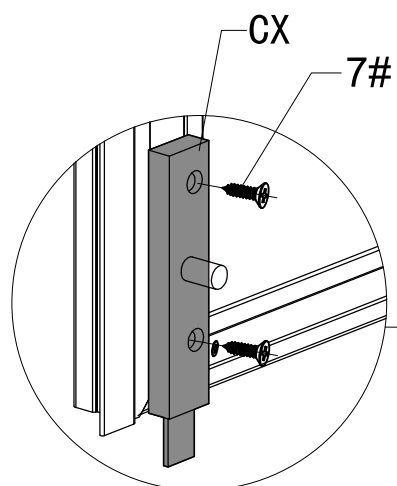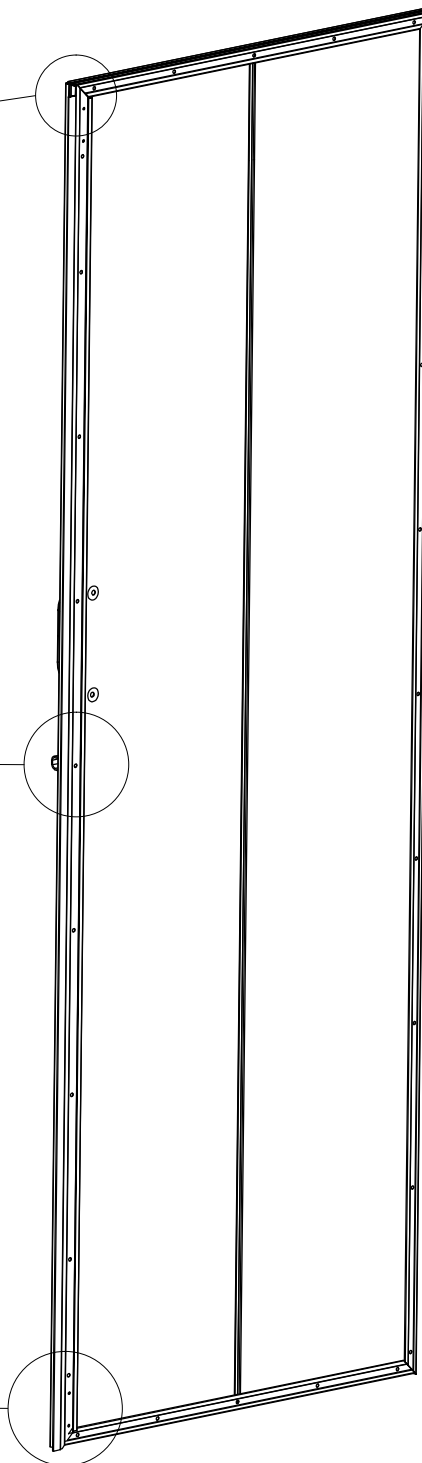

Inside View


M1 – x1

M3 – x1




M6 – x1

Assemble the right door

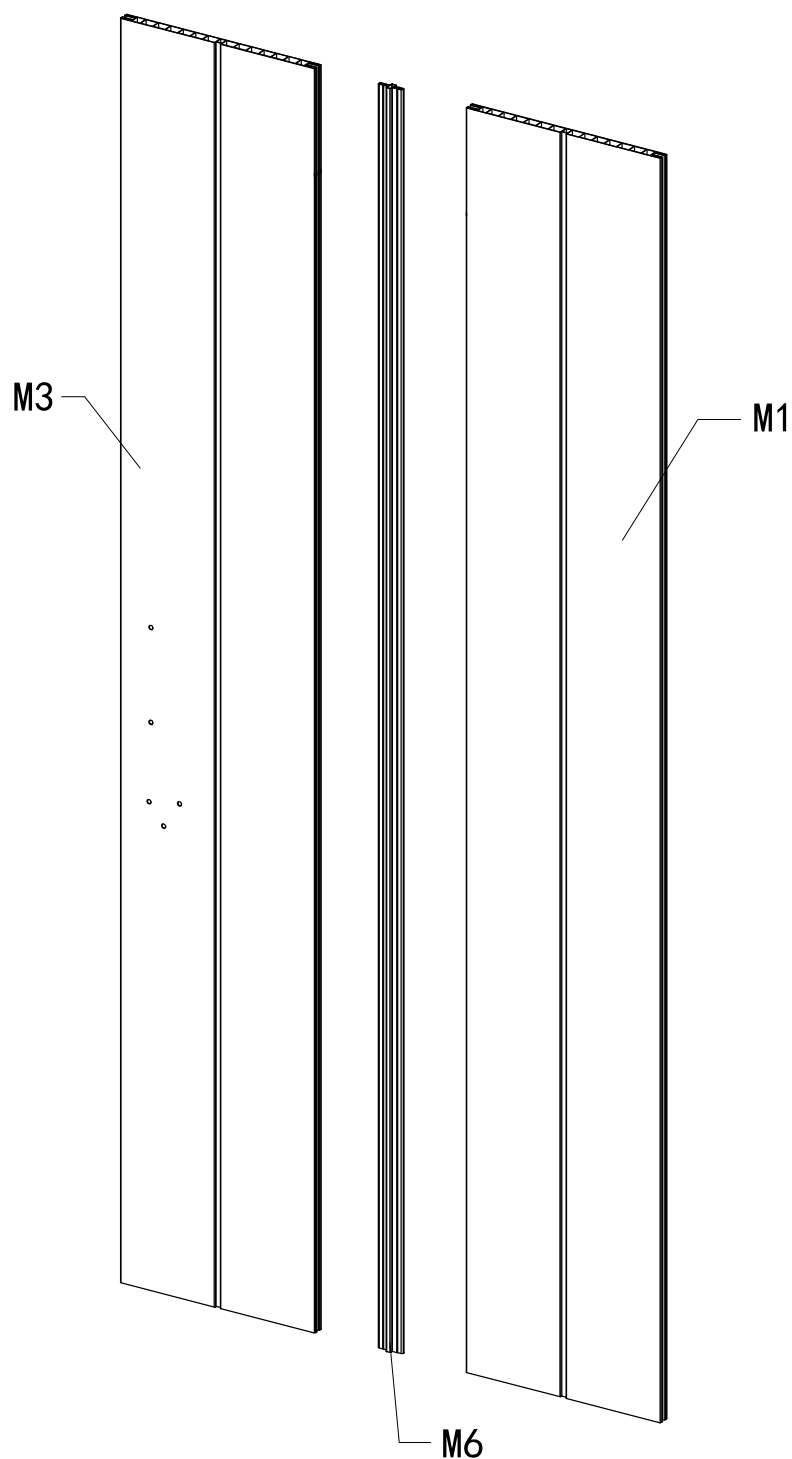




After the door panel is installed, it is necessary to measure whether the dimensions match the reference dimensions shown in the drawings (a small margin of error is acceptable) to ensure that the door can close smoothly.





6# — x8

Inside View

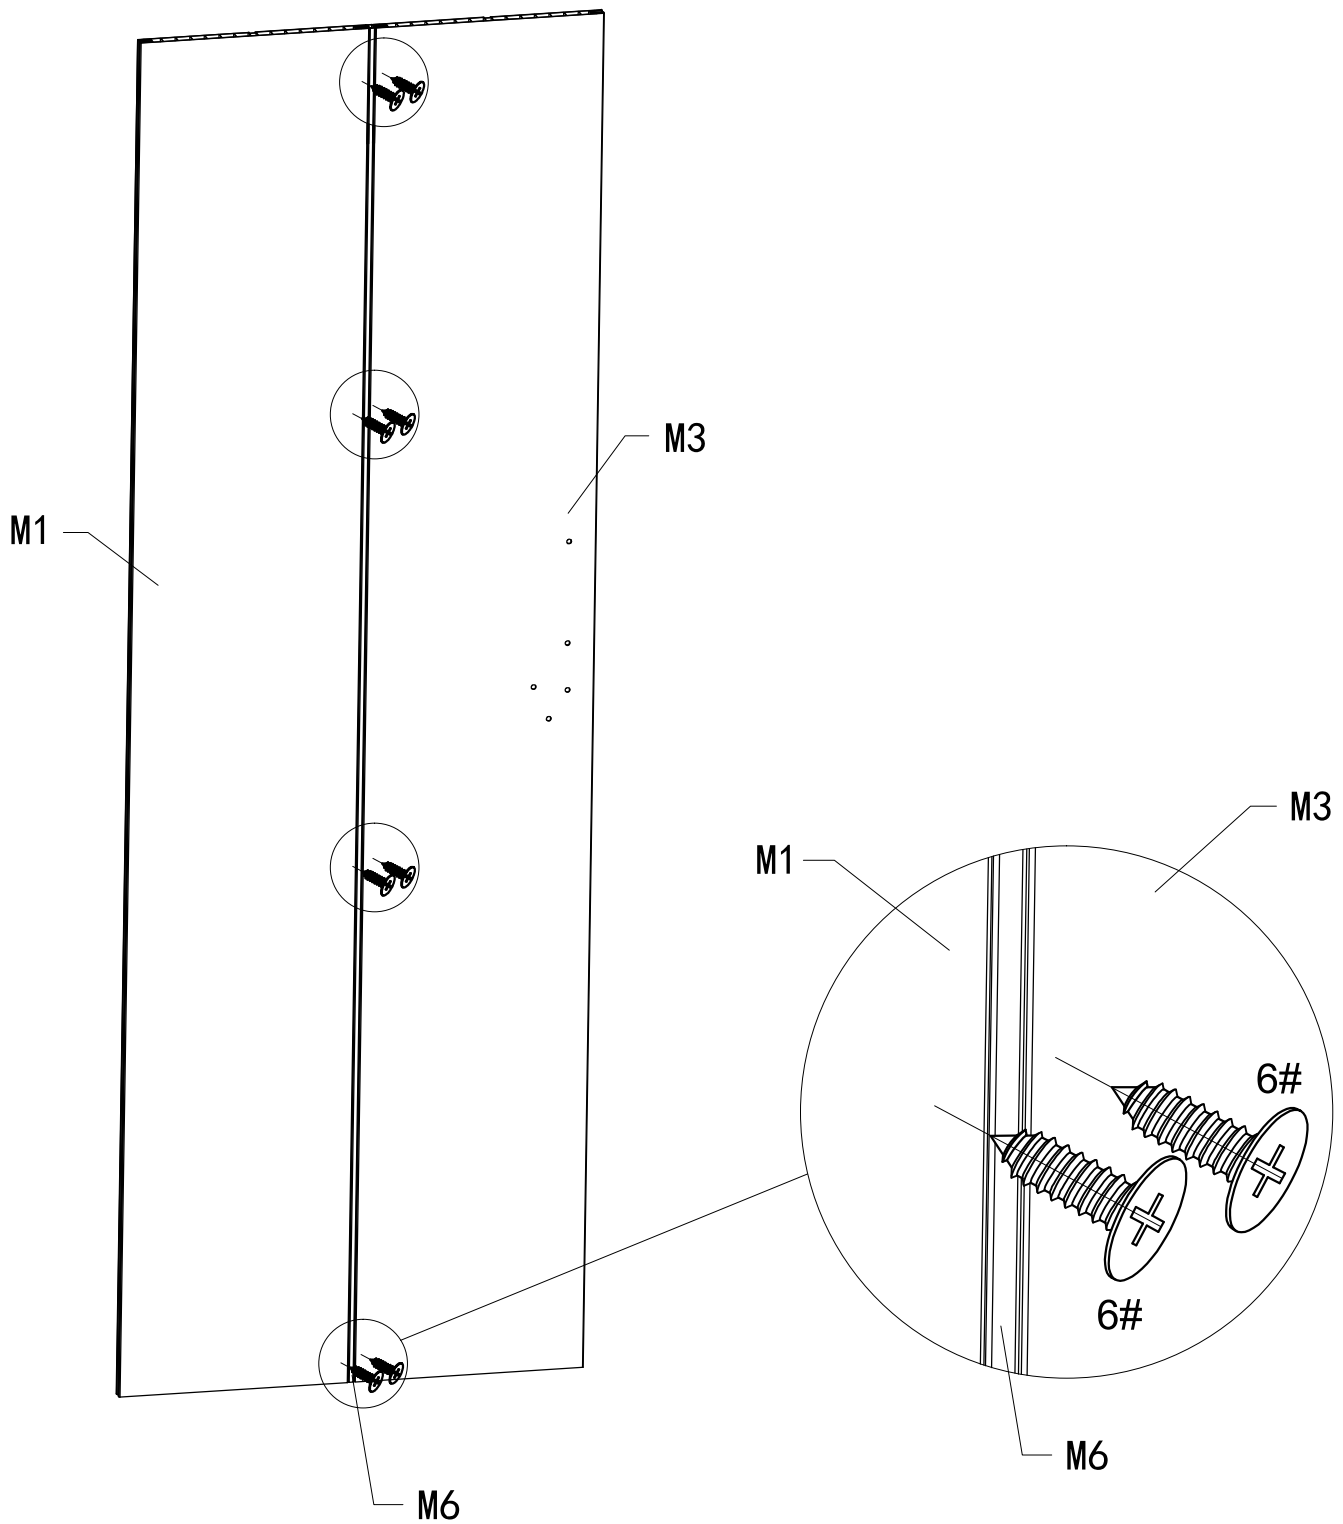

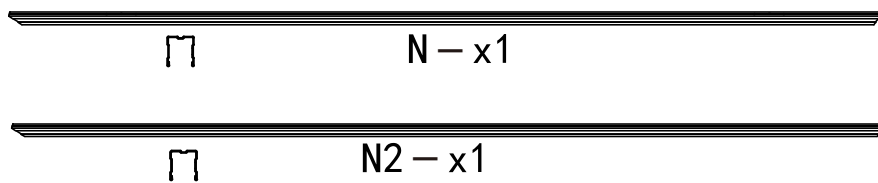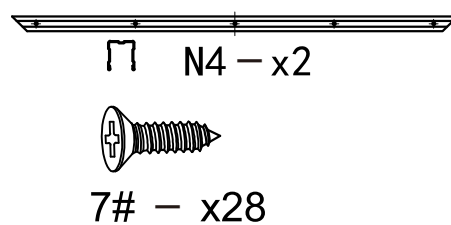


Assemble the door frame

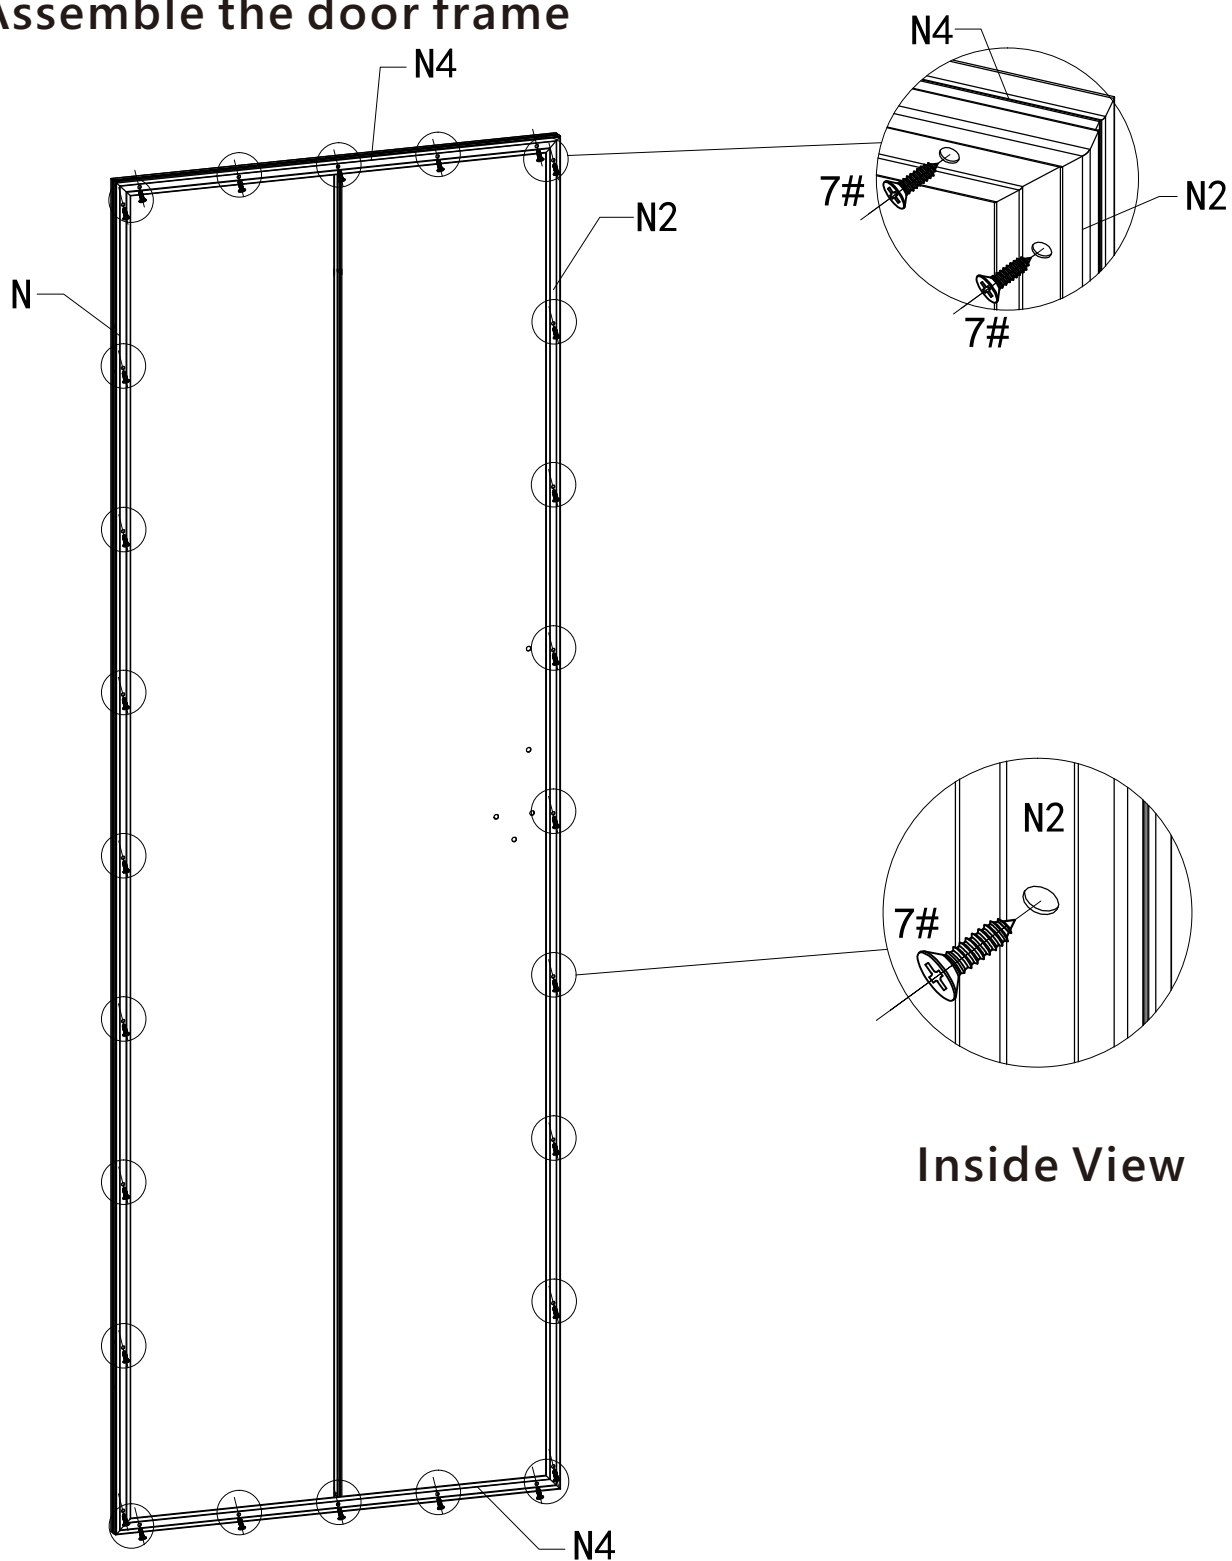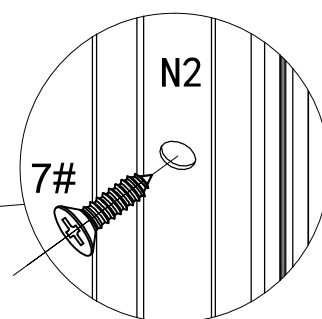

Inside View




GJF016-x1



12# - x2




13# - x3



Q - x1



Door Handle and Locks Assembly

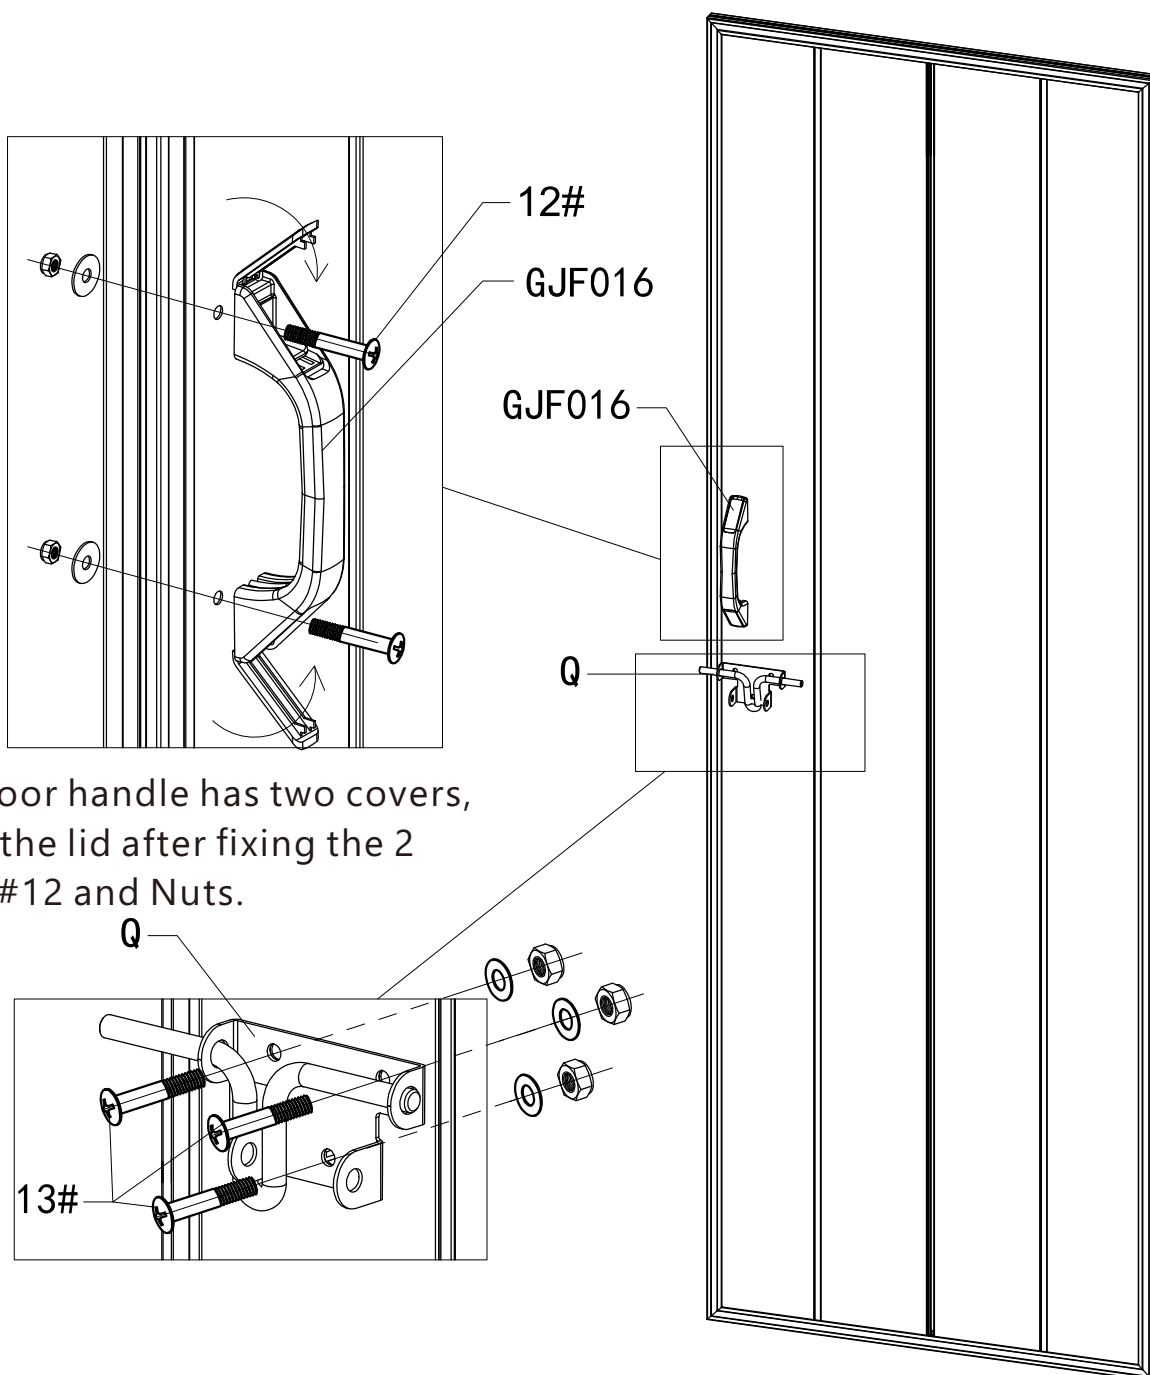




7# – x12

Secure 2 doors and 4 hinges with 12 screws #7.

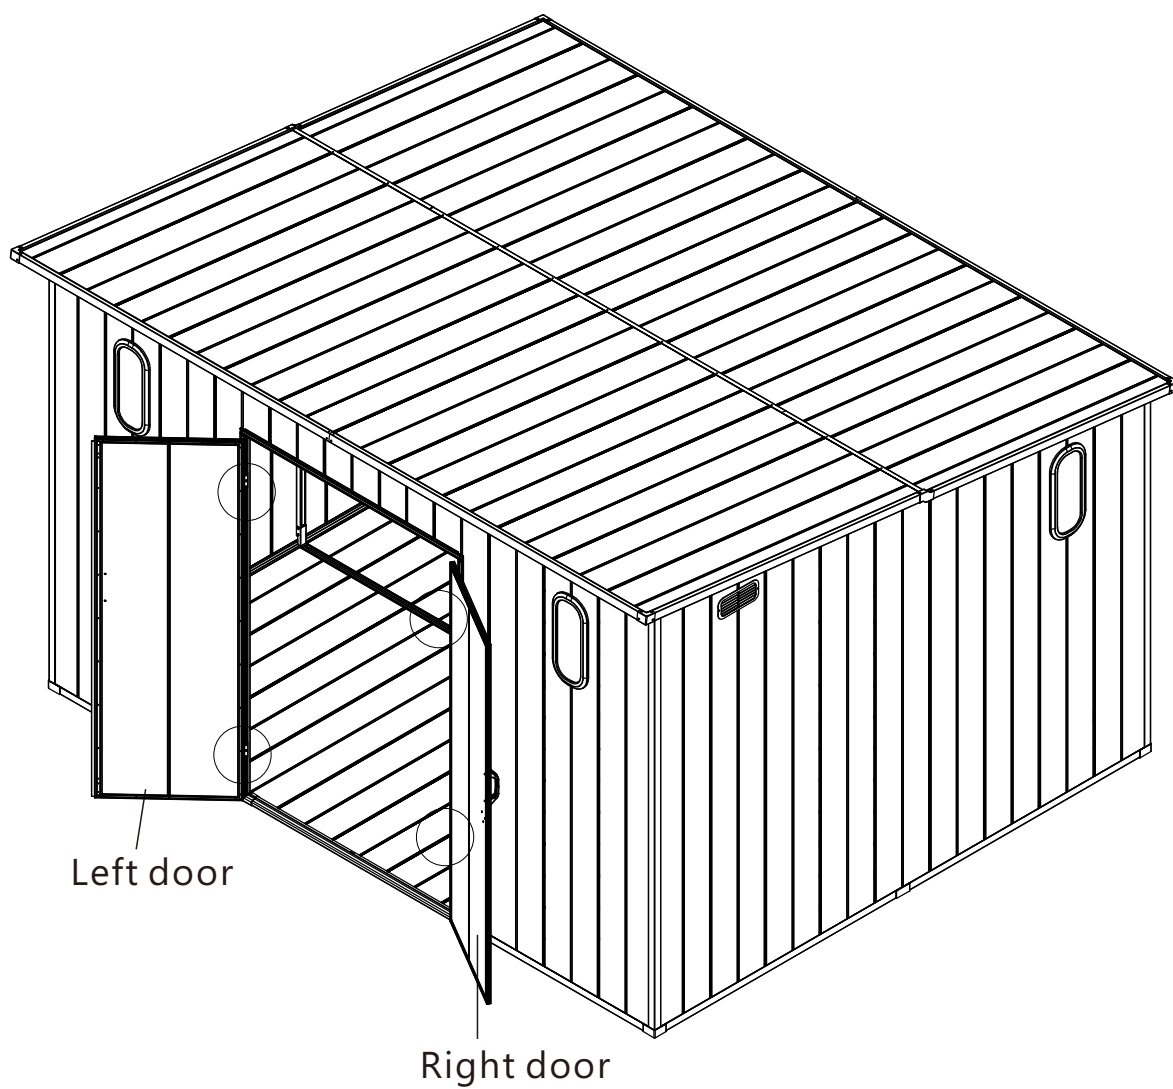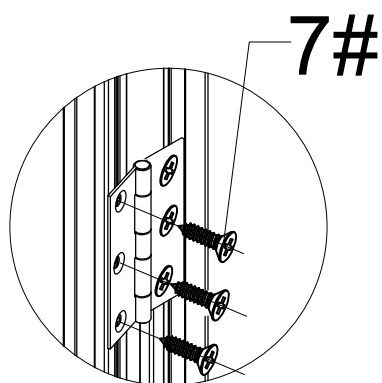


The connectors #H1 on the 14 support tubes need to be fixed to the ground. First, drill holes in the ground, then use expansion screws with diameter of 5 mm to secure them.

Customers may purchase and prepare the expansion screws themselves according to the actual ground conditions.

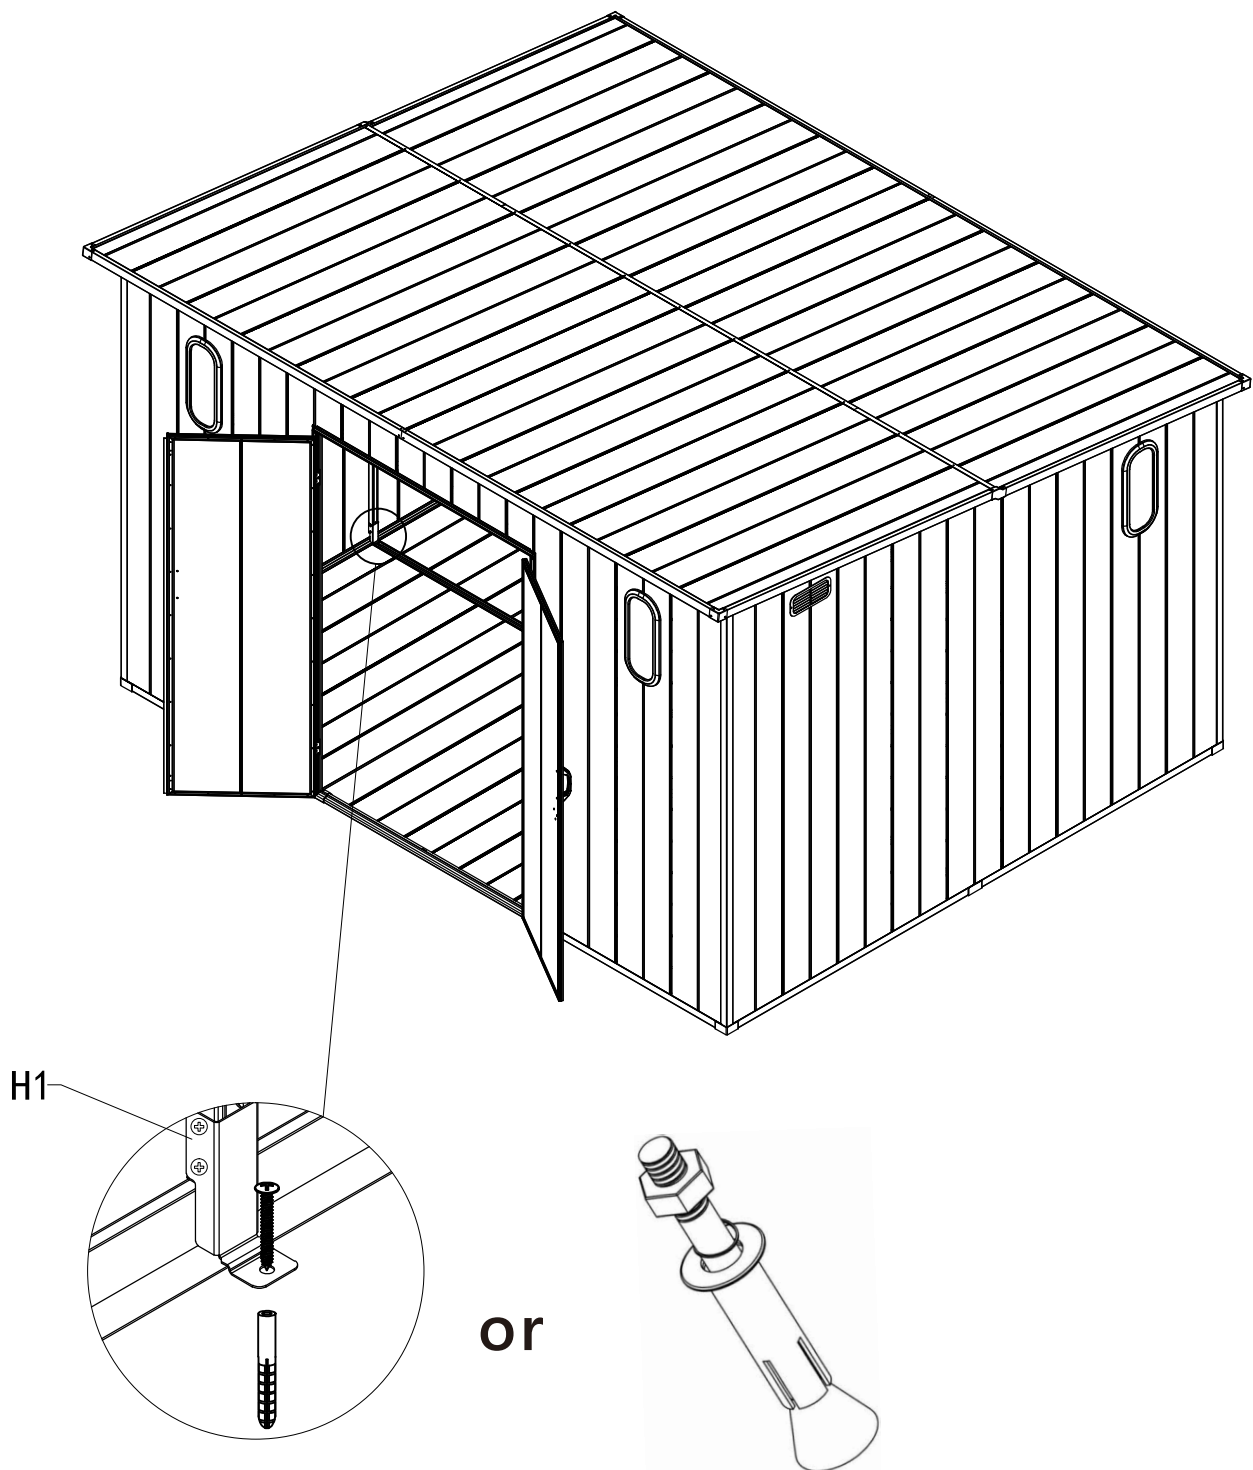




1# – x2



Q9 – x1

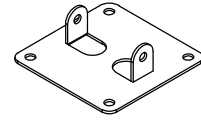

Q8 – x1

Support Tube Assembly

Q9

Q8

Q9

1#


Q8

1#

Install the support tube beneath centre beam #G5, which can increase/reinforce the roof's load-bearing capacity

In bad weather, especially snowstorm, it's essential to prevent the roof from collapsing under heavy snow.

In normal conditions, you can store it away.

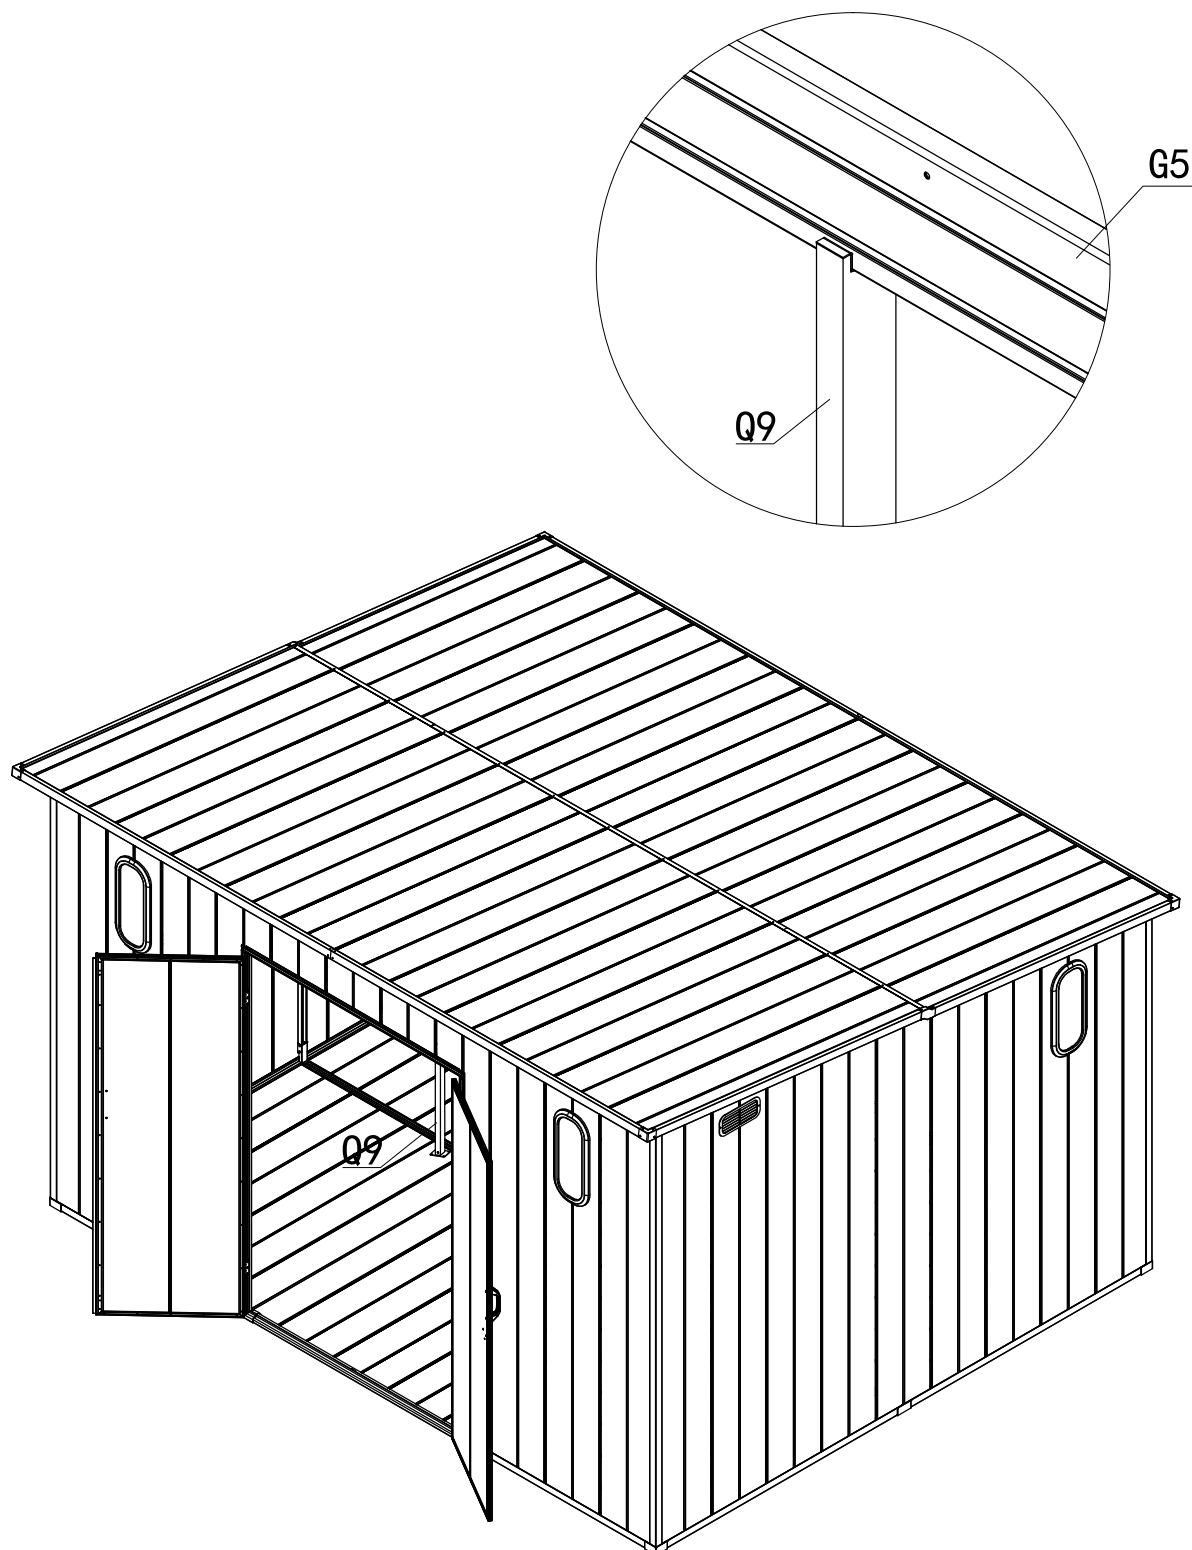



Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:



After-sales contact email:

service@domioutdoorliving.com

Business cooperation contact email:

marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.