


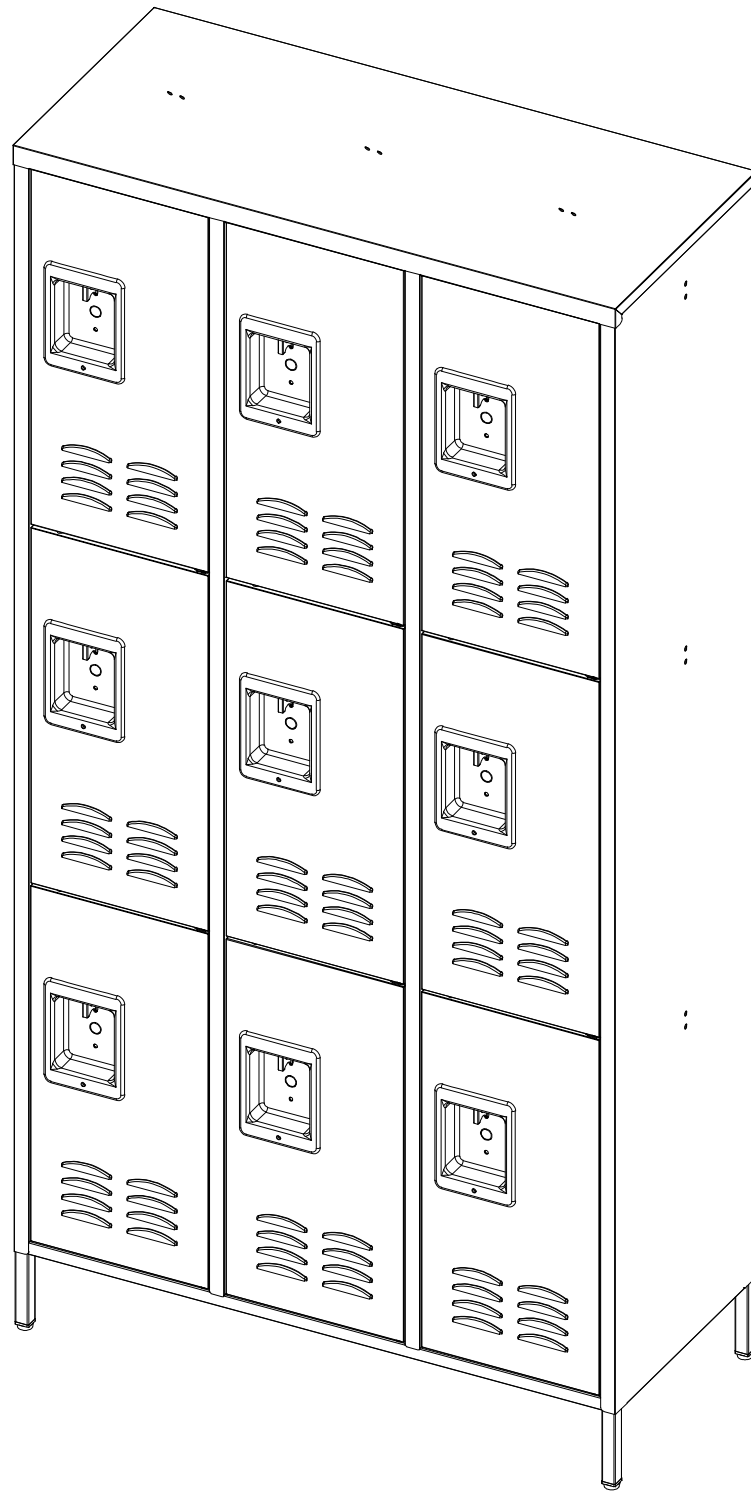
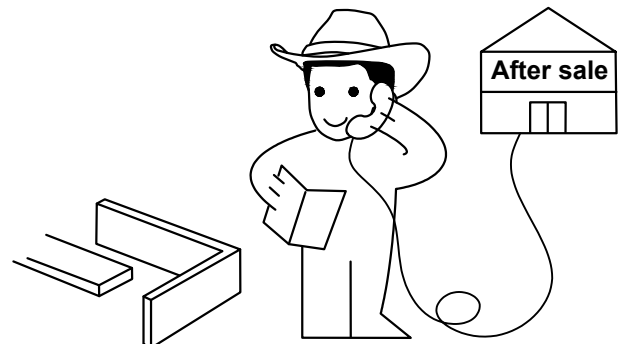
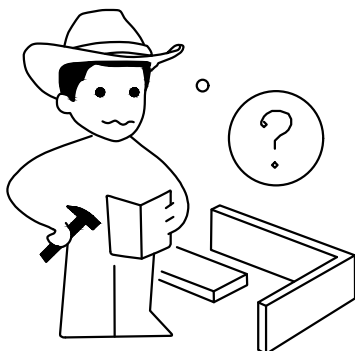
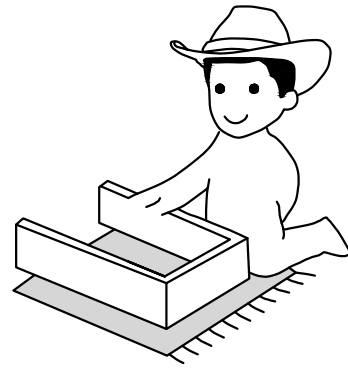
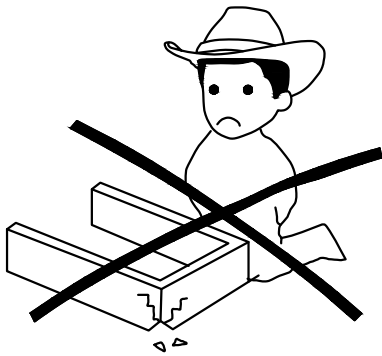
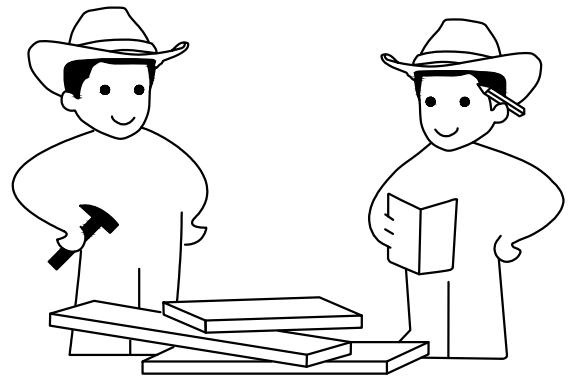
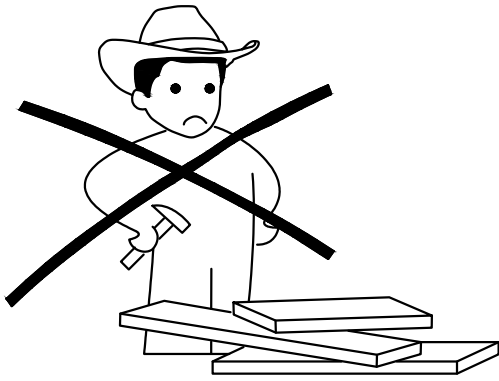
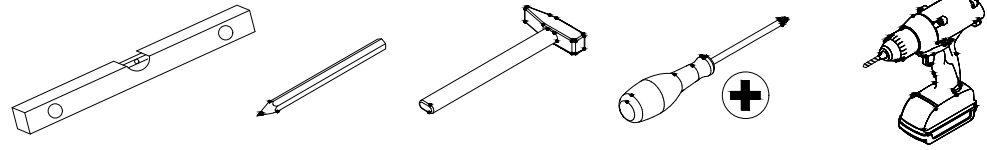
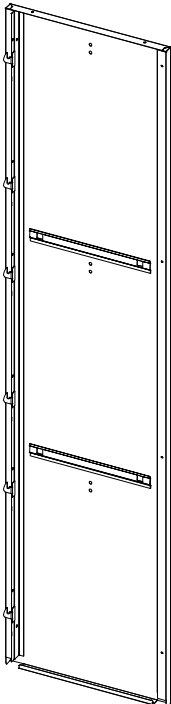
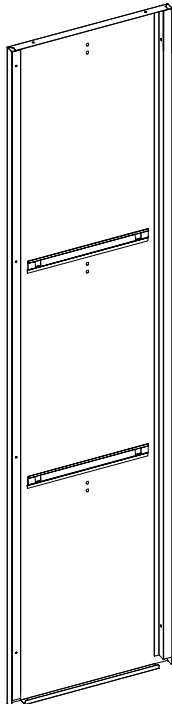
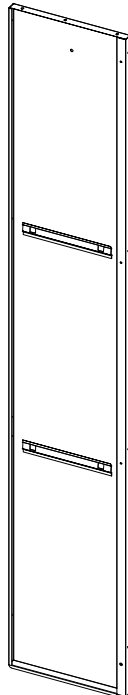

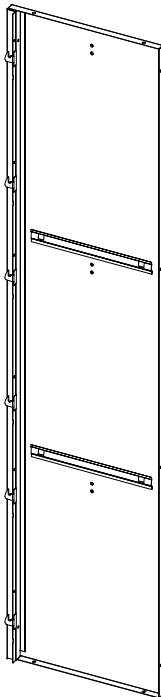
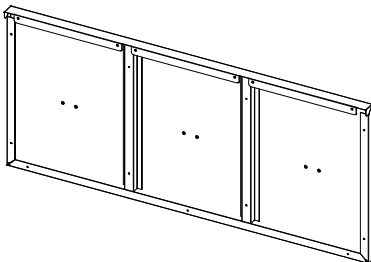
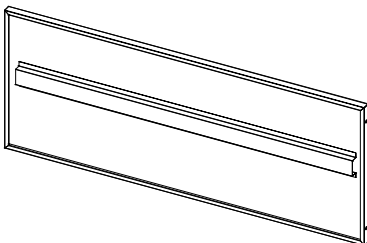
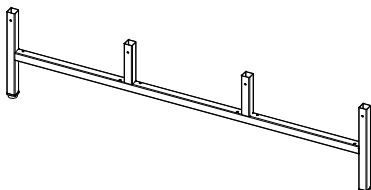
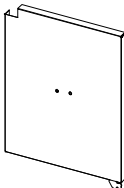
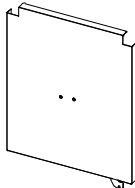
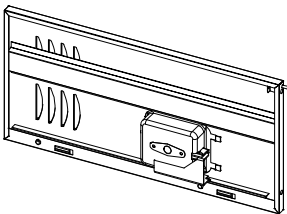

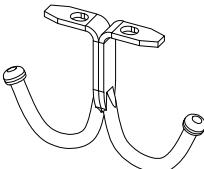



Installation & Assembly






1×1 	2×1 	3×2 	4×1 	5×2 	
6×1 	7×1 	8×2 			
9×4 	10×2 	11×9 			
A×18 	B×9 	C×60 	D×41 	E×3 	F×9 
G×18 	H×2 	I×9 	J×3 	K×3 	
Standby Application					

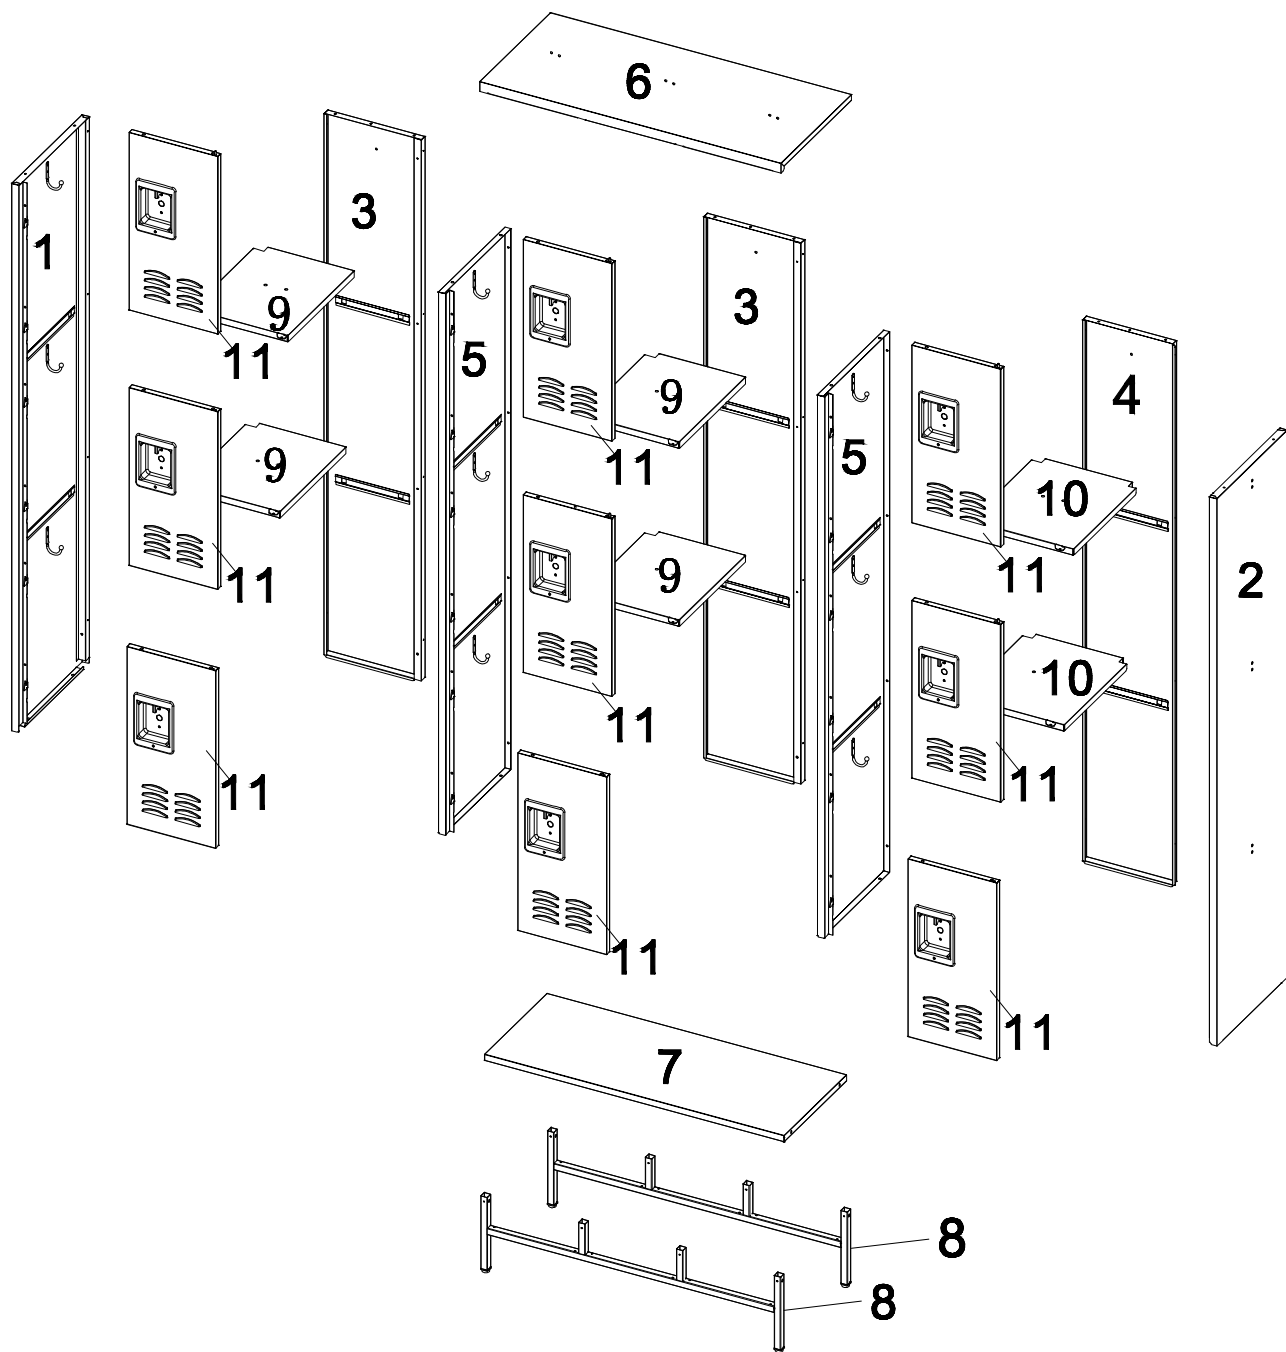


1

Please distinguish between Part 1 and Part 2 by label

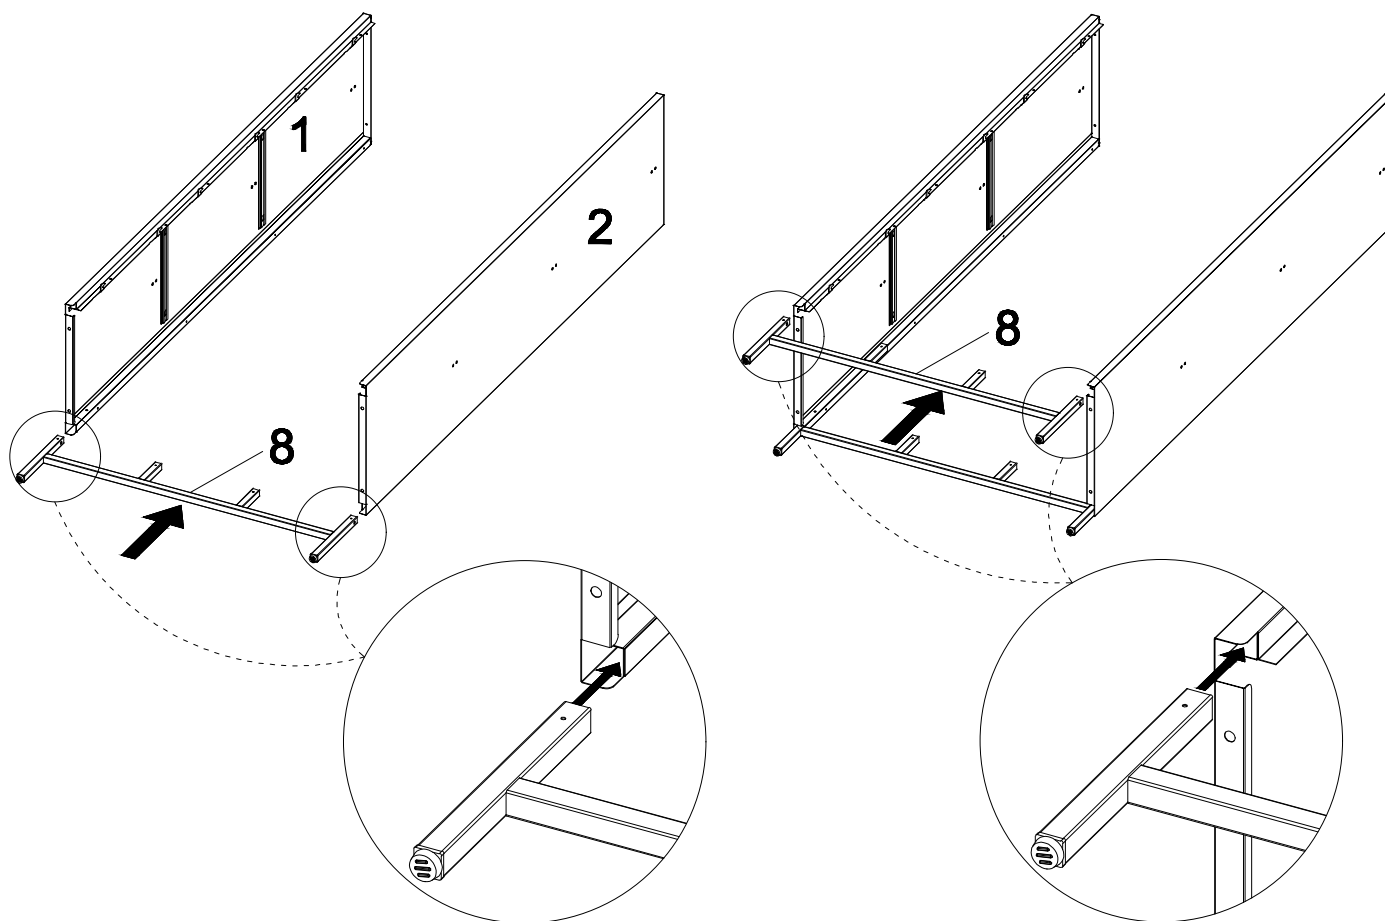


2

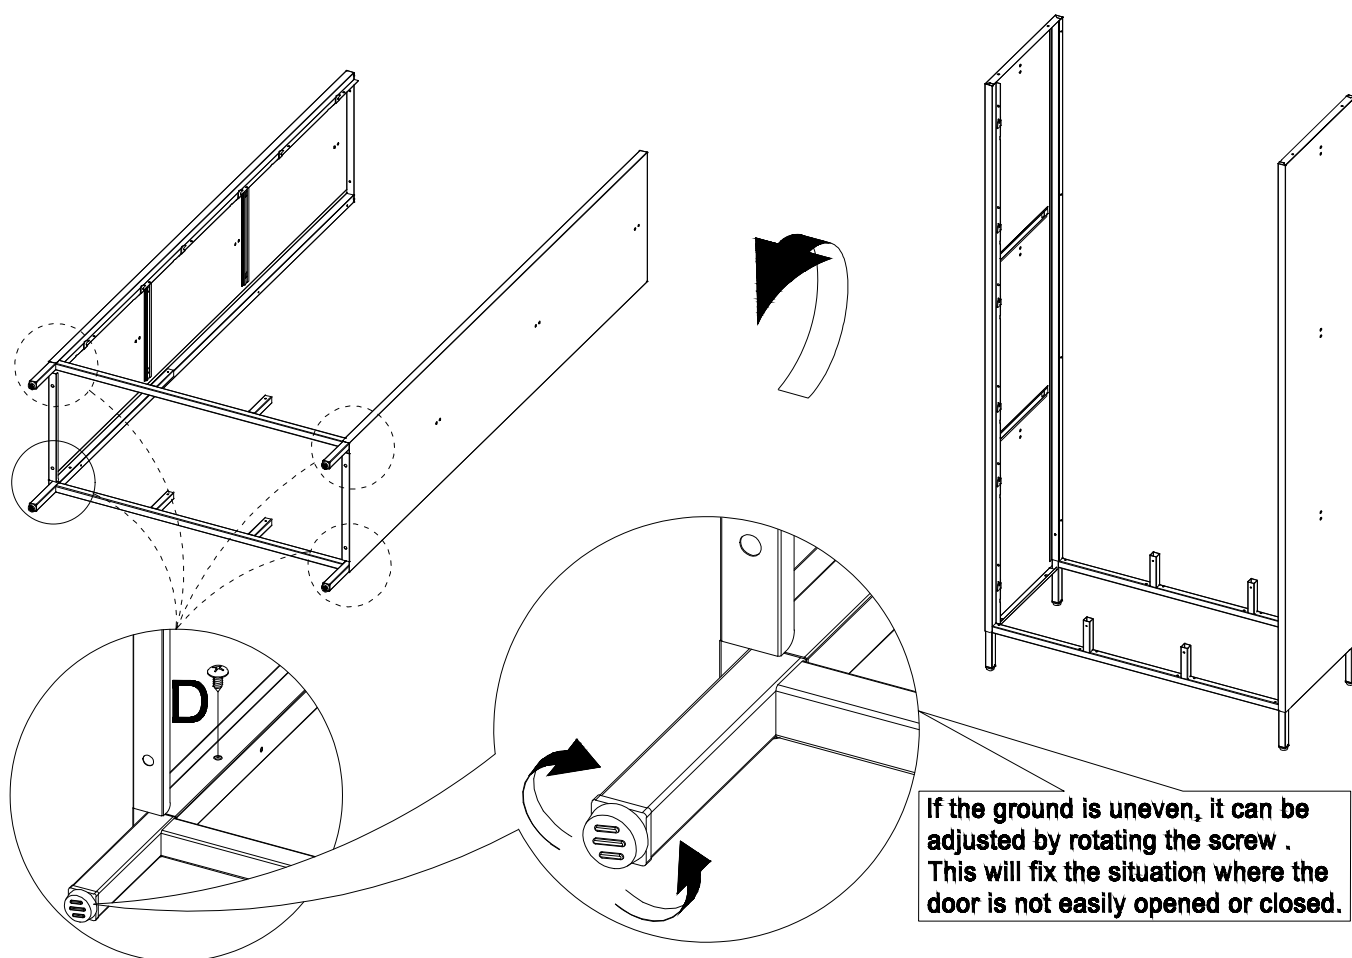


D×4

3

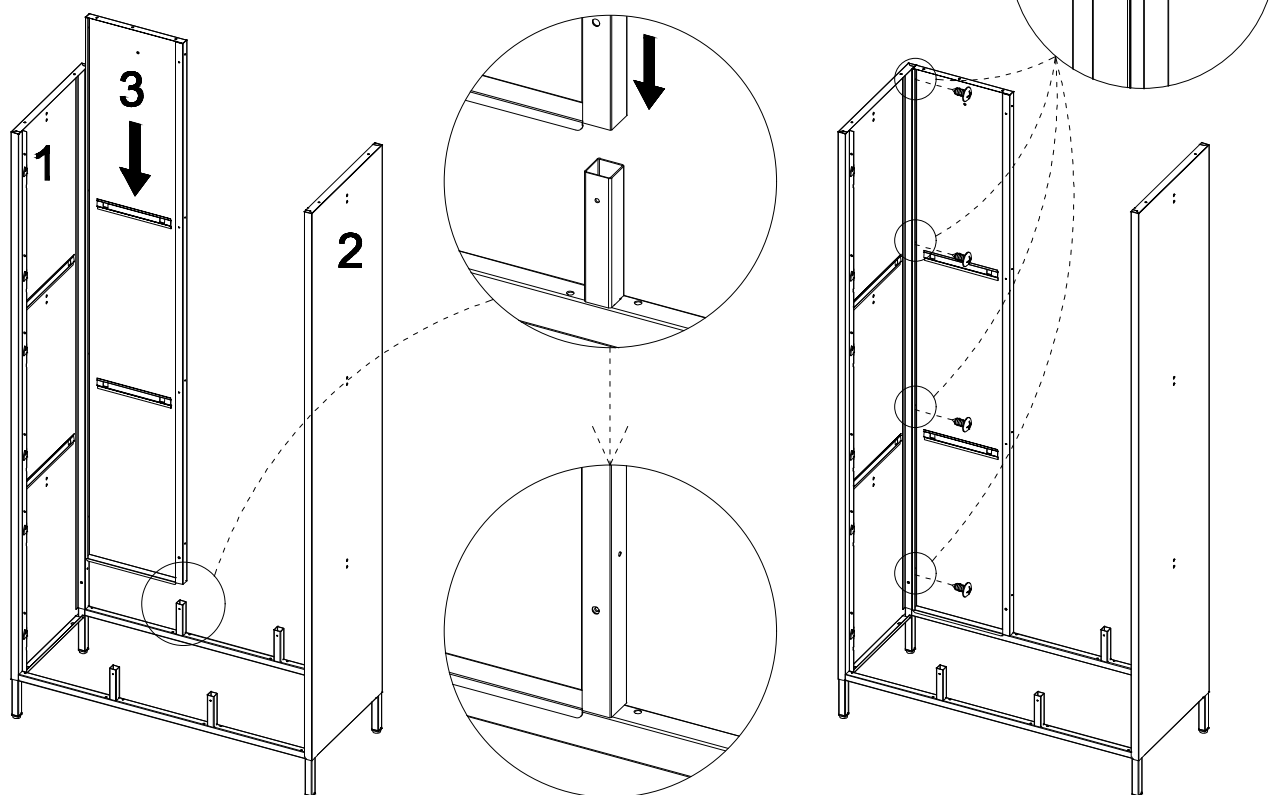

D×4







4

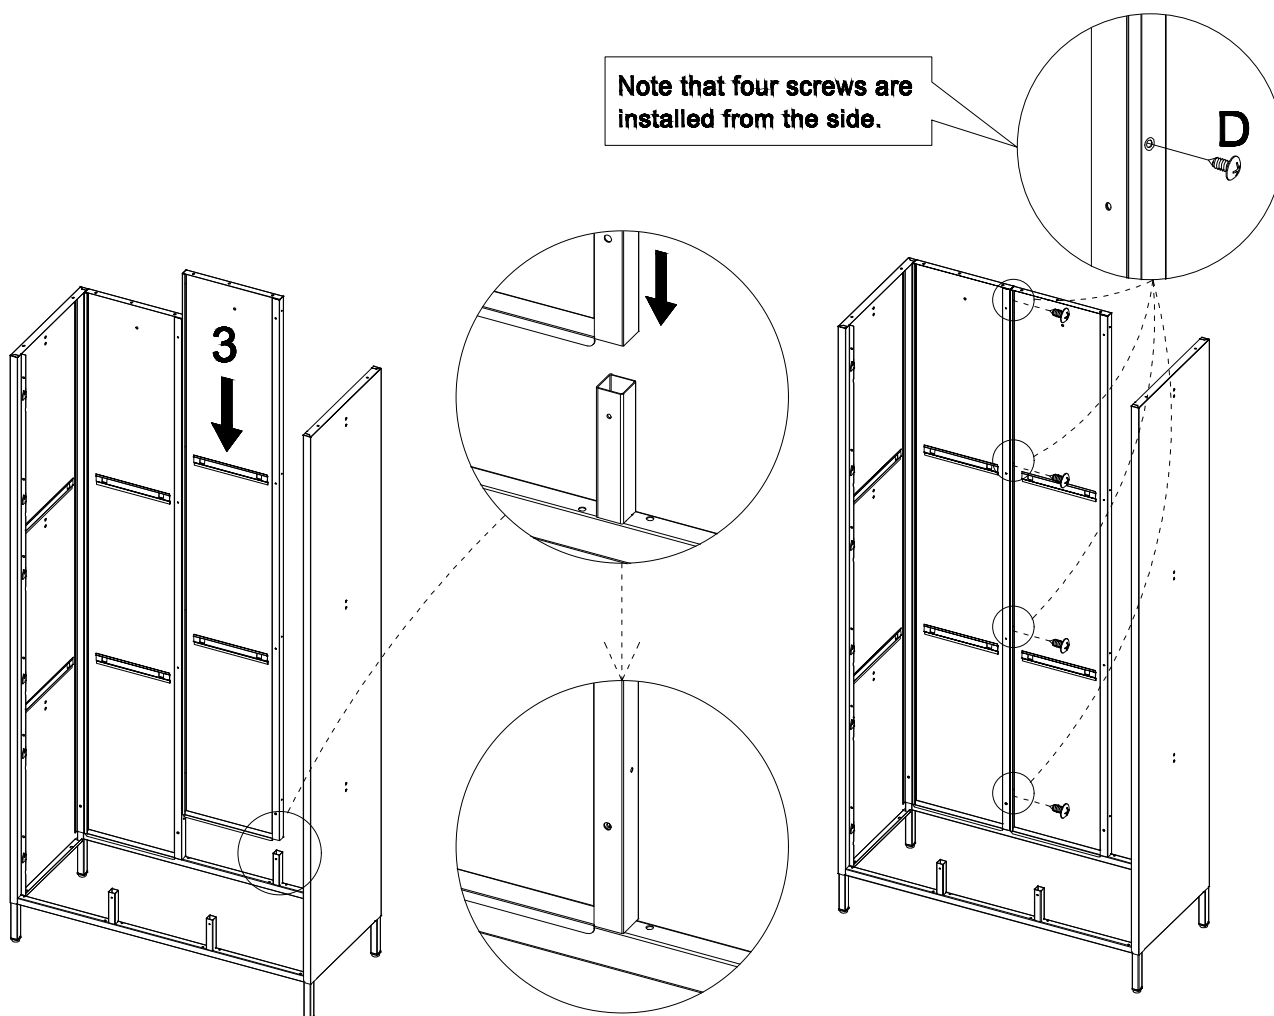

D×4




5

Note that four screws are installed from the side.

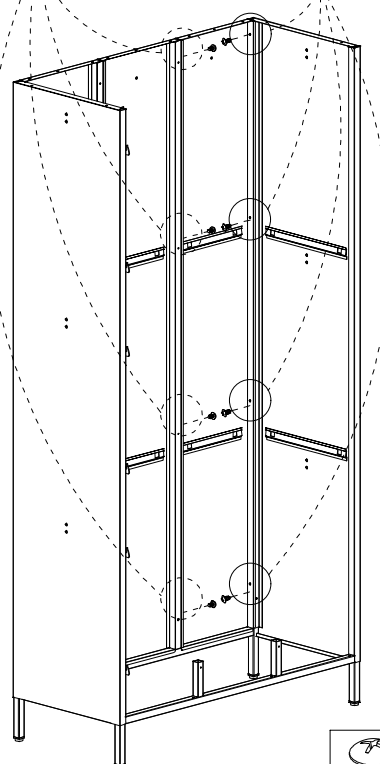
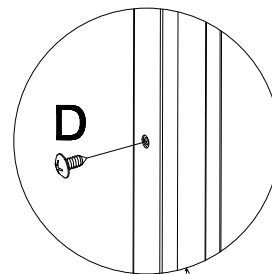
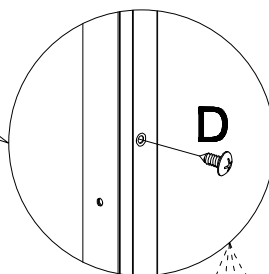
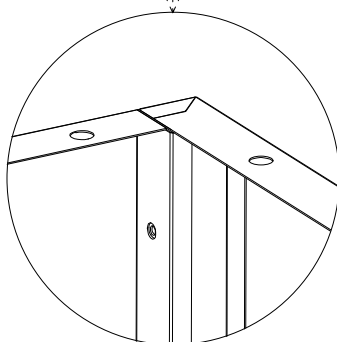
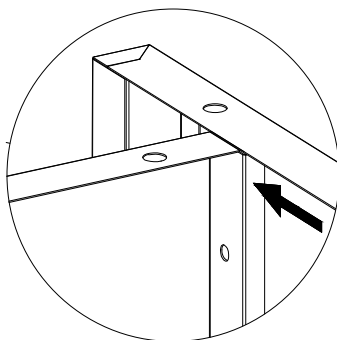
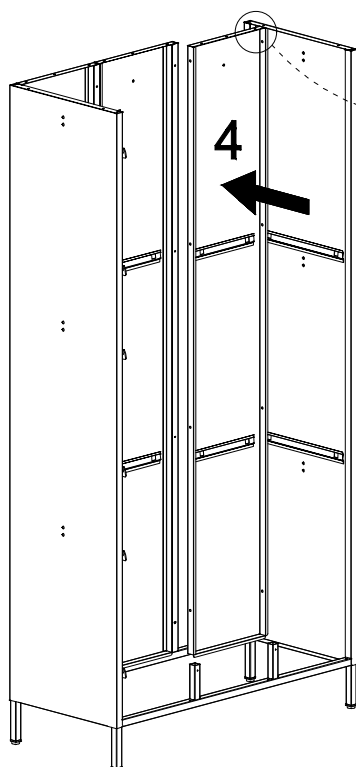


D×8

6

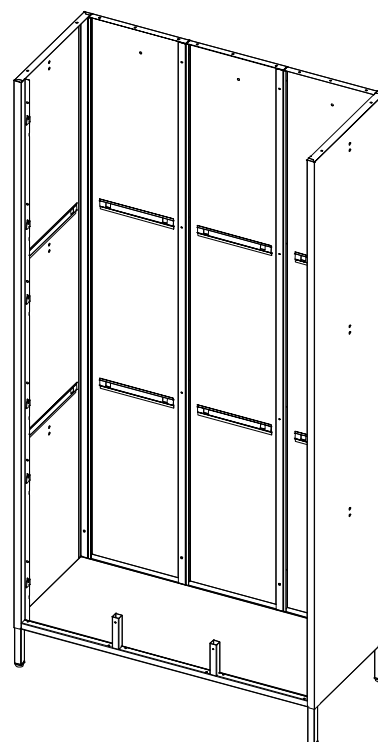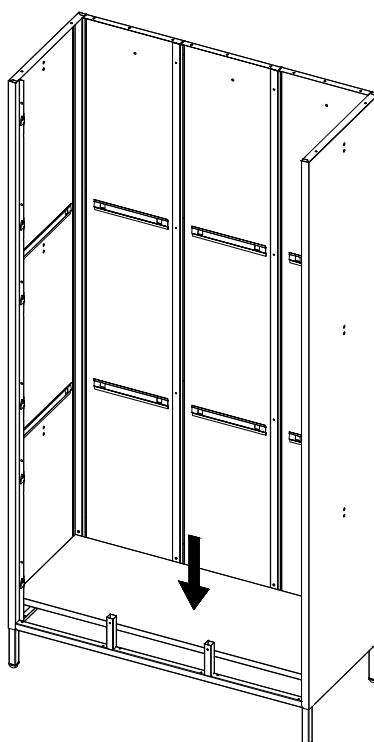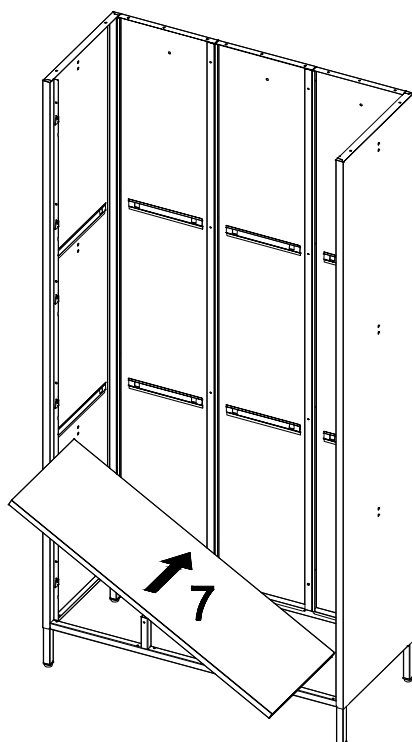

7

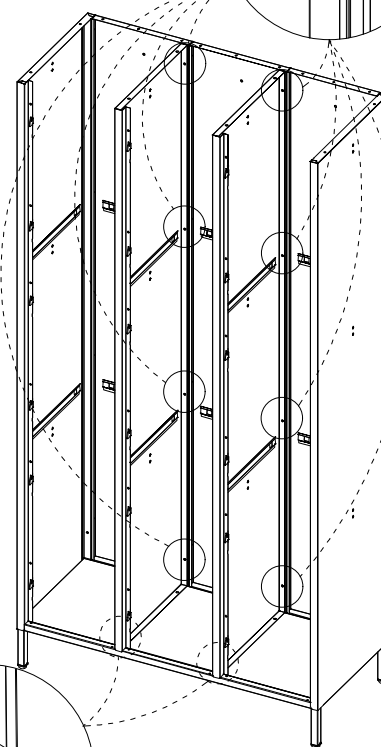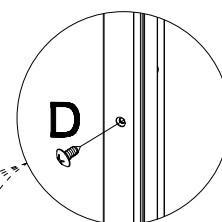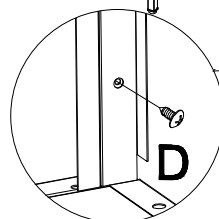
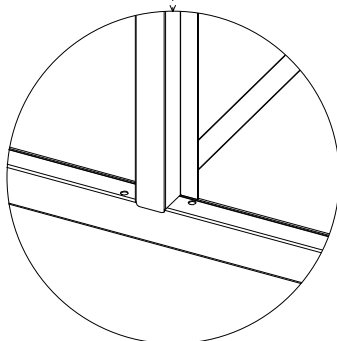
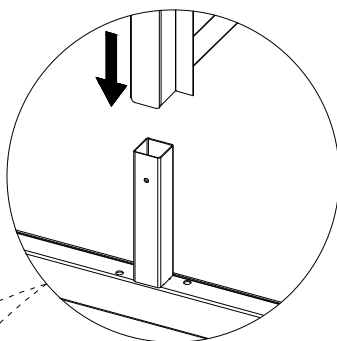
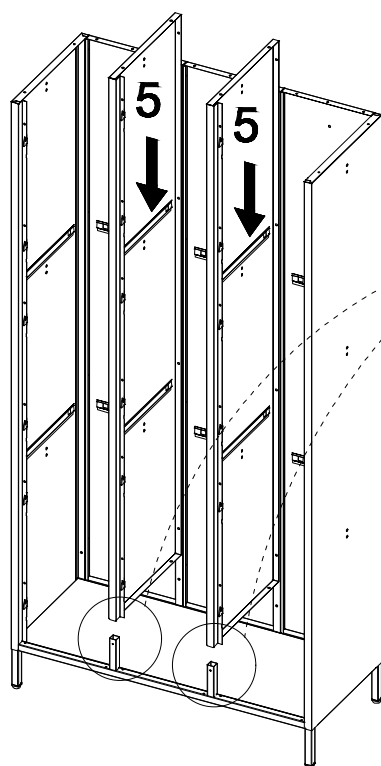


 D×10

8




Twelve hooks need to be placed on the two side panels in the middle, one on each side (left and right), by fixing two hooks with two set of bolts and nuts.

×6

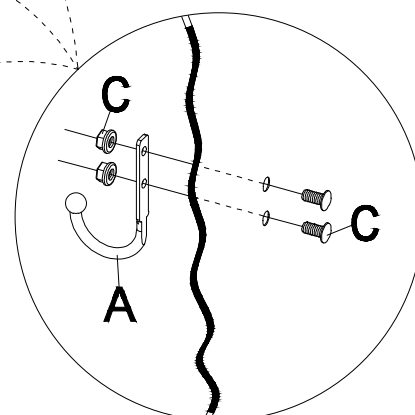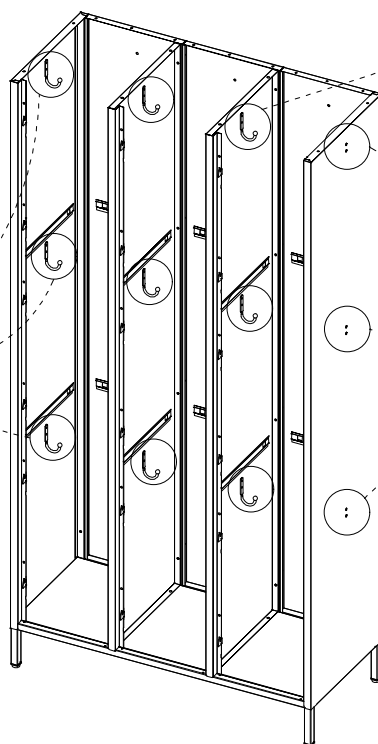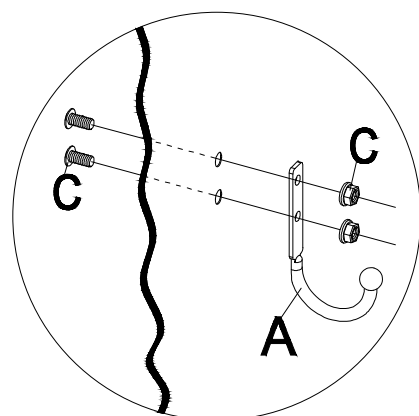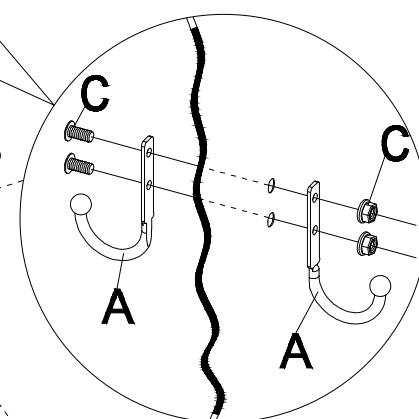






 A×18  C×24

9

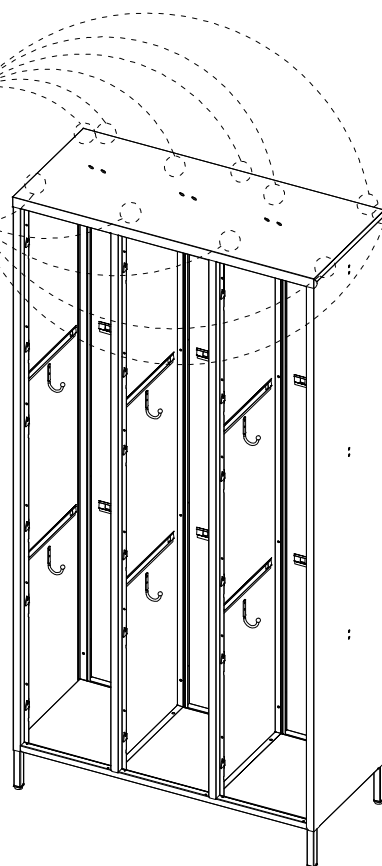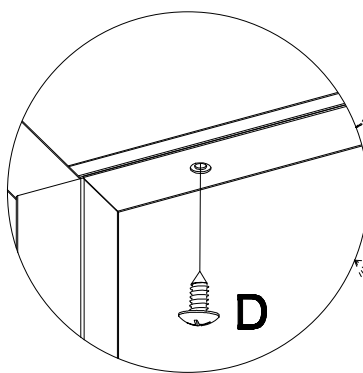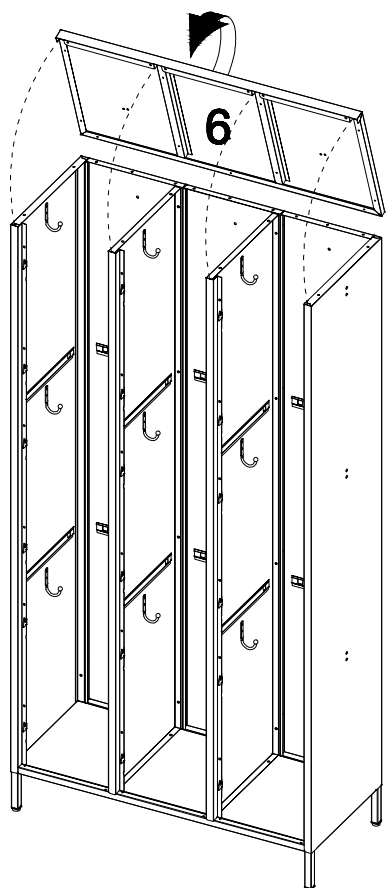


D×11

10

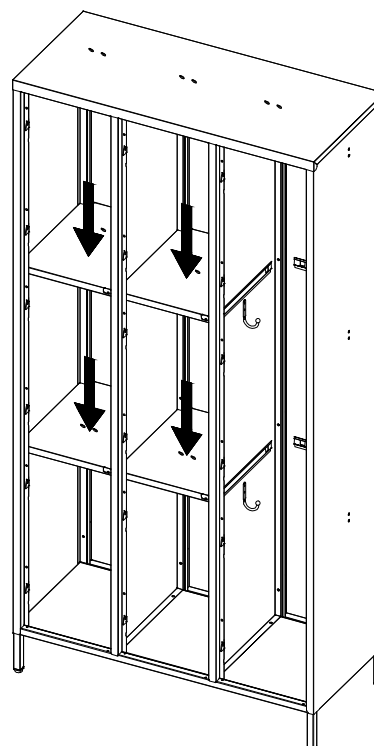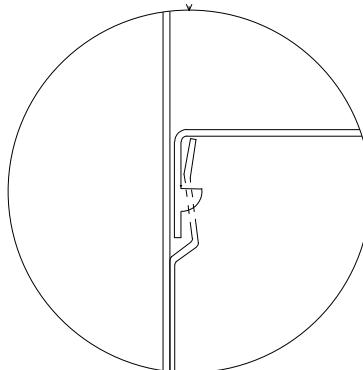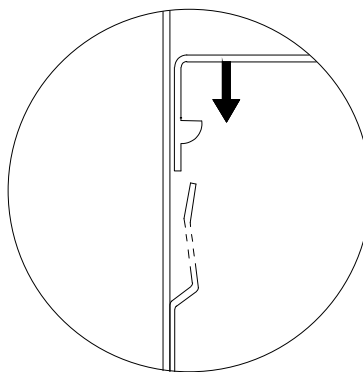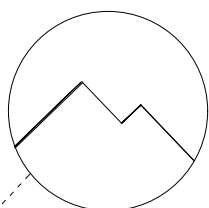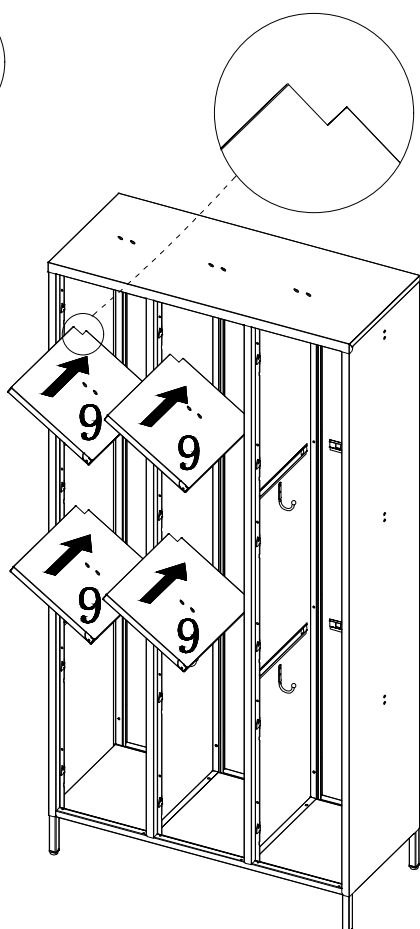

11

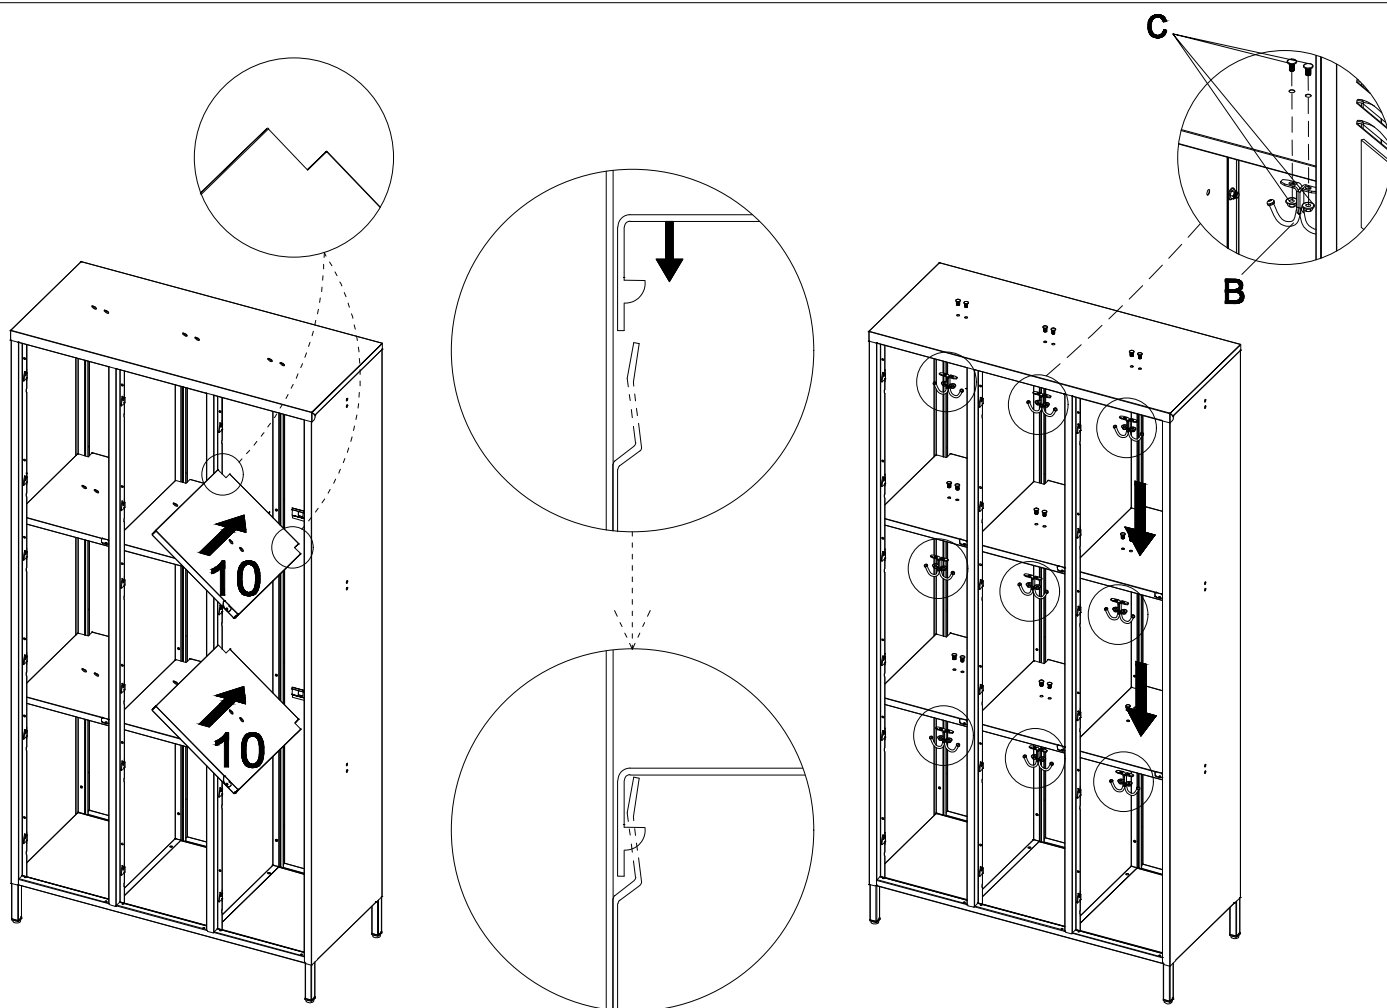


 **B×9**  **C×18**


12

The cabinet can be fixed to the wall as needed.


Wall

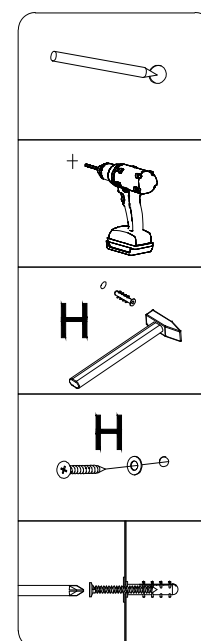

If the ground is uneven, it can be adjusted by rotating the screw .
This will fix the situation where the door is not easily opened or closed.


   **H×2**

13

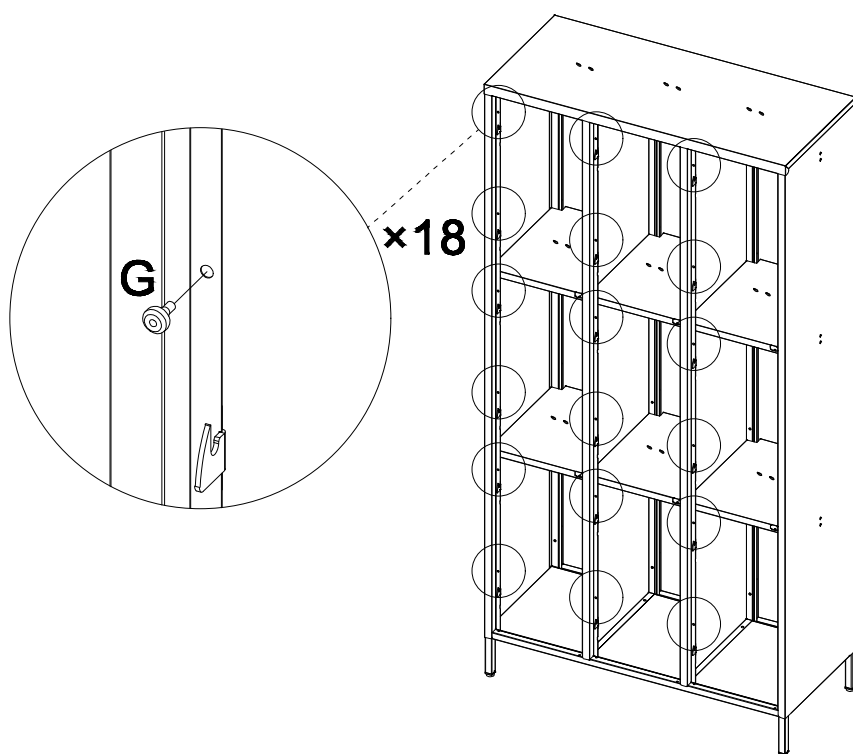


 **G x18**

14

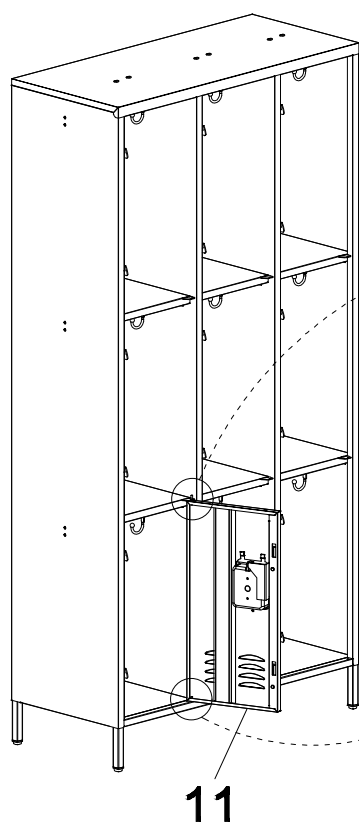


If the spring screw is missing from the door, you can find the accessories j in the hardware package to install it. 

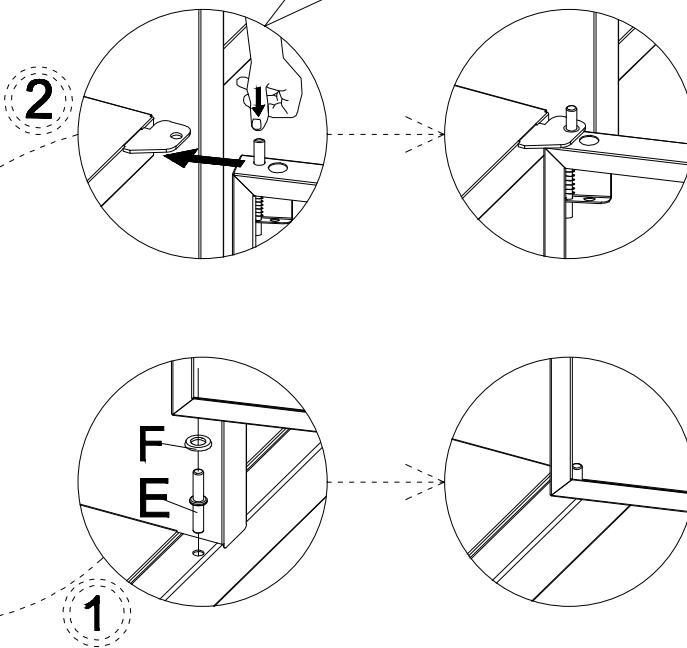

 **E x1**  **F x1**


15

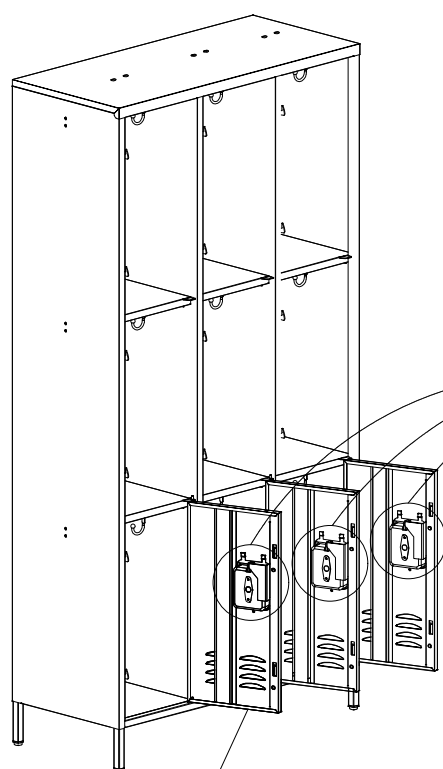

11

 C×6	 E×2	 F×2	 I×3
--	--	--	--

16

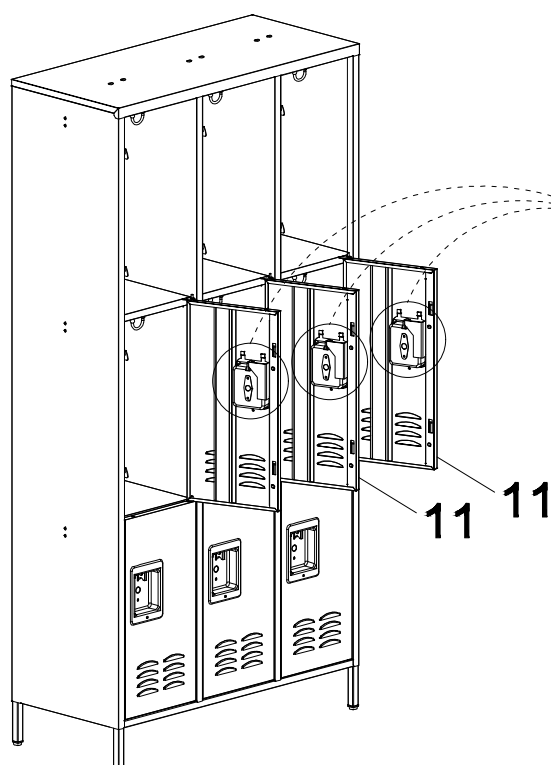


11 11

 C×6	 E×3	 I×3
---	--	--


17

Install the door by first installing the door spindle pad F, then by pressing the spring shafts on the top of the door.

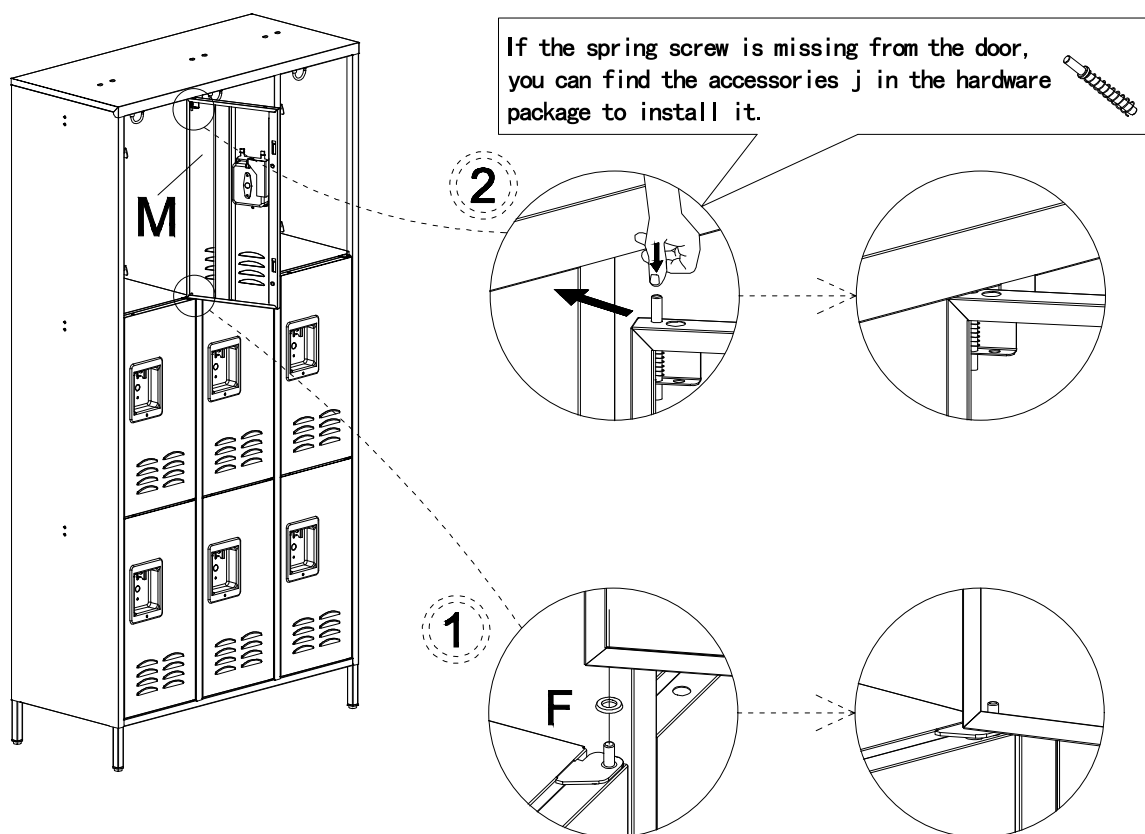

 Fx1

18

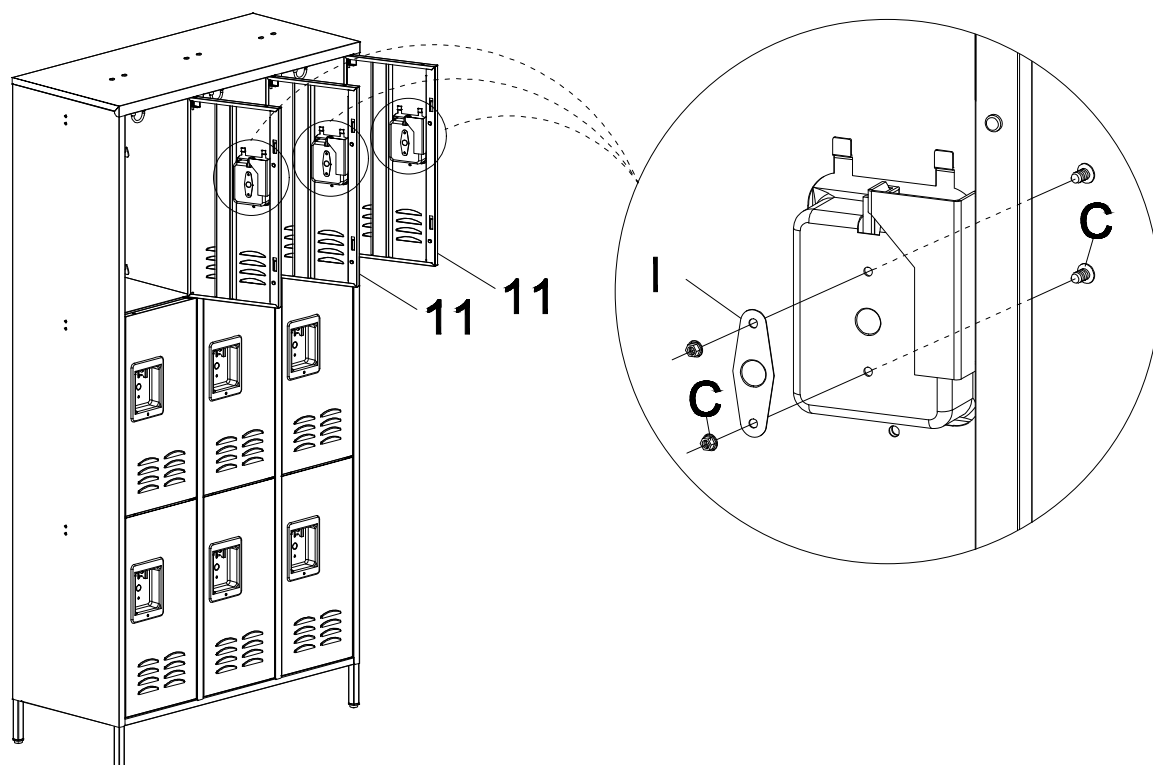

 Cx6

 Fx2

 Ix3

