
SICOTAS

ES113A1O05Y2373 I ES113A1O04Y2374

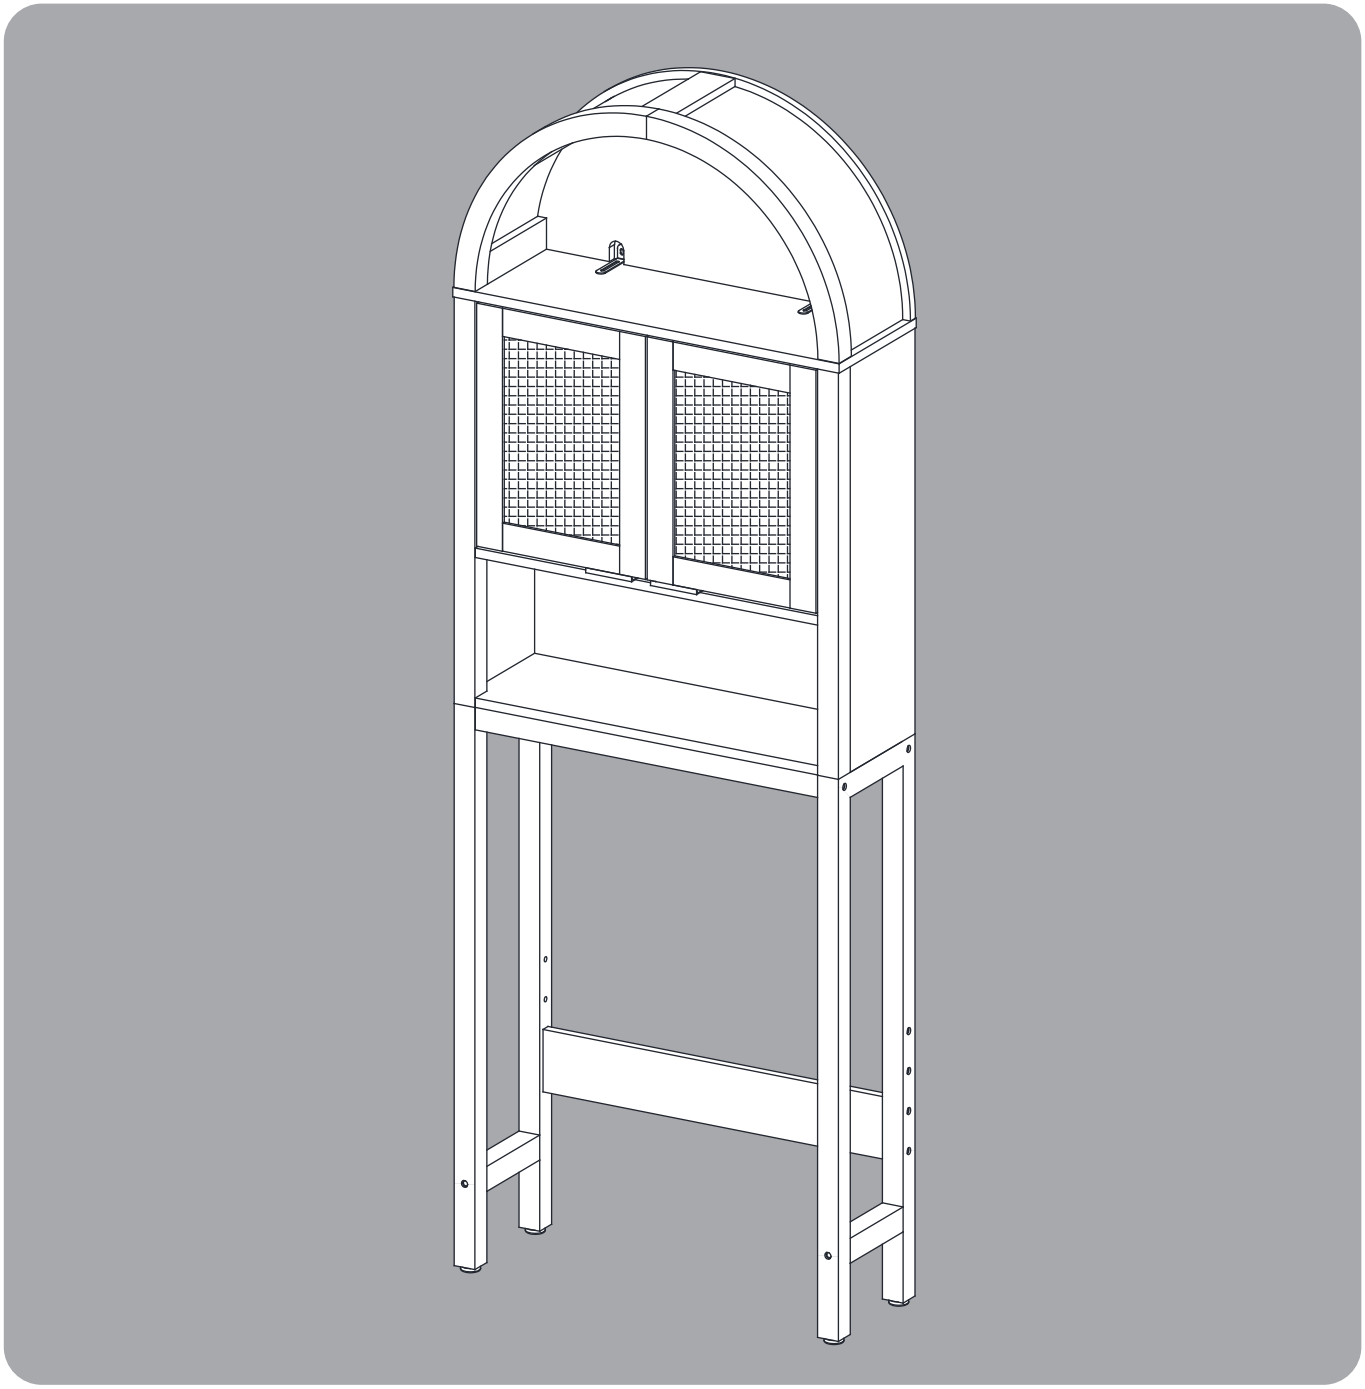

Savanna Collection

Assembly Instructions

Before beginning the assembly process, please read and save these instructions for reference.
Following these guidelines will ensure a smooth and successful assembly of your product.

1. Part Identification:

Carefully separate and identify all the parts included in your package. Confirm that you have all the components listed in the instruction manual. This step will help you avoid any missing or misplaced parts during assembly.

2. Work Surface:

To prevent any scratches or damage to the product, assemble it on a soft mat or a similar protective surface. This will provide a cushioned area for the components and protect the surfaces from unwanted marks.

3. Step-by-Step Assembly:

Follow the assembly instructions provided, proceeding one step at a time. Take care to understand each step properly before proceeding to the next one. This sequential approach ensures that the assembly is done correctly and minimizes the chance of errors.

4. Proper Screw Seating:

When attaching screws and nuts, it is essential not to fully tighten them until all screws are correctly seated. By partially tightening each screw and nut initially, you can ensure that they are aligned properly and fit securely before final tightening.

5. Avoid Over-Tightening:

While each screw and nut should be tightened correctly, it is crucial not to over-tighten them. Over-tightening can cause damage to the product or compromise its structural integrity. Use the appropriate amount of force to secure the components without excessive tightening.

SICOTAS customer help center:

If you encounter any questions or problems during the assembly process, please do not hesitate to contact us.

We strive to provide excellent customer support and will respond to your inquiries within 24 hours. Our team will offer you a suitable solution to address any concerns you may have.



Email:
service@sicotas.com



Website:
www.sicotas.com



Phone:
(833) 742-6827

Official Website:

WhatsApp:


YouTube:

Instagram:


Facebook:

TikTok:

Parts List

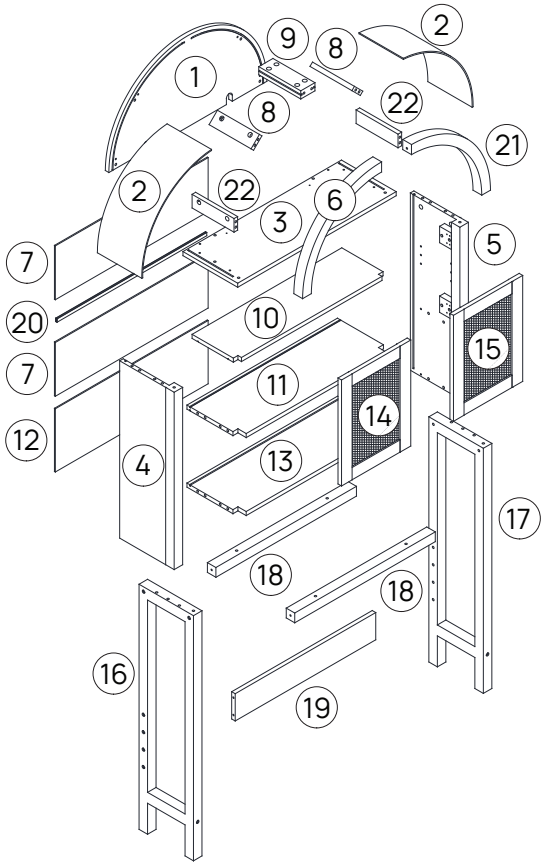


Hardware List

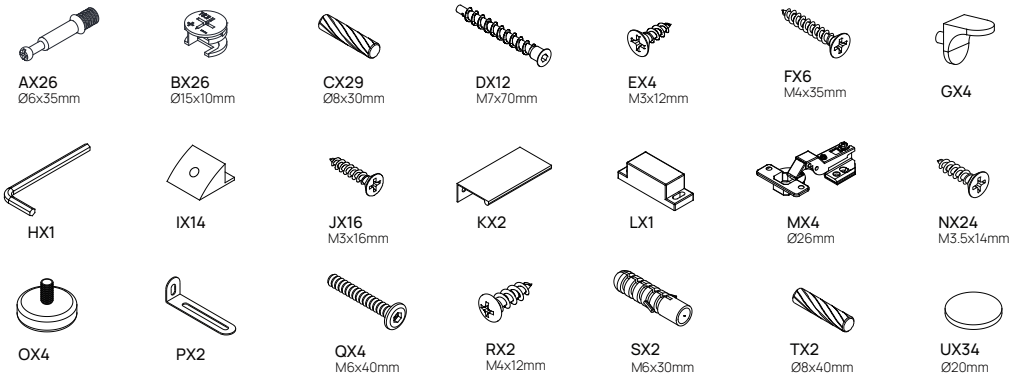


Code	Description	Quantity
A	Ø6*35mm Cam bolt	26+2
B	Ø15x10mm Cam lock	26+2
C	Ø8x30mm Wood dowel	29+2
D	M7x70 Screw	12+2
E	M3x12mm Screw	4+1
F	M4x35mm Screw	6+1
G	Metal Pin	4+1
H	Wrench	1
I	Back clip	14+2
J	M3x16mm Screw	16+2
K	Handle	2

Code	Description	Quantity
L	Door stop	1
M	Hinges	4
N	M3.5x14mm Screw	24+2
O	Adjustable foot	4
P	Anti falling iron sheet	2
Q	M6x40 Hexagonal screw	4+1
R	M4x12mm Screw	2
S	M6x30mm plastic wall plug	2
T	Ø8x40mm Wood dowel	2
S	Paper hole sticker	34+2

Step 1

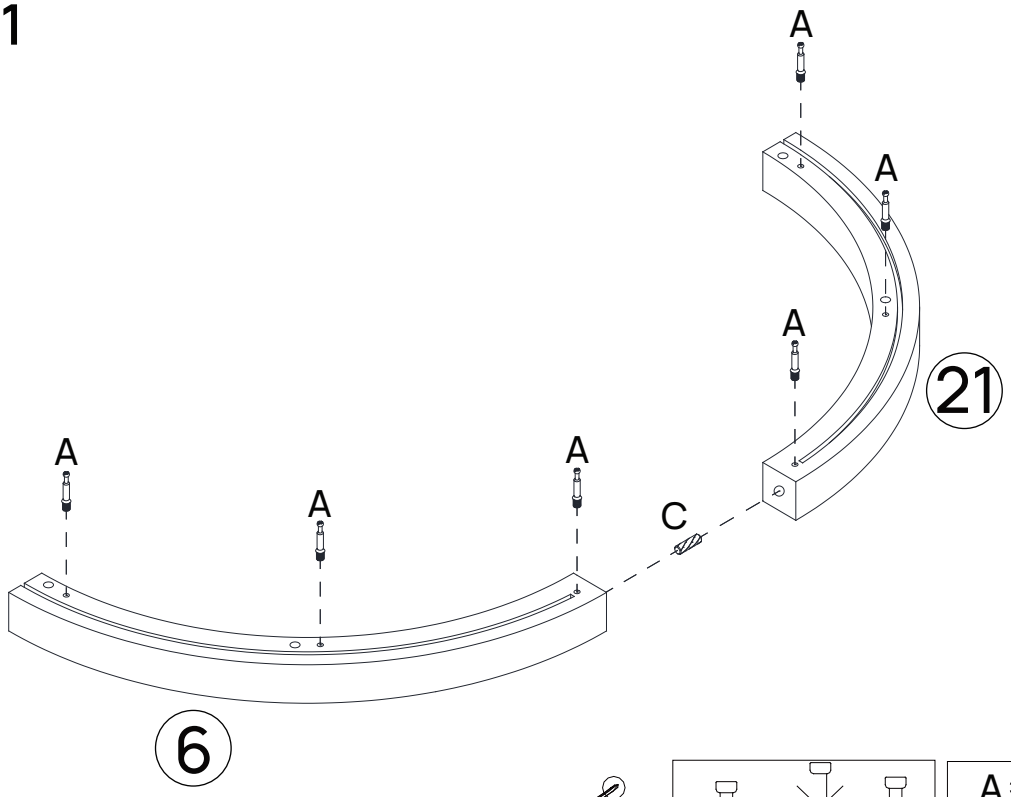




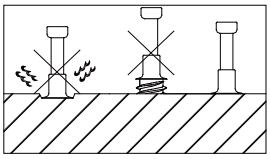


A*6	C*1
	

Step 2

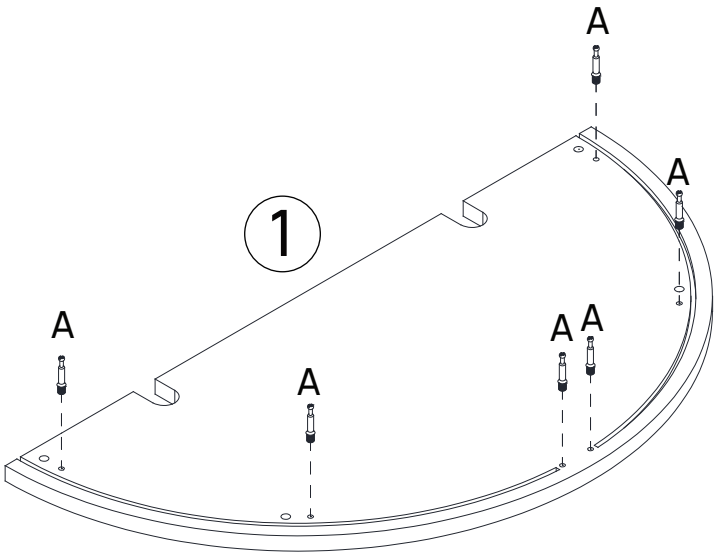




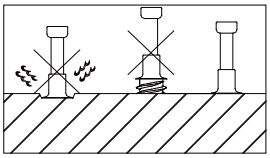


A*6


Step 3

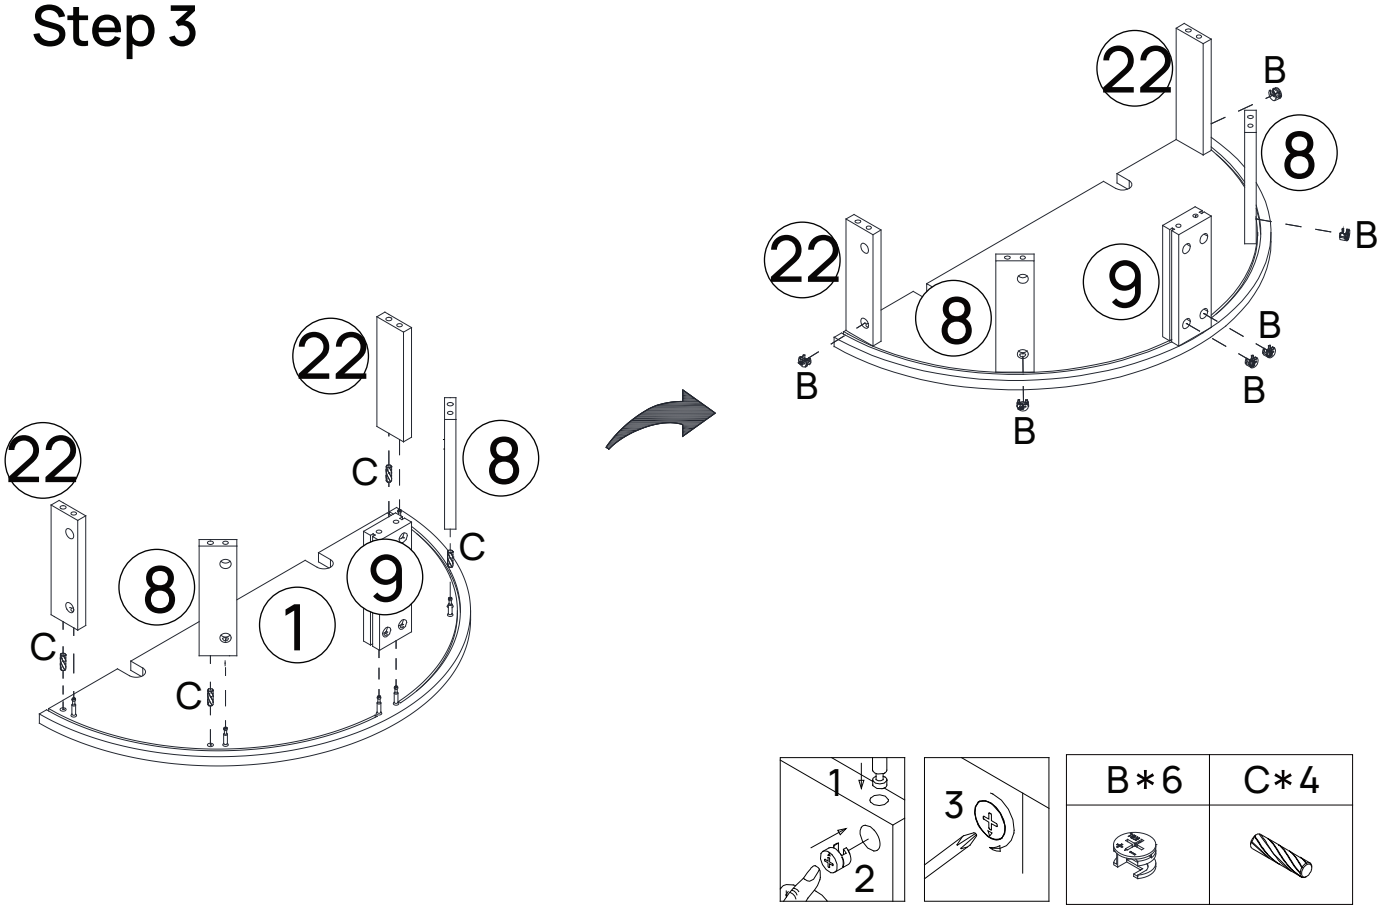


Step 4

Note: Please confirm that all screws on plates (8), (9), and (22) have been properly tightened.

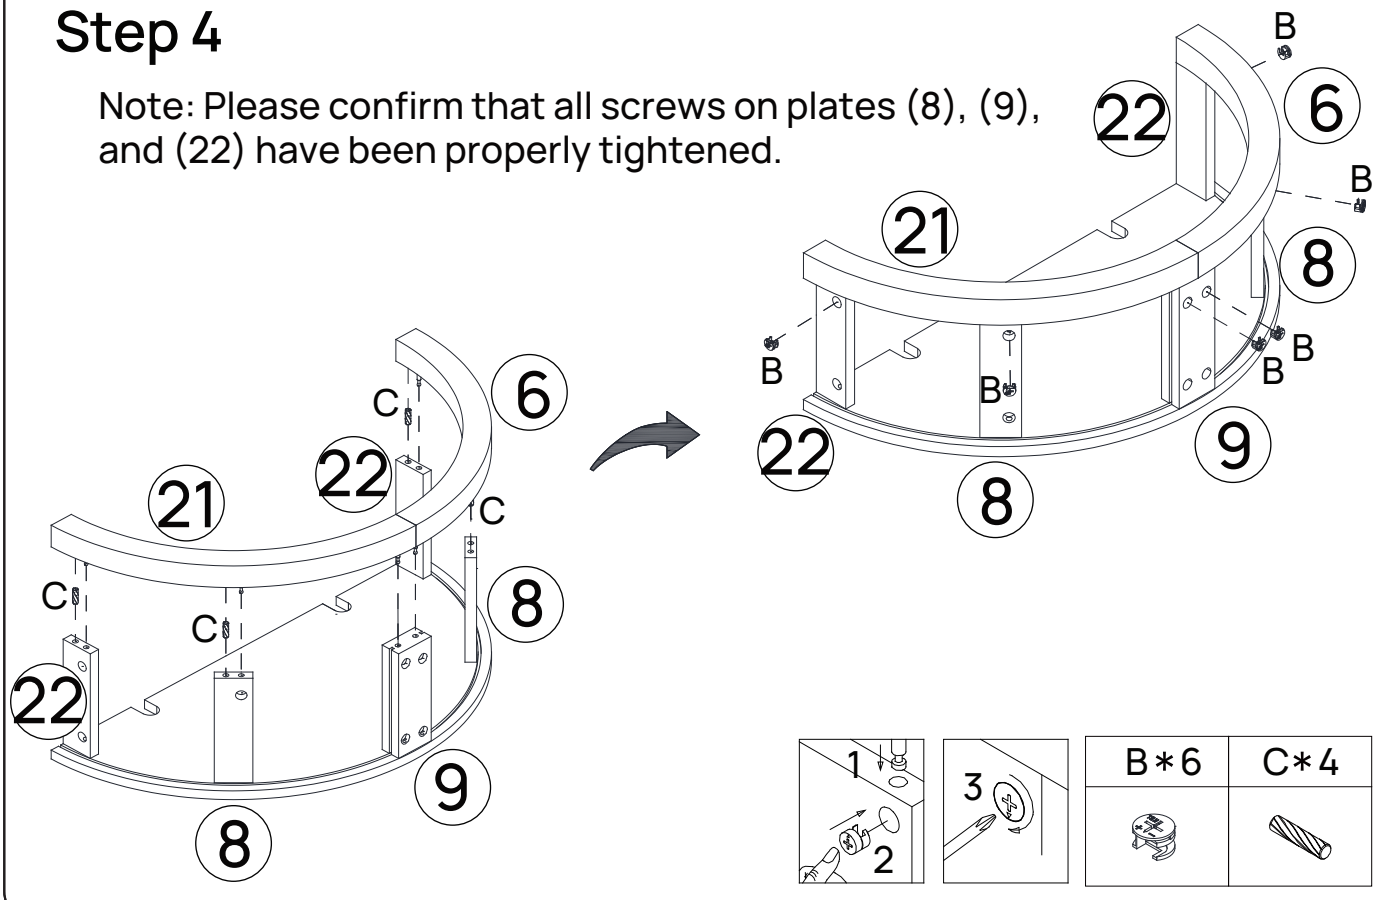


Step 5


As shown in the diagram: Align Part (2) with the slot, and then apply firm but gentle pressure to snap it into place.

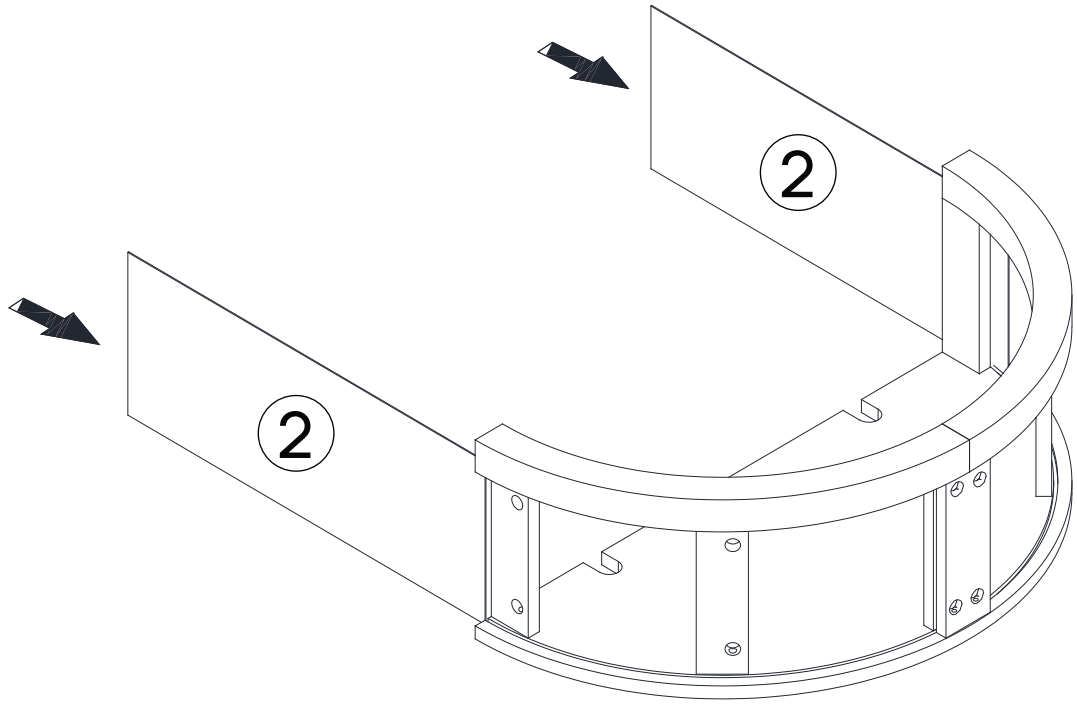

Step 6

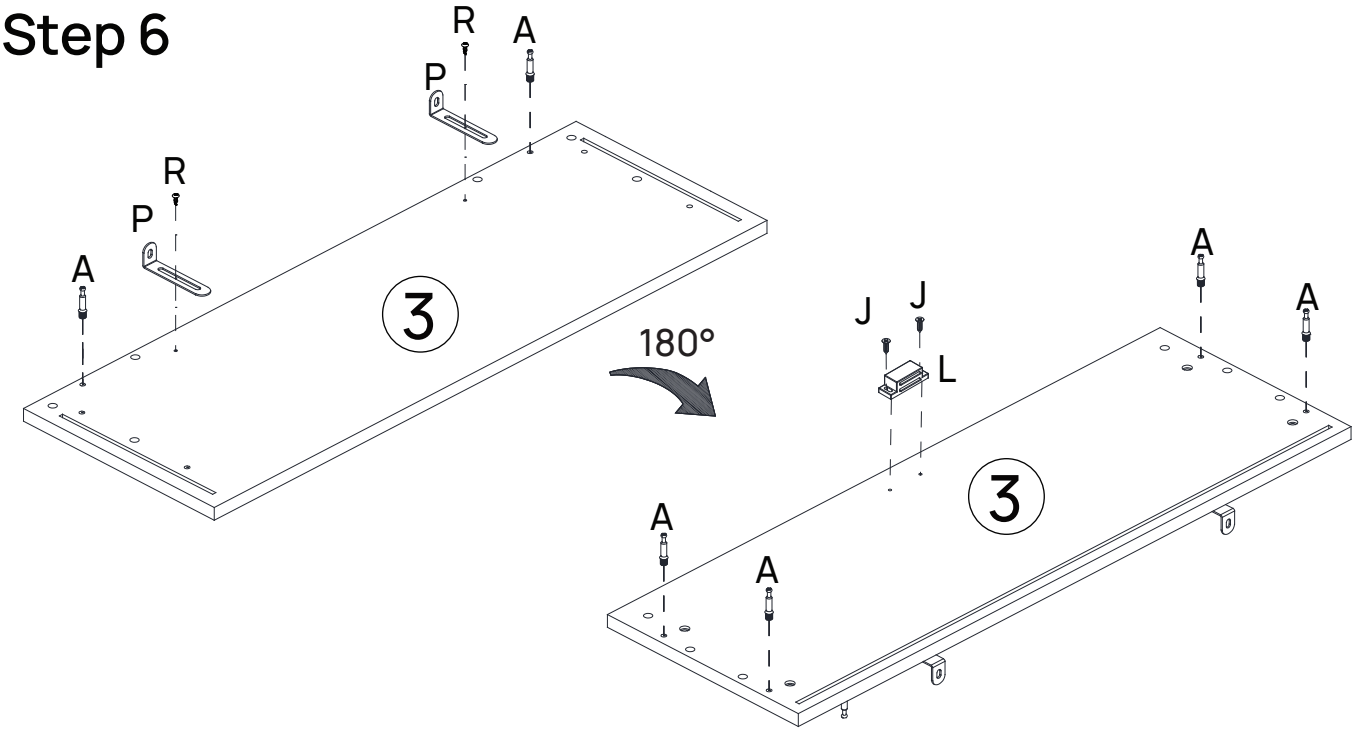




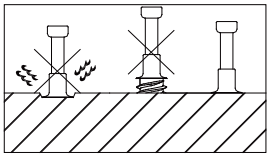


R∗2	P∗2	A∗6	J∗2	L∗1
				


Step 7

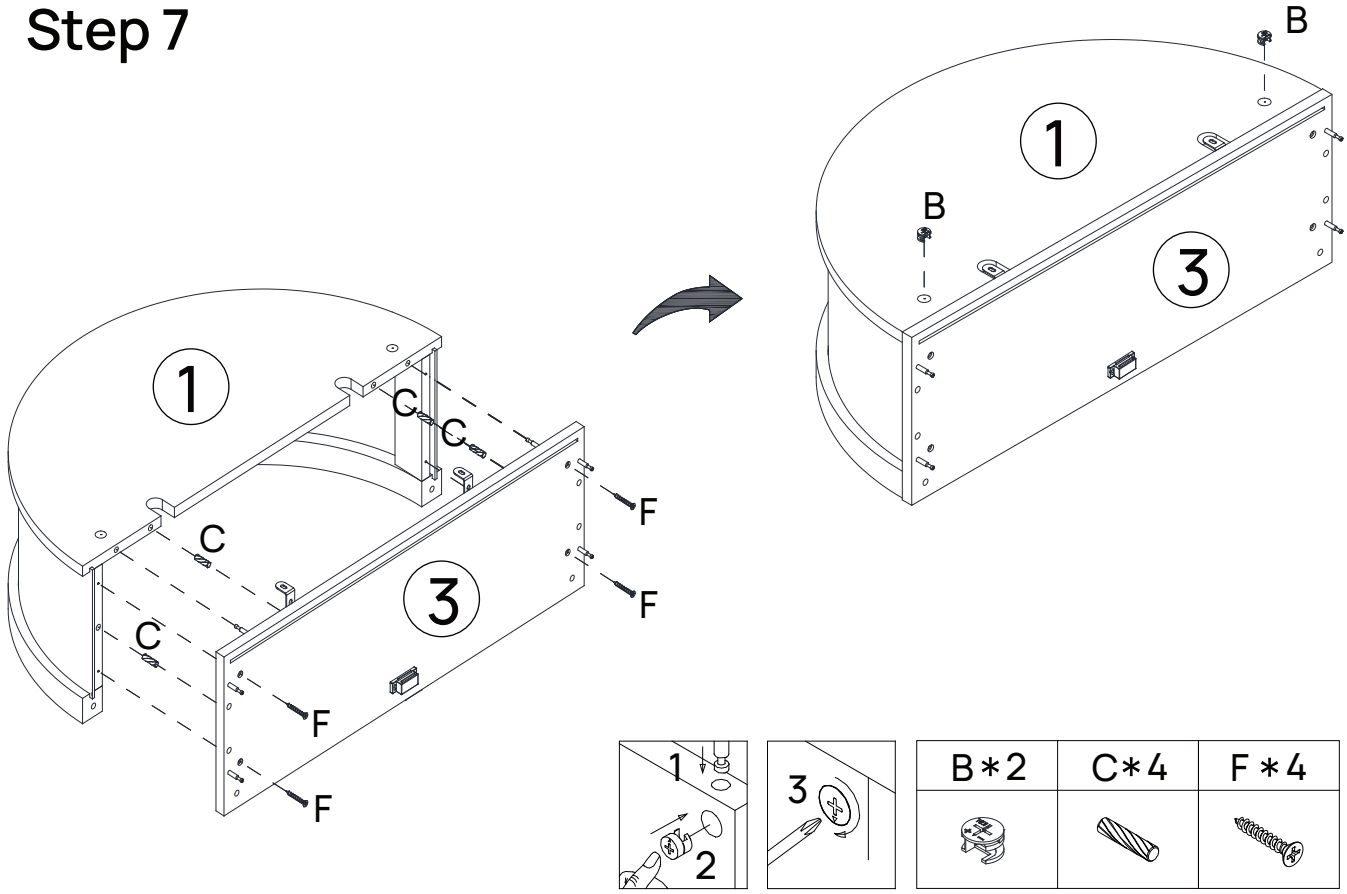

B*2	C*4	F*4


Step 8

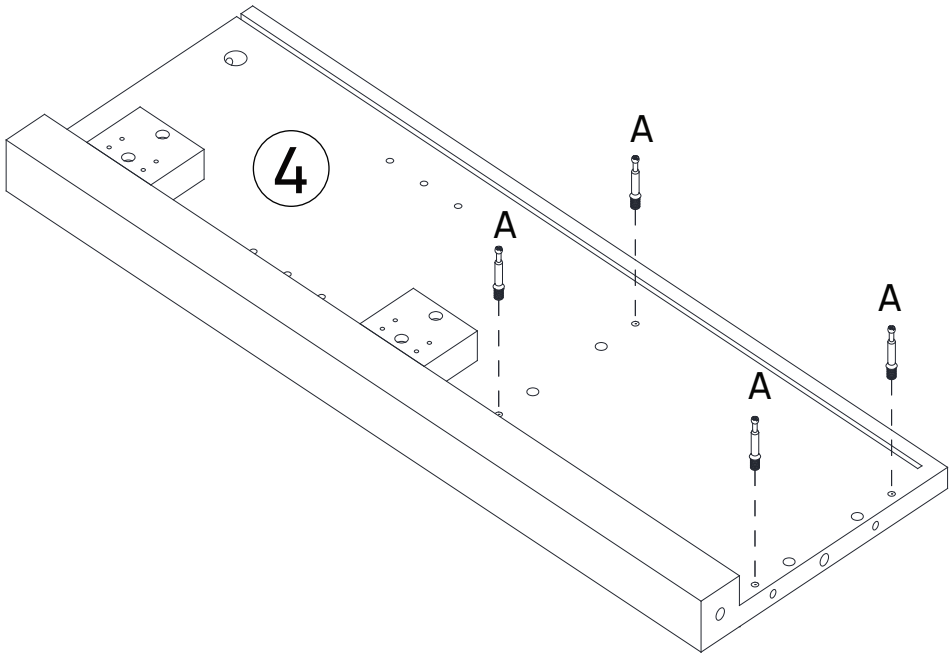


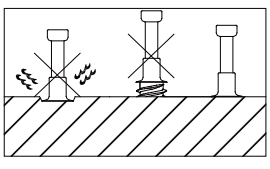


A*4



Step 9

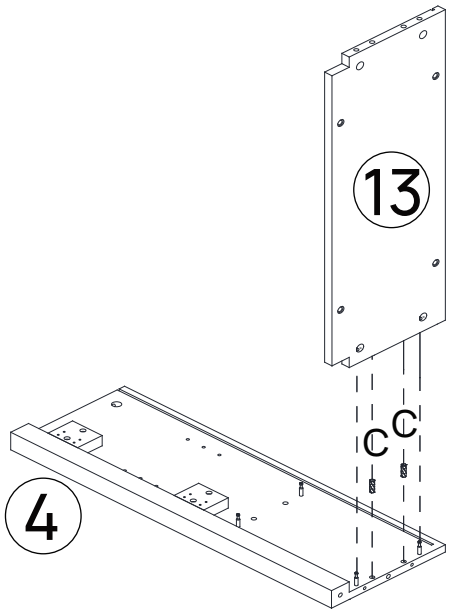


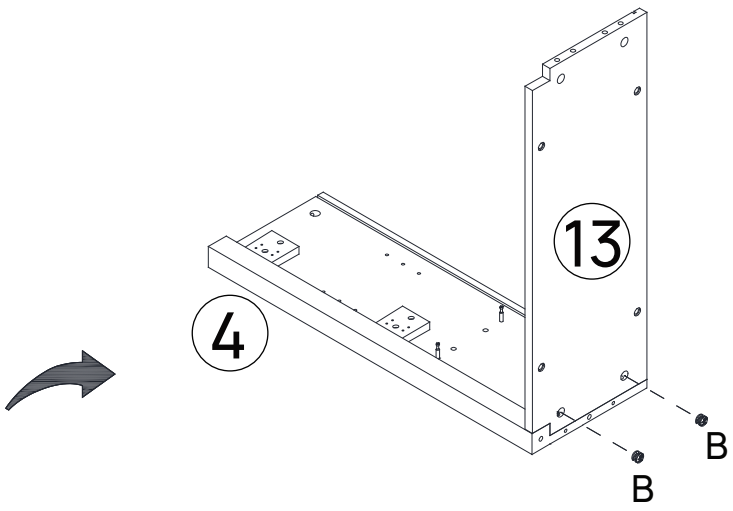


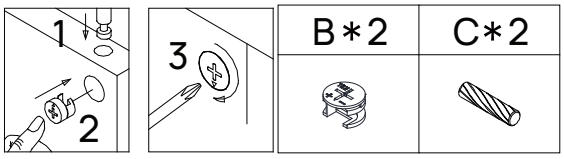


Step 10

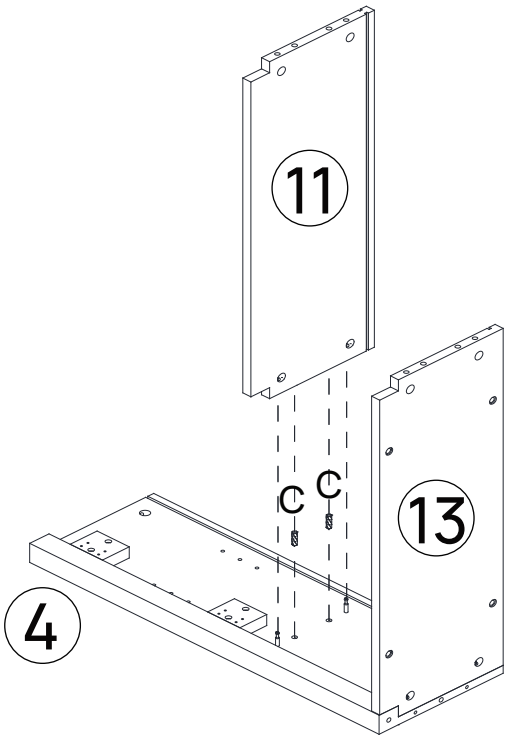

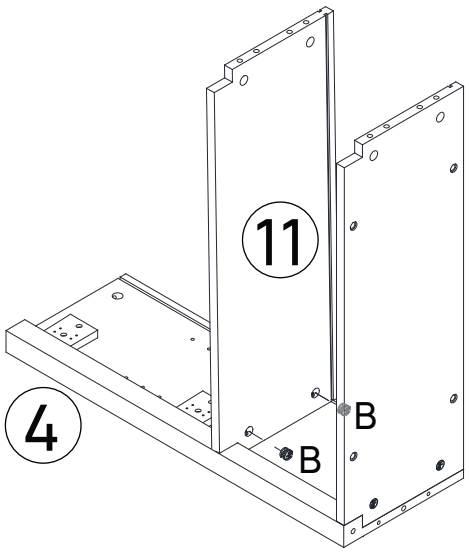


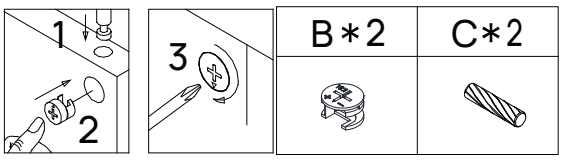


Step 11

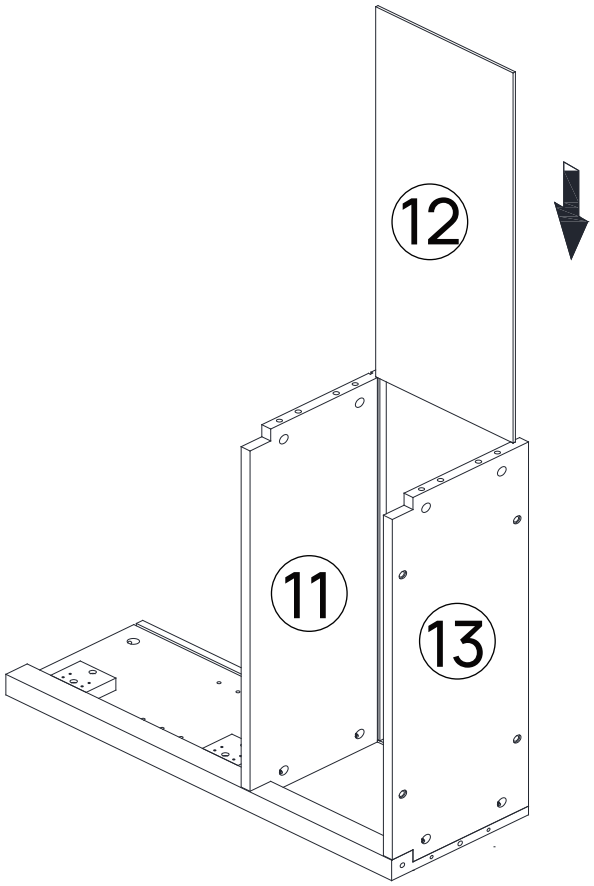


Step 12

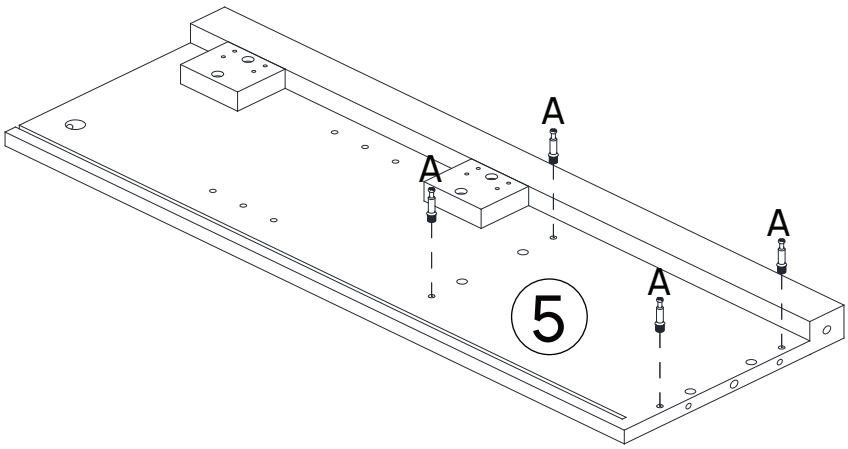




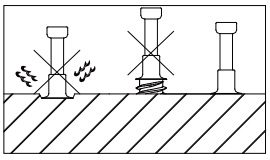


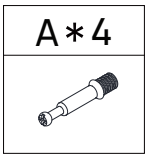


Step 13

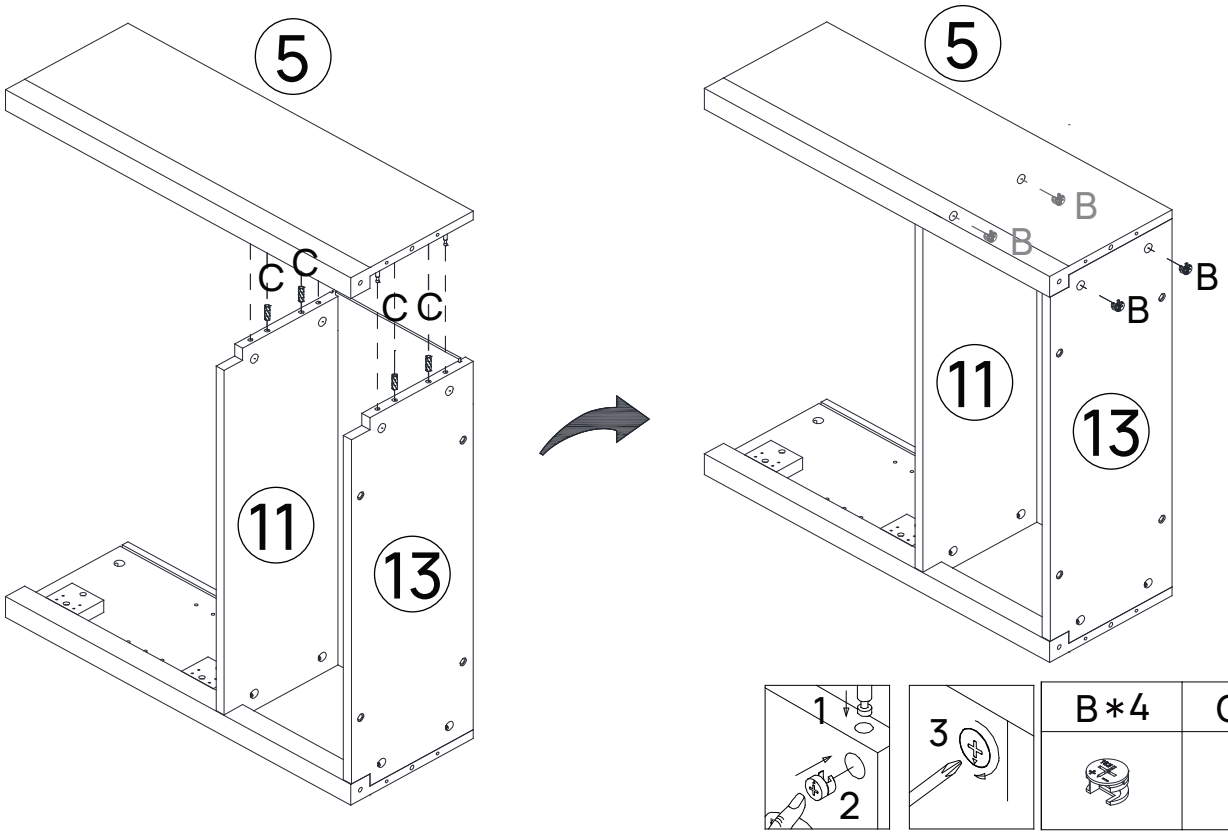


Step 14

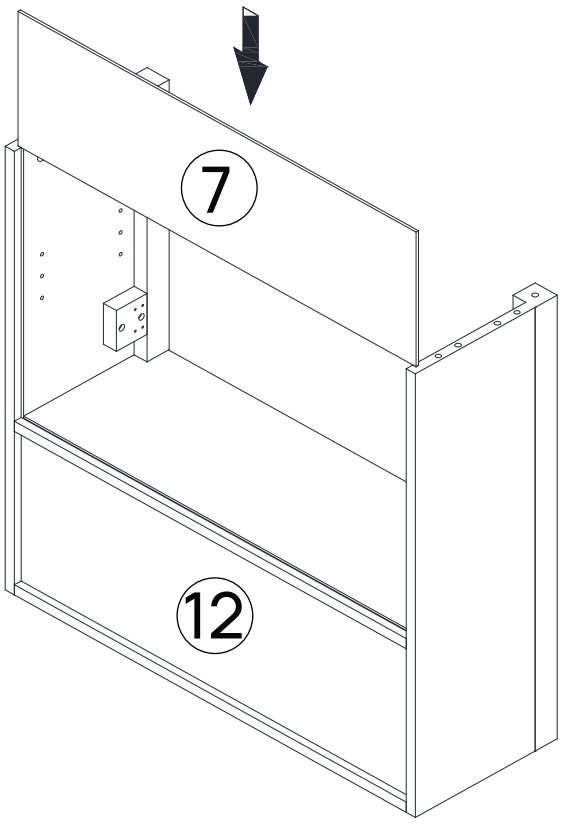


Step 15

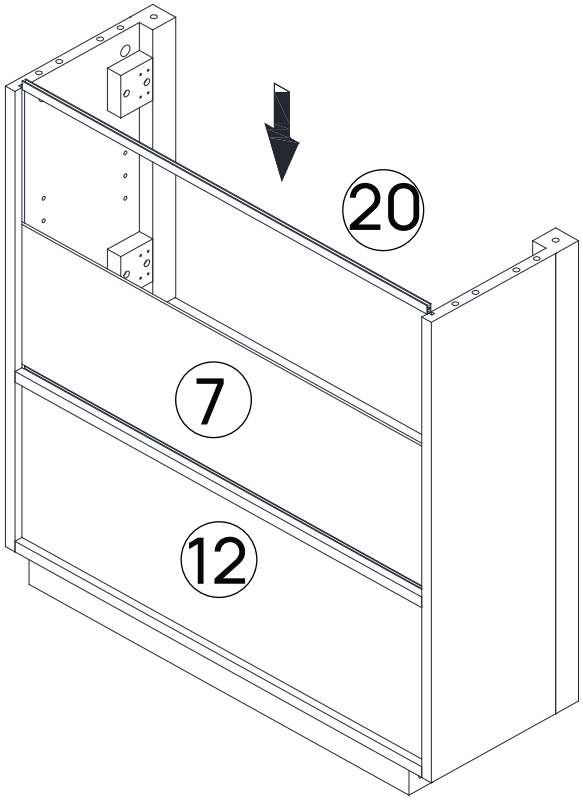

Step 16

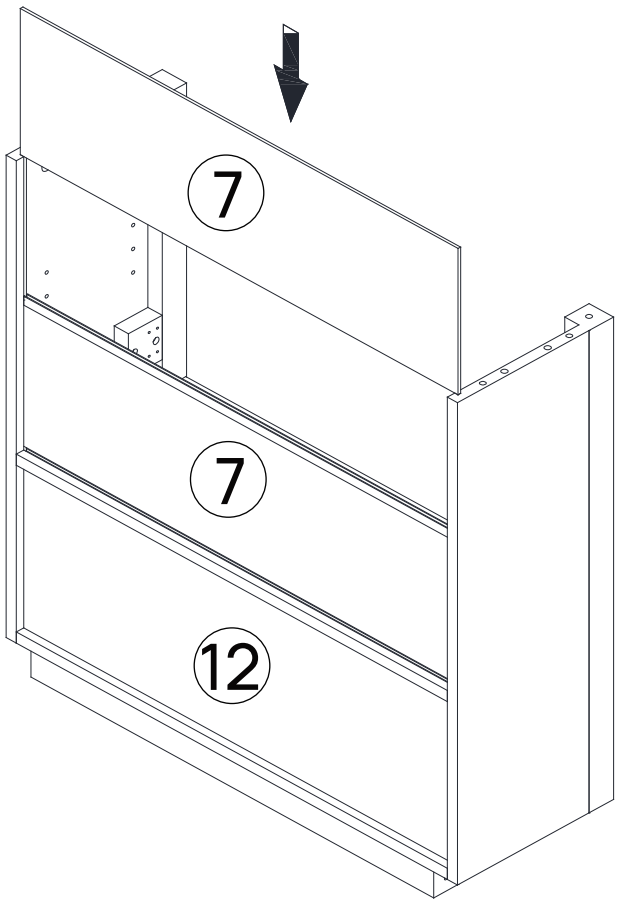




Step 17

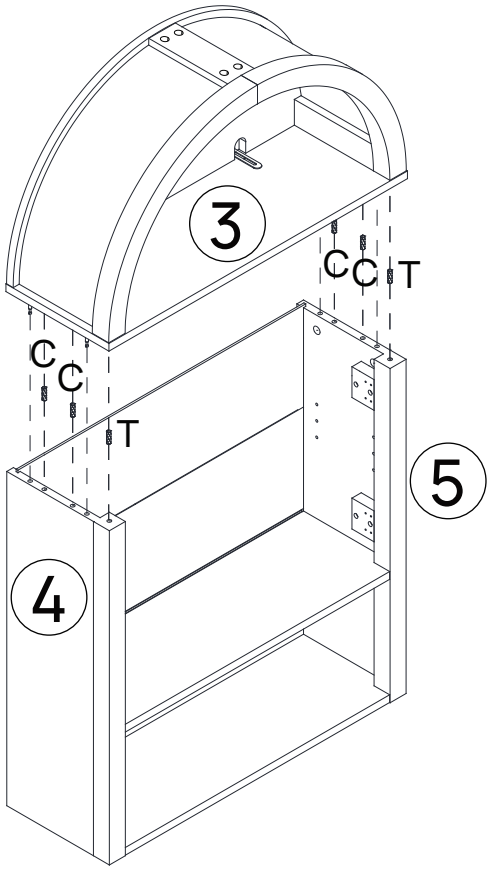


T*2	C*4
	

Step 18

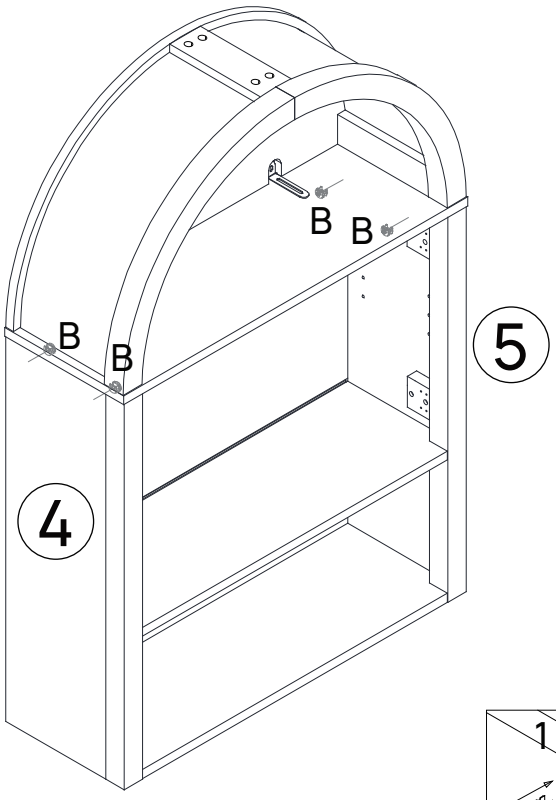

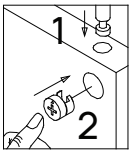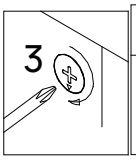
		B*4
		

Step 19

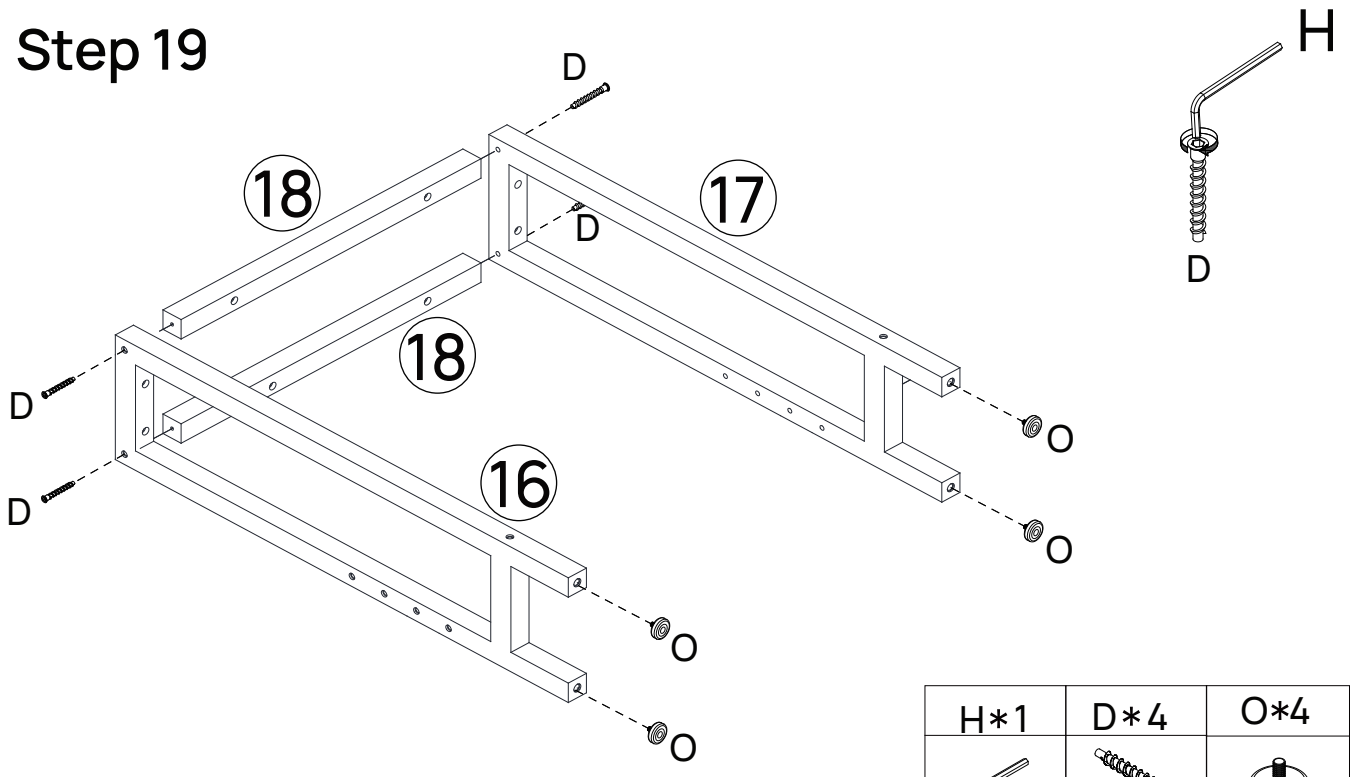


H*1	D*4	O*4

Step 20

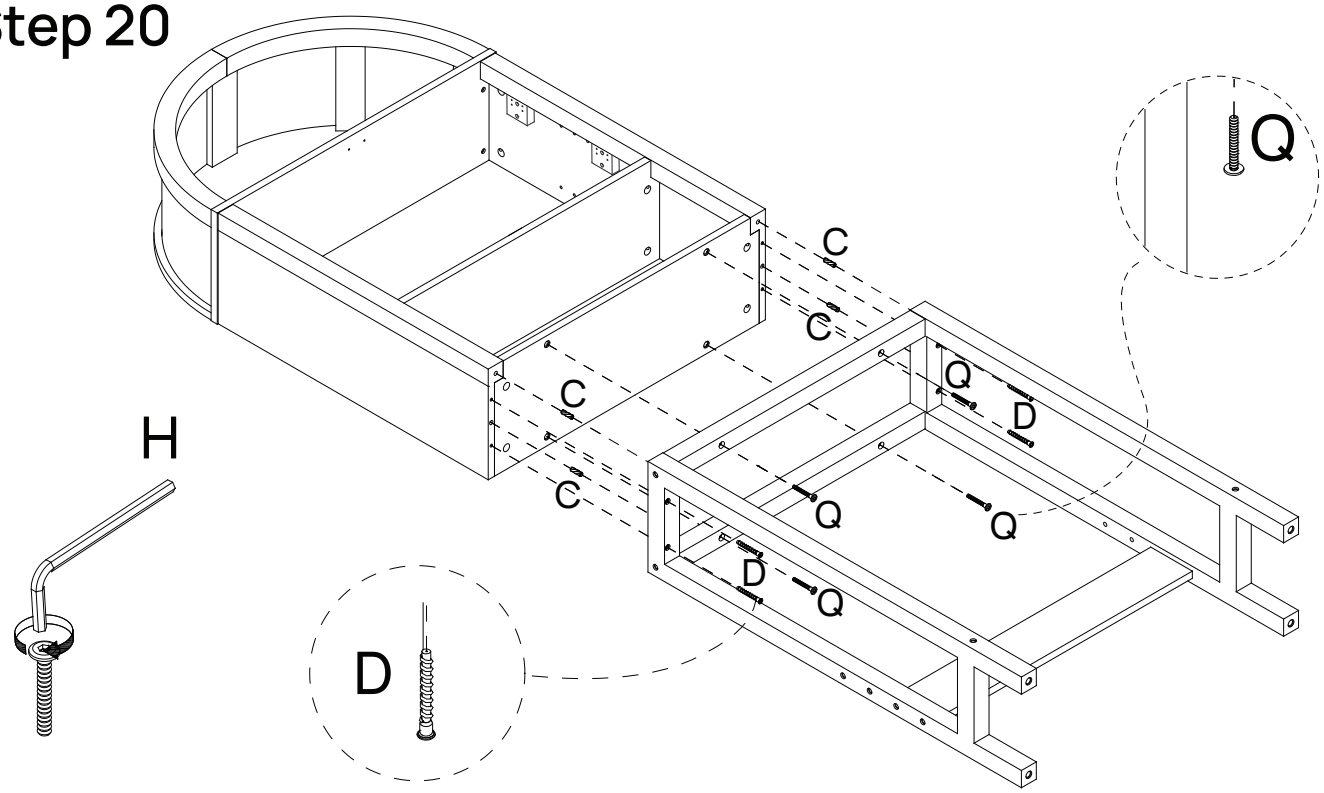

C*4	D*4	Q*4	H*1

Step 21

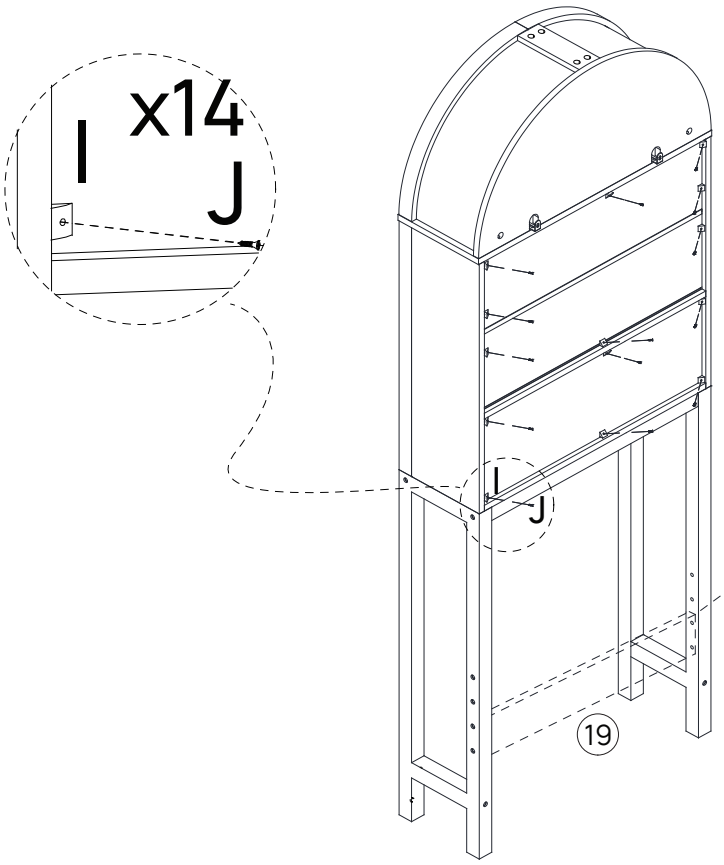


Must Be Installed


Warning: The lower portion of the cabinetlacks stability until Part (19) is correctly installed.Use extreme care when moving the cabinet.


I *14	J *14
	

Step 22

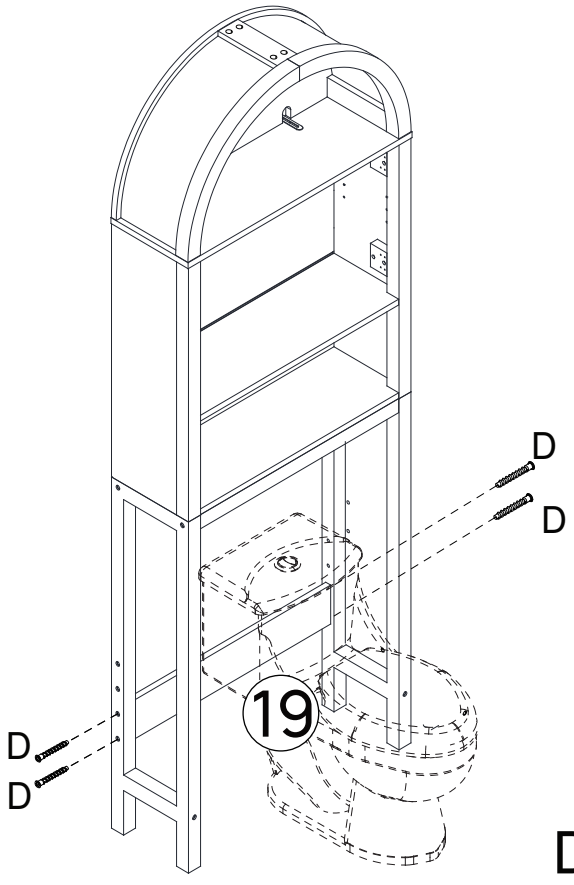

Based on actual site conditions,Panel 19 may be installed in any of three positions: upper, middle, or lower.

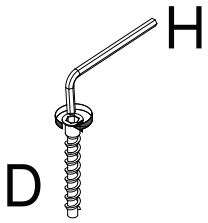


H*1	D*4
	

Step 23


Optional: Apply wood grain hole stickers as desired.

Notice: Align carefully before applying!
Re-peeling may damage the surface finish.

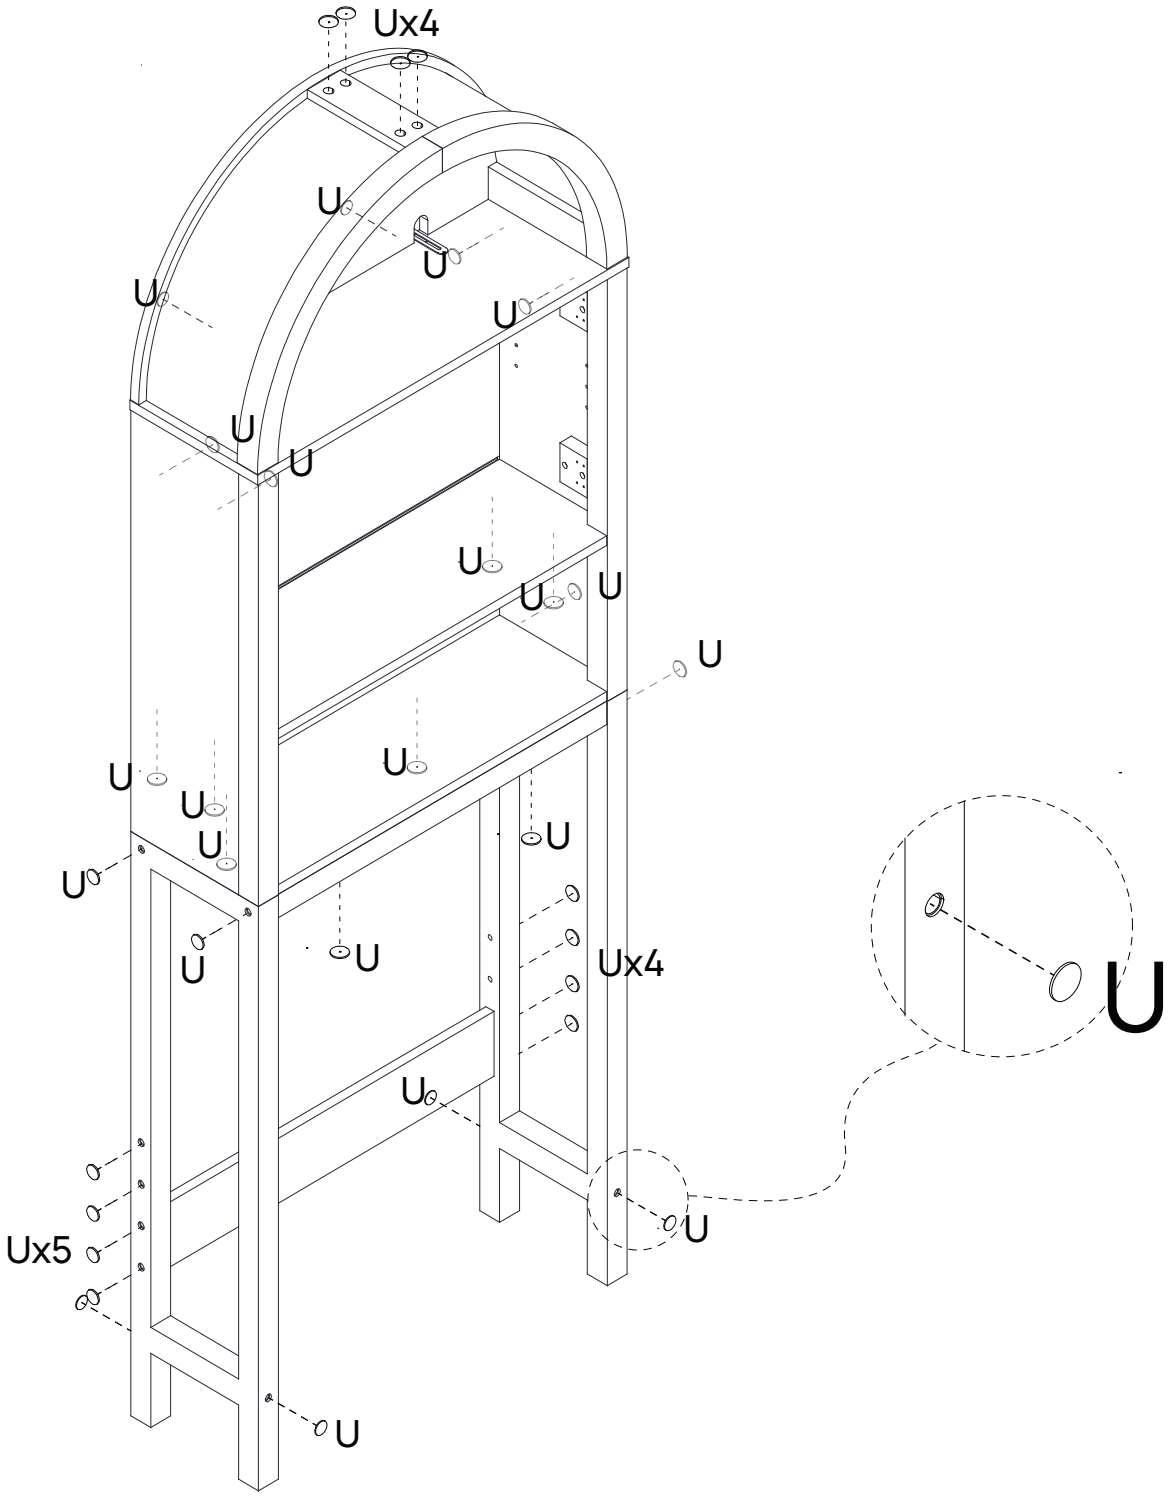


U*34

Step 24

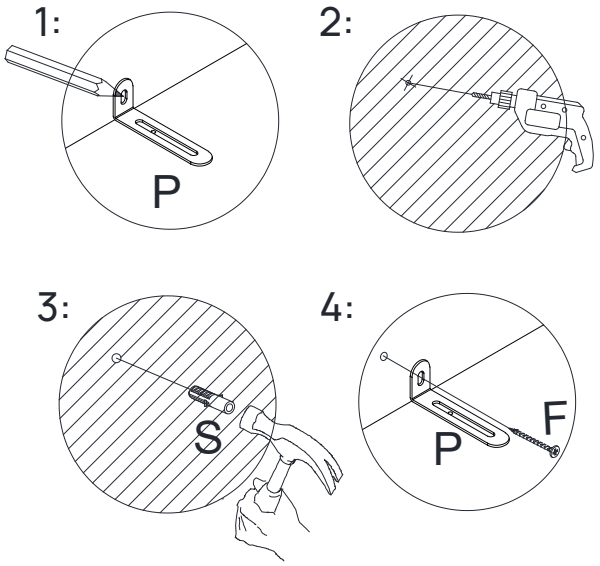


WALL

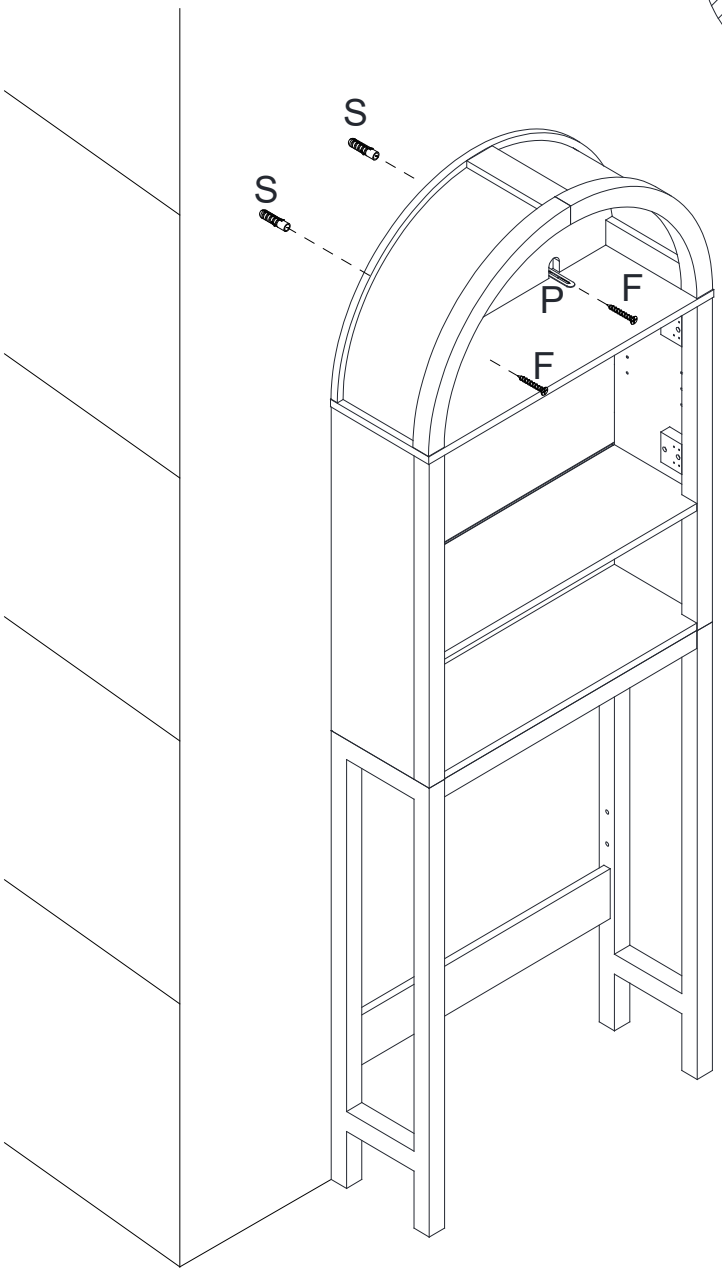


S*2	F*2
	


Step 25

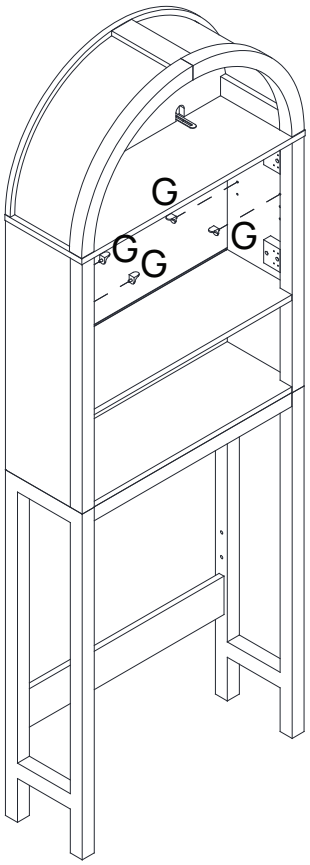

G*4


Step 26

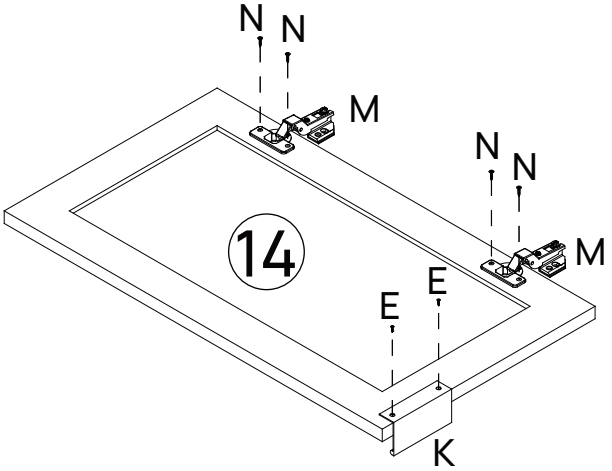

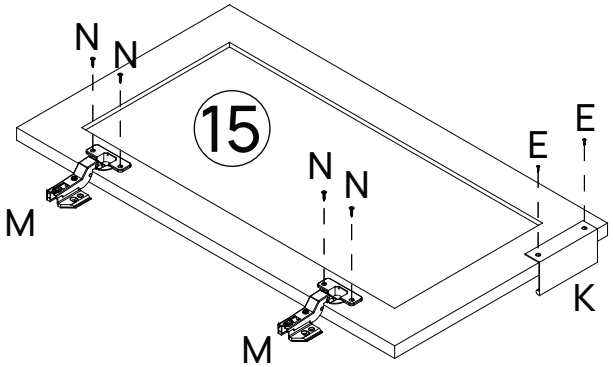


E*4	K*2	M*4	N*8
			

Cabinet Door Adjustment Instructions


Height adjustment:

a) Locate the height adjustment screws on the hinge.
b) Use the Phillips screwdriver to either tighten or loosen the screws to raise or lower the cabinet door as desired.

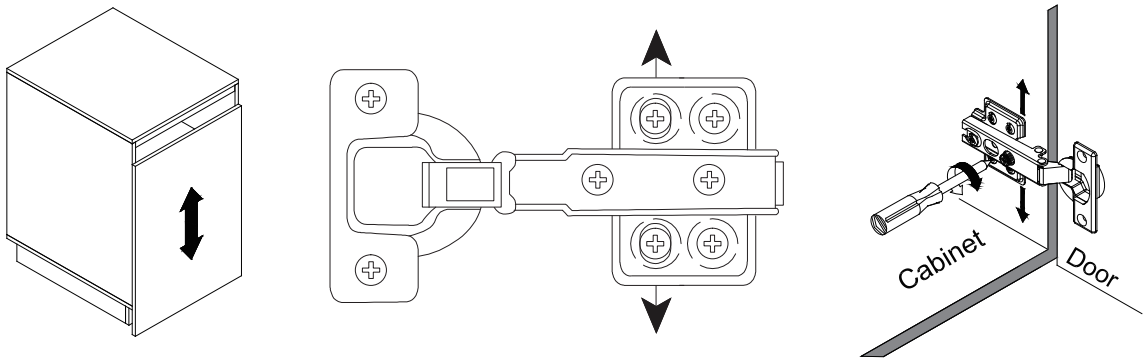


Side-to-side adjustment:


a) If the cabinet door needs to be moved closer to or away from the cabinet frame, locate the side-to-side adjustment screws on the hinge.
b) Use the Phillips screwdriver to adjust these screws and gradually move the door in the desired direction.

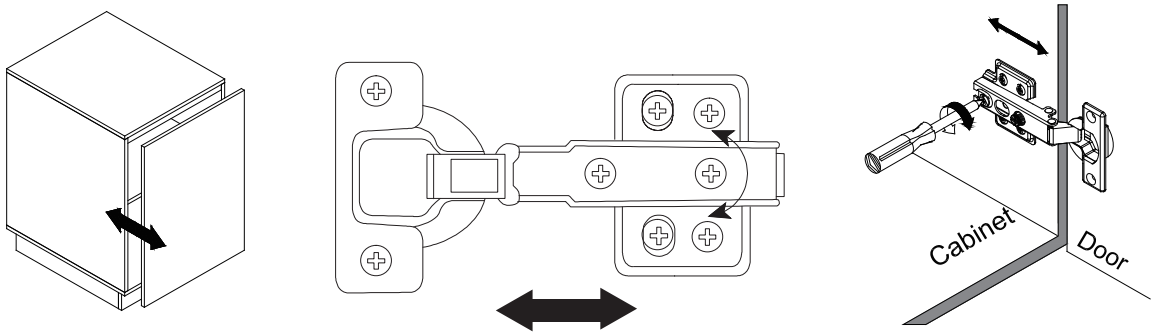


Depth adjustment (if applicable):

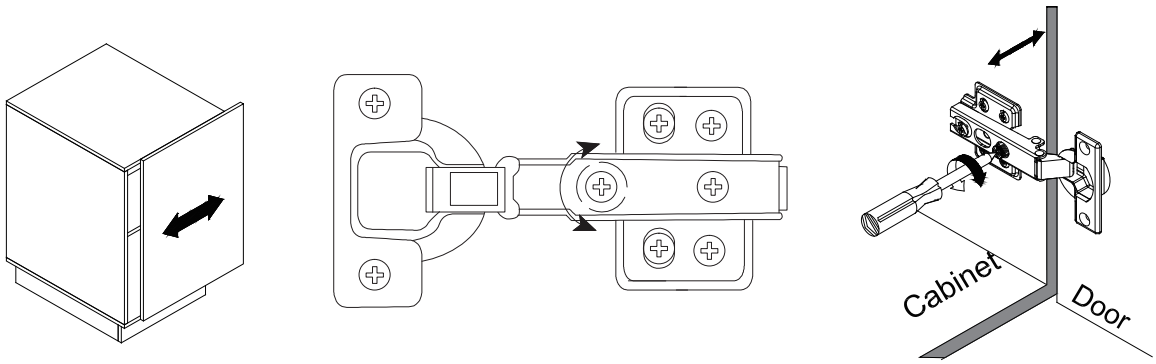


Step 27

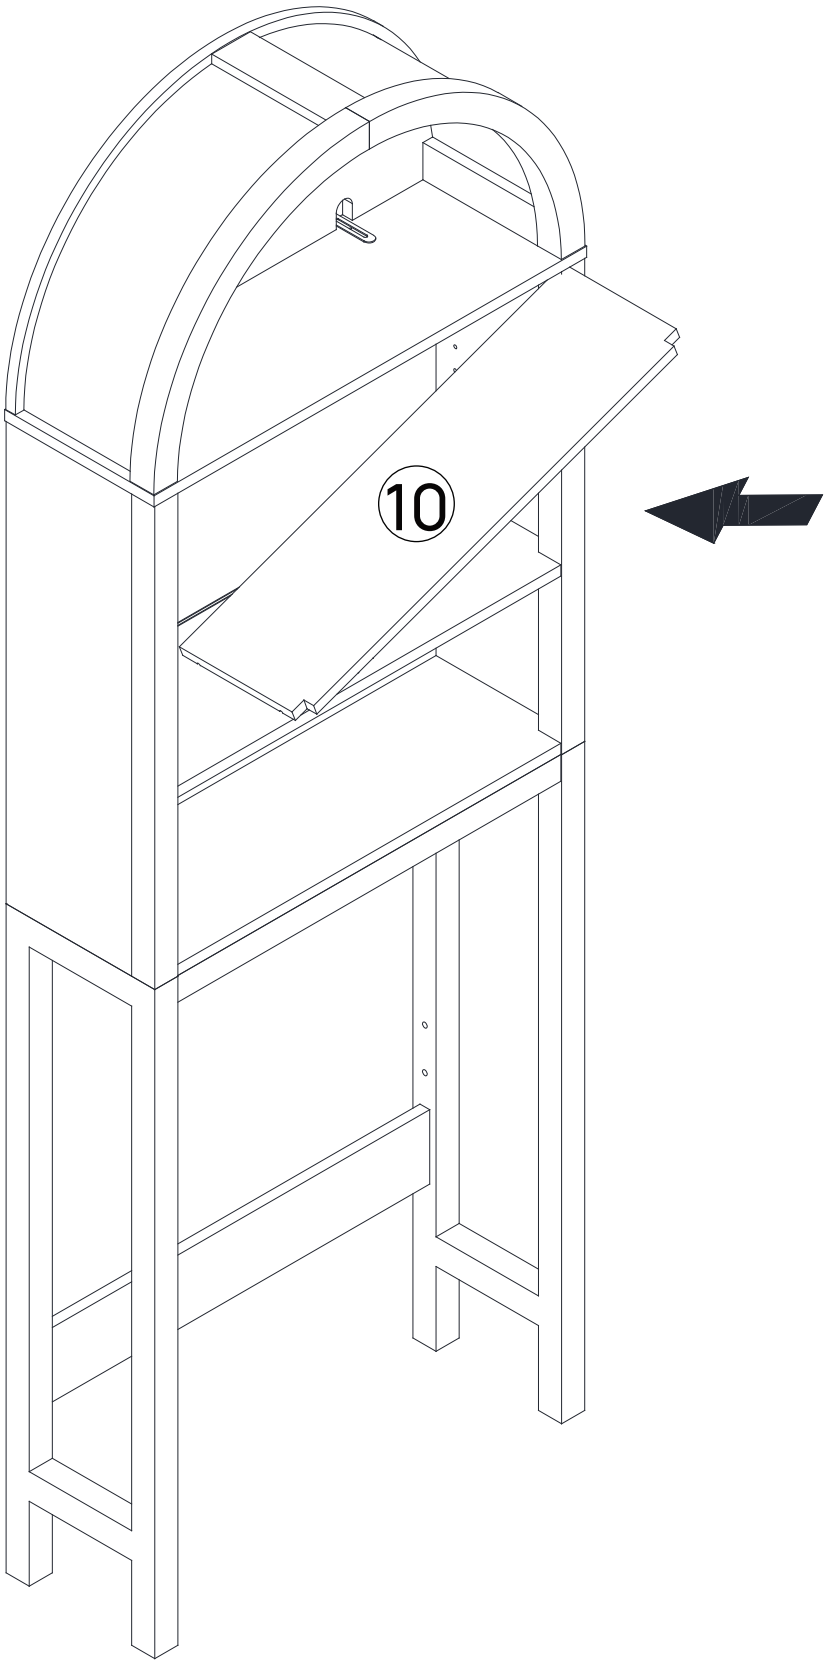

Step 28

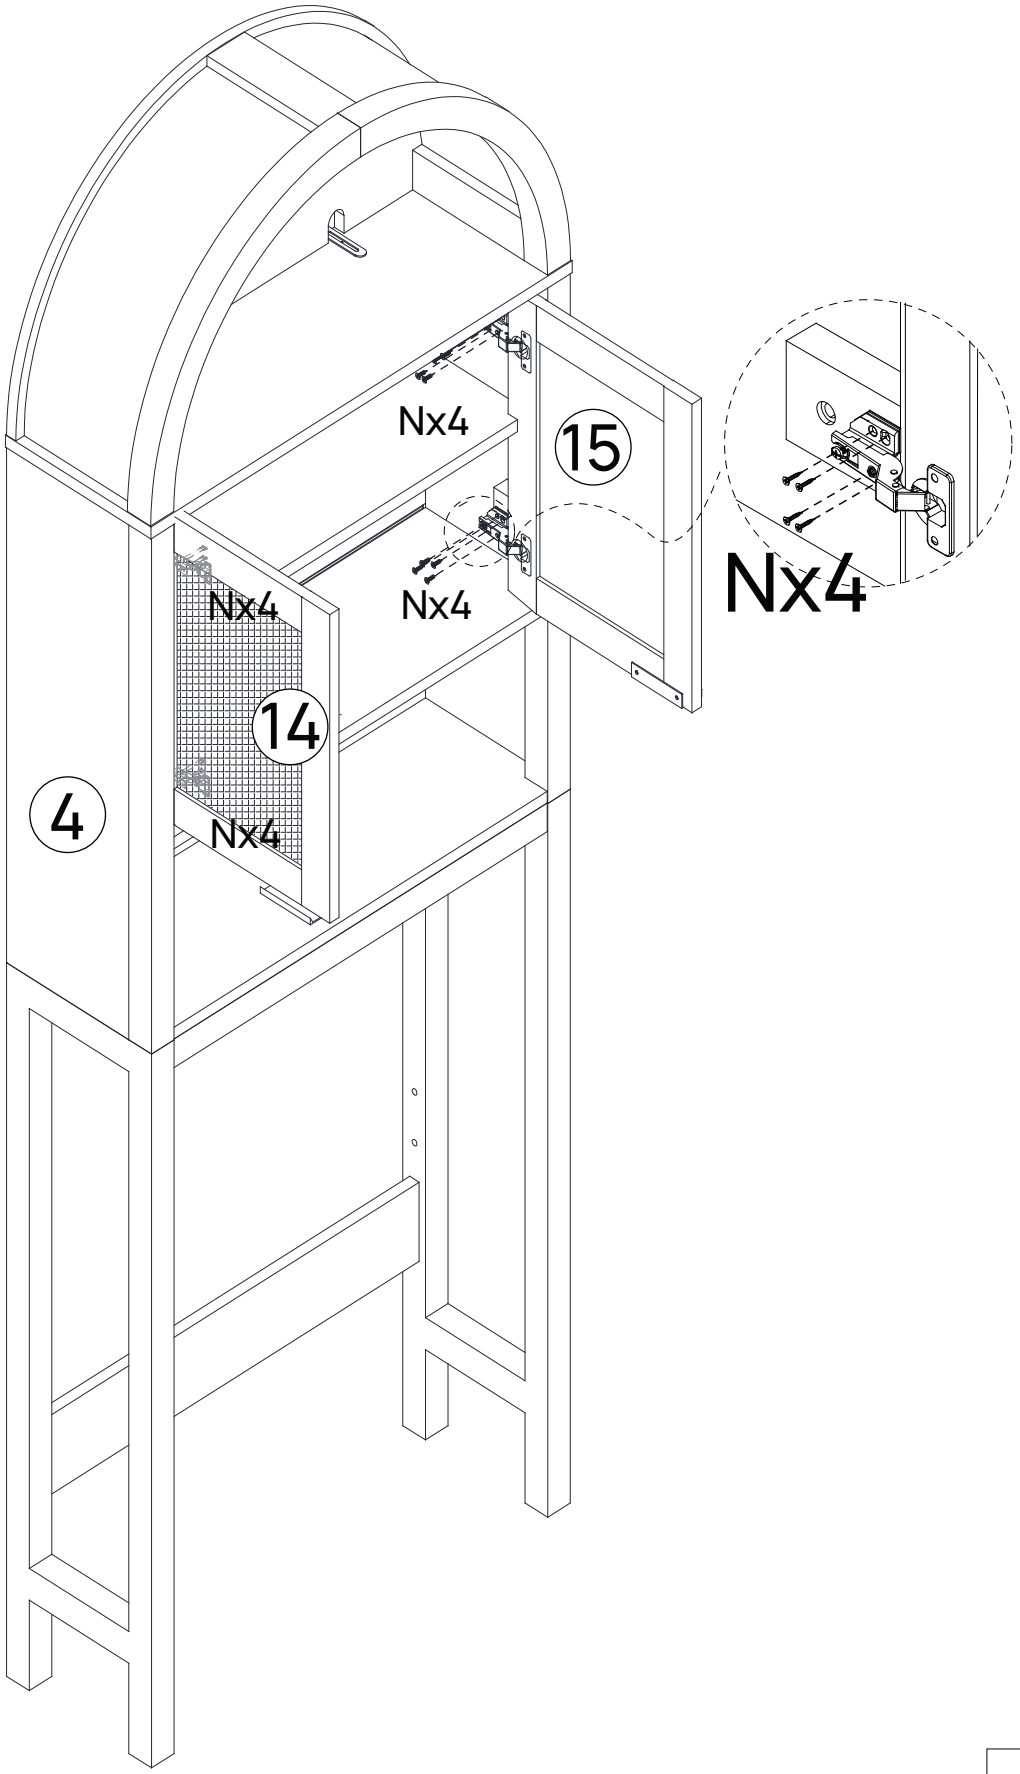

N*16

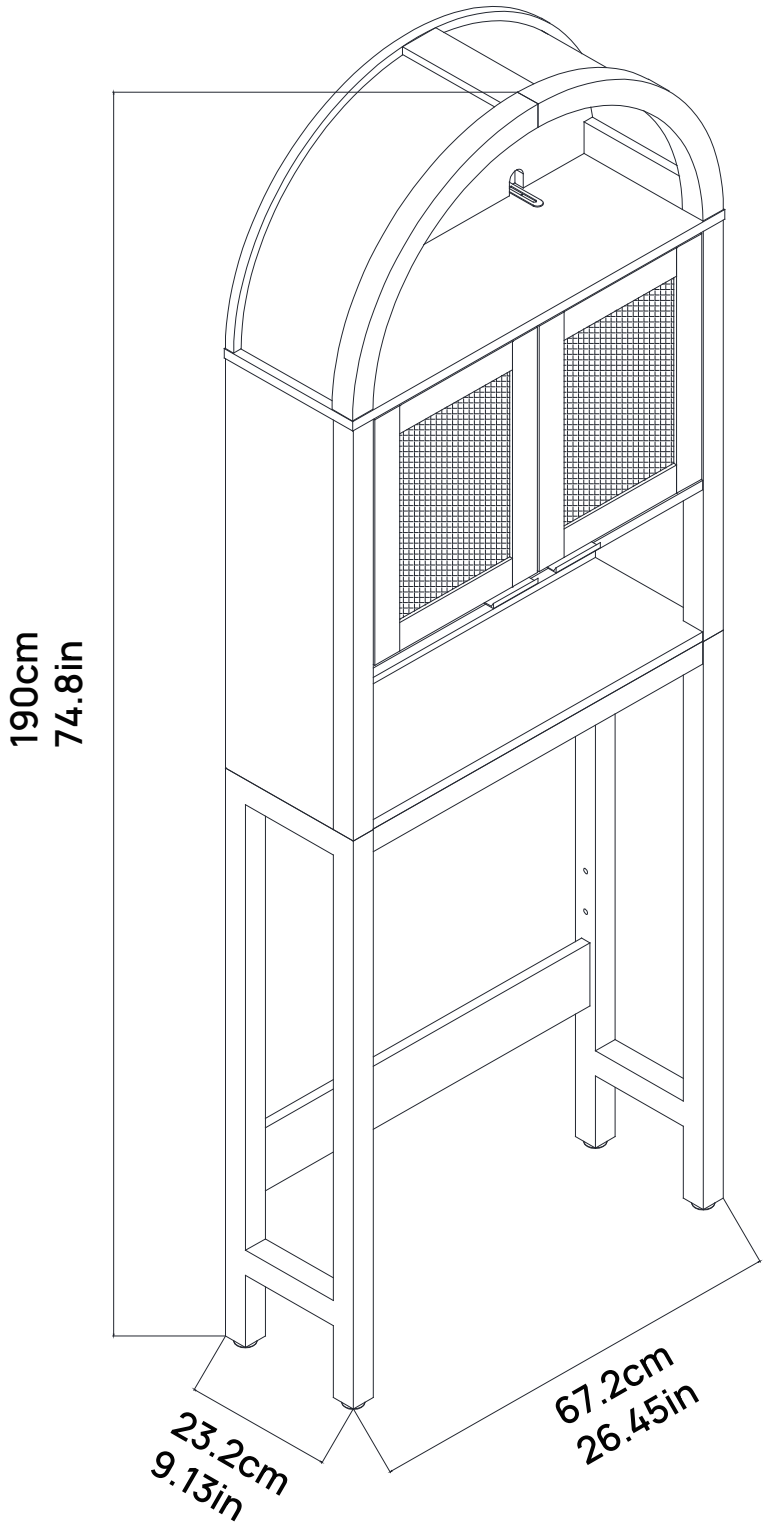

190cm
74.8in
23.2cm
9.13in
67.2cm
26.45in