

CHIC HOUSE

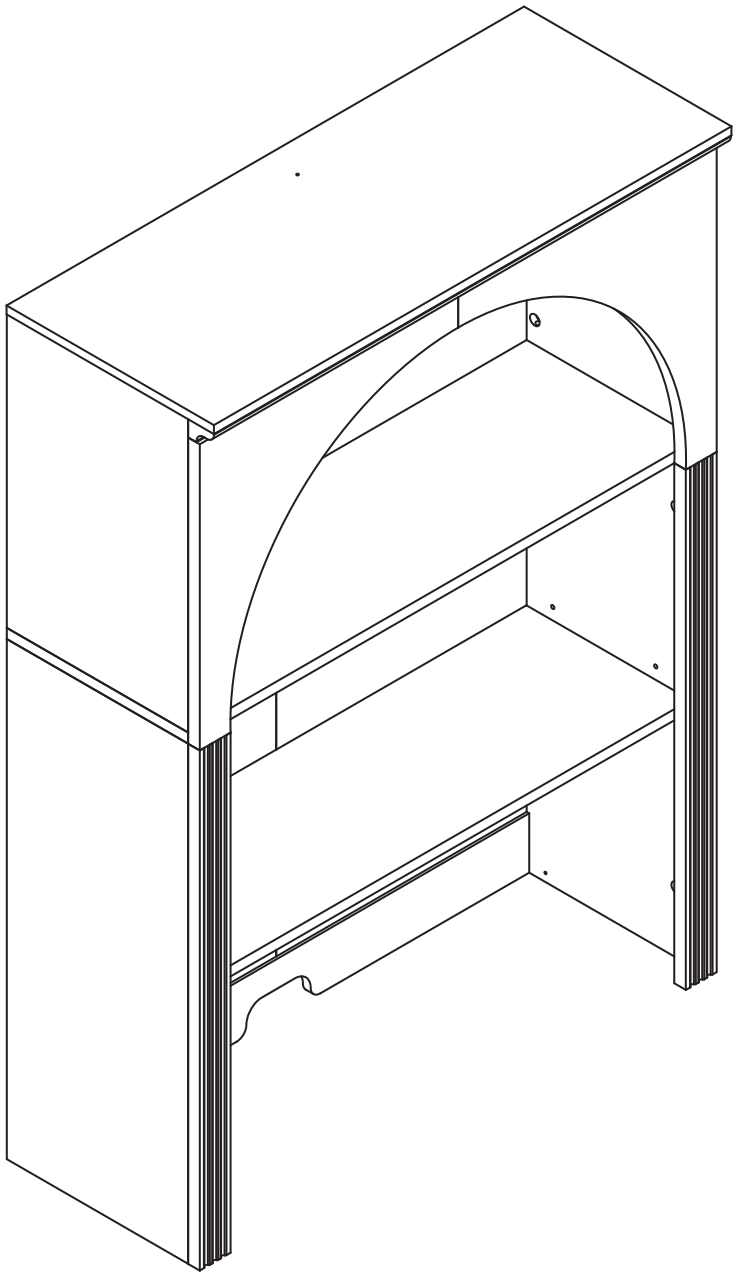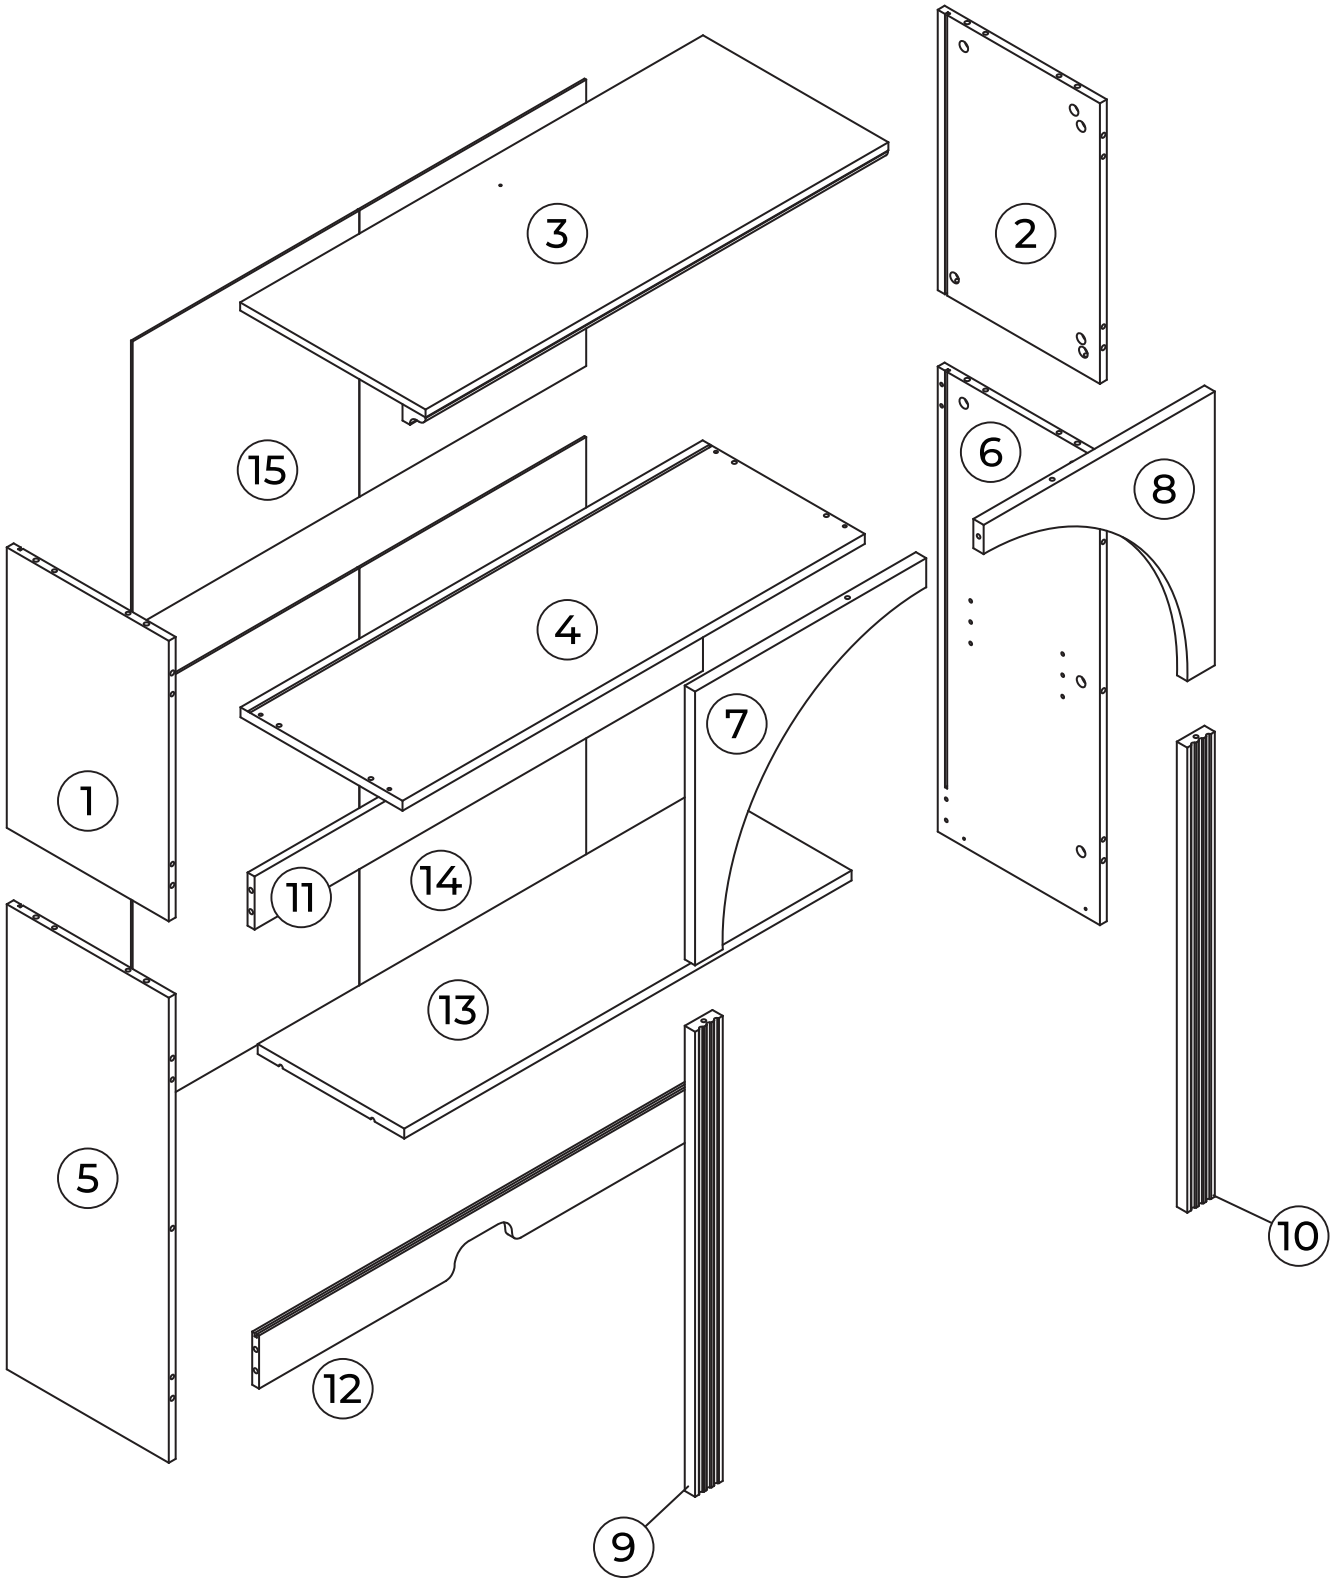

Monos
















Square-Top Tall Cabinet

Assembly Instructions - Please keep for future reference
Important - Please read these instructions before assembly
Customer Support - support@chichouse.cn


3
2
15
6
8
4
1
7
11
14
13
5
10
12
9










Components

Please check if all the pieces listed below are received.

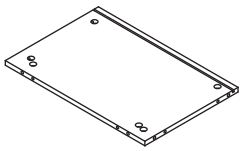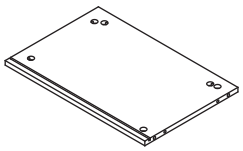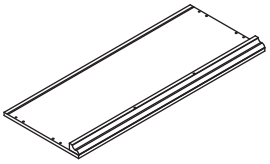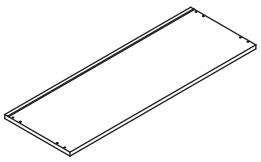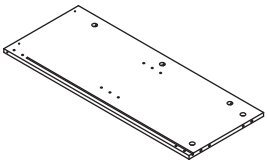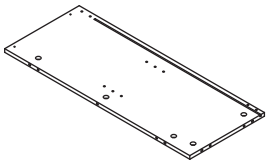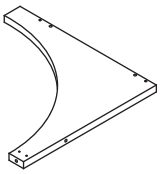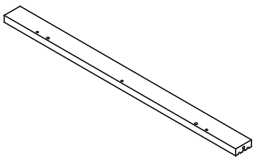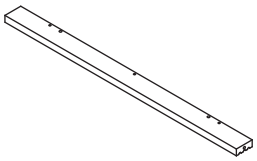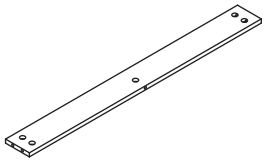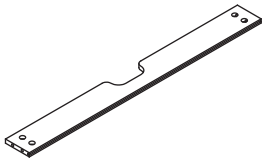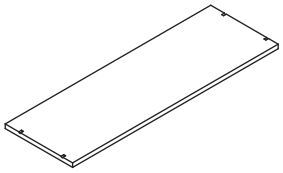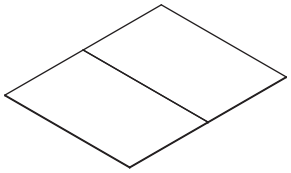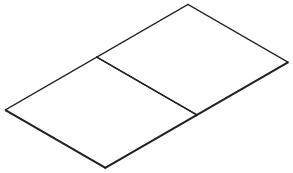
1  x1	2  x1	3  x1	4  x1
5  x1	6  x1	7  x1	8  x1
9  x1	10  x1	11  x1	12  x1
13  x1	14  x1	15  x1	


Components

Please check if all the pieces listed below are received.

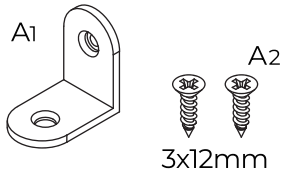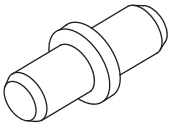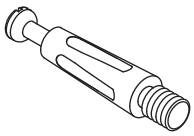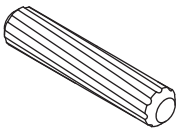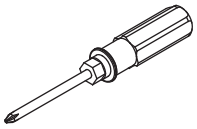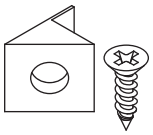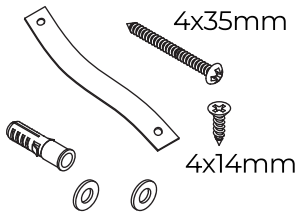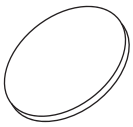A A1 4PCS A2 8+2PCS  3x12mm	B B1 4PCS B2 8+2PCS  3x12mm	C 4PCS 	D 31+2PCS  40mm
E 31+2PCS  ϕ 15x9mm	F 25+2PCS  6x30mm	G 1PCS 	H 12PCS  3.5x14mm
I 1PCS  	J 31+2PCS  ϕ 20mm		


Step 1

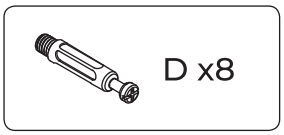

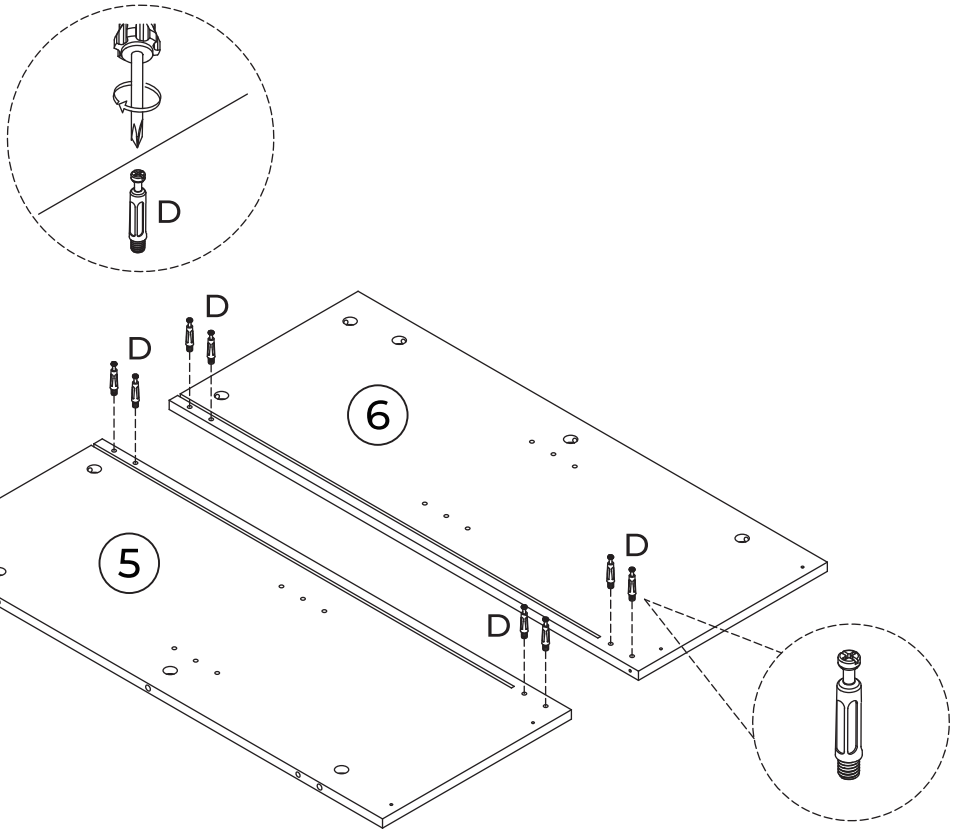


Step 2



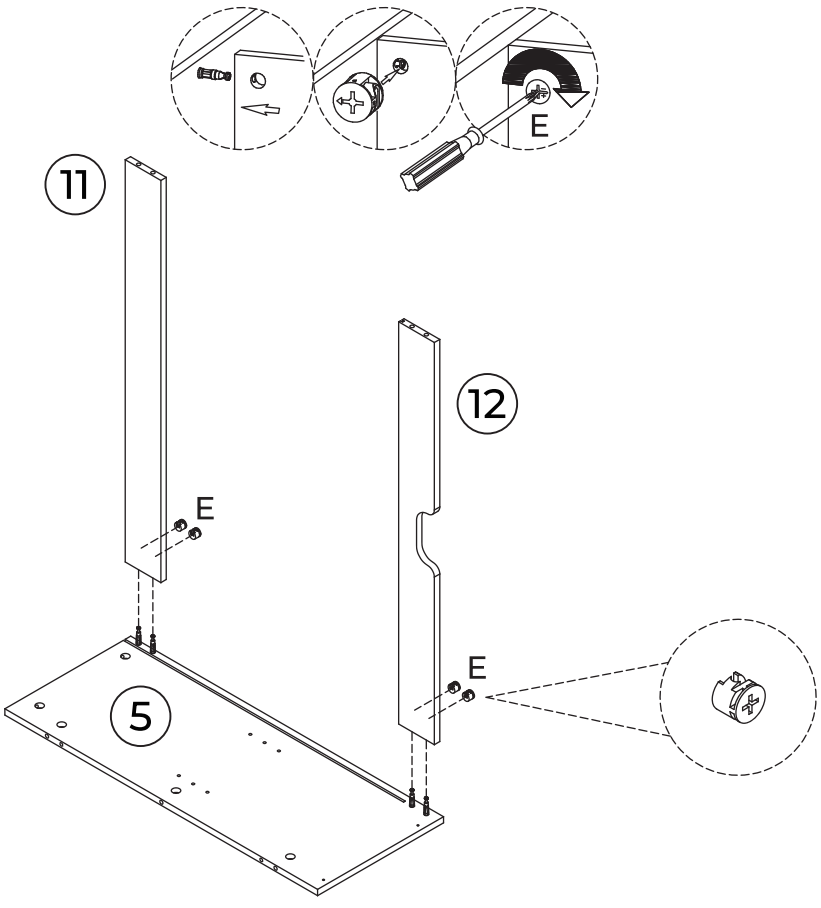



Step 3



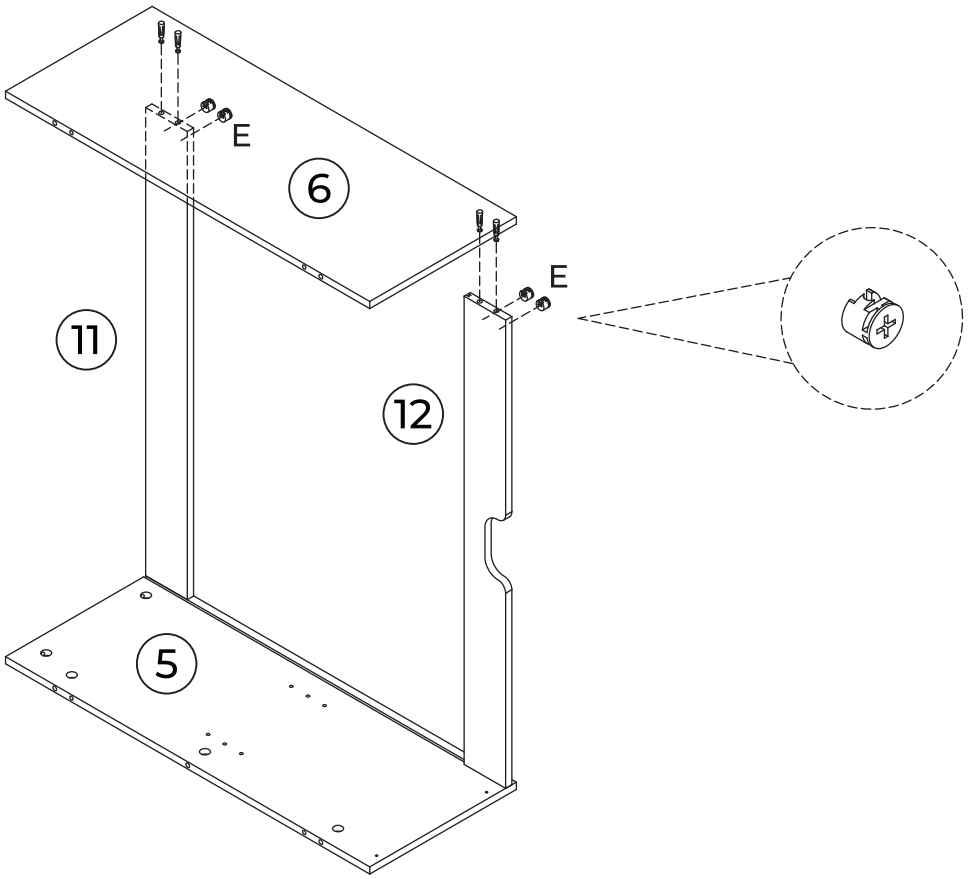


Step 4

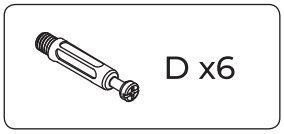


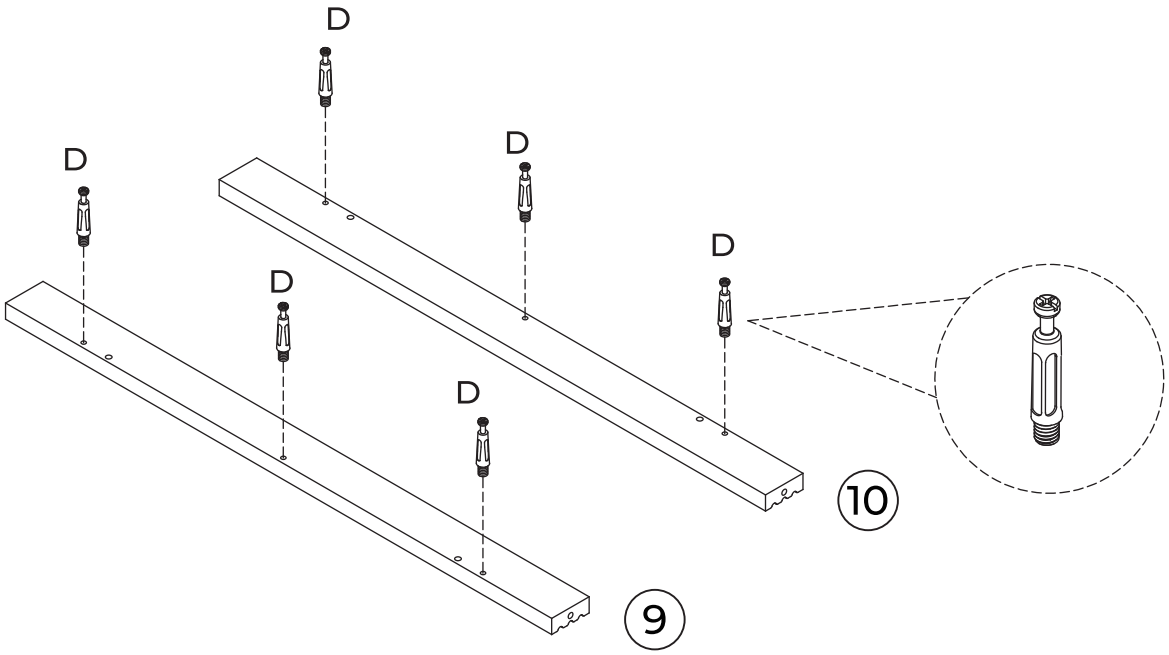

Step 5




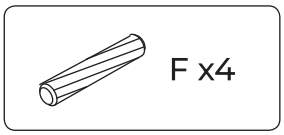


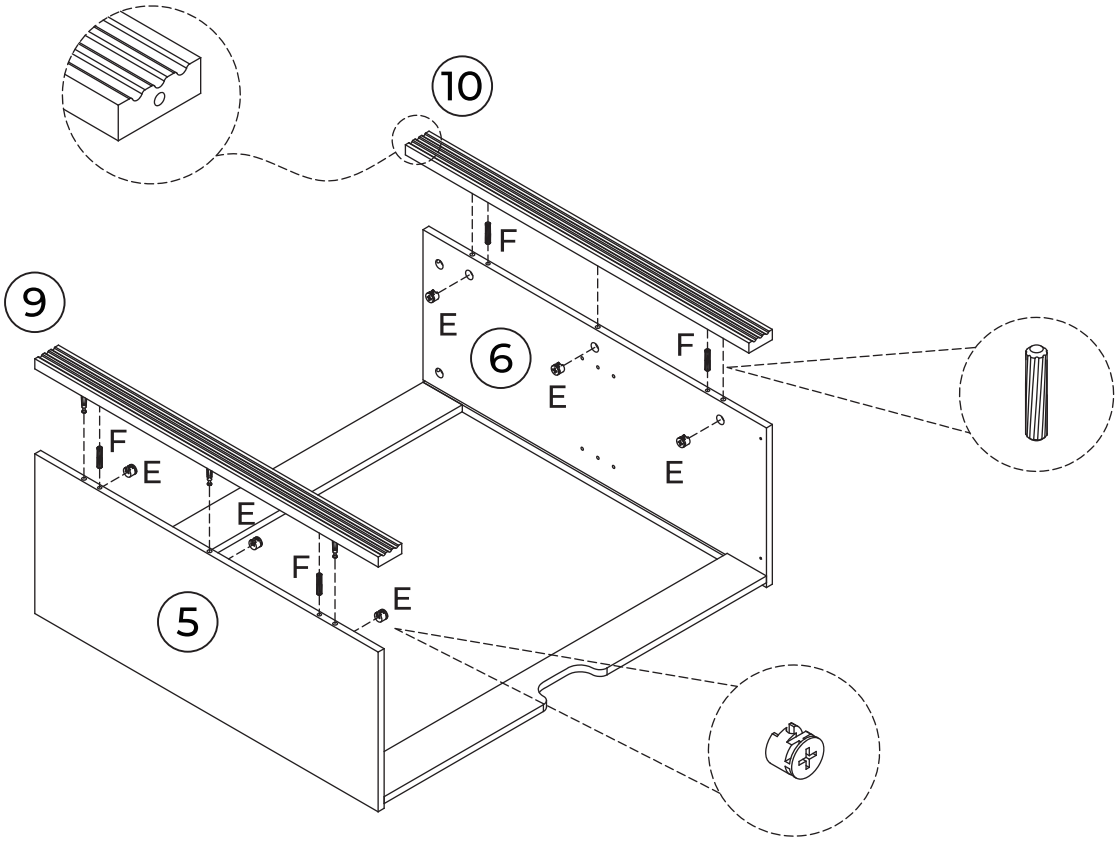


Step 6




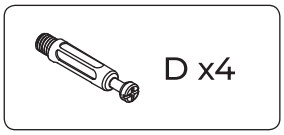

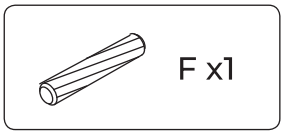


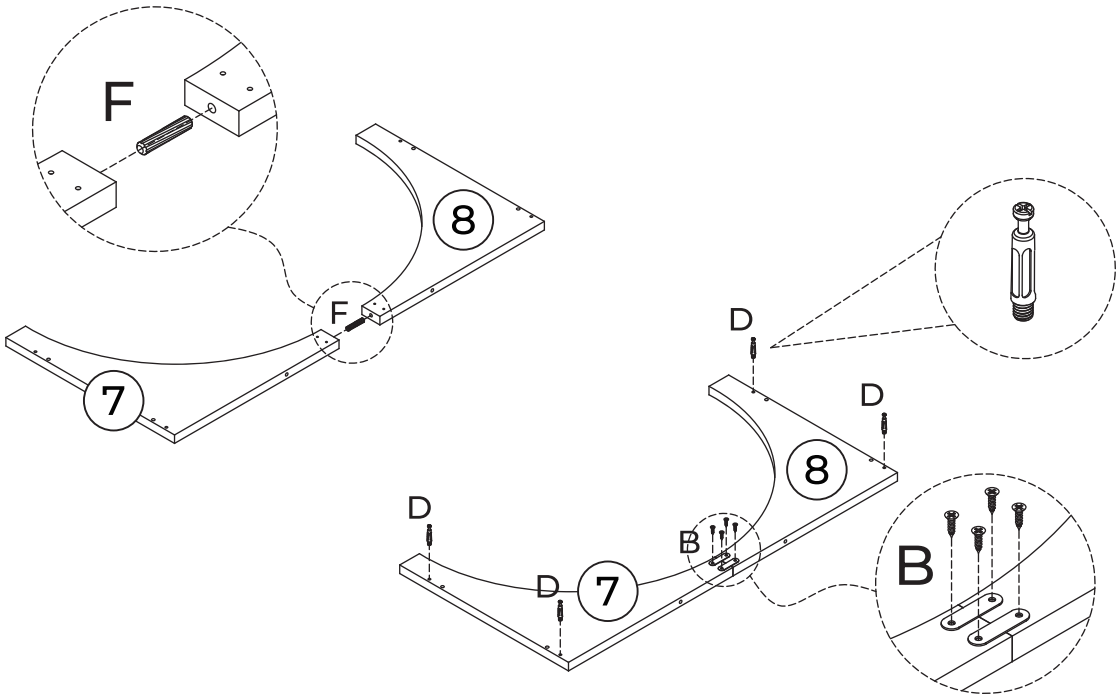


Step 7

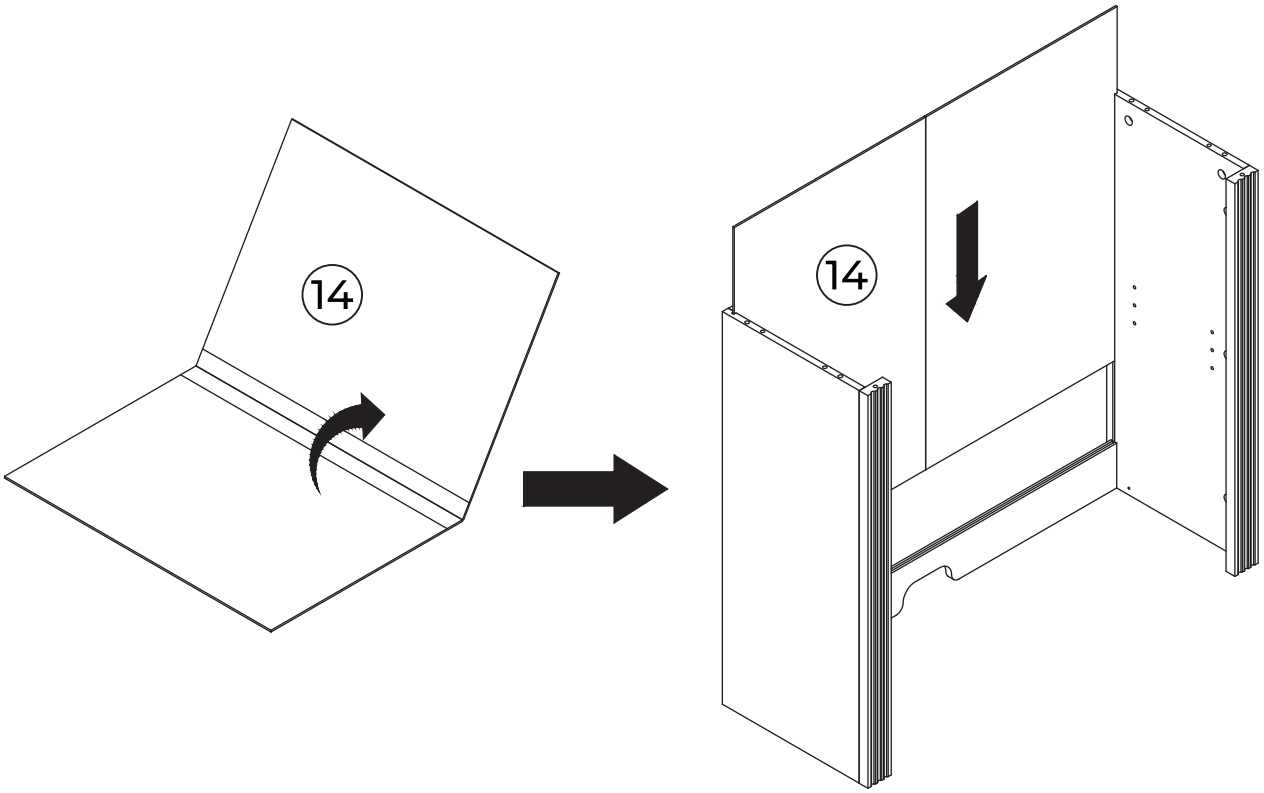


Step 8

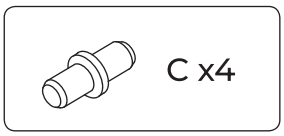


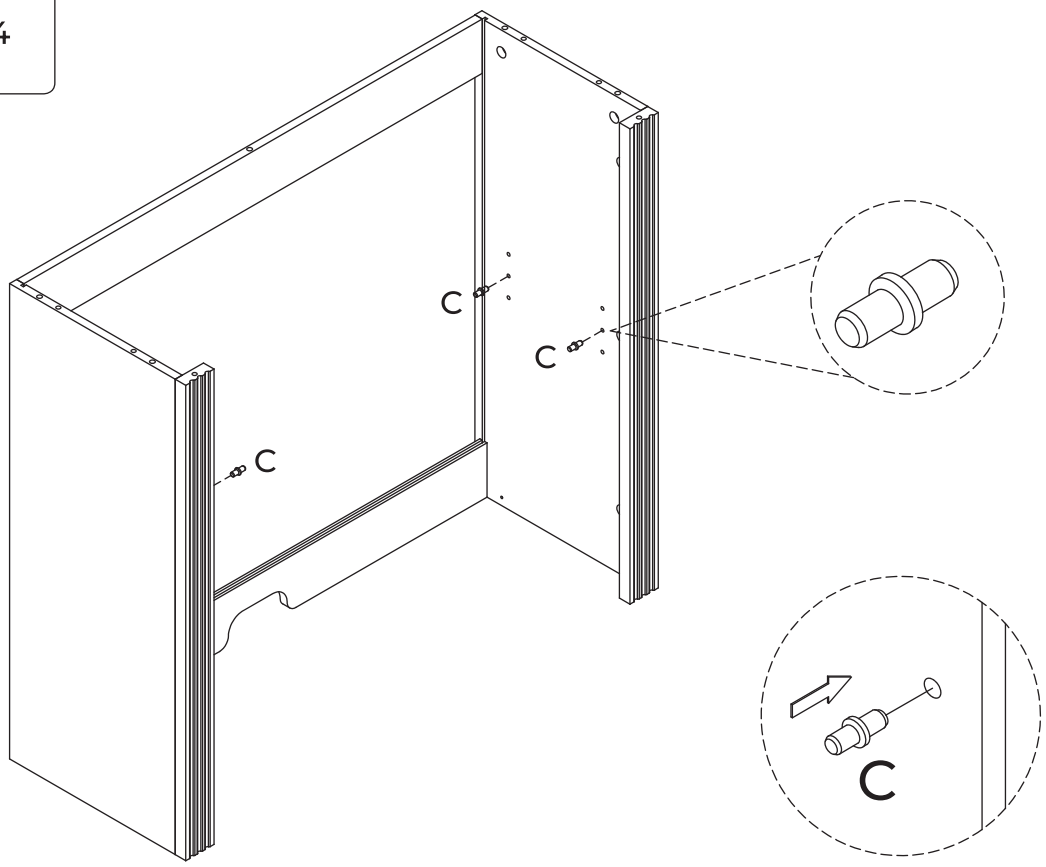


Step 9

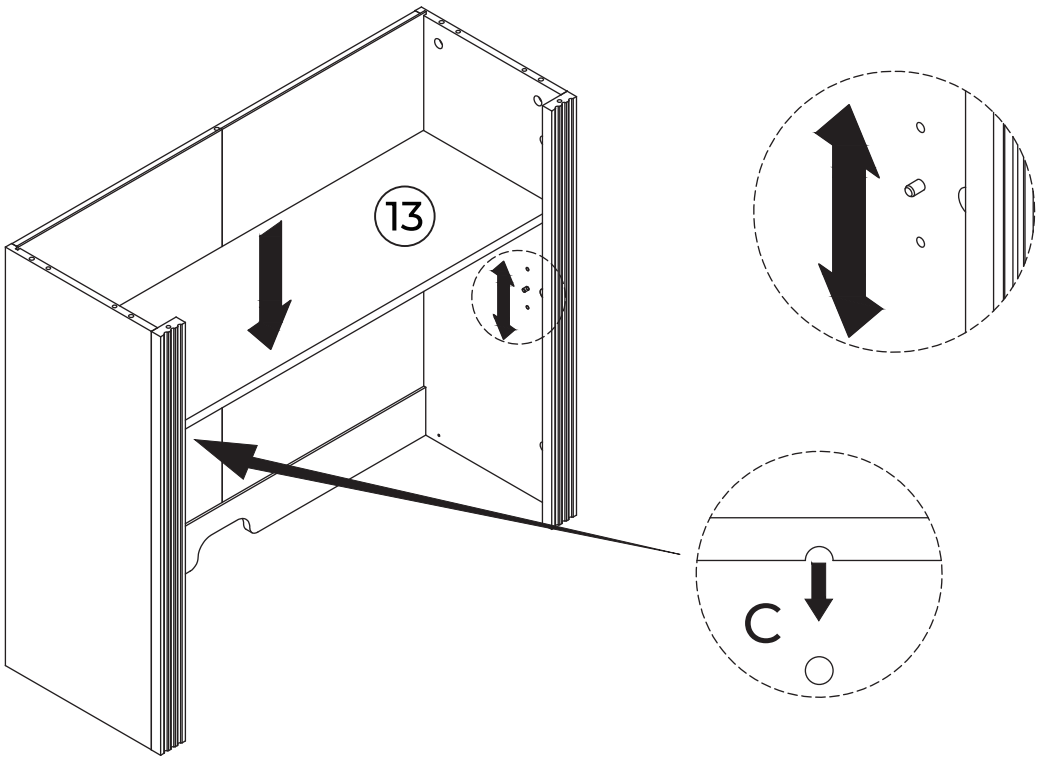


Step 10

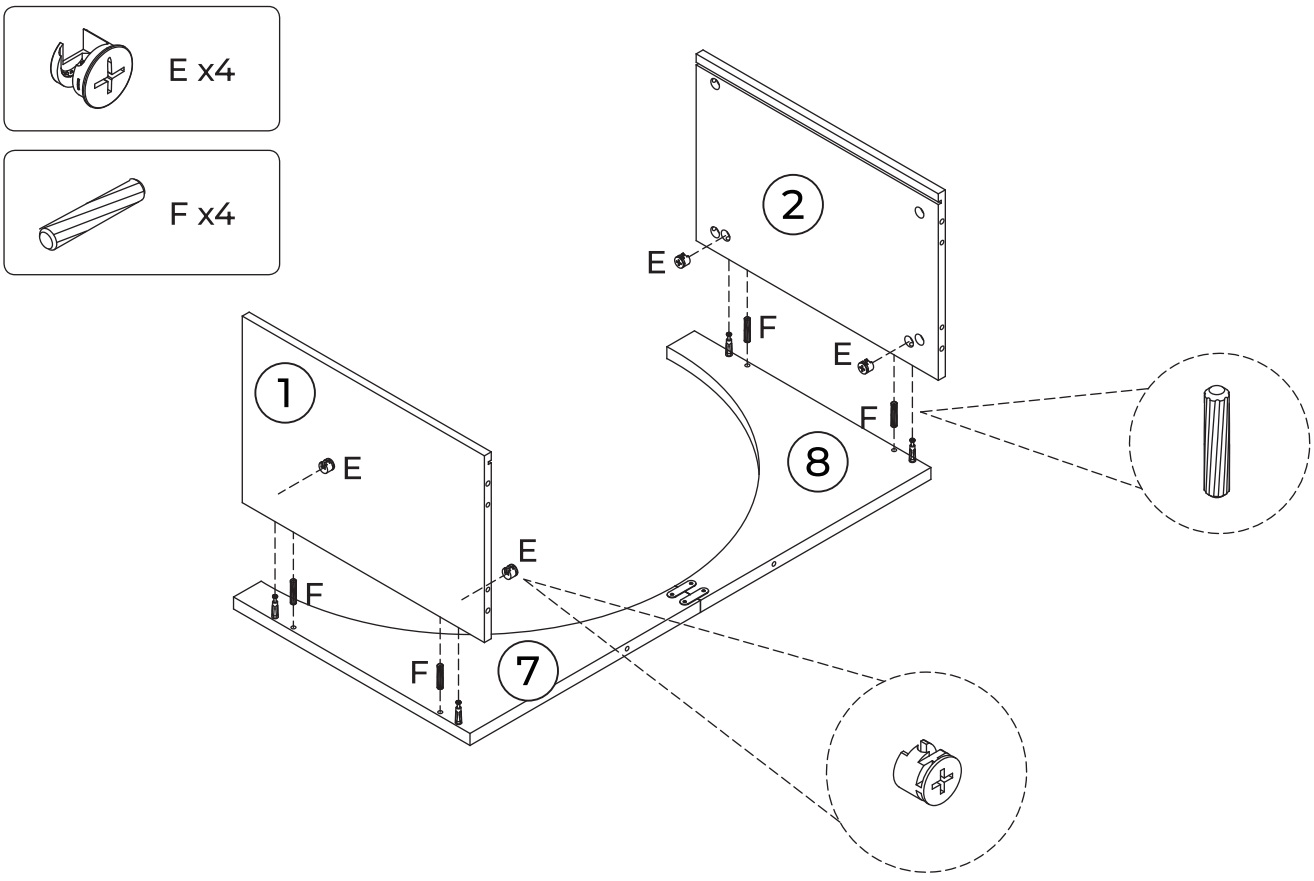

Step 11

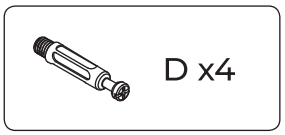


D x4

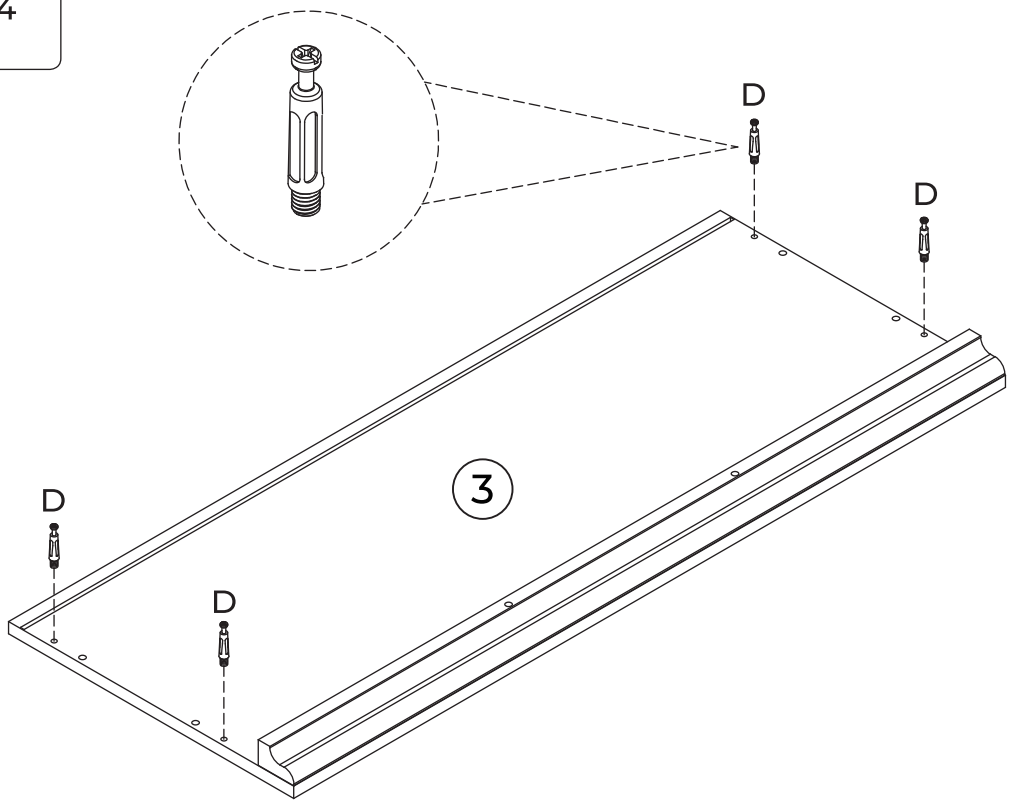


Step 12




E x4

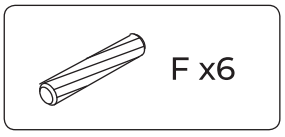


F x6

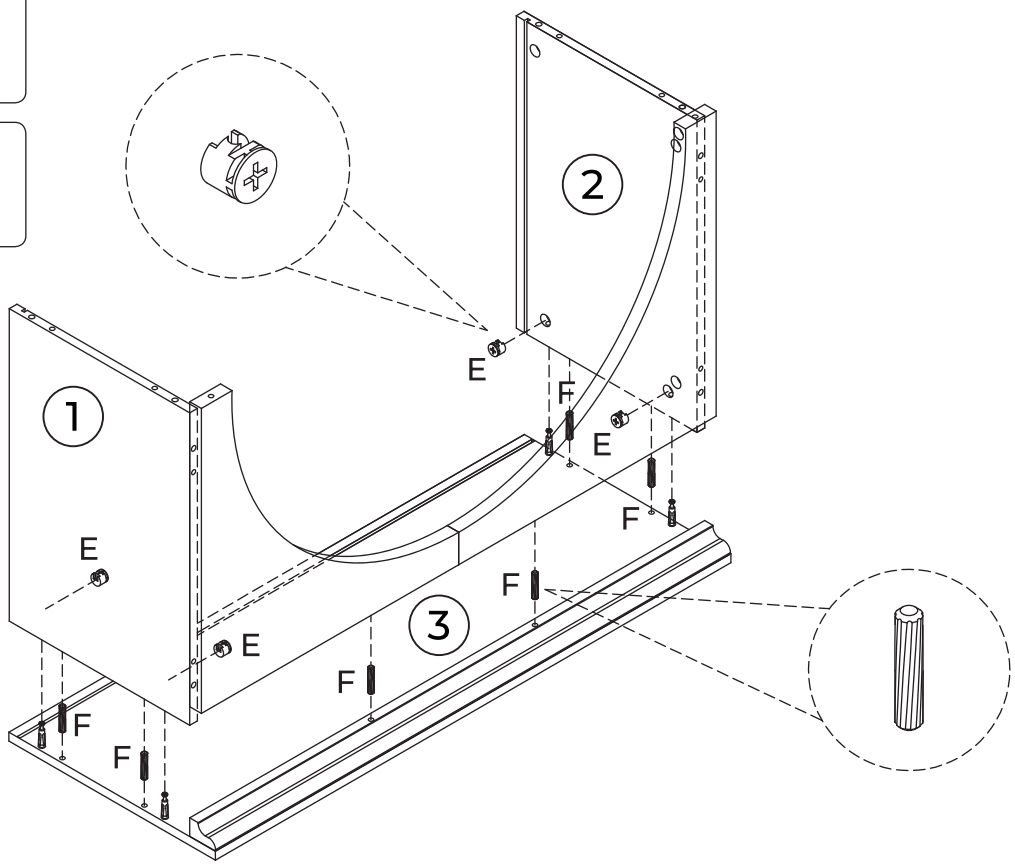


Step 13

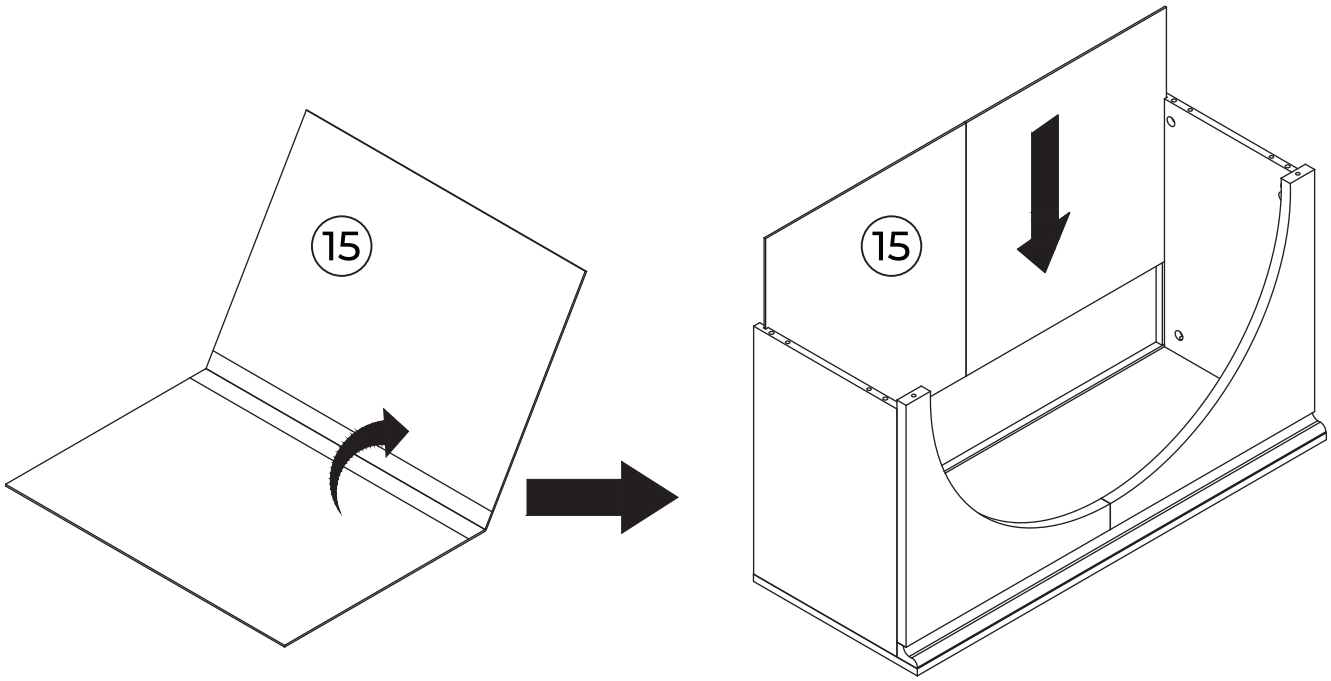

Step 14

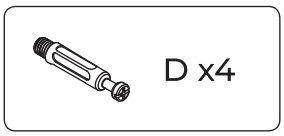


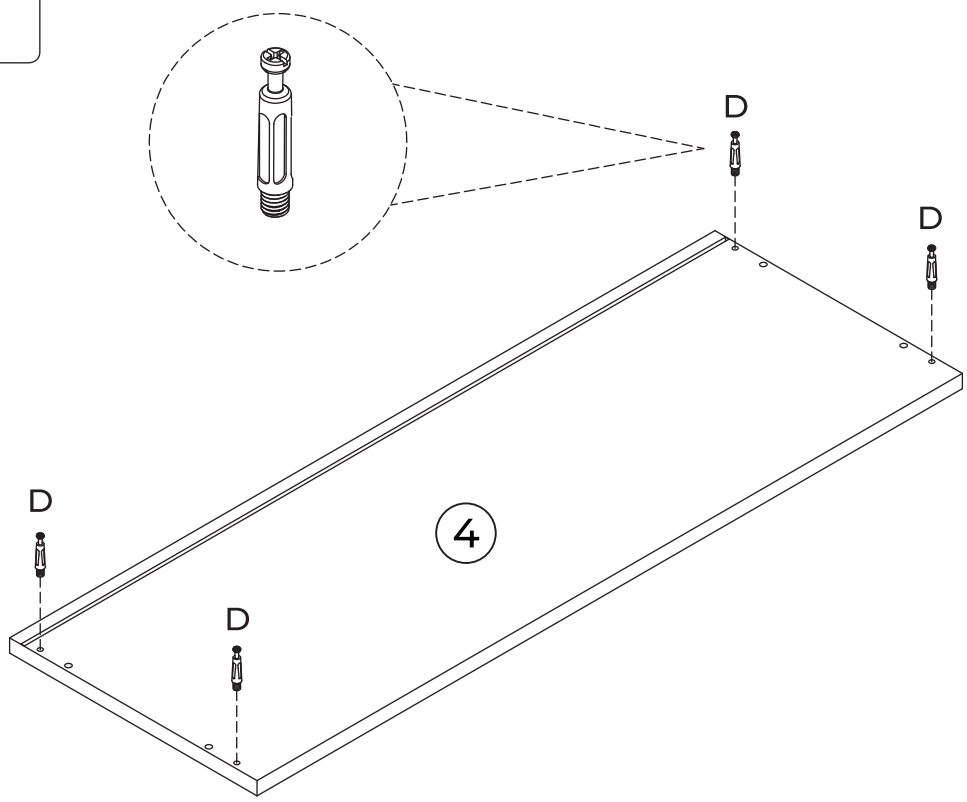


Step 15




E x4

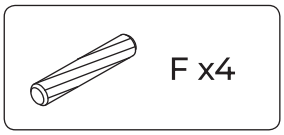


F x4

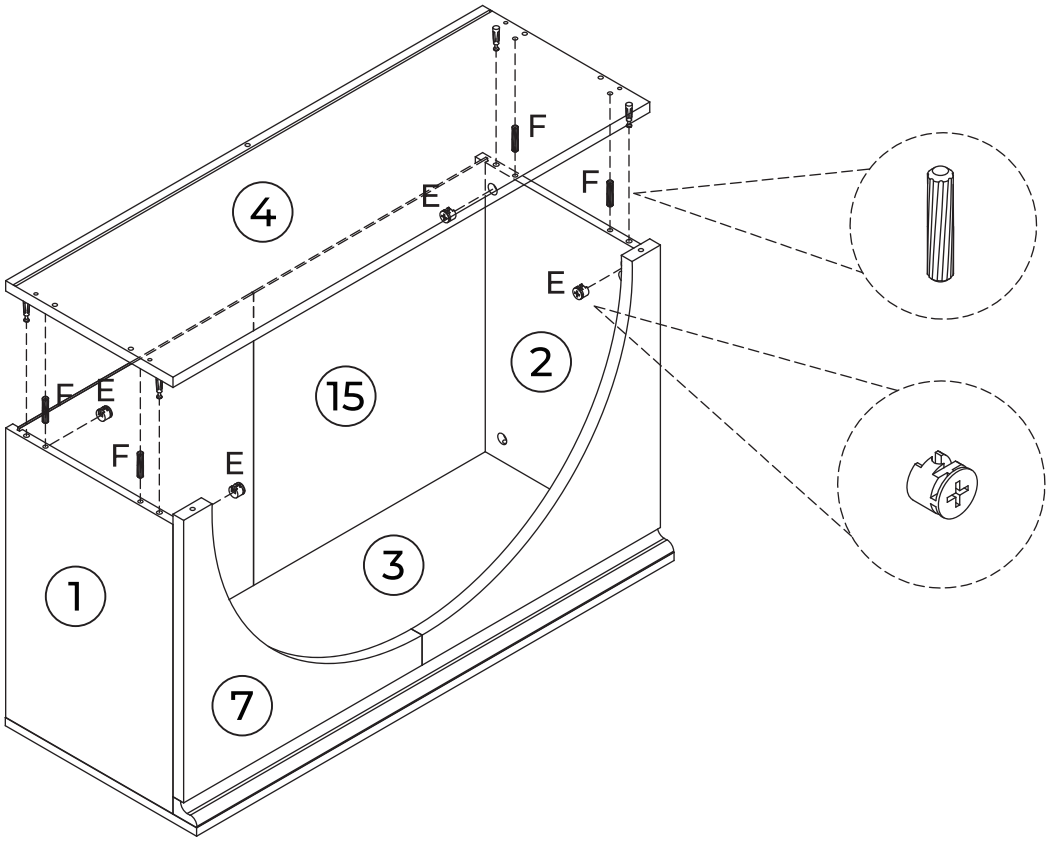

Step 16

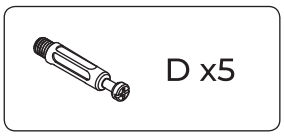



D x5

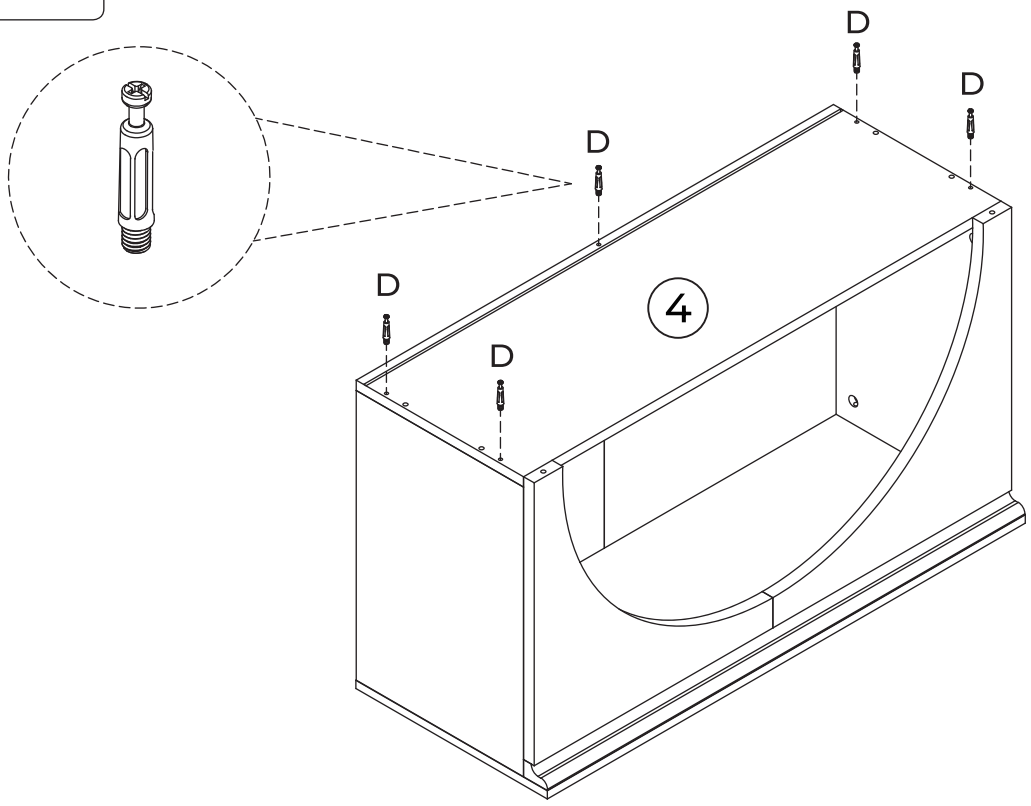


Step 17




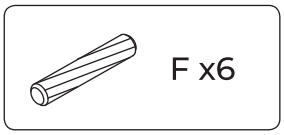

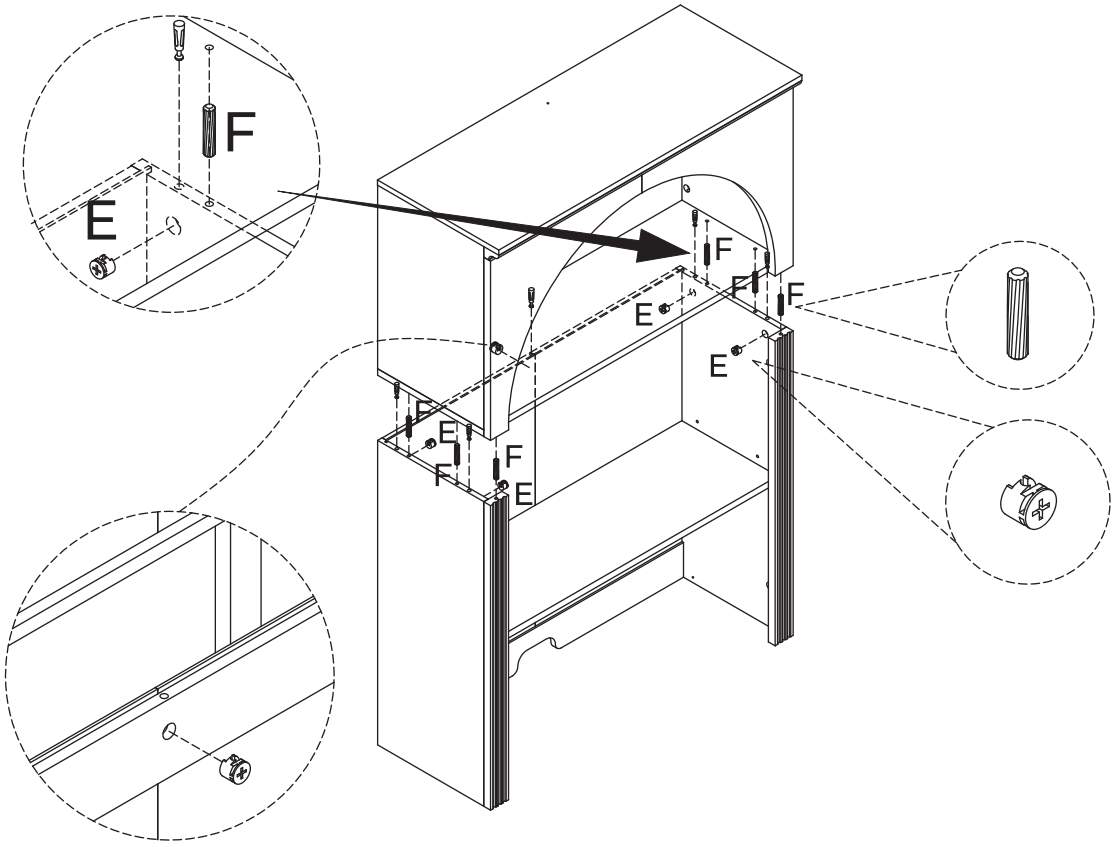



Step 18

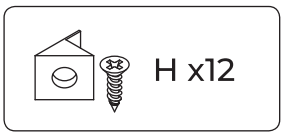


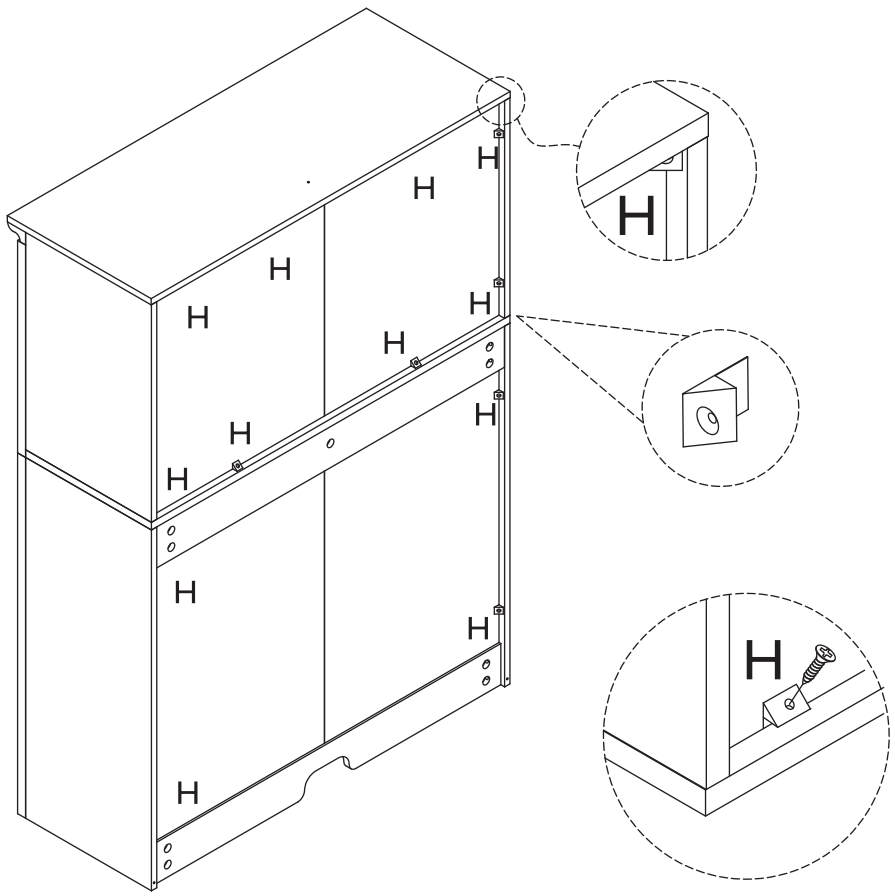

Step 19

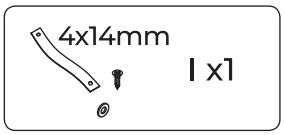


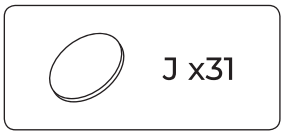


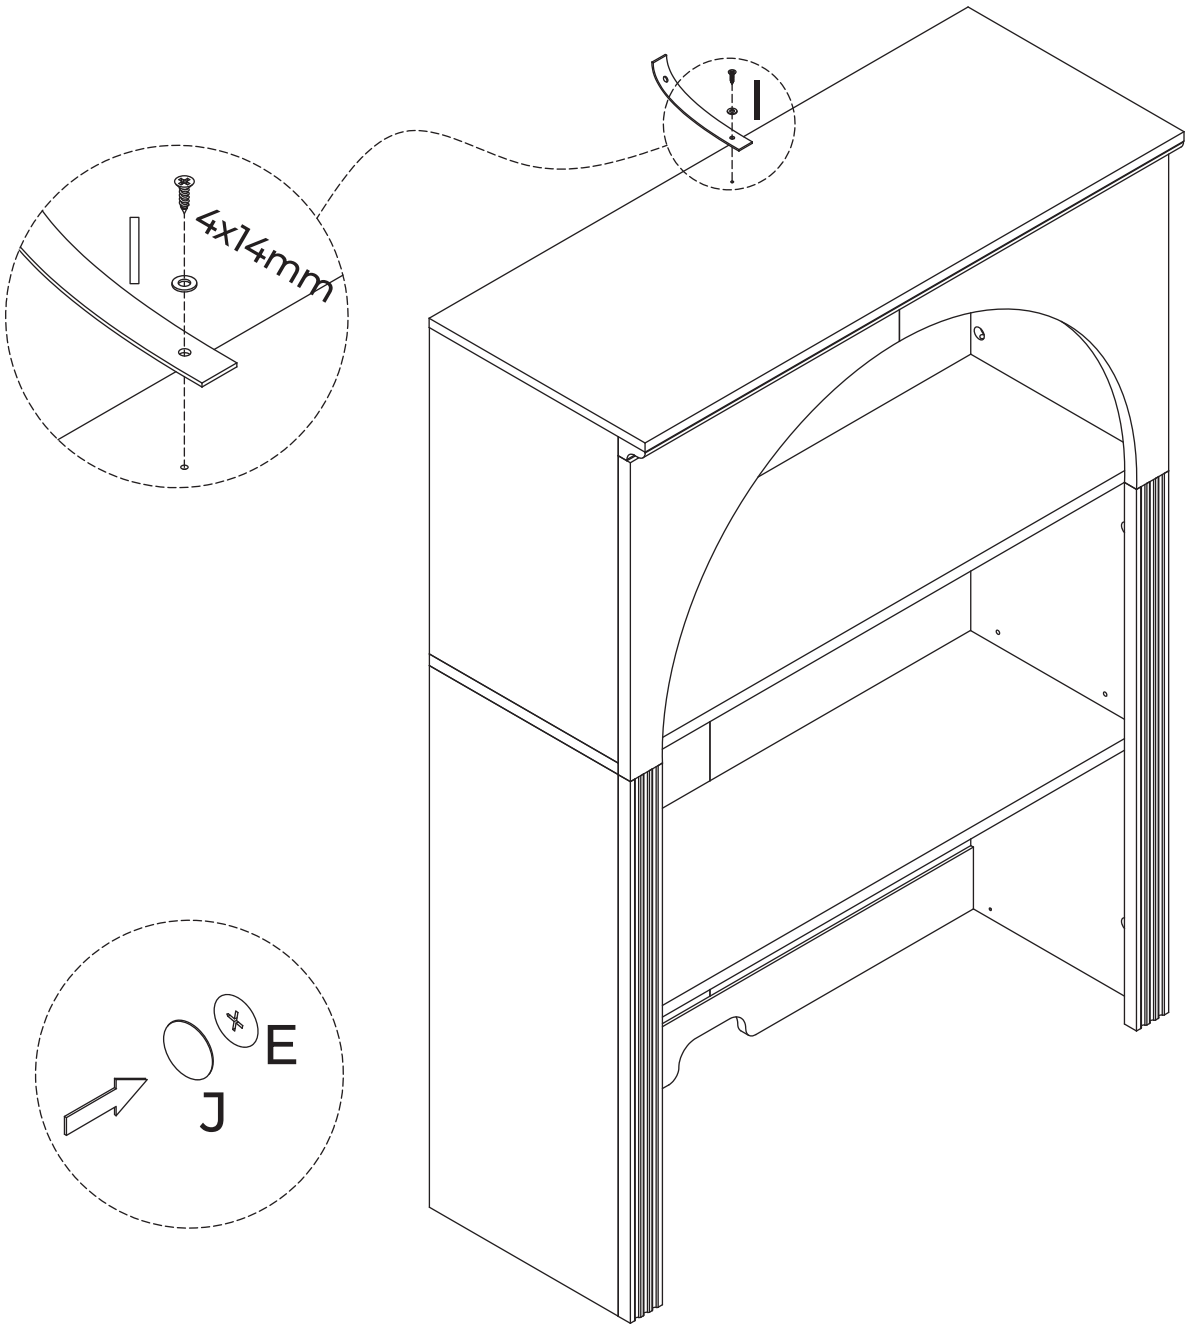

Use screw hole stickers in a color that matches the cabinet.

Step 20

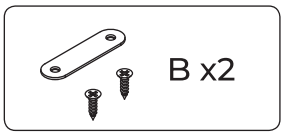

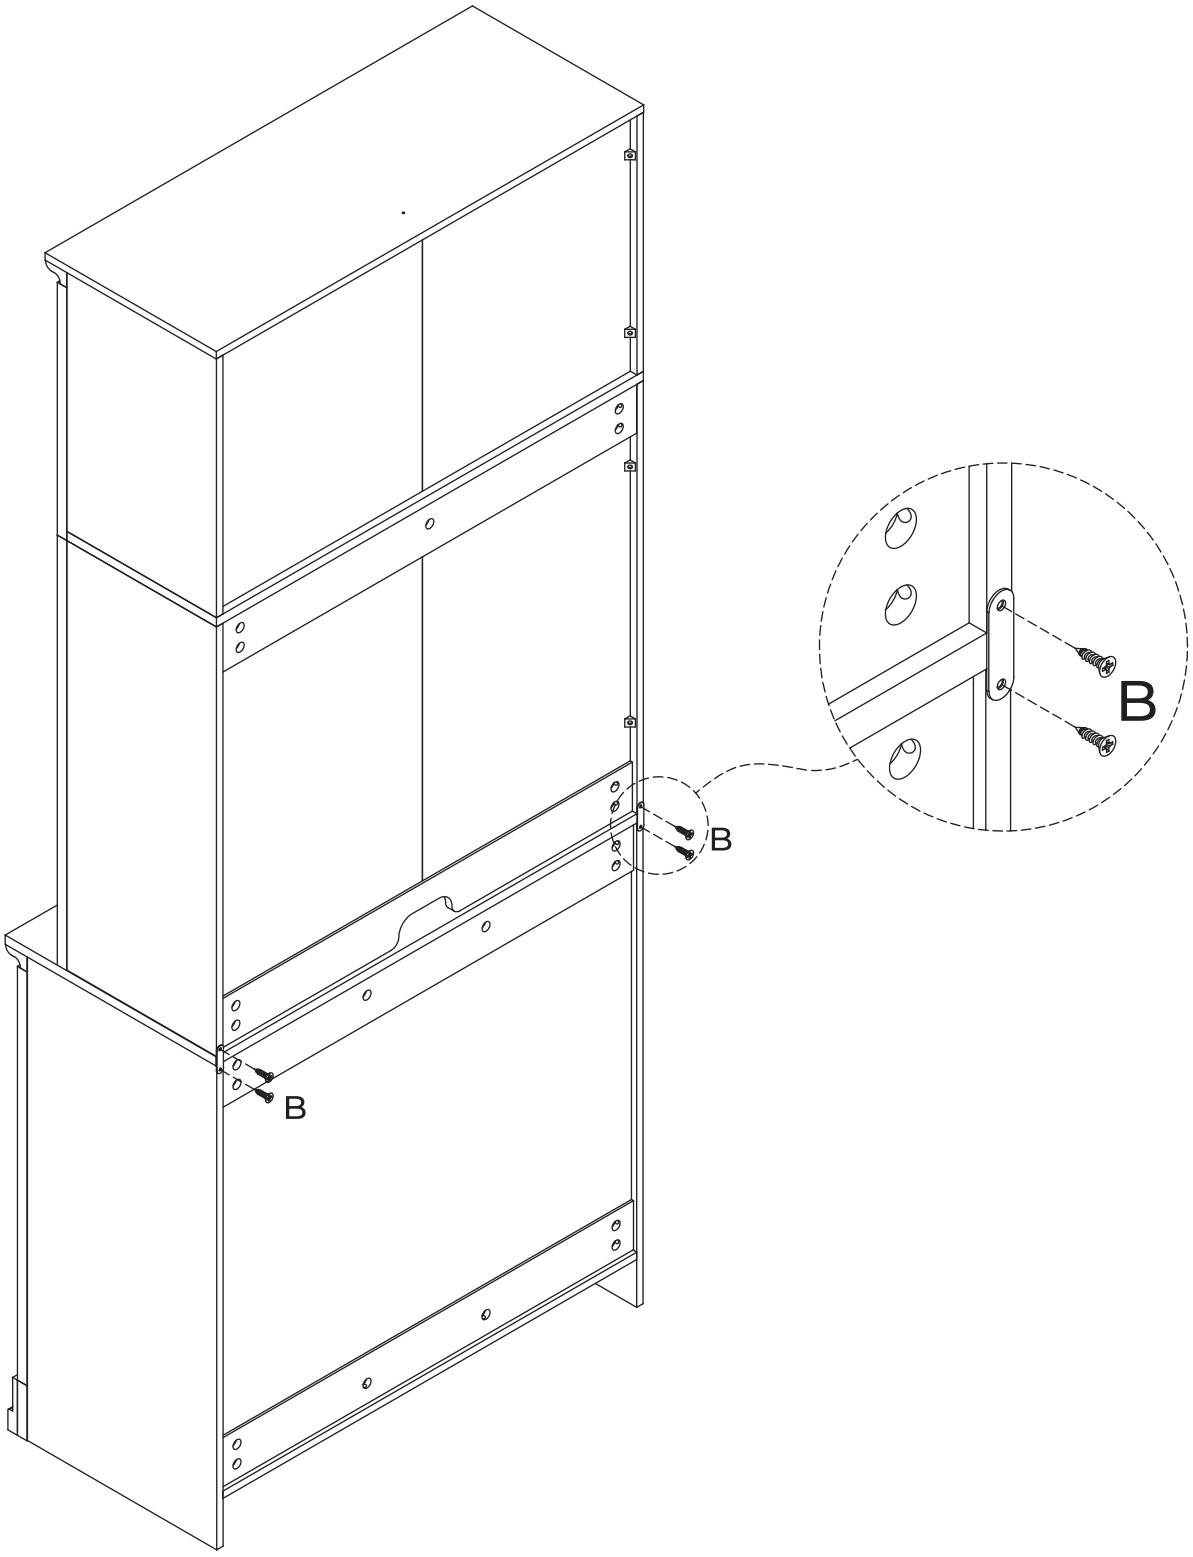

Step 21

