








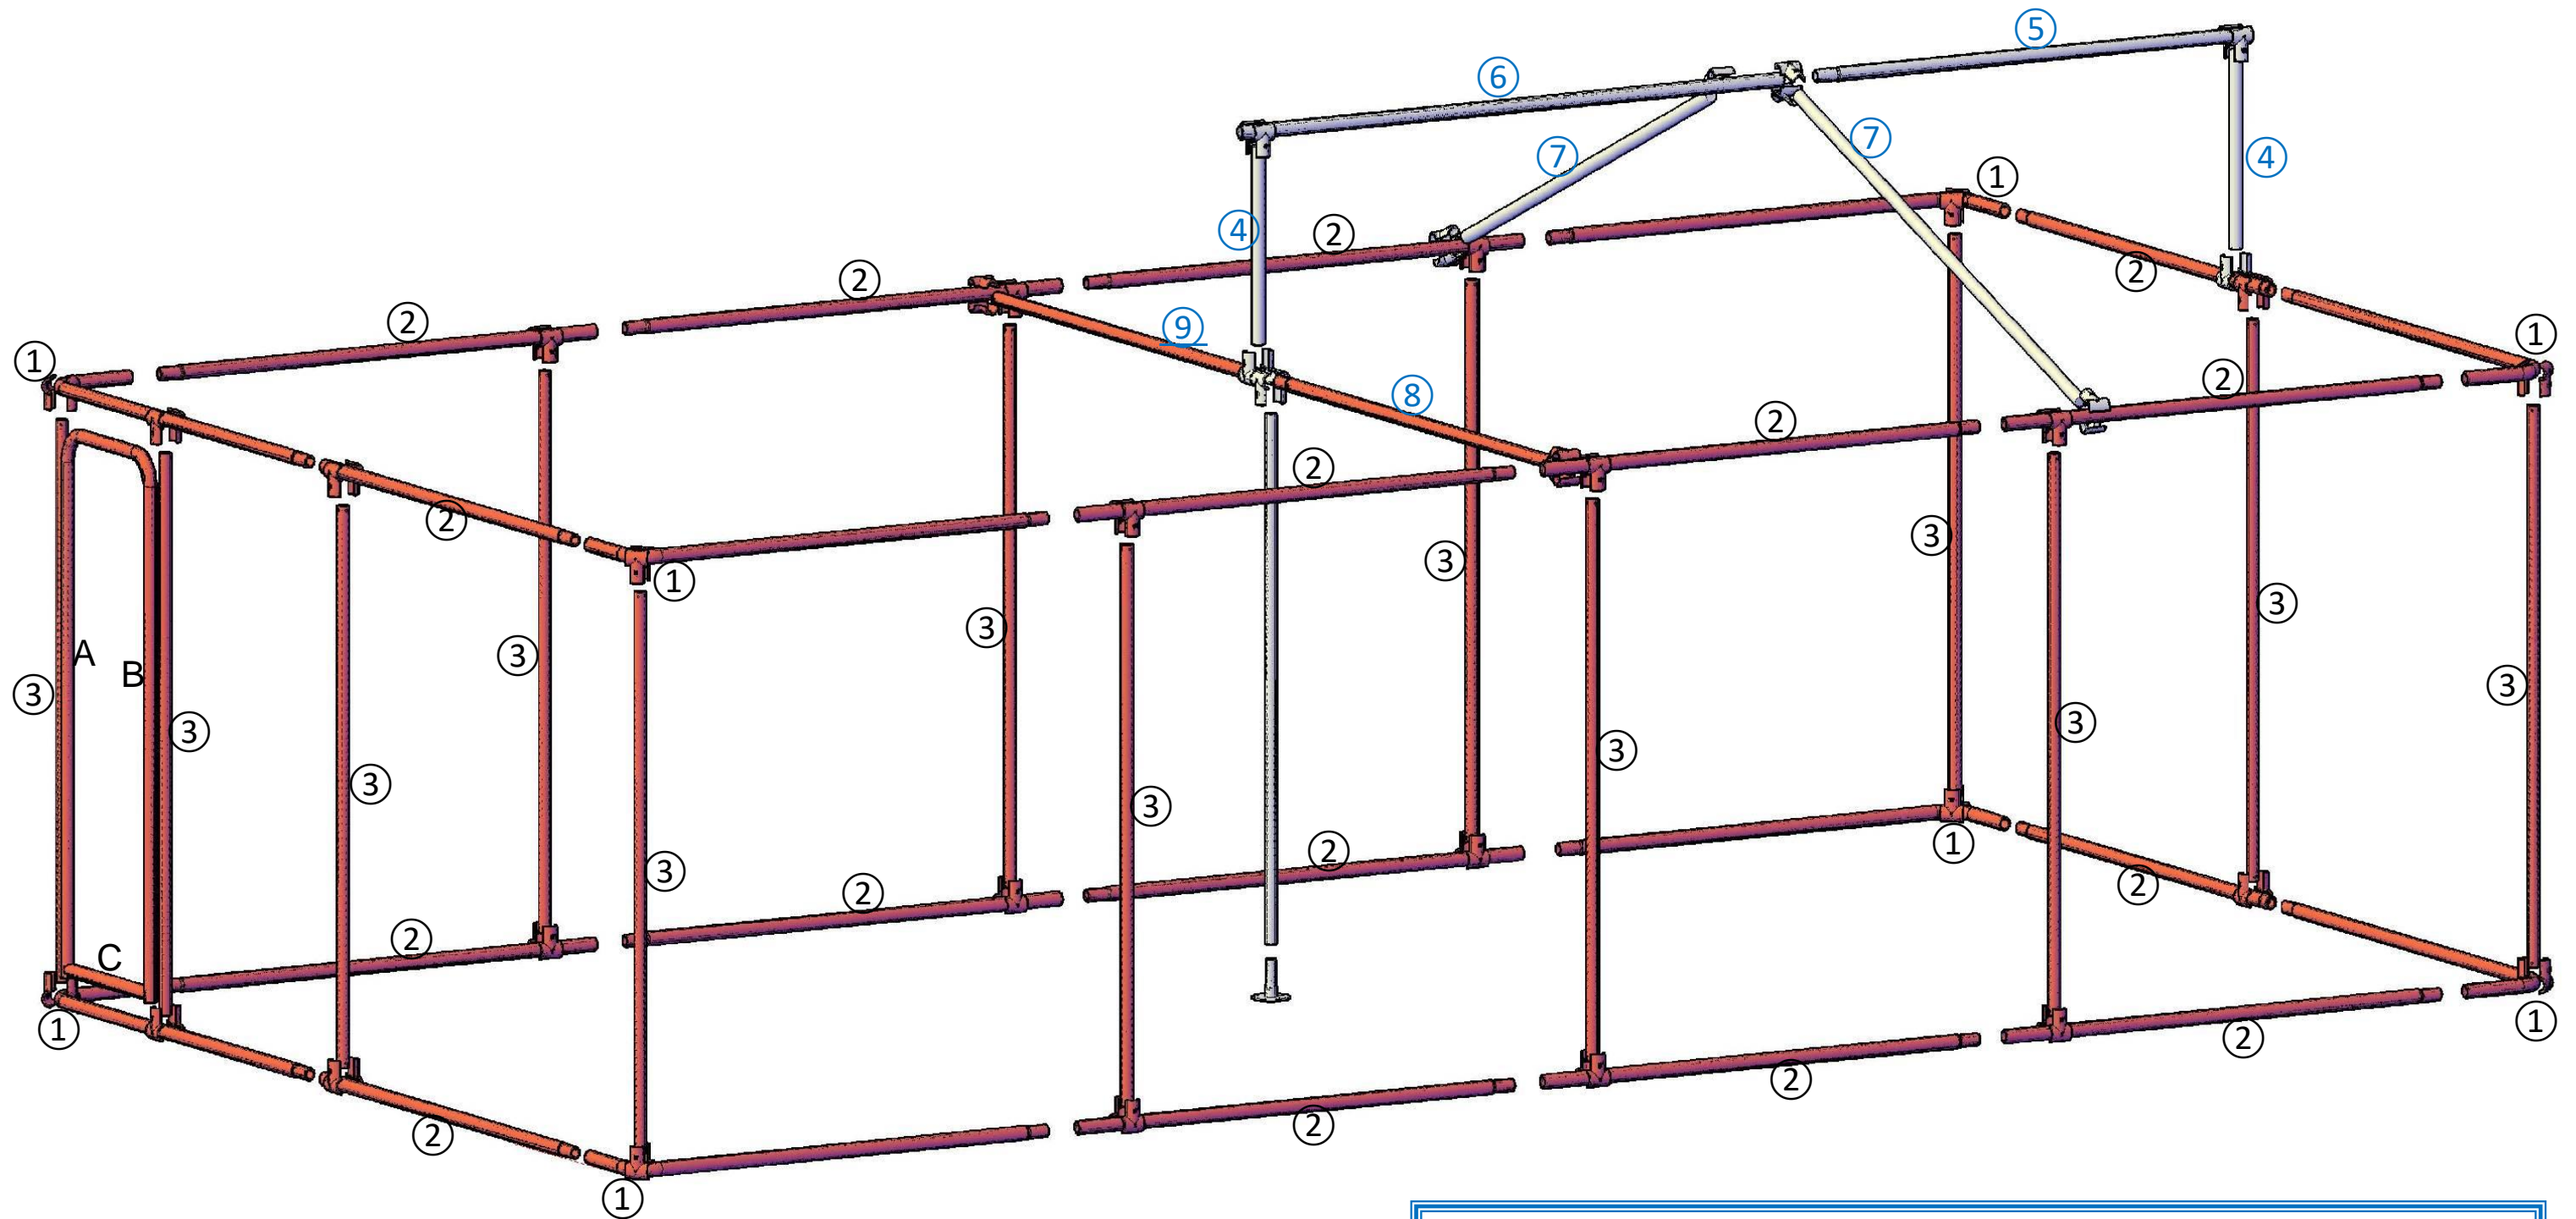




6x3x2.36m

GALVANIZED DOG RUN ASSEMBLY




- Tools supplied: Wrench, and Drill-head
- Tools required: Drill, and Pliers
- Assembly time: About 1 hour (with 2 people)

LIST OF MATERIALS

PART NO.	DIMENSION	STYLE PIC	QUANTITY
①	250+1310mm		8
②	1560mm		16
③	1765mm		13
④	500mm		2
⑤	1560mm		1
⑥	1500mm		1
⑦	1530mm		2
⑧	1500mm		1
⑨	1500mm		1
Vertical support	1775mm		1
	foot		1
A B C	310+1700mm 330+1700mm 500mm	Door left Door right Door bottom	1 1 1
PARTS	PARTS PACKGE	DOOR HINGE x2 CLIP x78 HOOK x16 REBAR x4 SCREW M8x50: x39 M10x50: x4 SELF TAPPING SCREW M5.5x19: x78 SECURIY LOCK x 1 WRENCH SOCKET 12/14MM: x1 8MM:1(for self tapping screw)	1

Step1: Gate Installation

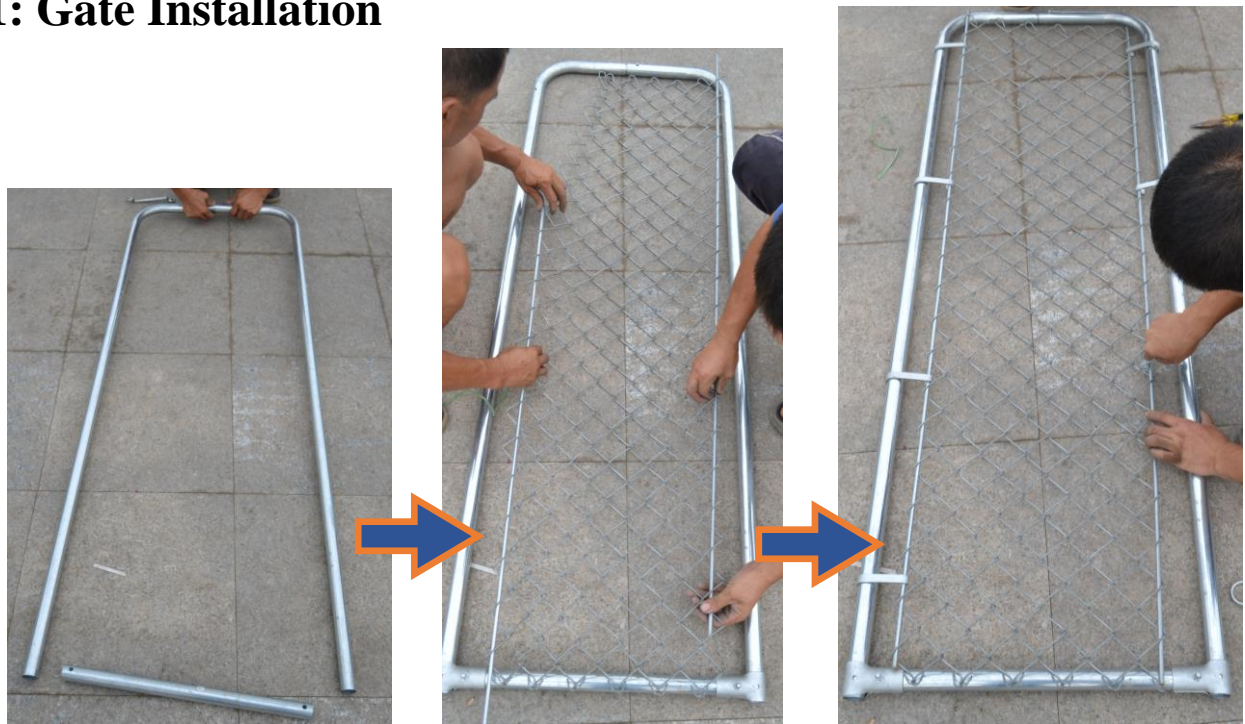

Fix both ends of the C-tube with the the pair of clips and secure with 2 (M8X50MM) screws, then insert the B-tube into the A-tube. When the “U” shape frame is assembled - then insert the ends of the A-tube and the B-tube into the ends of the C-tube. Install the chain-link mesh onto the gate frame. Then insert the two round rod into the the edges of the chain-link mesh, and then use 4 pairs of hooks to fix the round rods and tube. Finally, use the bind-wire to fix the chain-link mesh to the gate frame to make the gate rigid and strong. (Note: loosen the the clips on the post to allow adjustment and exact fitment).

Step 2: Frame installation



Note: The gate is designed to be installed on the left side of a corner position.

Insert the number-1 tubes into the number-2 tubes and three number-2 tubes end to end, then start by assembling the lower frame by joining the swagged pieces together and laying them out for assembly. Keep the vertical tubes ready to accept the top tube frame. Put the top tube frame of the dog run together and then install the clips (loosely) for the middle vertical tubes. (Note, the next step requires 2 people). Pick up the assembled upper frame and place it on the vertical tubes. Then attach the four corner vertical tubes with the clips to the top and bottom frames and secure tightly with the socket-wrench.




Step 3: Installing the gate into the frame

Use the door hinges (and the big set of screws) to fix the door to the frame(left and right space about 3cm). Then install the security-lock on the dog run. Tie bind wire to fix the top and bottom of the gate with chain-link mesh and make the gate safe and strong by using the screw gun with the drill to put a self-tapping screw through the pilot holes in the tubes - this also makes the dog run stronger.



Step 4: Installing the chain link mesh

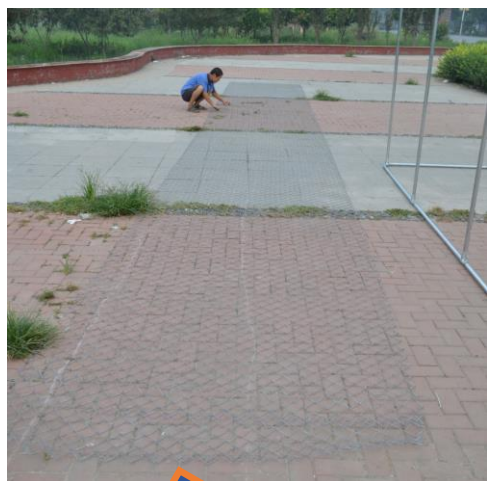

Start by unrolling the compressed chain-link mesh roll on the ground and extending it. Then roll it again. Insert 1 piece of round rod into the edge of the chain-link mesh roll, and then hook the round rod with the door post - another person is then required to unroll the chain-link mesh around the frame of the dog run.

If the chain-link mesh is too long, remove some of the wire at the desired length (at least 15-20 cm from the door). Insert another round rod piece into the edge of the chain-link mesh to tighten the chain-link mesh to a good fit. Attach the hooked round rod to the frame. To secure the top and the bottom of the dog run - tie some binding wire to fix the chain-link mesh to the frame. Finally, ensure that the clips are fixed tightly and securely to the frame by using the self-tapping screws. Now your large dog run is complete and ready for your dog.

Step 5 Cover cloth installation instructions

A. Install the 1/2 Cover Cloth after the frame with chain-link mesh has been assembled;

B. The frame of the Cloth Cover is made up of 2 pieces of number 4 tube and 1 piece of number 5 tube and 1 piece of number 6 tube and two sets of two clips together with screws (see included photograph and diagram) and are assembled as follows:

1. Insert the number 7 tube into one number 6 tube, until it reaches the width of the dog run, then stand them on the middle of the length(3m). (number7+number6)
2. Install vertical support, number 8 tube and the foot plate end to end, then screwed clips on the joint number 7+number 6 tubes.
3. Insert the number 5 tube into one number 6 tube(number5+number6), Use the pair of clips and the M8*50 screws to install the number 4 tubes vertically on the width and number7+number6, fix the number 4 tubes into the centre of them;
4. Use the other pair of clips and install them on the top of the number 4 tube - then loosen the screws in order to install the number 5+number 6 tubes;
5. Two people are required to take the linked number 5 and number 6 tubes up to the top of the number 4 tubes - then install them on the pair of clips and tighten the “loosened” screws - and finish the installation of the cover frame;
6. Open the packaging and take out the roof cloth cover - two people are required to each take a corner of the cloth cover and then place it over the cover frame and make sure that it is placed symmetrically;
7. Use the supplied black rope to fix the cloth cover to the frame and the edges of the chain-link fence - fix them tightly to finish the installation.

