


THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



WARNING

- Unit can tip over causing severe injury or death.
- Anchor unit to stud in wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.

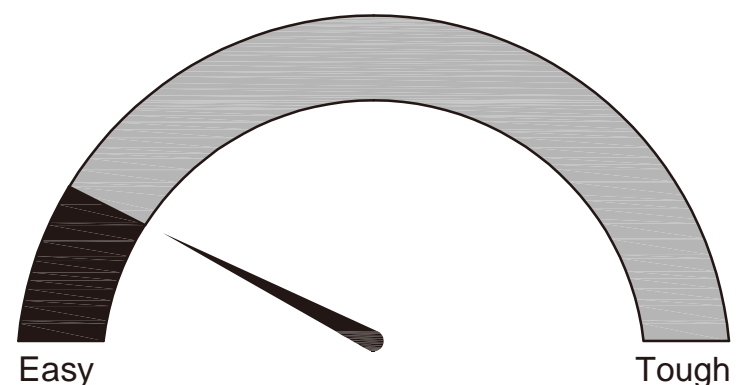

Assembly Difficulty Meter

Helpful Hints



PEOPLE NEEDED FOR ASSEMBLY: 1 - 2
ESTIMATED ASSEMBLY TIME: 1 HOUR

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with a R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Before You Start


- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

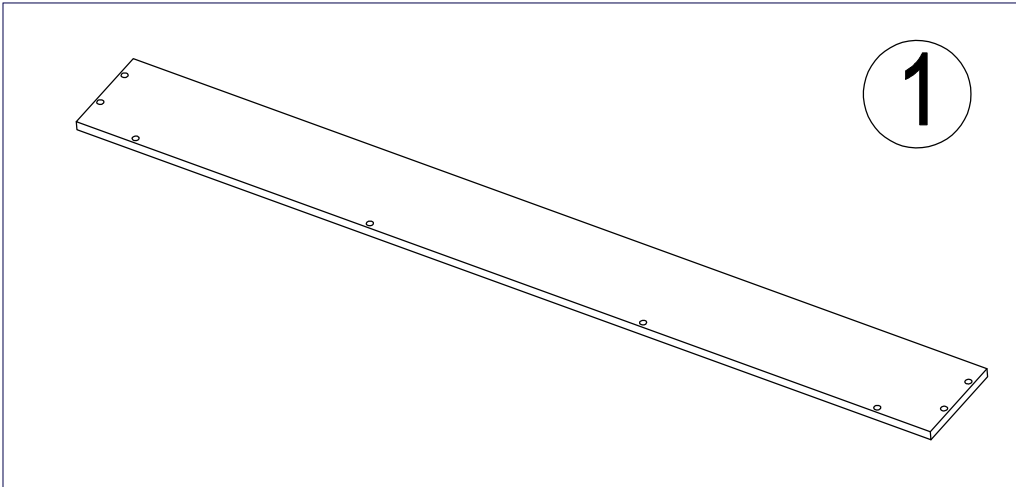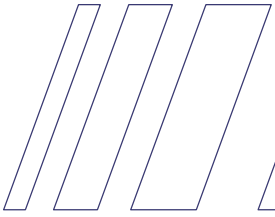


1

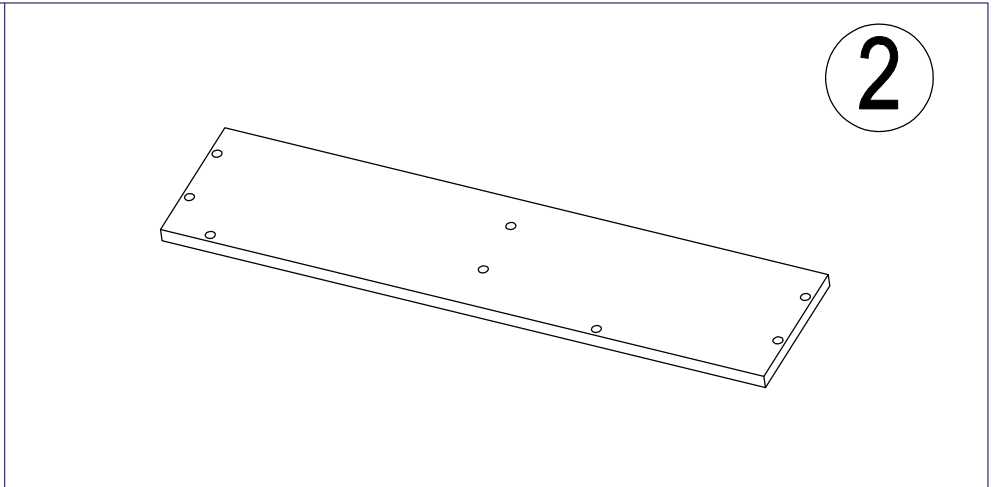


2

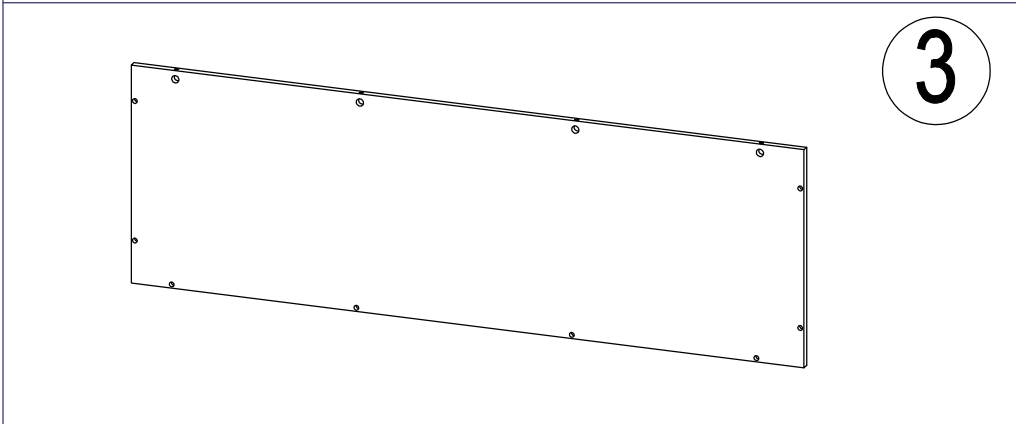


3

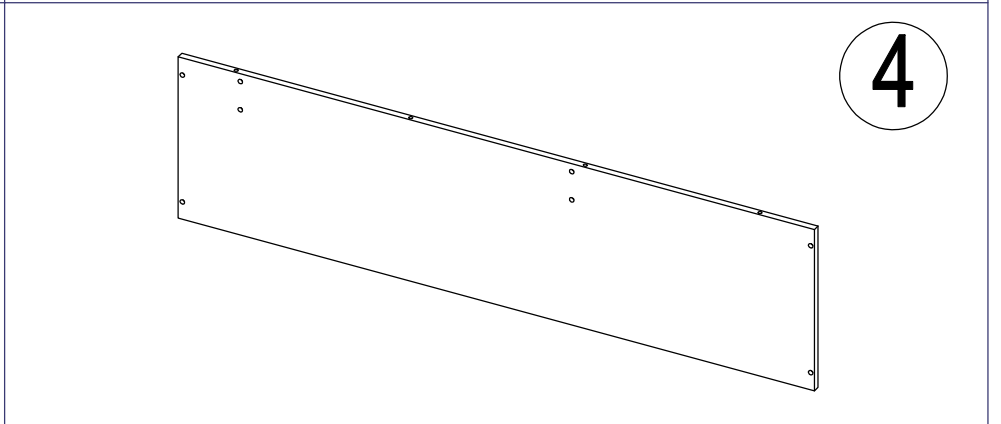


4

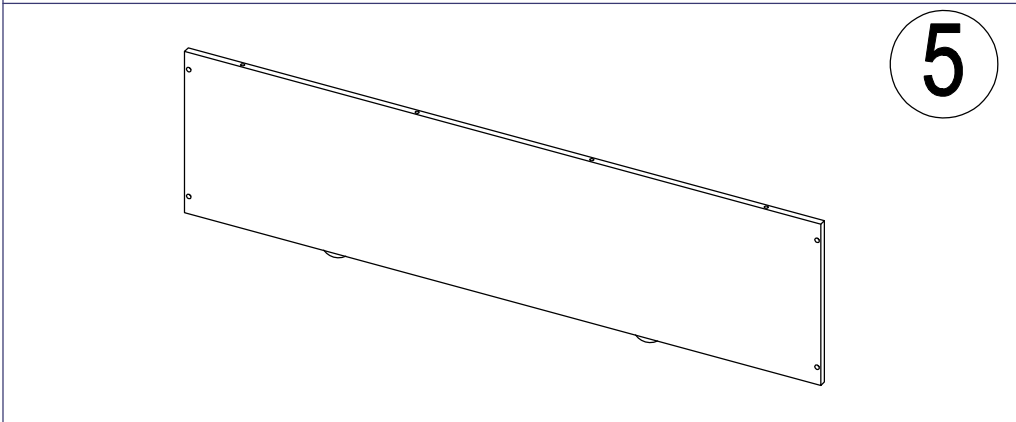


5

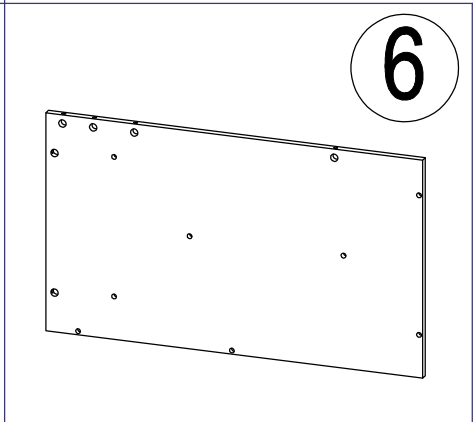


6

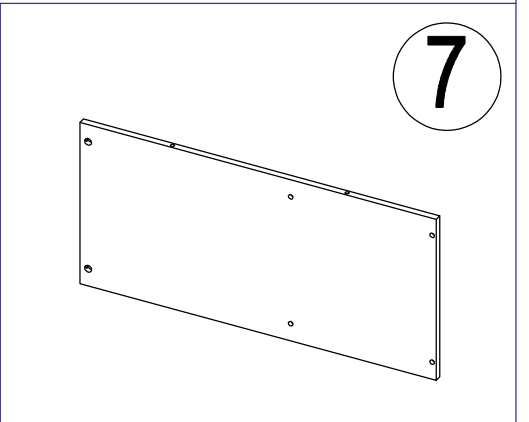


7

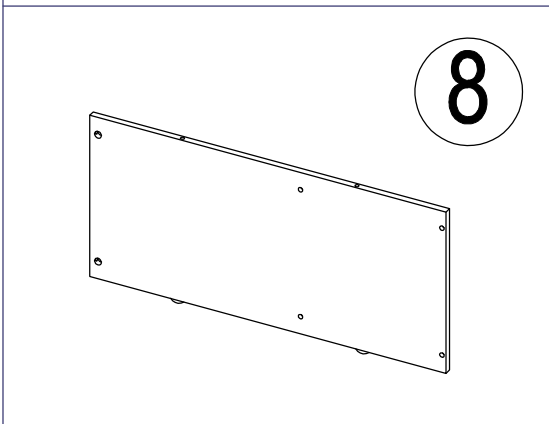


8

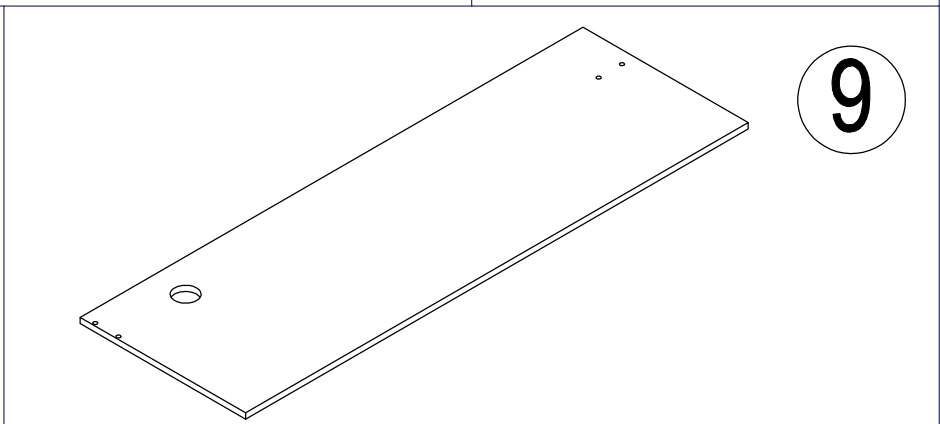


9

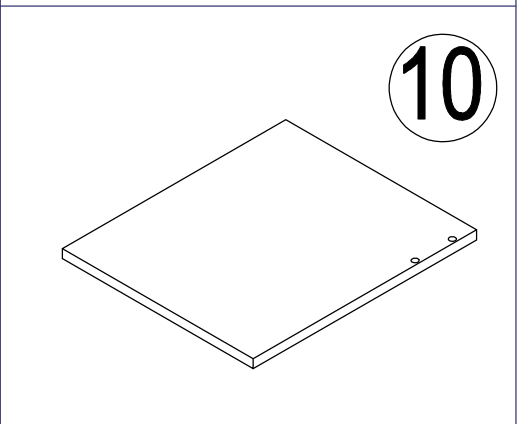


10

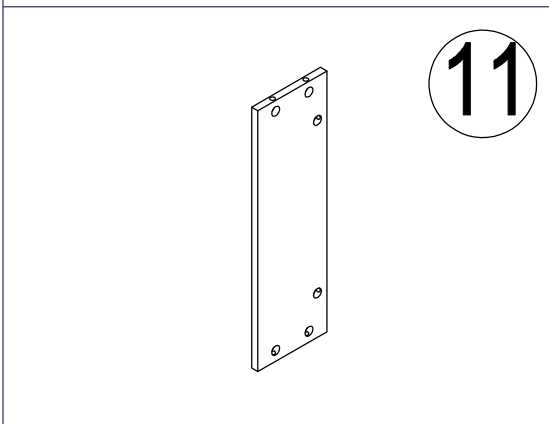


11

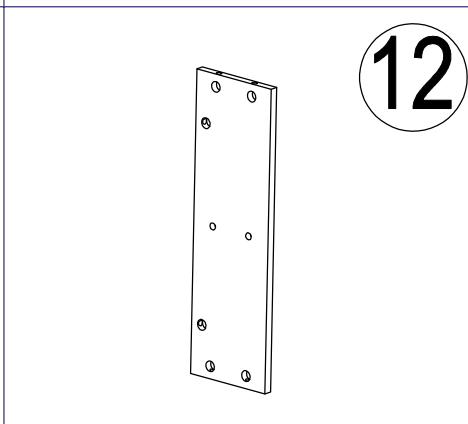


12

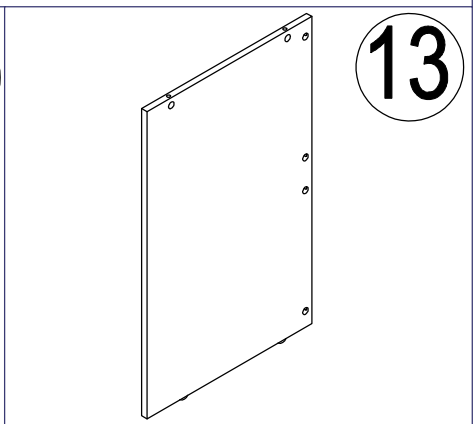


13

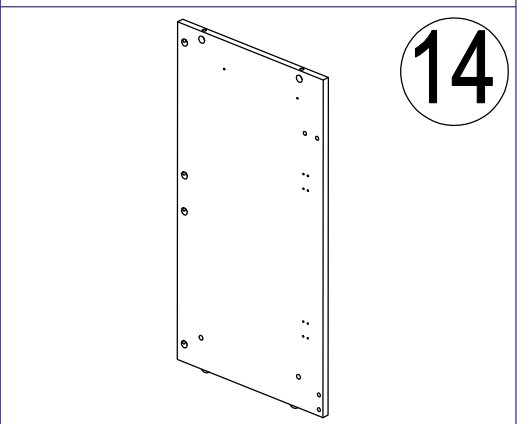


14

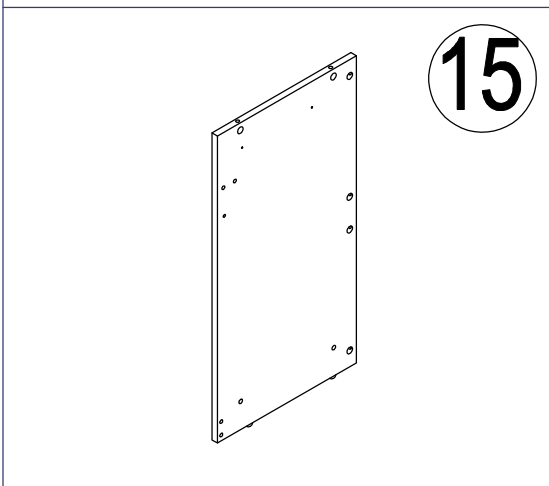


15

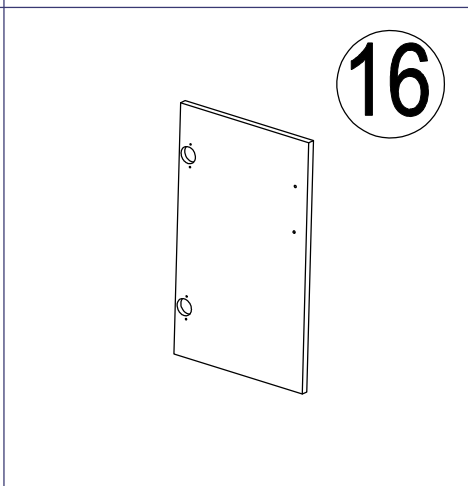


16

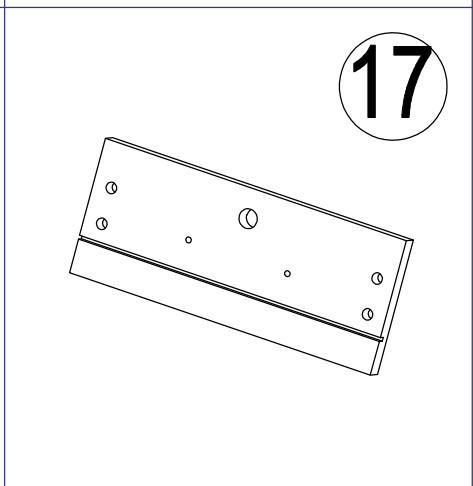


17

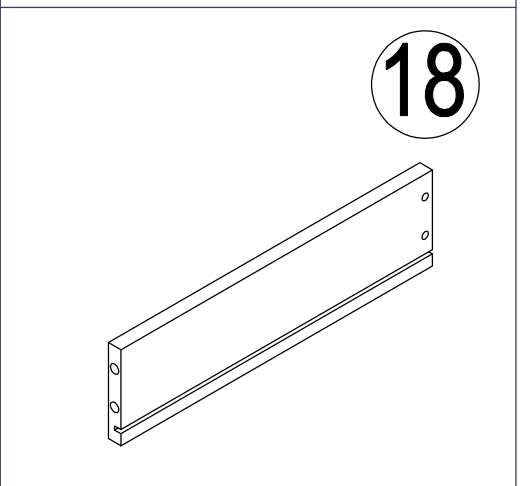


18

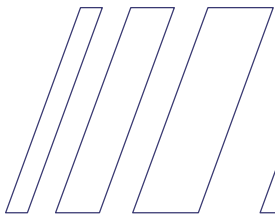


19

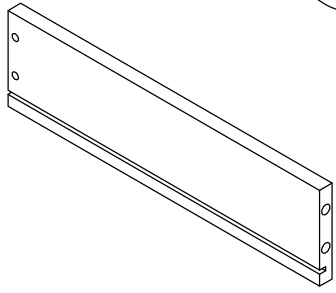


20

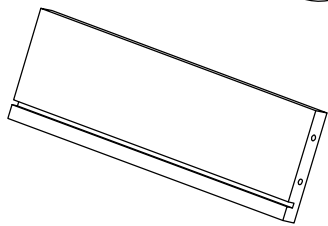


21

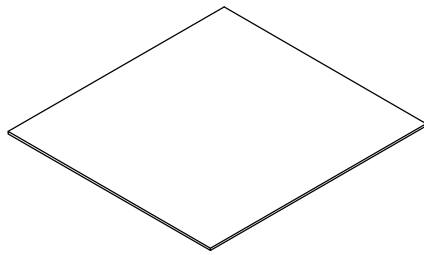

22

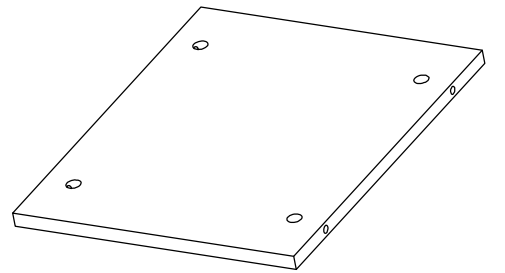


23

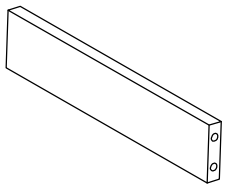


2PCS


24

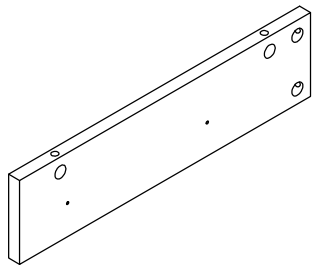


25

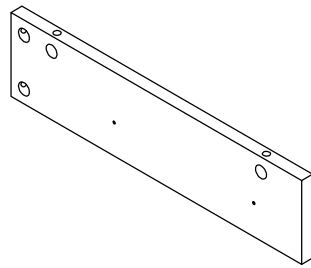


26

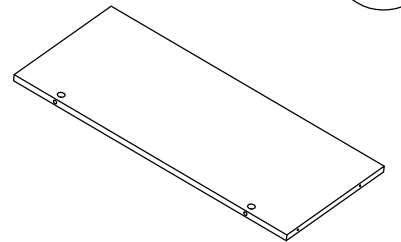

27

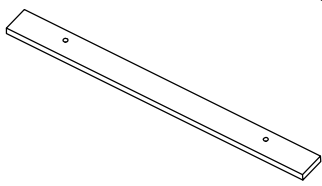


28

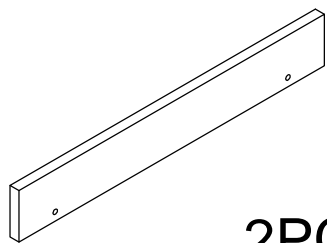


2PCS


29

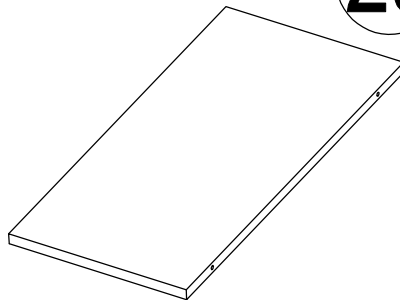


30




31

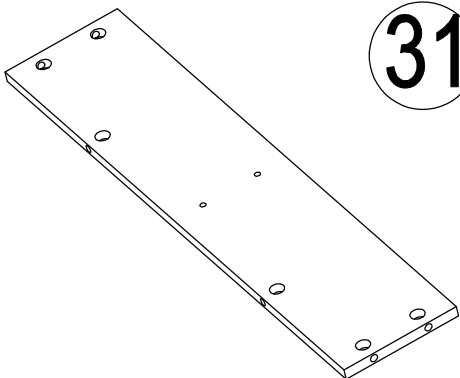

32




33

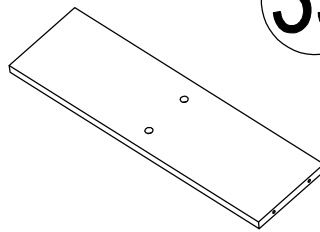


2PCS

34

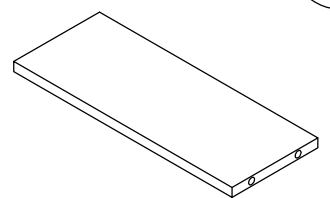


35

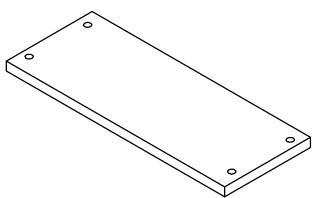


2PCS


36

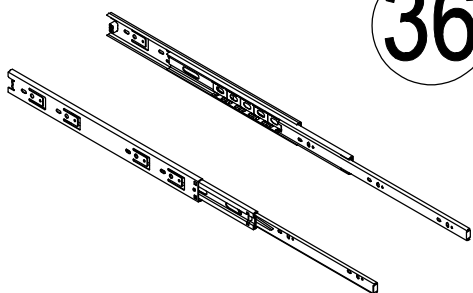


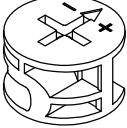













12" 3509W 2 SET








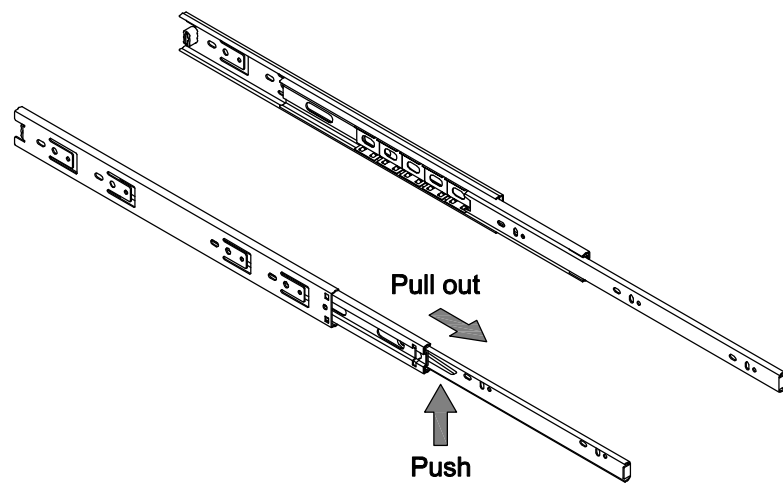


Disconnect the keyboard rail with the BLACK PLASTIC PART. It needs to be pulled down to disconnect the runners.

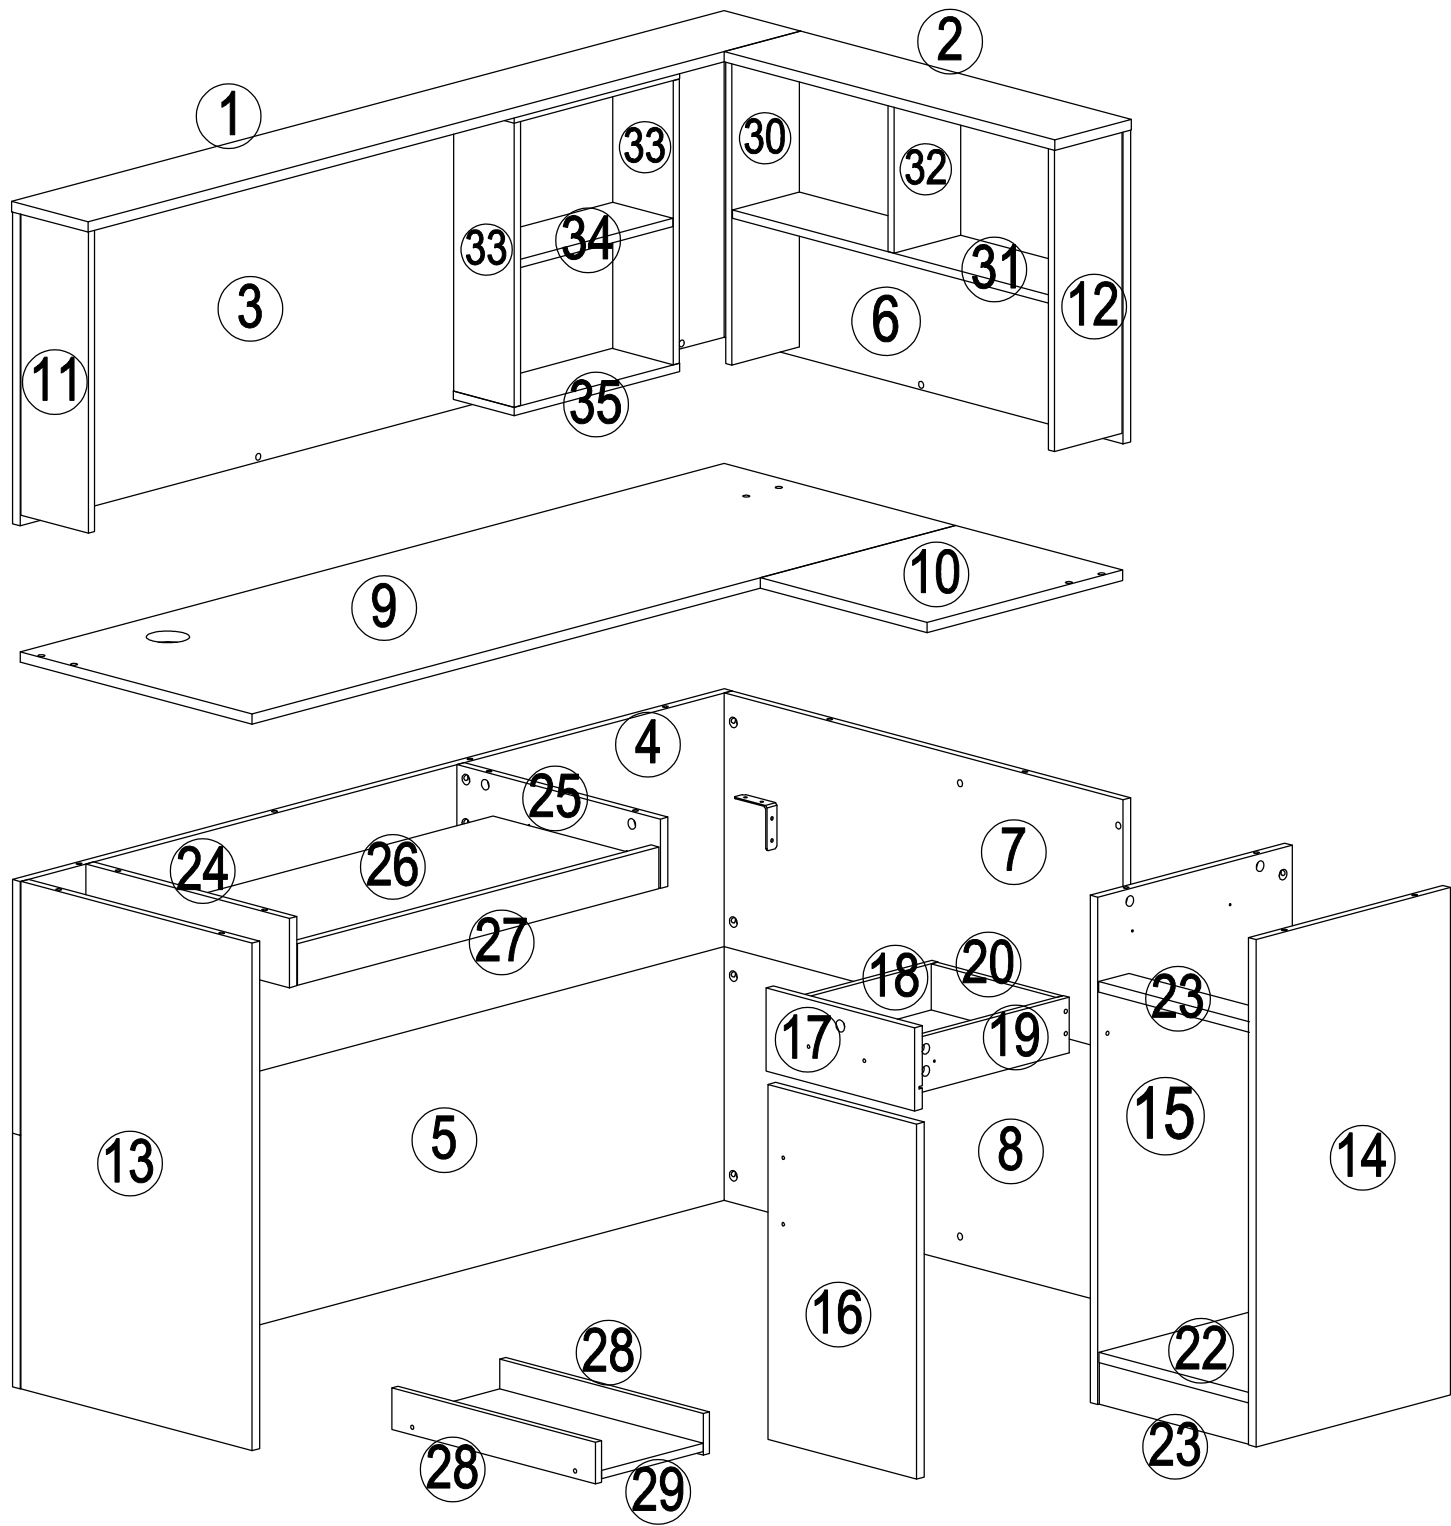


A M3.5x12  X 32+2	B M5x40  X 18+1	C M5x25  X 86+2	D Ø15x10  X 86+2	E M5  X 1	F Ø8x40  X 20+1
G M4x96  X 2	H M4x18  X 4	I  X 1	J M3x18  X 4	K DW  X 2	L Ø60  X 1
			M  X 20	N  X 1	 X 1

M5x25mm

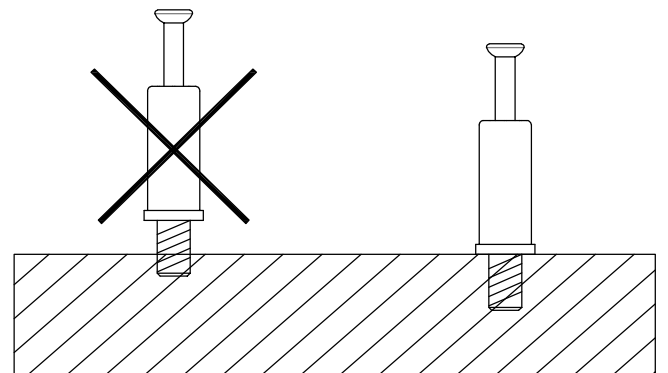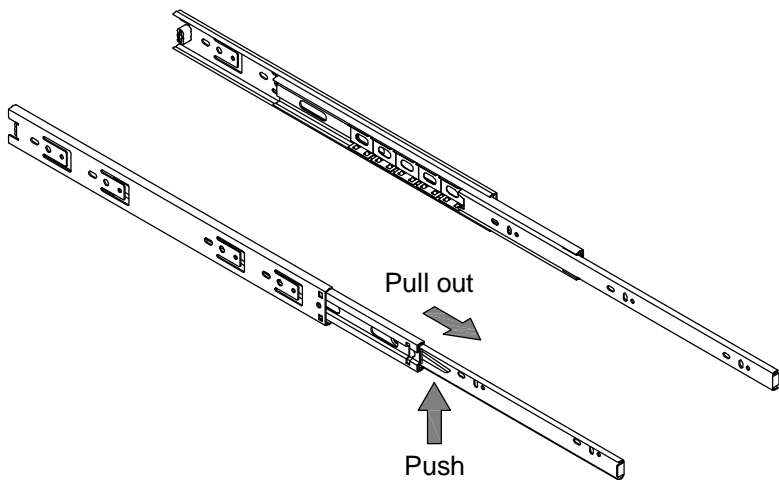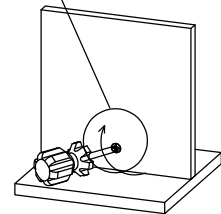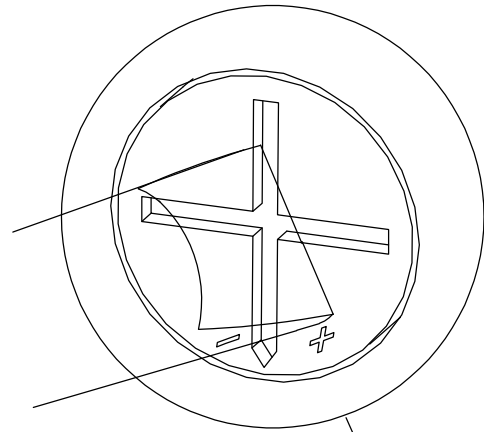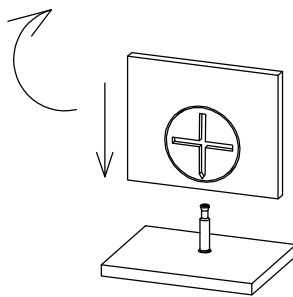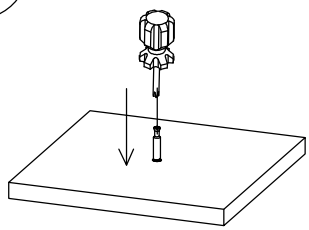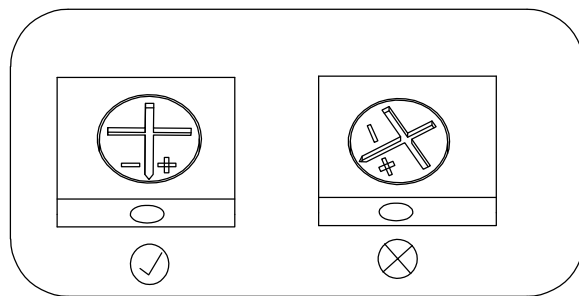
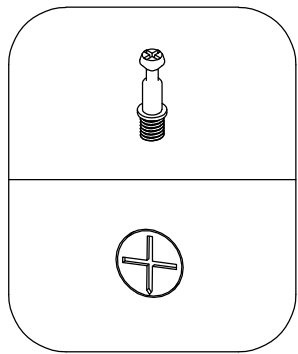


Disconnect the keyboard rail with the BLACK PLASTIC PART. It needs to be pulled down to disconnect the runners.


1

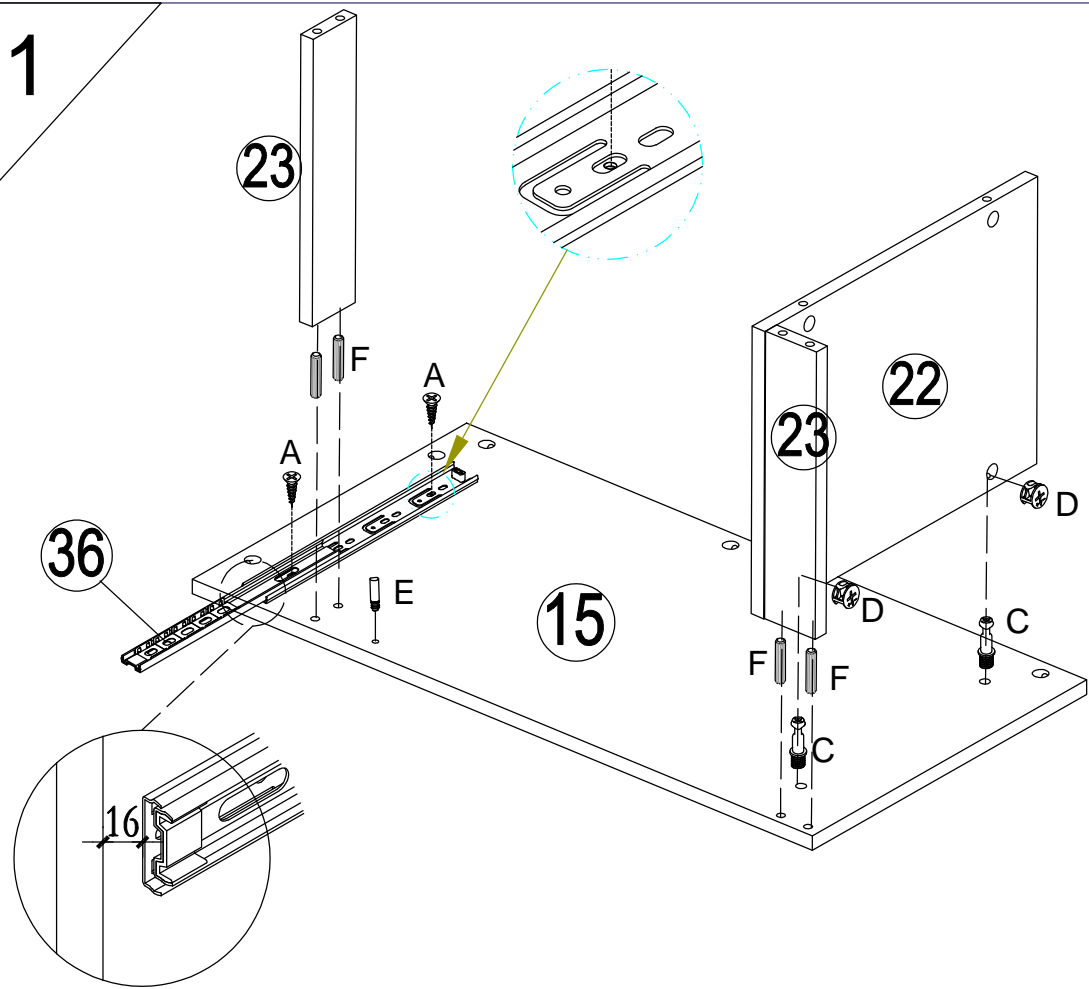



A	M3.5x12	C	M5x25	D	Ø15x10	E	M5	
	X 2		X 2		X 2		X 1	
F	Ø8x40							
								X 4

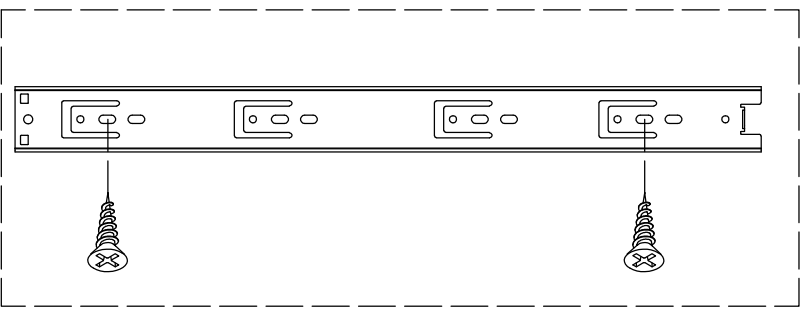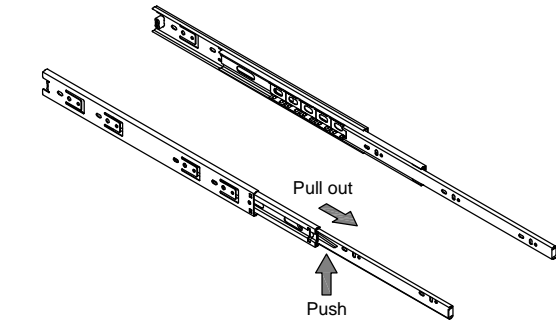


2

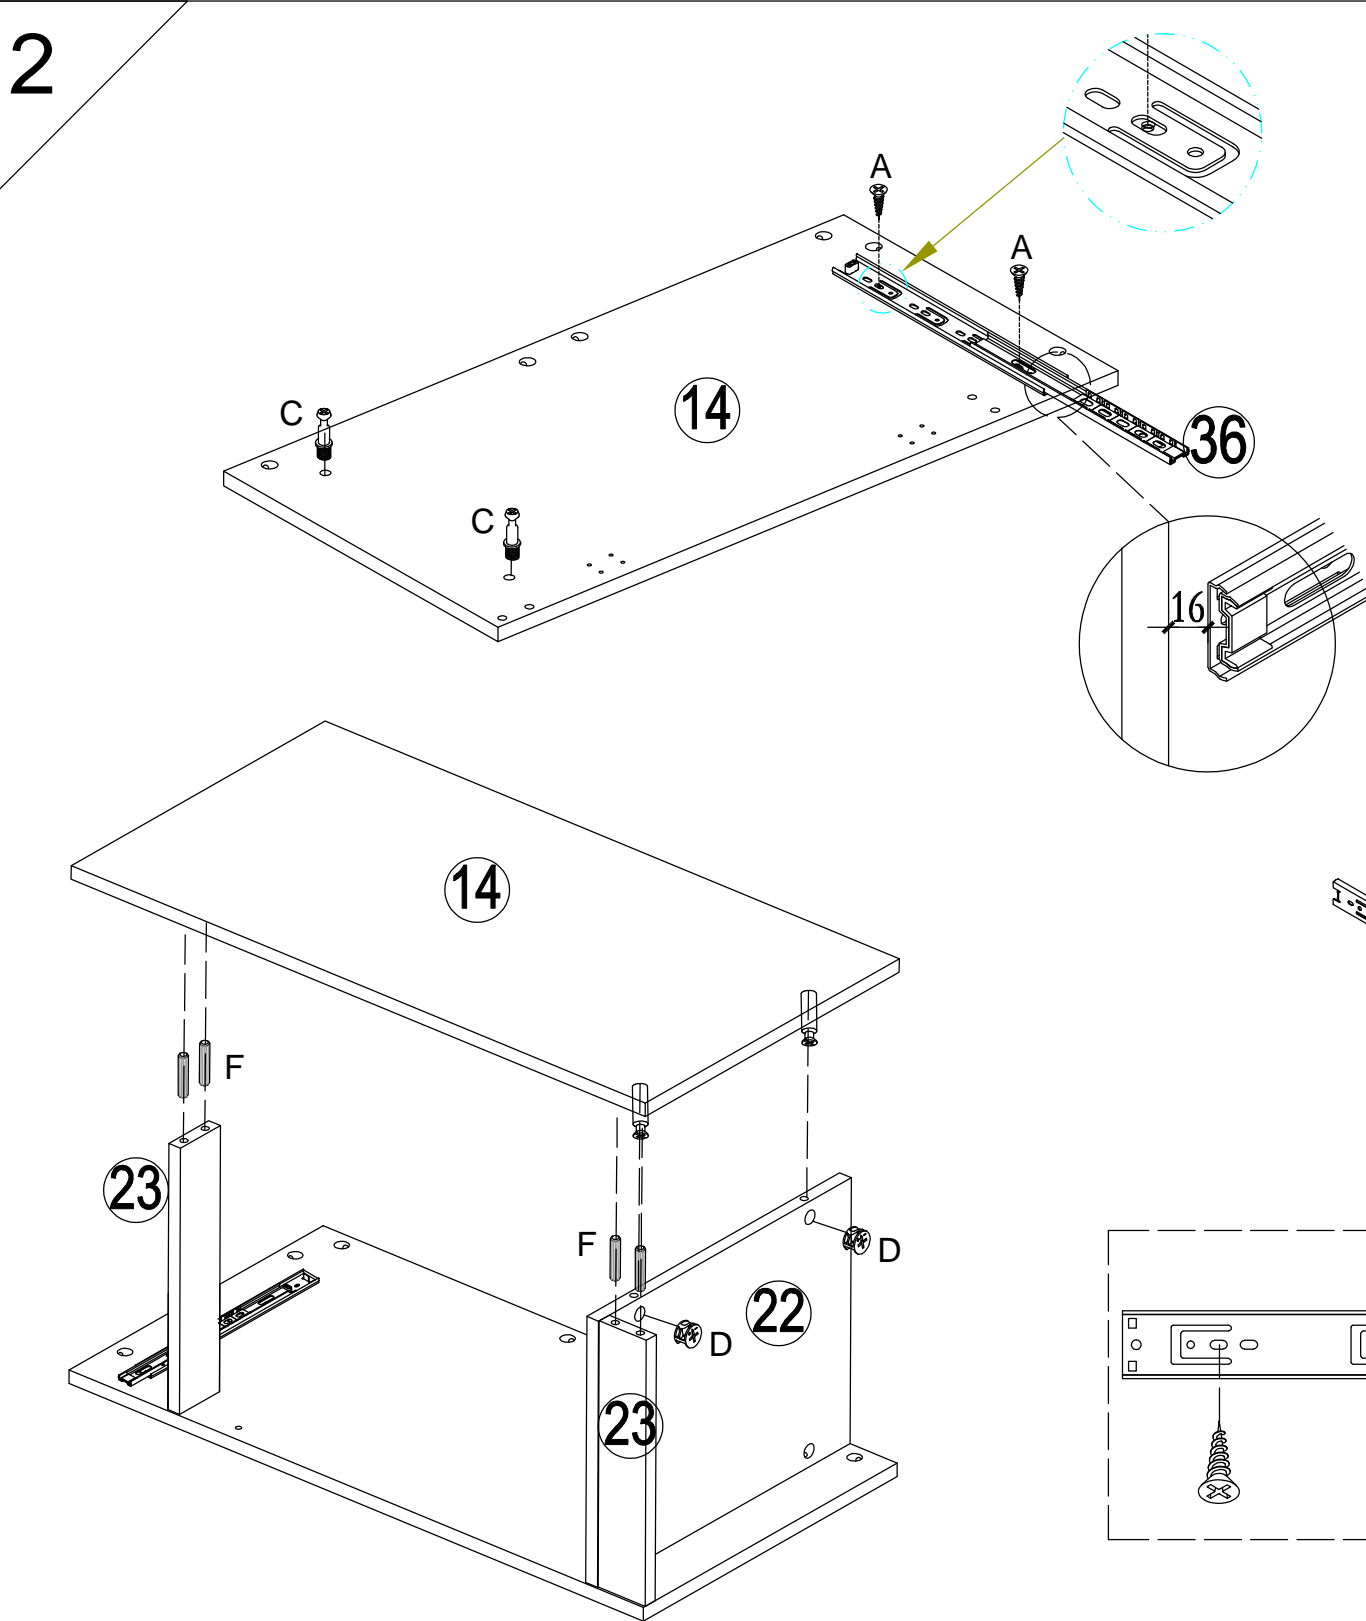

A	M3.5x12	C	M5x25	D	Ø15x10	F	Ø8x40
	X 2		X 2		X 2		X 4

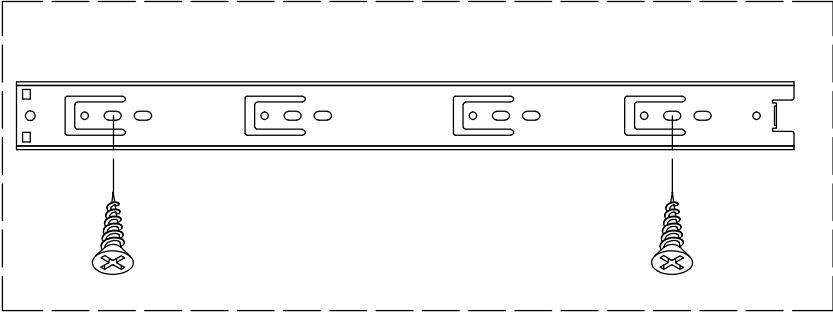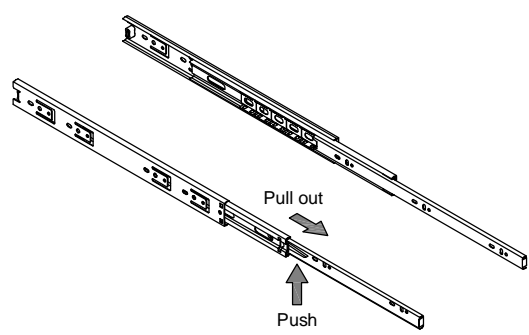


3

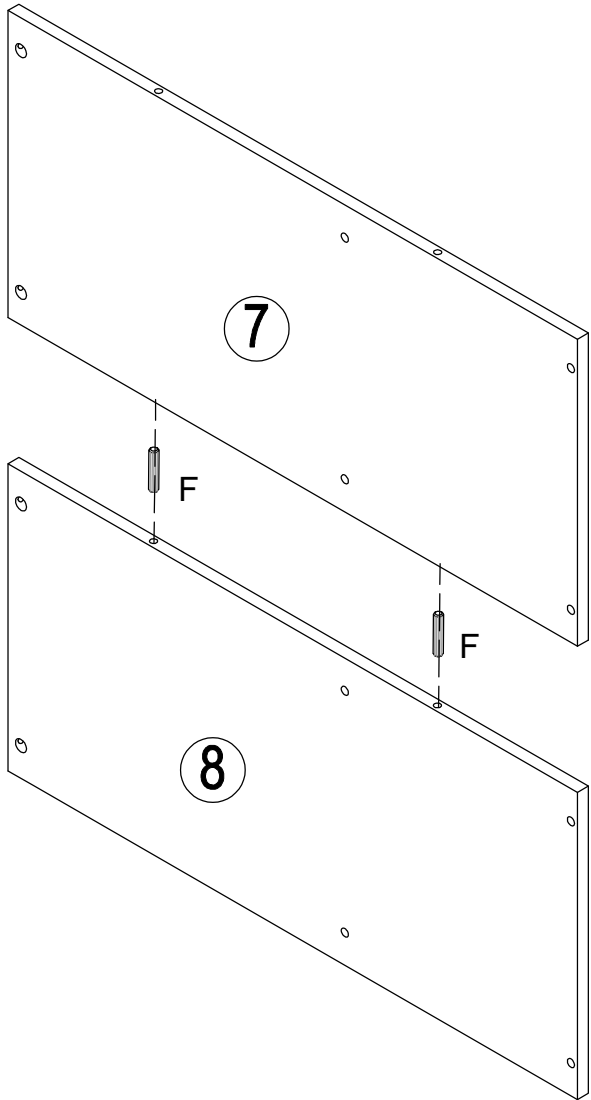


F Ø8x40
X 2

4

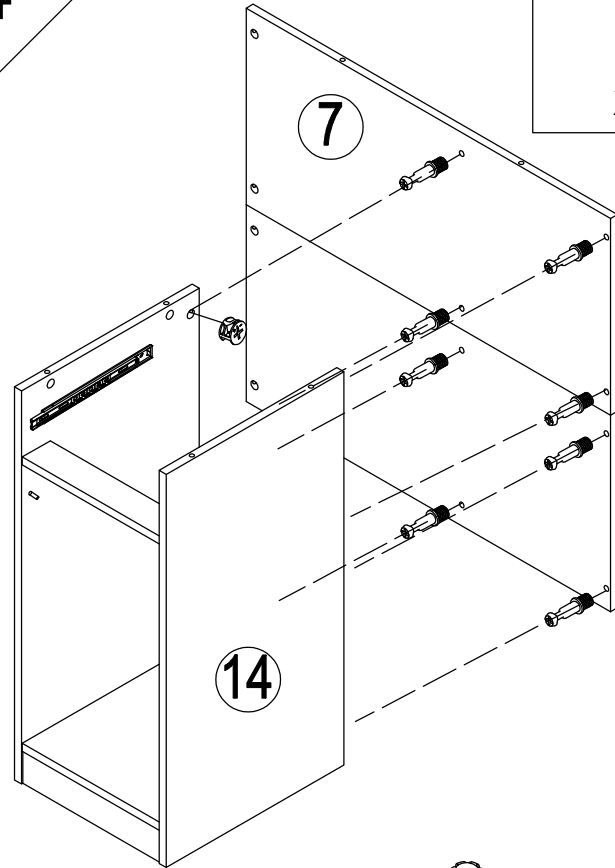


C M5x25
X 8

D Ø15x10
X 8

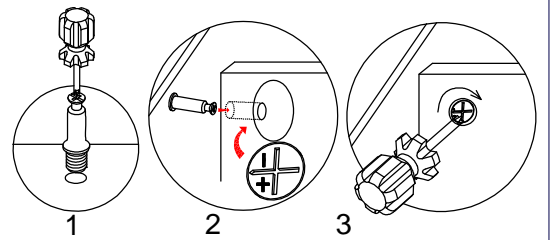


5

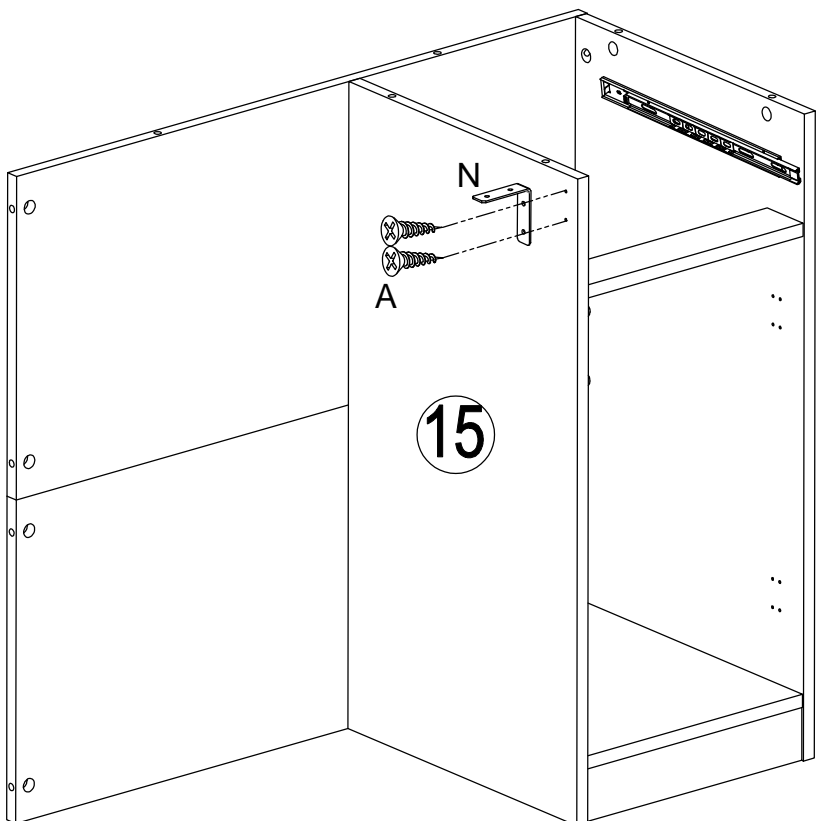

N
X 1


A M3.5x12
X 2

6

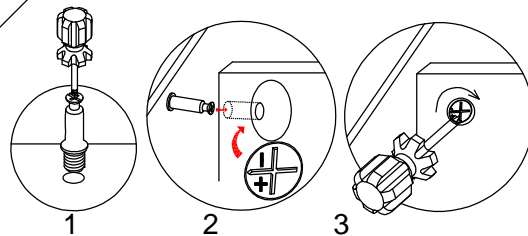





C M5x25
X 4


D Ø15x10
X 4

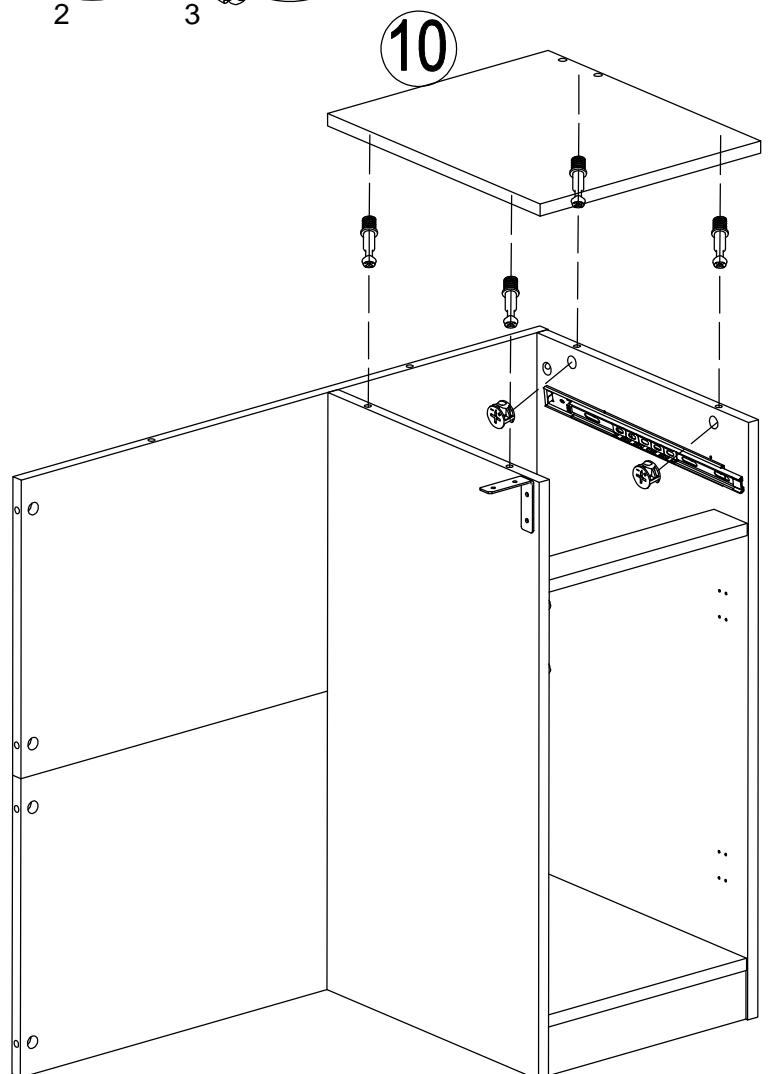


7

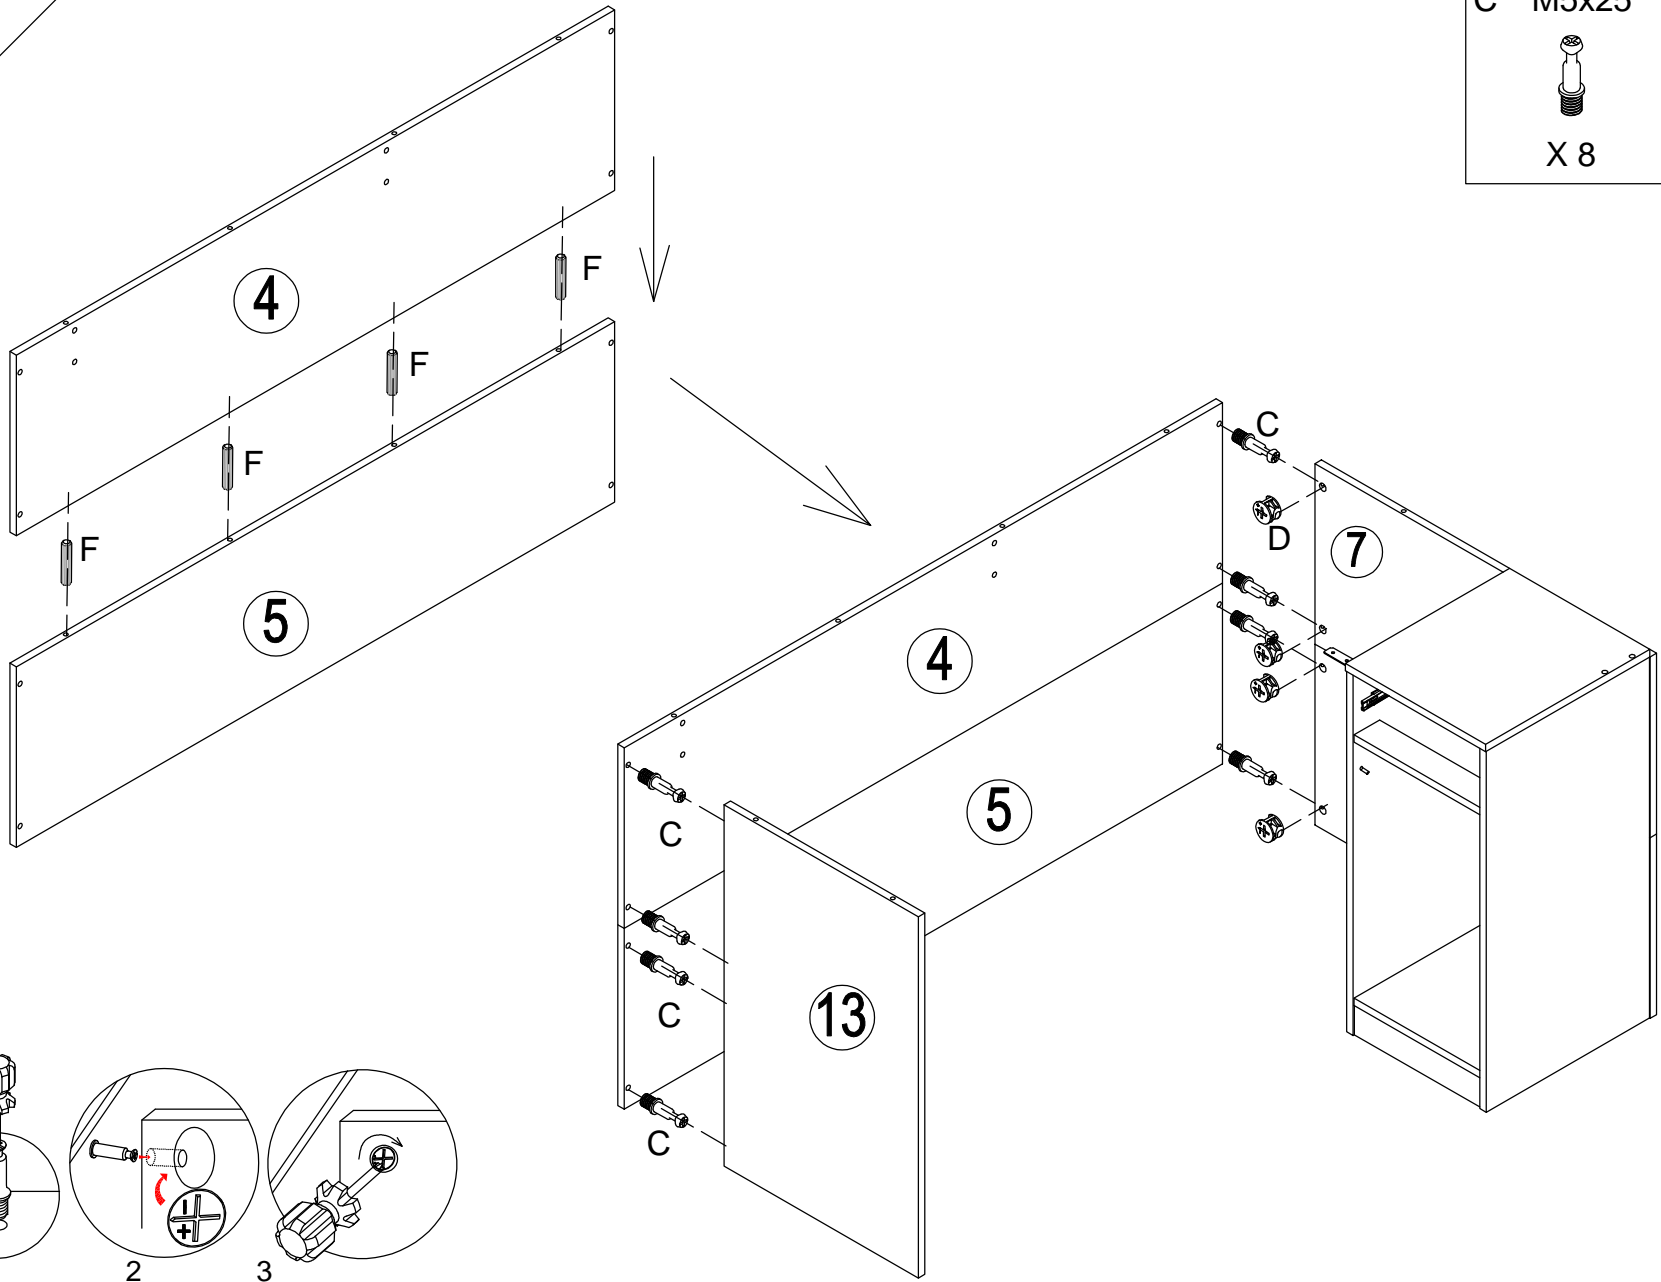





C M5x25  X 8	D Ø15x10  X 8
	F Ø8x40  X 4

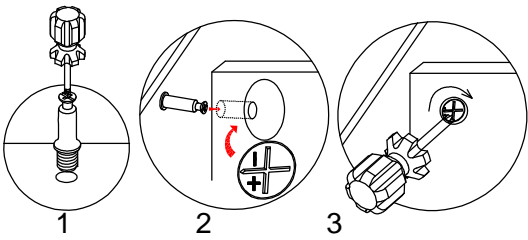


8

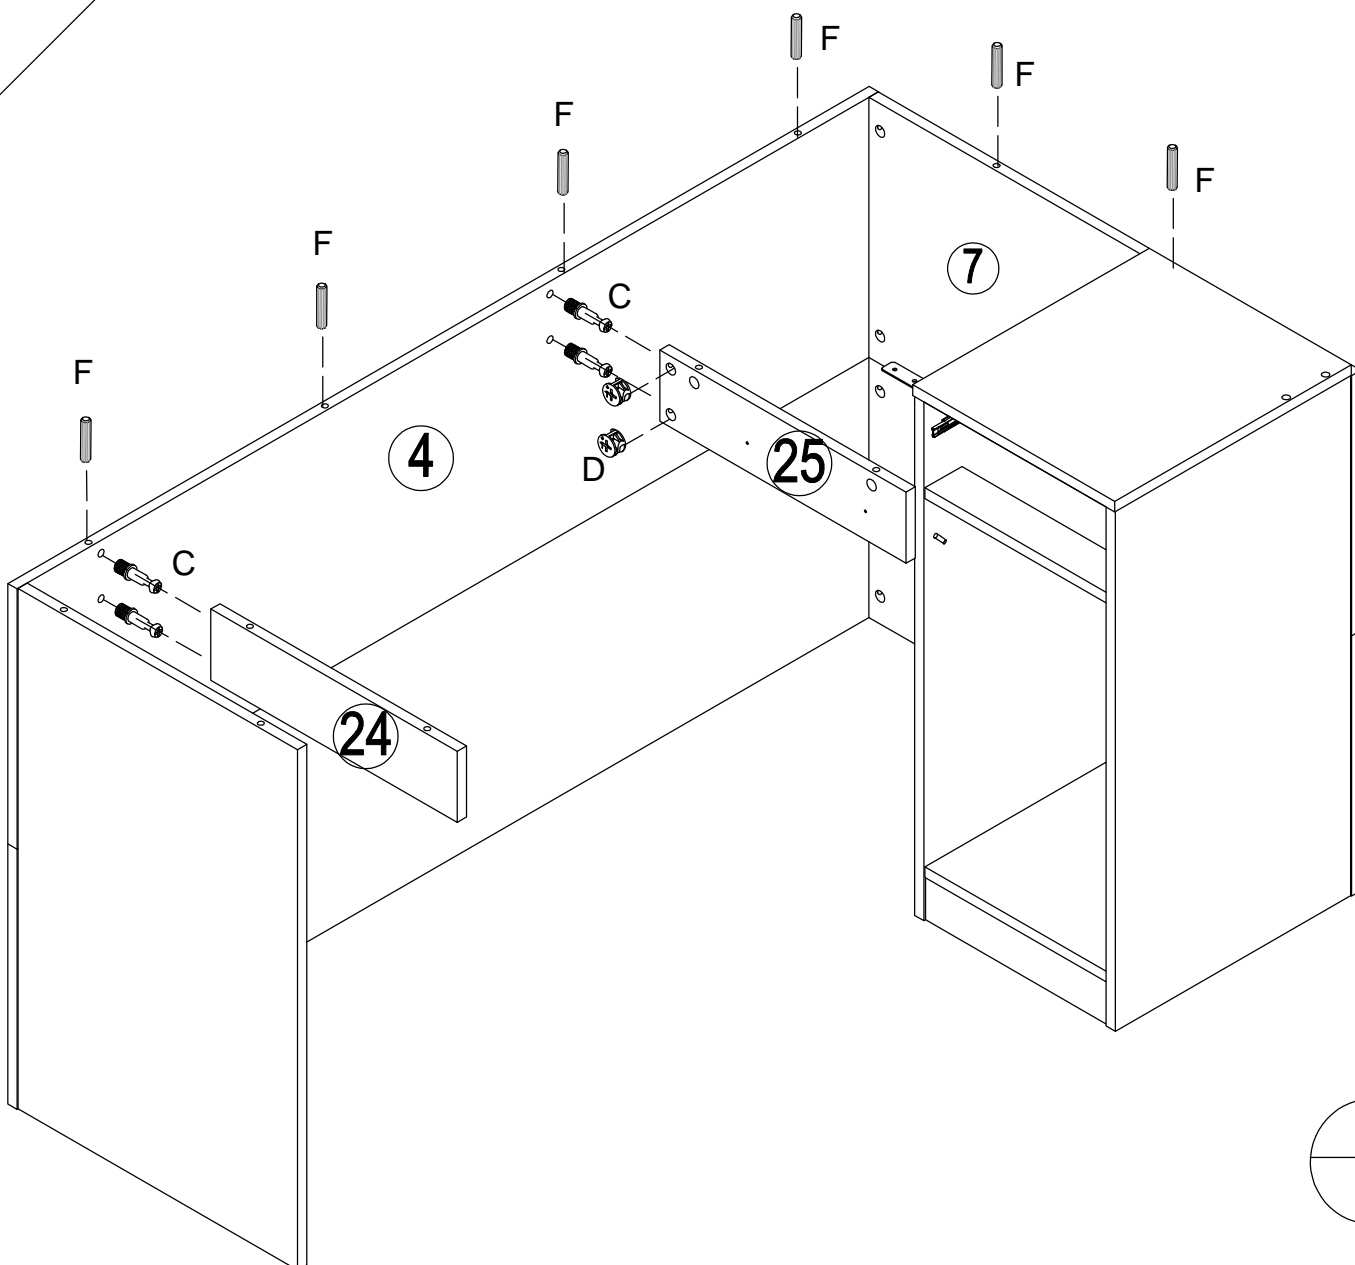




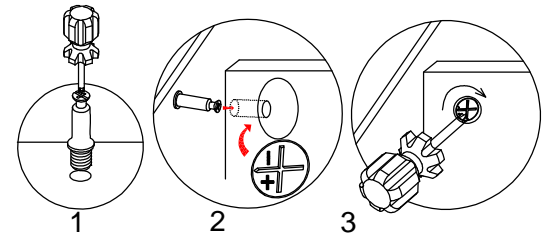
C M5x25  X 4	D Ø15x10  X 4
	F Ø8x40  X 6

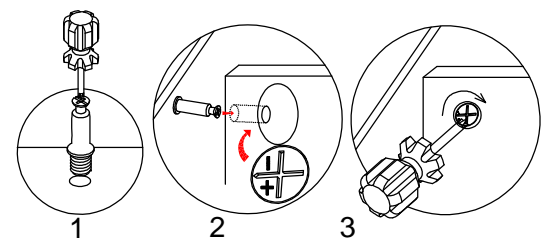


9

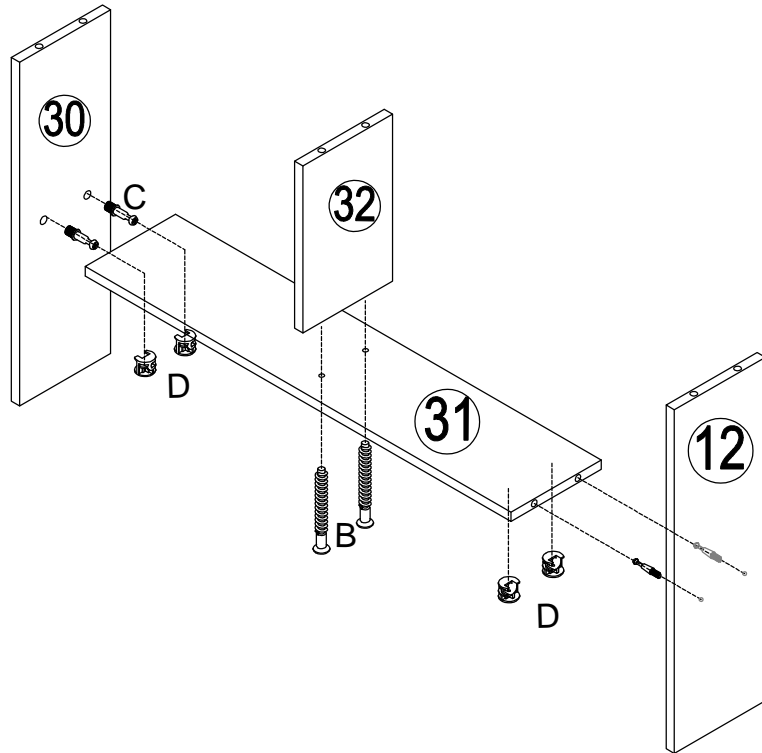




C M5x25  X 4	D Ø15x10  X 4
	B M5x40  X 2




10

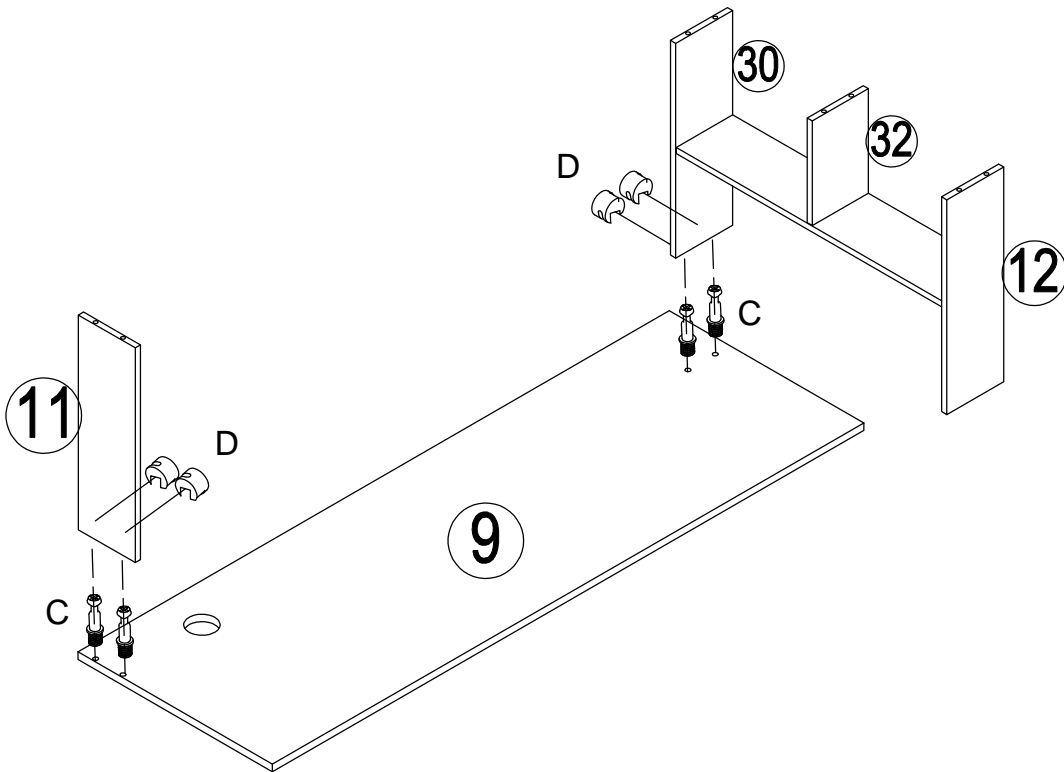




C M5x25  X 4	D Ø15x10  X 4
---	--

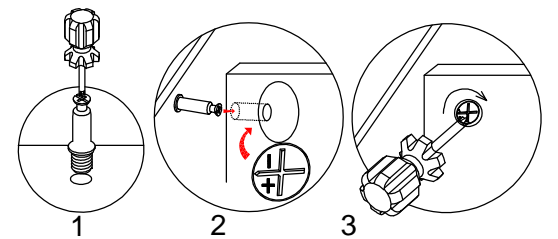

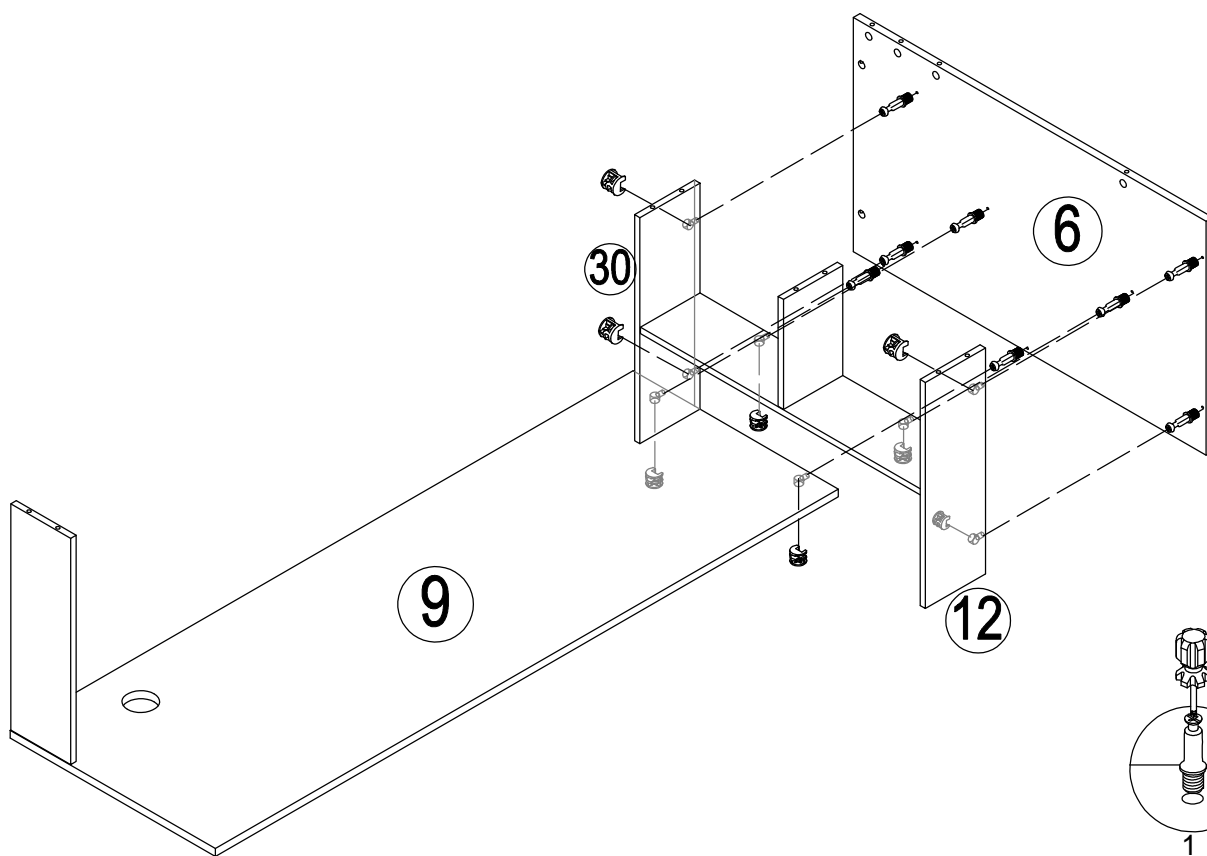

11


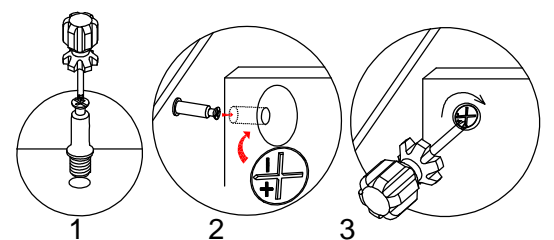


C M5x25  X 8	D Ø15x10  X 8
---	--







12

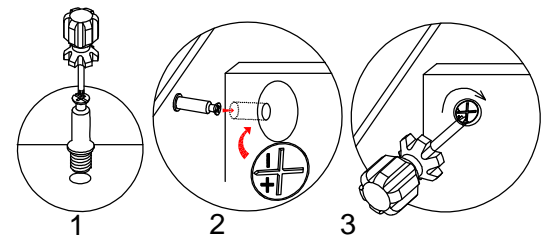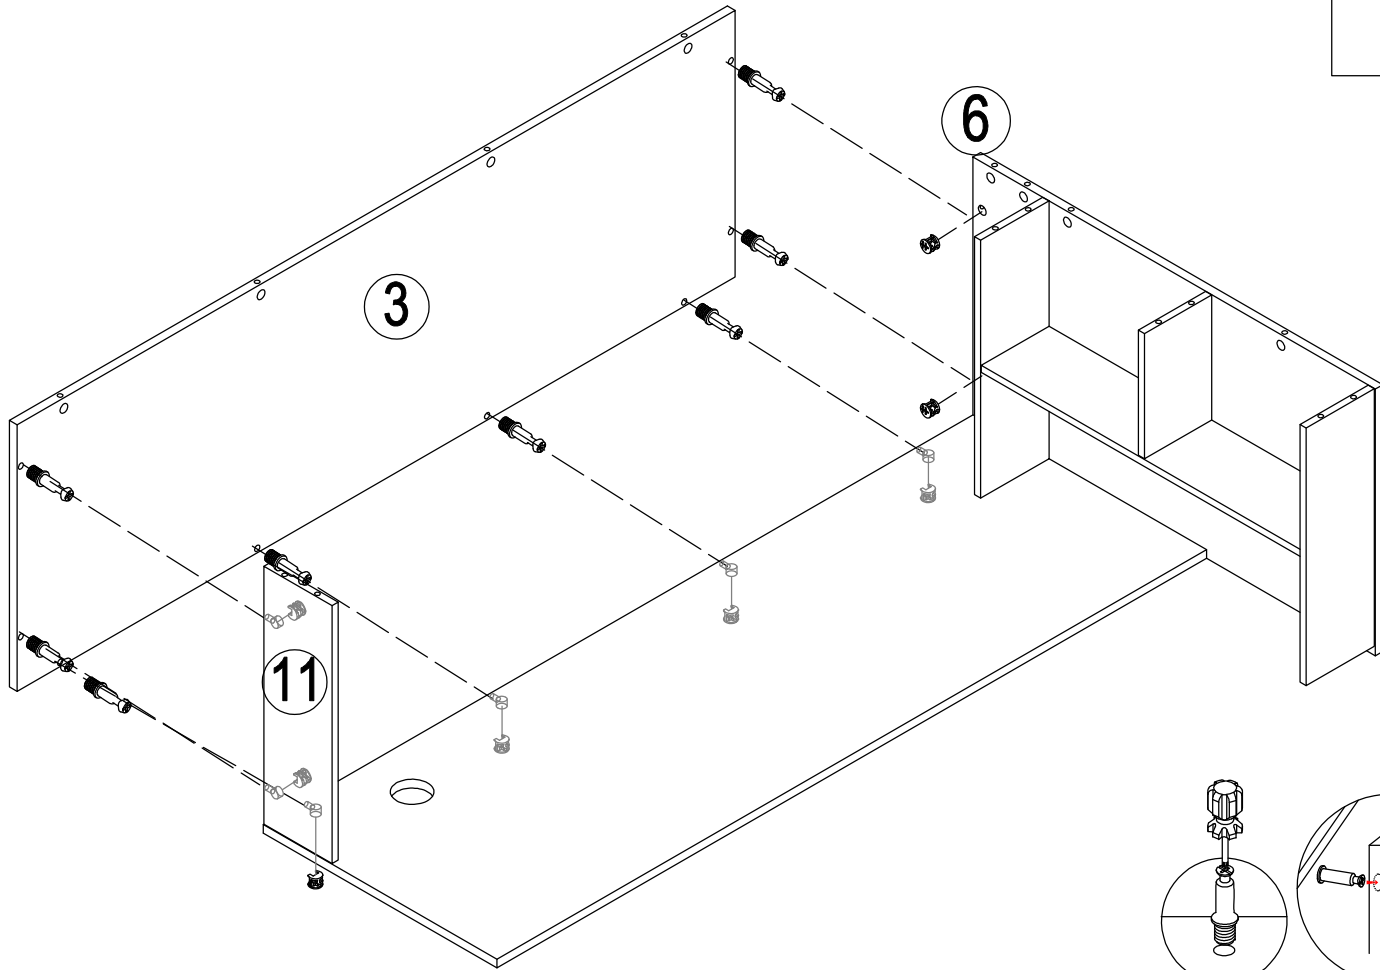C	M5x25	D	Ø15x10
			
	X 8		X 8






13

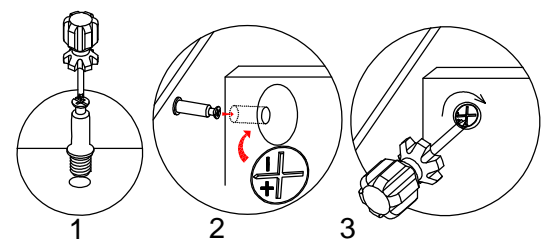
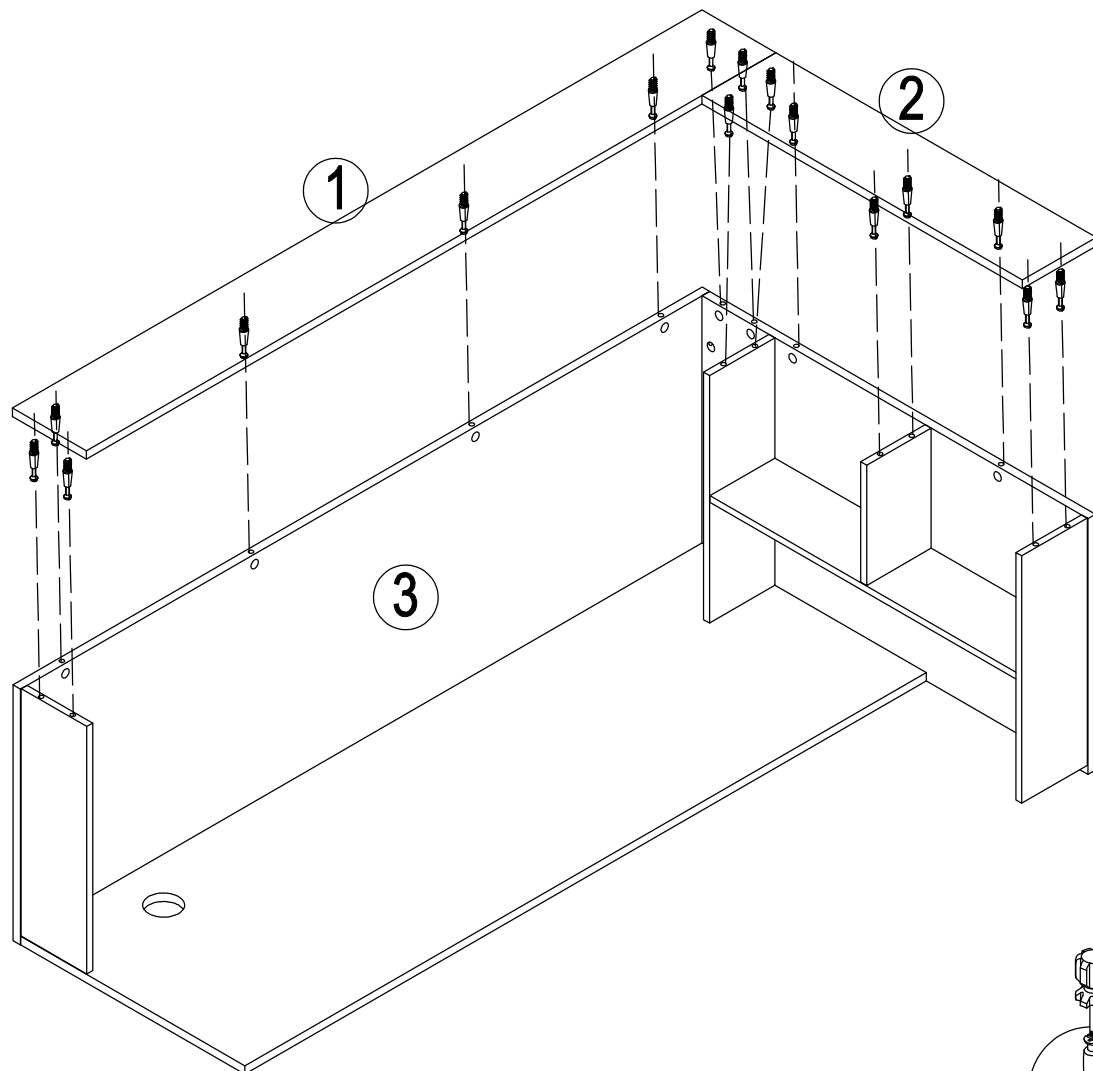
C	M5x25	D	Ø15x10
			
	X 16		X 16

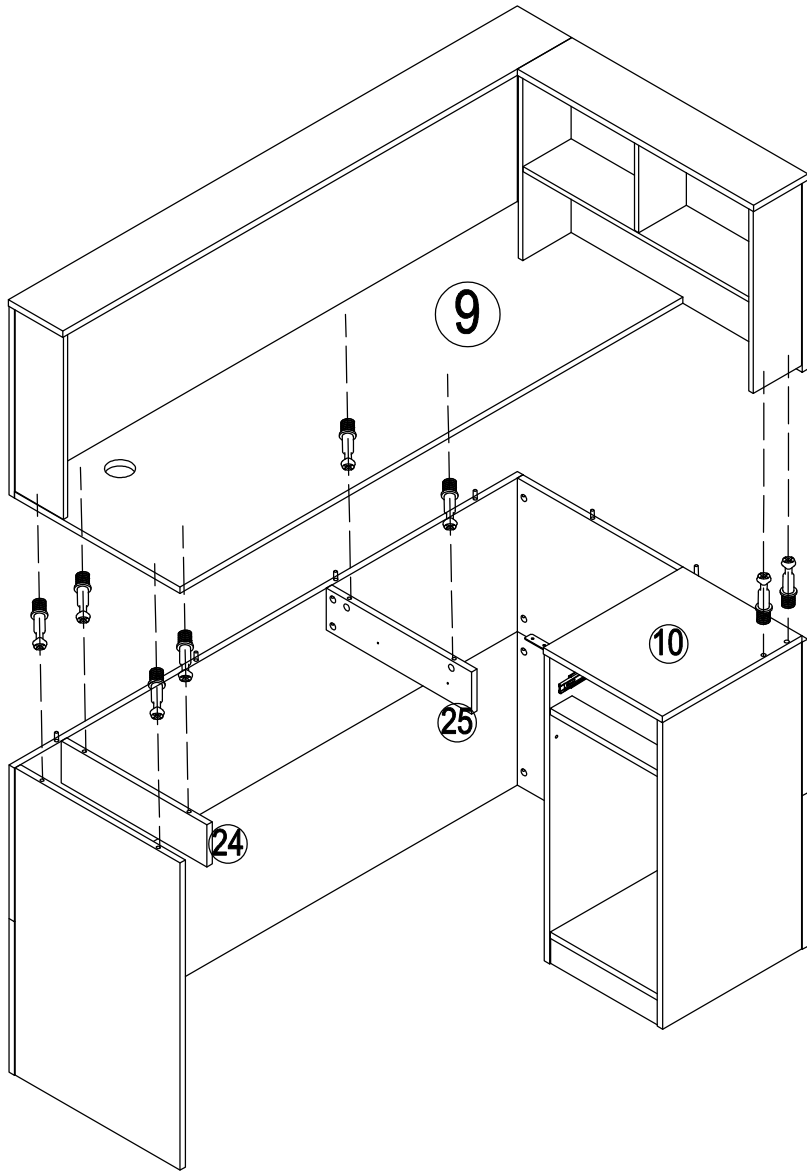



14




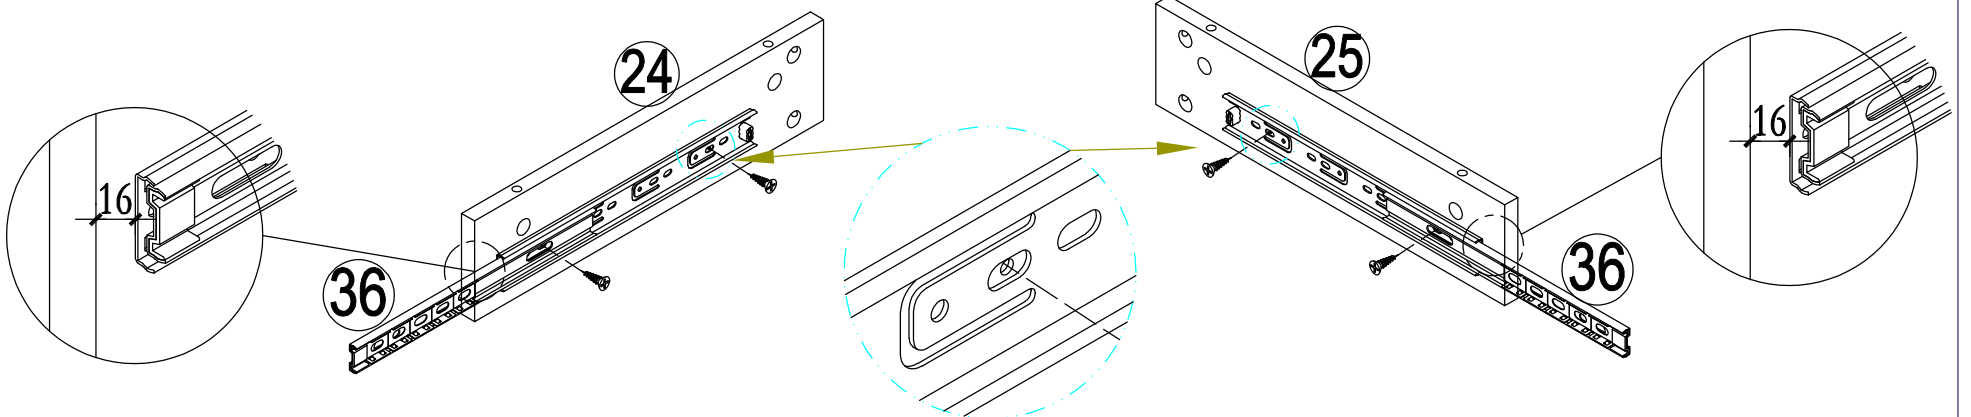
C	M5x25	D	Ø15x10
			
	X 8		X 8

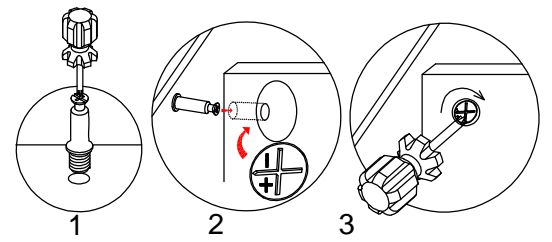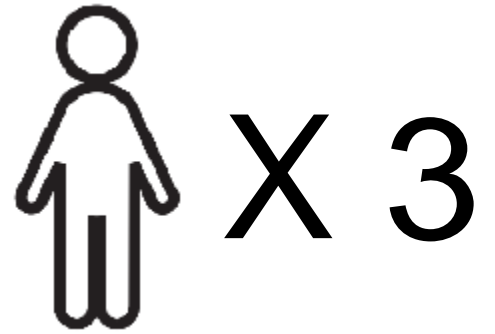


15

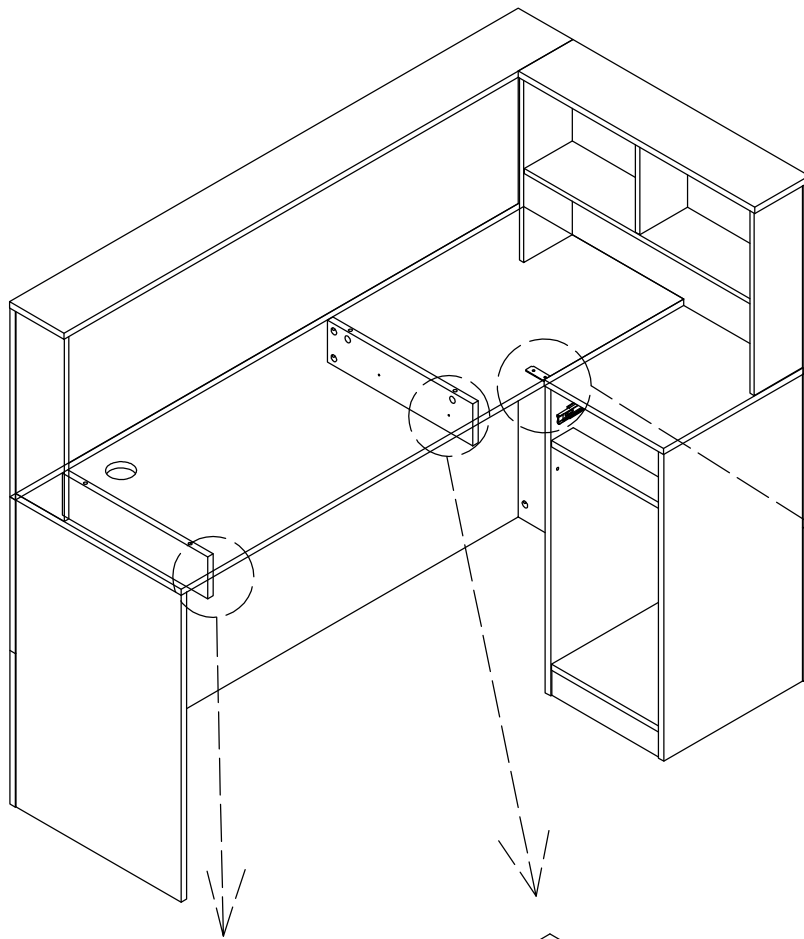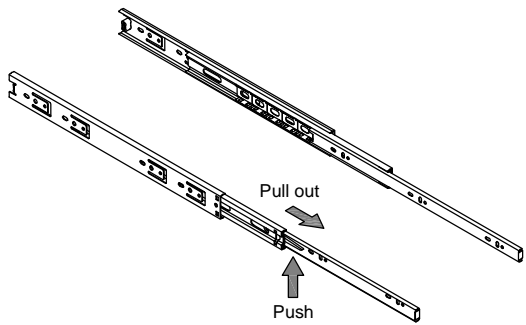




A	M3.5x12
	
	X 6

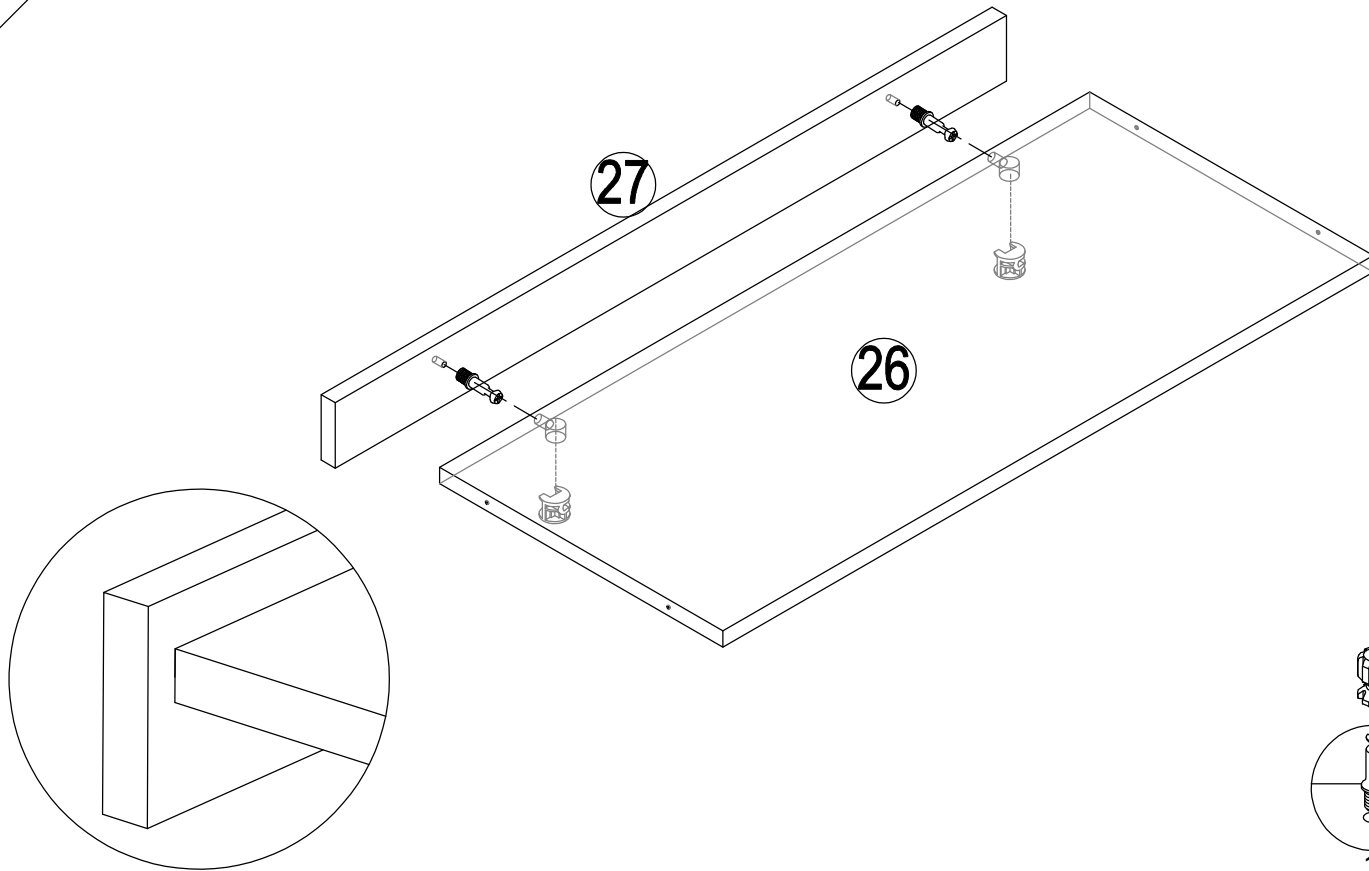


16




C	M5x25	D	Ø15x10
			
	X 2		X 2

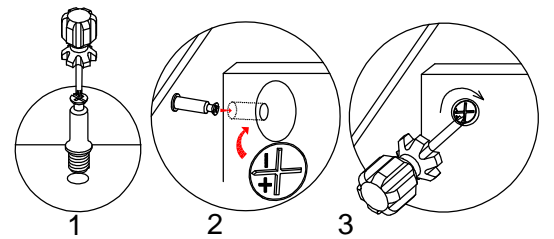



17

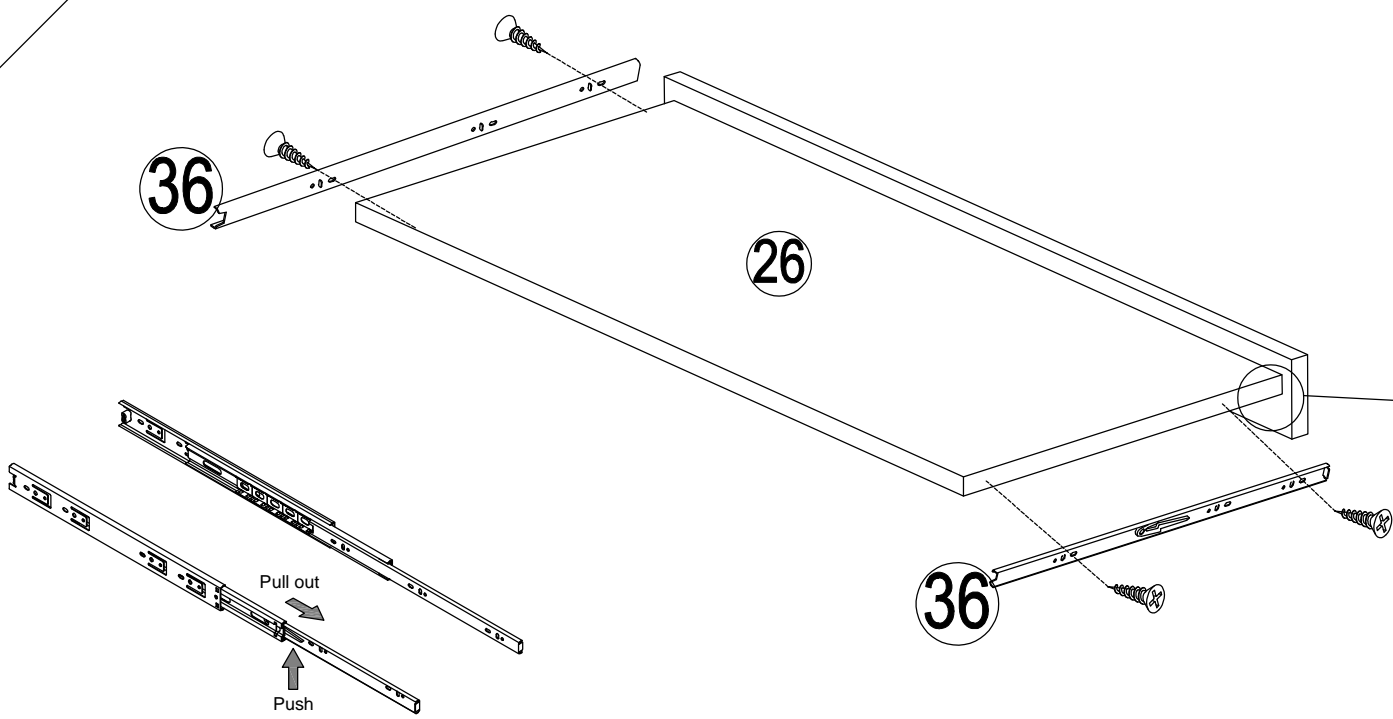


A	M3.5x12
	
	X 4

18

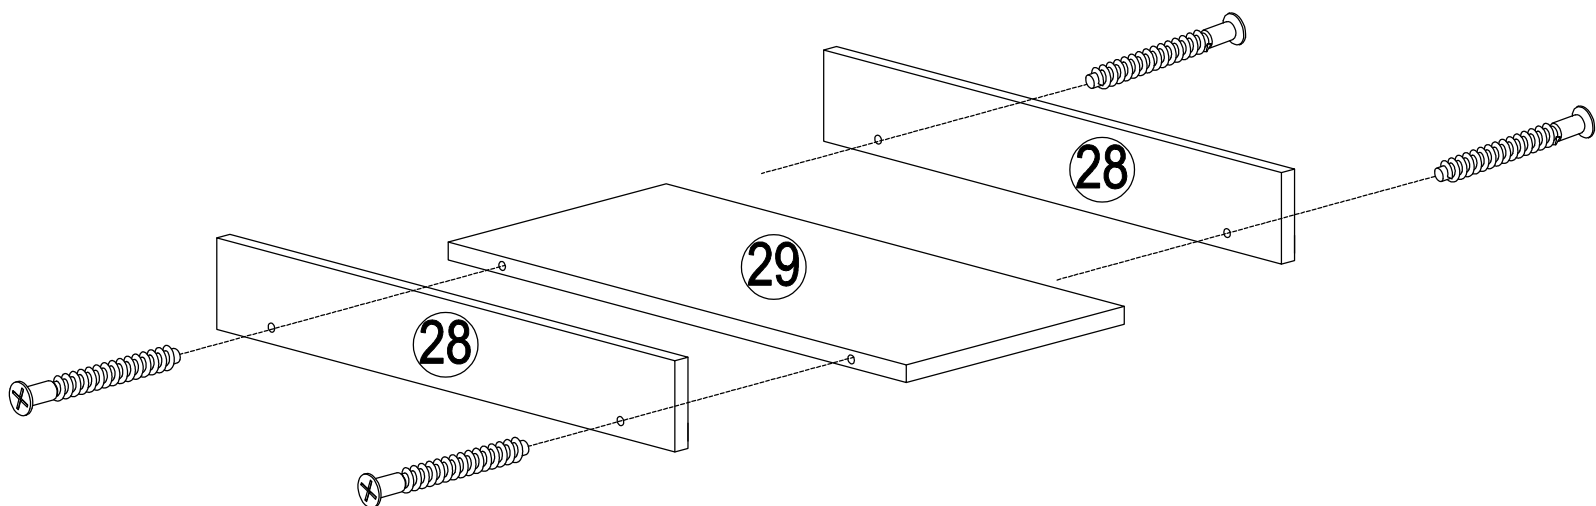


B	M5x40
	
	X 4

19

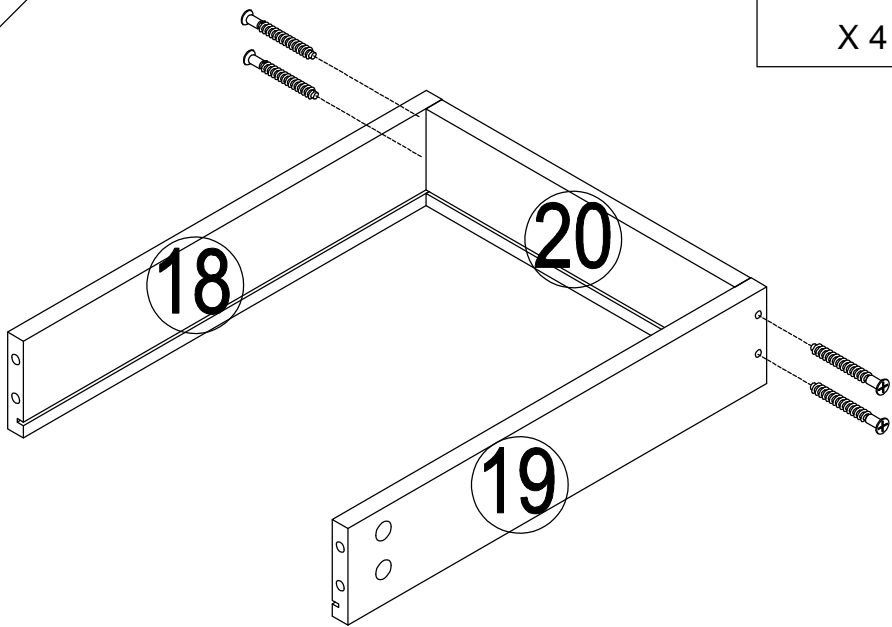


B M5x40




X 4

20

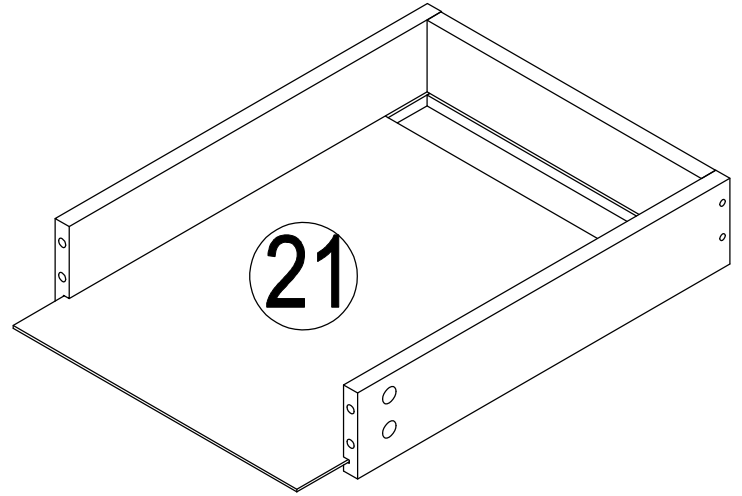

21

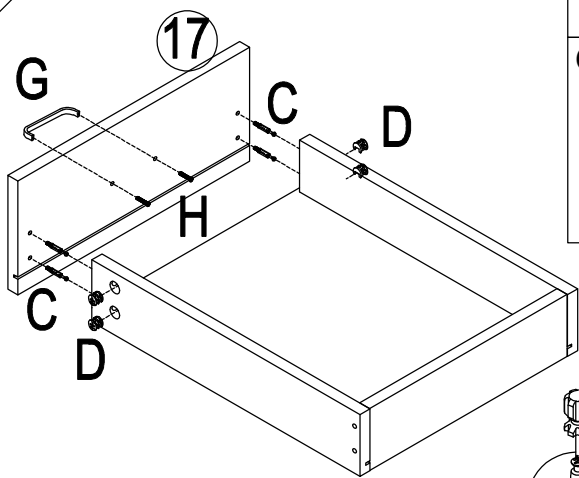

C M5x25




X 4

D Ø15x10




X 4

G M4x96




X 1


H M4x18




X 2

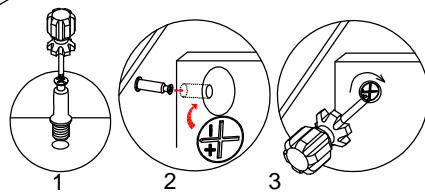

22

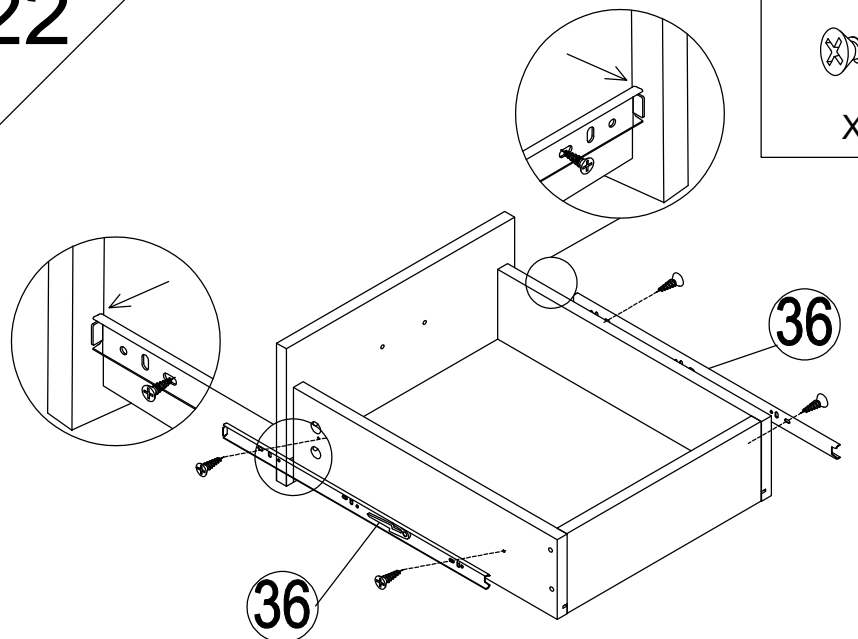


A M3.5x12



X 4

23

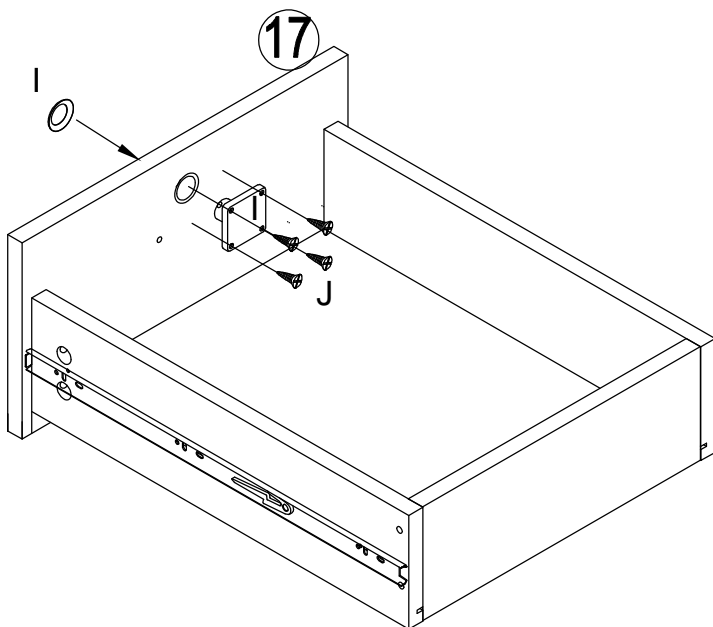

I




X 1

J M3x18








X 4

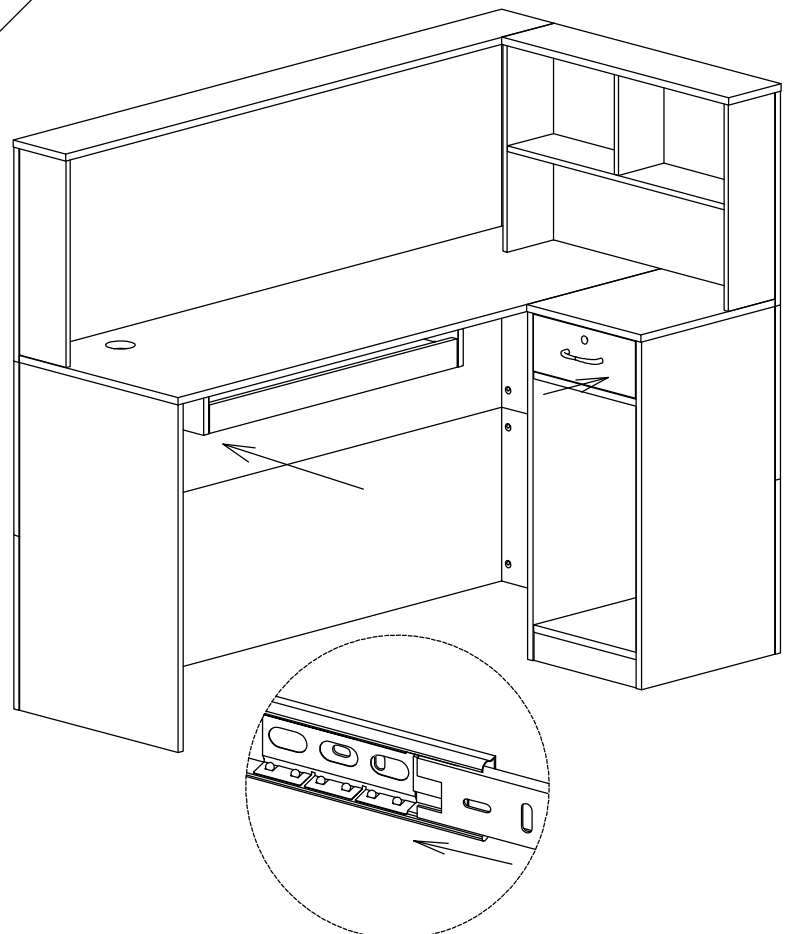24

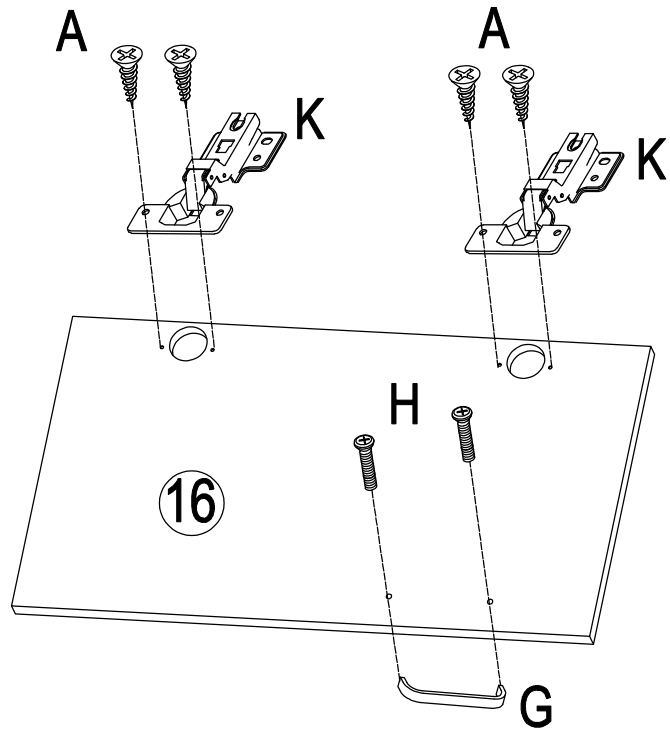



25




G M4x96  X 1	H M4x18  X 2	A M3.5x12  X 4
K DW  X 2		



26

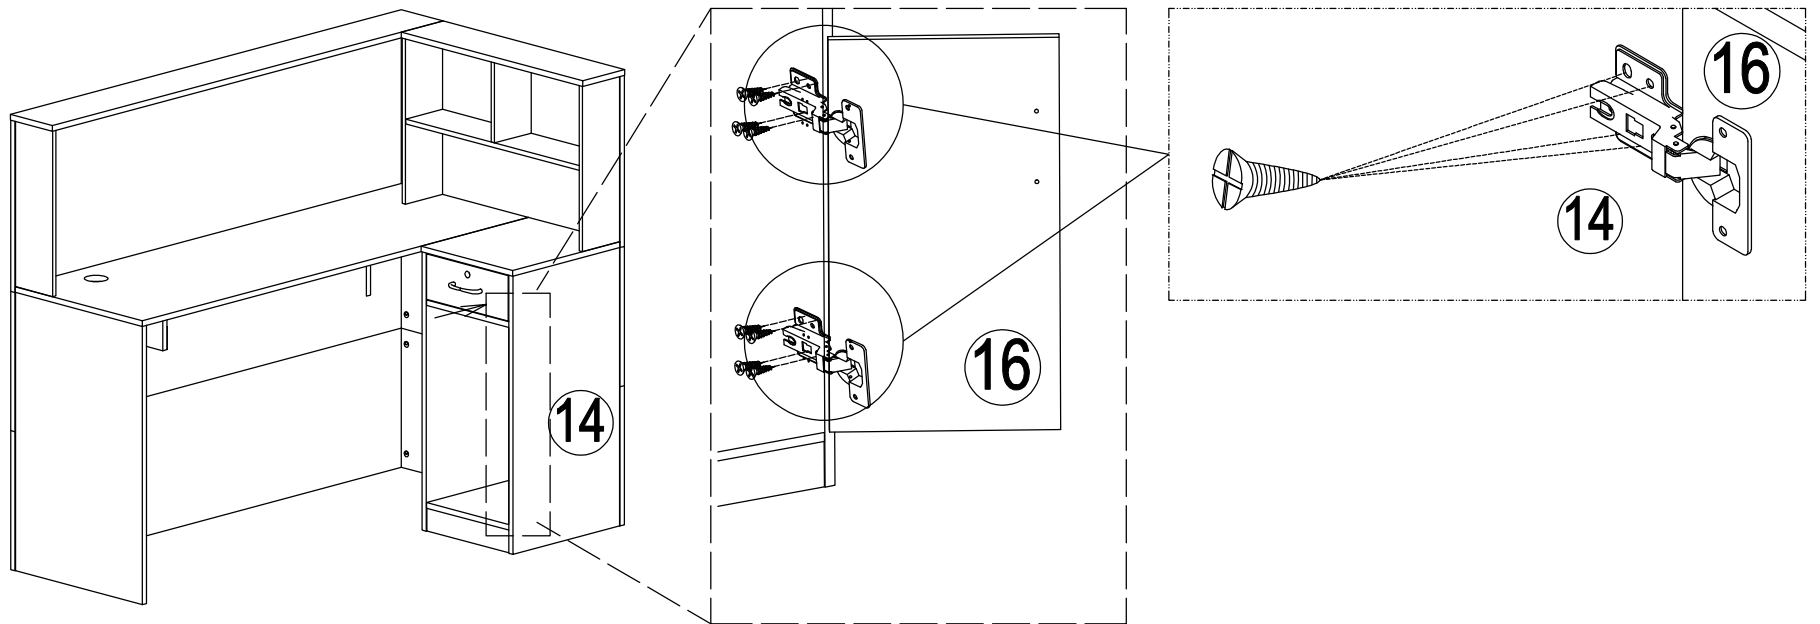


A M3.5x12  X 8


27

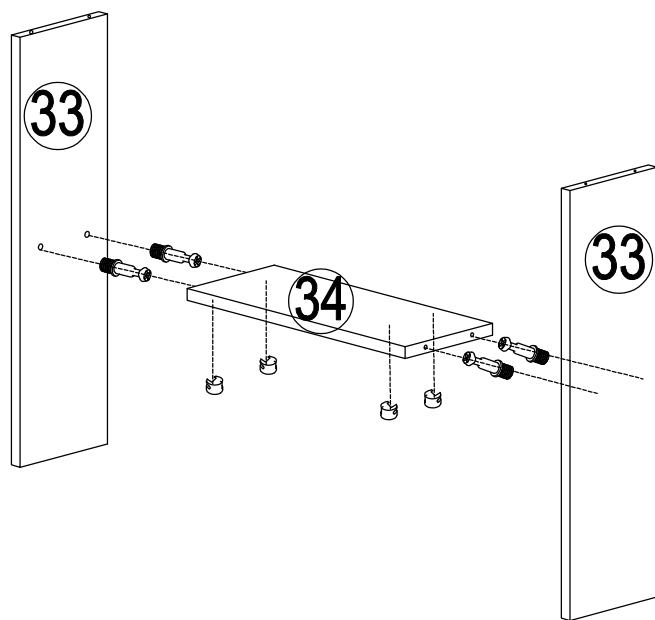

C M5x25  X 4	D Ø15x10  X 4
---	--

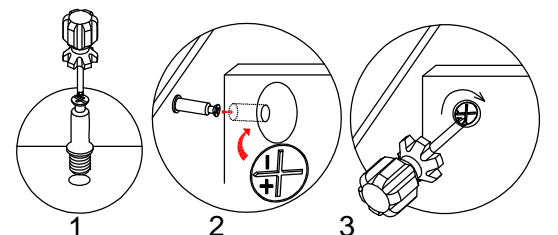

28

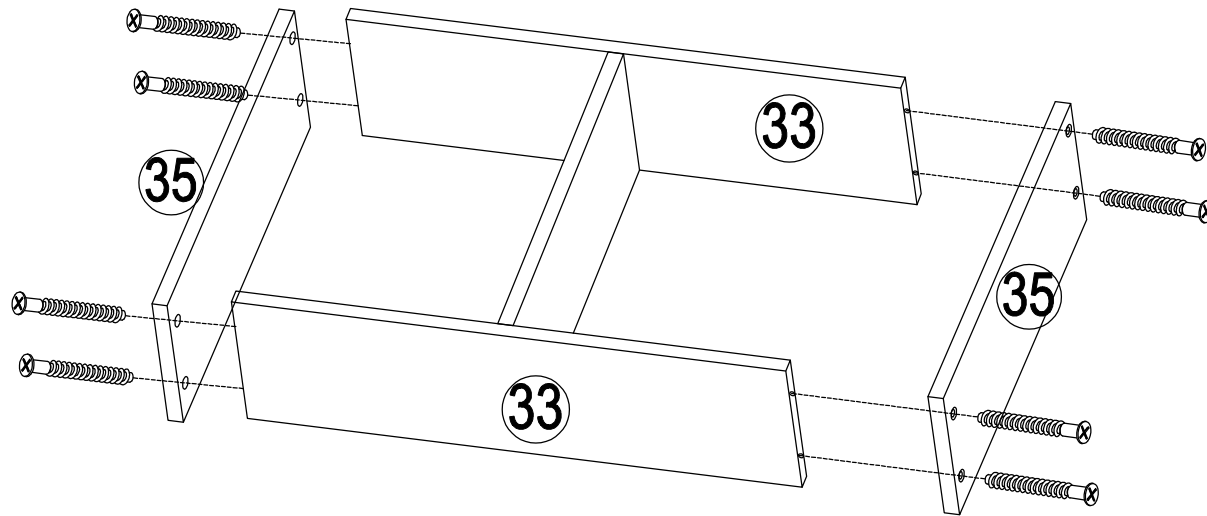


B M5x40



X 8

29

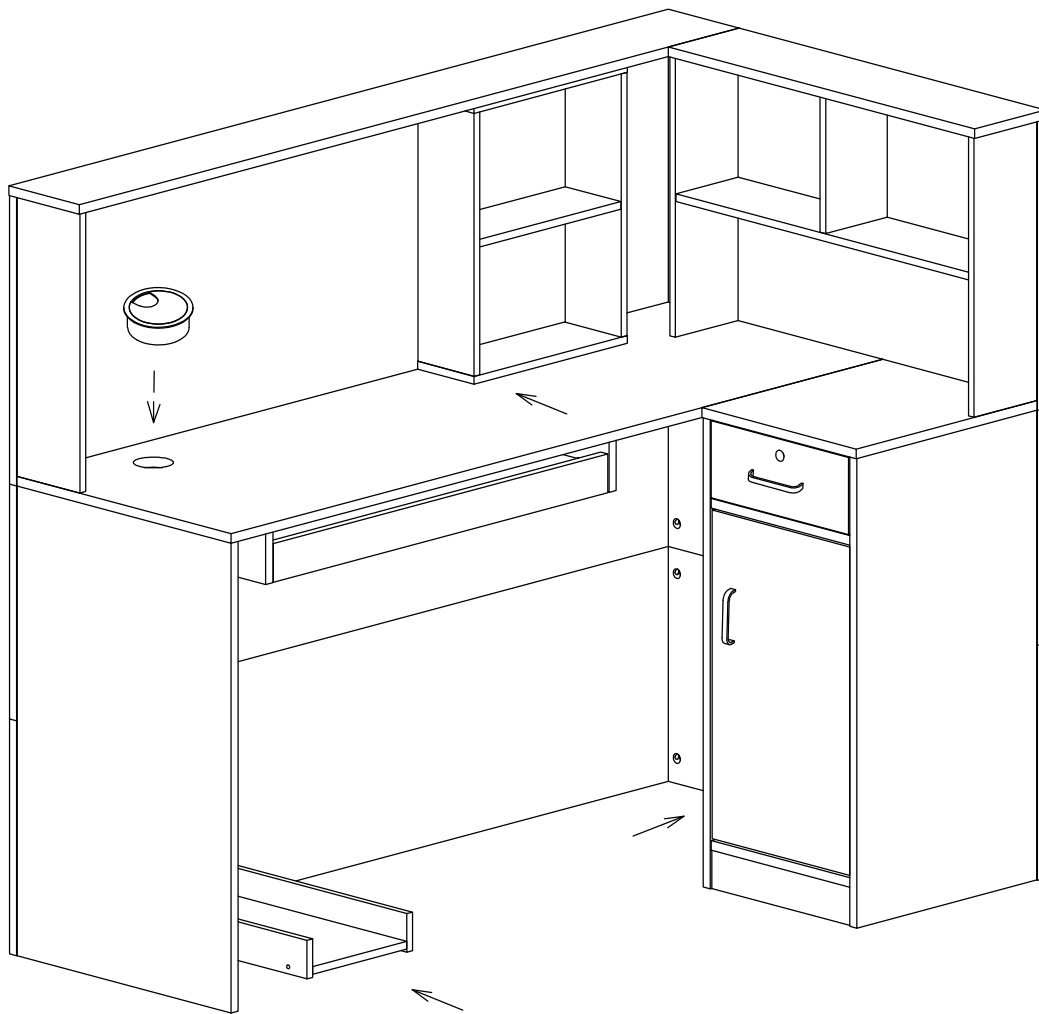

L Ø60



X 1

M



X 20

