



ASSEMBLY INSTRUCTIONS

ITEM NO : W1413P329283 & W1413P329284 & W1413P329285

W1413P329286 & W1413P329287 & W1413P329288

DESCRIPTION : 237 BED TW












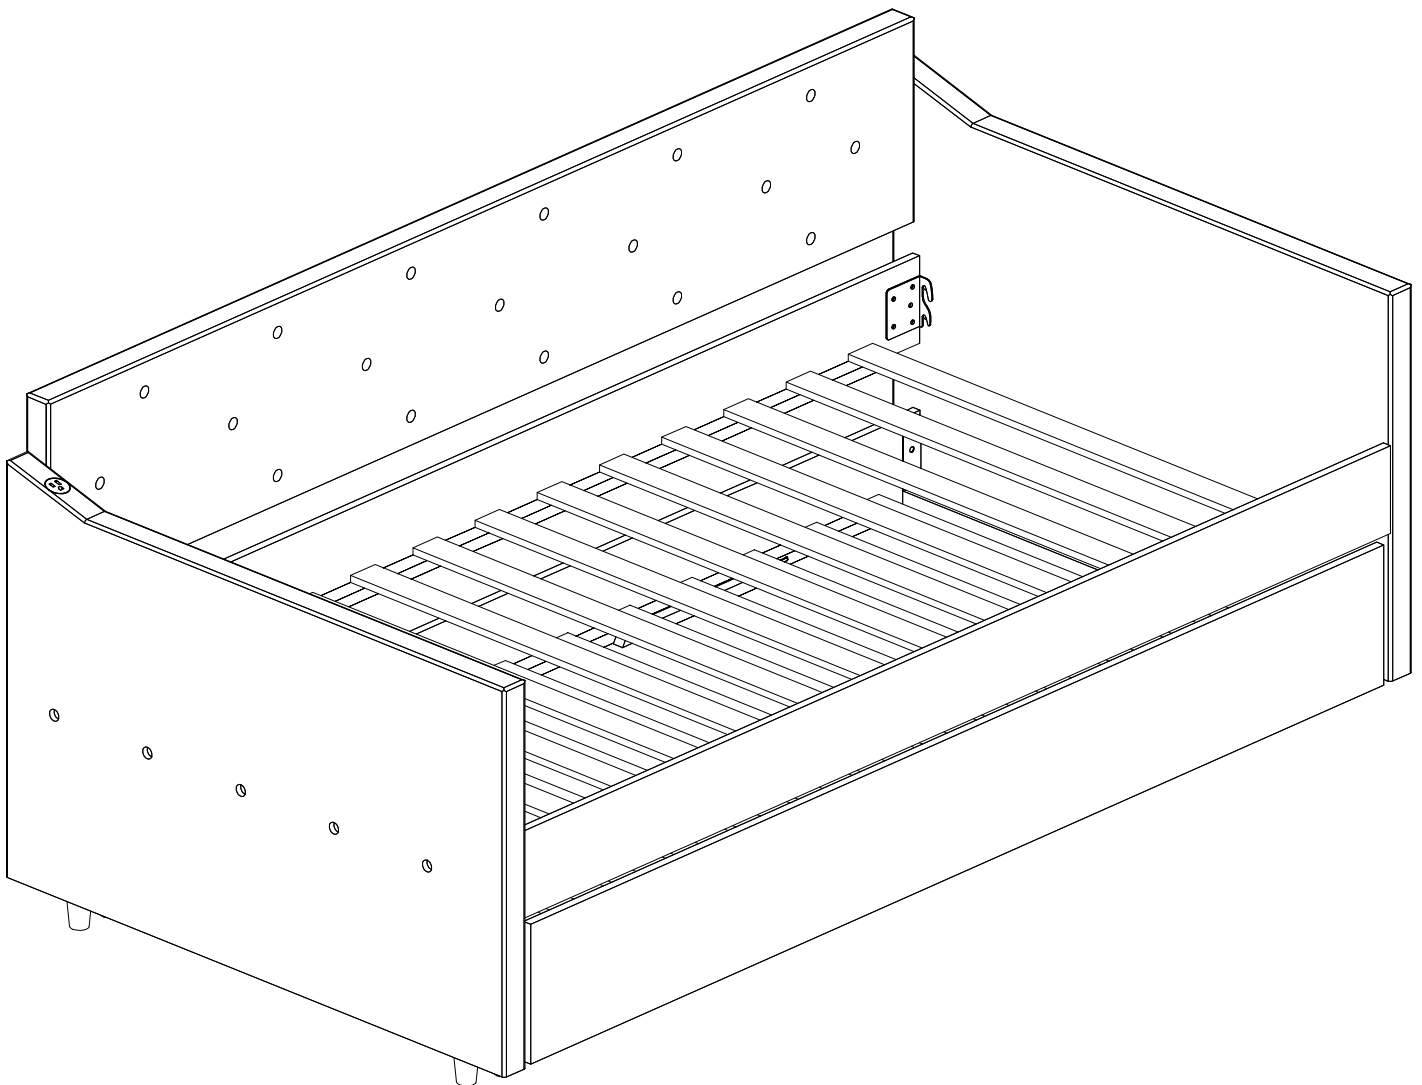


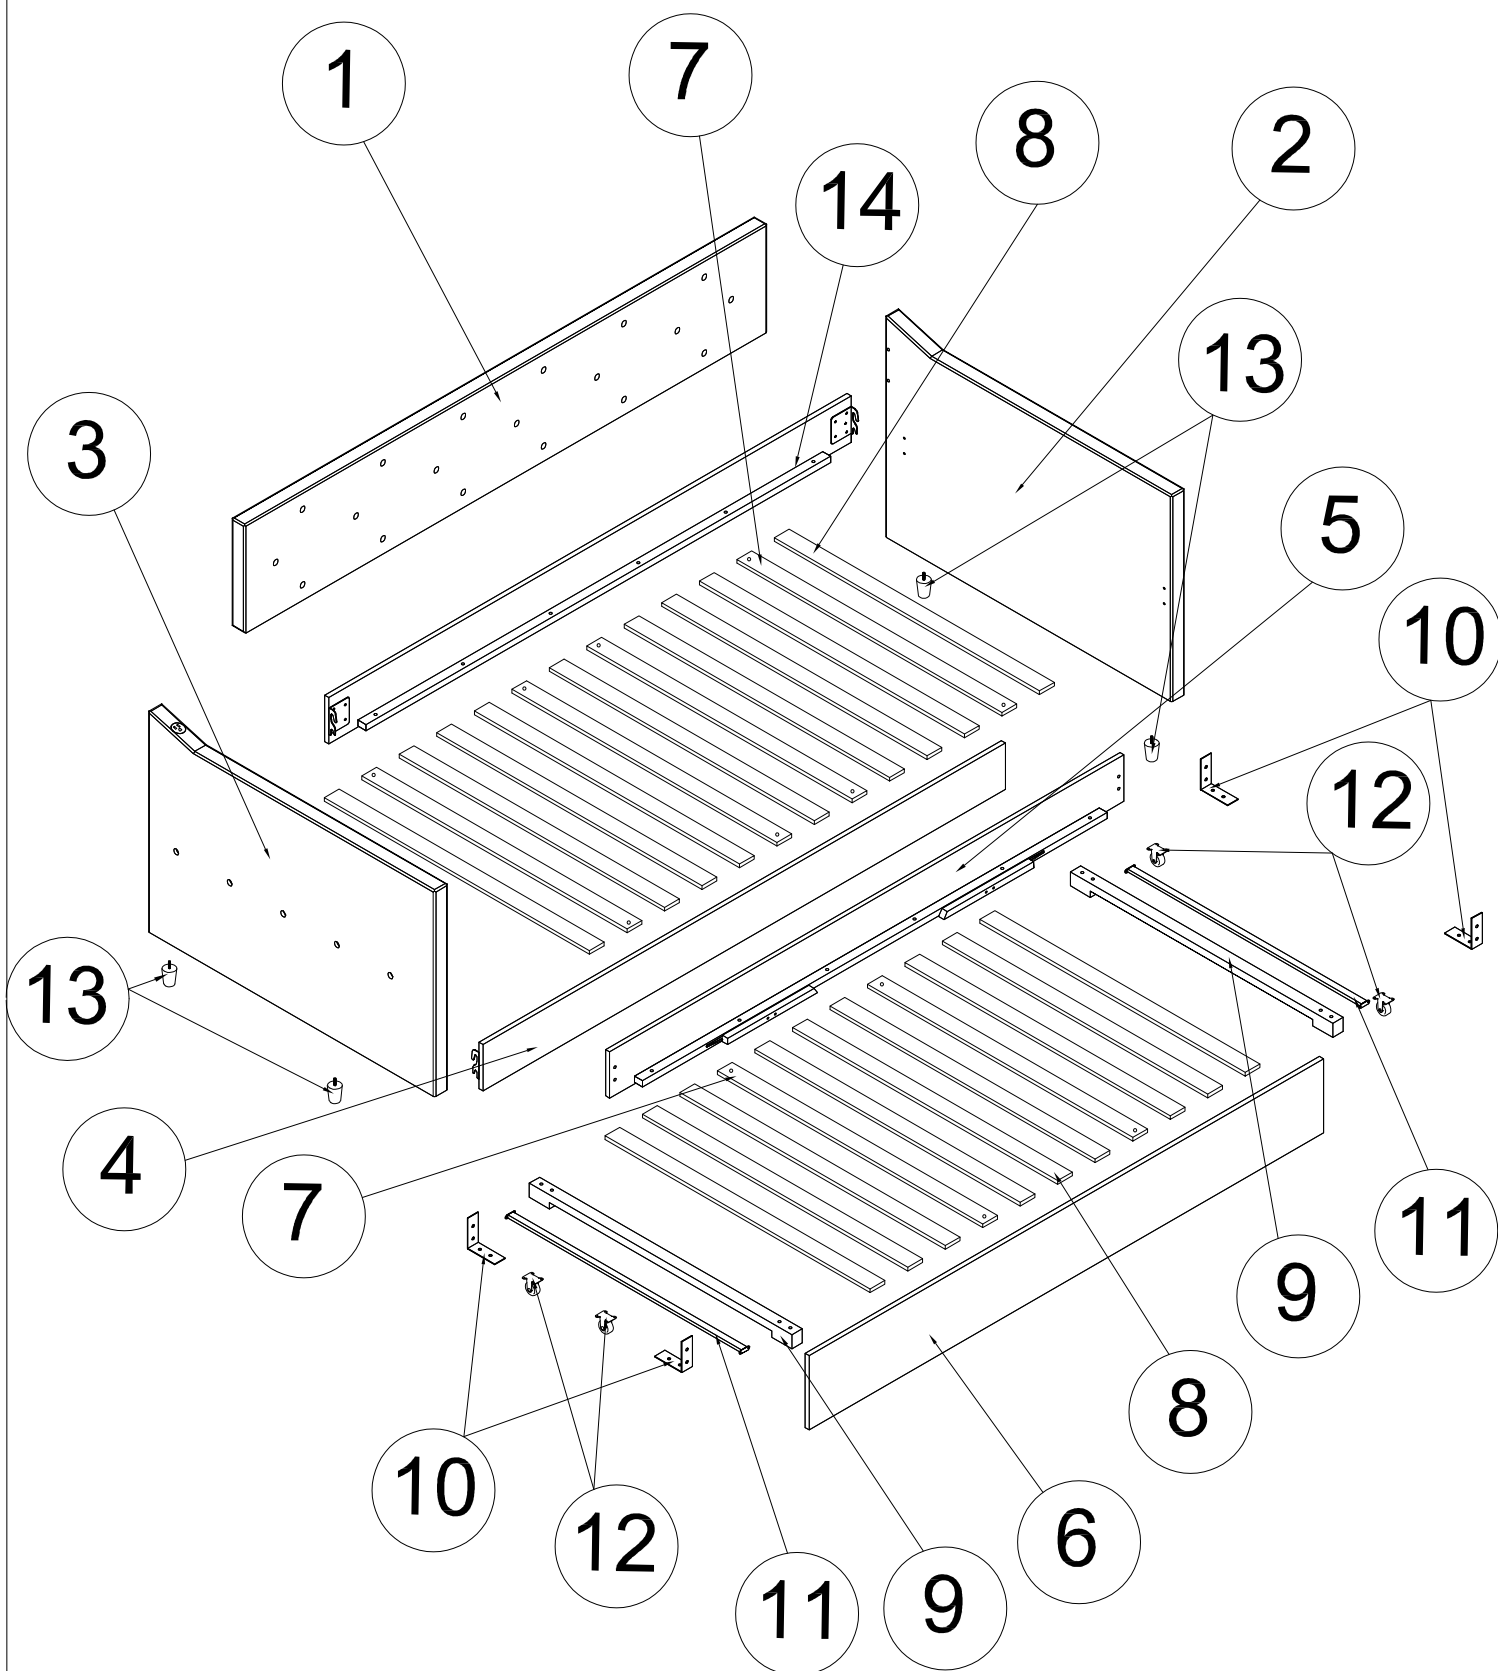




Caution

Make sure all parts are included . Most board parts are labeled or stamped on the raw edge
Contact us for free replacement if you encounter any damaged or missing parts

PART LIST :

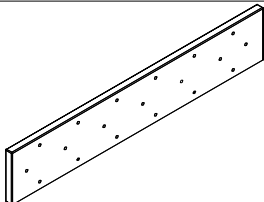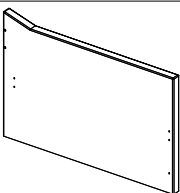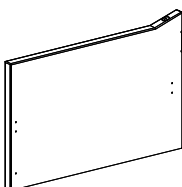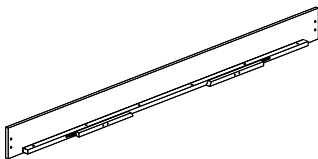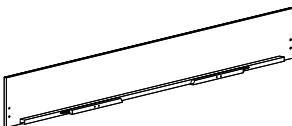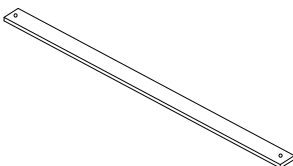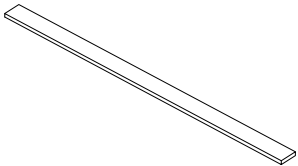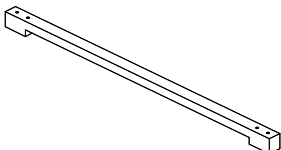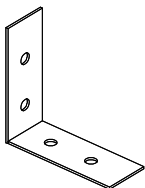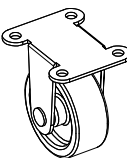			
① HEADBOARD : 1PC	② RIGHT ARM : 1PC	③ LEFT ARM : 1PC	④ SIDE RAIL A : 1PC
			
⑤ BACK PANEL : 1PC	⑥ DRAWER PANEL : 1PC	⑦ SLAT ROLL A : 6 PCS	⑧ SLAT ROLL B : 18 PCS
			
⑨ SUPPORT SIDE : 2PCS	⑩ L BRACKET : 4PCS	⑪ IRON BAR : 2PCS	⑫ WHEEL : 4PCS
			
⑬ PLASTIC LEG : 4PCS	⑭ SIDE RAIL B : 1PC		

HARDWARE LIST :

			
Ⓐ BOLT : Ø5/16*20mm : 16PCS + 1PC	Ⓑ BOLT : Ø5/16*35mm : 8PCS + 1PC	Ⓐ HEXAGONAL NUT : Ø5/16*12mm : 12PCS + 1PC	Ⓓ BOLT : Ø5/16*50mm : 16PCS + 1PC
			
Ⓕ THREAD BOLT : Ø5/16*60mm : 2PCS + 1PC	Ⓔ FLAT WASHER : Ø5/16* : 60PCS + 1PC	Ⓕ SPRING WASHER : Ø5/16* : 60PCS + 1PC	ⓧ BOLT : M8*20mm : 8PCS + 1PC
			
Ⓩ SCREW : M4*20mm : 16PCS + 1PC	Ⓖ ALLEN KEY : M4* : 1PC	Ⓞ OPEN WRENCH : M12* : 1PC	Ⓢ SUPPORT SLAT ROLL : 36PCS + 1PCS

Note : Using bolt (X) M8*20mm in step 10

TOOLS REQUIRED (Not provided)




Screwdriver


Warm Tips

1. Carefully read these instructions and keep them of future reference
2. Check the parts list and confirm everything's there before starting assembly
3. When assembling , put all parts on a soft , smooth surface like a carpet to avoid scratches
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment


Step 1 : Install plastic leg (13) and thread bolt (L) to the per-drilled holes on with right arm (2) , left arm (3) .
Tightin by turning .

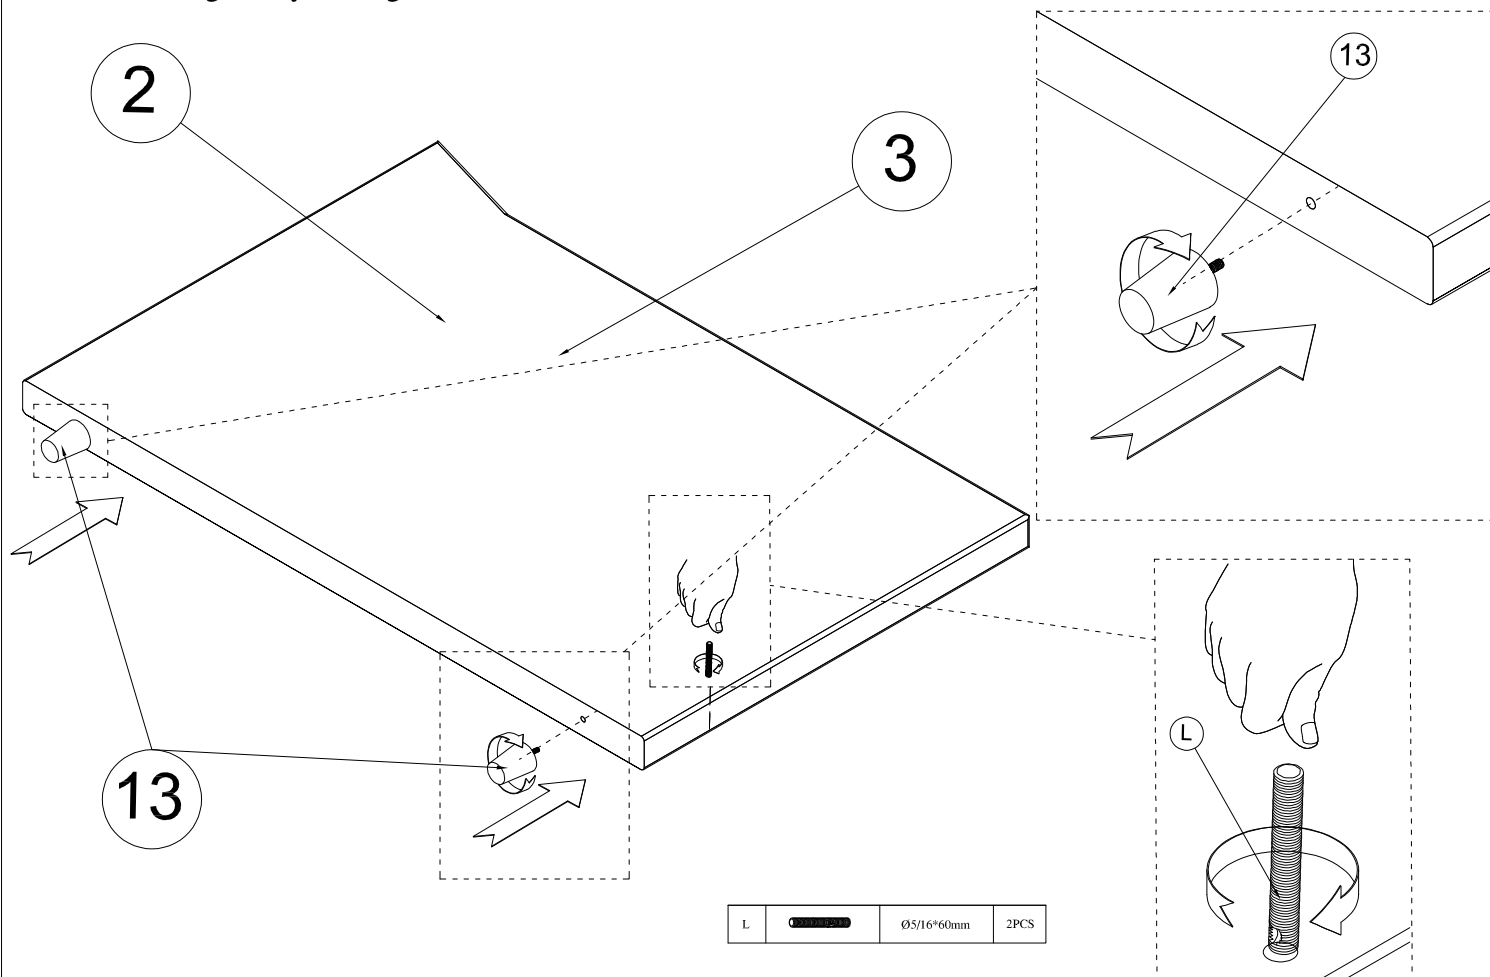


Step 2 : Install headboard (1) with right arm (2), left arm (3) by using bolt (D), flat washer (E), spring washer (F).
Tightin alls bolts by allen key (G).

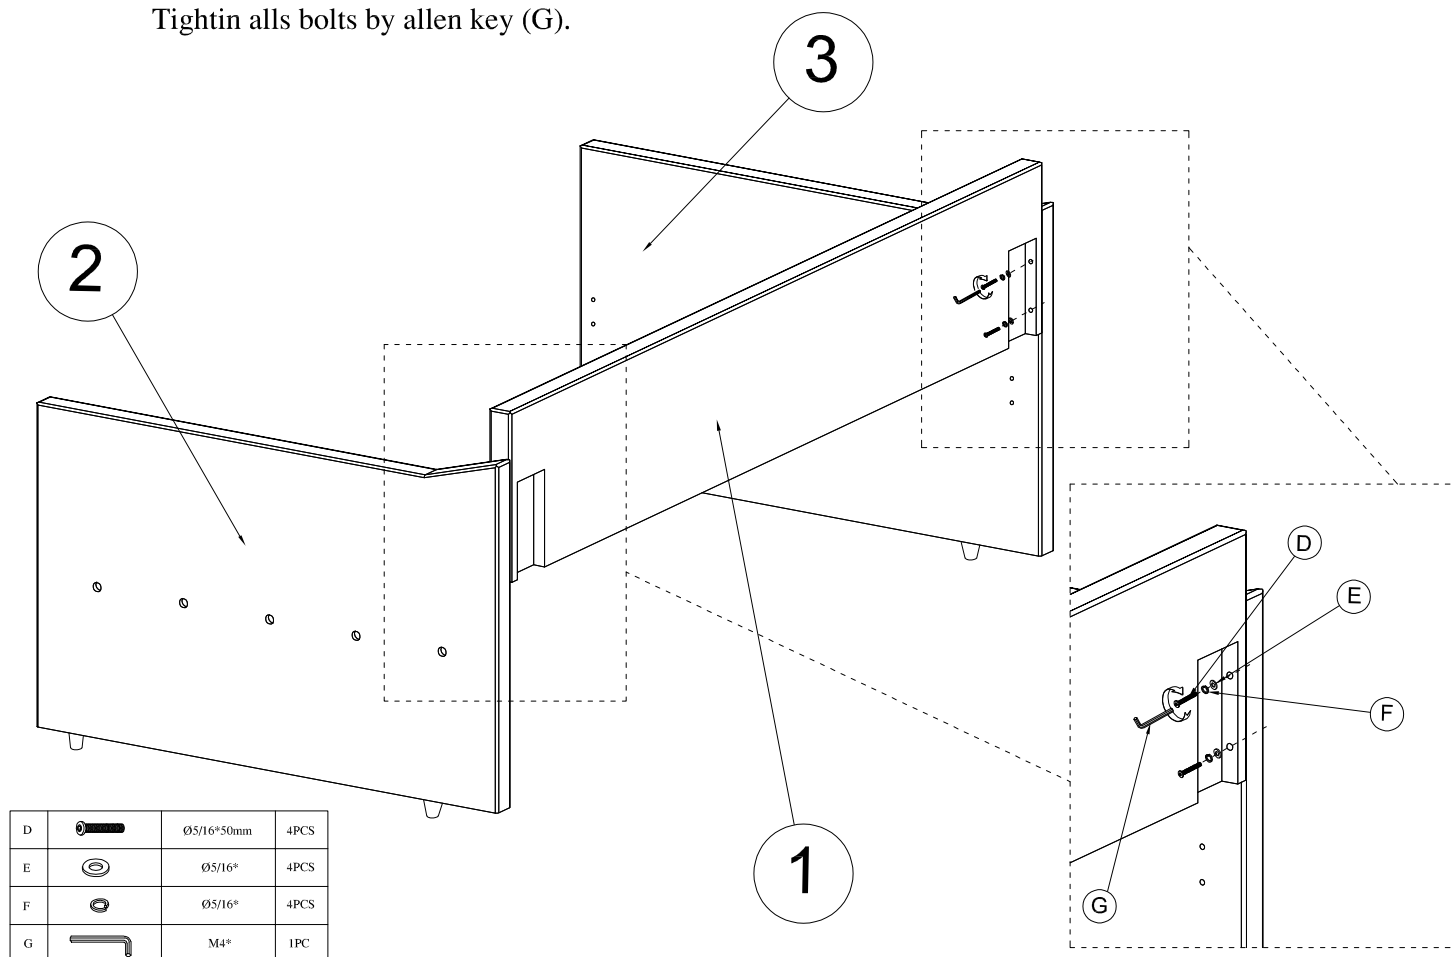


Step 3 : Install side rail A (4) and side rail B (14) with right arm (2), left arm (3) by bolt (B), flat washer (E), spring washer (F). Tightin alls bolts by allen key (G).

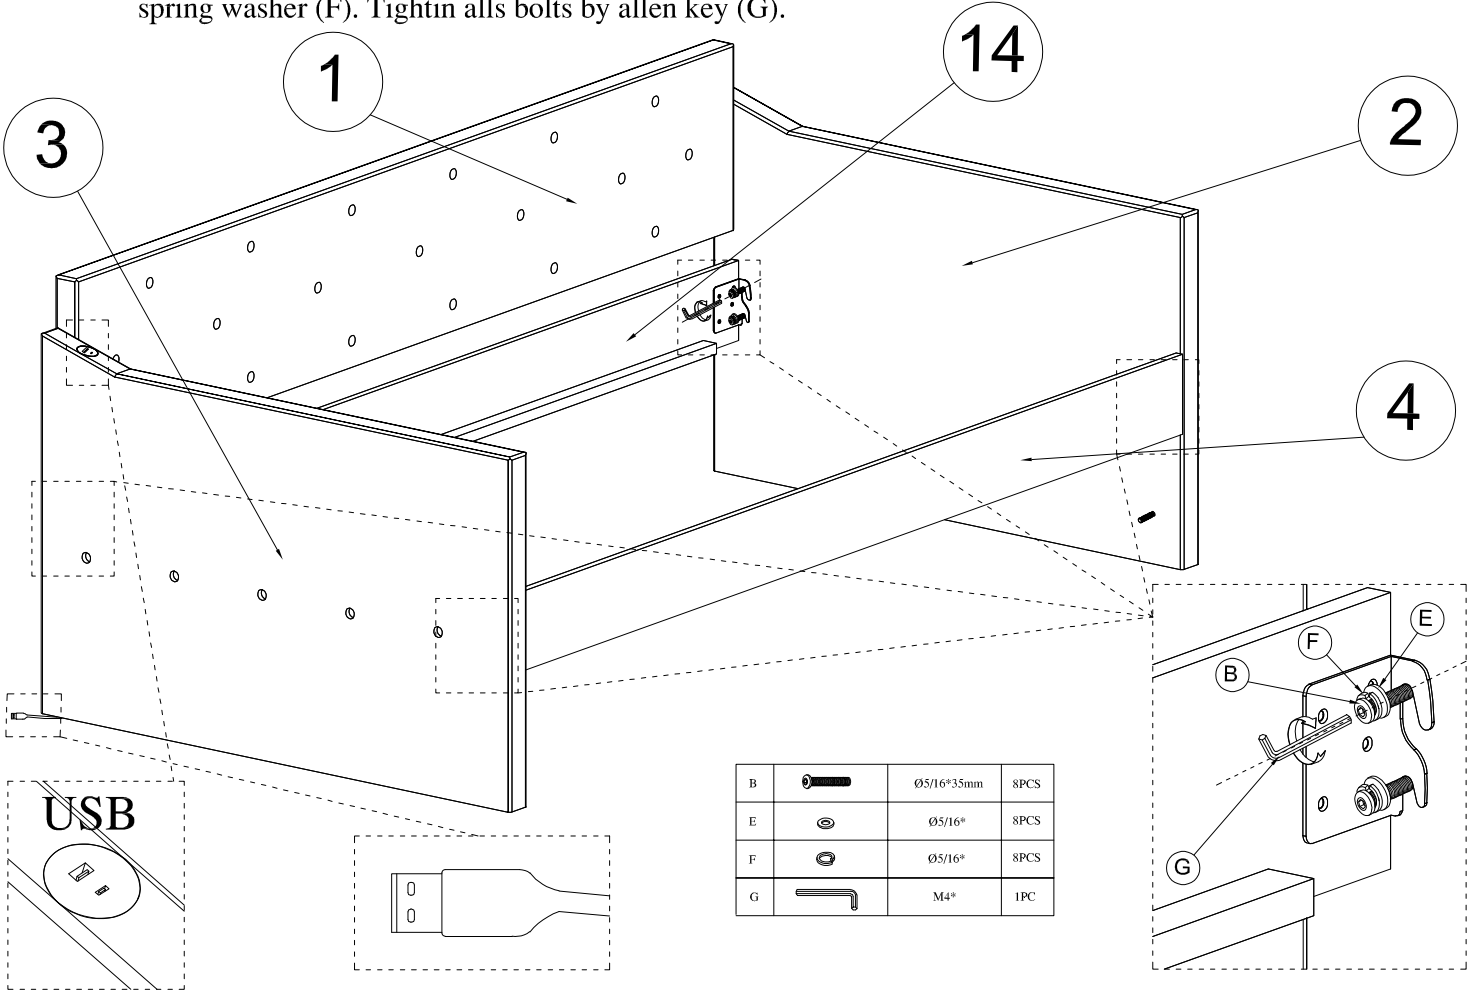


Step 4 : install support slat roll (S) with slat roll B (8).

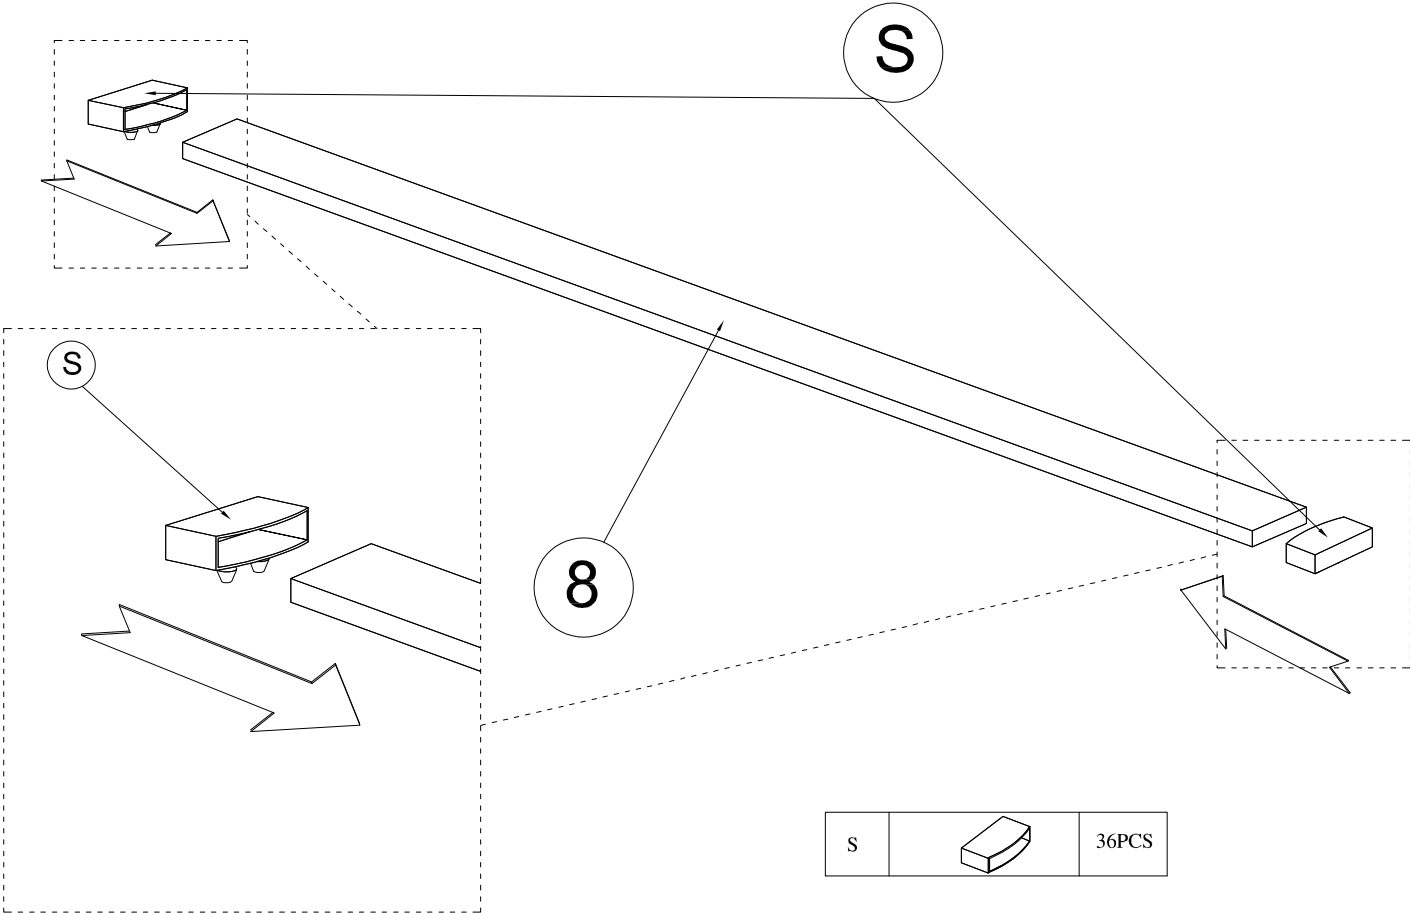

Step 5 : Install slat roll A (7) with side rail A(4) and side rail B (14) by bolt (D) , hexagonal nut (N), flat washer (E), spring washer (F) to the per-drilled holes on side rail A (4) and side rail B (14). Tighten all bolts by open wrench (O) and allen key (G) Hold one end tight and tighten the other end .

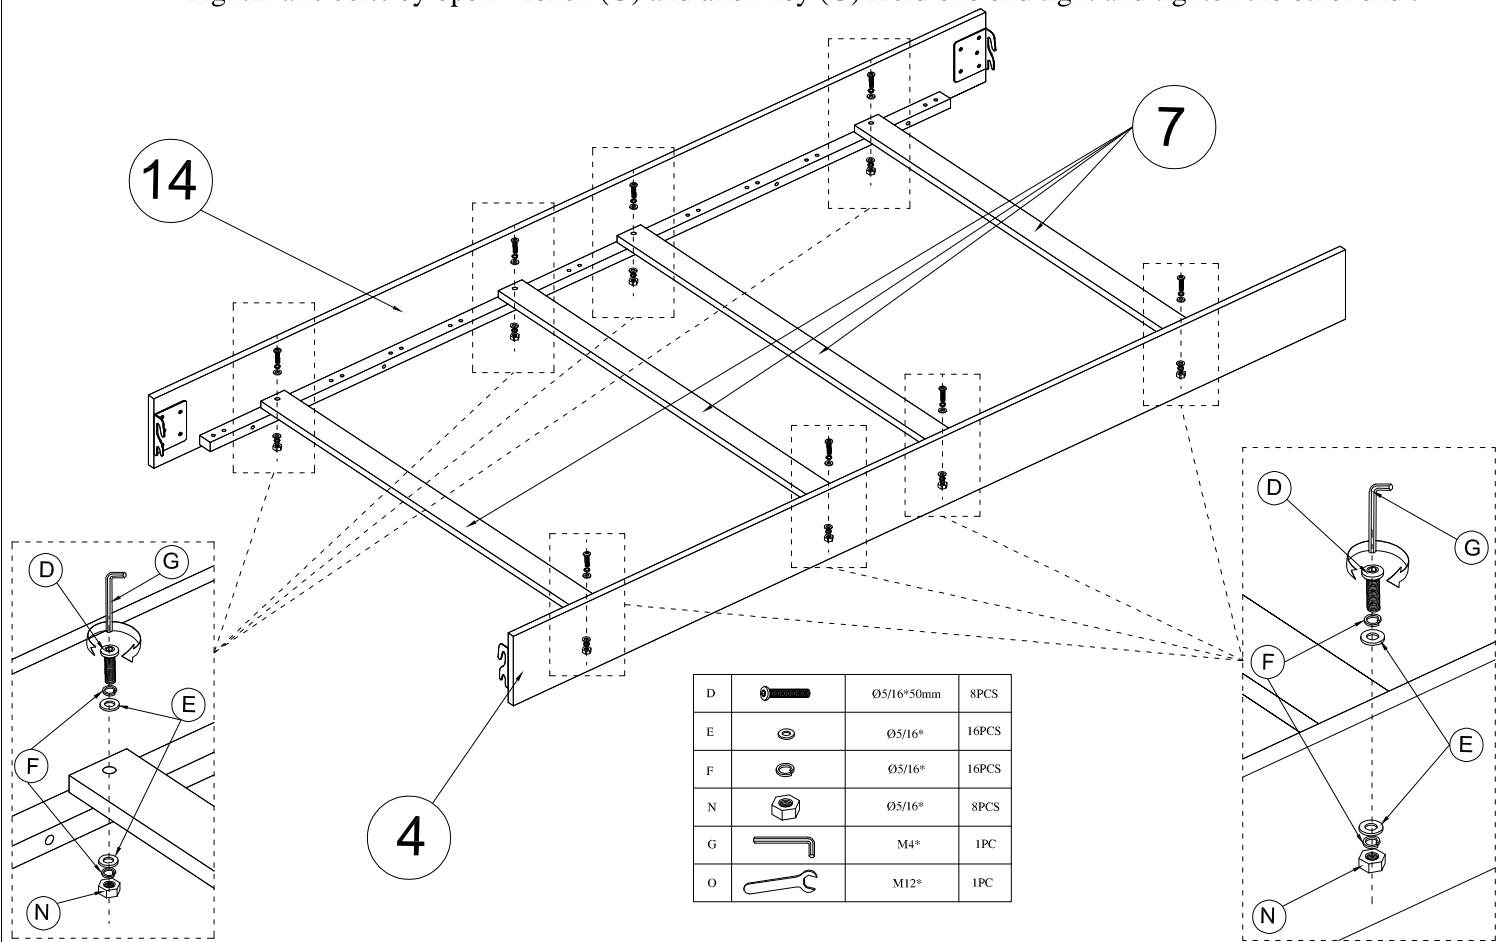


Step 6 : Install slat roll B (8) with side rail (4) by use force to push down.

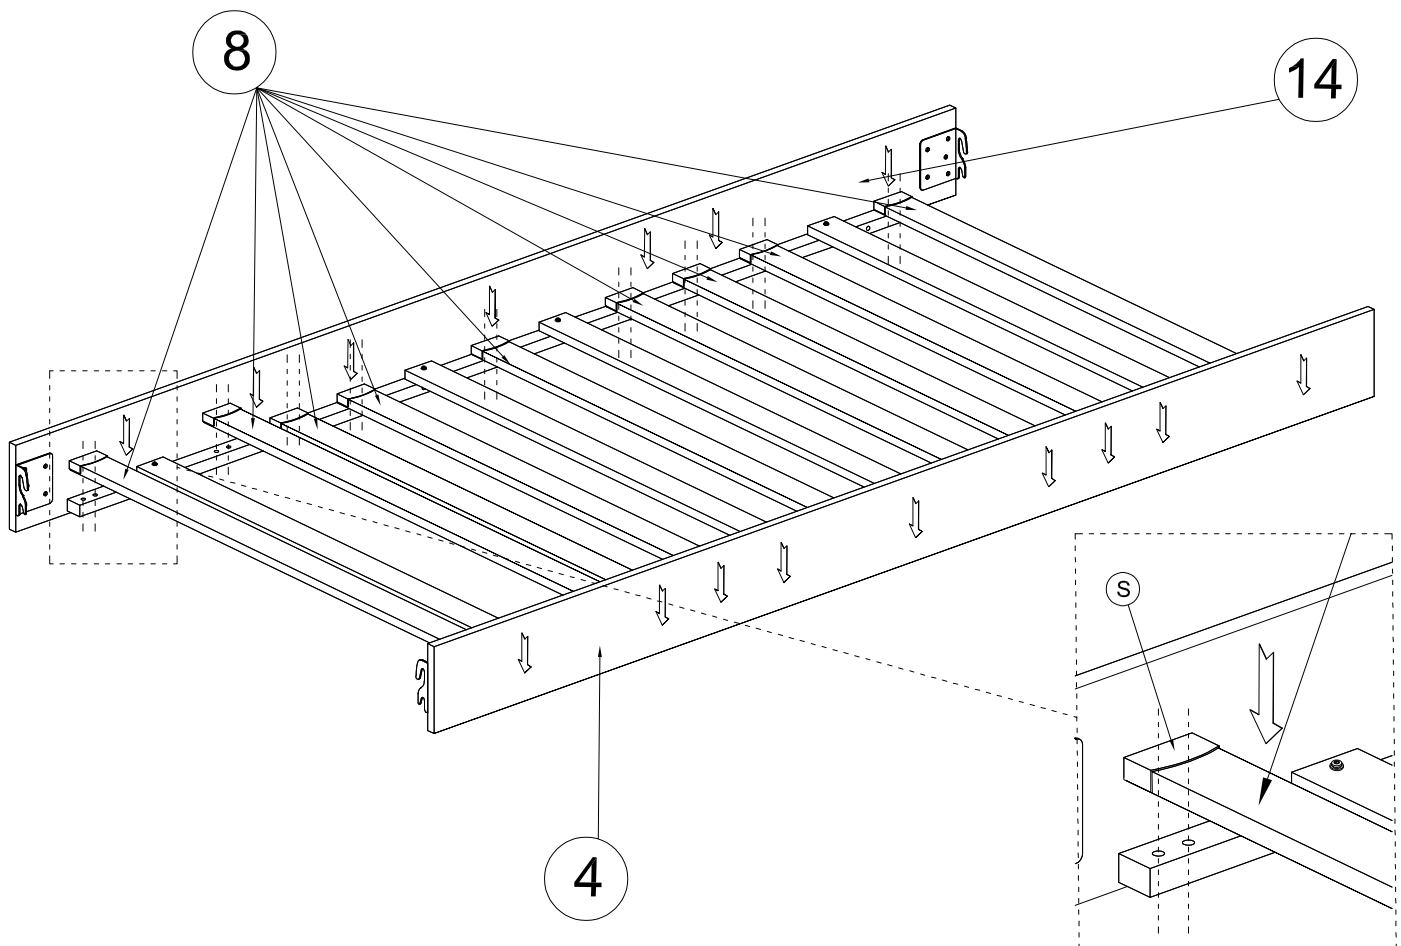


Step 7 : Install L bracket (10) with support side (9) by flat washer (E), spring washer (F), bolt (A).


Tighten all bolts by allen key (G).

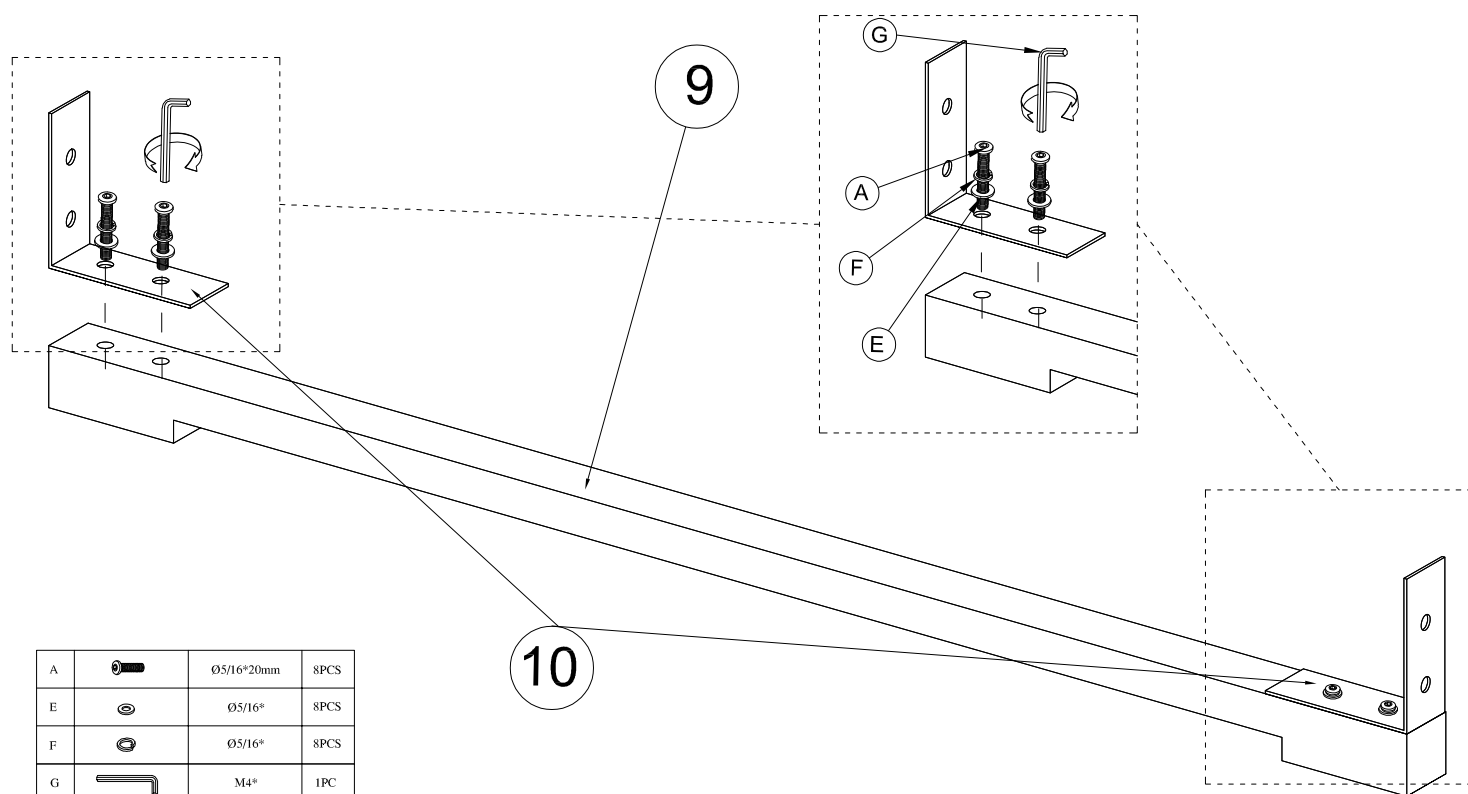


Step 8 : Install wheel (12) with support side (9) by screw (Z) and screwdriver.

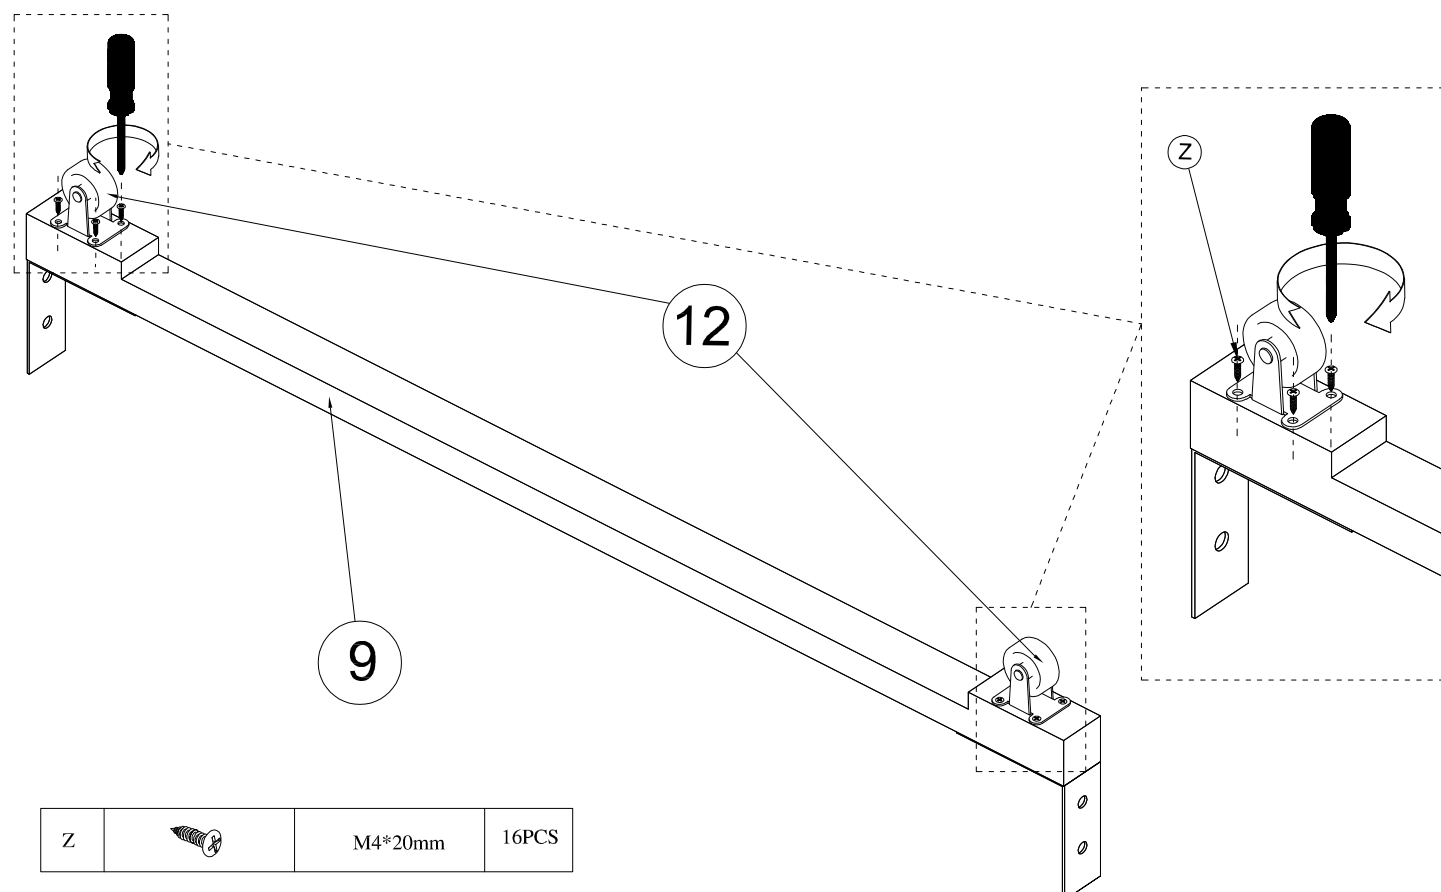


Step 9 : Install support rail (9) with back panel (5) and drawer panel (6) by flat washer (E), spring washer (F), bolt (A).
Tighten all bolts by allen key (G).

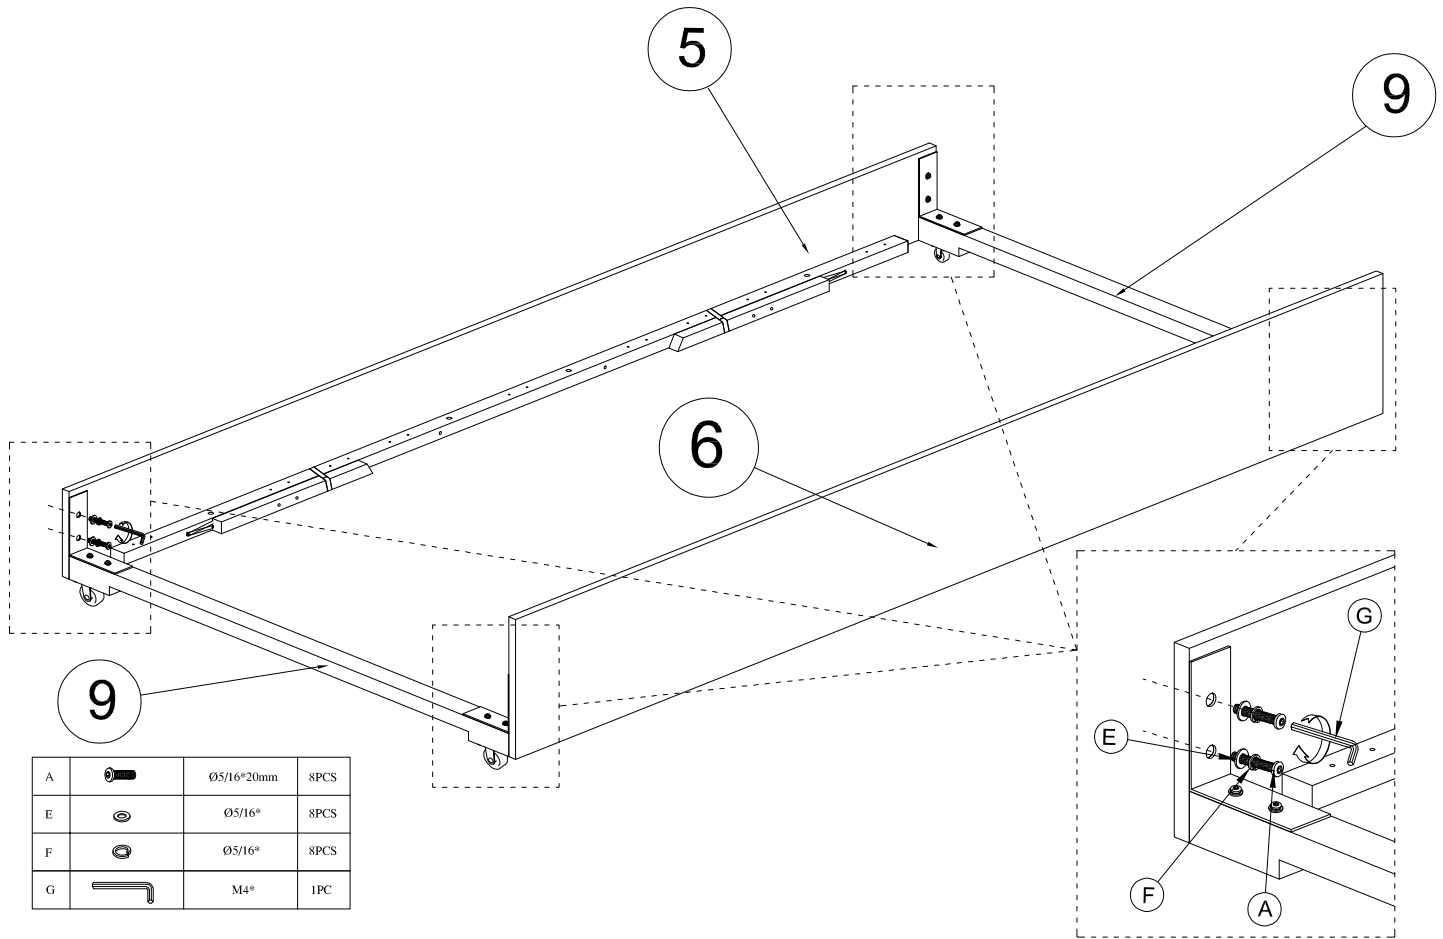


Step 10 : Install iron bar (11) with back panel (5), drawer panel (6) by bolt (X), flat washer (E), spring washer (F).
Tighten all bolts by allen key (G).

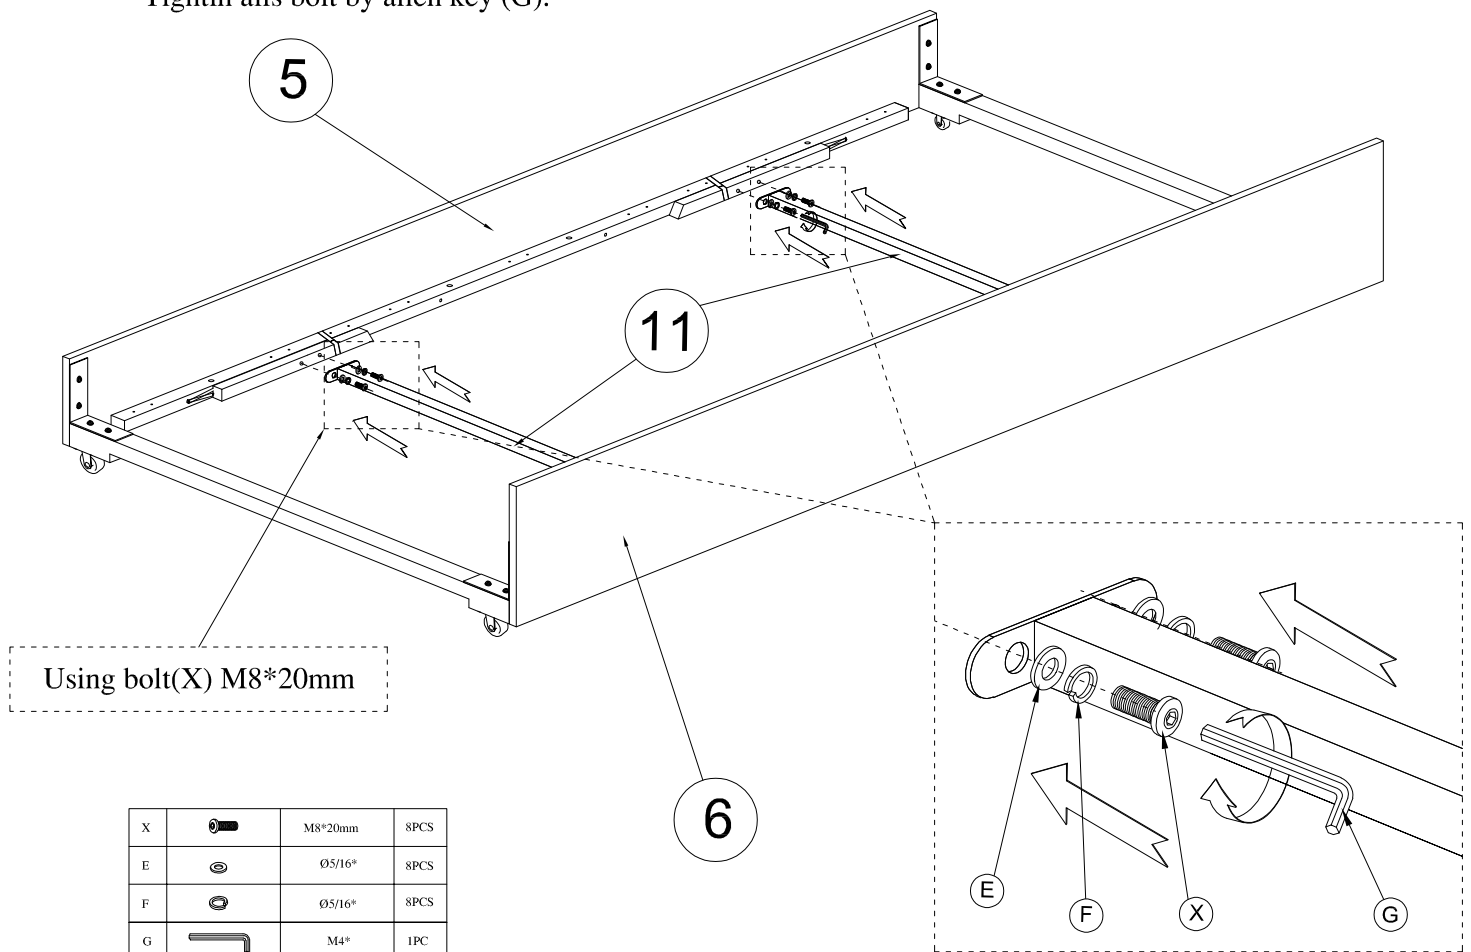


Step 11 : open the velcro on beck panel (5) and drawer panel (6).

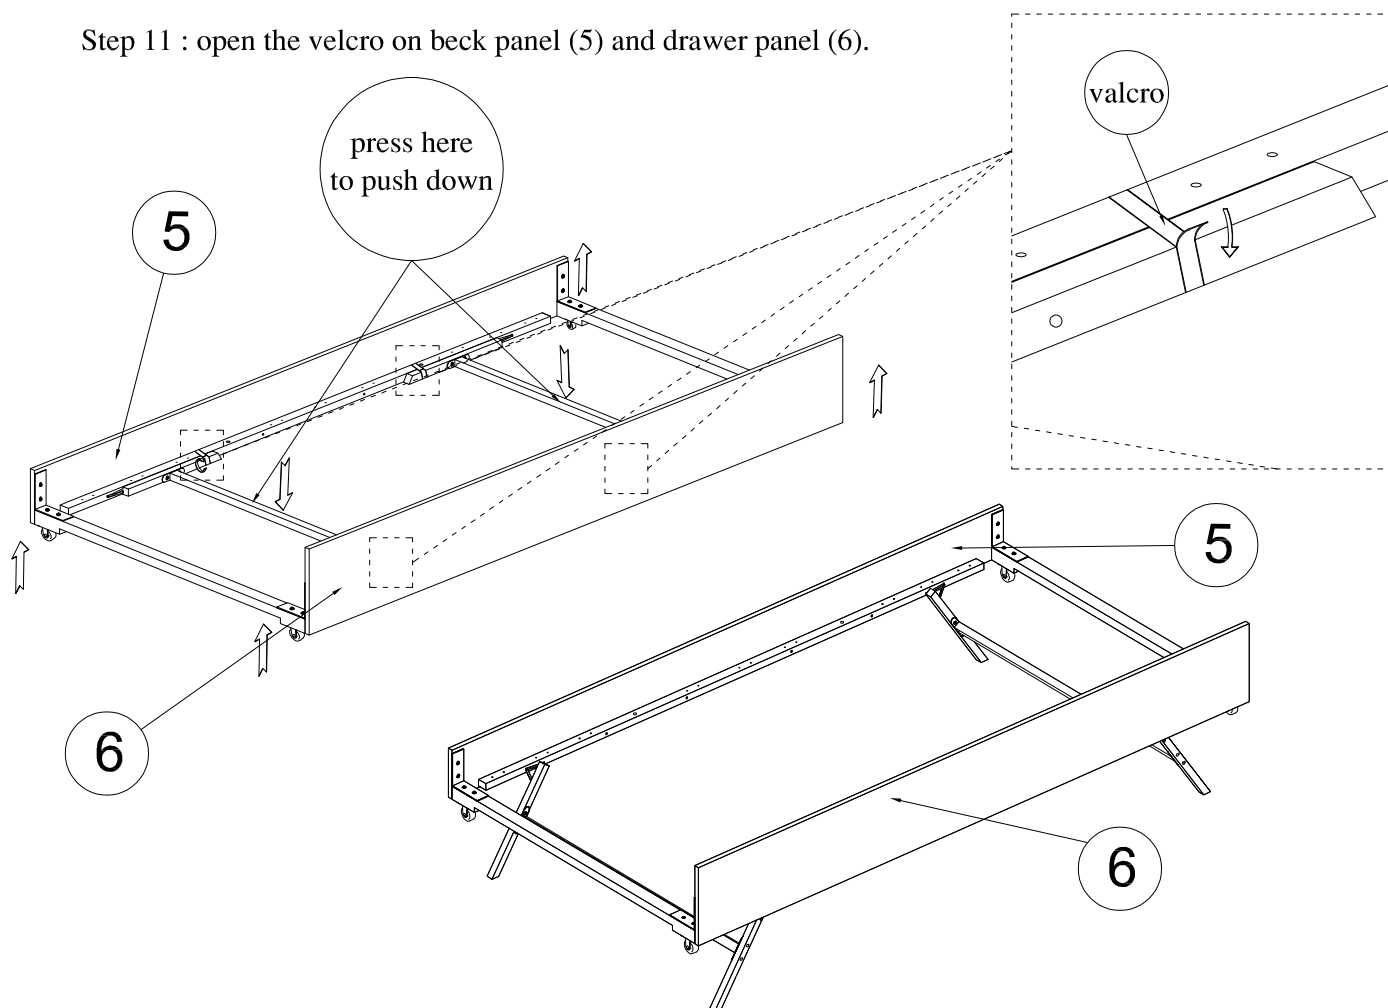


Step 12 : Install slat roll A (7) with back panel (5), drawer panel (6) by bolt (D) , hexagonal nut (N), flat washer (E) , spring washer (F) to the per-drilled holes on side rail (4). Tighten all bolts by open wrench (O) and allen key (G) Hold one end tight and tighten the other end .

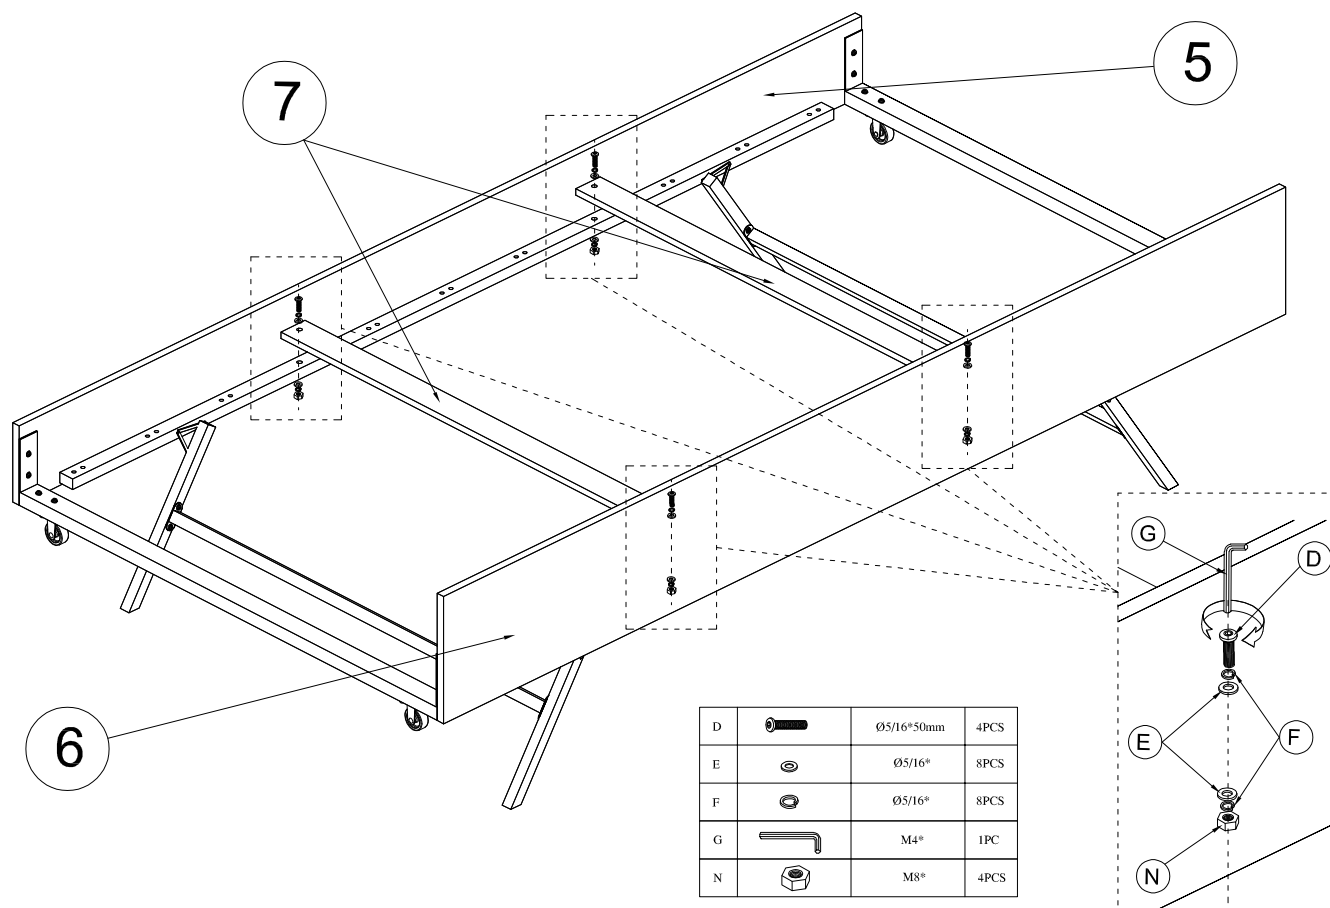



Step 13 : Install slat roll B (8) with back panel (5), drawer panel (6) by use force to push down.

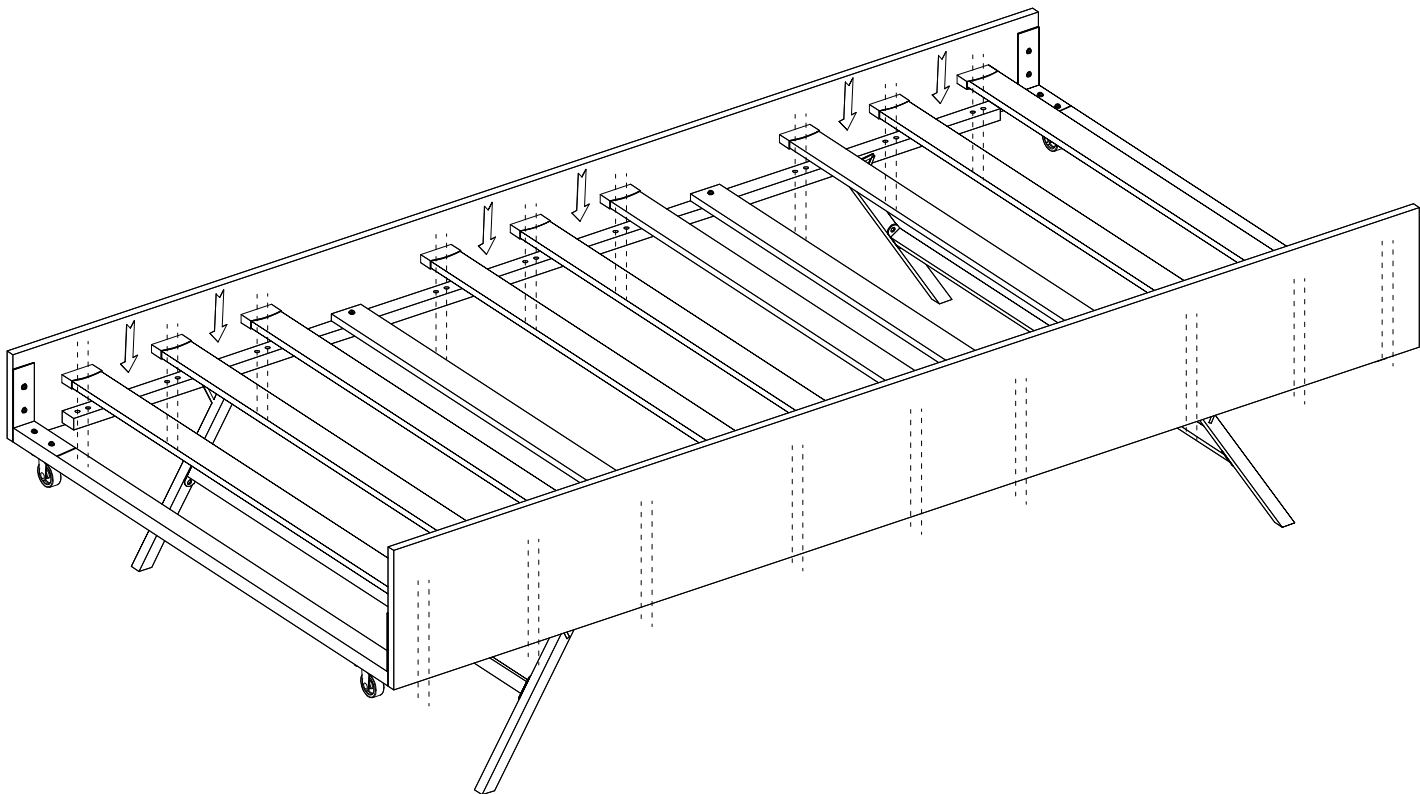

Step 14 :

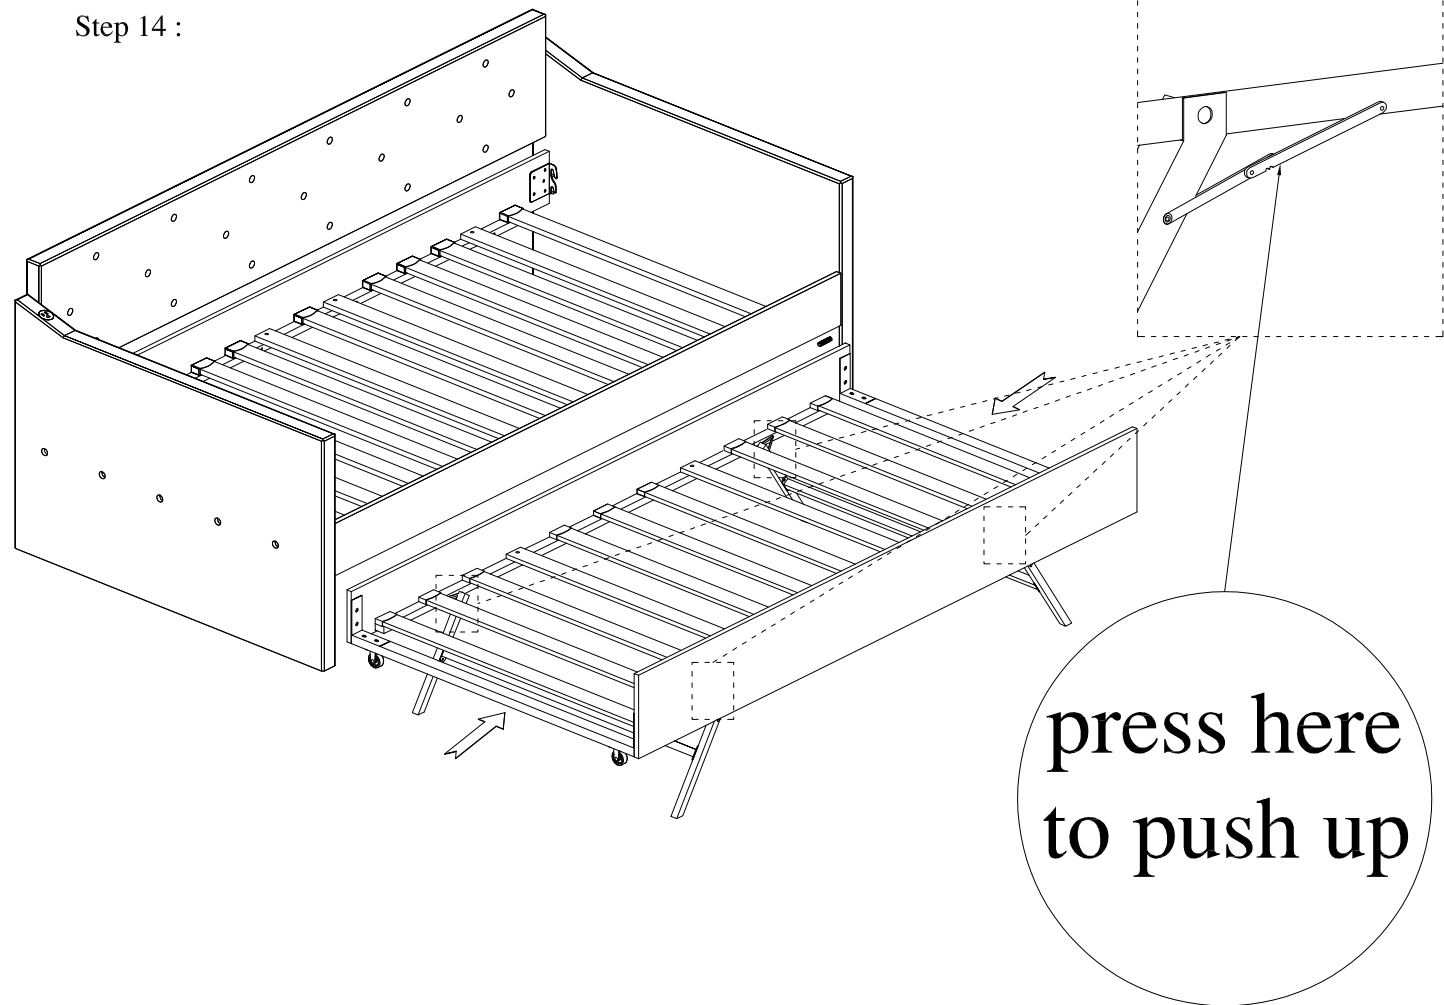

Step 15 :

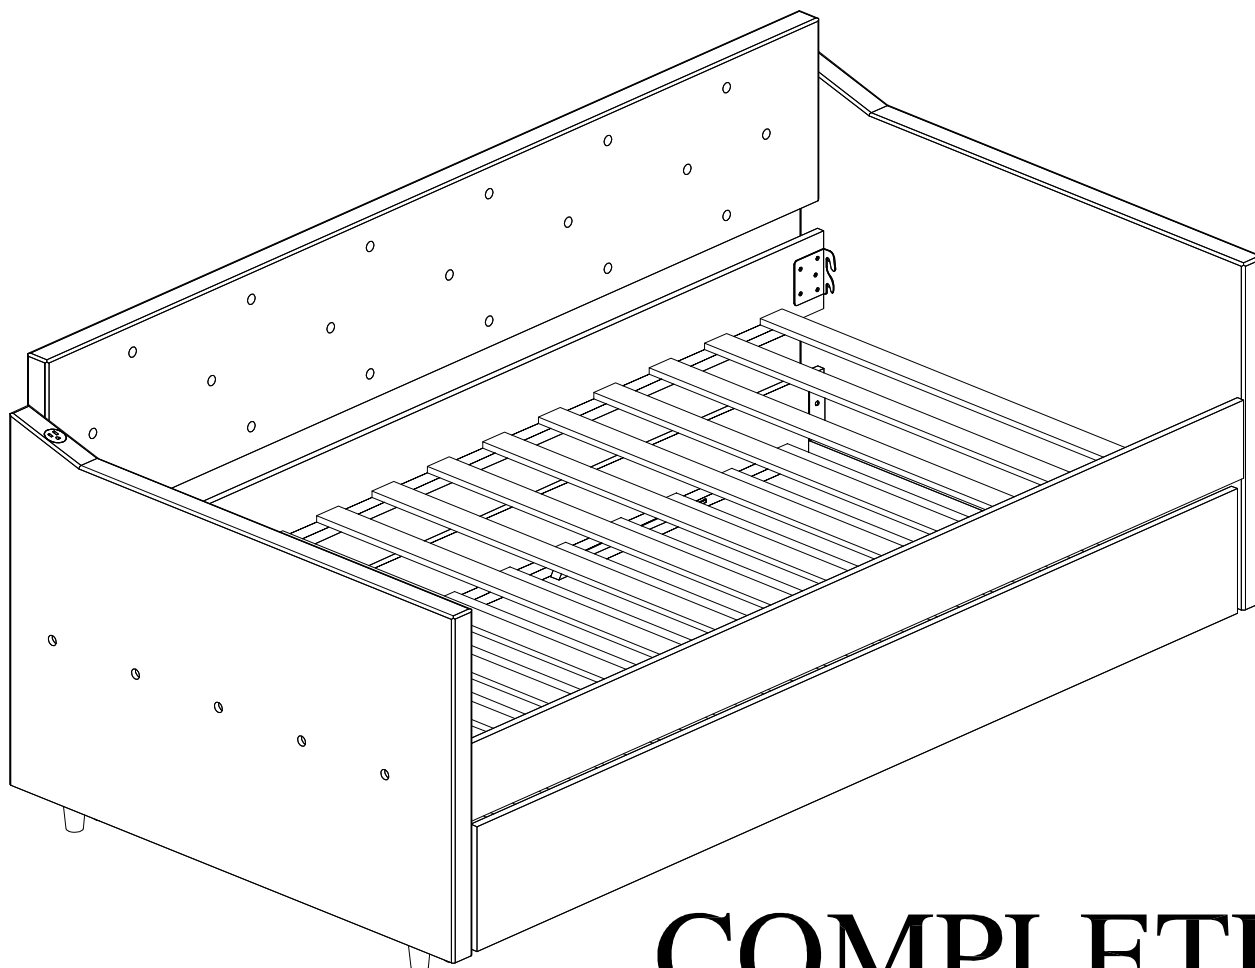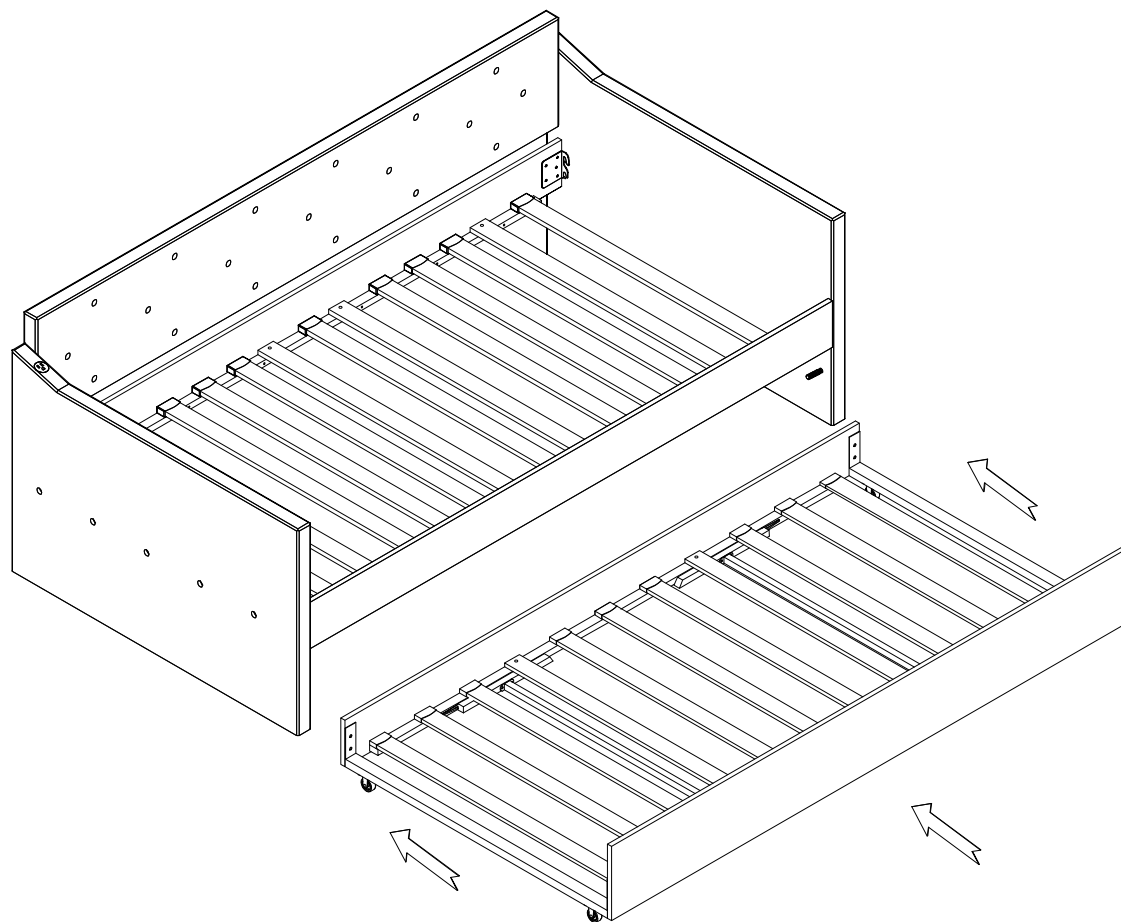

COMPLETED