






ASSEMBLY INSTRUCTION

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.











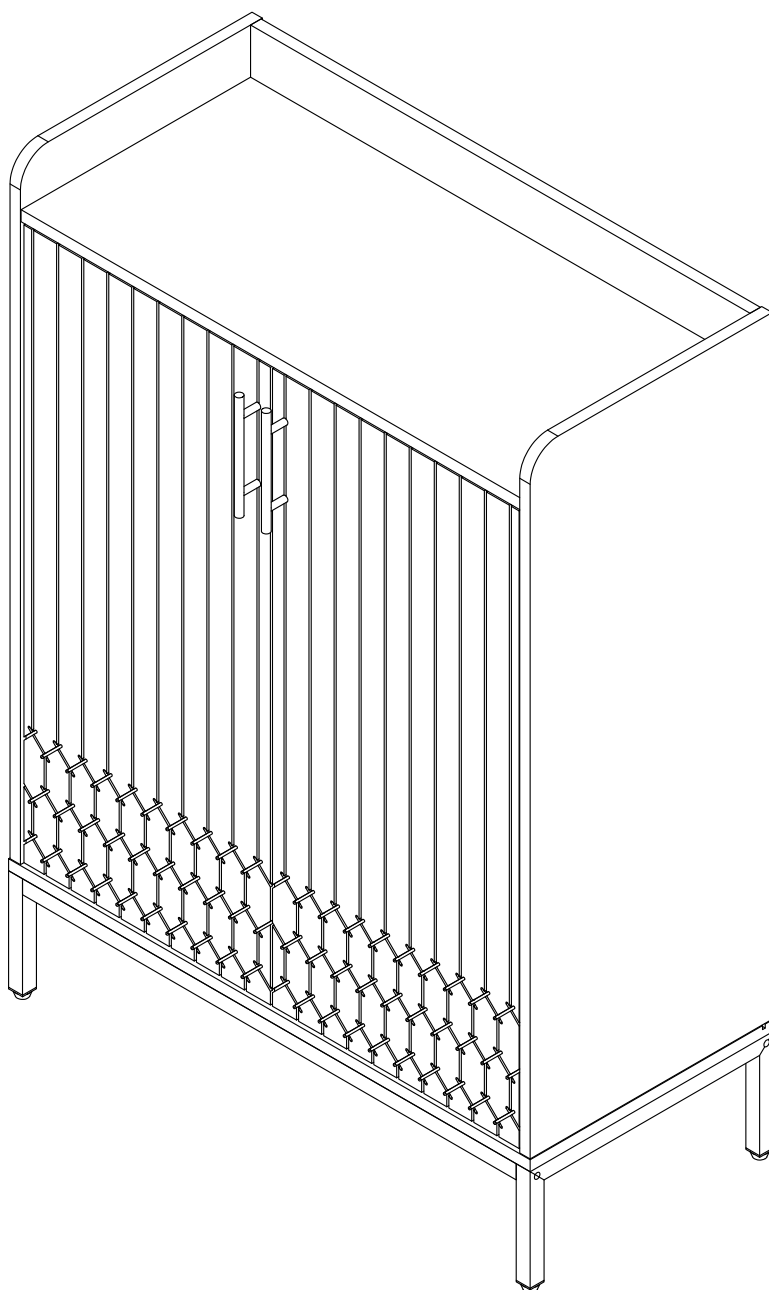


ASSEMBLY INSTRUCTION

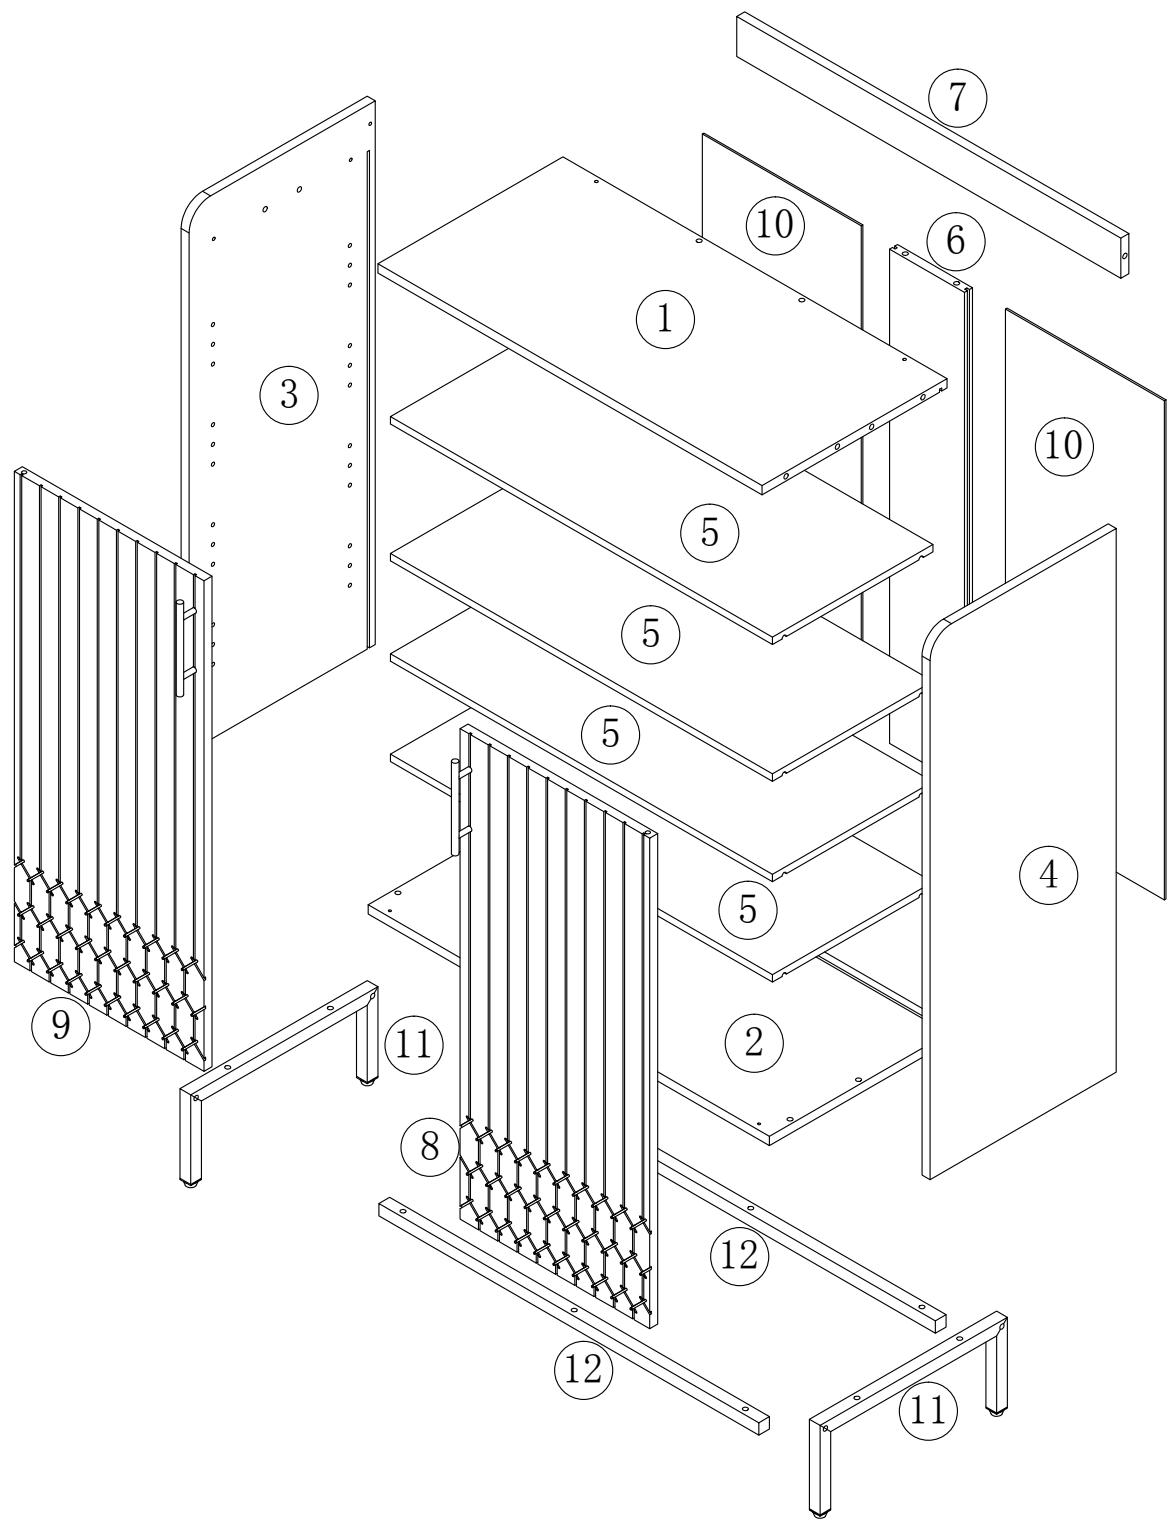

No.	PICTURE	SIZE	QTY	No.	PICTURE	SIZE	QTY
A	 11  	ST6*40	10+1	H	 X1  X2	M4*18	2
B		8*35	6+1	I	 -P  X4	ST3*14	2
C	 	ST7*40	8+1	J	 X2  X2  X2  X2  X1		2
D	 	M6*40	4	K		M8	4
E	 	M6*30	10+1		 —10		1
F		M6	16				1
G		M6	4			M4	1




ASSEMBLY INSTRUCTION

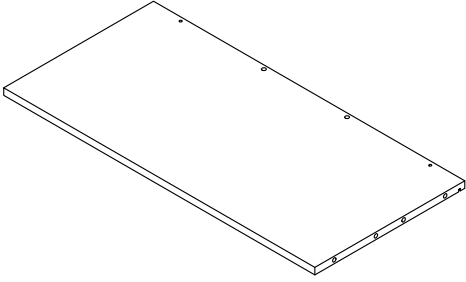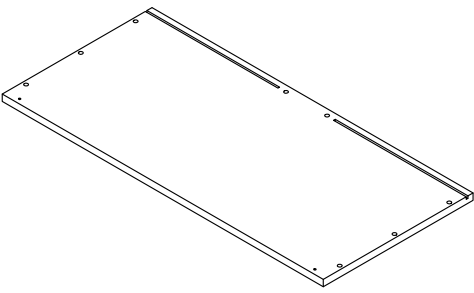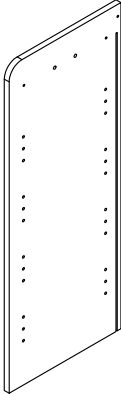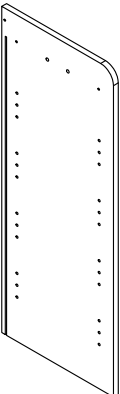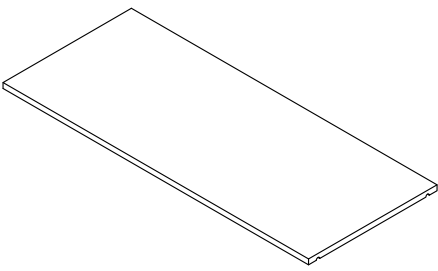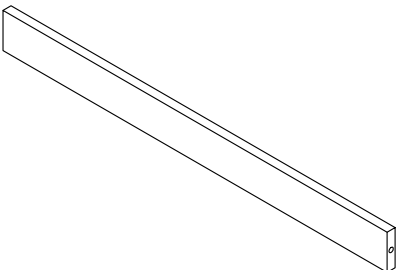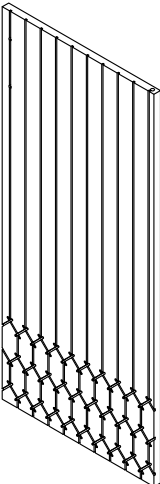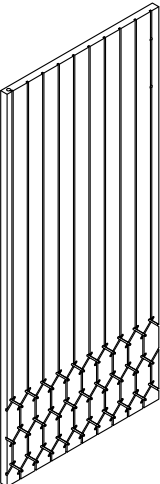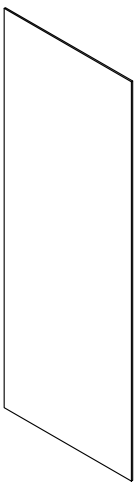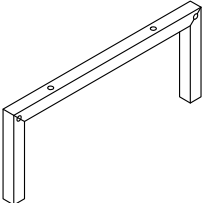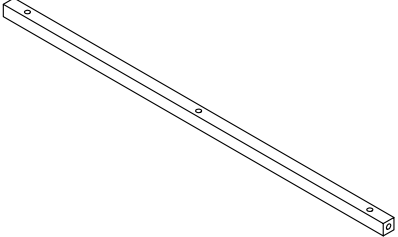①  X1	②  X1	③  X1
④  X1	⑤  X4	⑥  X1
⑦  X1	⑧  X1	⑨  X1
⑩  X2	⑪  X2	⑫  X2

ASSEMBLY INSTRUCTION



STEP 1

We need to divide accessory I into two.

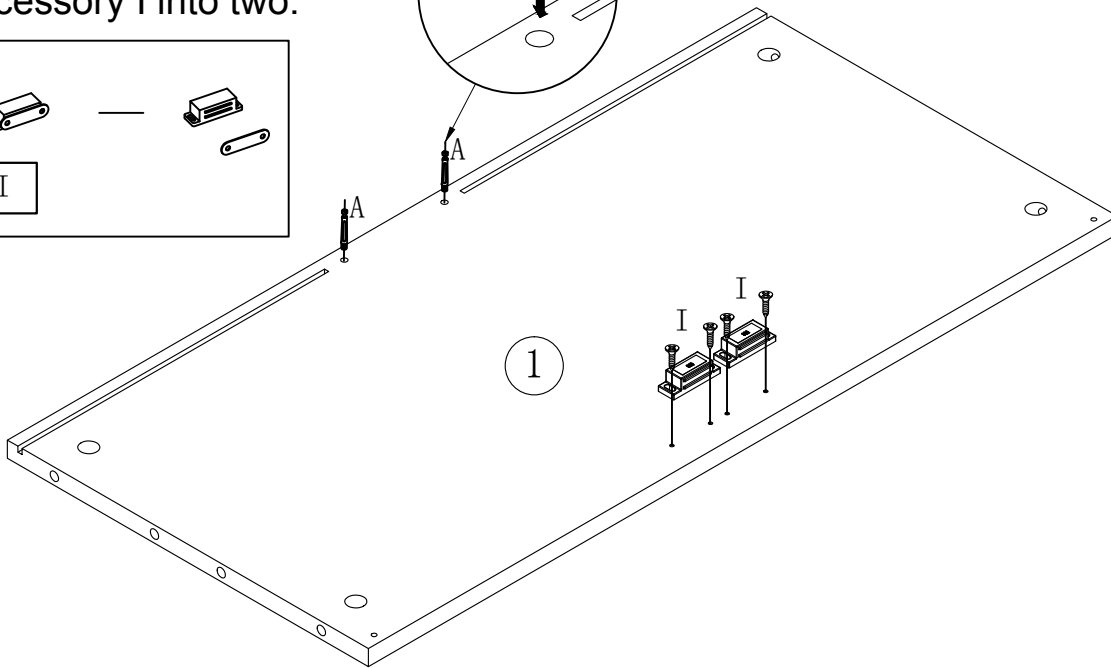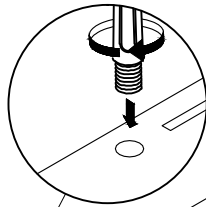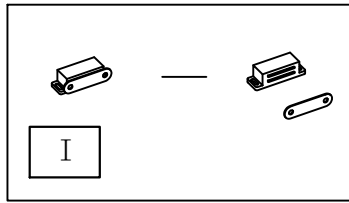

I	ST3*14
	X1
	X2
A	ST6*40
	X2


STEP 2

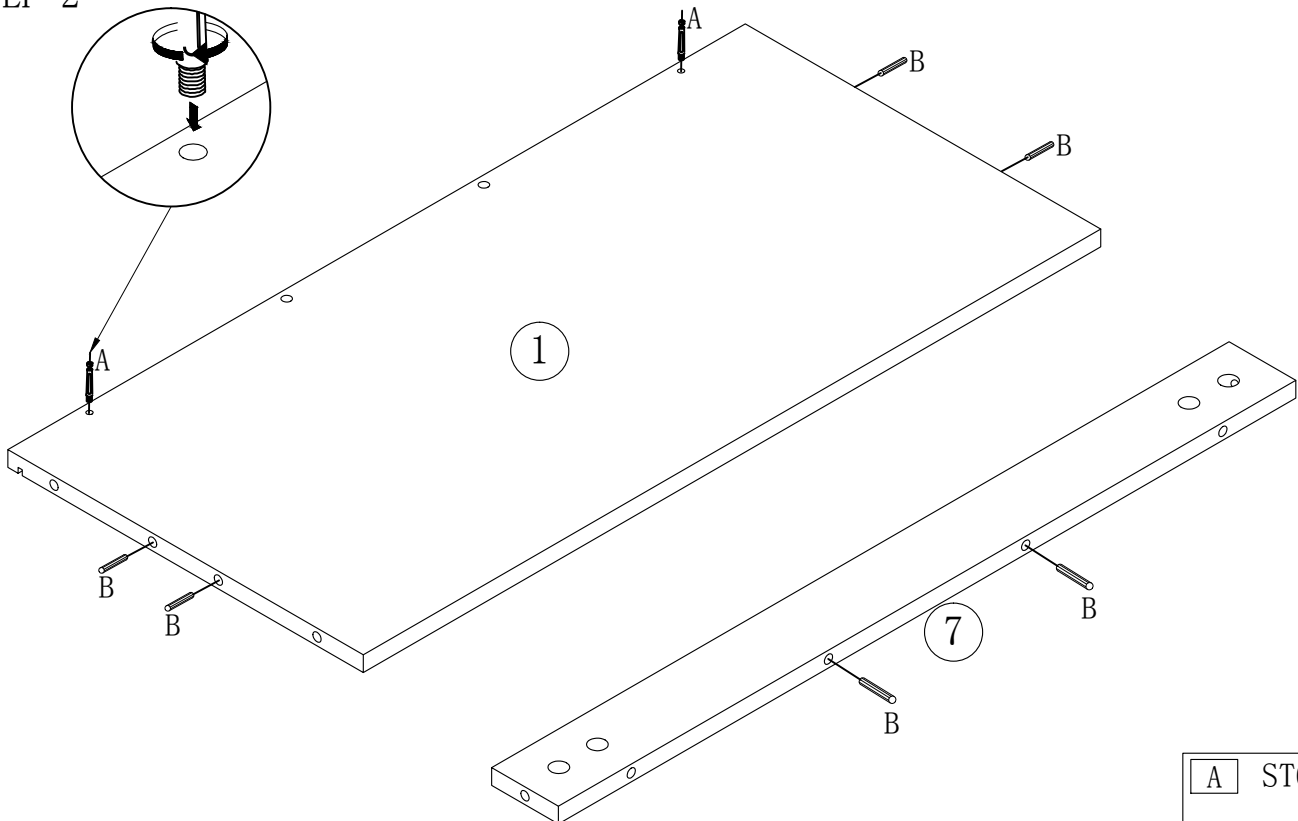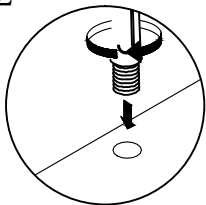

A	ST6*40
	X2
B	8*35
	X6

ASSEMBLY INSTRUCTION

STEP 3

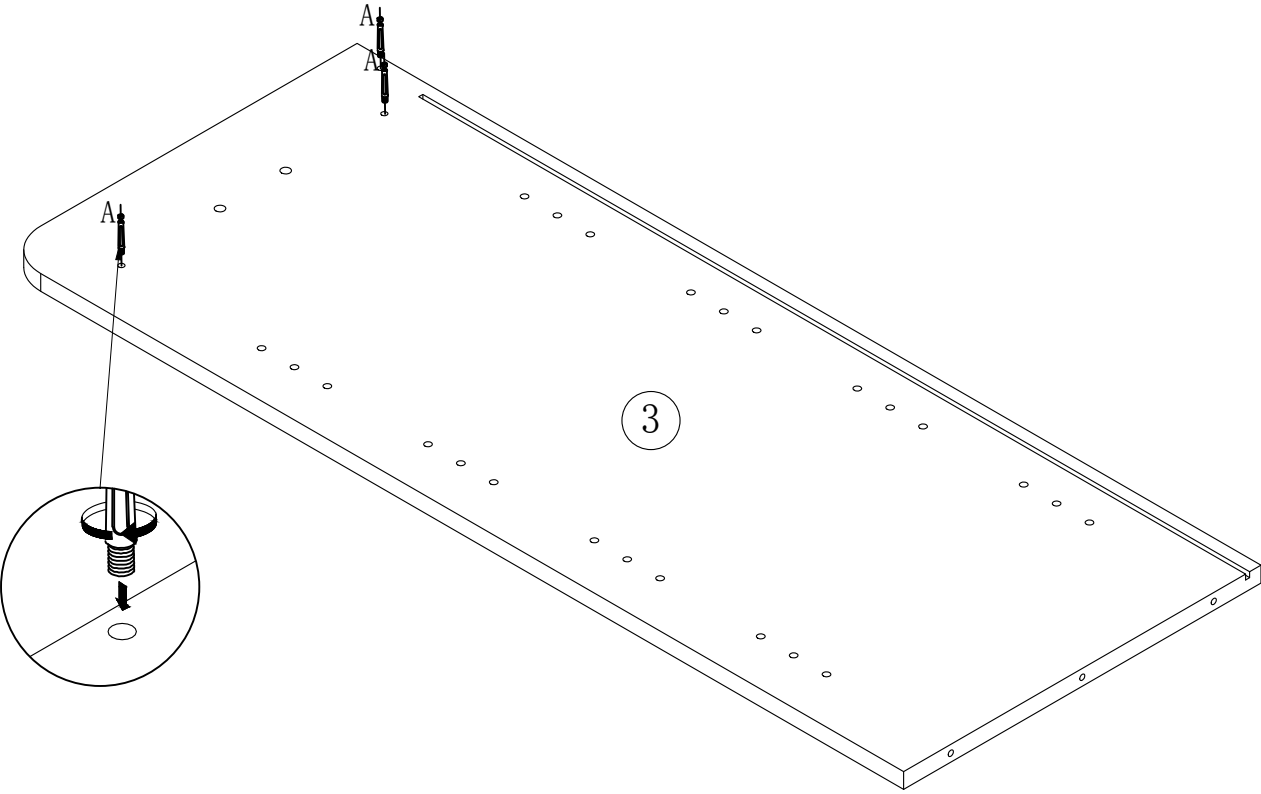


A ST6*40



X3

STEP 4

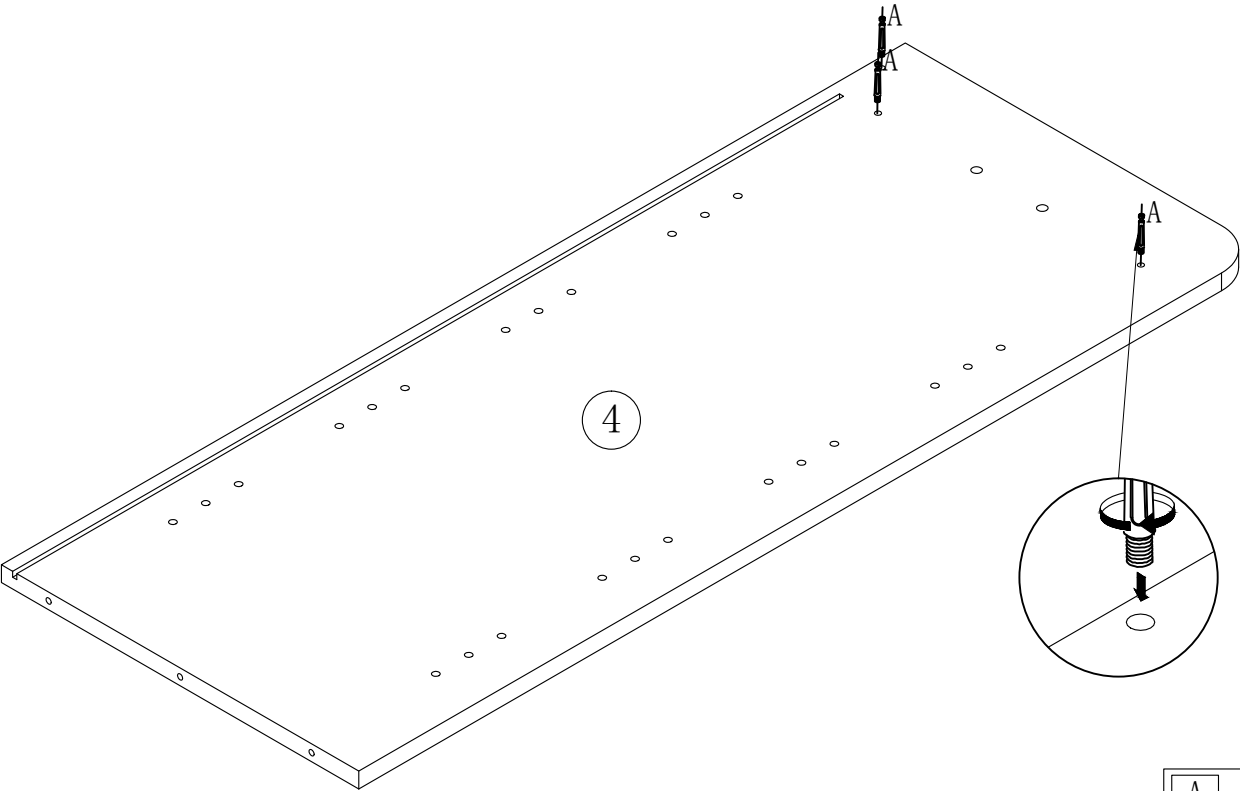


A ST6*40



X3


ASSEMBLY INSTRUCTION

STEP 5

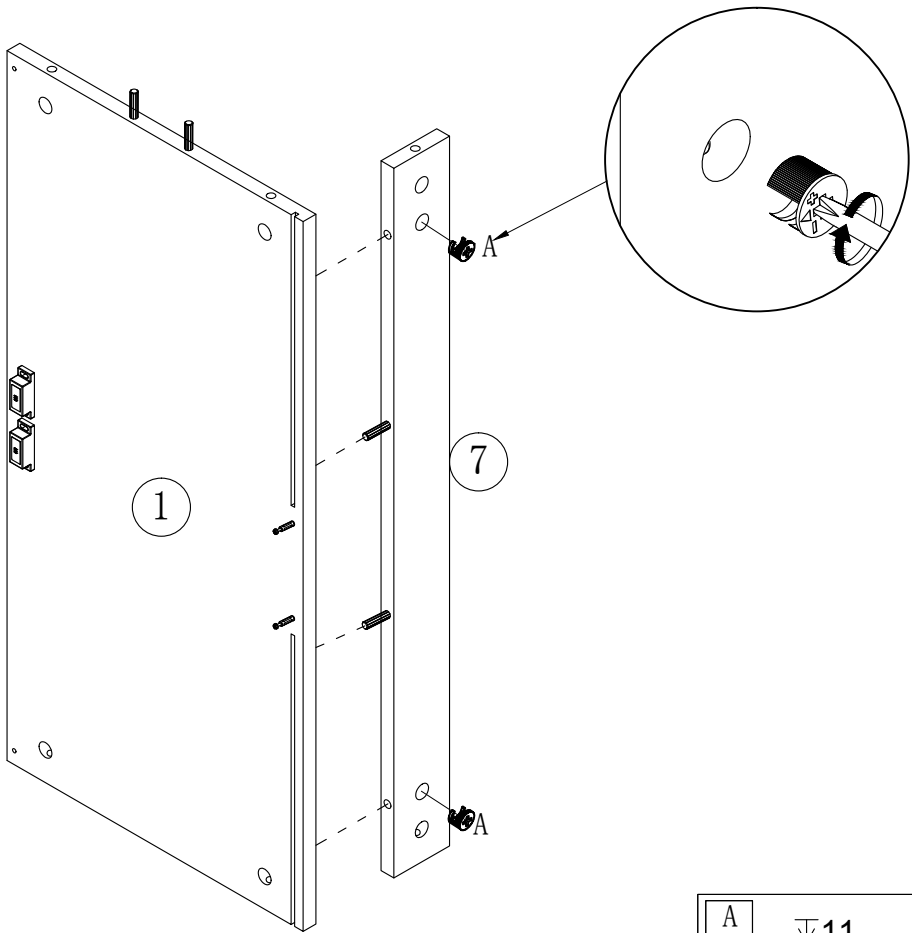

A	▽11
	 X2


STEP 6

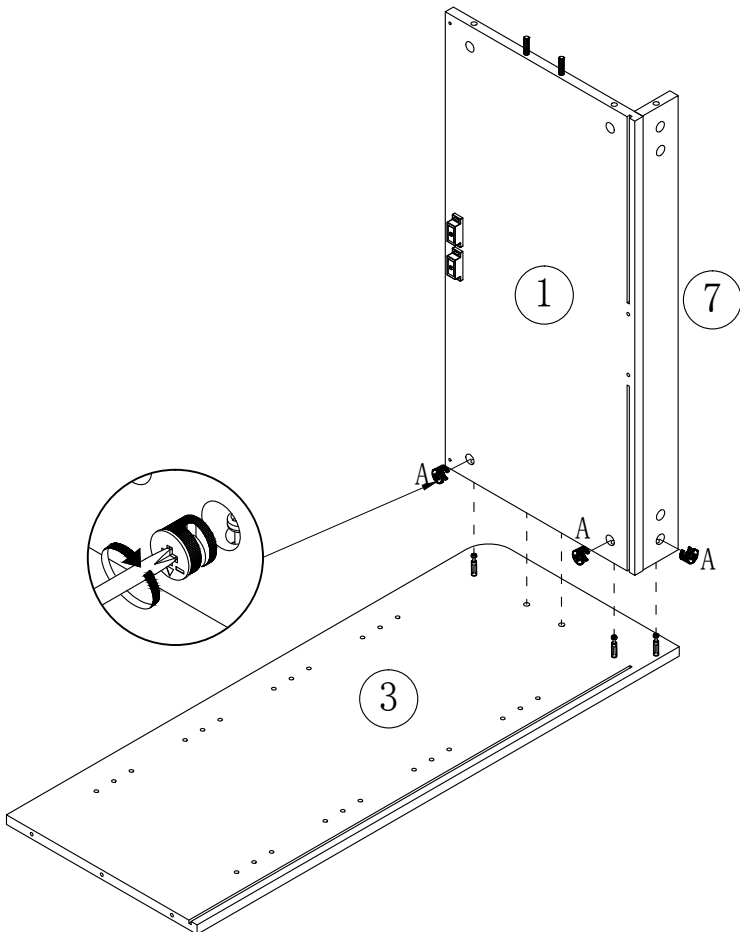

A	▽11
	 X3


ASSEMBLY INSTRUCTION

STEP 7

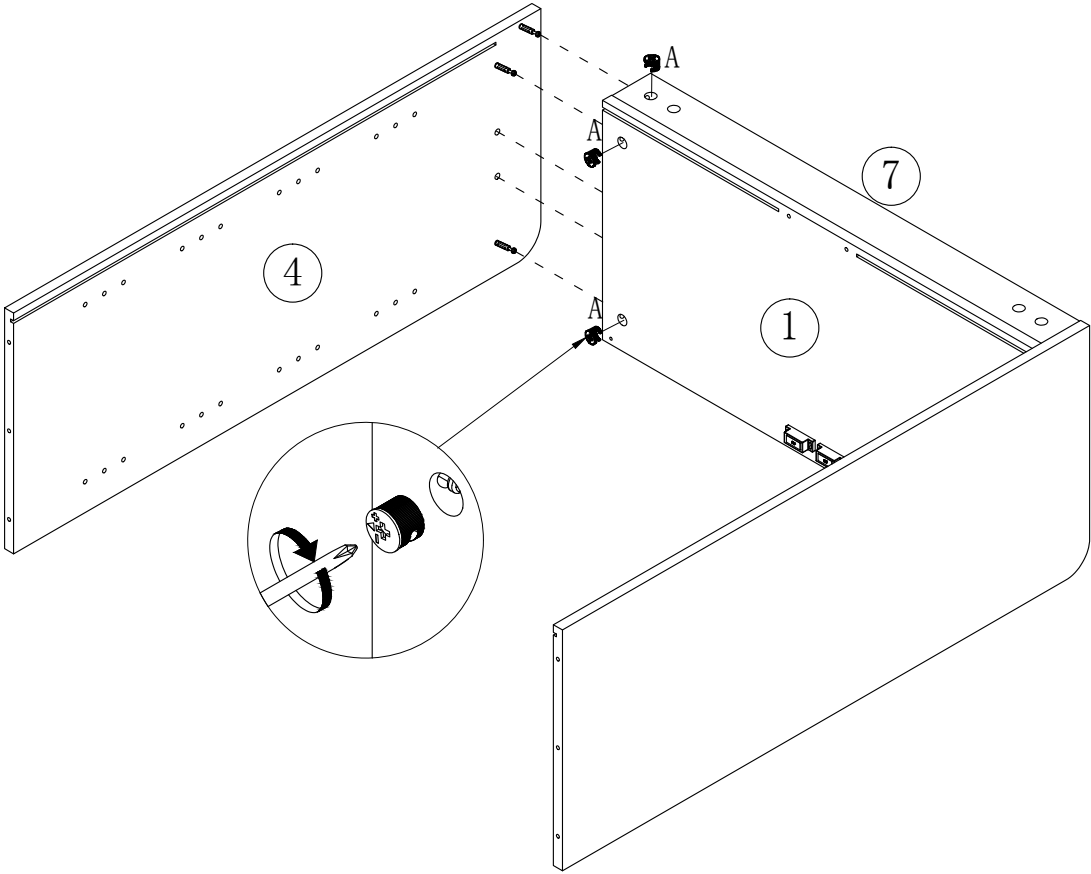

A	▽11
	X3


STEP 8

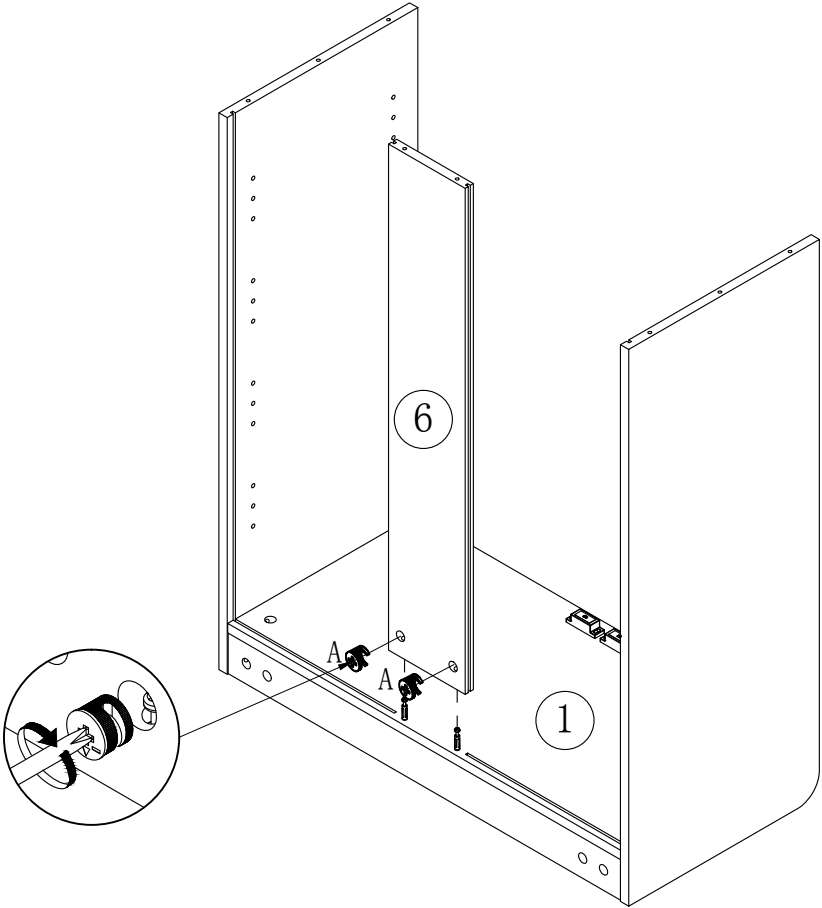


A	▽11
	X2

ASSEMBLY INSTRUCTION

STEP 9

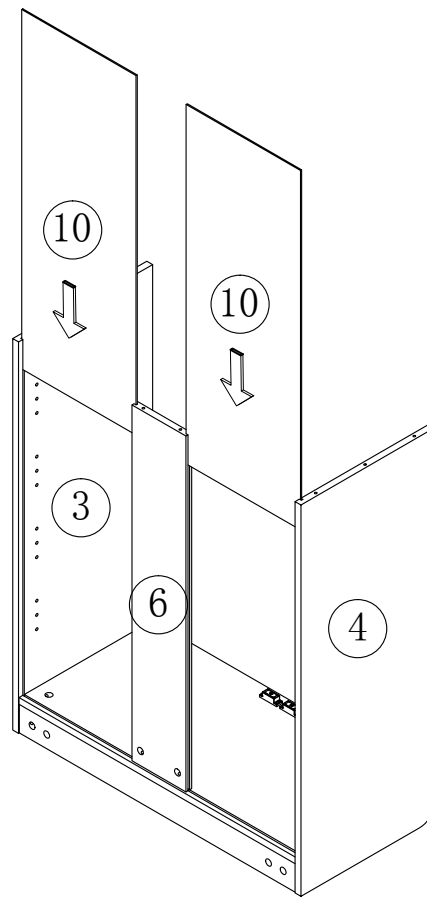

STEP 10

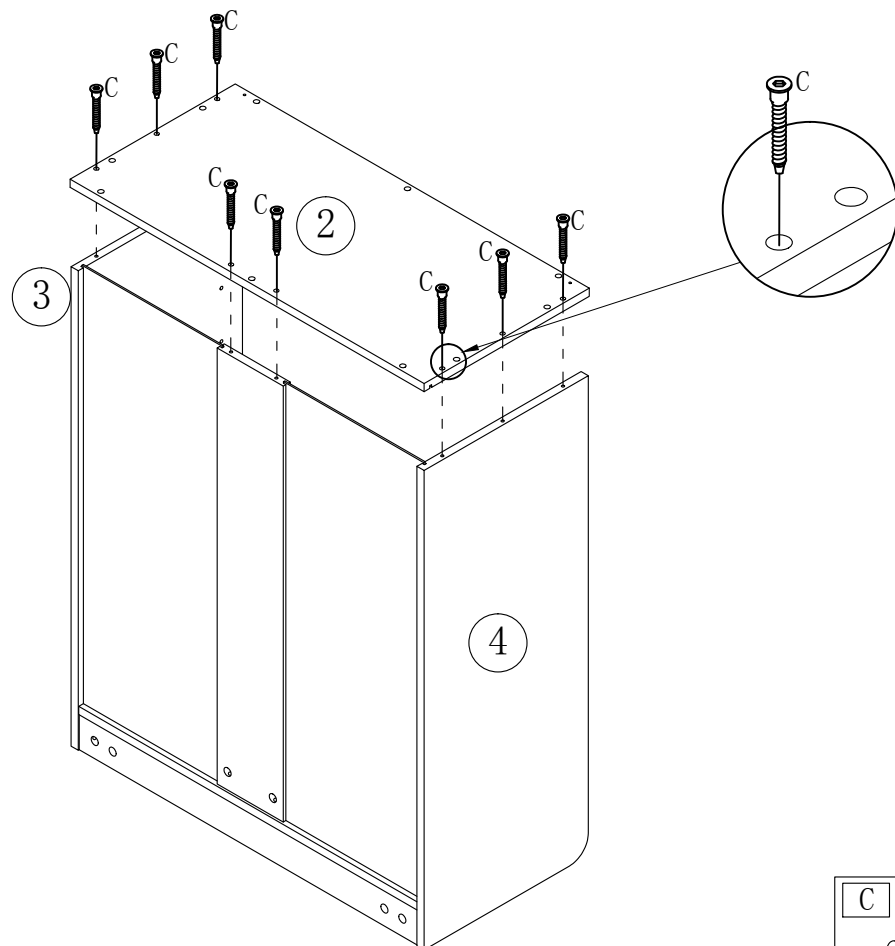



C ST5*40





X8

ASSEMBLY INSTRUCTION

STEP 11

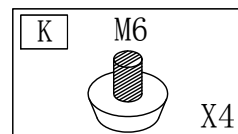
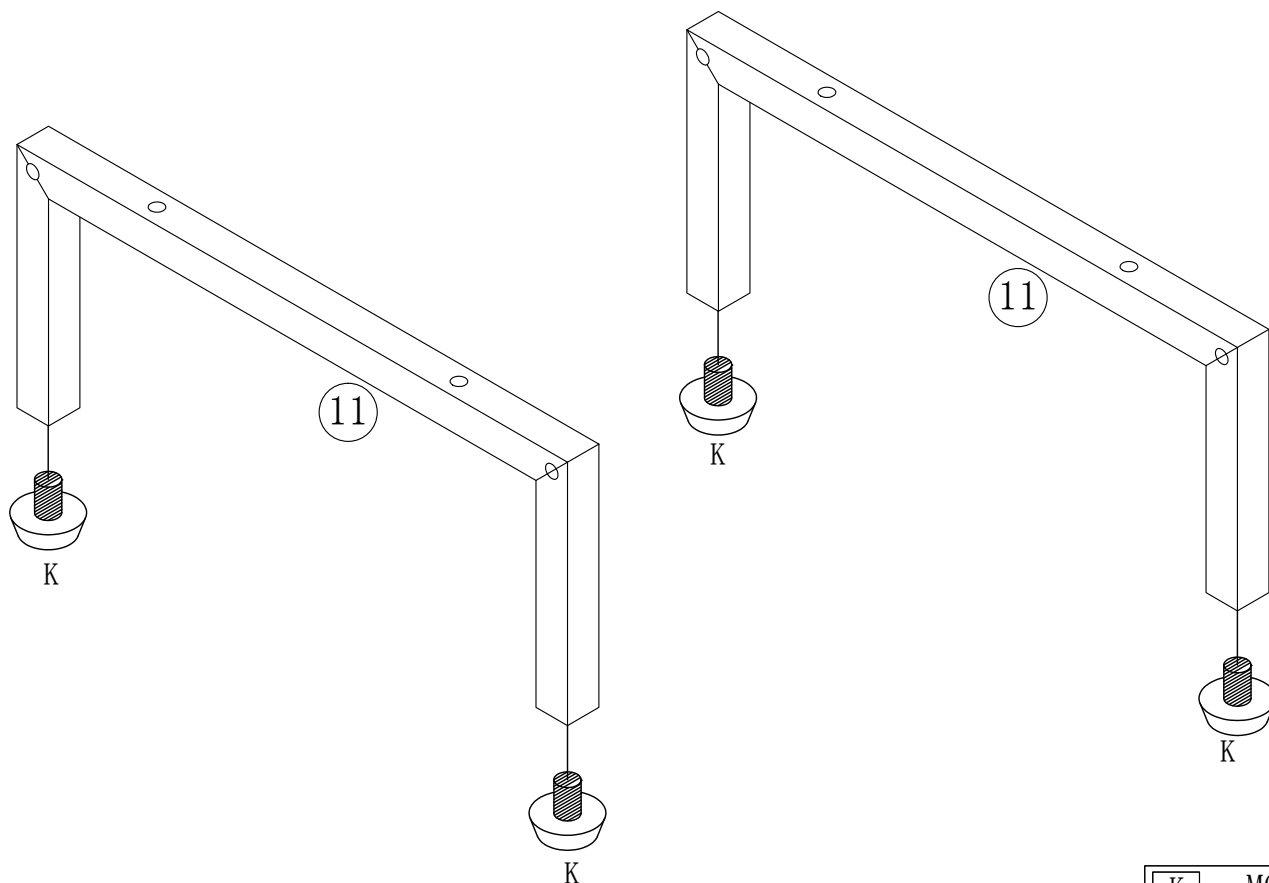


STEP 12

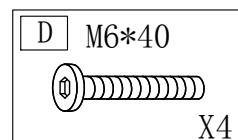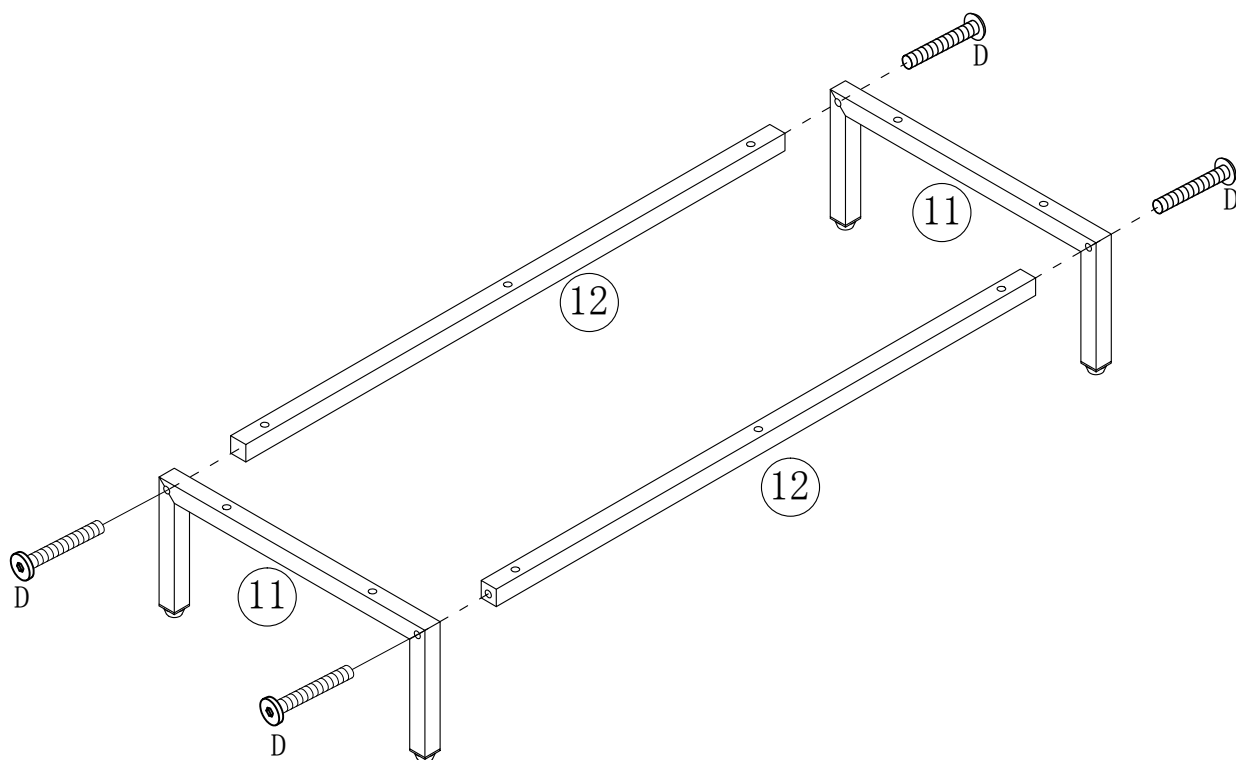


ASSEMBLY INSTRUCTION

STEP 13

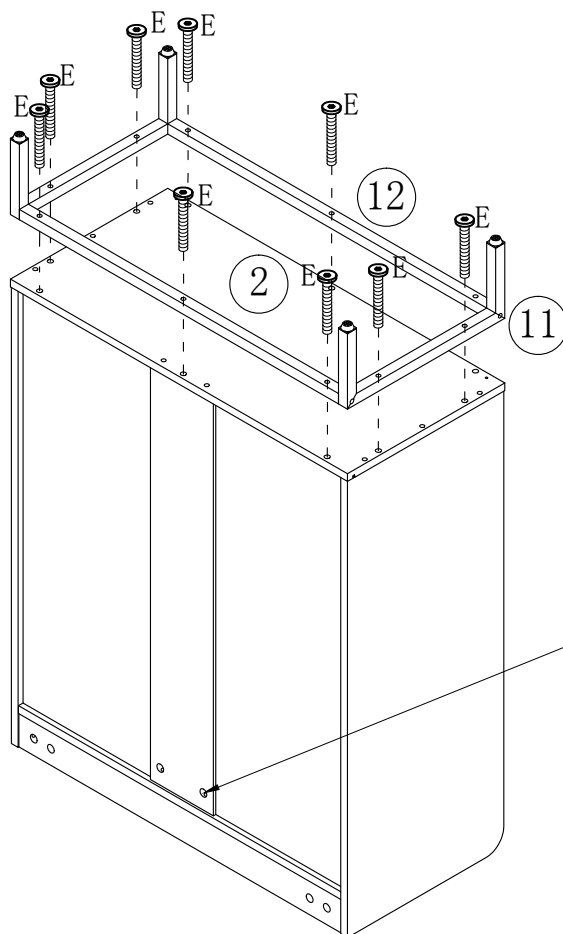


—10

E M6*30



X10

STEP 14

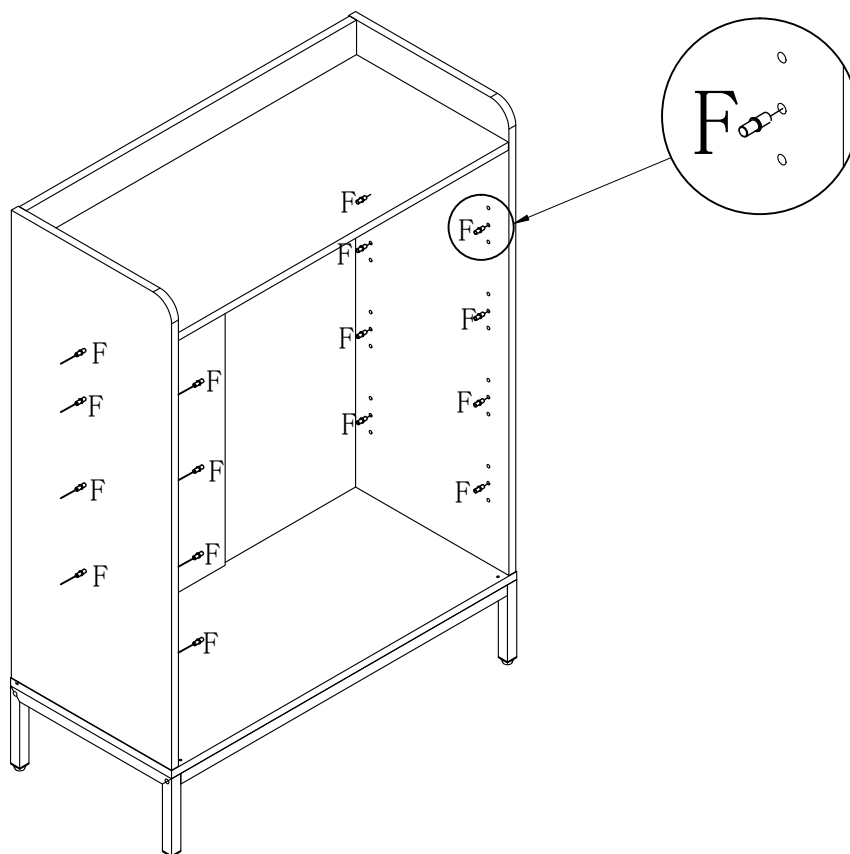


F M6




X16

ASSEMBLY INSTRUCTION

STEP 15

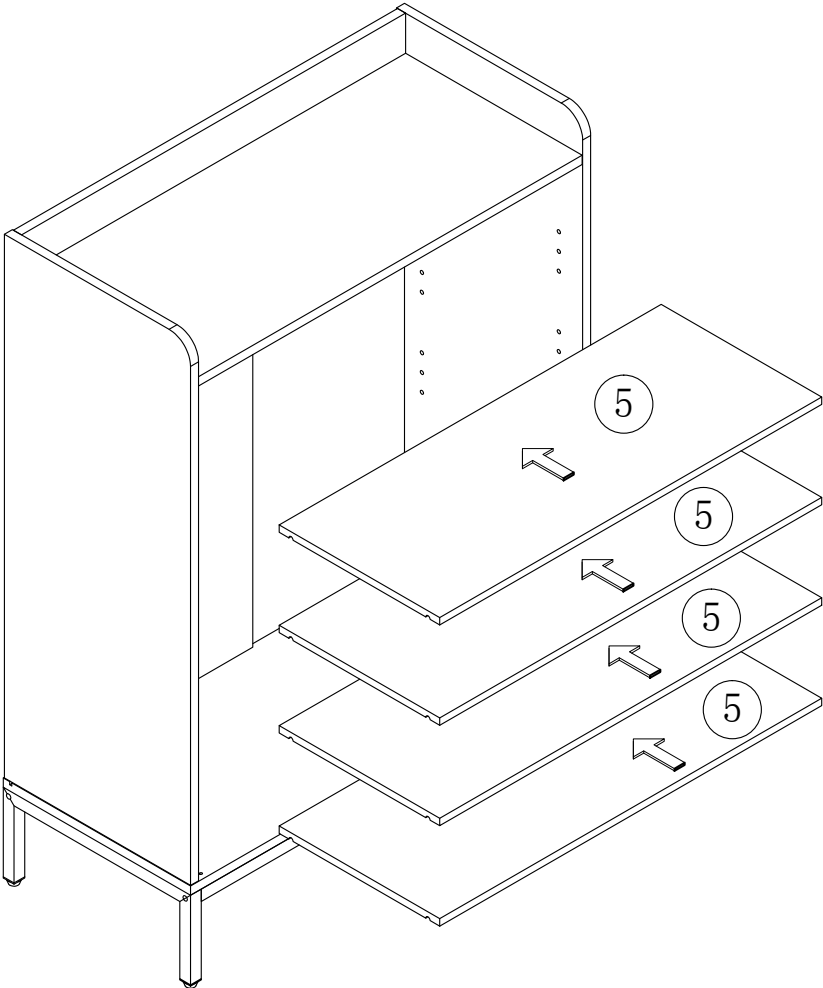


STEP 16

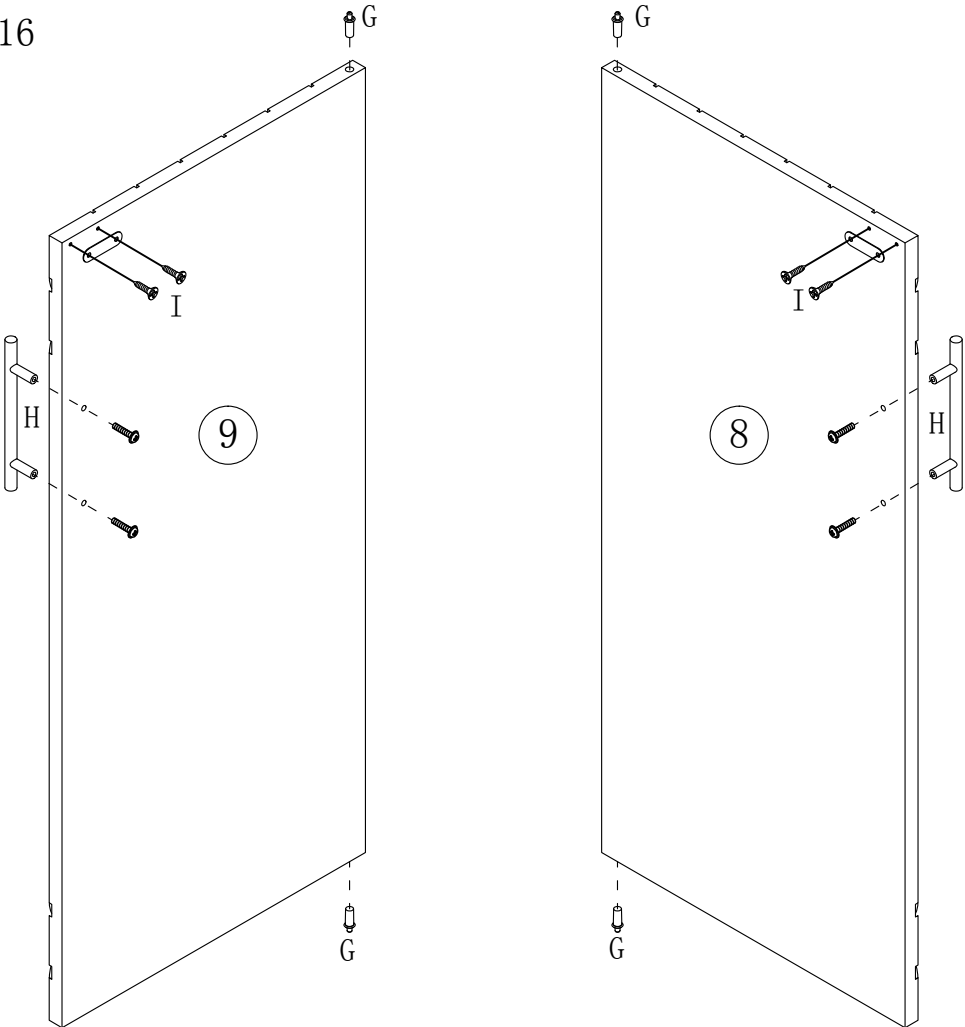



I	X1	X2
H	M4*18	X2
G	M7	X4

ASSEMBLY INSTRUCTION

STEP 17


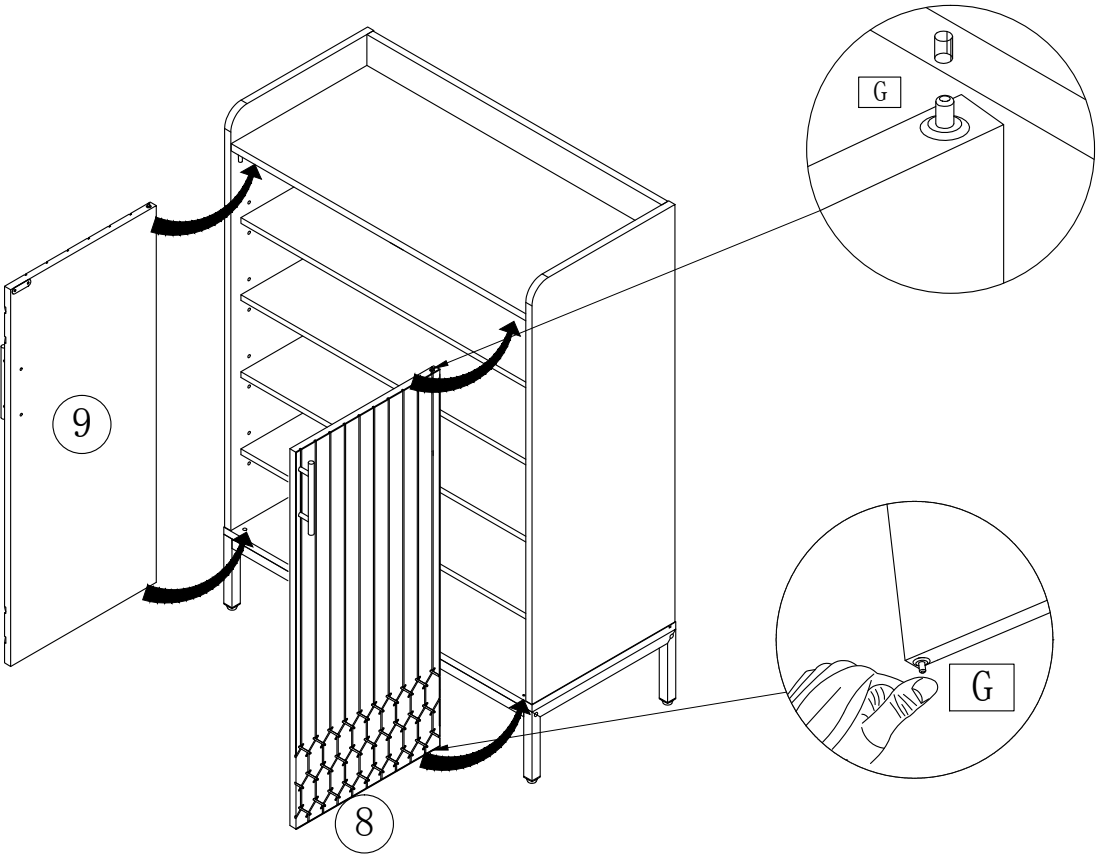


STEP 18

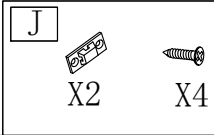
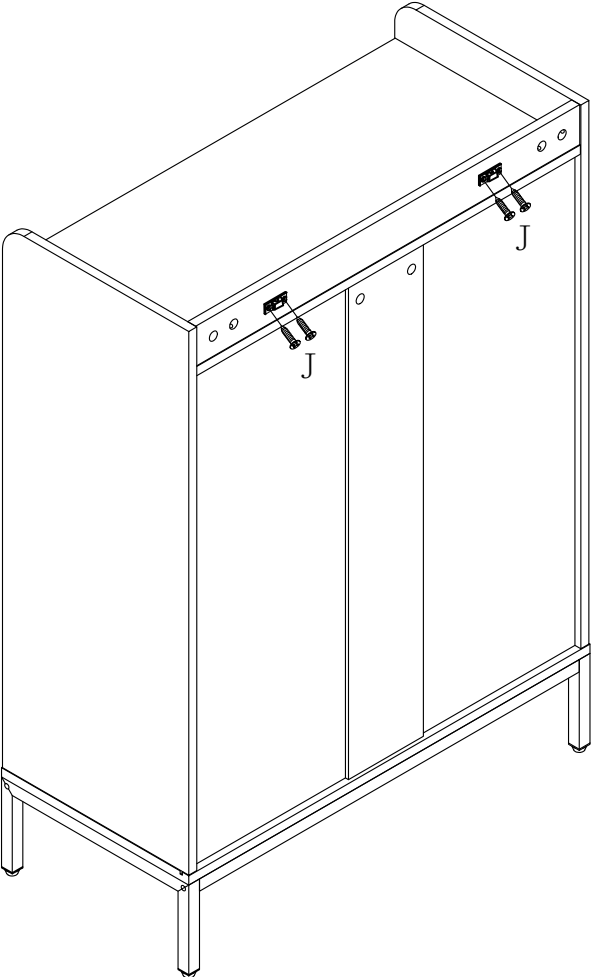


ASSEMBLY INSTRUCTION

STEP 19

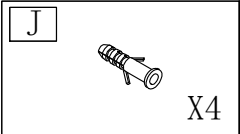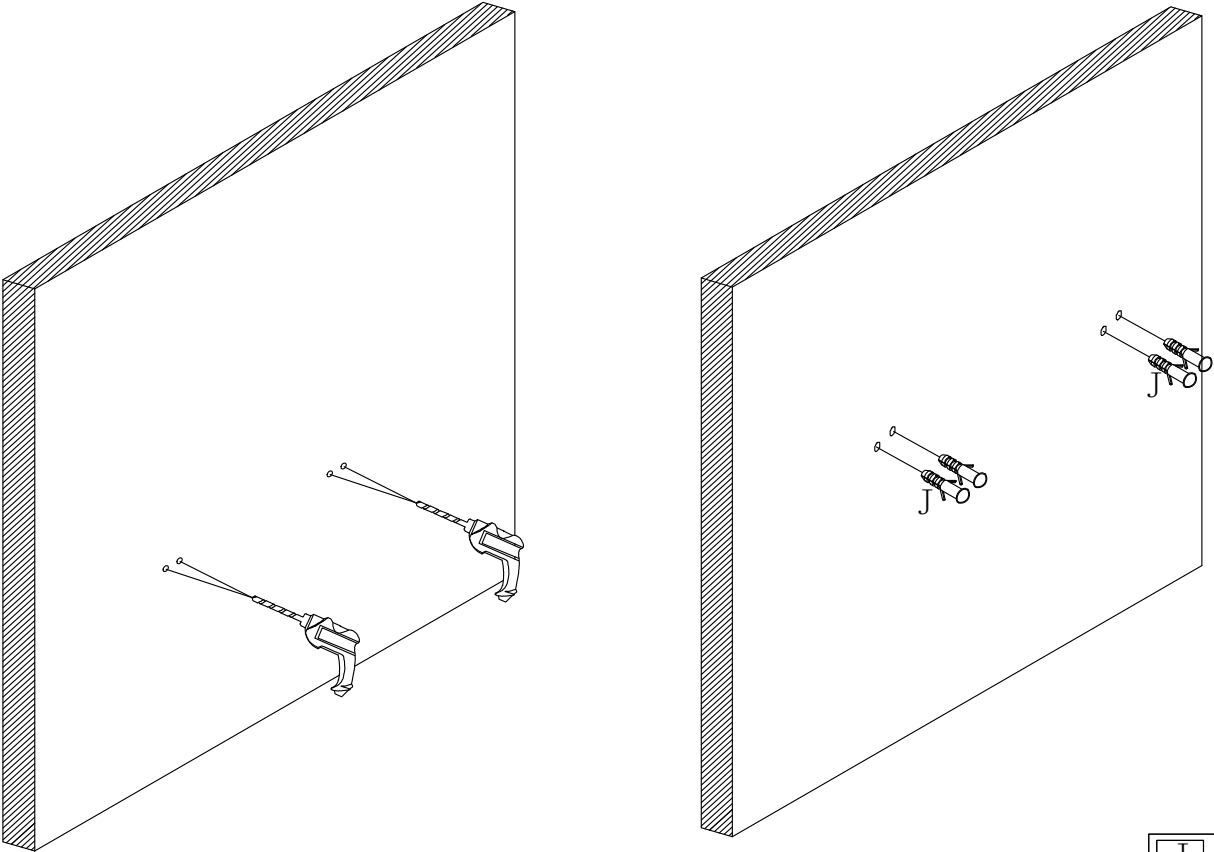

STEP 20

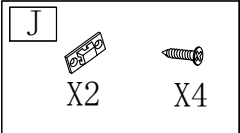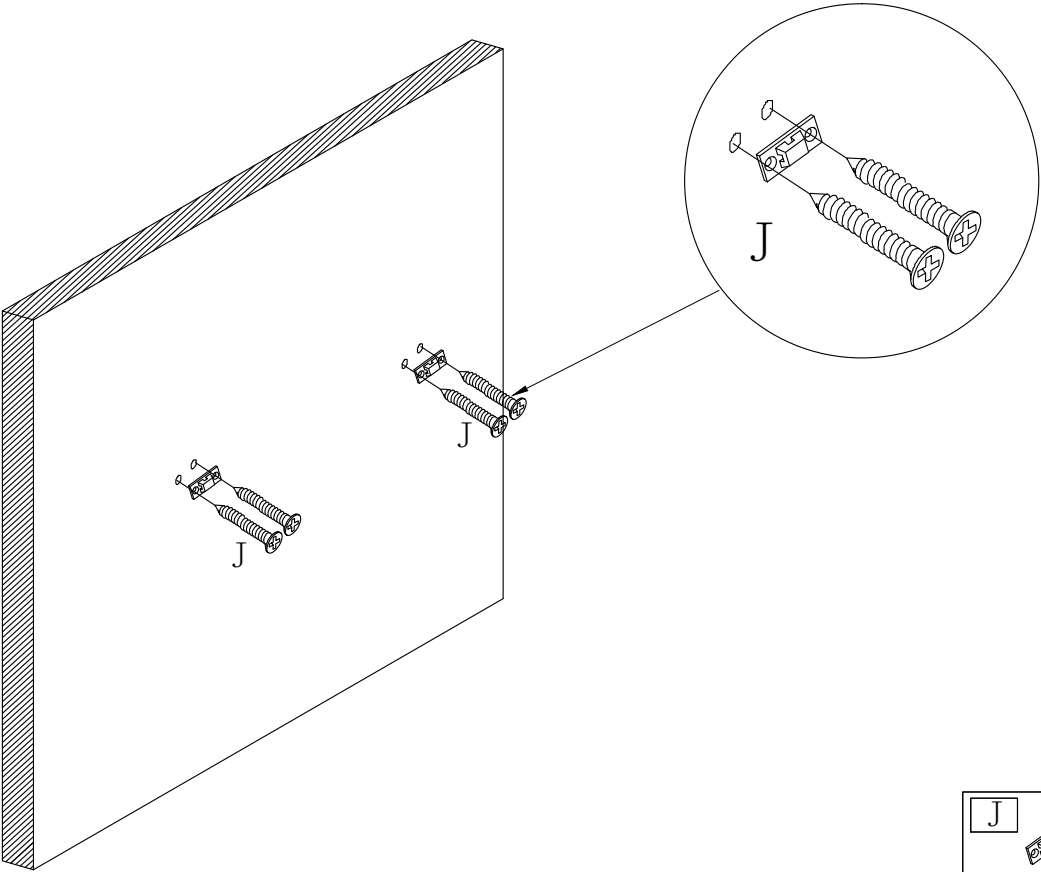

ASSEMBLY INSTRUCTION

STEP 21

