

CUSTOMER SERVICE BULLETIN


BASE ACCESSORY INSTALLATION INSTRUCTIONS

FLOOR MOUNTING KIT PF09B

INSTALLING OPTIONAL BASE FEET

1. Align screw holes in base feet to the bottom of the heater. Attach using Phillips head screws (provided).


Note: When the base feet are installed, they will overlap the front panel and not sit flush with the bottom of the heater. See illustration below.

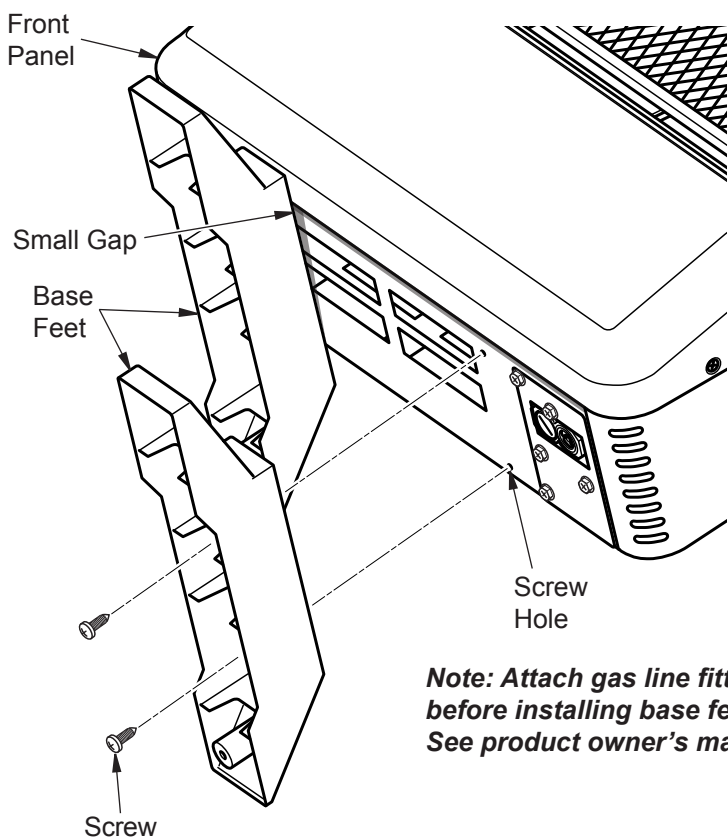

Note: Attach gas line fitting before installing base feet. See product owner's manual.

Attaching Base Feet to Heater

2. Position the heater to the desired location. Secure the base feet to the floor by using two Phillips head screws (provided).

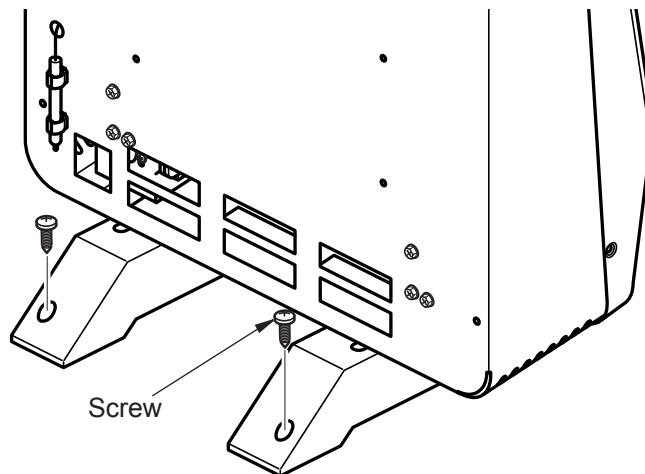

Securing Heater to Floor



ProCom Heating, Inc.
Bowling Green, KY 42101
www.usaprocom.com
1-866-573-0674

200413-01
Rev. A
02/17