



INSTALLATION MANUAL




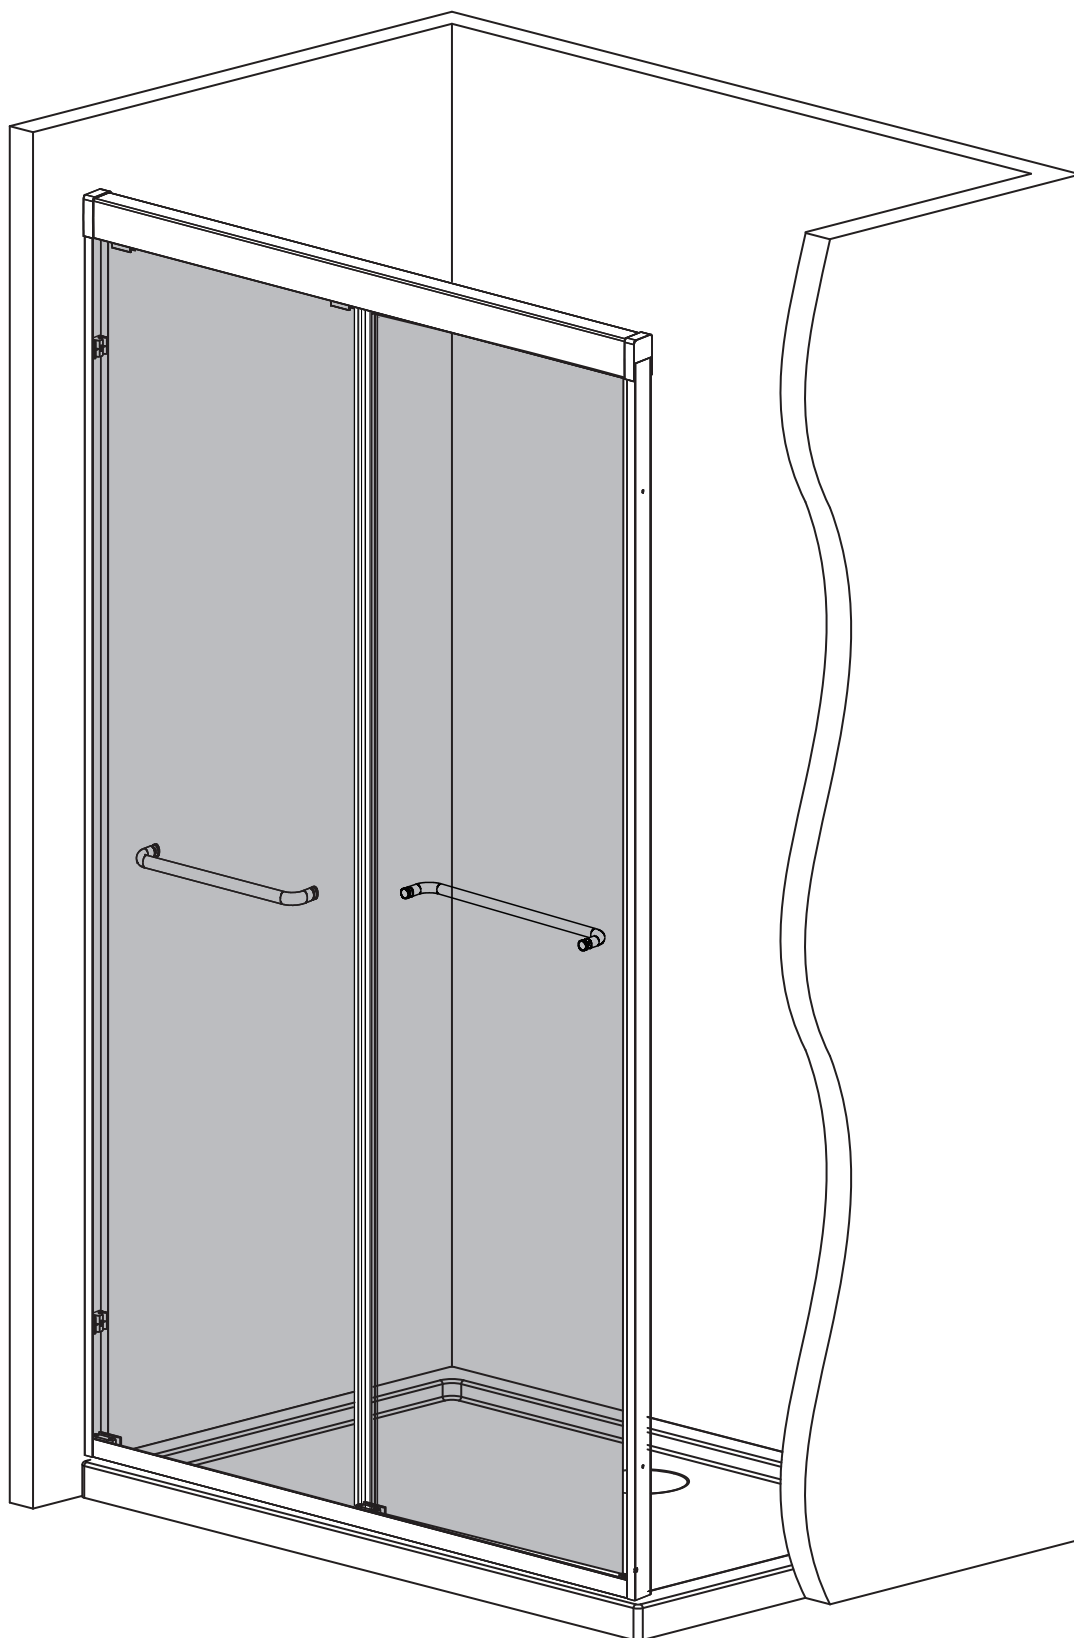


PF-133	1524X1473MM	60"X58"
	1524X1829MM	60"X72"
	1219X1829MM	48"X72"
	1524X1575MM	60"X62"

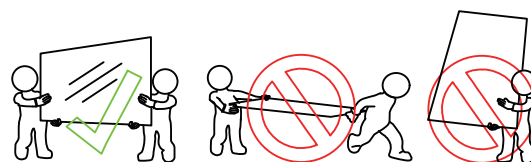

NOTE: Installation Requires 2 People

Tools and Materials

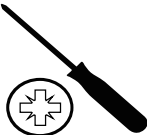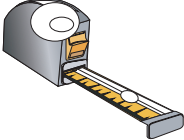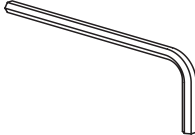		 Ø 2.8mm 14/127" Ø 6mm 30/127"		
Knife	Hack Saw	Drill	Caulk Gun	Screwdriver
				
Level	Tape Measure	Pencil	Allen Key	

Before You Begin

⚠ CAUTION: Risk of injury. Always wear safety glasses when cutting or drilling.

⚠ CAUTION: Risk of injury or product damage. Tempered glass cannot be cut.

- Before starting the installation, lay out and identify the parts. Inspect them for damage.
- The bath/shower or receptor should be installed/prepared at this time, including finished wall materials.

Installation on Tiled Surfaces

If your shower door will be installed over tiles, ensure the tiles are fully laid beneath the door frame.



Shower Door Care

Do not use abrasive pads or sharp tools on any metal parts or glass surfaces.


To maintain a clean and like-new appearance, wipe with diluted mild soap and water.

We recommend using a squeegee to dry the glass panels after each use.










Universal Manual – Applicable to the Following Configurations

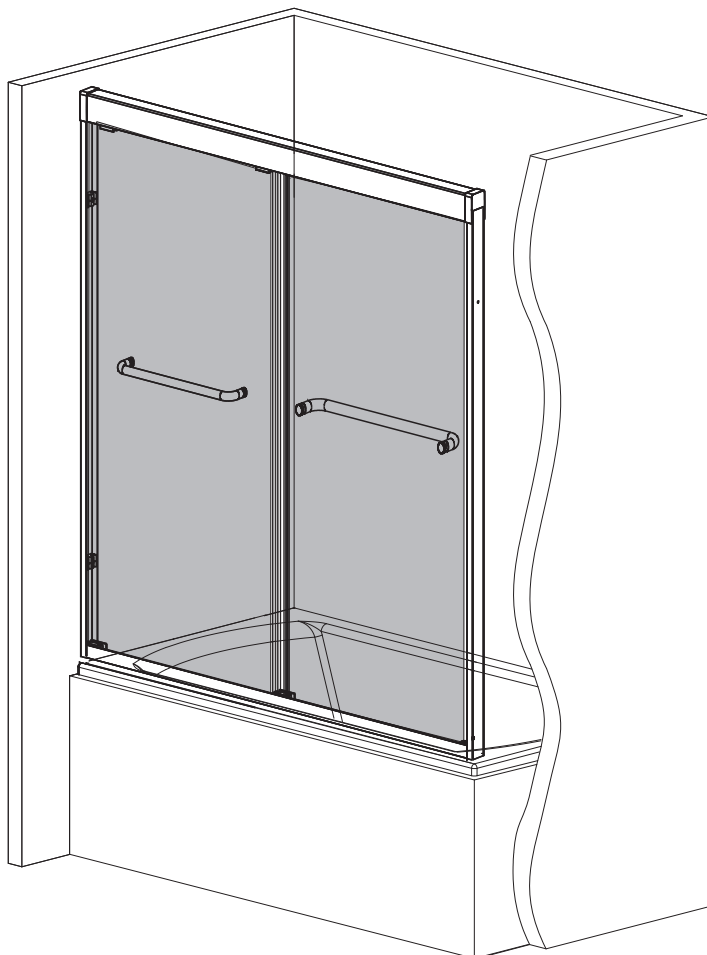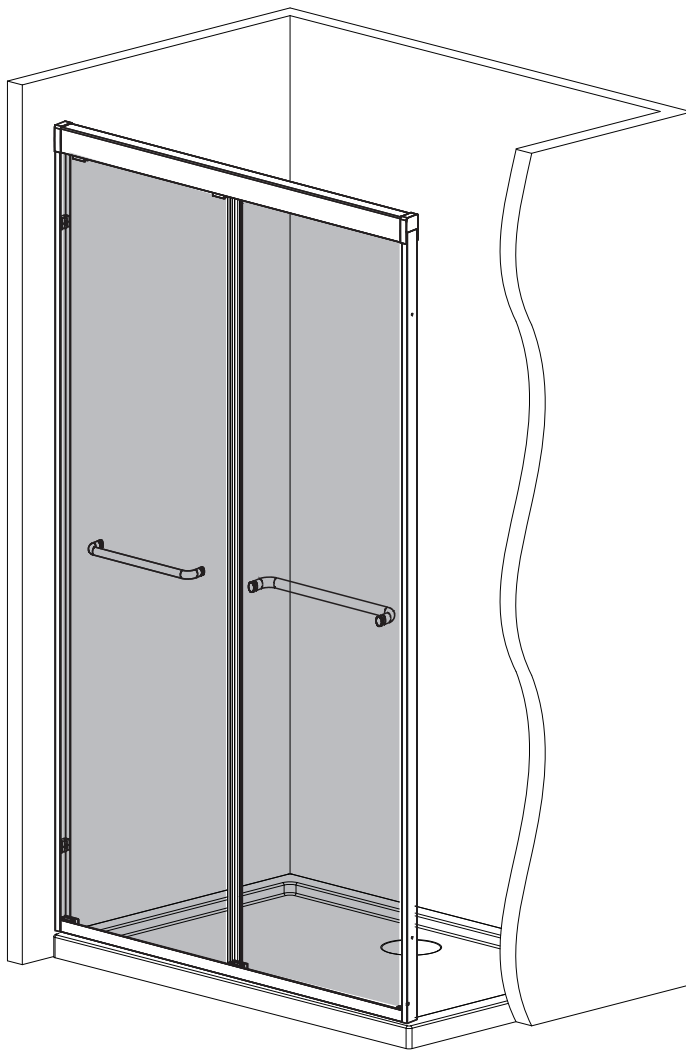

Detailed Diagram of Shower Door Components

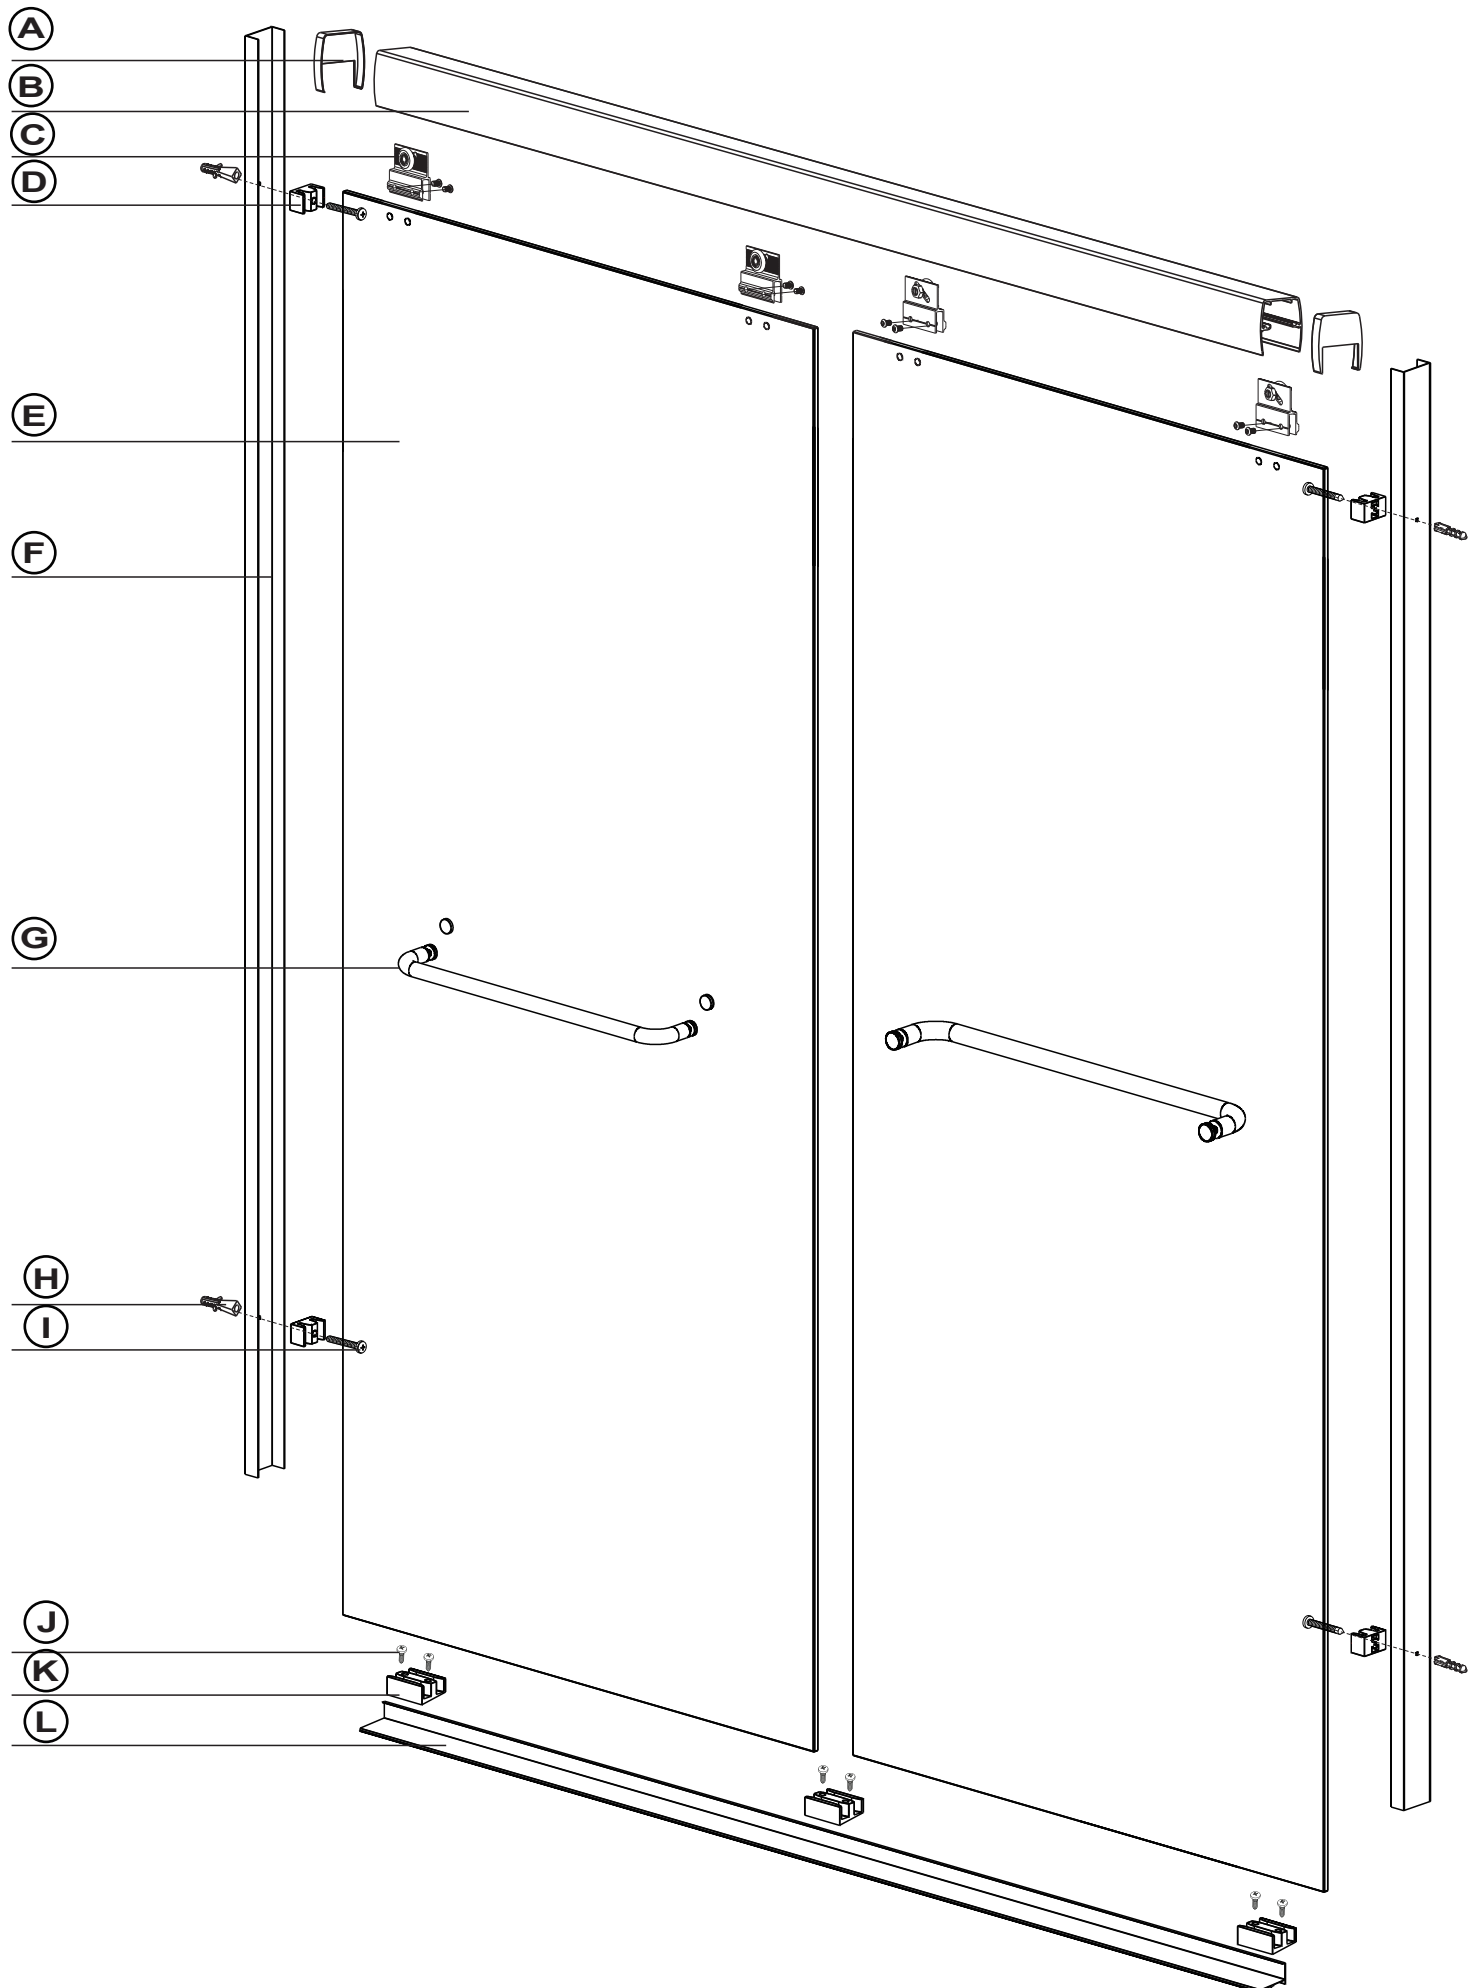


◆ Parts List

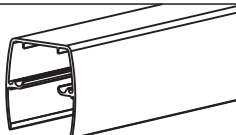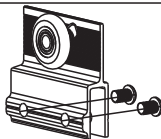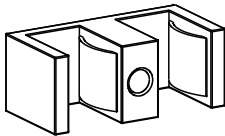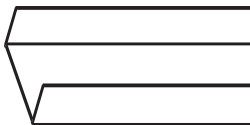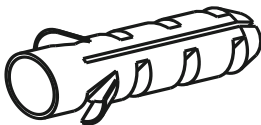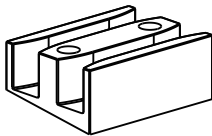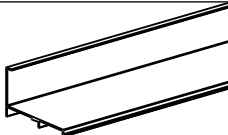ITEM	PARTS	DIAGRAM	QTY
(A)	Track Cover		x2
(B)	Top Track		x1
(C)	Roller		x4
(D)	Bumper		x4
(E)	Door Panels		x2
(F)	Wall Jamb		x2
(G)	Towel Bar		x2
(H)	Wall Anchors $\varnothing 6$		x4
(I)	Screw ST 4X30mm		x4
(J)	Screw ST 4X8mm		x6
(K)	Bottom Guide Block		x3
(L)	Bottom Track		x1

STEP 1.1

Measure and Cut the Bottom Track




(L)



x1



THE INSTALLATION SHOWN IS BASED ON PLUMB FINISHED WALLS AND A LEVELLED BASE. IF THESE CONDITIONS ARE NOT MET, PLEASE ADJUST ACCORDINGLY.

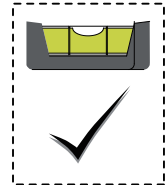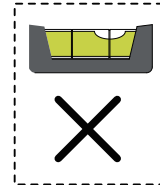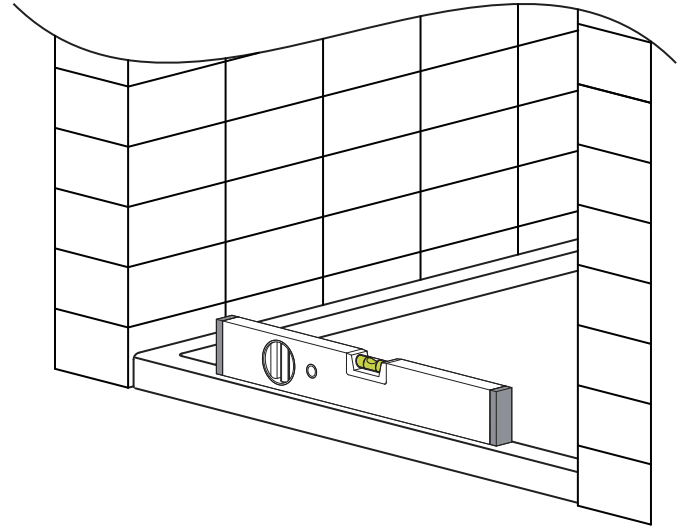


STEP 1.2

Measure and Cut the Bottom Track





CUT THE BOTTOM TRACK 25/127"
(5mm) SHORTER THAN THE OPENING

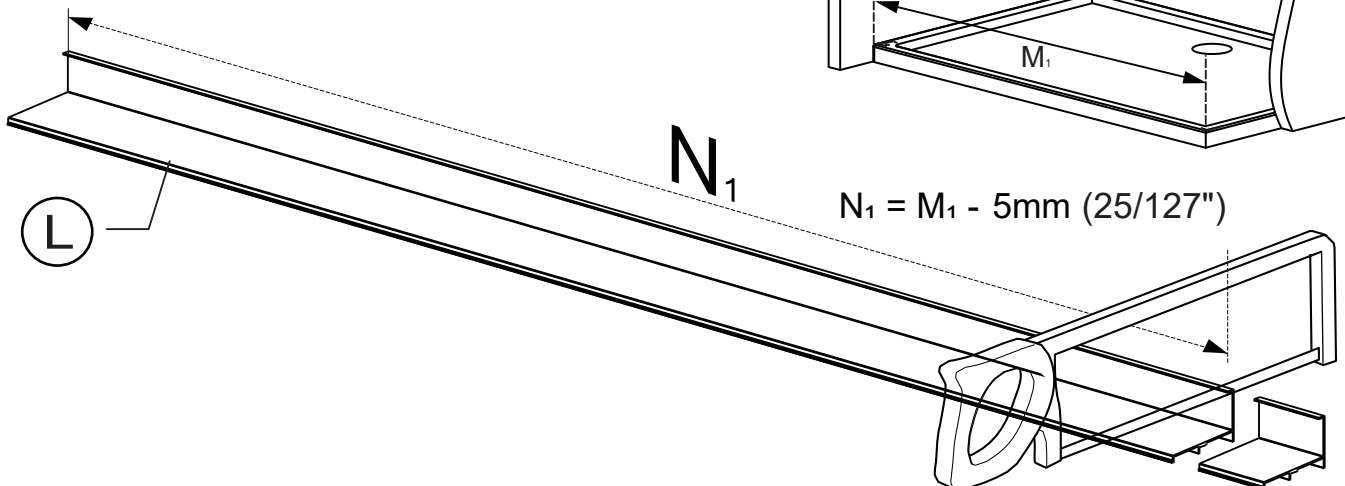


STEP 2

Install the Wall Jambs on Both Sides


(F)		x2
(H)		x4
(D)		x4
(I)		x4




THE INSTALLATION SHOWN IS BASED ON PLUMB FINISHED WALLS AND A LEVELLED BASE. IF THESE CONDITIONS ARE NOT MET, PLEASE ADJUST ACCORDINGLY.

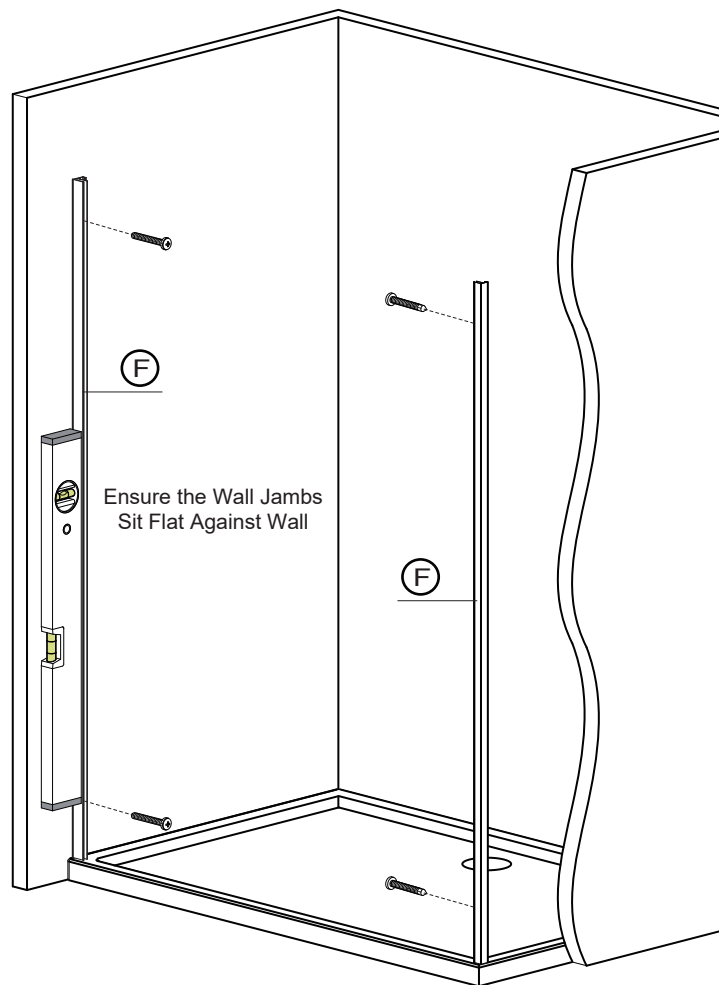


2.1

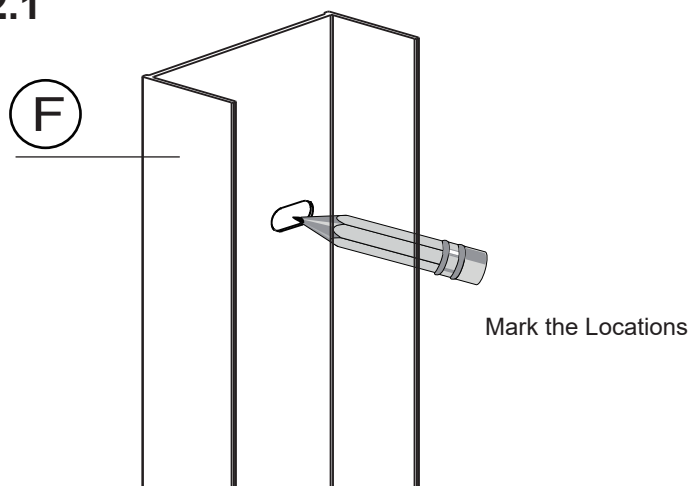


2.2

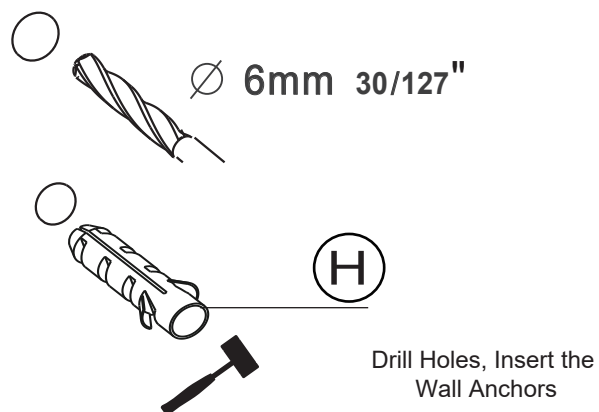

2.3

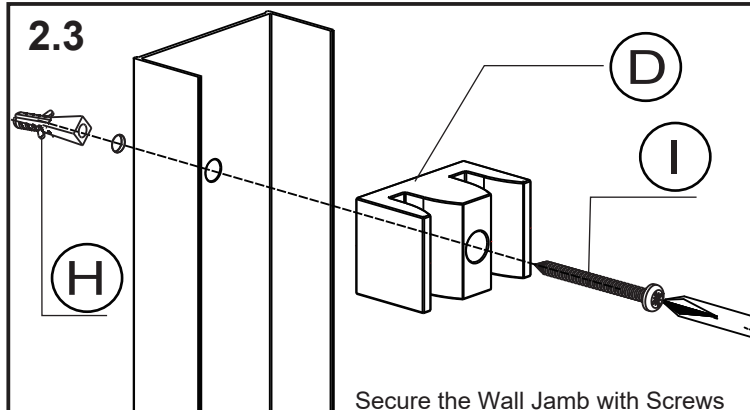


2.4

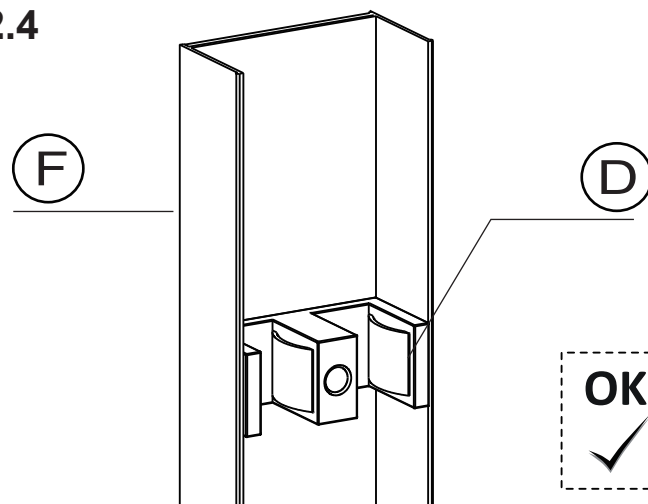

STEP 3

Install the Bottom Track


(L)




x1



Wipe the base with a clean cloth before installing the bottom track.

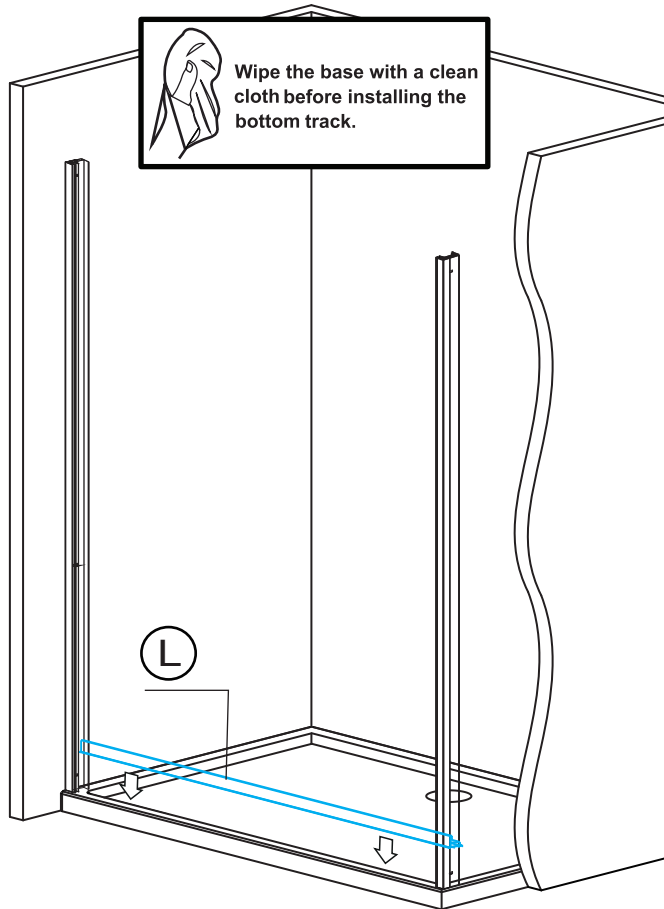

3.1

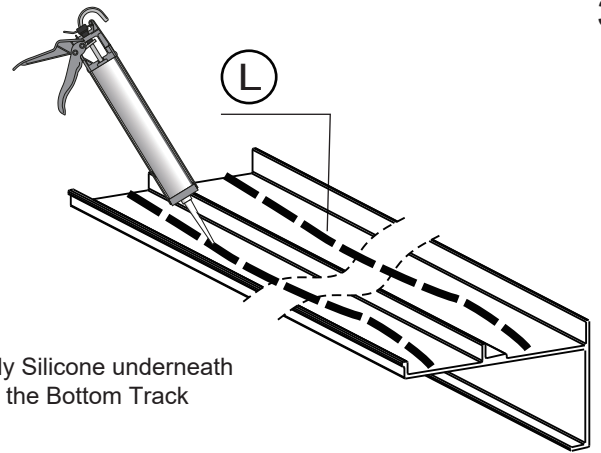


Apply Silicone underneath the Bottom Track

3.2

INTERIOR SHOWER SIDE

(L)

Place the Bottom Track and Seal the Joint with the Wall Jamb

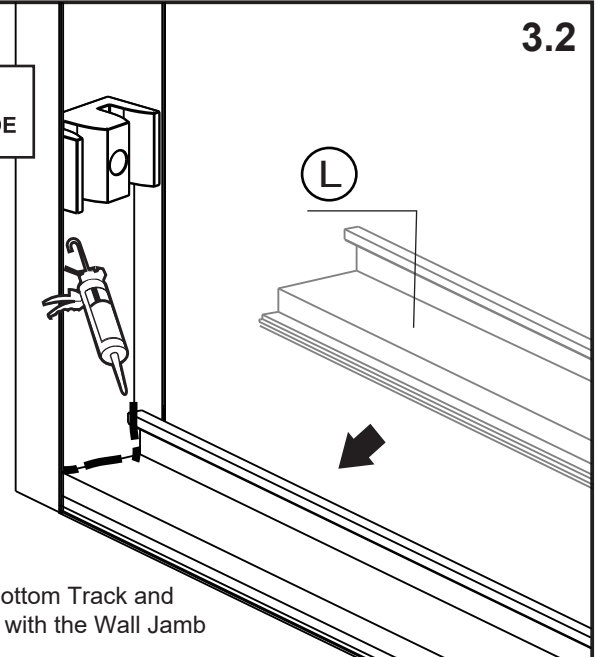

STEP 4

Install the Bottom Guide Blocks

(K)




x3

(J)



x6

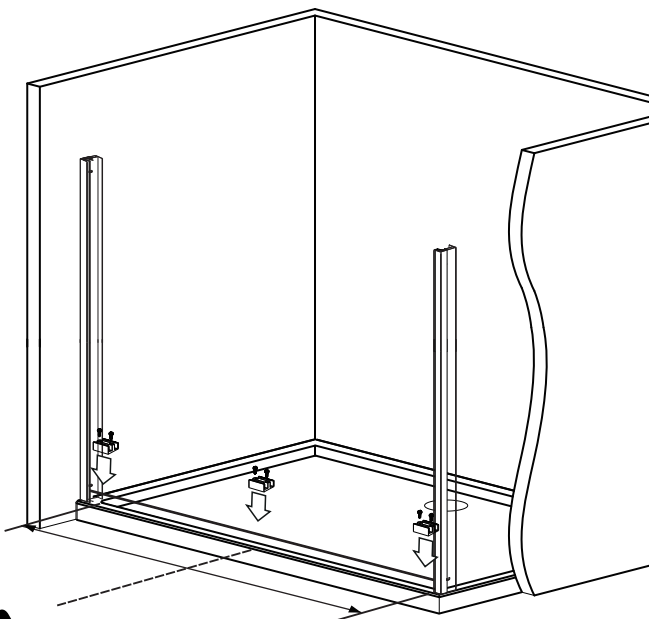


The Middle Bottom Guide Block Must Be Installed at the Center Position

4.1

INTERIOR SHOWER SIDE

(L)

Place Bottom Guide Block as Shown

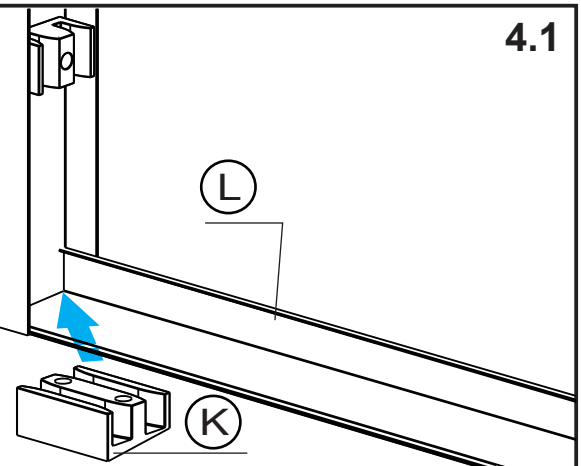

4.2


INTERIOR SHOWER SIDE

(J)

Drill Holes, Secure with Screws

Ø 2.8mm
14/127"


(K)

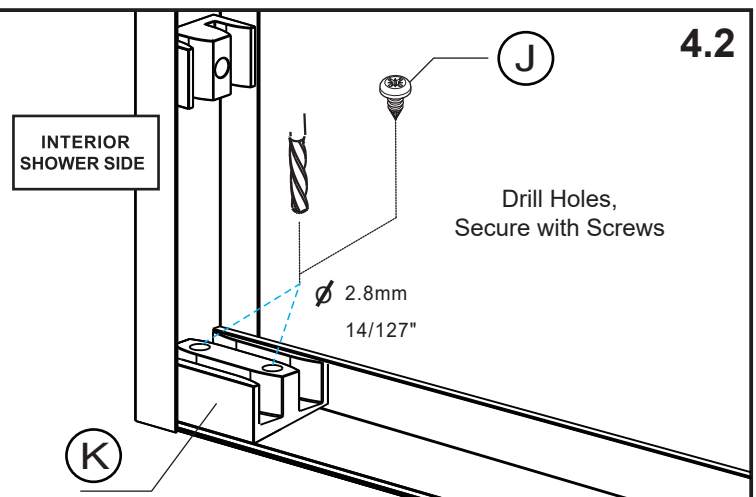

STEP 5

Measure and Cut the Top Track




(B)



x1



THE INSTALLATION SHOWN IS BASED ON PLUMB FINISHED WALLS AND A LEVELLED BASE. IF THESE CONDITIONS ARE NOT MET, PLEASE ADJUST ACCORDINGLY.

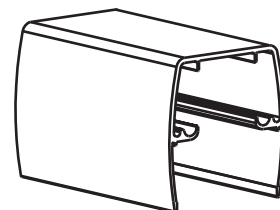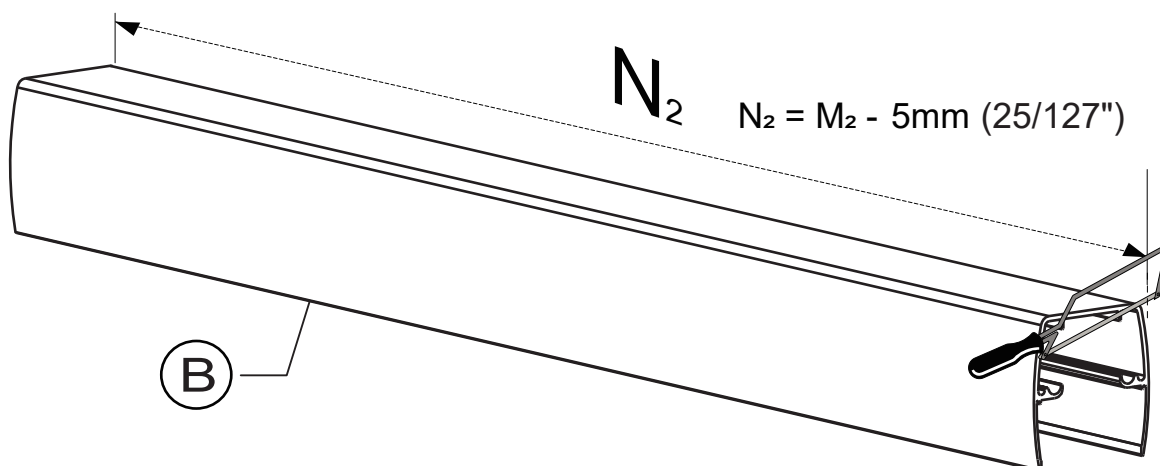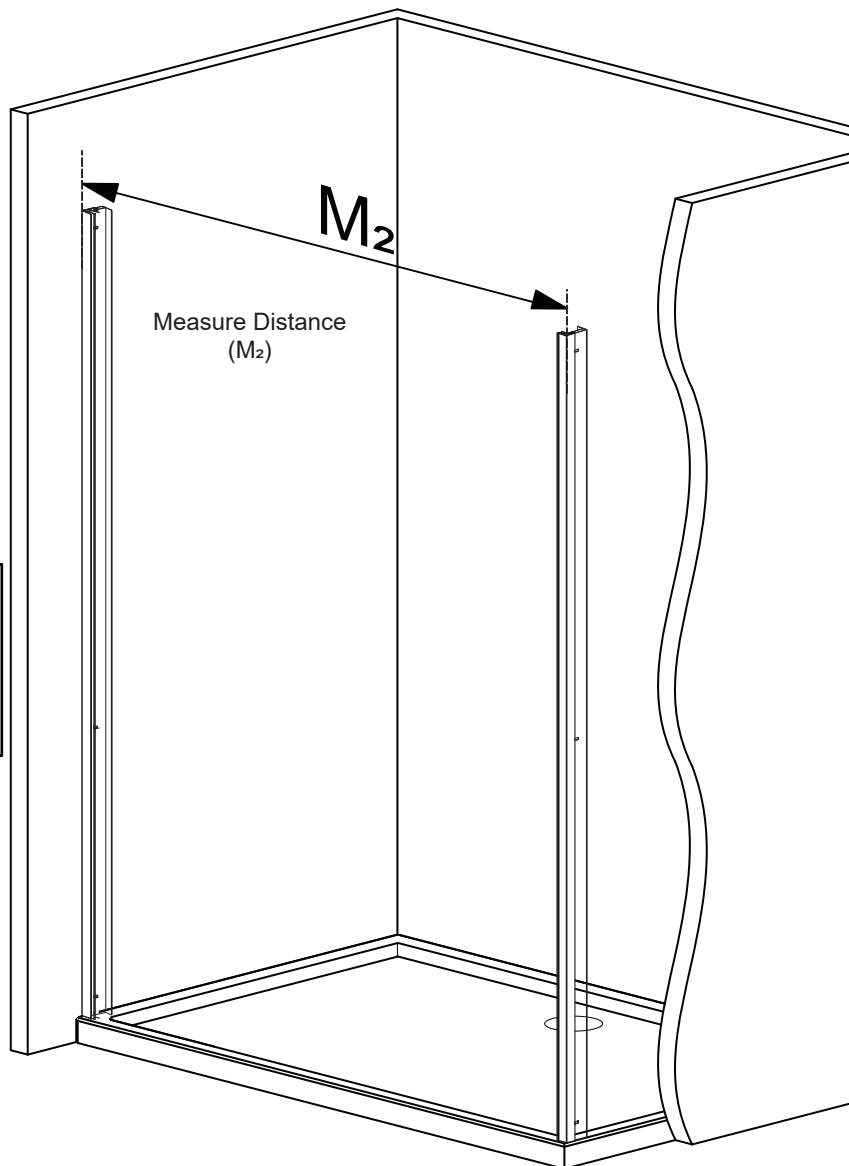


CUT THE TOP T RACK 25/127"
(5mm) SHORTER THAN THE OPENING





STEP 6

Install the Rollers on Door Panels

Ⓒ




x4

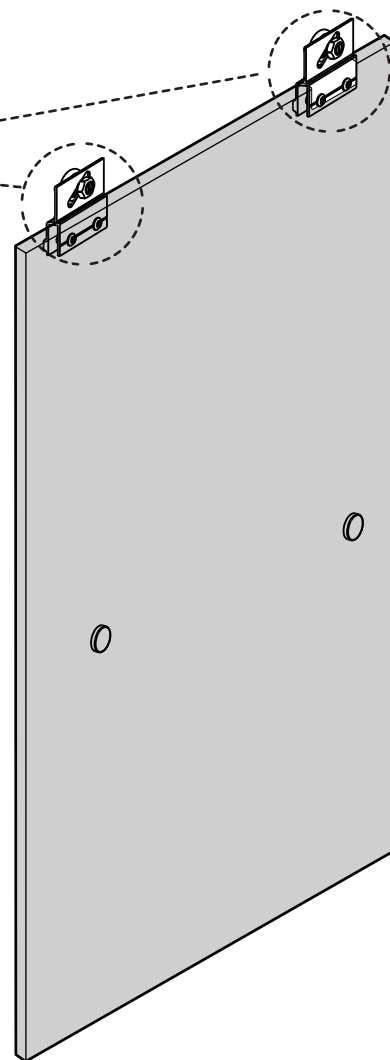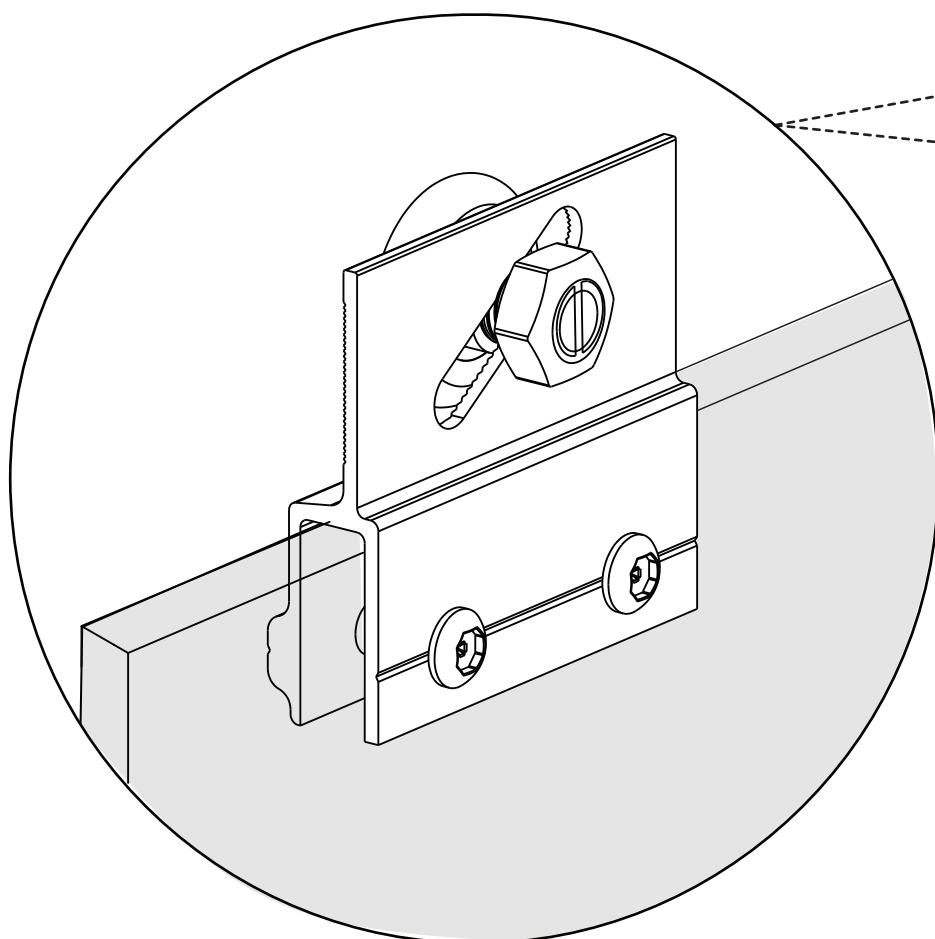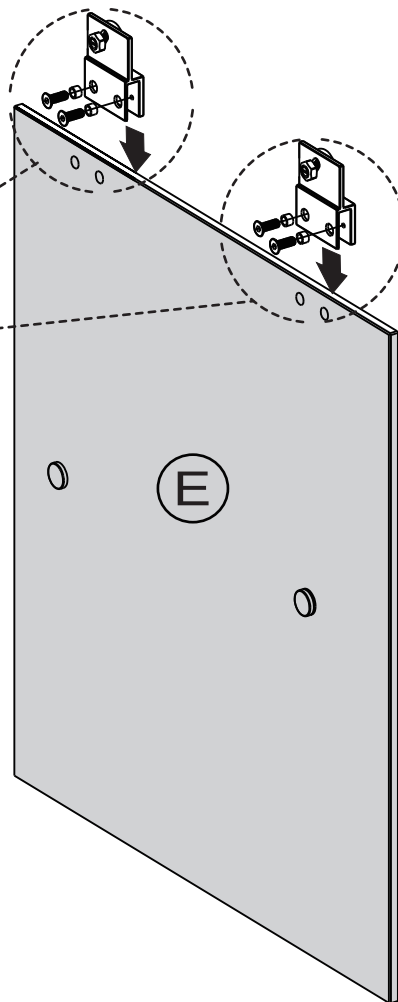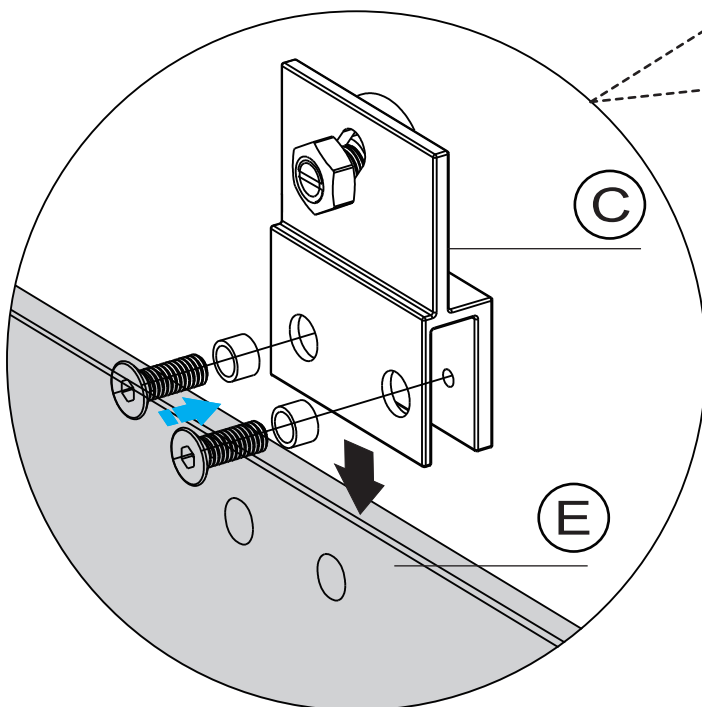


STEP 7


Hang Door Panels on Top Track

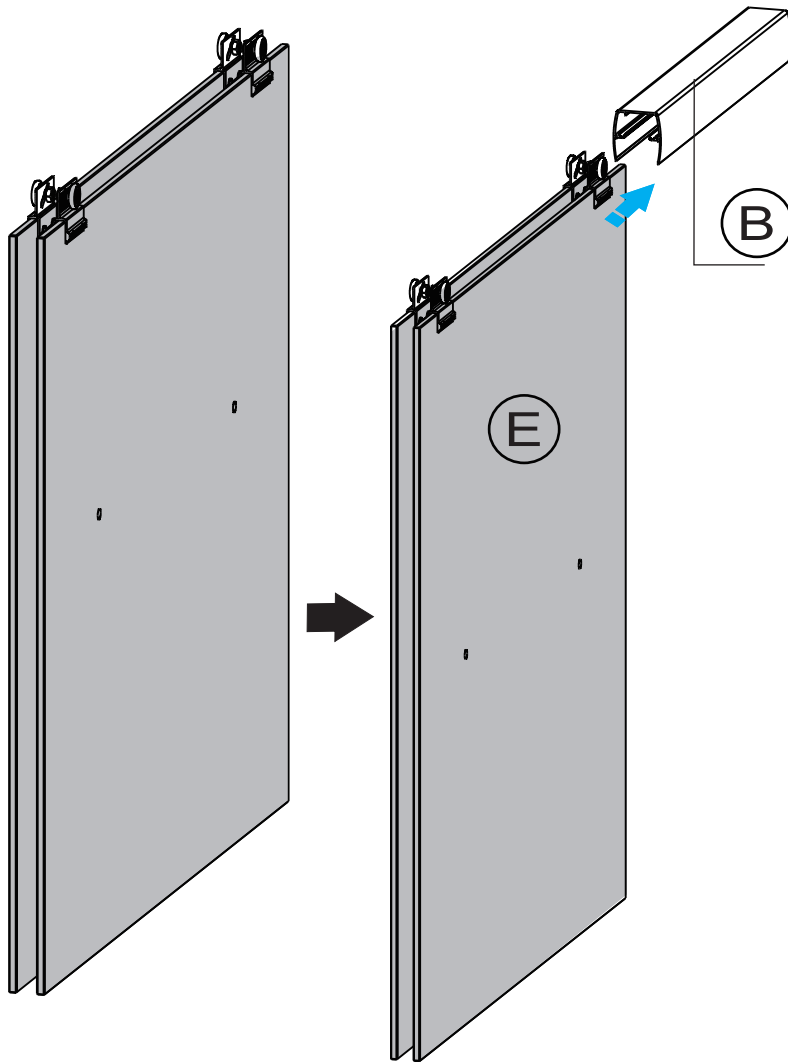

7.1

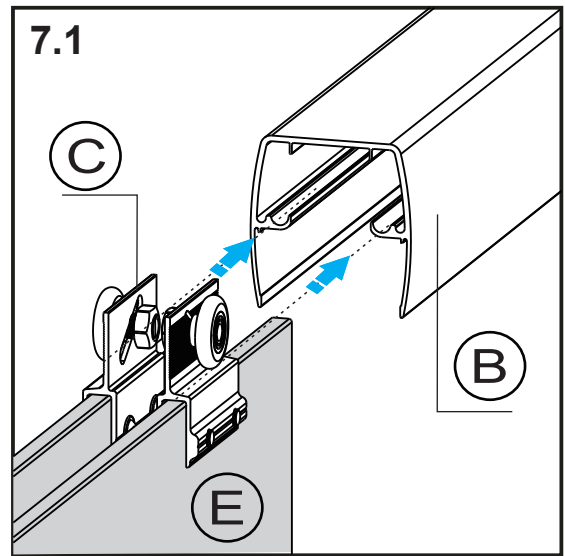


7.2

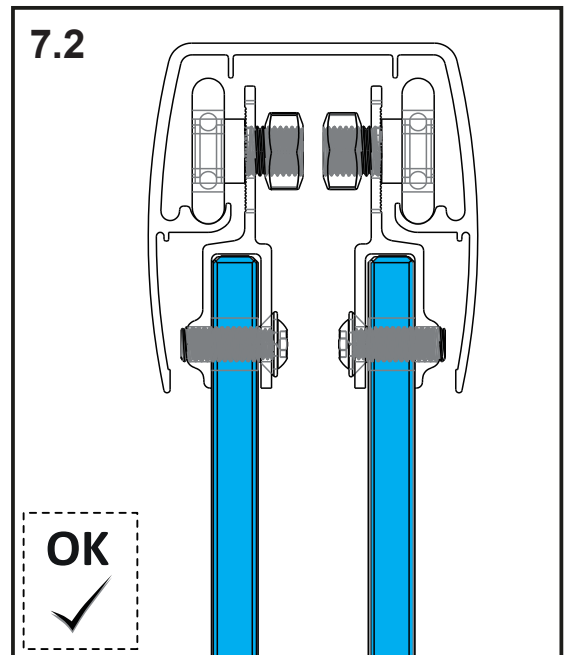


STEP 8

Attach the Track Covers






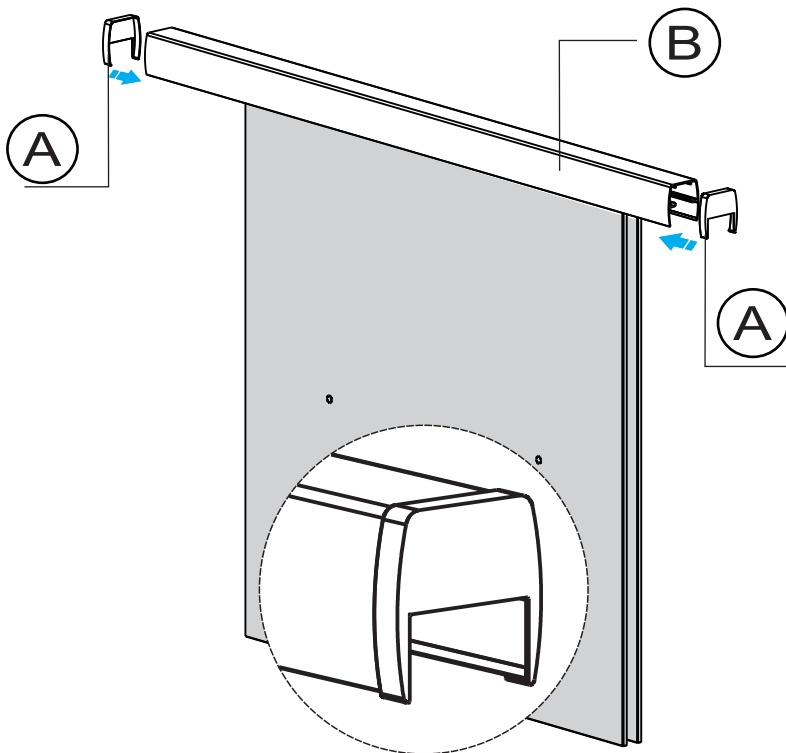


8.1

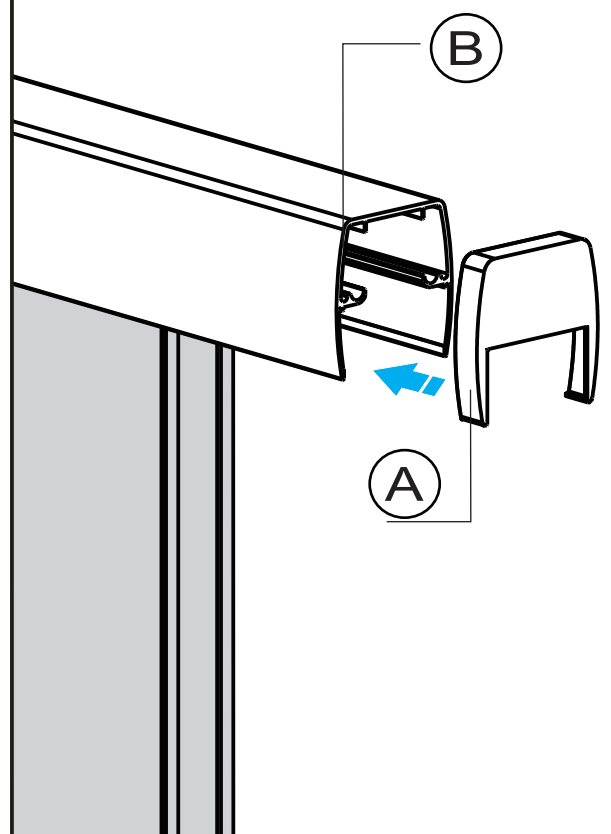


STEP 9

Mount Door Panels and Top Track onto Wall Jamb

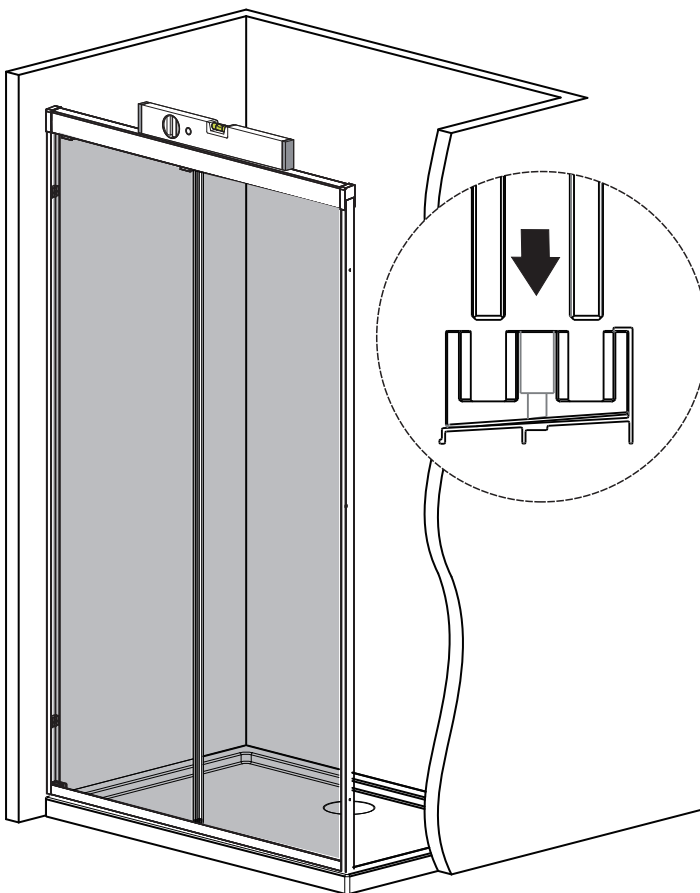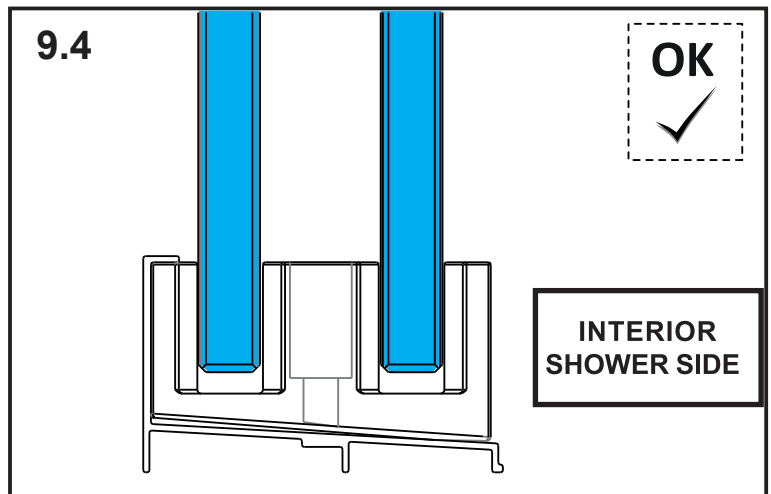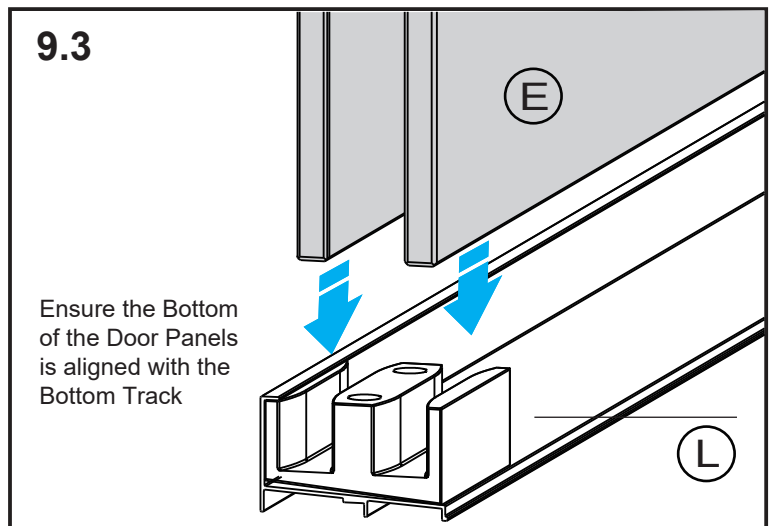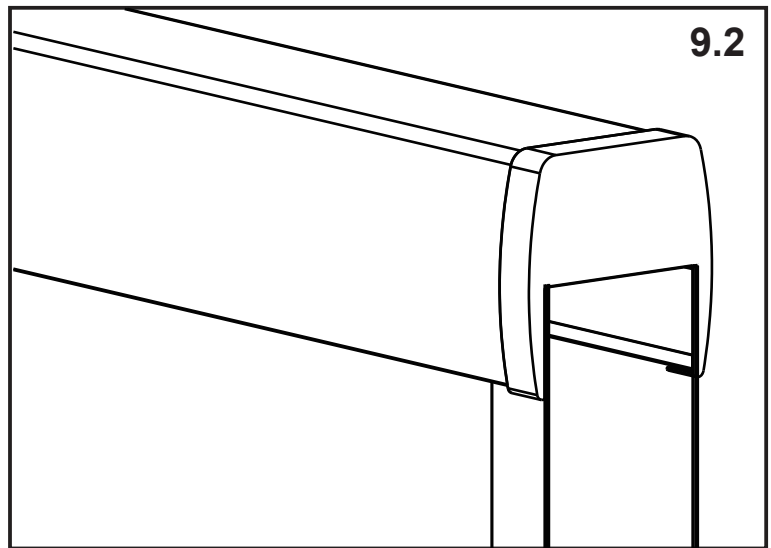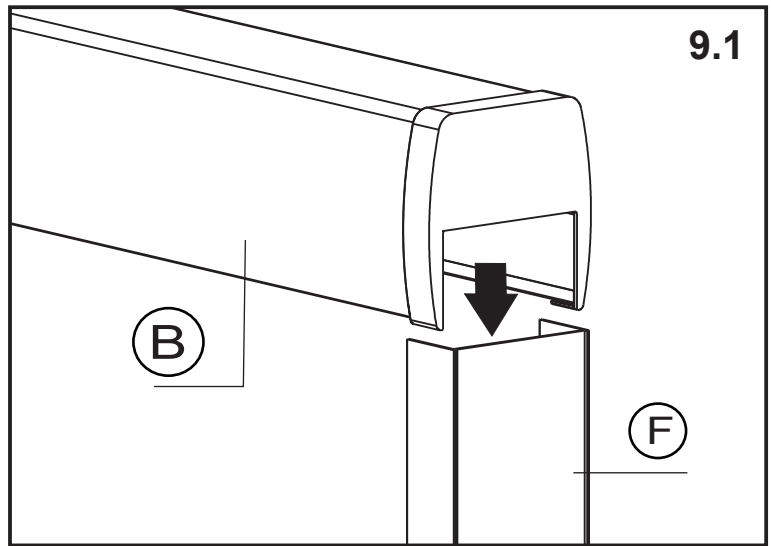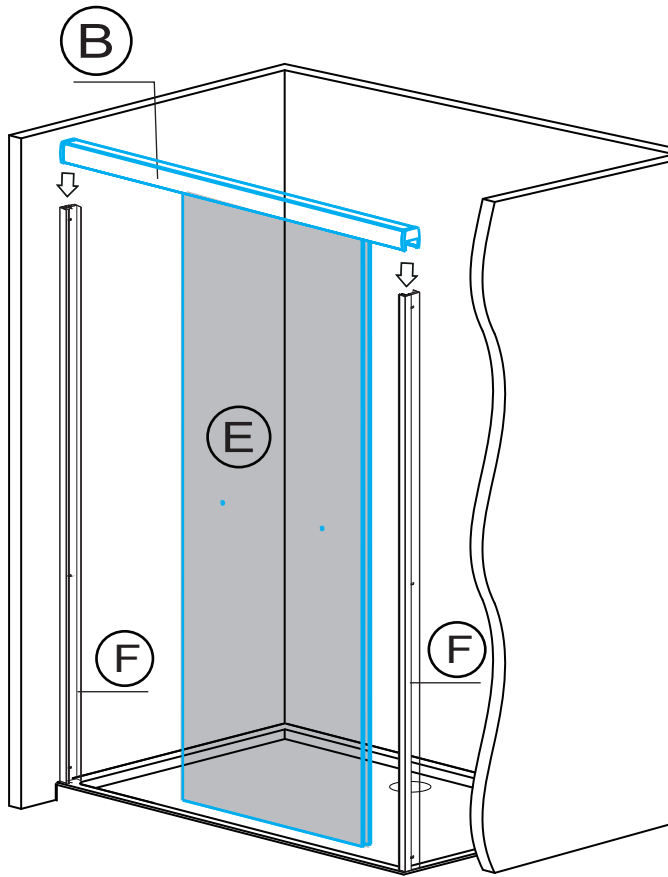

NOTE: If the door panels are misaligned or not vertical after installation, adjust the screw above the rollers to correct their position.

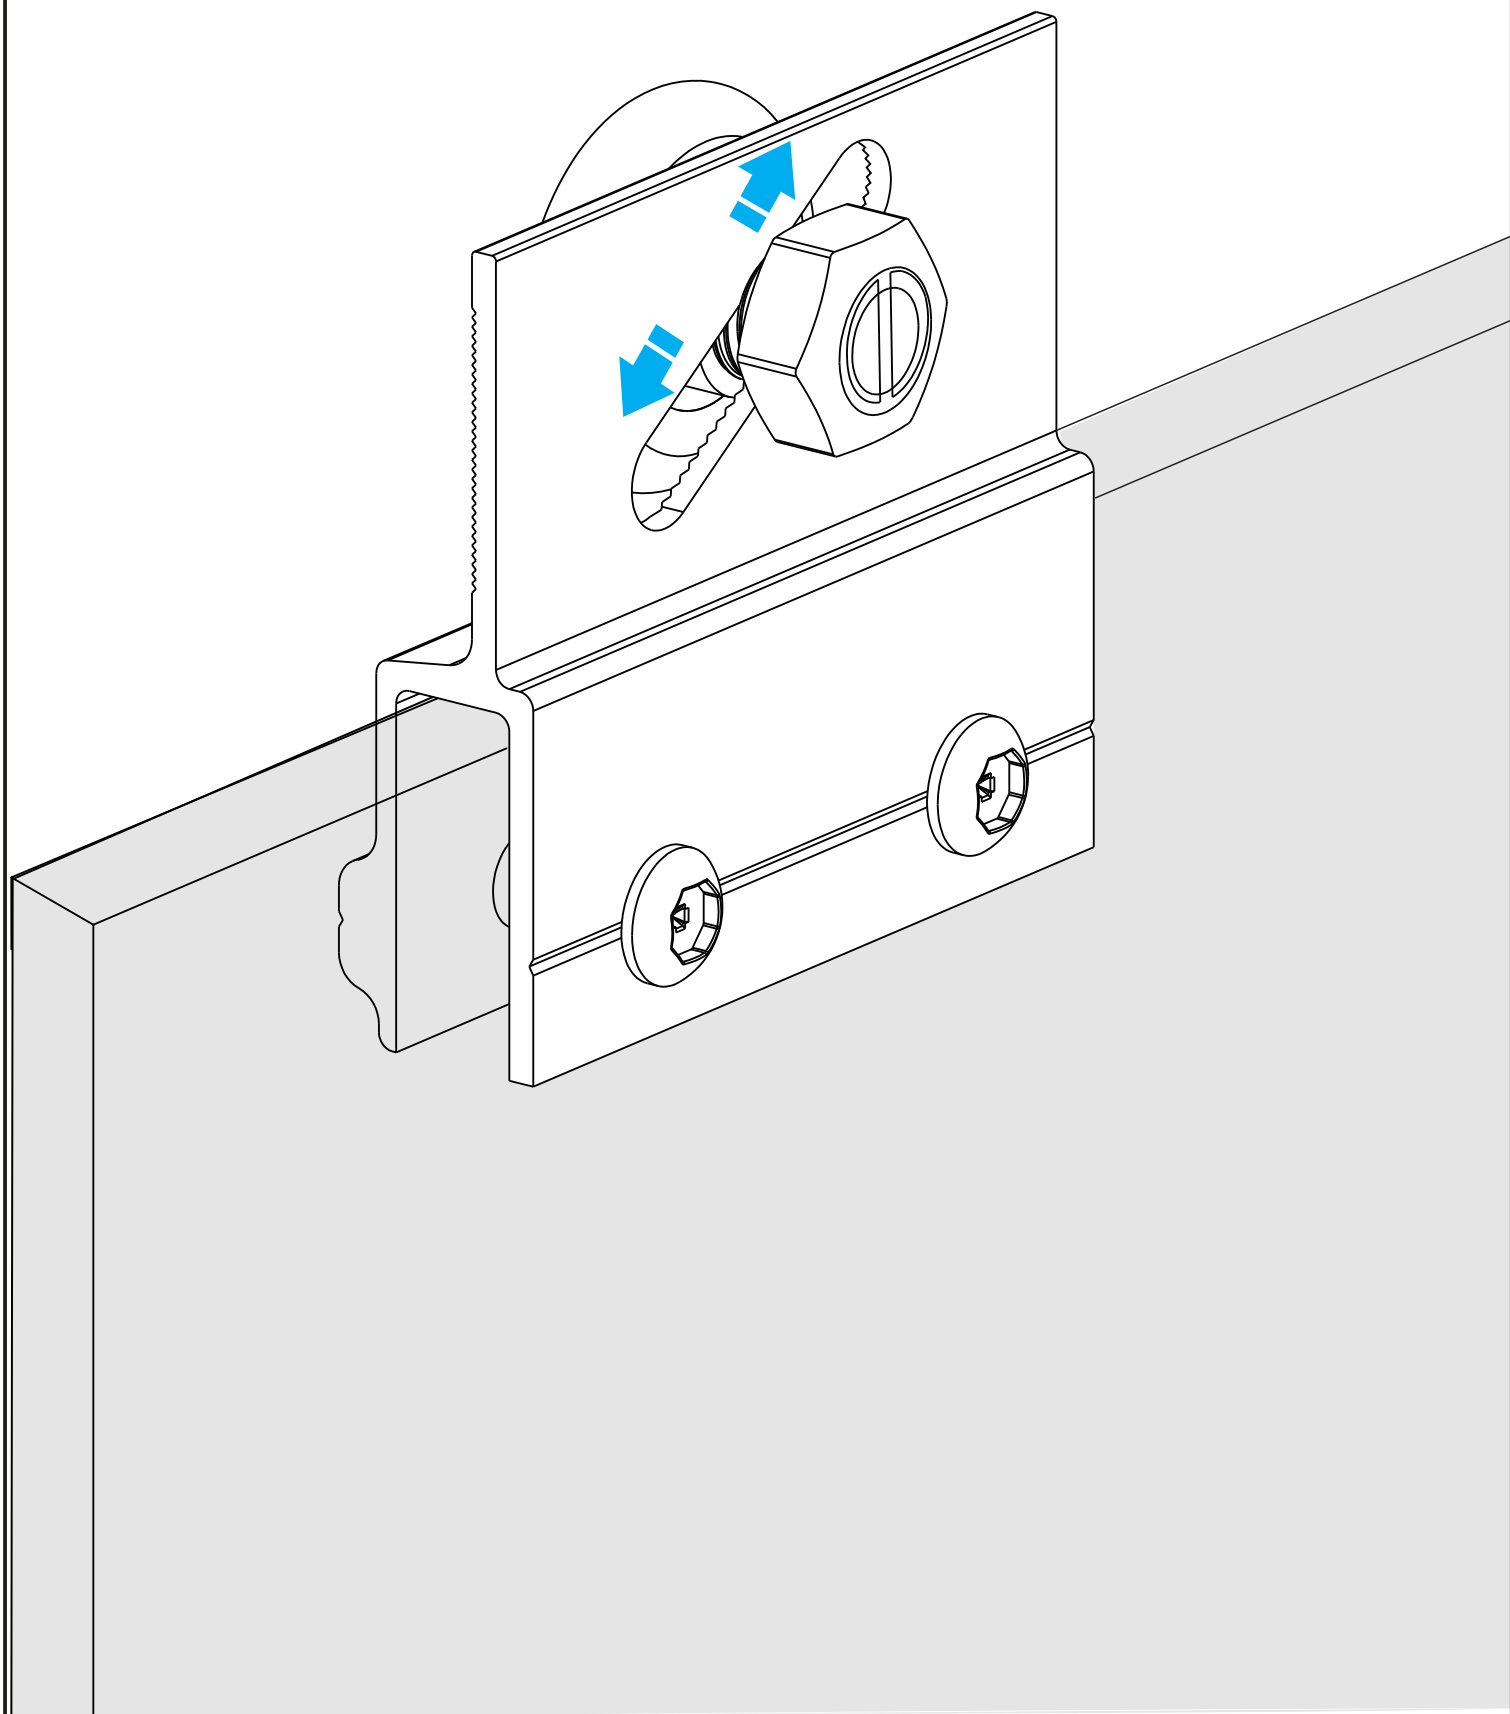


STEP 10

Attach Towel Bar to Door Panels


G




x2

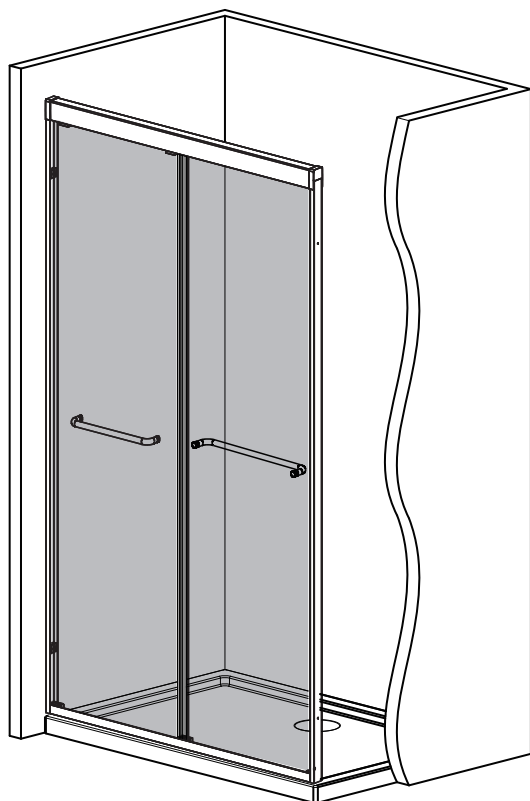

10.1

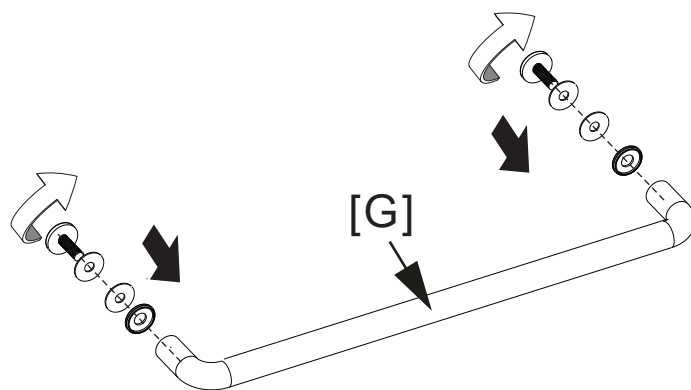

10.2

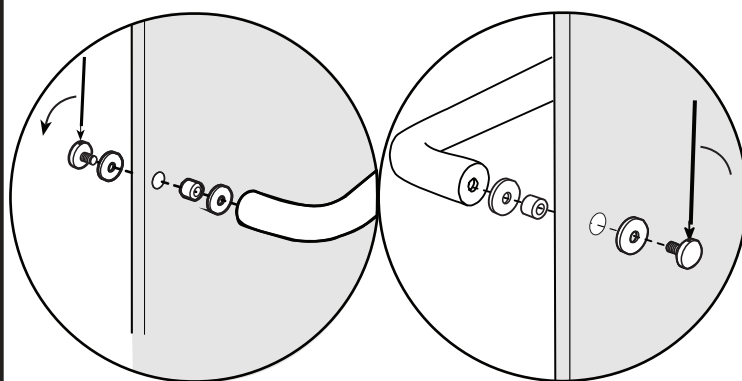

STEP 11

Sealing

NOTE

The surfaces need to be clean and free of debris before applying silicone.




NOTE

Make sure that the shower door is tightly closed and opens smoothly. Use silicone sealant to seal along the entire length of the Wall Jamb (F) and Bottom Track (L).



Allow 24 hours for the silicone to cure before using the shower.

24
hour

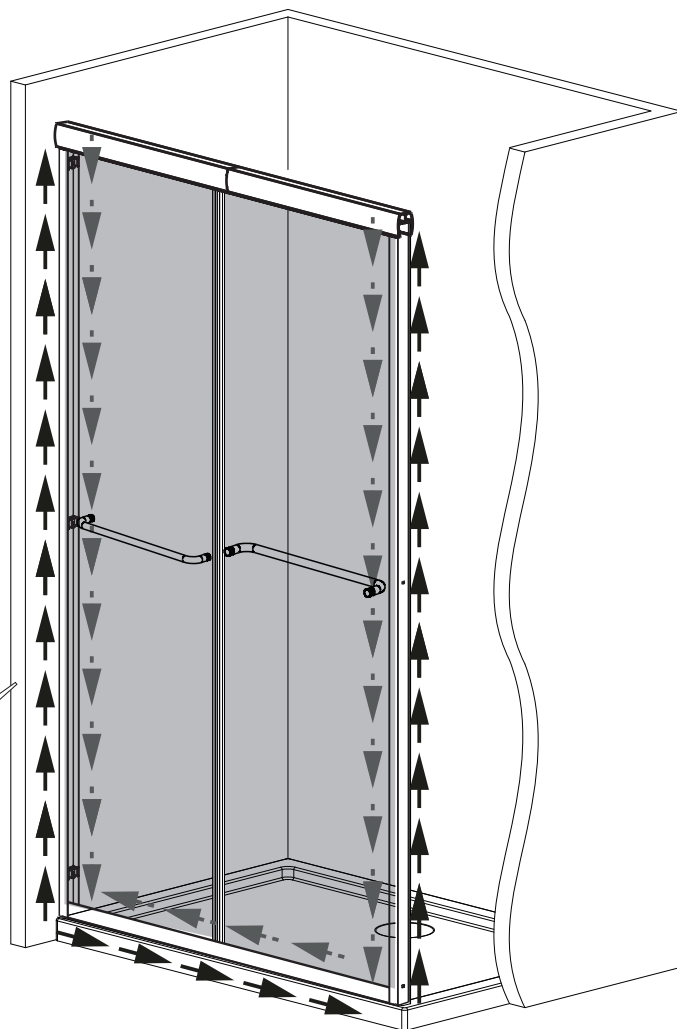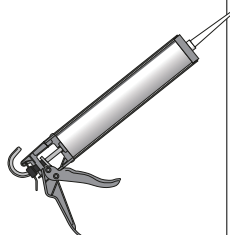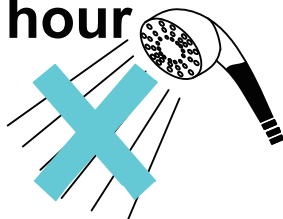

THANK YOU

We hope you enjoy
your purchase.

All of our products are crafted with an
obsessive attention to detail.

Any problem with installation,
please watch the video.

