



62" L-shaped Gaming Desk with LED

Assembly Instructions

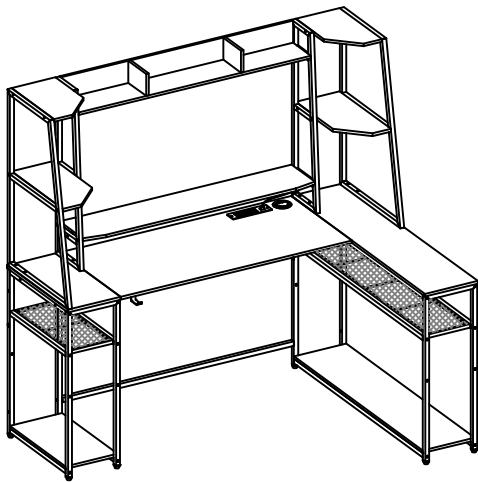


Option A

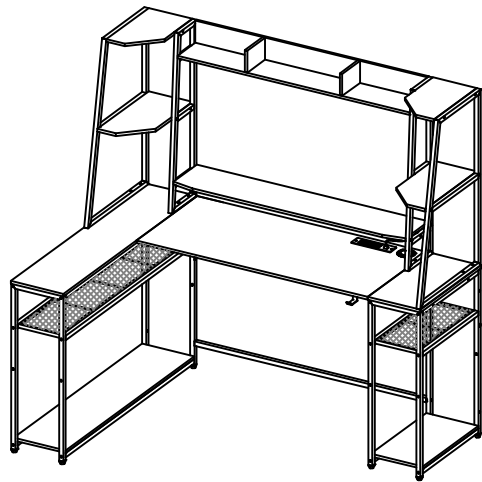














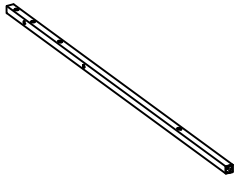
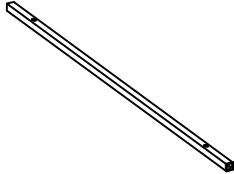




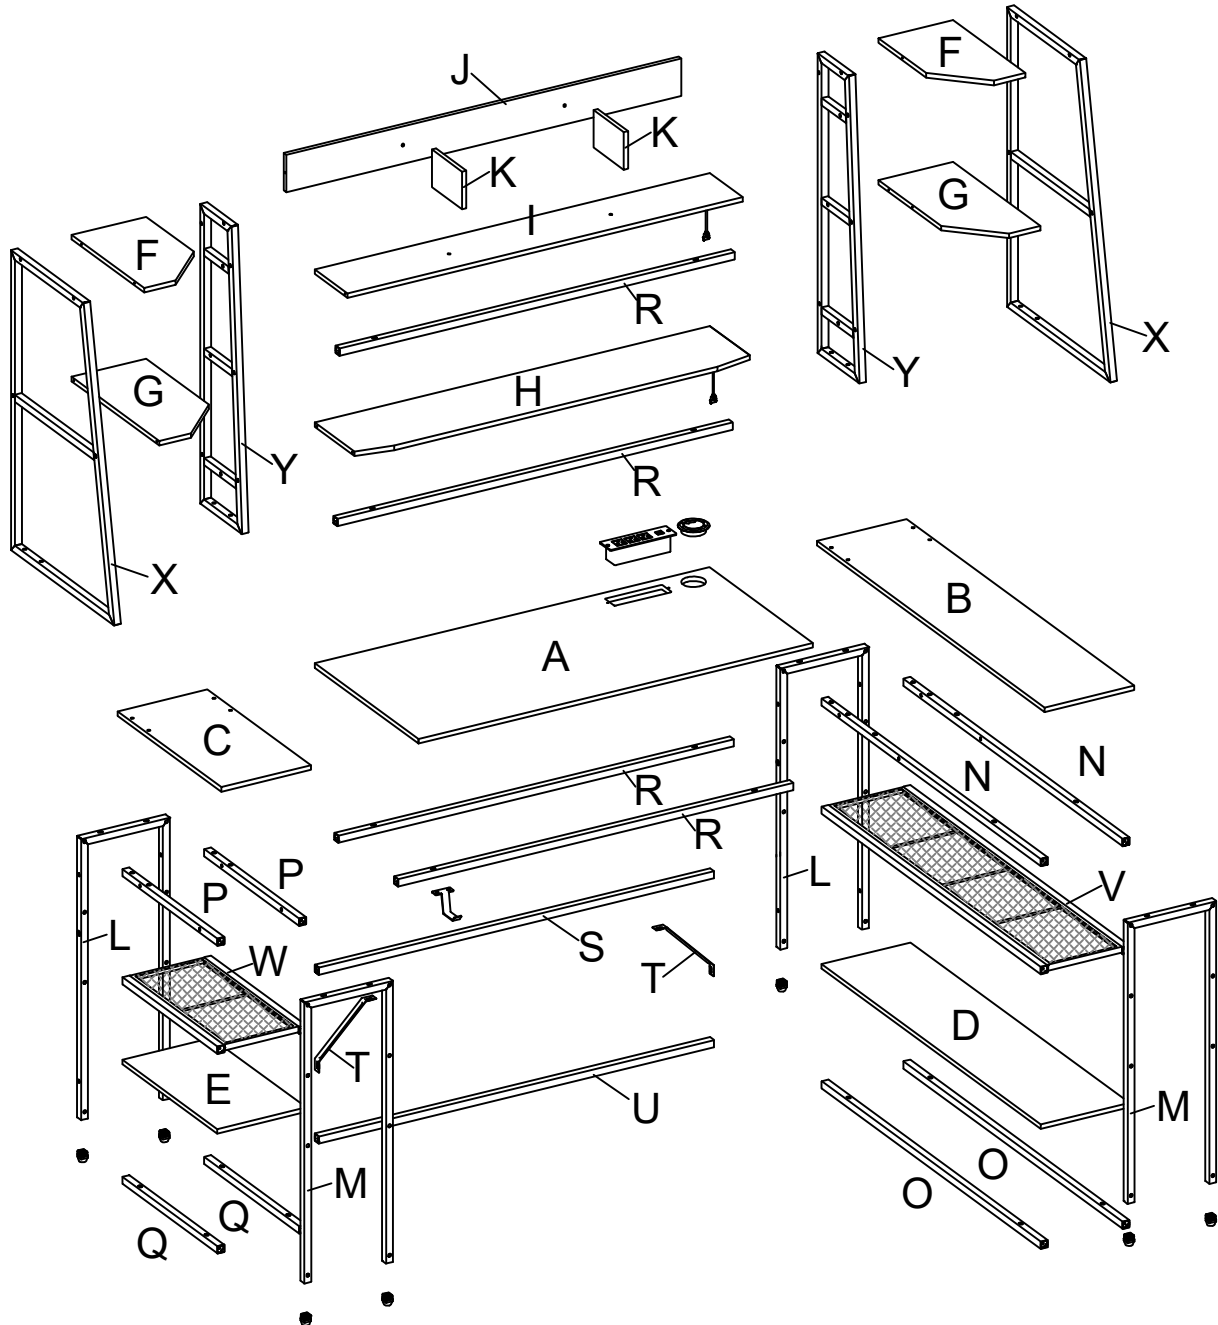

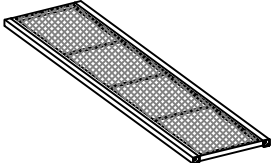
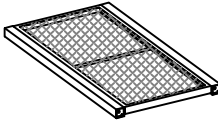


Option B

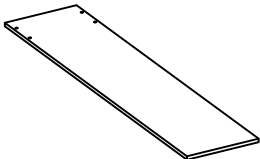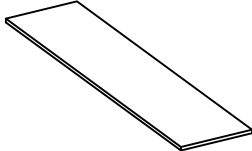Attention: Please ensure you have all parts before commencing assembly.
Please read all the instructions before commencing.














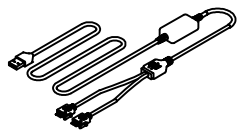

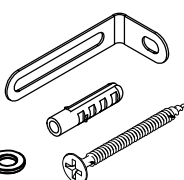


PART LIST



PART LIST


A x 1pc 	B x 1pc 	C x 1pc 	D x 1pc 
E x 1pc 	F x 2pcs 	G x 2pcs 	H x 1pc 
I x 1pc 	J x 1pc 	K x 2pcs 	L x 2pcs 
M x 2pcs 	N x 2pcs 	O x 2pcs 	P x 2pcs 
Q x 2pcs 	R x 4pcs 	S x 1pc 	T x 2pcs 
U x 1pc 	V x 1pc 	W x 1pc 	X x 2pcs 
Y x 2pcs 			

HARDWARE LIST

<p>①</p>  <p>M6x35 36 pcs</p>	<p>②</p>  <p>M6x27 28 pcs</p>	<p>③</p>  <p>M6x10 6 pcs</p>	<p>④</p>  <p>M6x40 4 pcs</p>
<p>⑤</p>  <p>M5x45 22 pcs</p>	<p>⑥</p>  <p>M6x45 8 pcs</p>		
<p>⑦</p>  <p>8 pcs</p>	<p>⑧</p>  <p>1 pc</p>	<p>⑨</p>  <p>8 pcs</p>	<p>⑩</p>  <p>1 pc</p>
<p>⑪</p>  <p>M3x12 2 pcs</p>	<p>⑫</p>  <p>1 pc</p>	<p>⑬</p>  <p>RF Remote Control 1 pc</p>	<p>⑭</p>  <p>1 pc</p>
<p>⑮</p>  <p>3 pcs</p>	<p>⑯</p>  <p>M4x40 2 pcs</p>	<p>⑰</p>  <p>M4 1 pc</p>	<p>⑱</p>  <p>1 pc</p>


Please count and verify all parts before assembly .

STEP 1

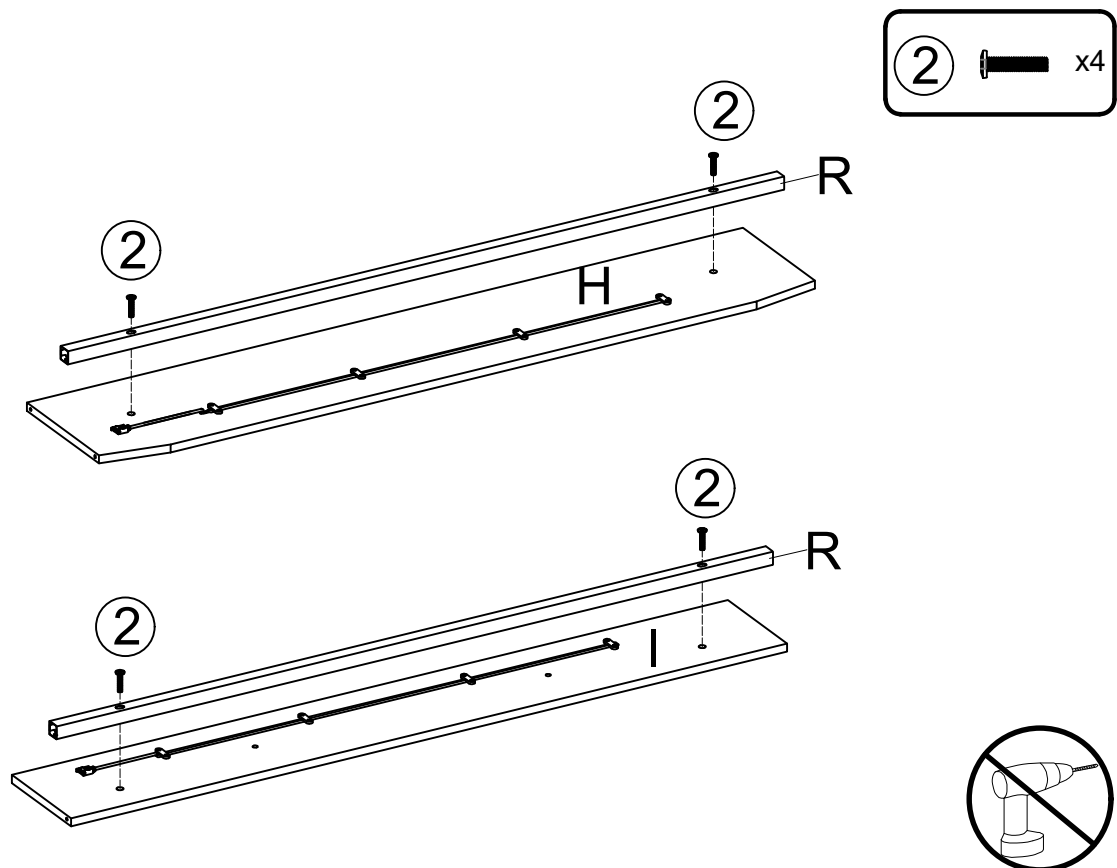


STEP 2

Keep the holes of Part Ks and Part I toward this direction as shown.

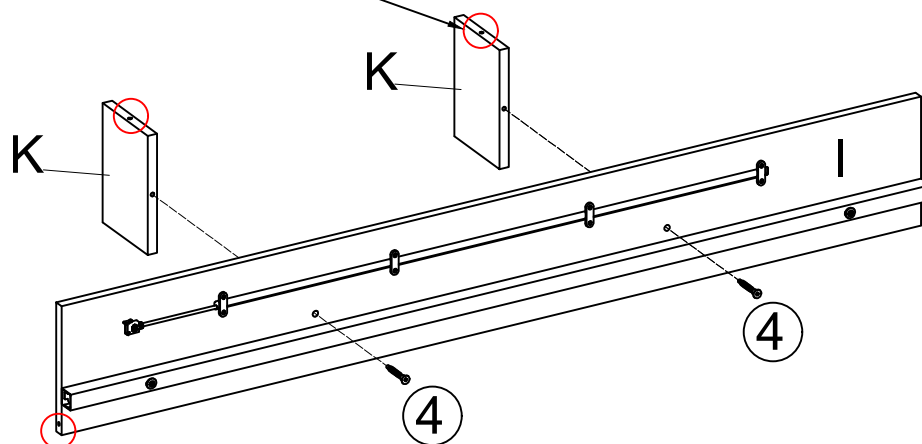


STEP 3

④  x2

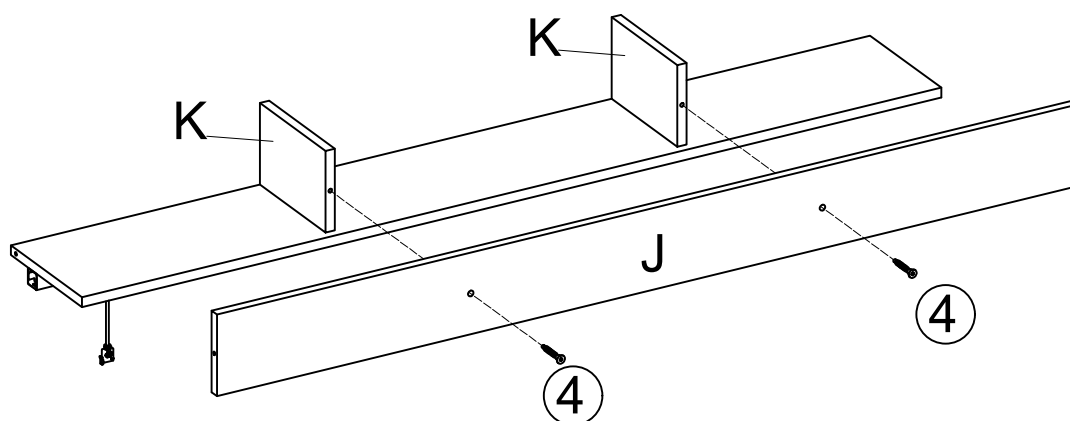


STEP 4


①  x4

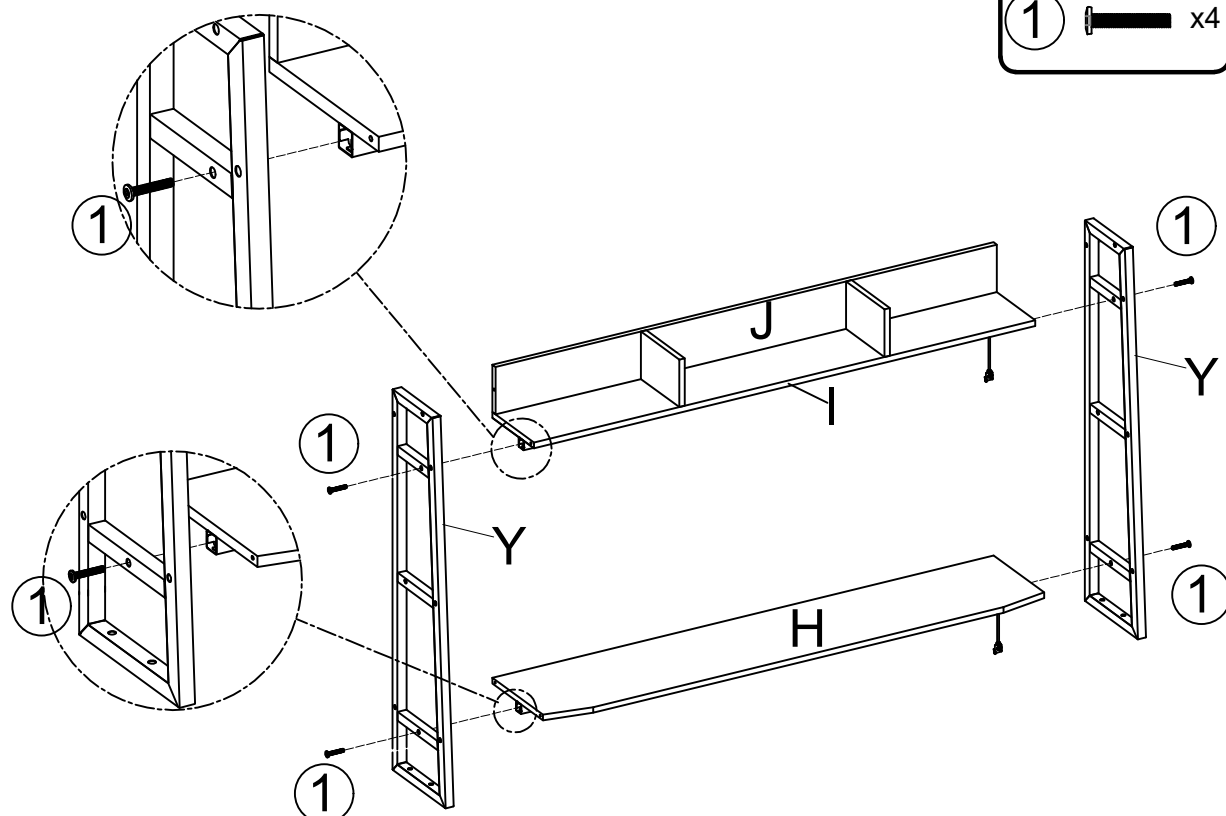


STEP 5

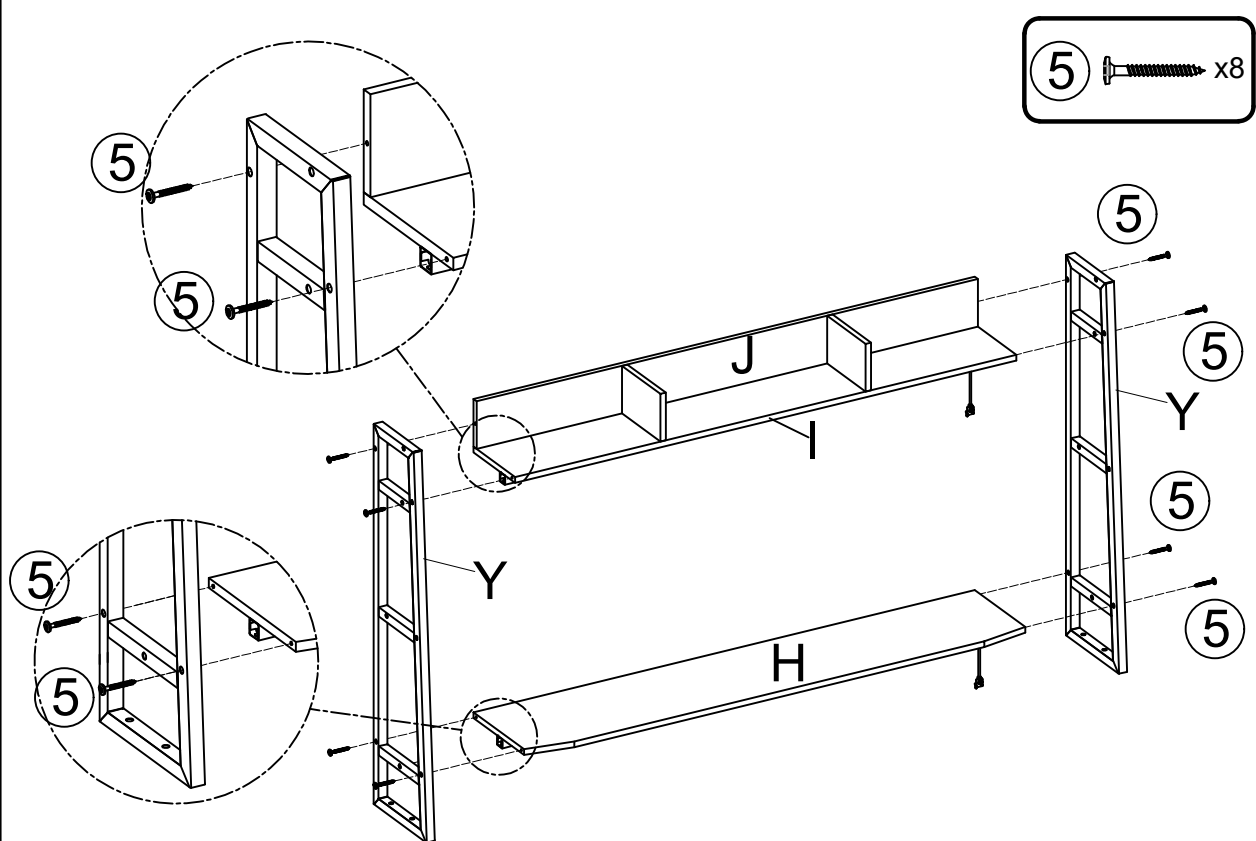

STEP 6

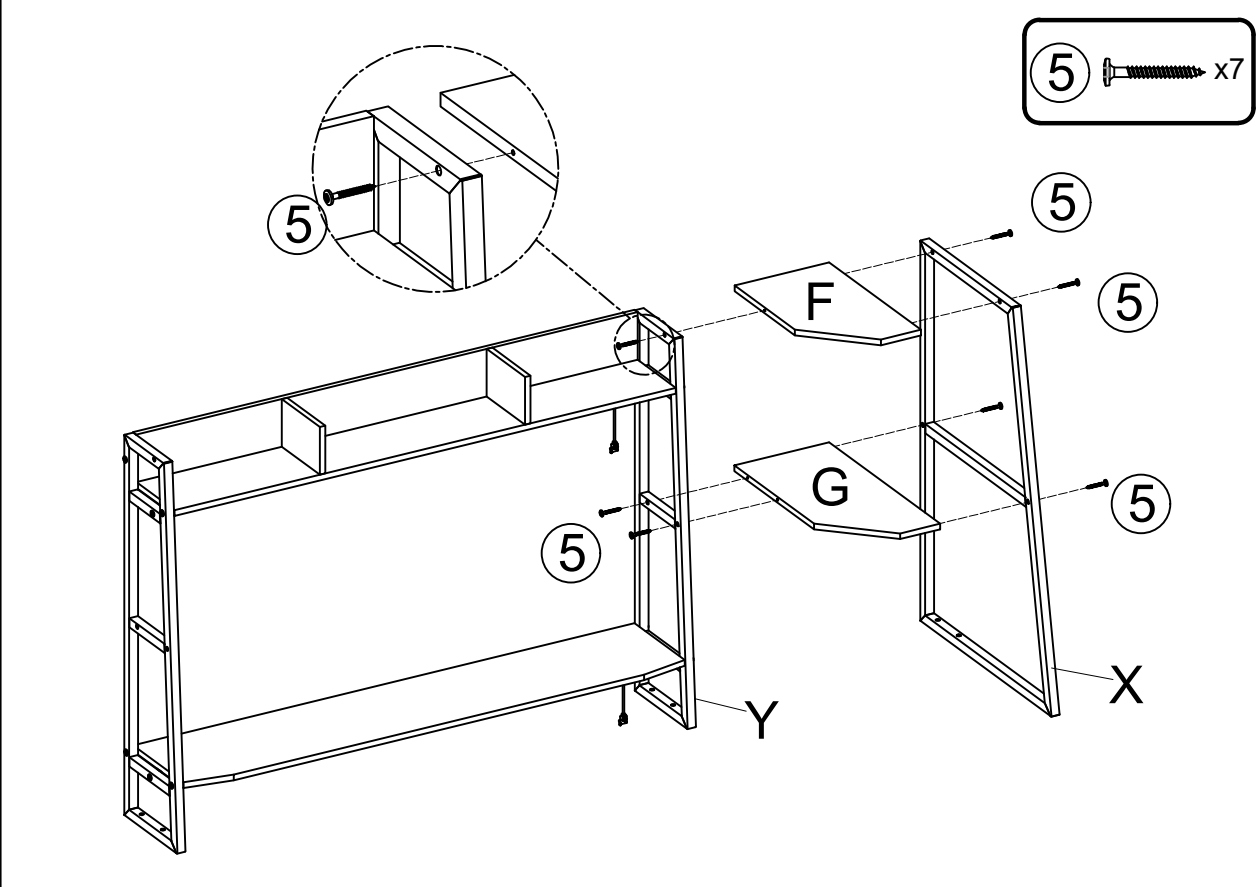


STEP 7

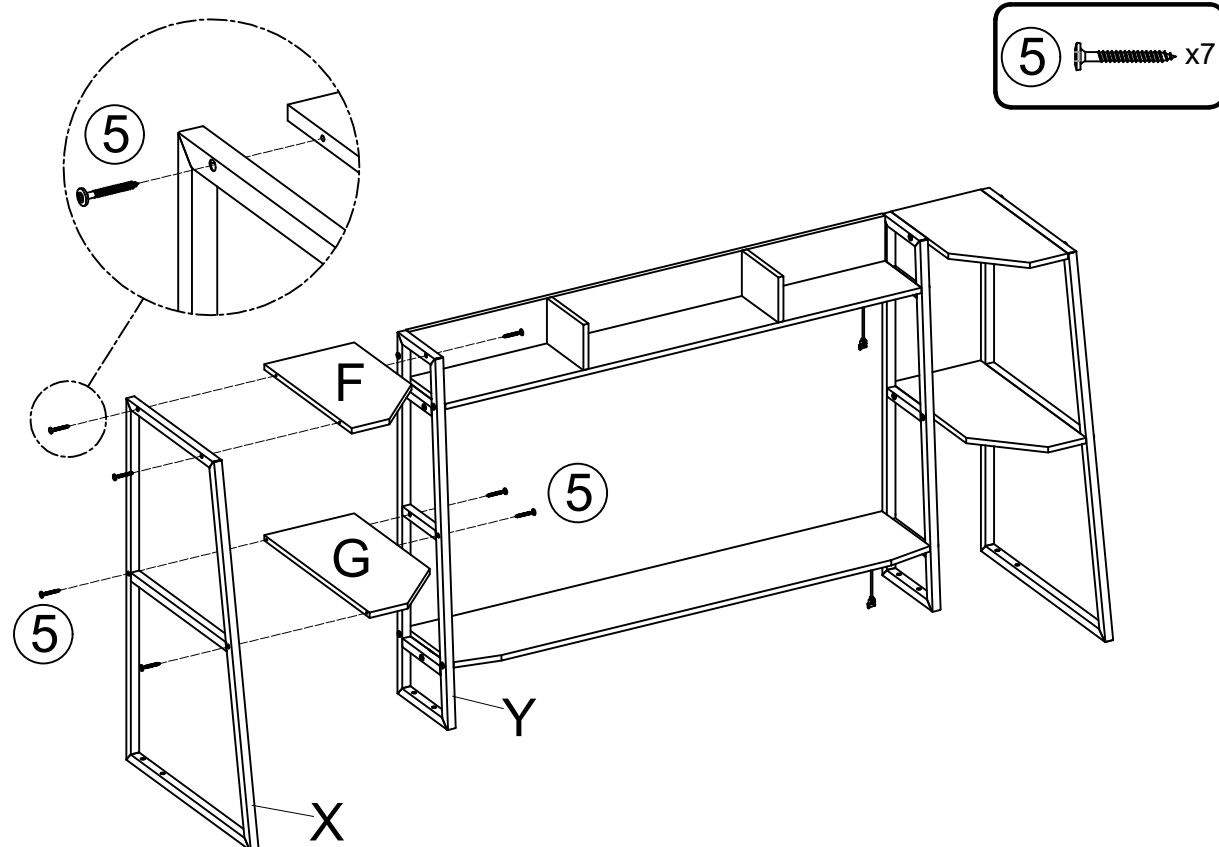


STEP 8


Please use a hammer or solid tools
(not included) to knock the footpads
into the frame.

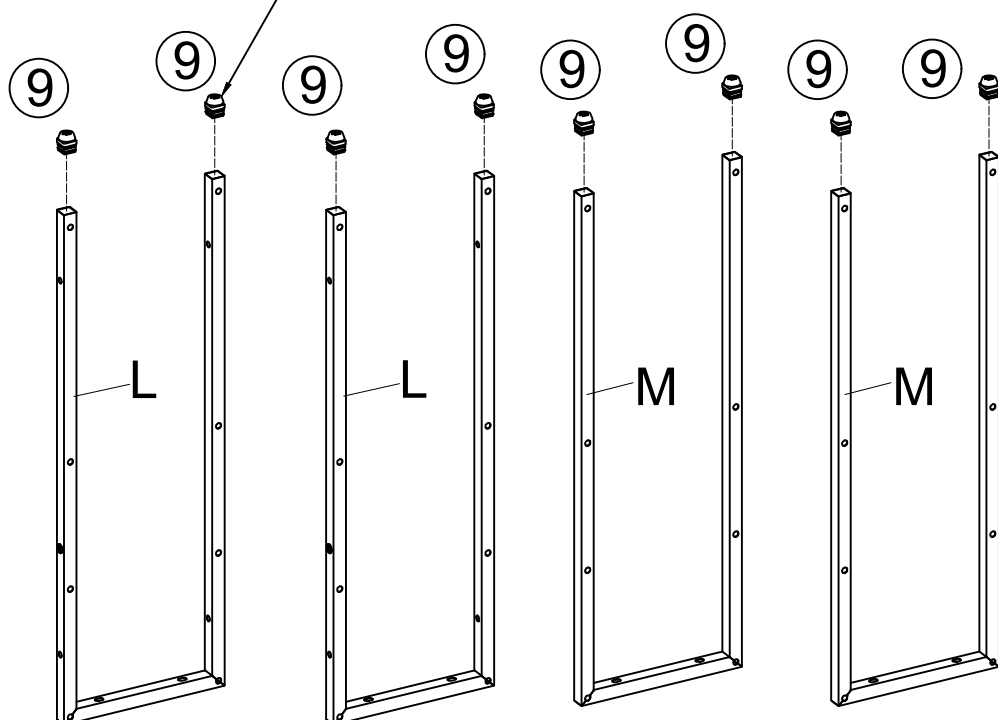


STEP 9

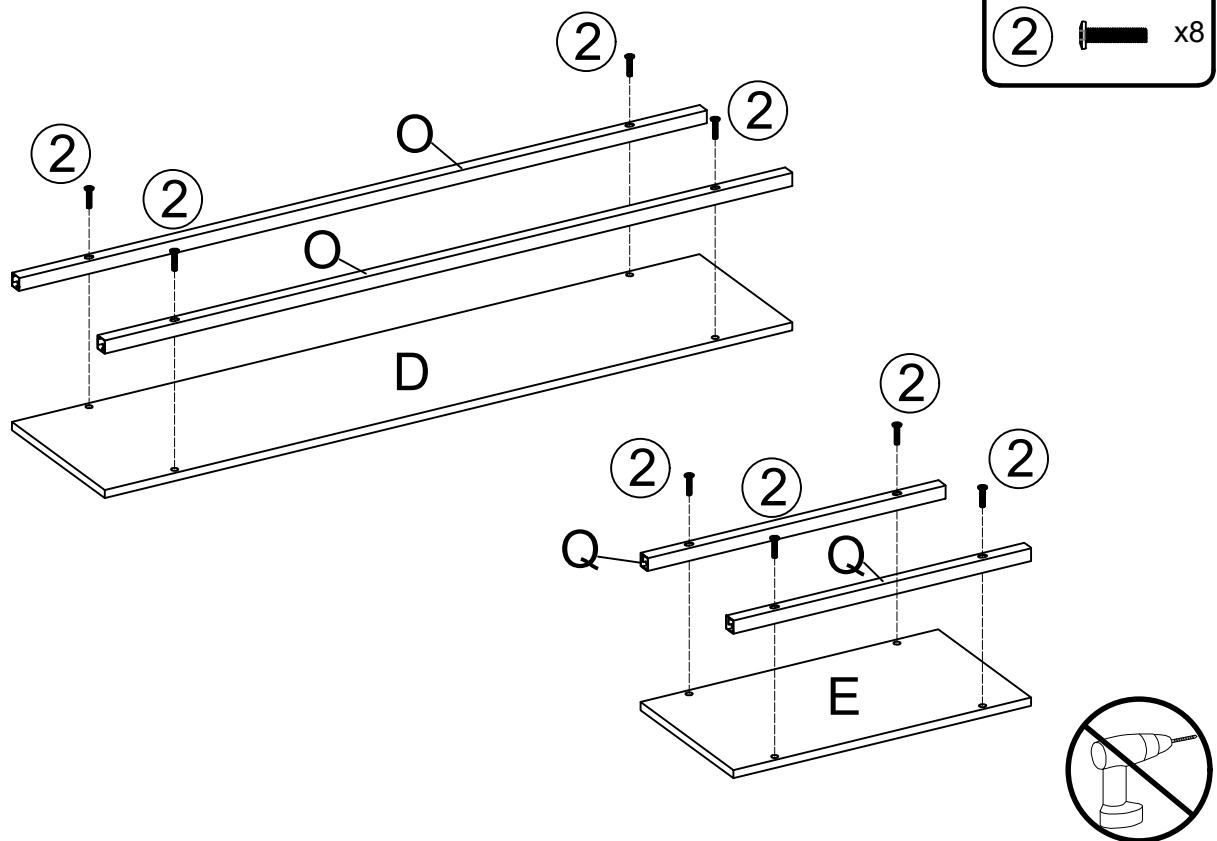


STEP 10

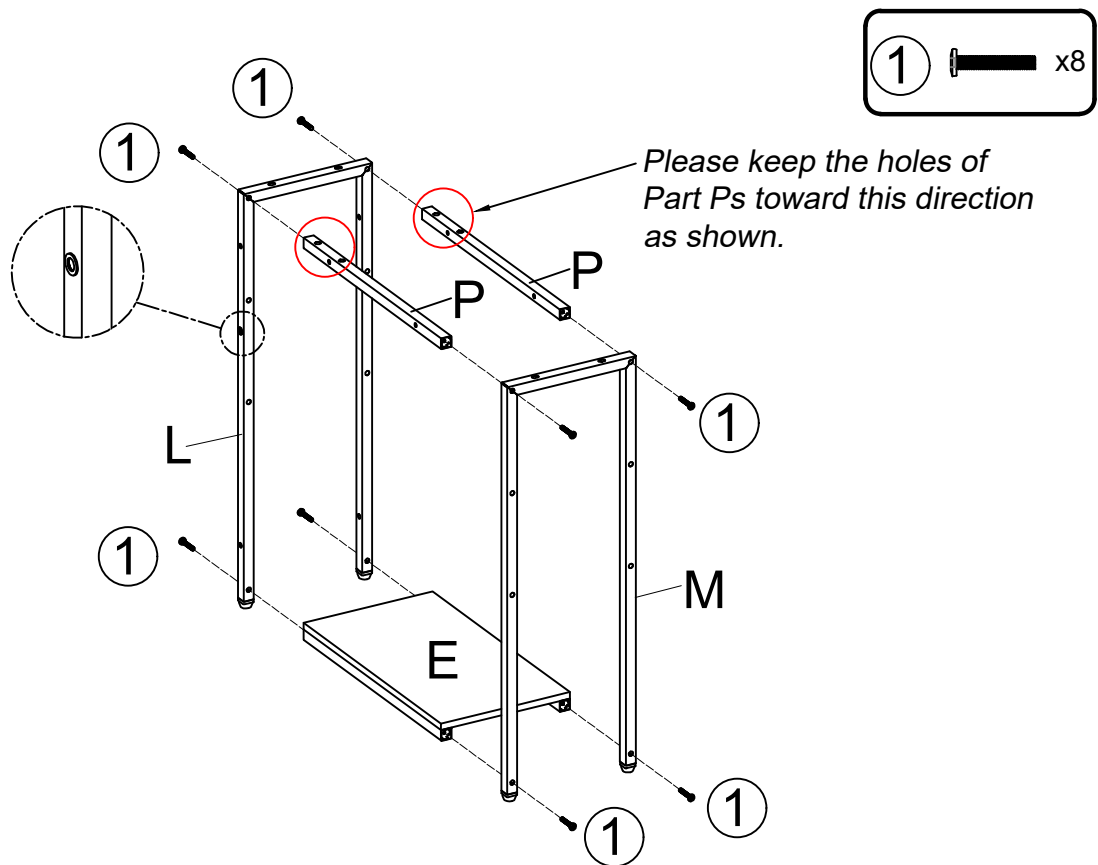

STEP 11

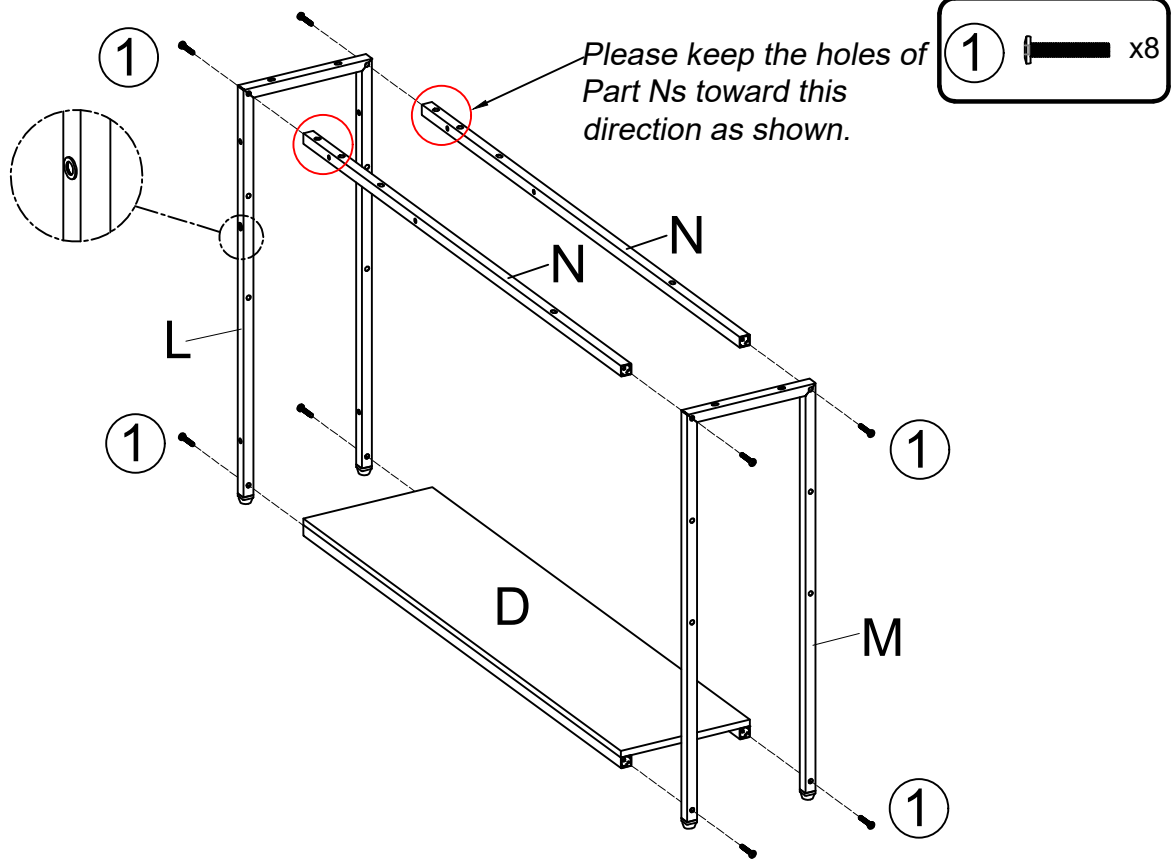


STEP 12

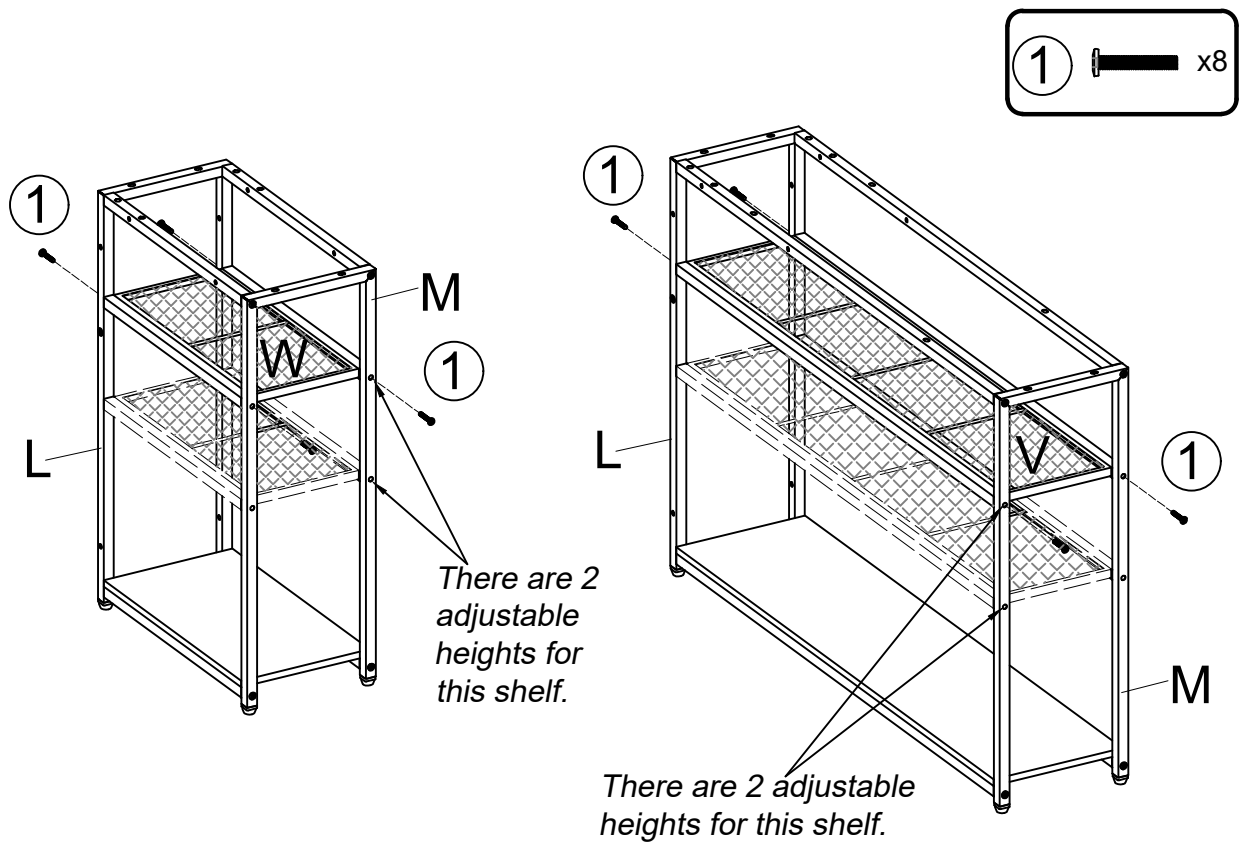


STEP 13


Option A

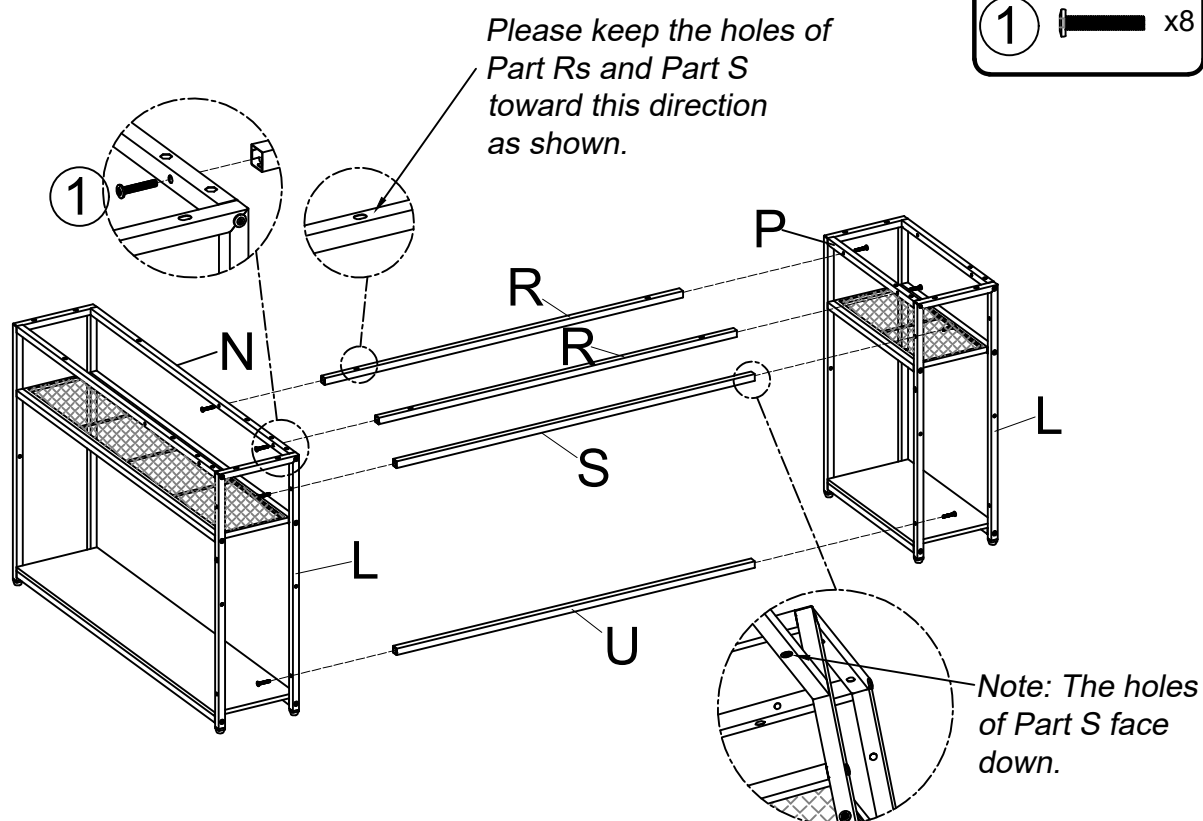


STEP 14

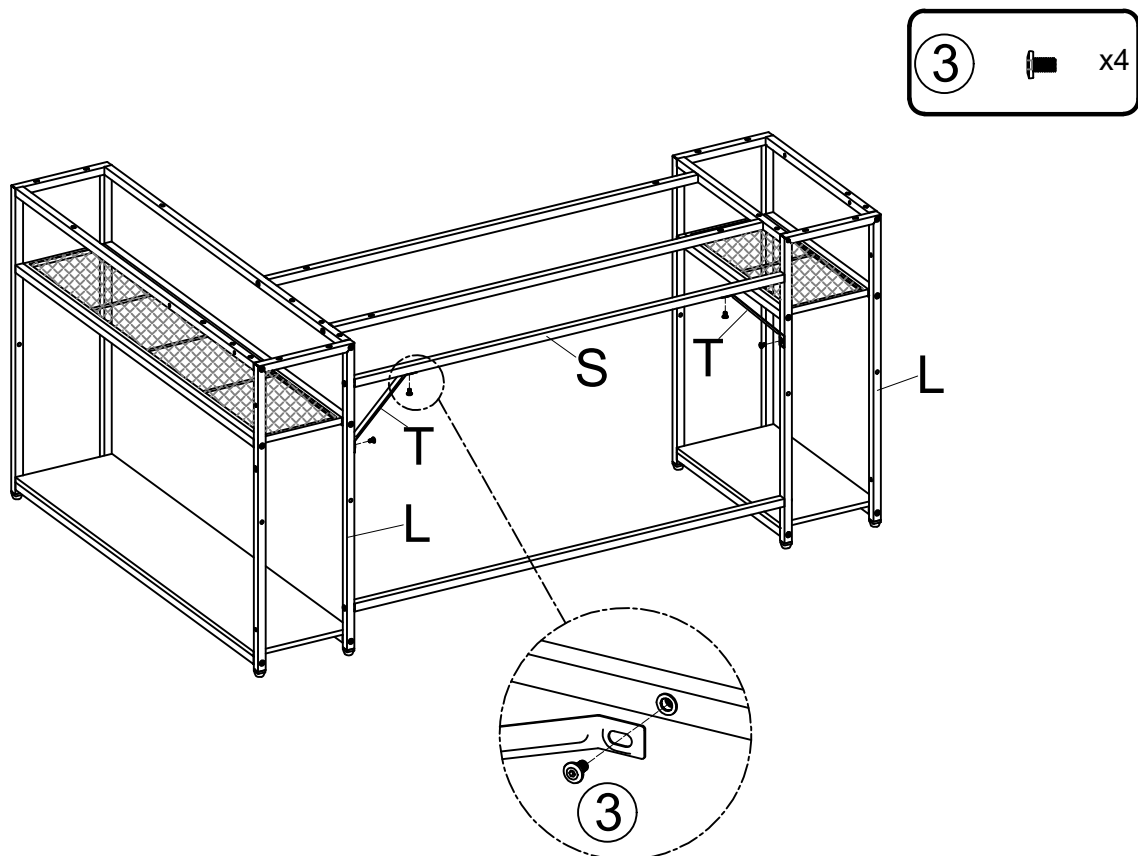

STEP 15

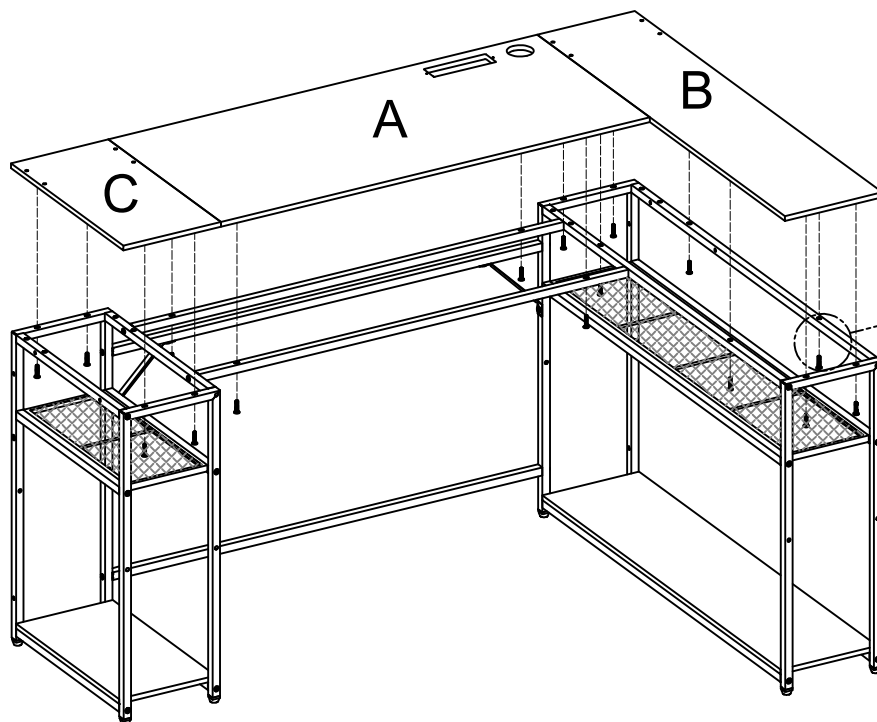

(2)  x16




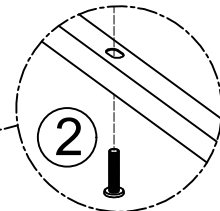


The holes of the support bar have flexible space. Don't fully tighten the screws until aligning all of the top panels.



STEP 16

Note: The cable management holes can be completely detached as shown below.

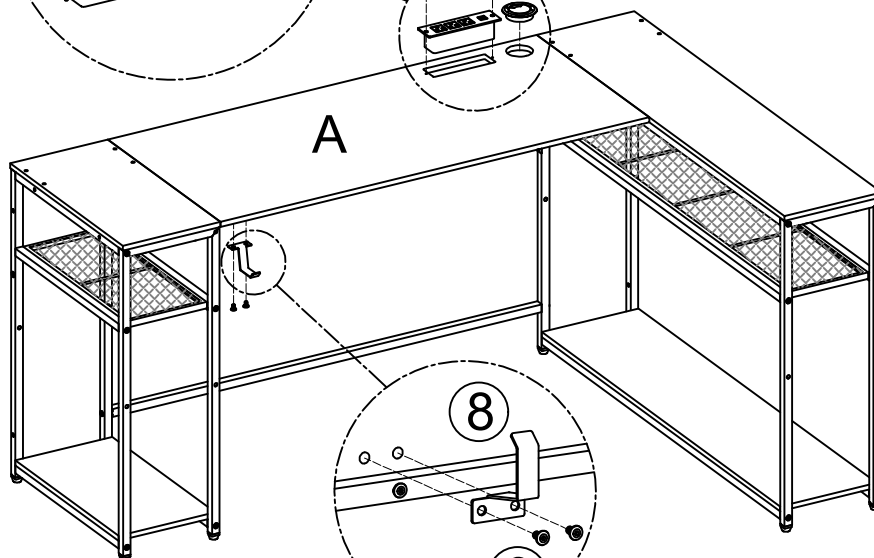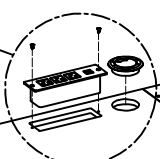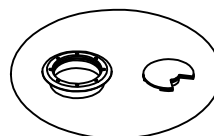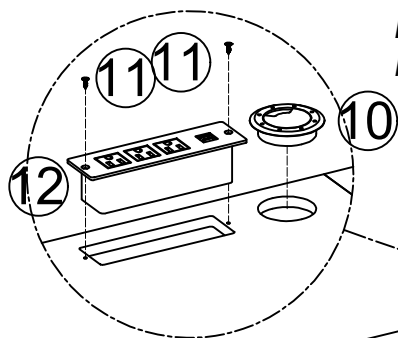


(3)  x2

(8)  x1




(10)  x1

(11)  x2


(12)  x1








STEP 17

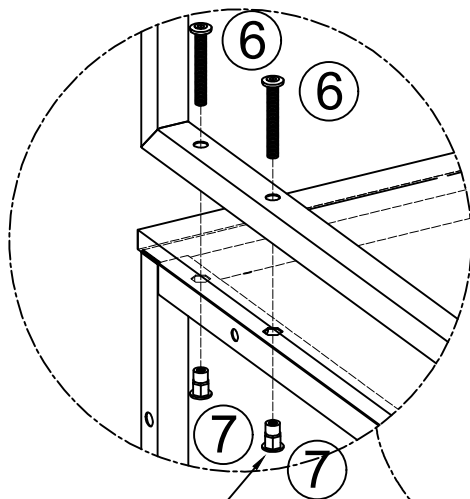

Note: Please insert a hex nut into the hole from the inner side and use your fingers to hold it, then fix the screws from outside.

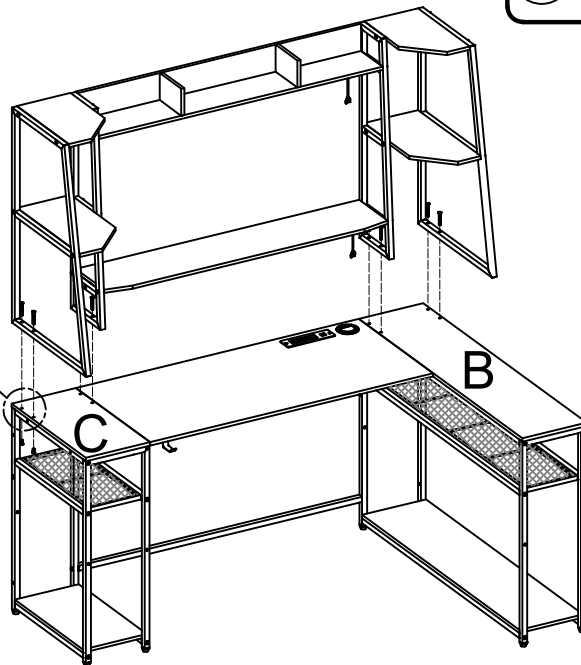


STEP 18

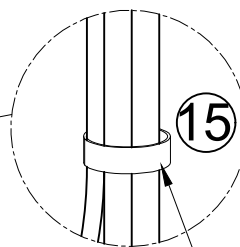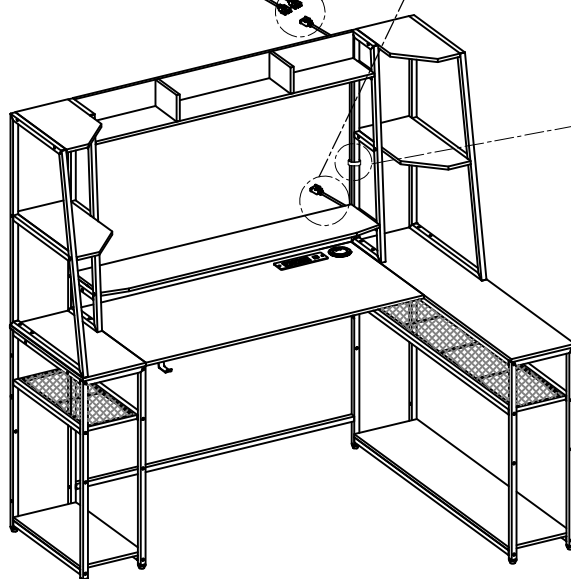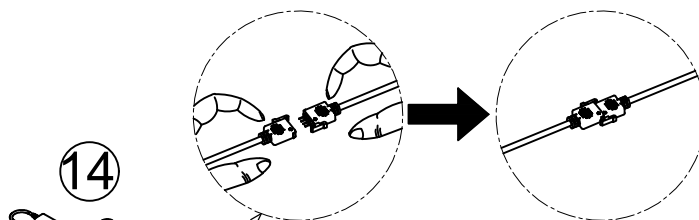

Hook-and-loop fastener "15" can wrap the wires, making your desk look neater.


STEP 19



TIPPING RESTRAINT HARDWARE


Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

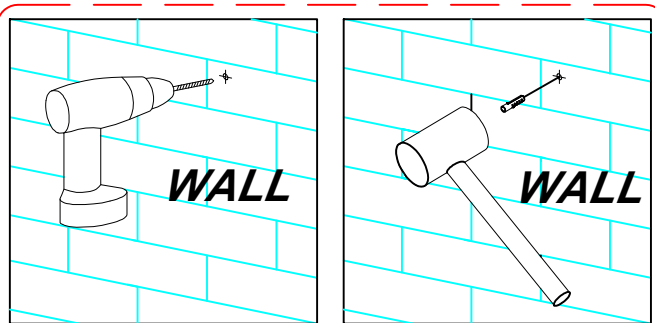

Step 1

Step 2

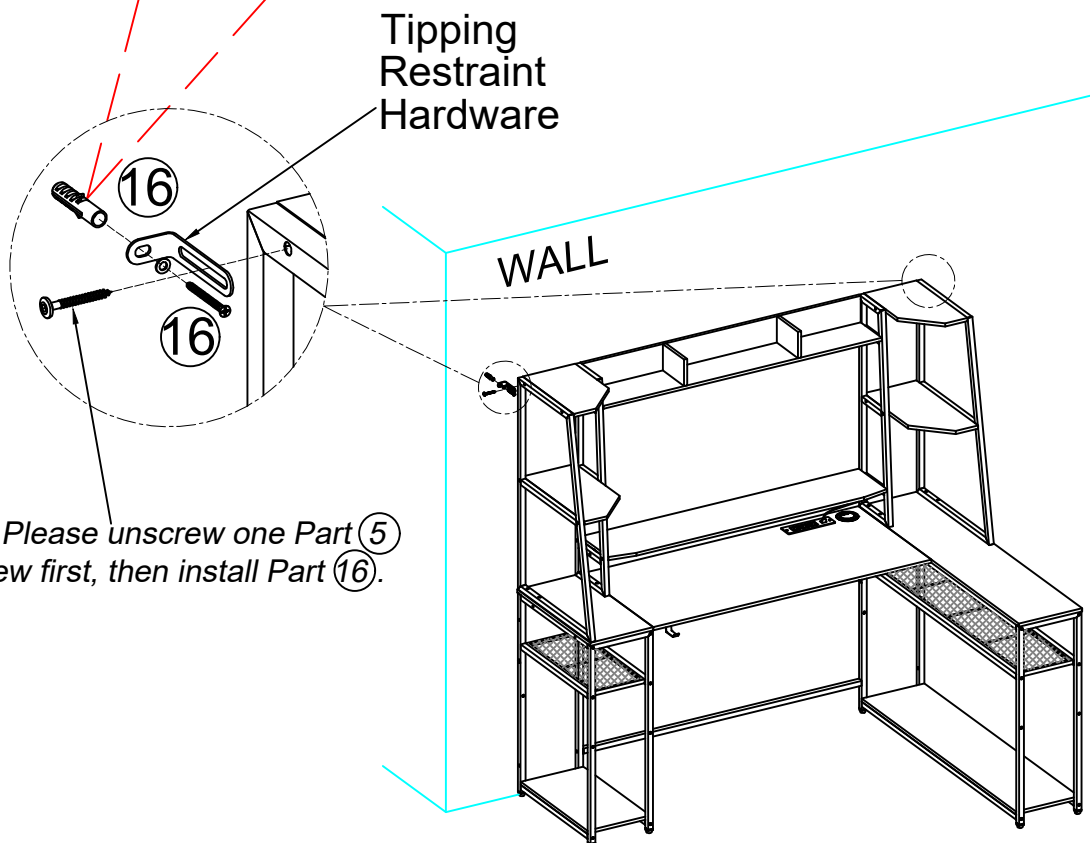


STEP 13

Option B




Please keep the holes of Part Rs and Part S toward this direction as shown.

1 x8

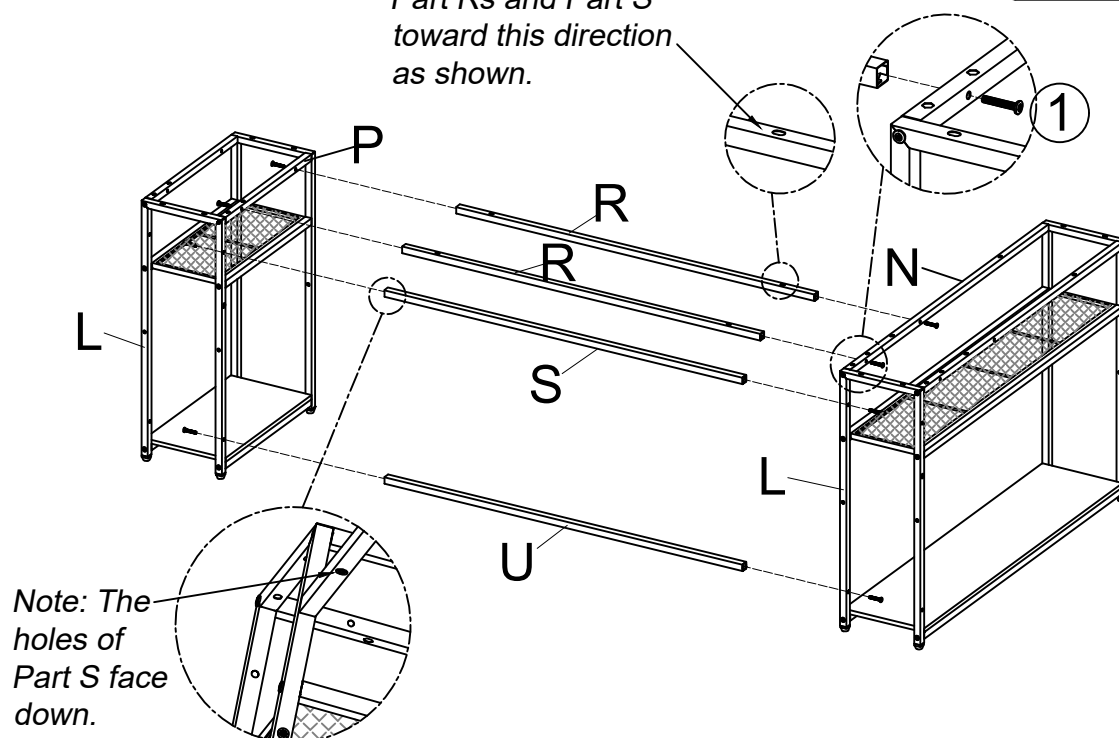


STEP 14

3 x4

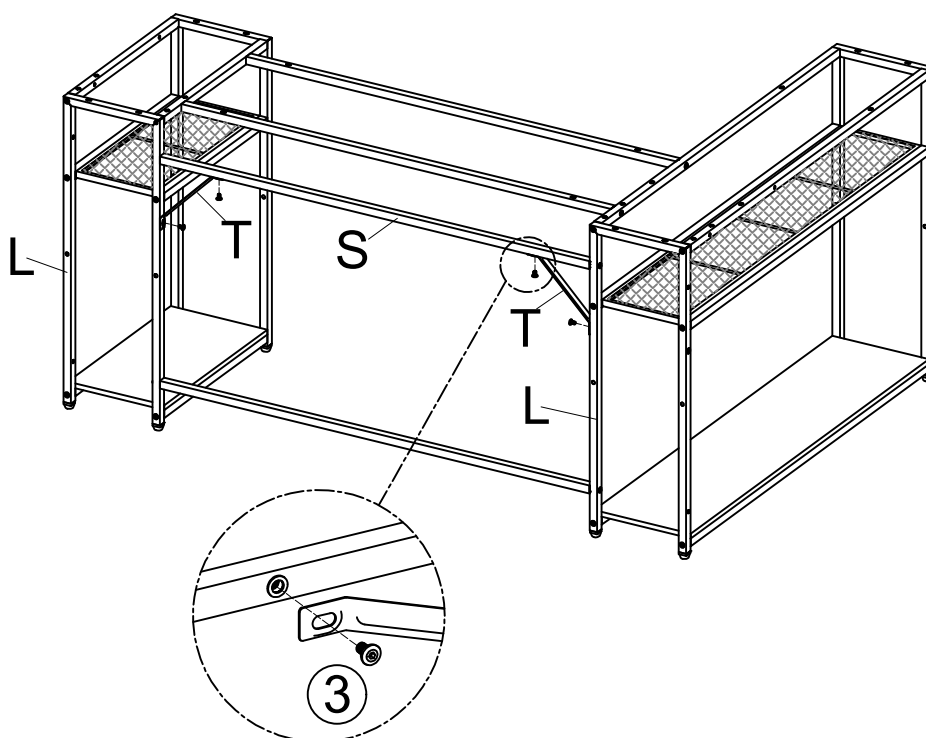


STEP 15

② x16




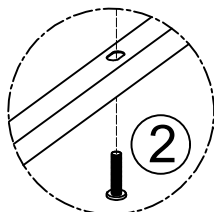


The holes of the support bar have flexible space. Don't fully tighten the screws until aligning all of the top panels.

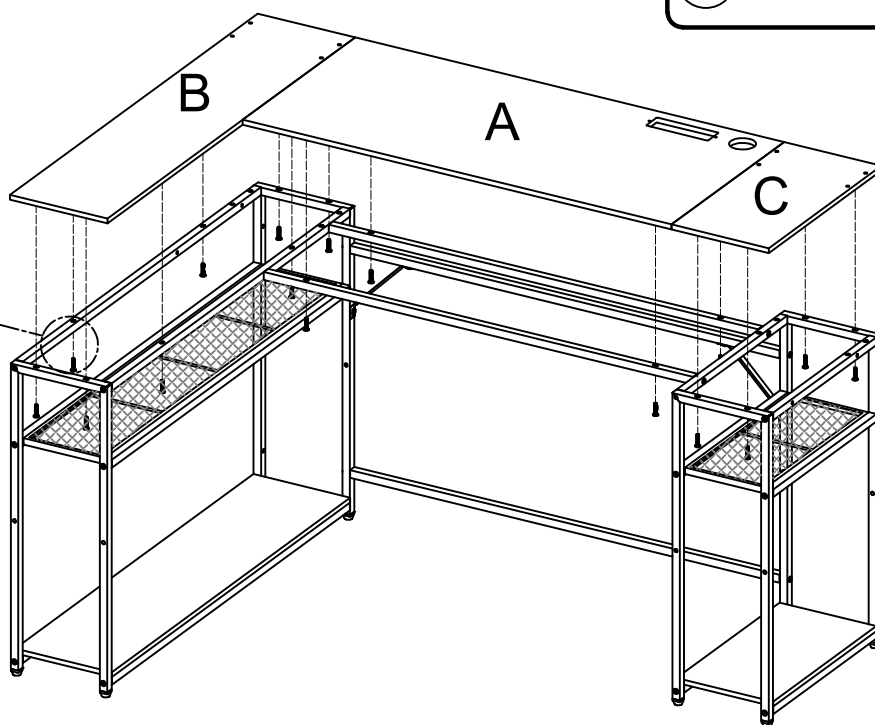

STEP 16

Note: The cable management holes can be completely detached as shown below.

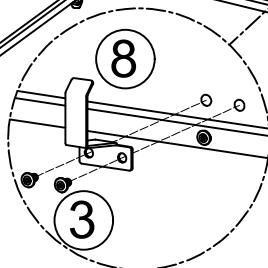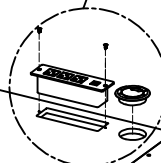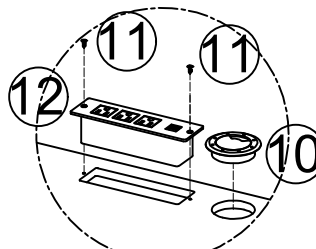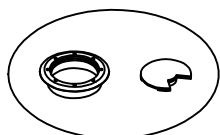


③ x2

⑧ x1





⑩ x1

⑪ x2

⑫ x1





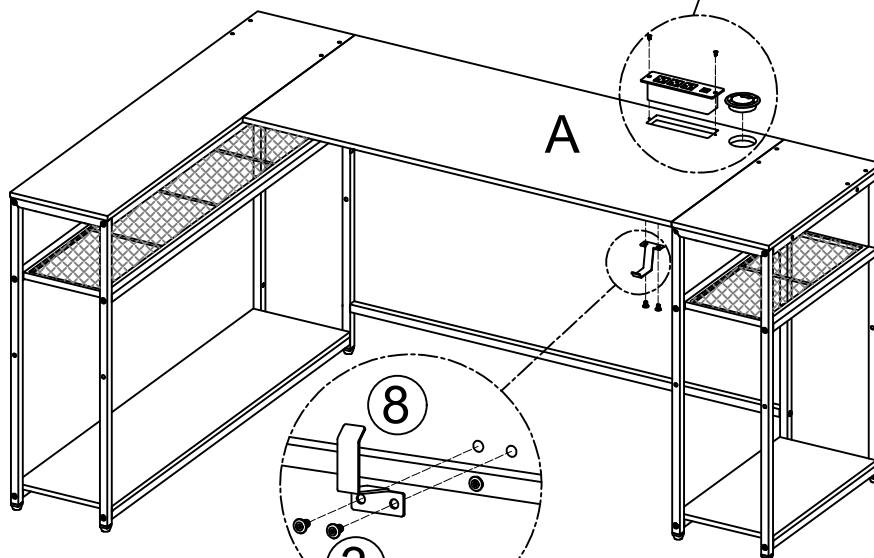


STEP 17

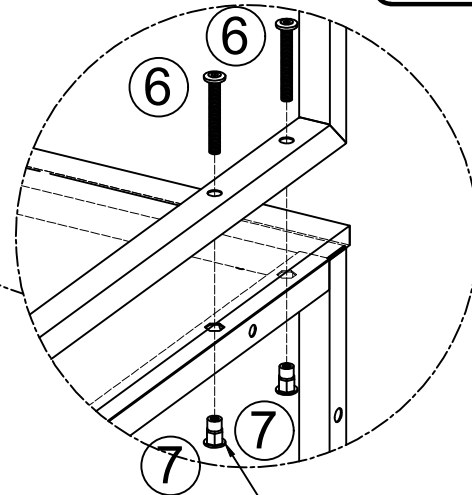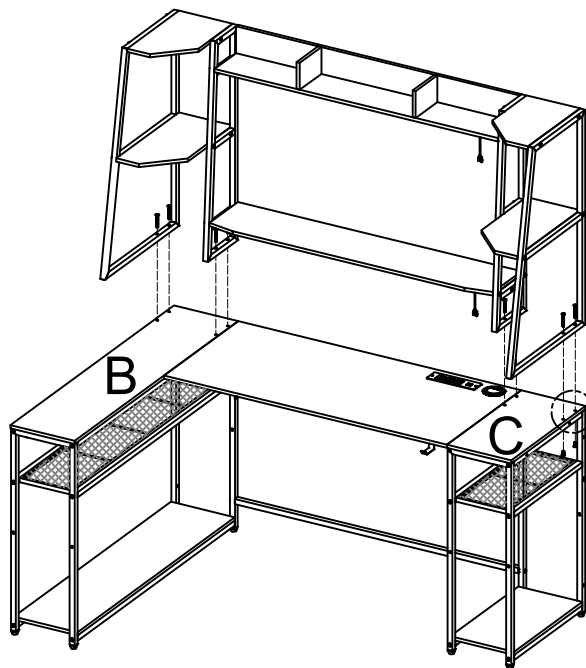


Note: Please insert a hex nut into the hole from the inner side and use your fingers to hold it, then fix the screws from outside.

STEP 18

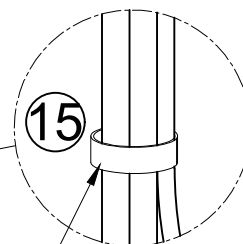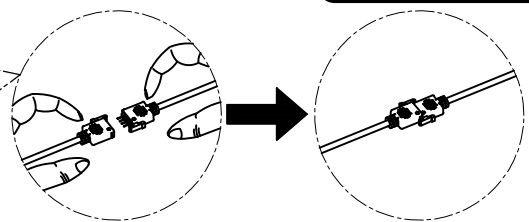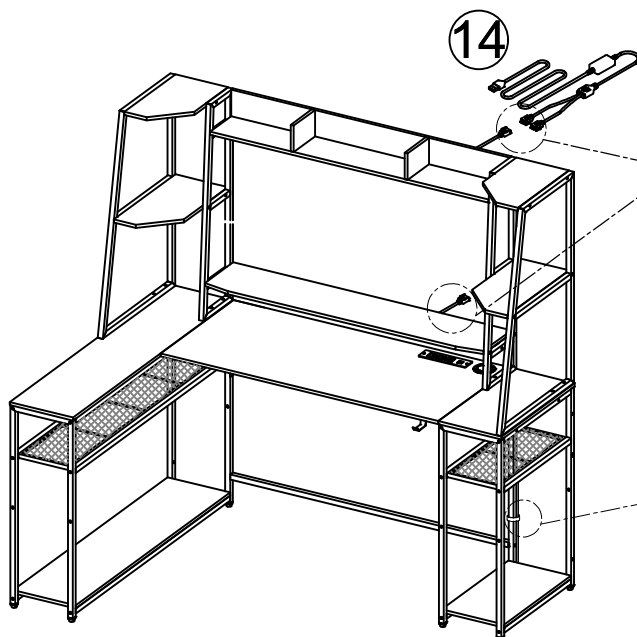

Hook-and-loop fastener "15" can wrap the wires, making your desk look neater.

STEP 19



TIPPING RESTRAINT HARDWARE

Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

