


vanity table

INSTALLATION MANUAL

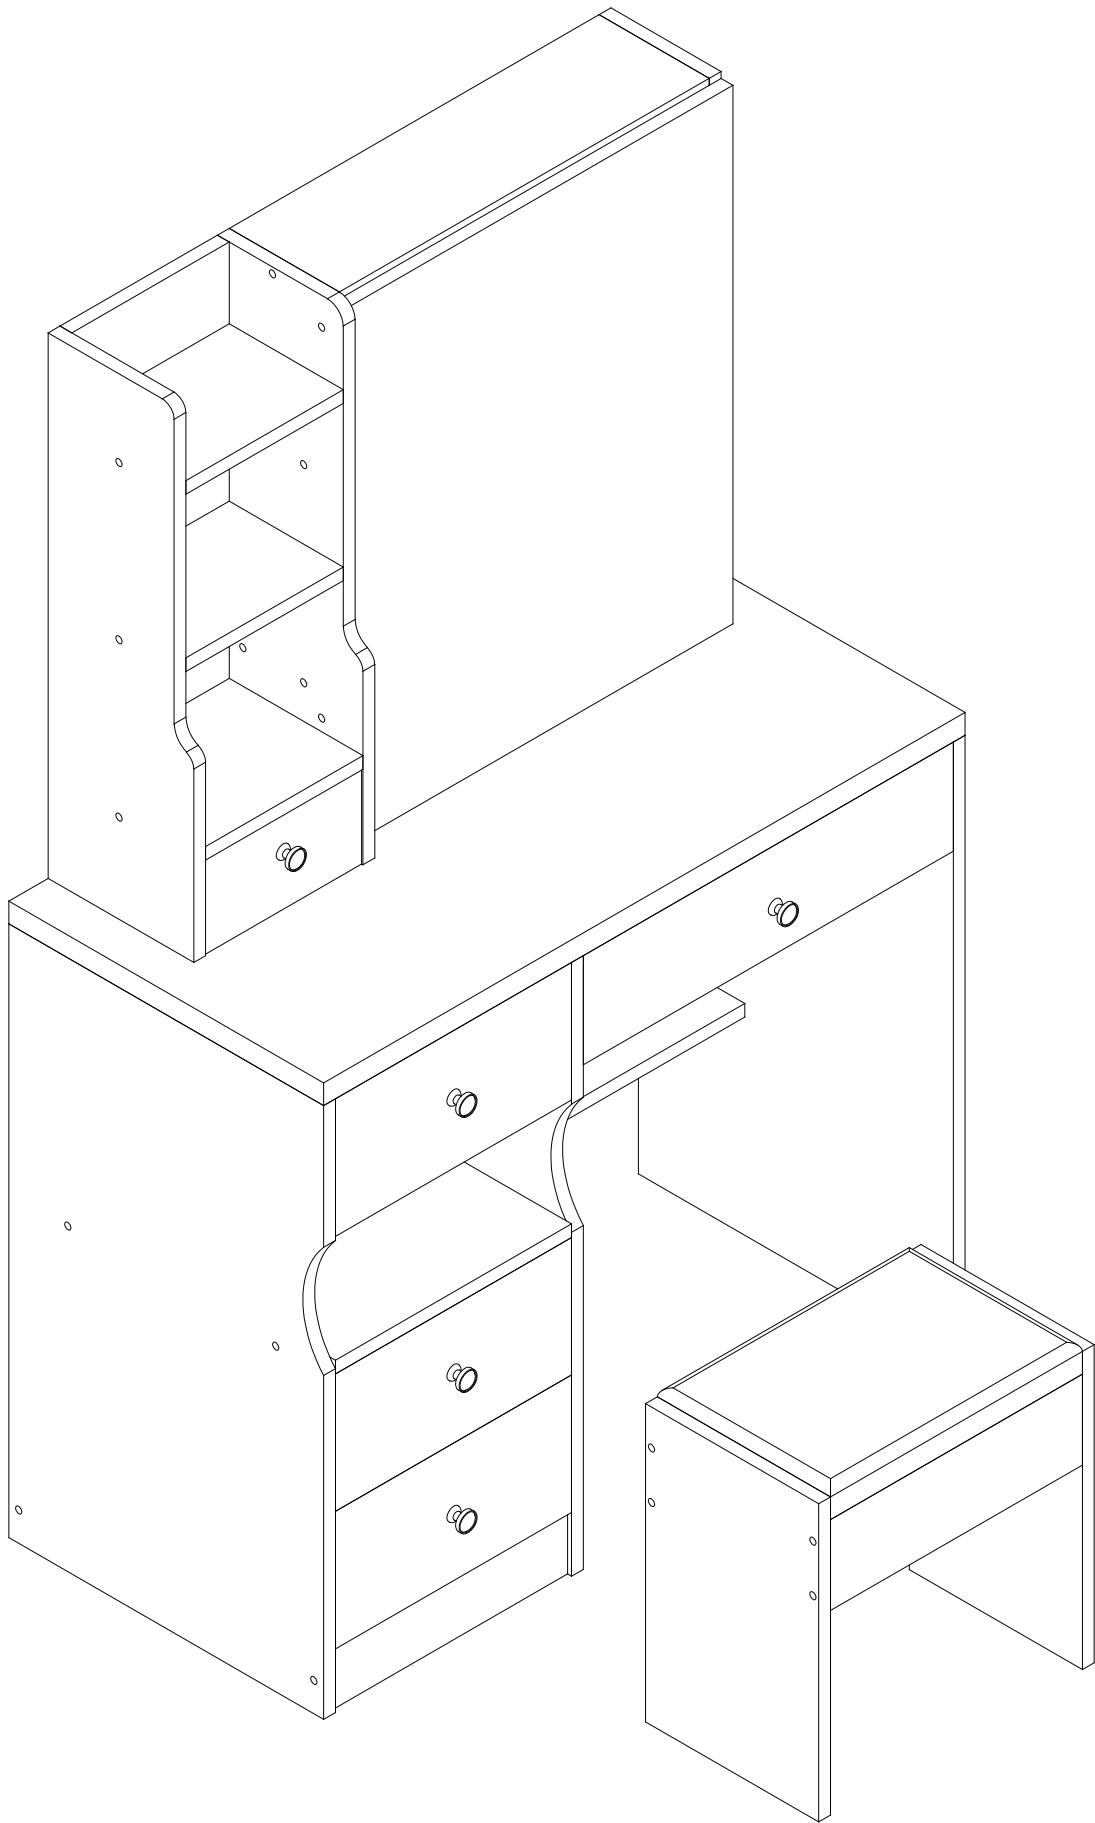

Simple version: without mirror light, built-in socket, and hair dryer bracket, therefore there is no mirror light power plug, built-in socket(H), and hair dryer bracket(I) in the accessories.


Basic version: with mirror light, without built-in socket, hair dryer stand. Therefore, there is no built-in socket(H) and hair dryer stand(I) in the accessories

Luxury version: with mirror light, built-in socket, hair dryer stand, therefore, all illustrated accessories are included.

Also note that:

1. Every hole on every board is useful, either a nut needs to be inserted or a screw needs to be inserted, and no hole is redundant.
2. There are marked points where the track needs to be fixed. Please use screw C to fix the track at the marked points.
3. Screw G is a drawer positioning pin to prevent the drawer from falling out when opened. Please confirm that all positioning screws G have been installed when the installation is completed.



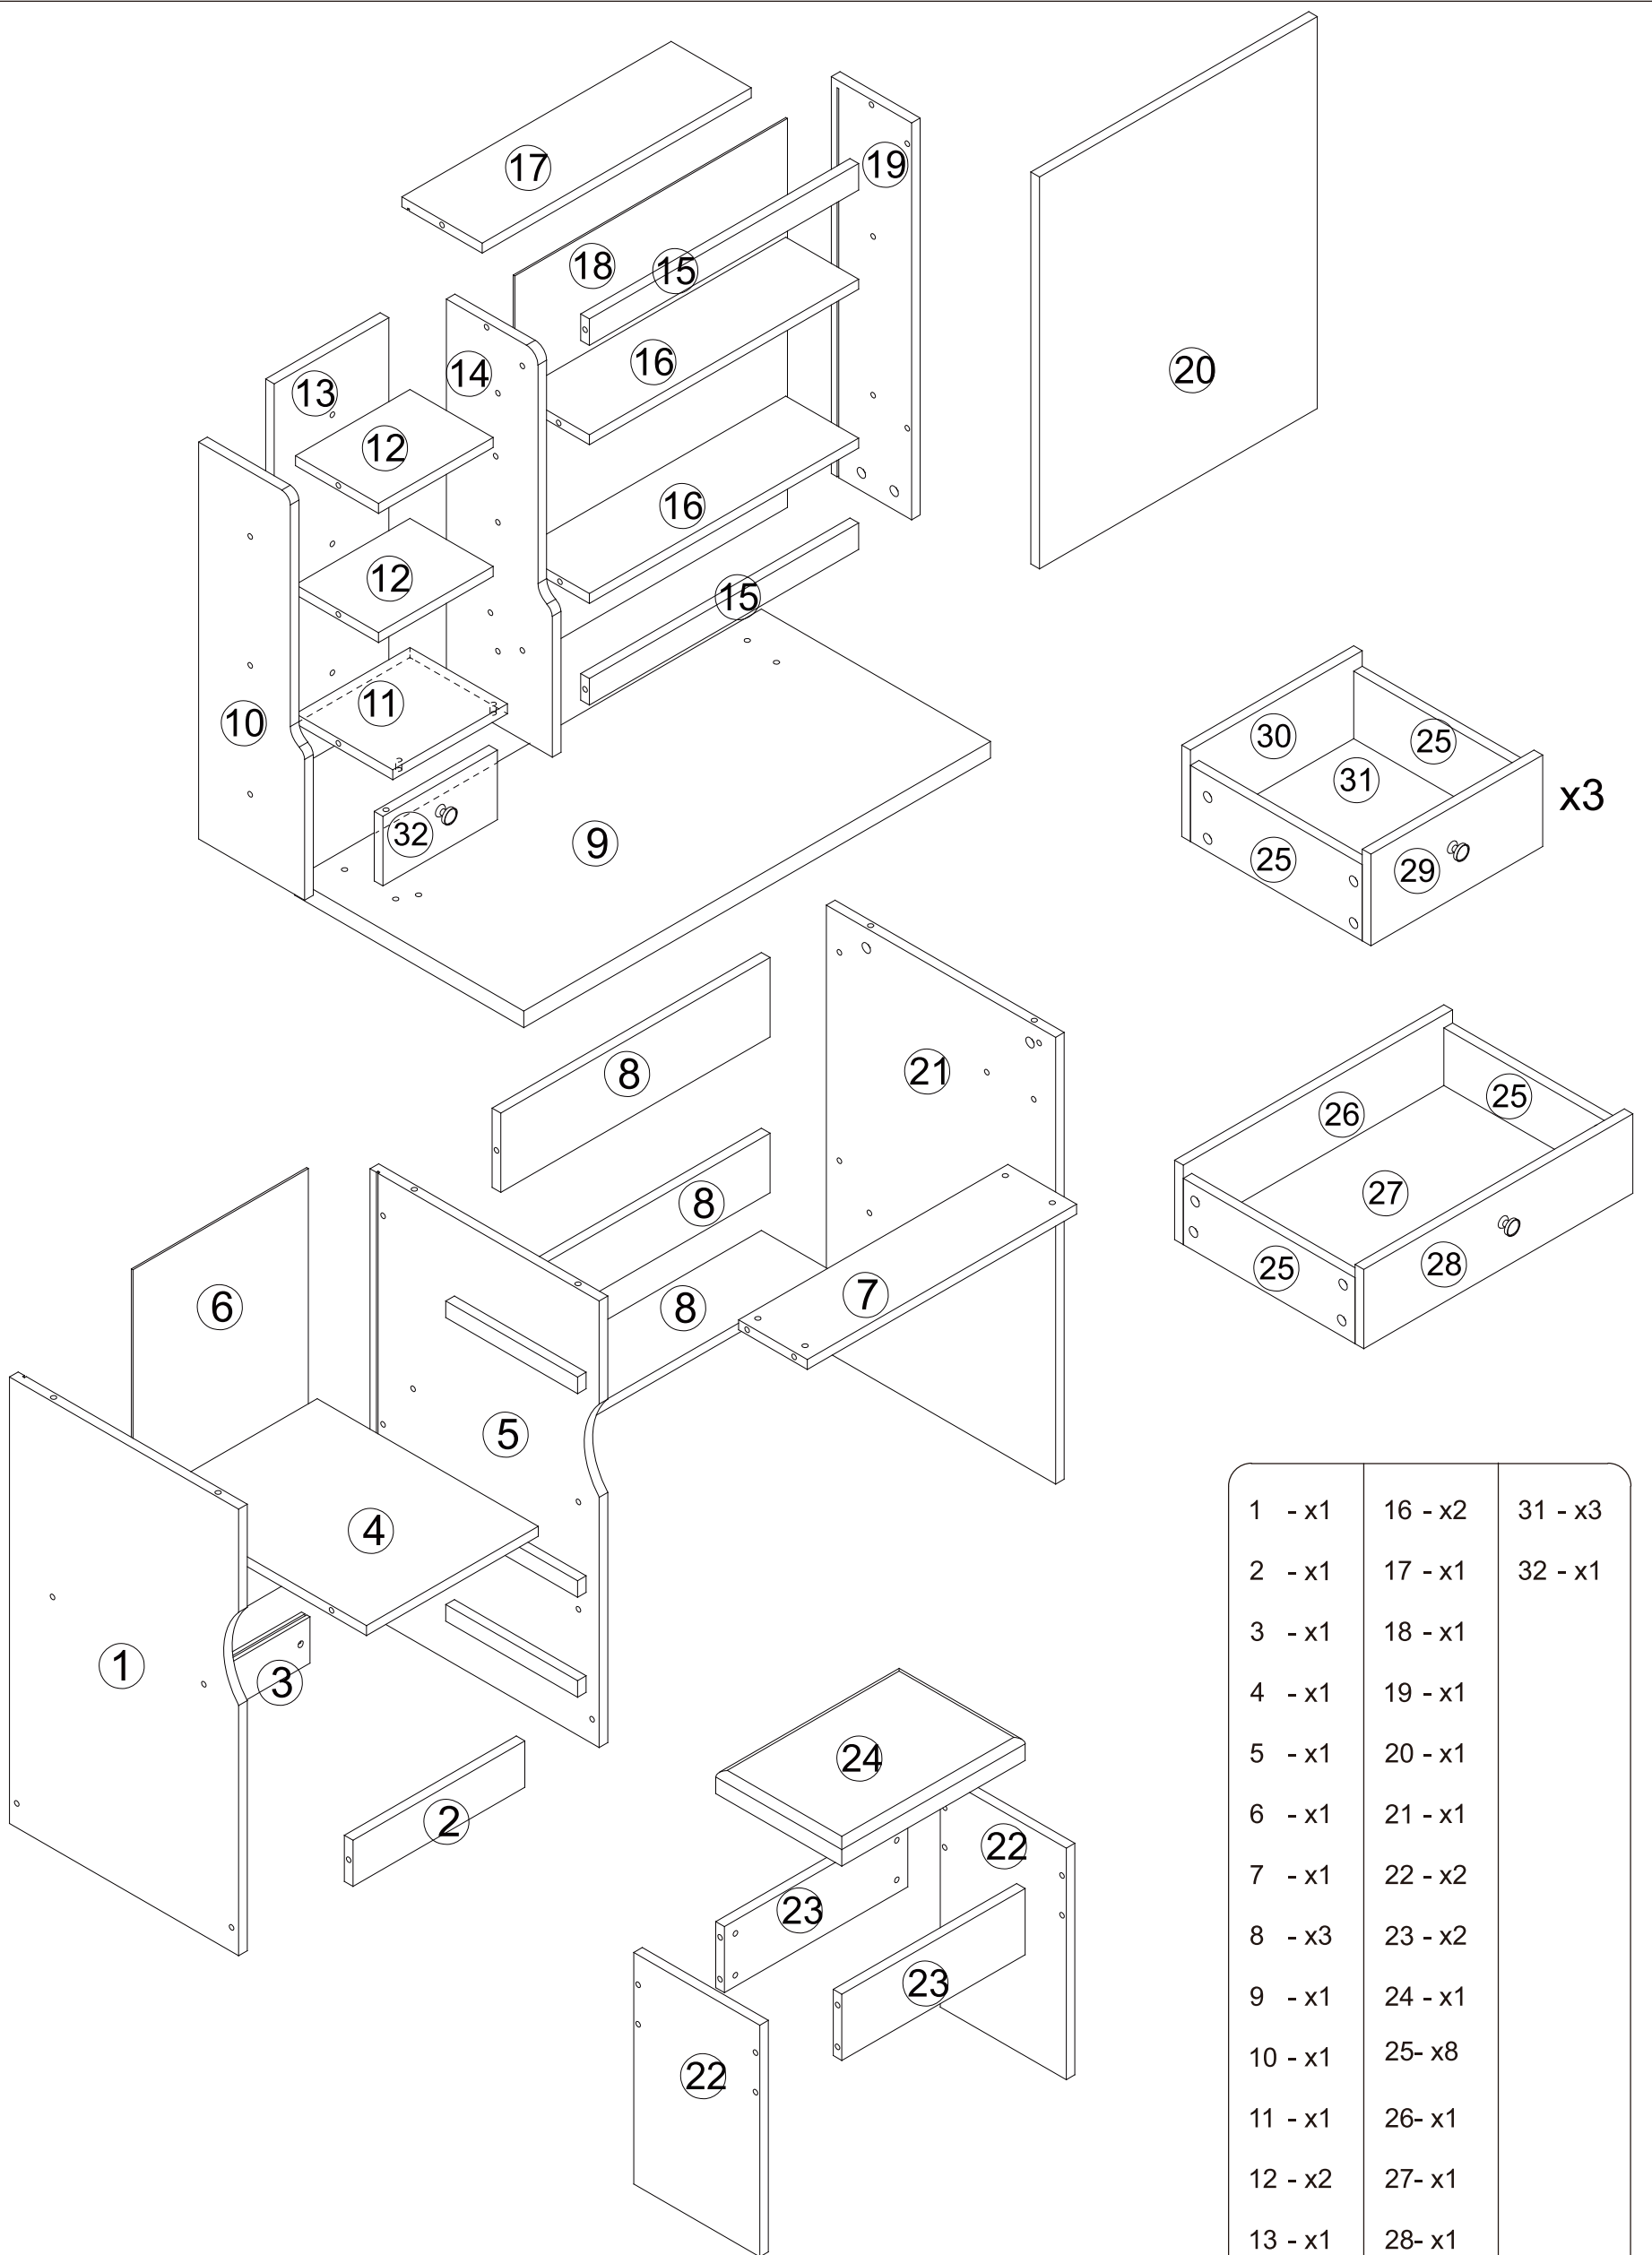

1 - x1	16 - x2	31 - x3
2 - x1	17 - x1	32 - x1
3 - x1	18 - x1	
4 - x1	19 - x1	
5 - x1	20 - x1	
6 - x1	21 - x1	
7 - x1	22 - x2	
8 - x3	23 - x2	
9 - x1	24 - x1	
10 - x1	25- x8	
11 - x1	26- x1	
12 - x2	27- x1	
13 - x1	28- x1	
14 - x1	29- x3	
15 - x2	30- x3	

Before installation, please find a marker pen with erasable marks, distinguish each accessory based on the shape of the board and the position of the holes, and then write the corresponding numbers on the board.





1 -x1



2 -x1



3 -x1



4 -x1



5 -x1



6 -x1



7 -x1



8 -x3



9 -x1



10 -x1



11 -x1



12 -x2



13 -x1



14-x1



15-x2 16-x2 17-x1

for build-in
socket

18-x1

for not build-in
socket



or



for build-in
socket

for not build
-in socket

19-x1



20-x1



21-x1



22-x2



23-x2



24-x1



25-x8



26-x1



27-x1



28-x1



29-x3



30-x3




31-x3




32-x1

hardware

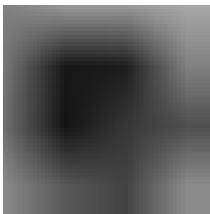

A	screw	x44
---	-------	-----

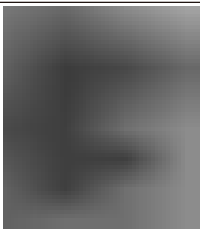


B	metal LOCK	x44
---	------------	-----




C	SCREW	x12
---	-------	-----



D	GUIDE RAIL	x2
---	------------	----

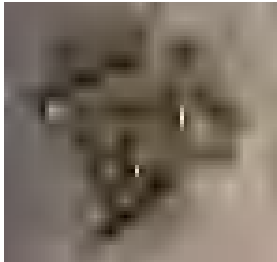


E	HANDLE SCREW	x5
---	--------------	----

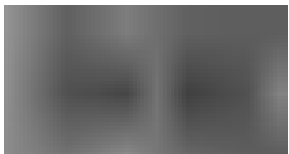

F	L PLATE	x2
---	---------	----




G	screw	x9
---	-------	----

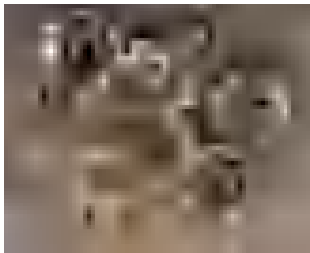

L	SCREW	x5
---	-------	----



J	SCREW	x47
---	-------	-----

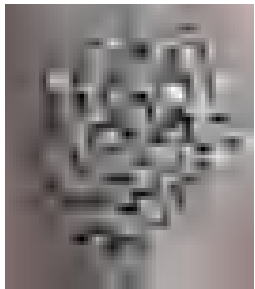


K	PLASTIC LOCKS	x47
---	---------------	-----



M	PIVOT PIN	x2
---	-----------	----


1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

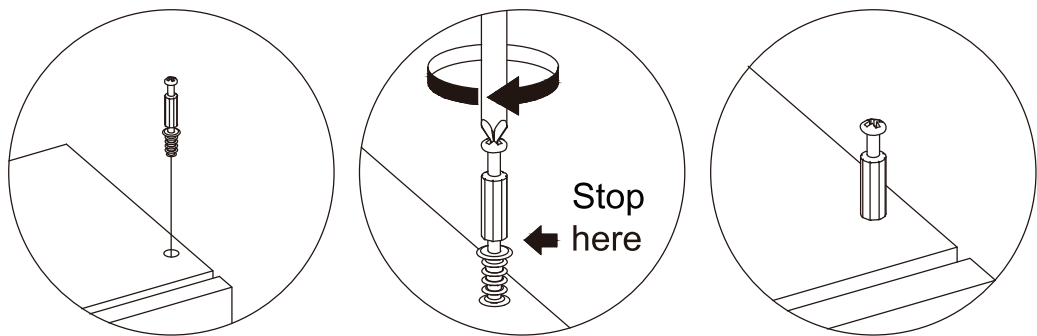


2. Check the Nut direction



This direction of the marked nut is consistent with the direction in which the screw is inserted

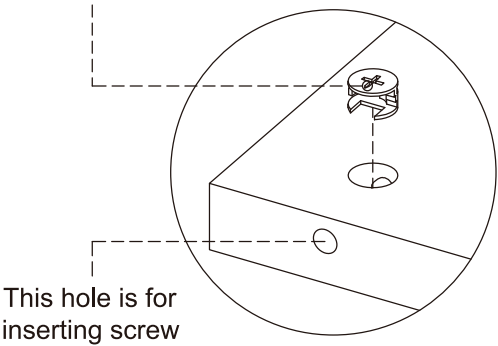

3. Installation on the board with fixing screws


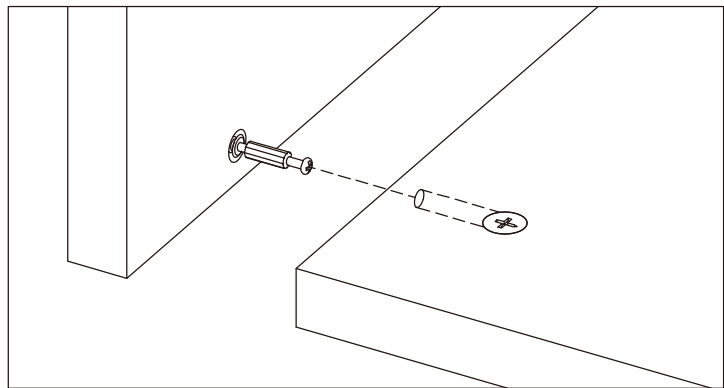


3. Rotate slowly until it stops

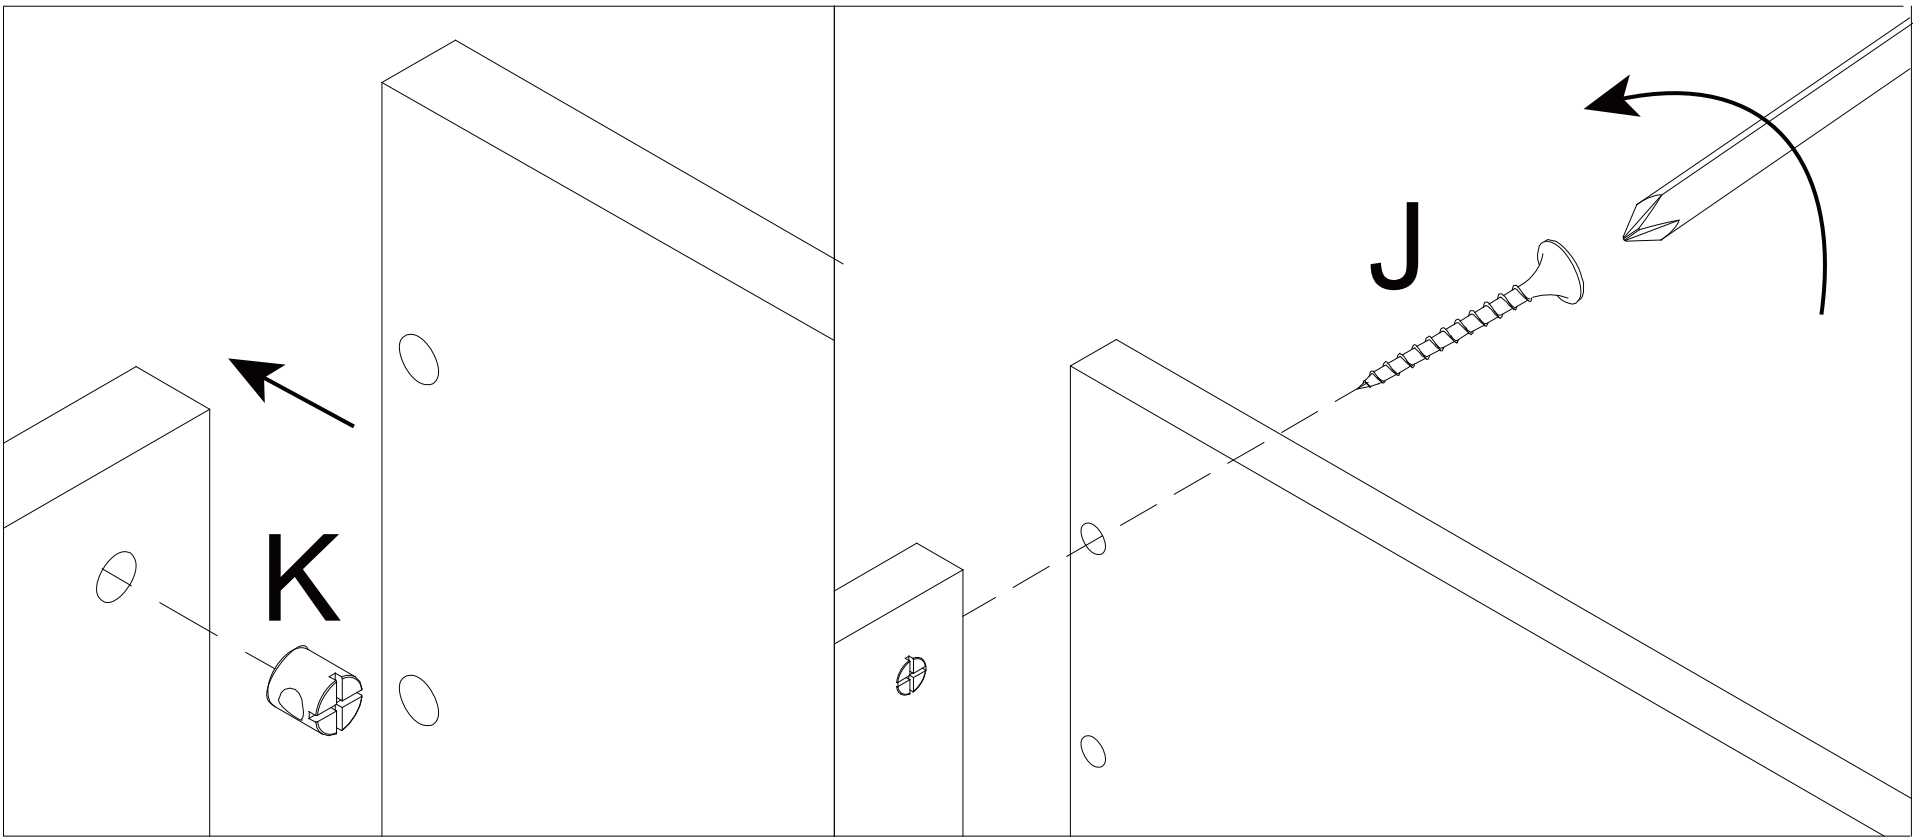
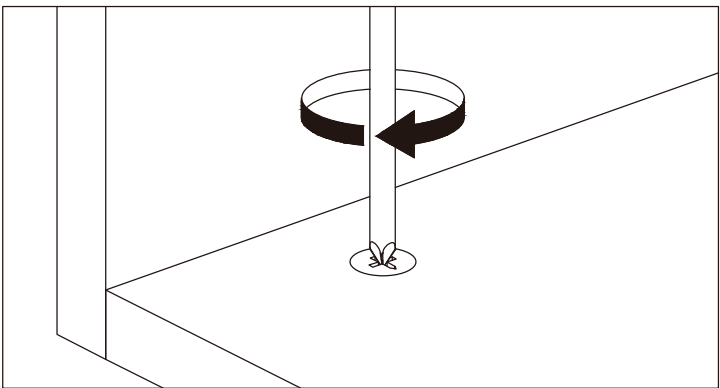


Step 01


pick up (26) x1, (27) x1, (28) x1, (25) x2 and (29) x3, (30) x3, (31) x3, (25) x6

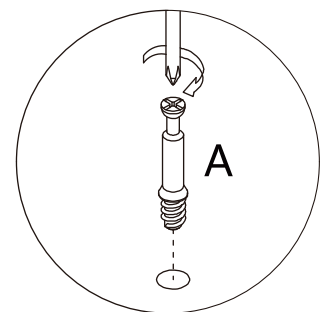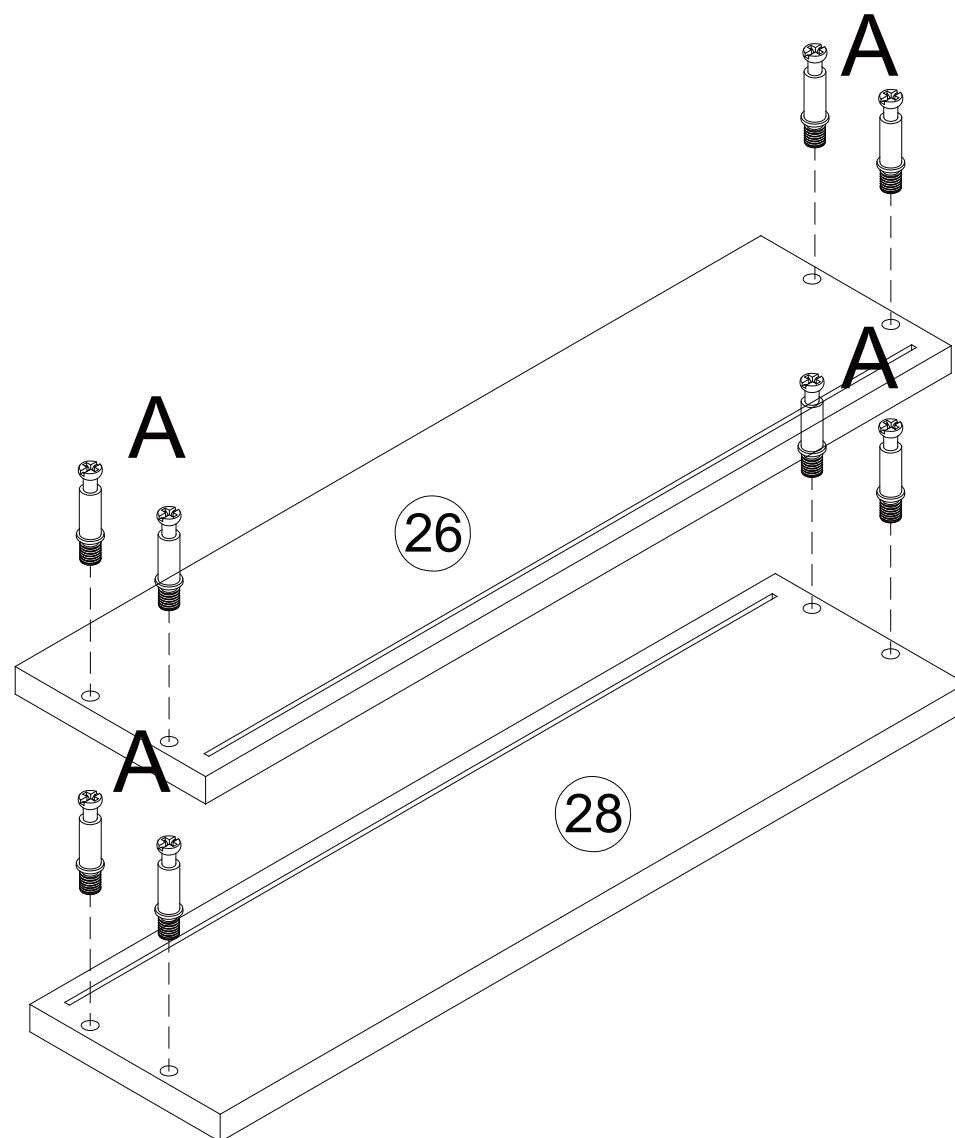


Step 02

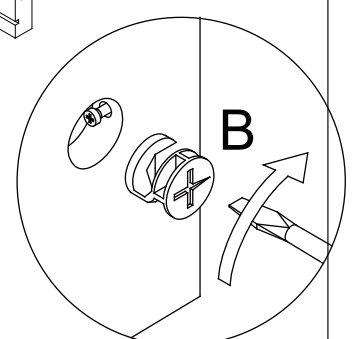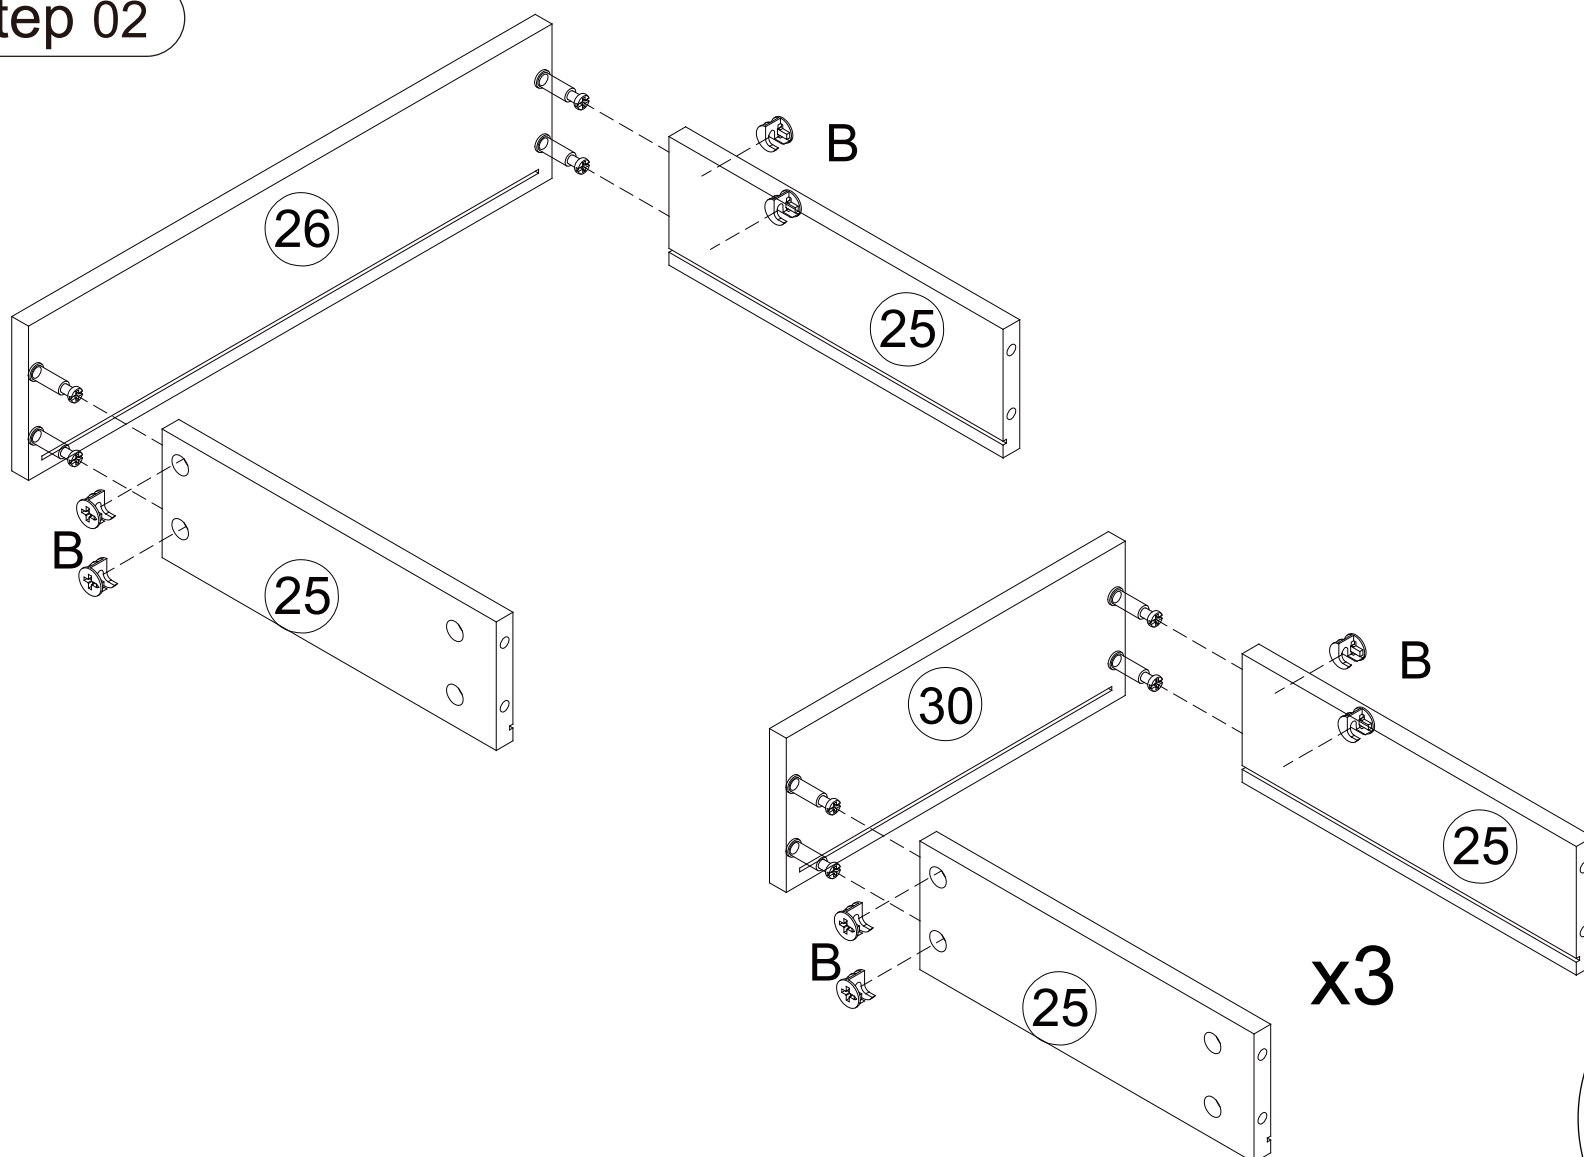

Step 03

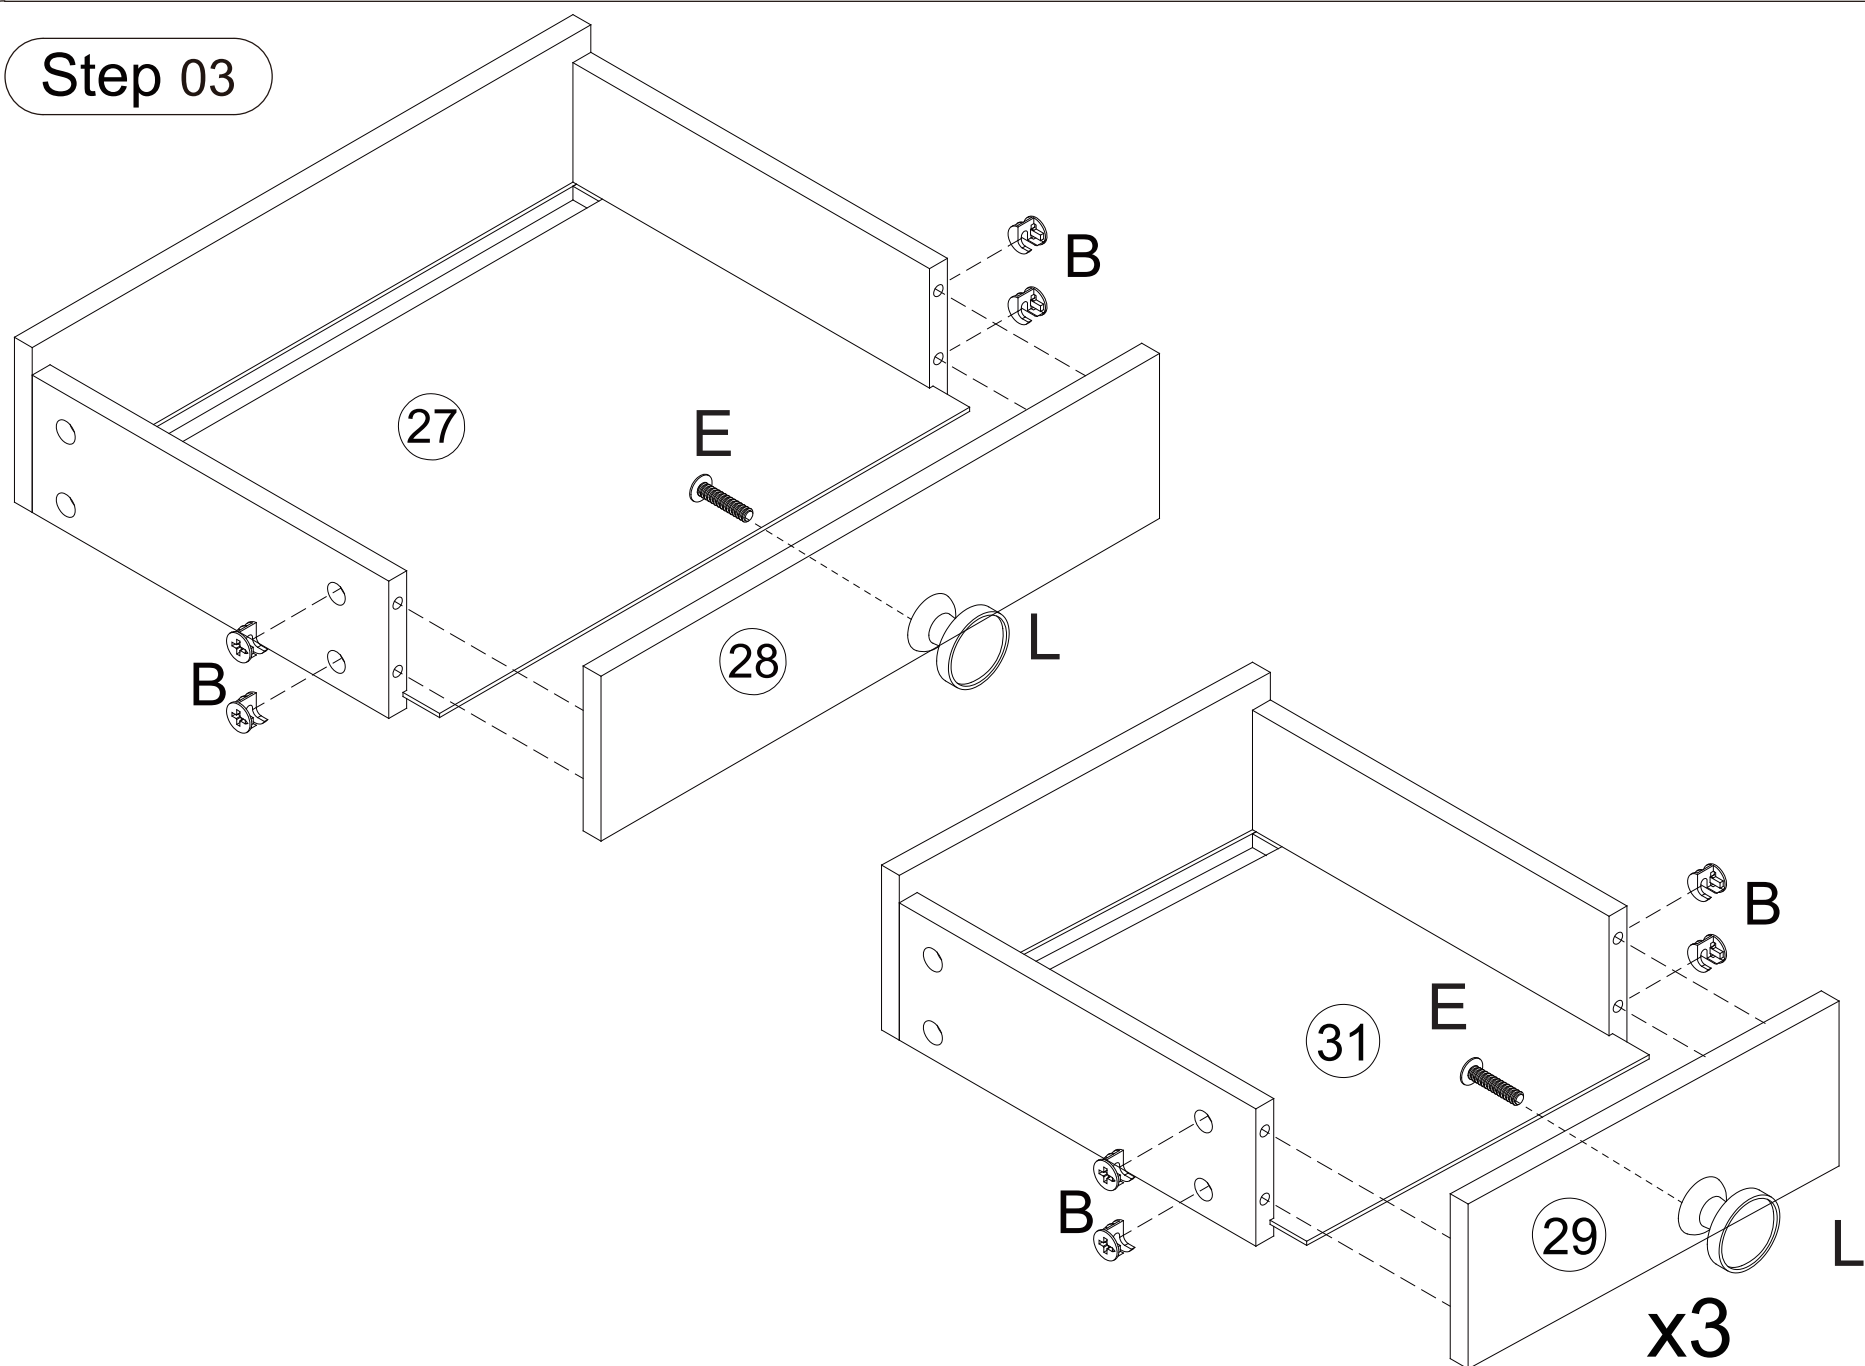


Step 04

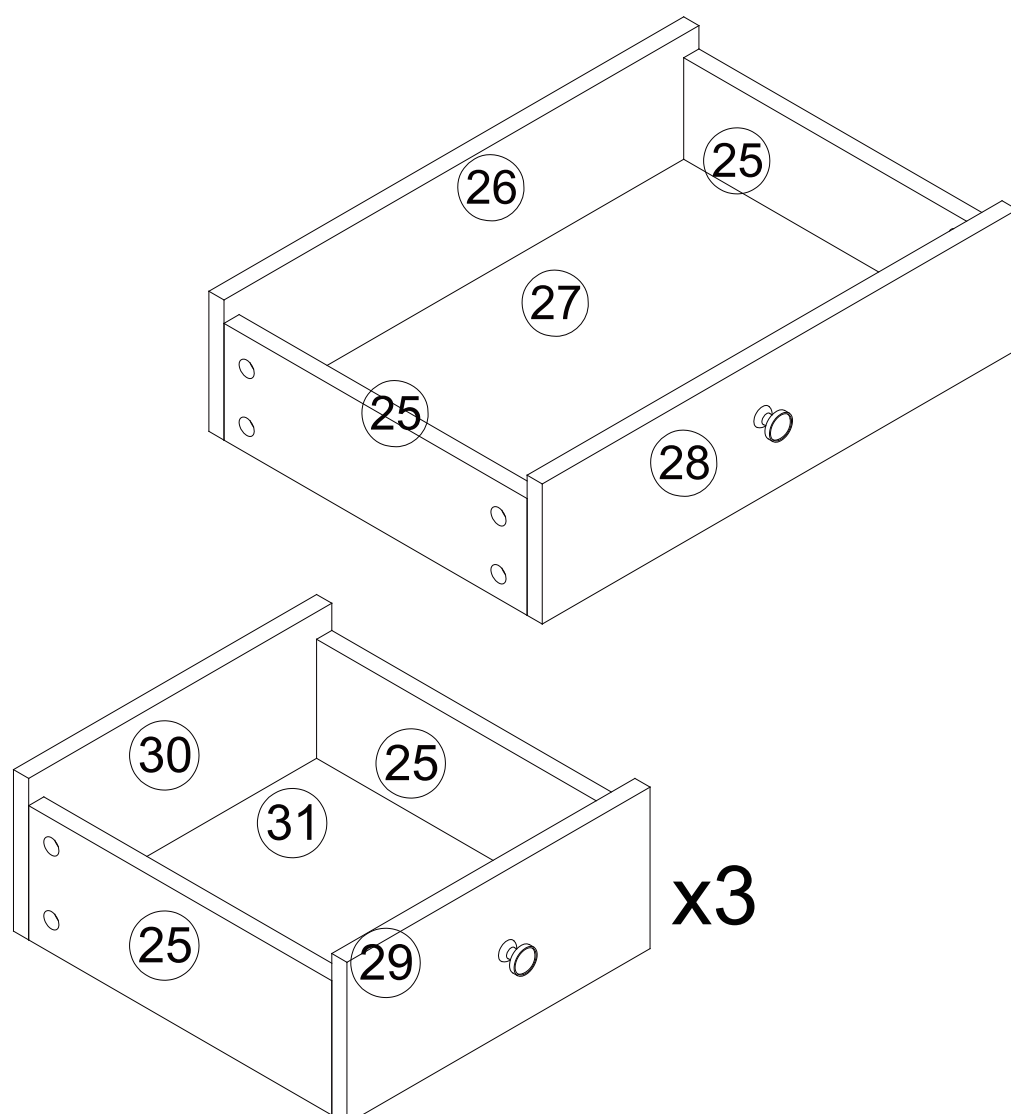


Three drawers are installed in the same way

Step 05

pick up ②x1, ③x1, ①x1, ⑤x1, ⑥x1, ④x1

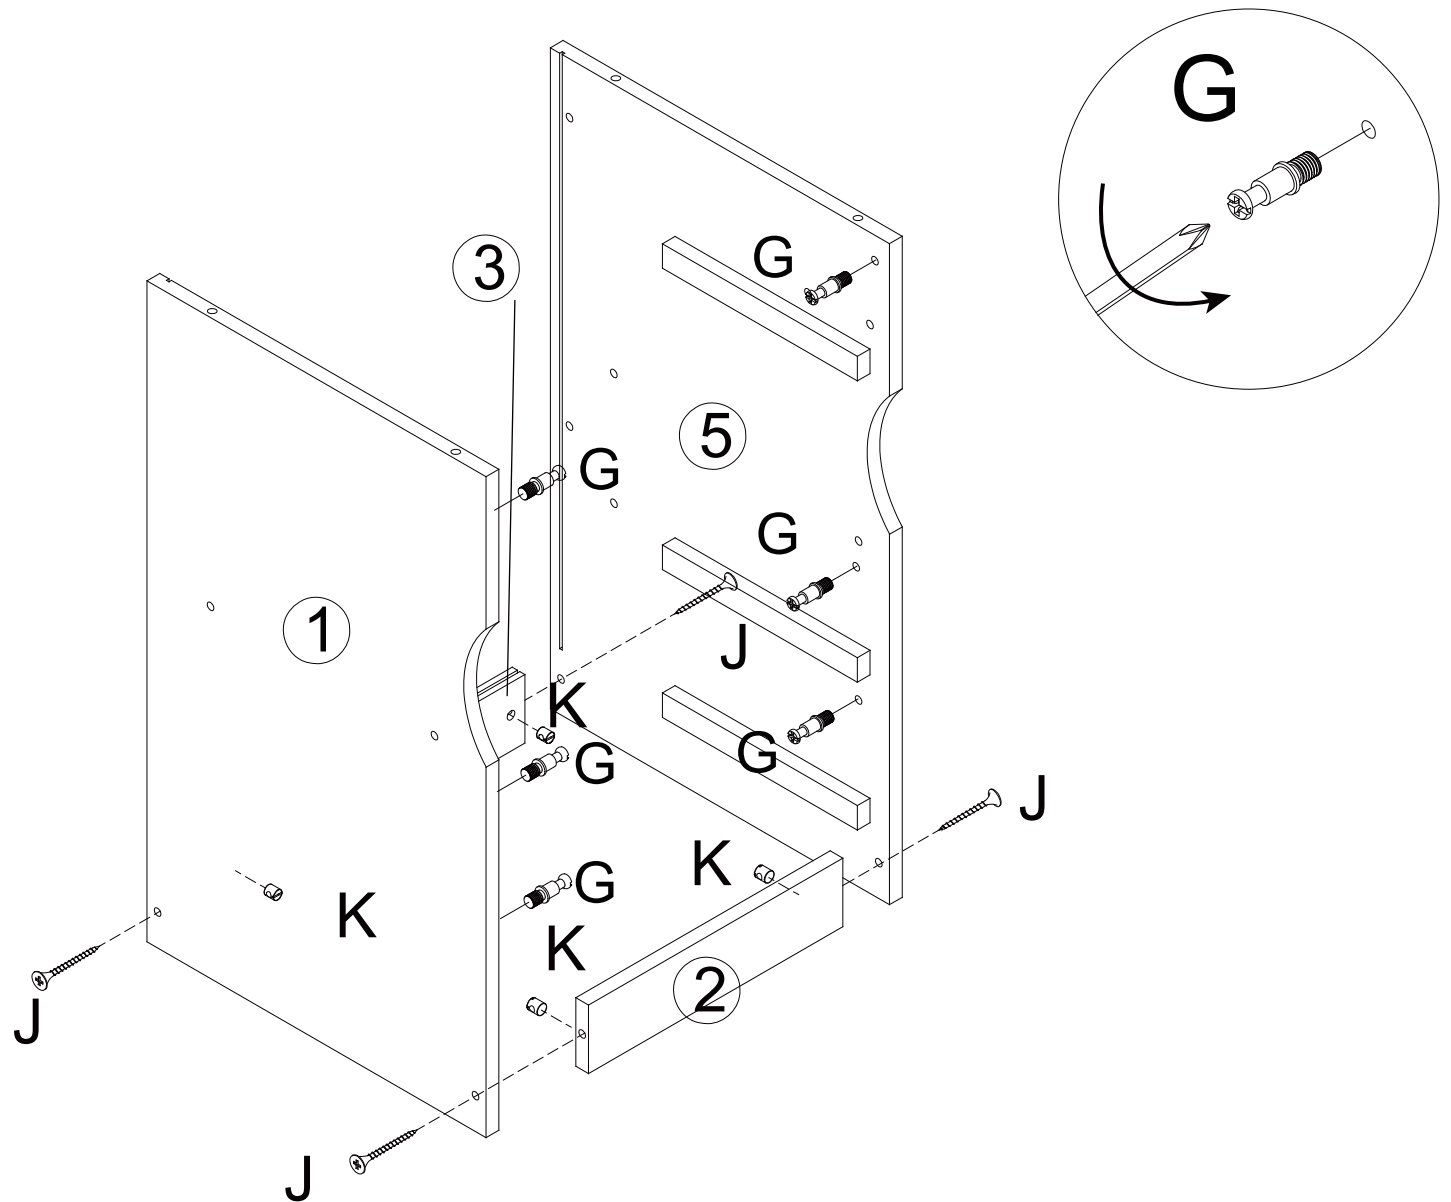


Step 06

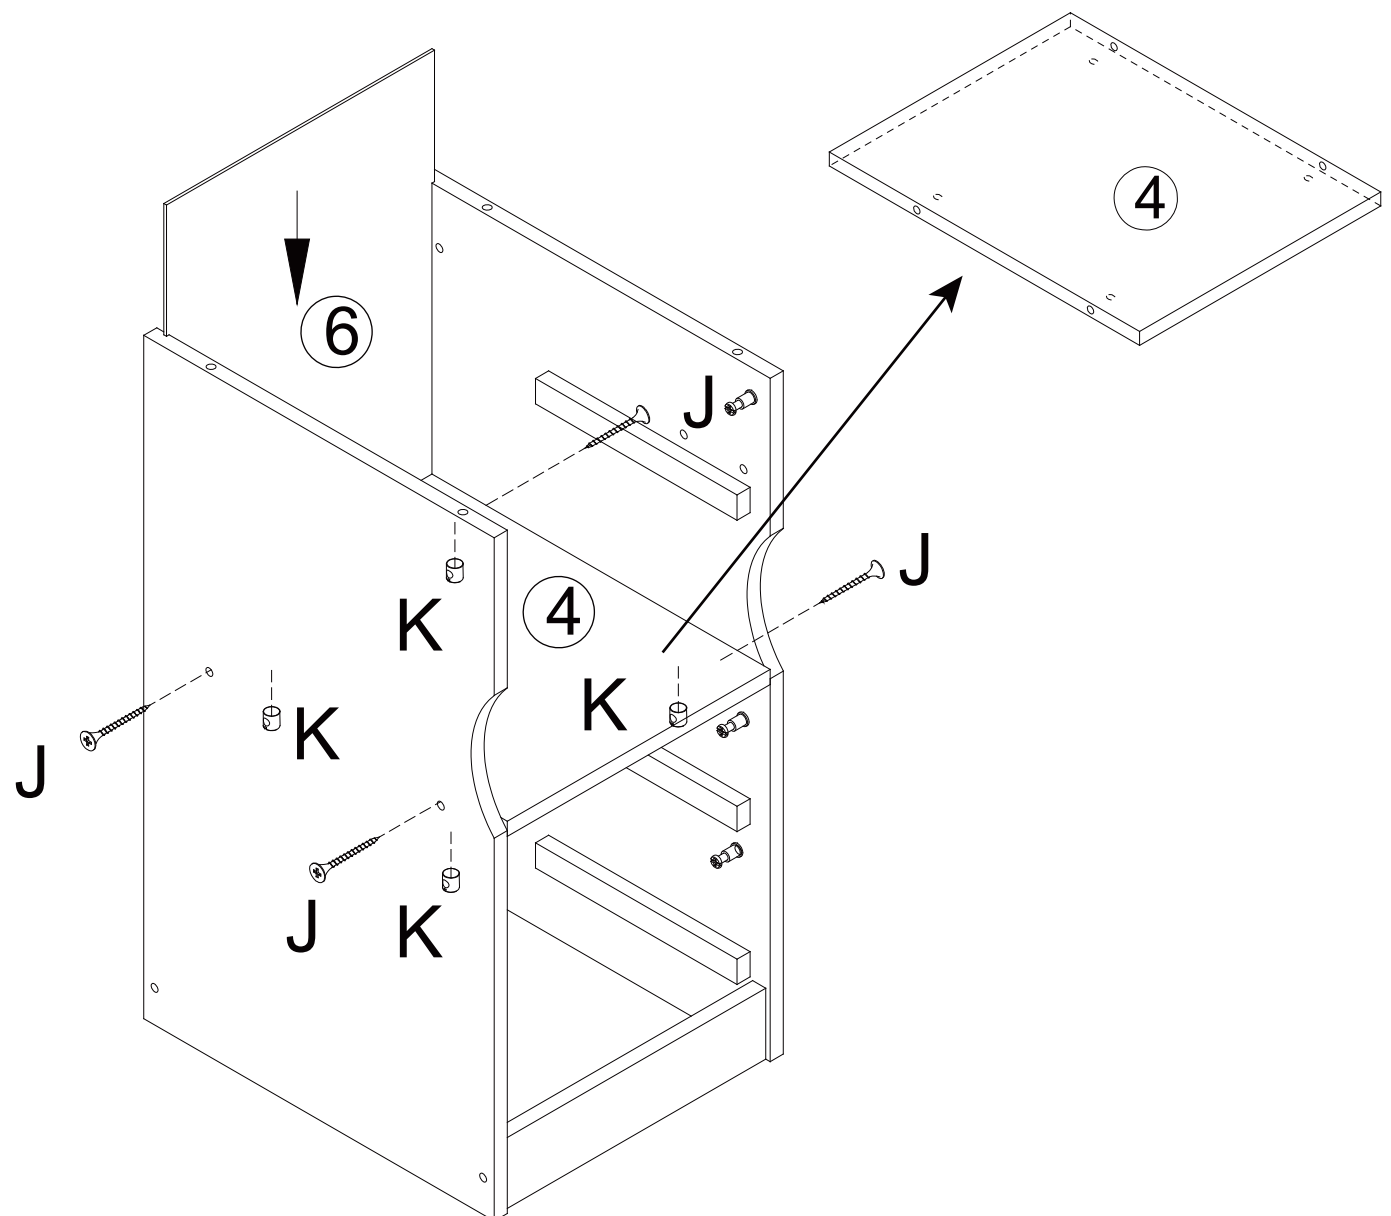


Step 07


pick up ⑦x1, ⑧x3, ②① x1, ⑨x1

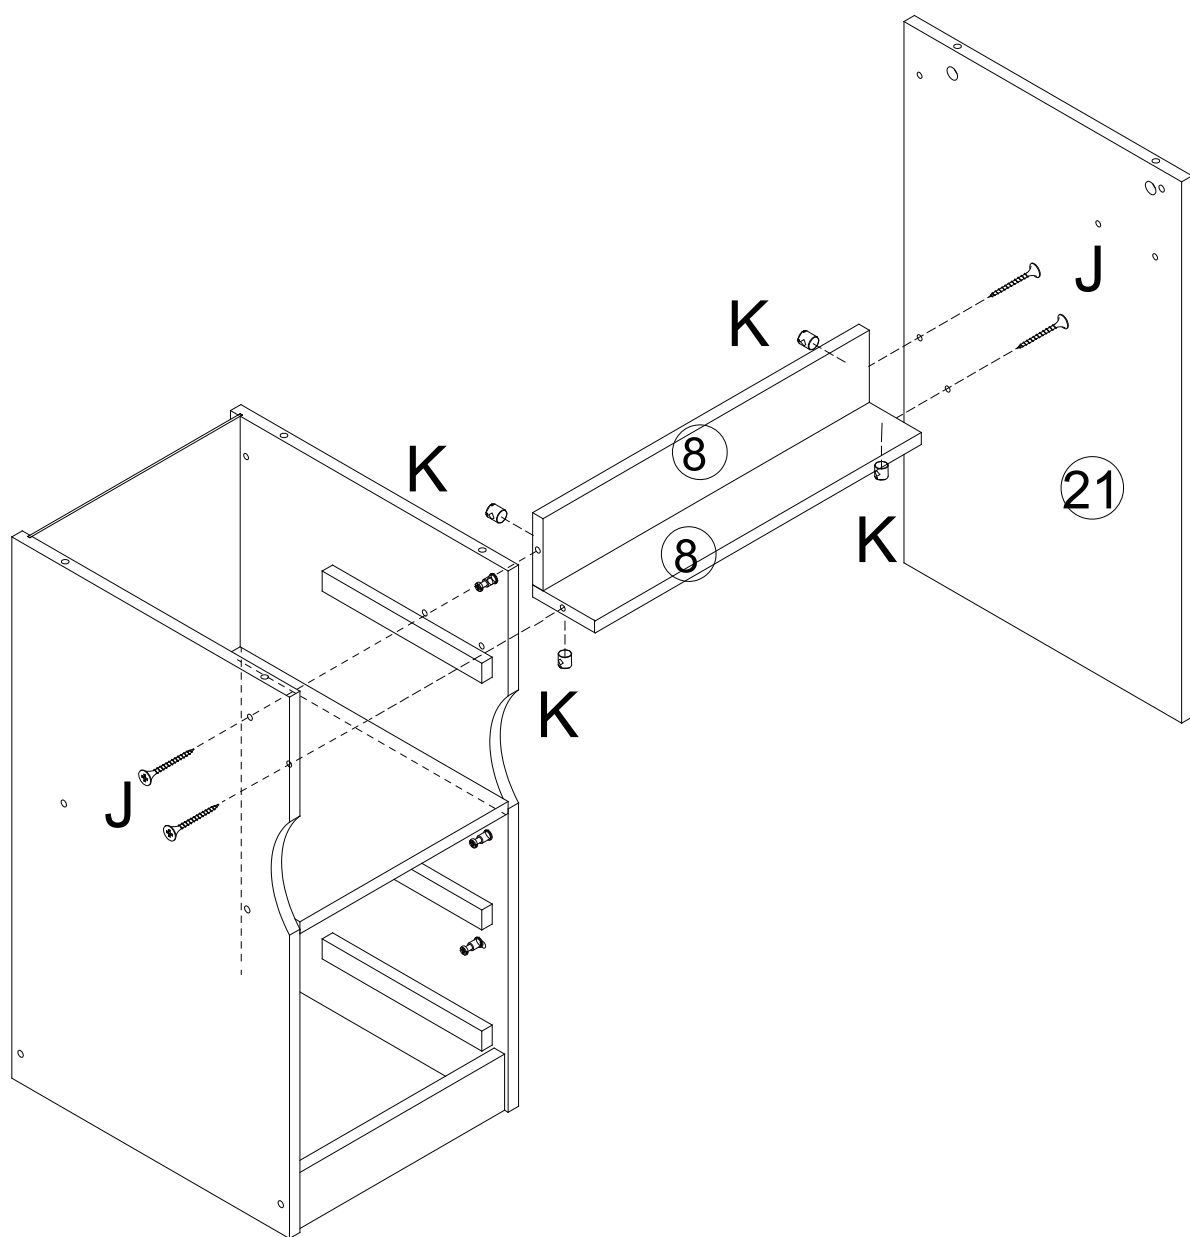



Step 08

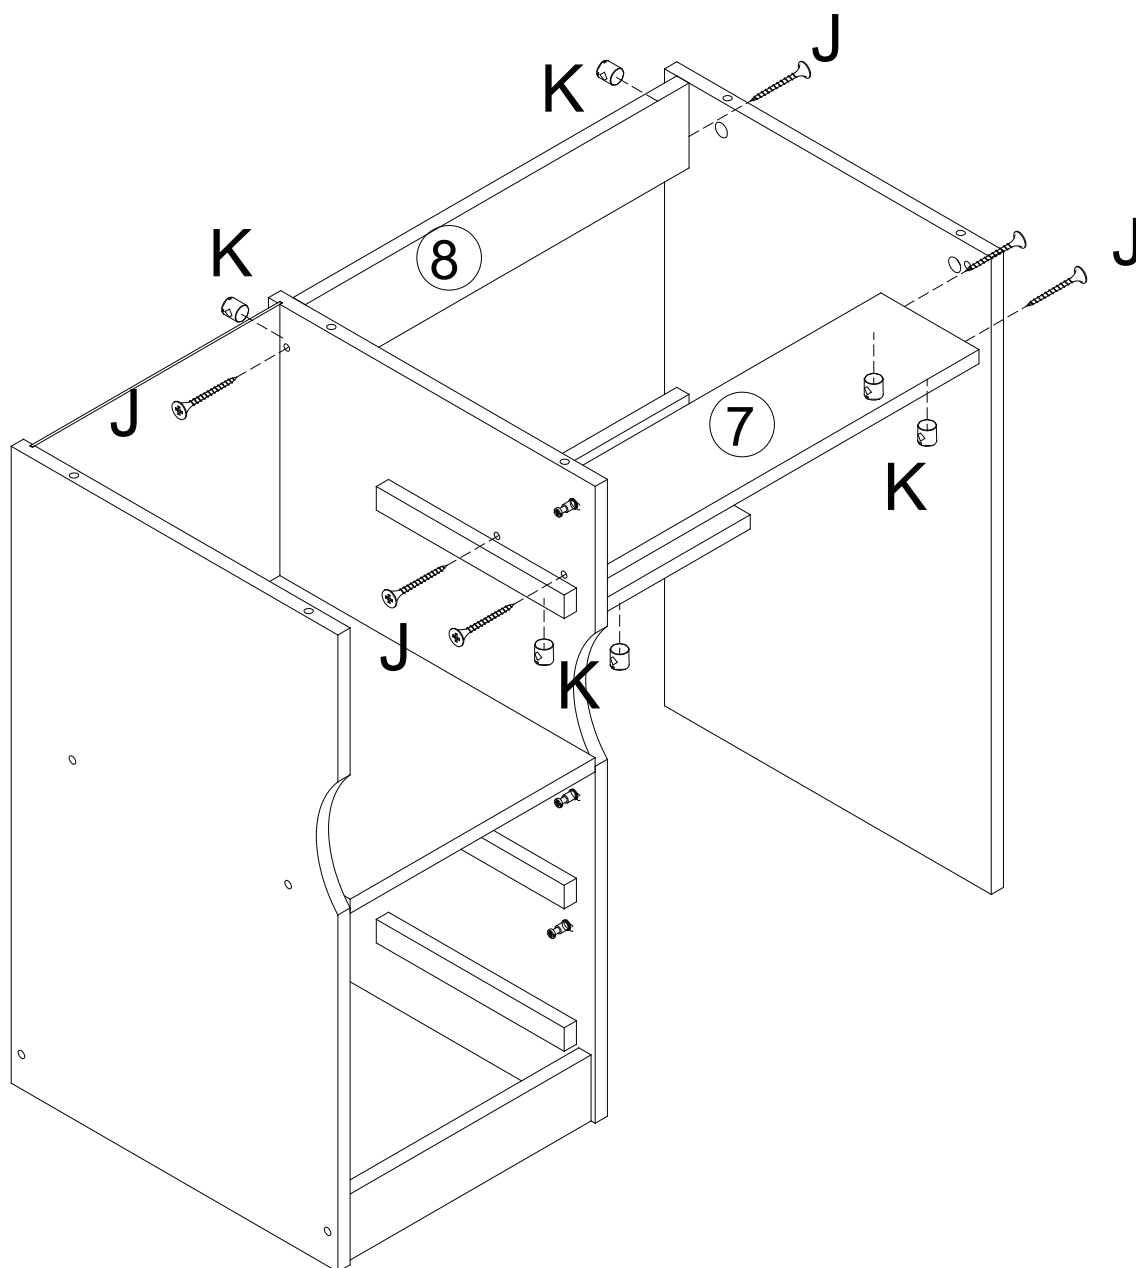

Step 09

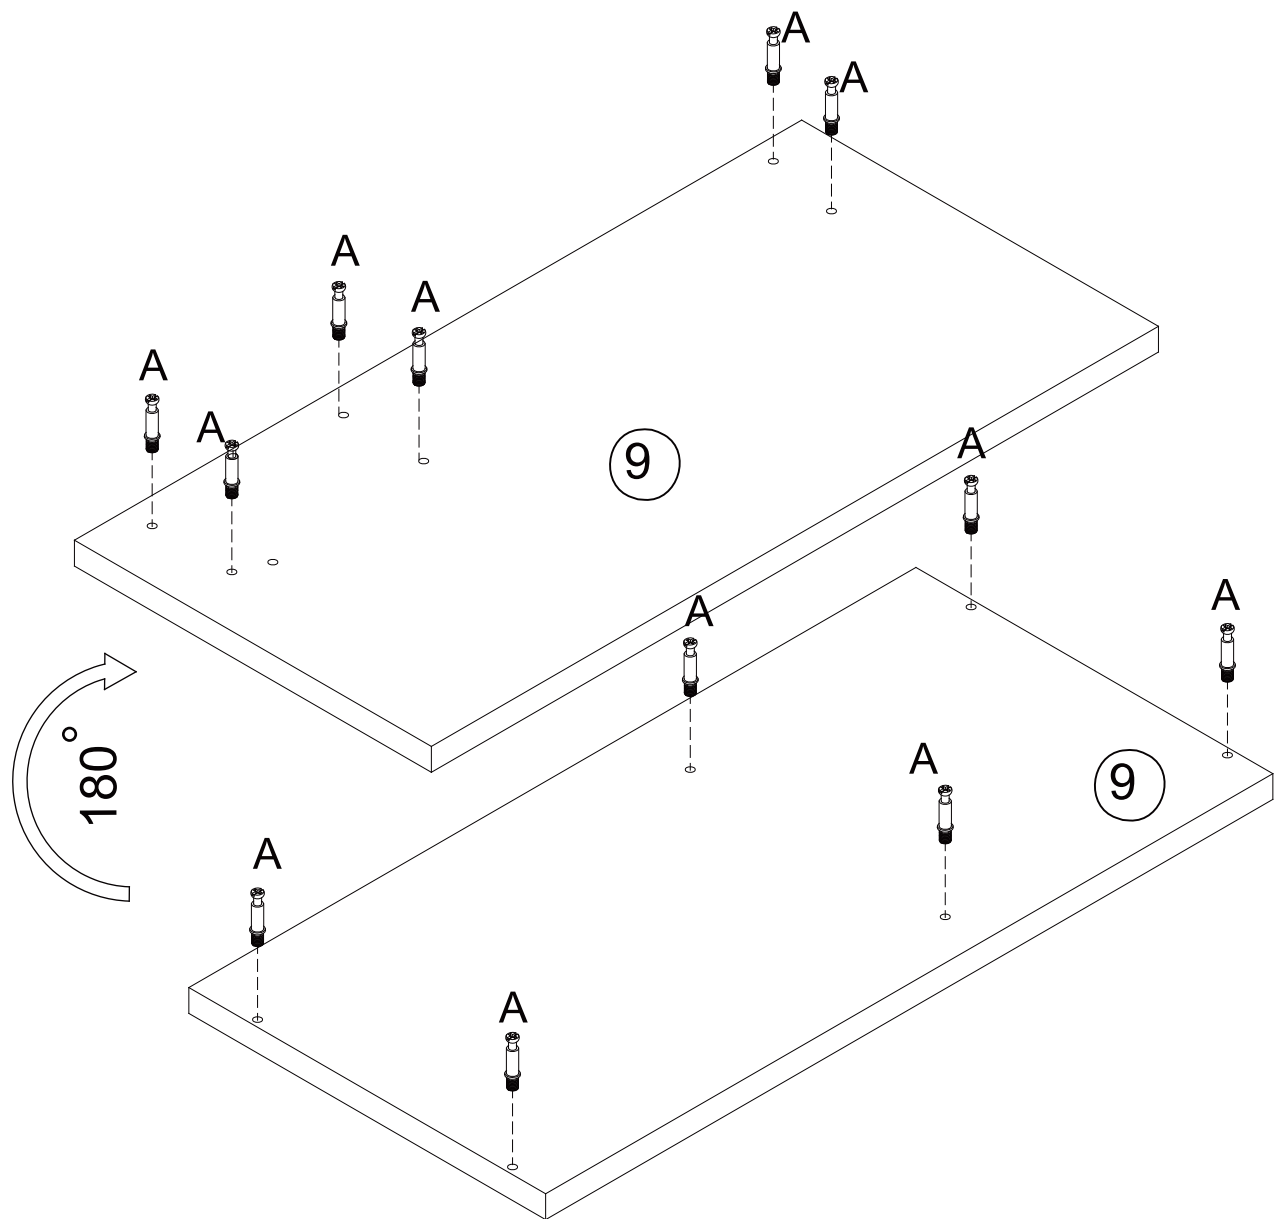


Step 10 pick up ⑩ x1, ⑫ x2, ⑬ x1

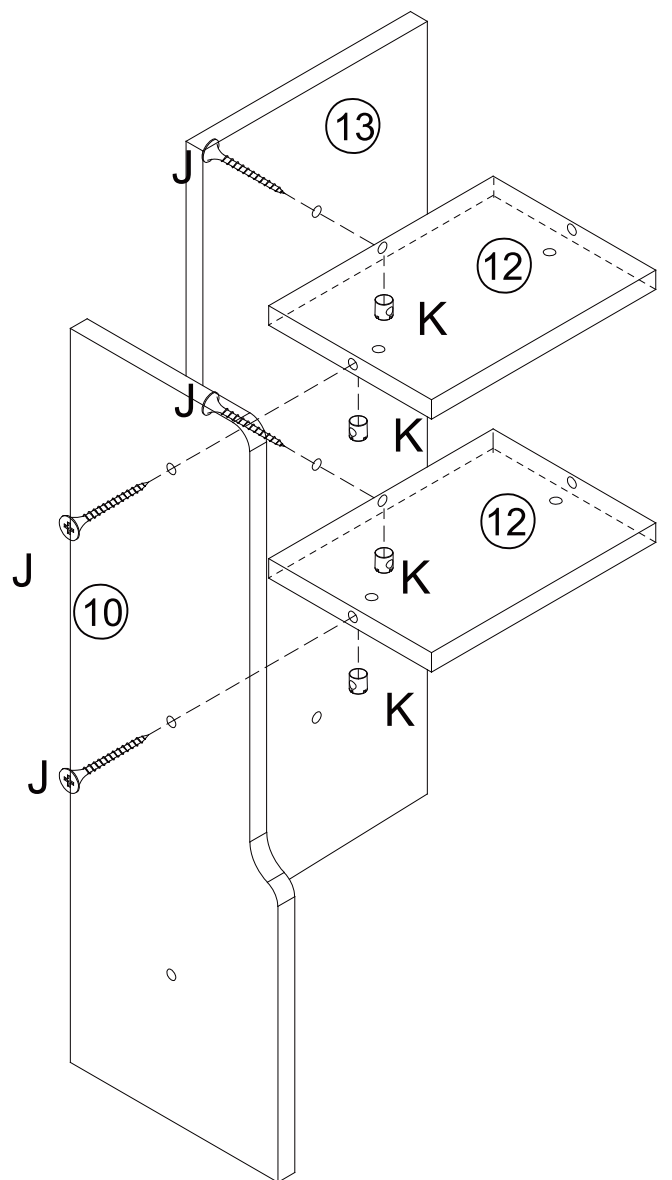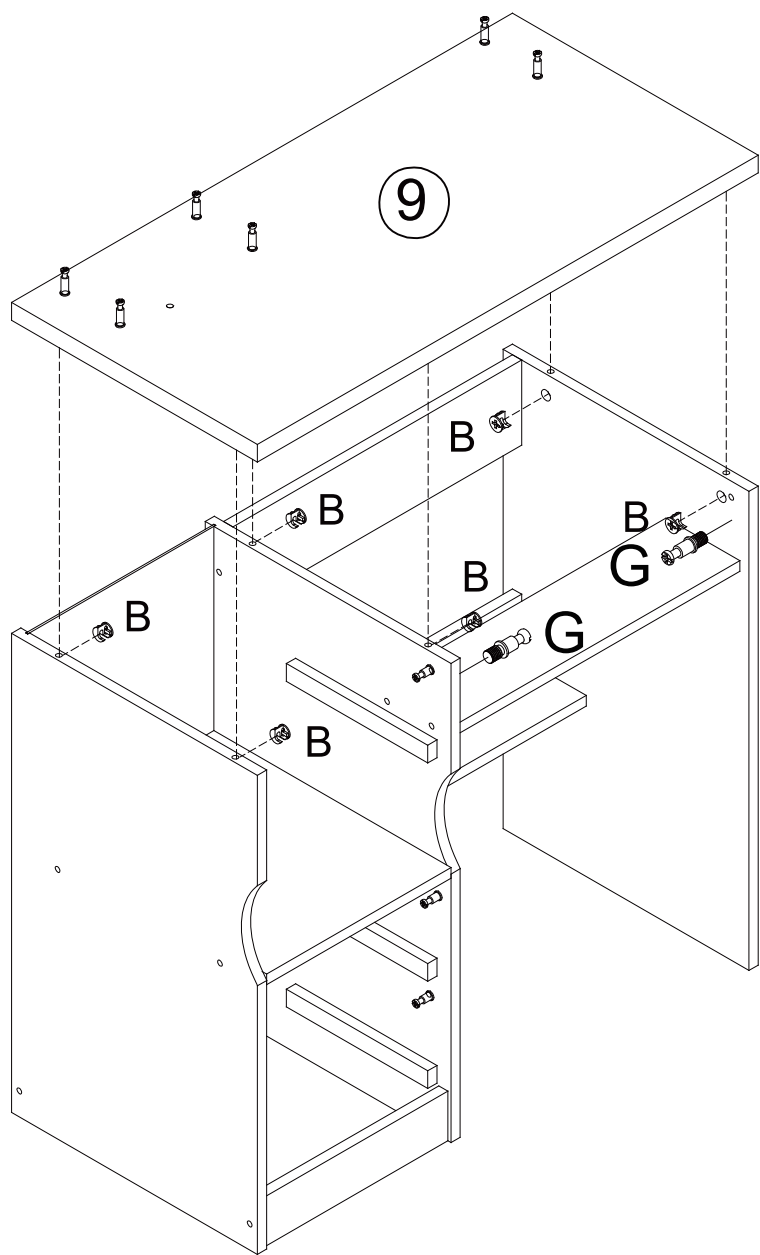


Step 11


pick up ⑭ x1, ⑰ x1, ⑮ x2, ⑯ x2, ⑱ x1, ⑲ x1

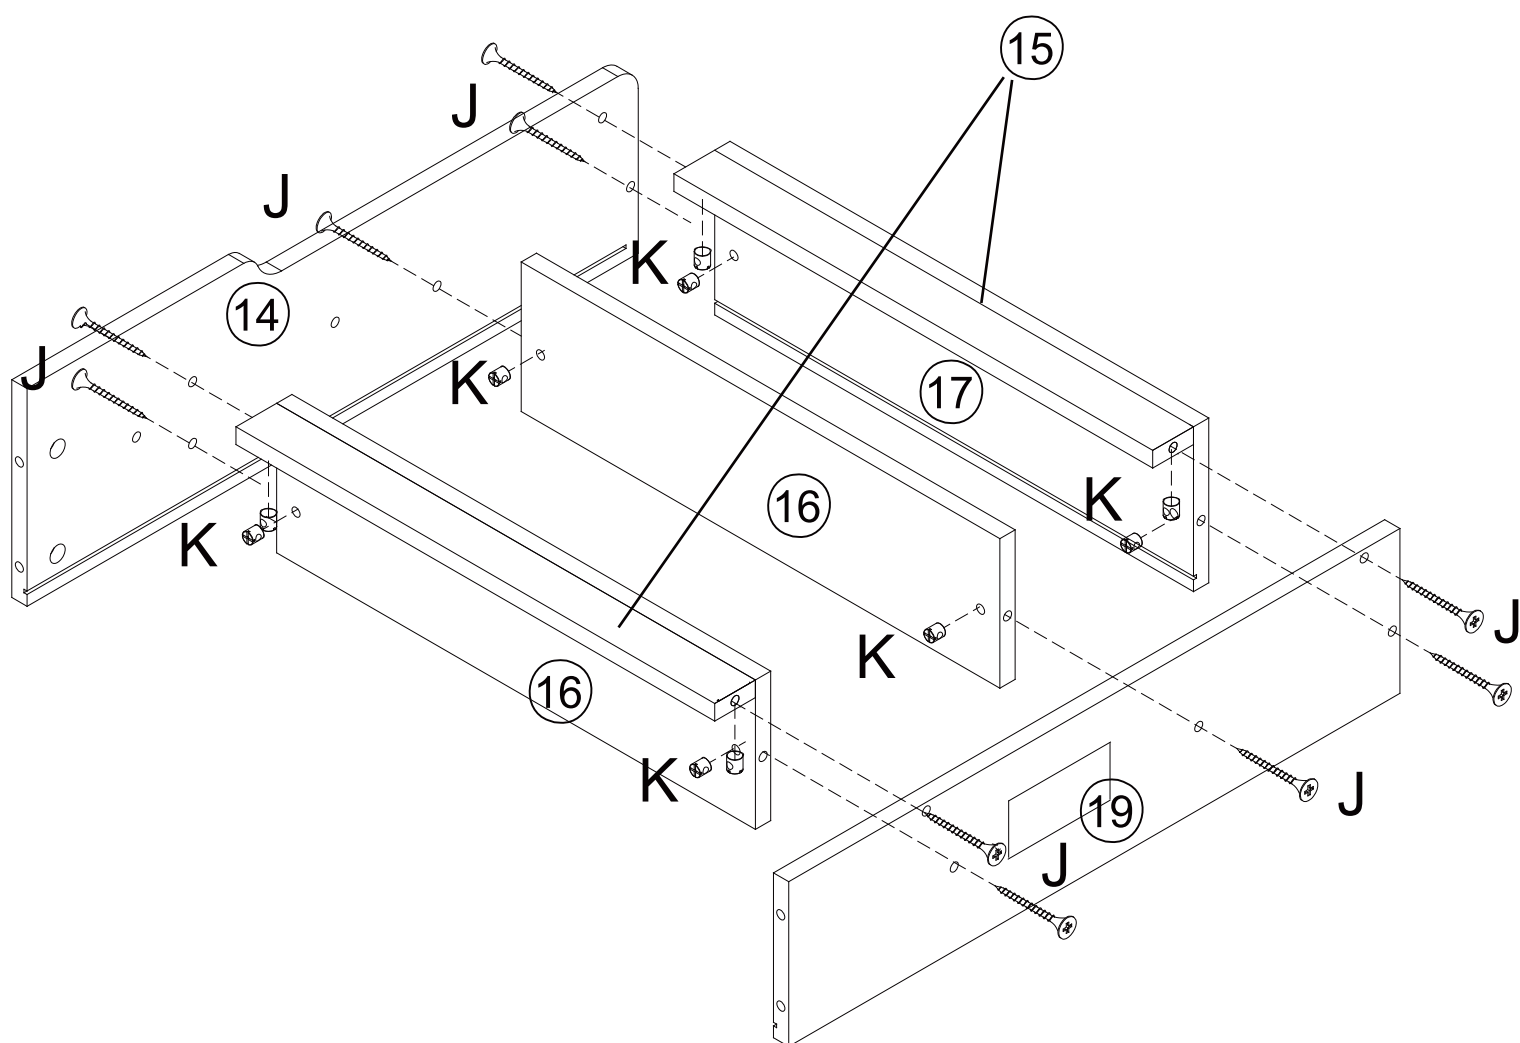


Step 12

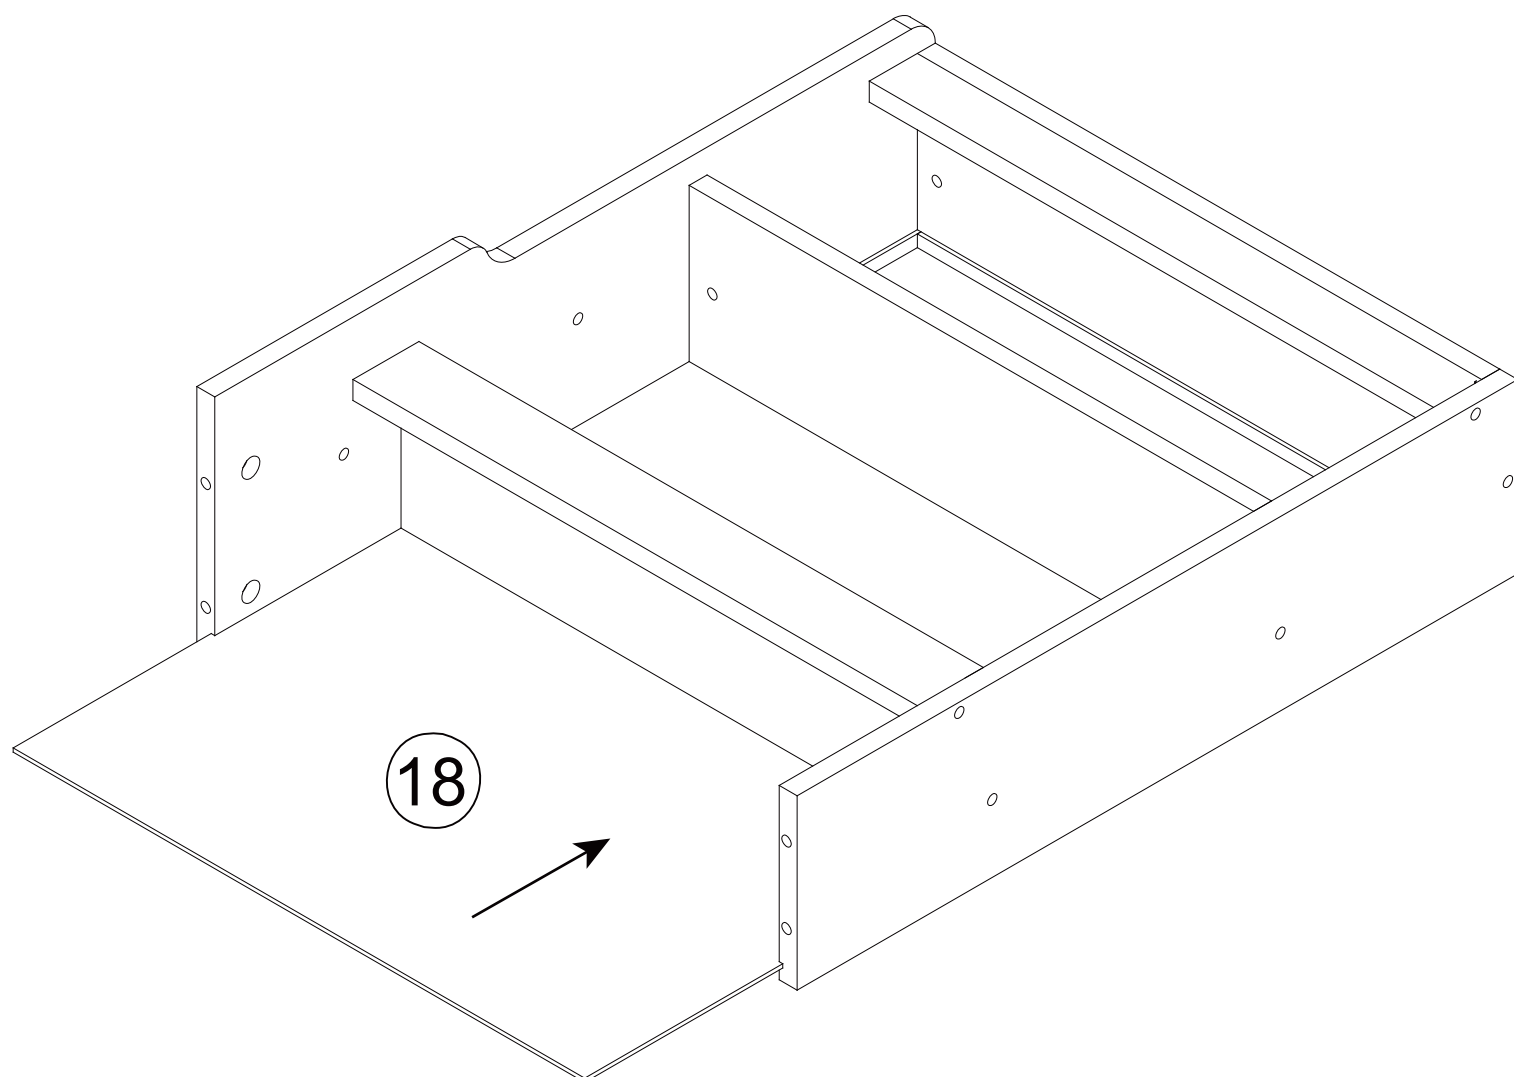


Step 13

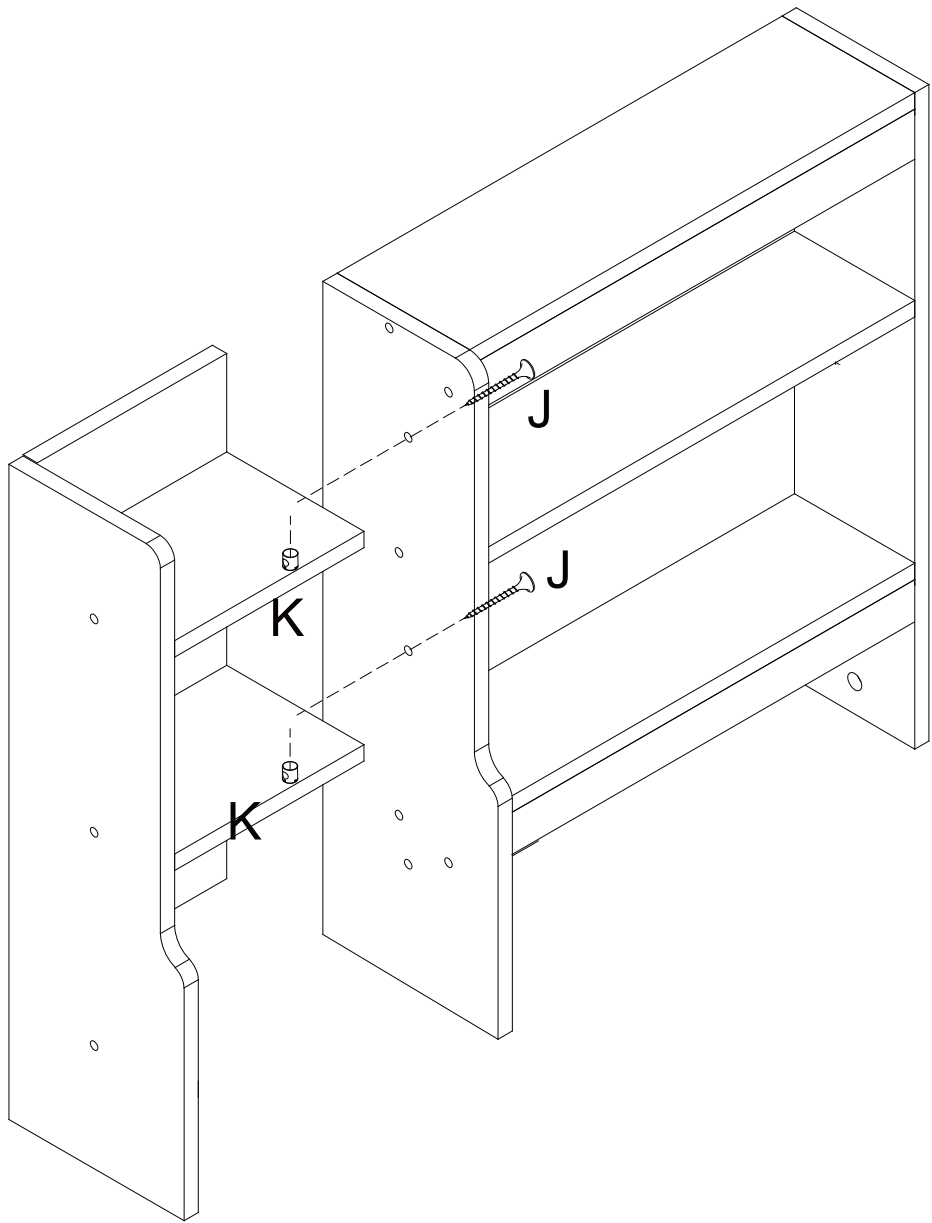


Step 14

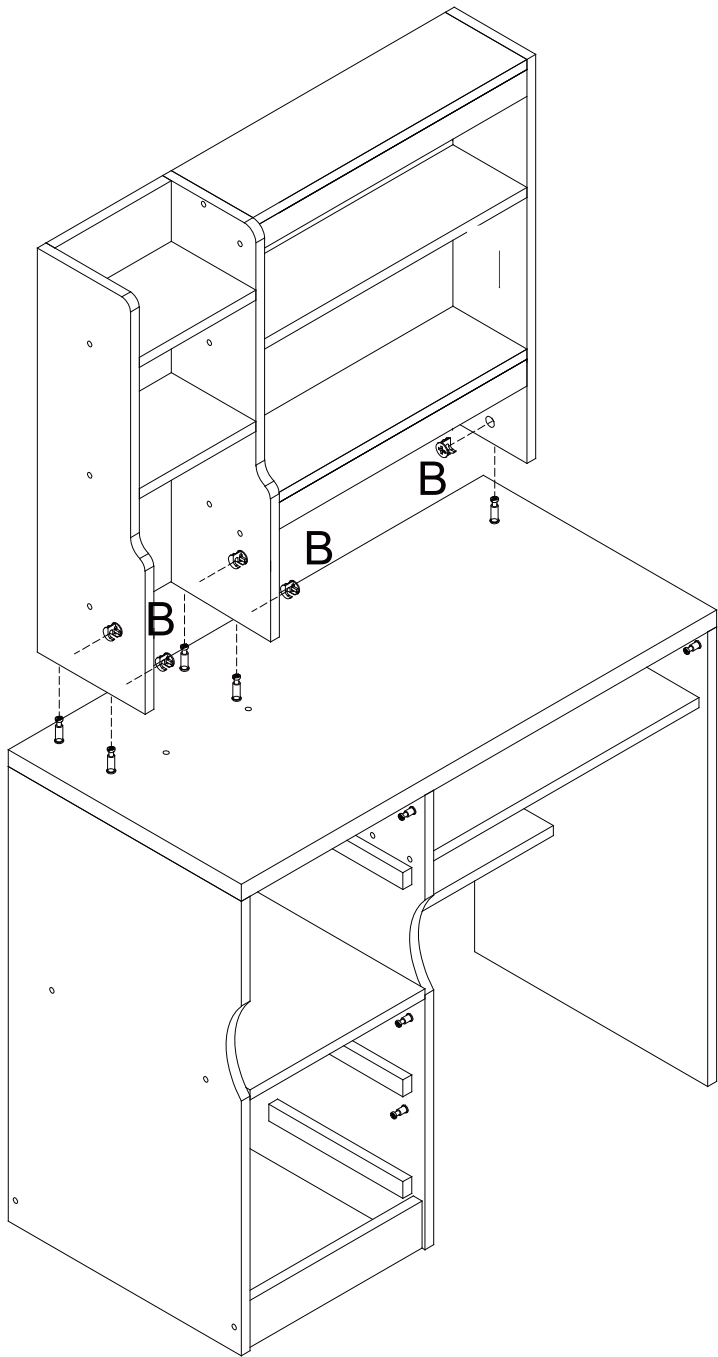


Step 15

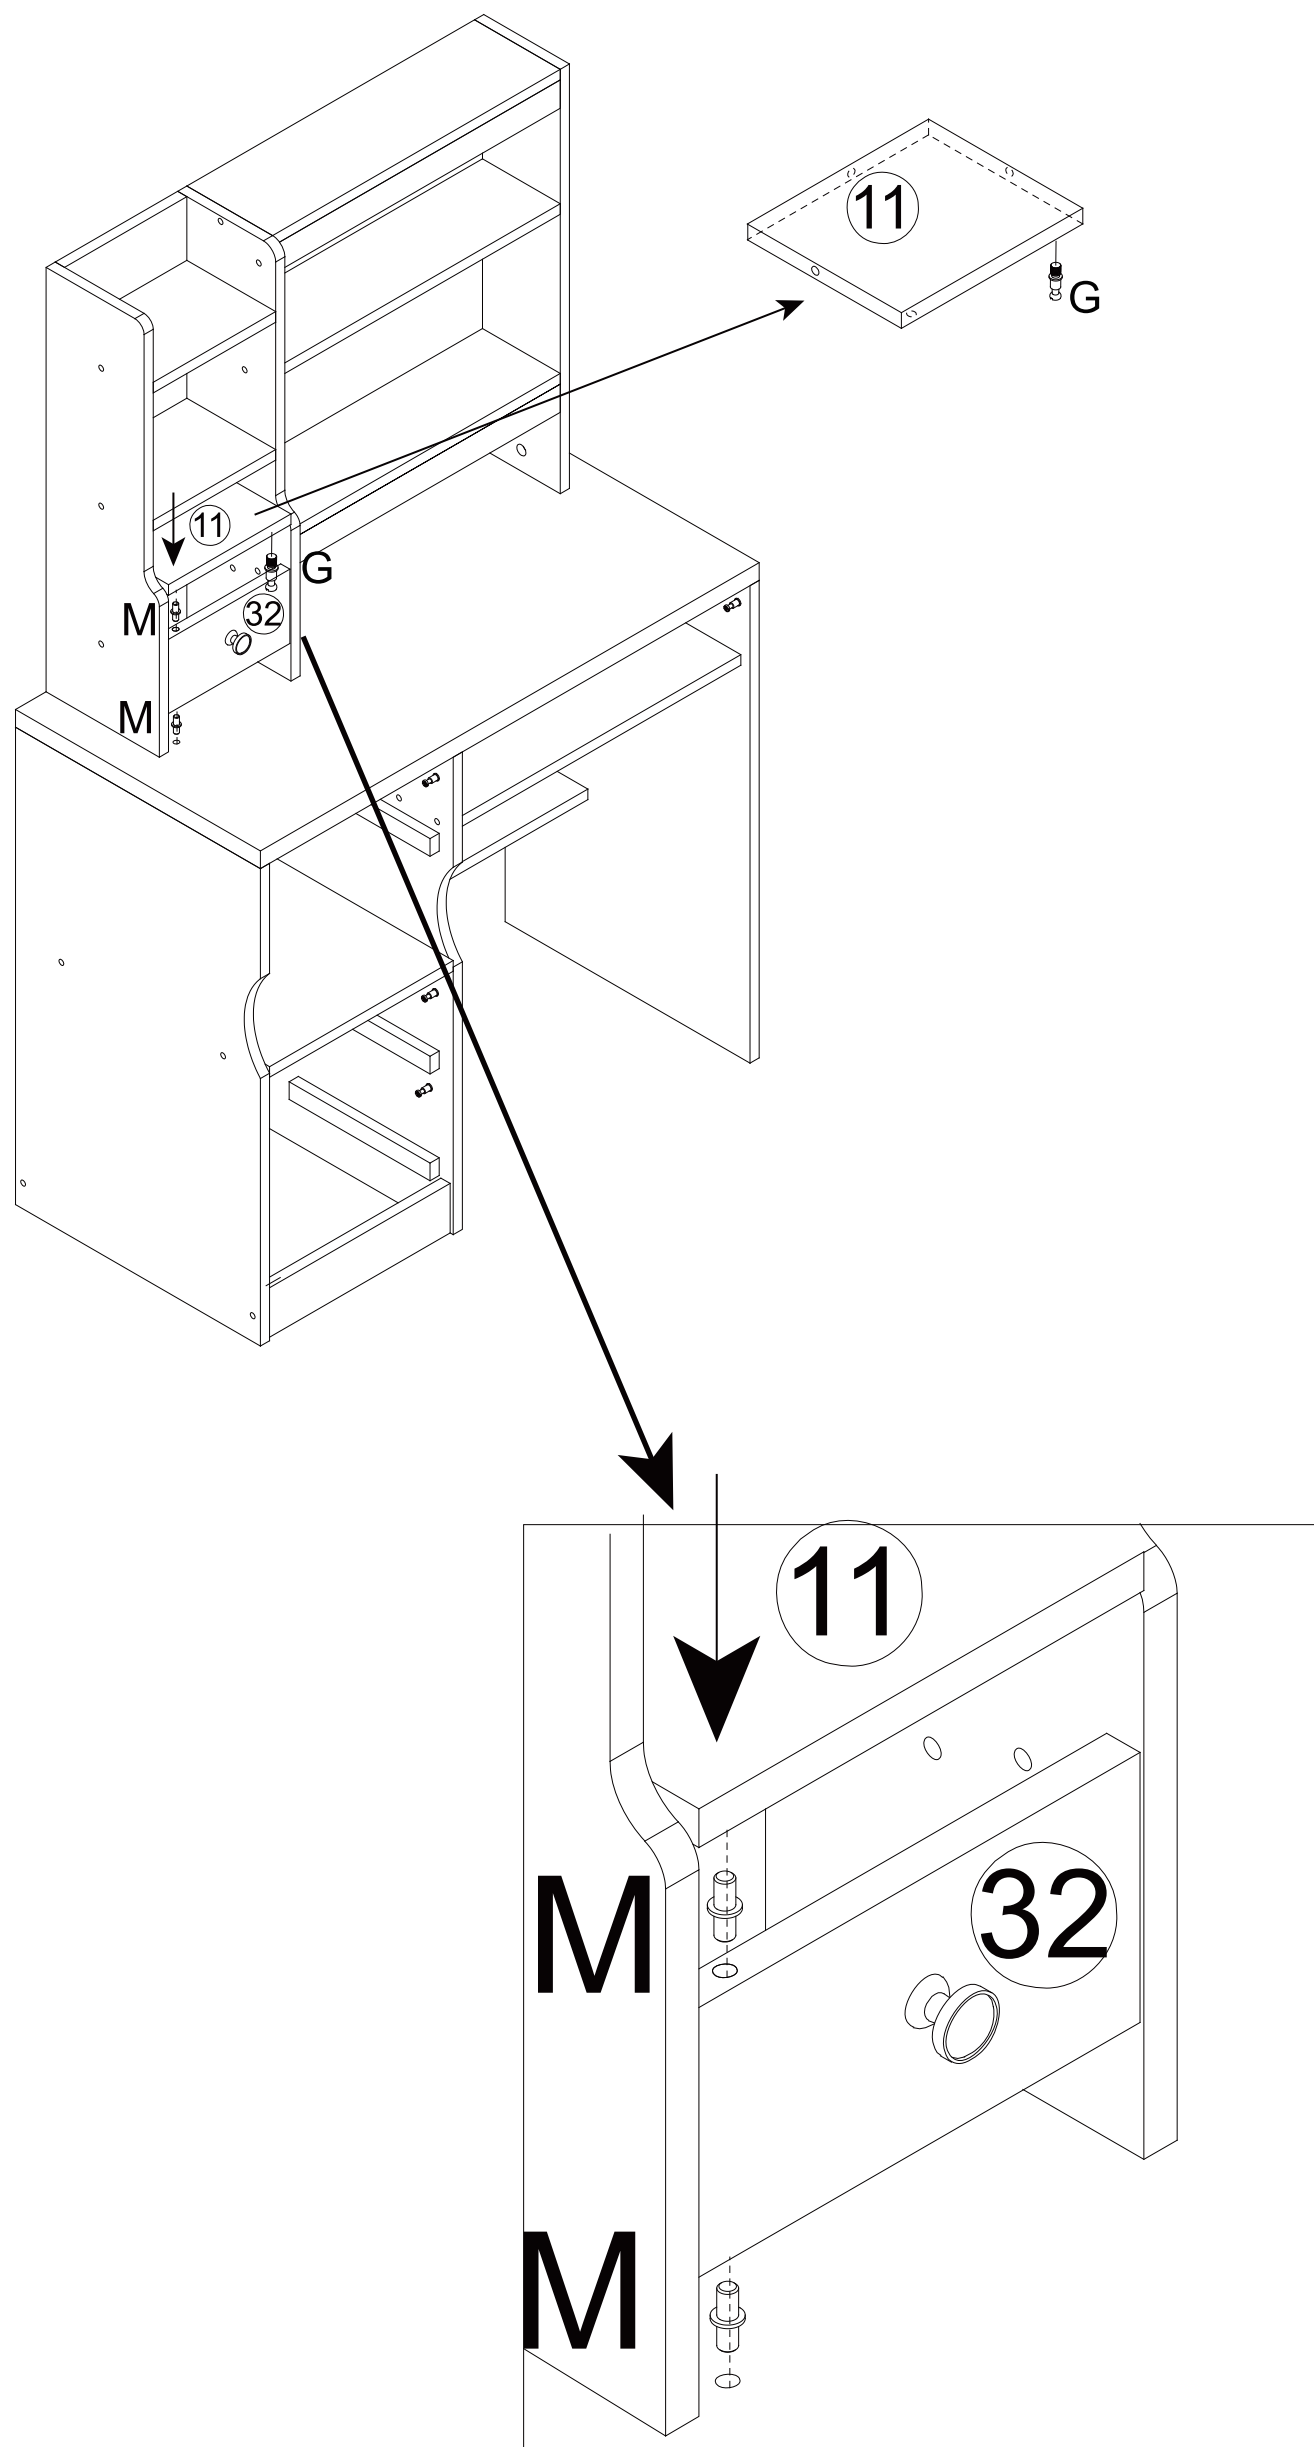


Step 16

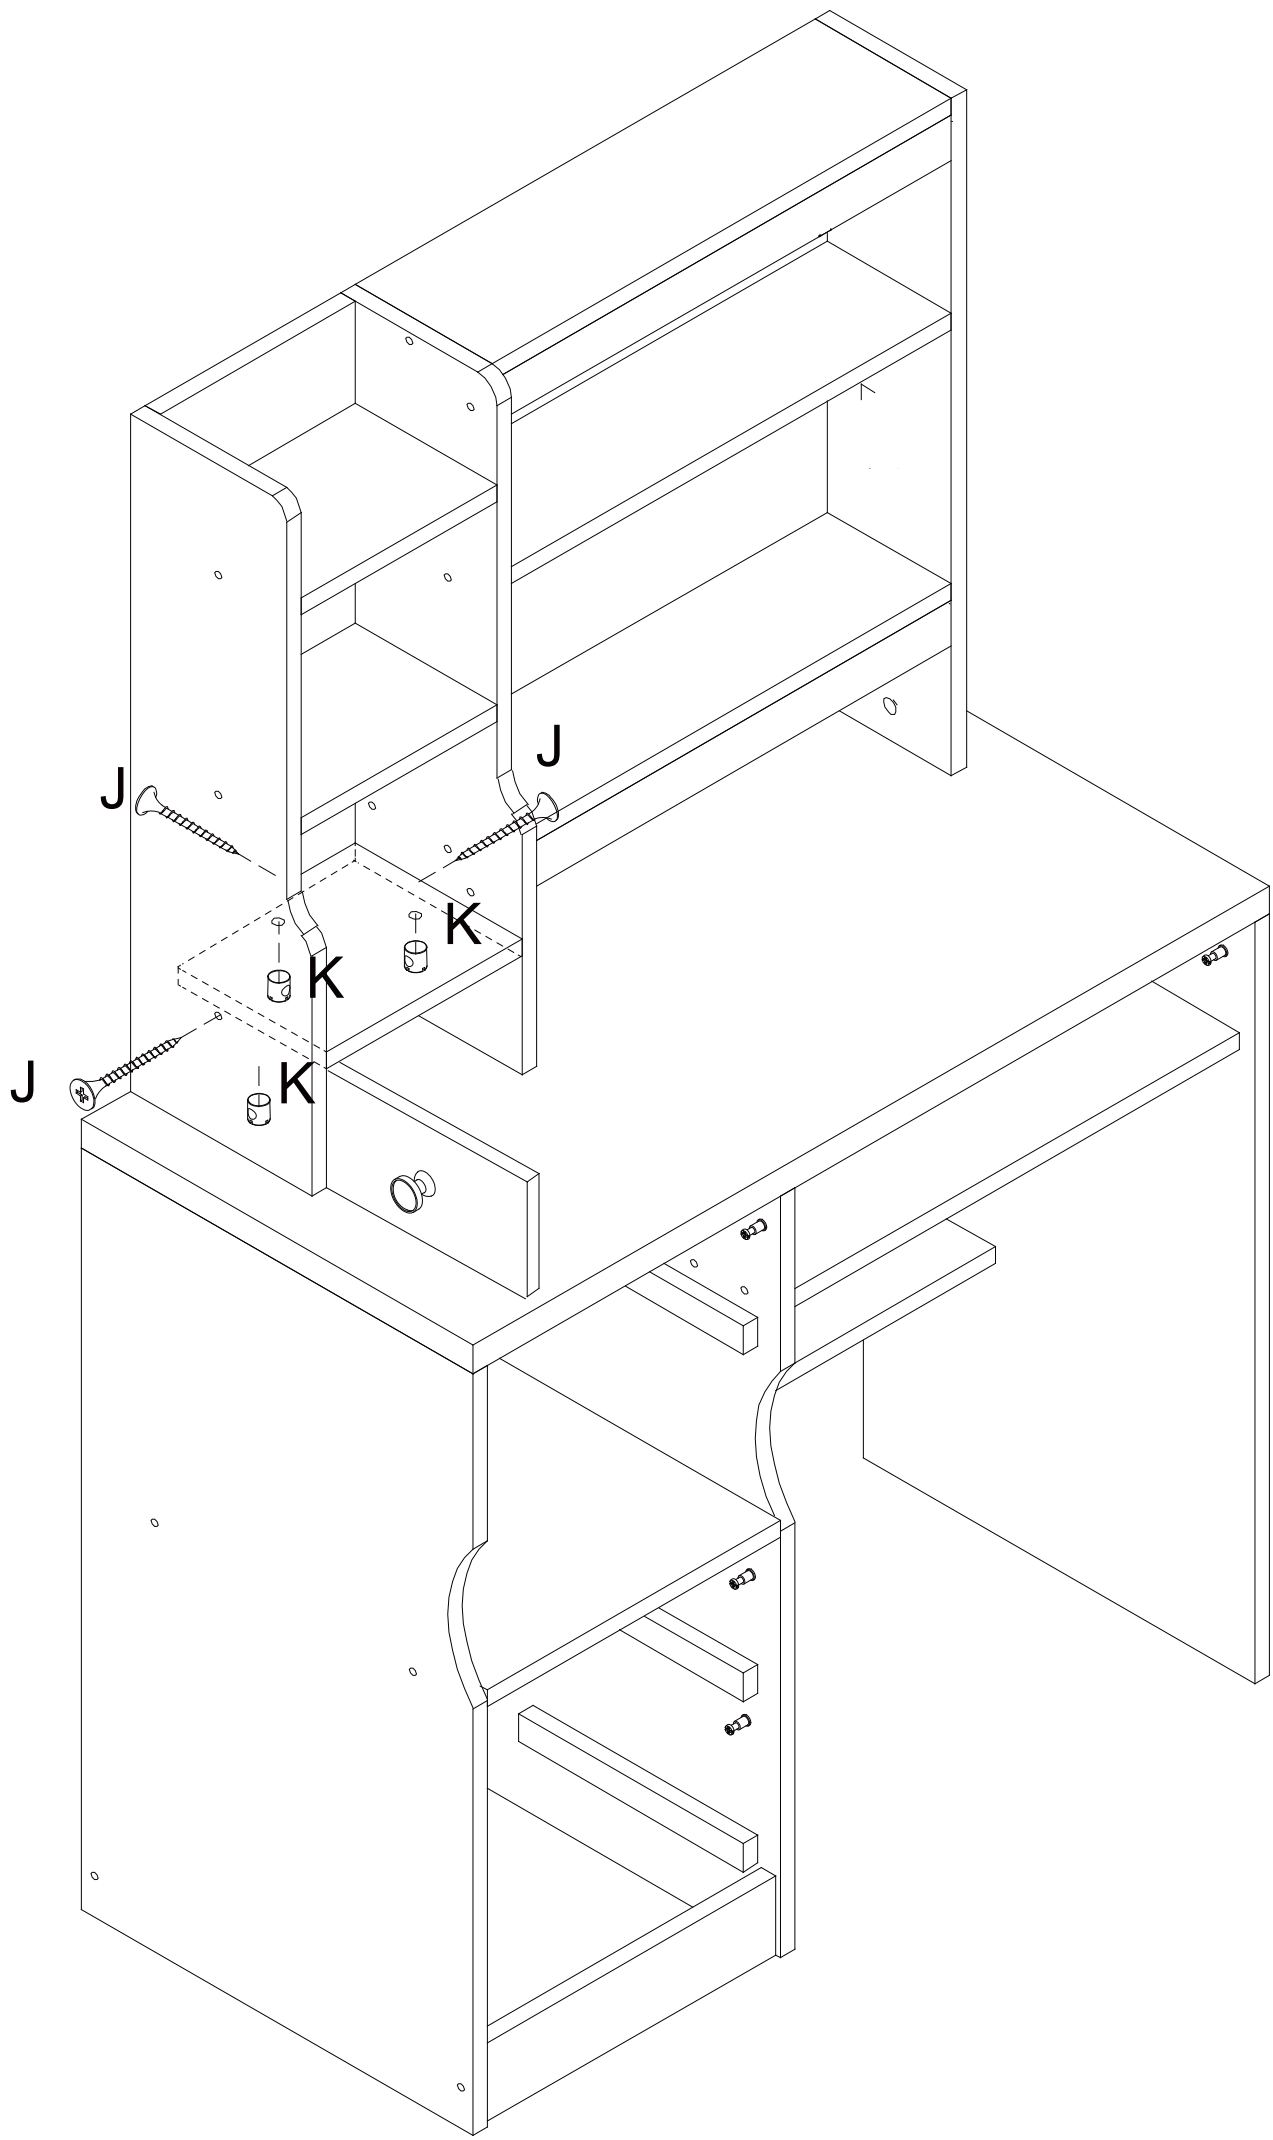


Step 18

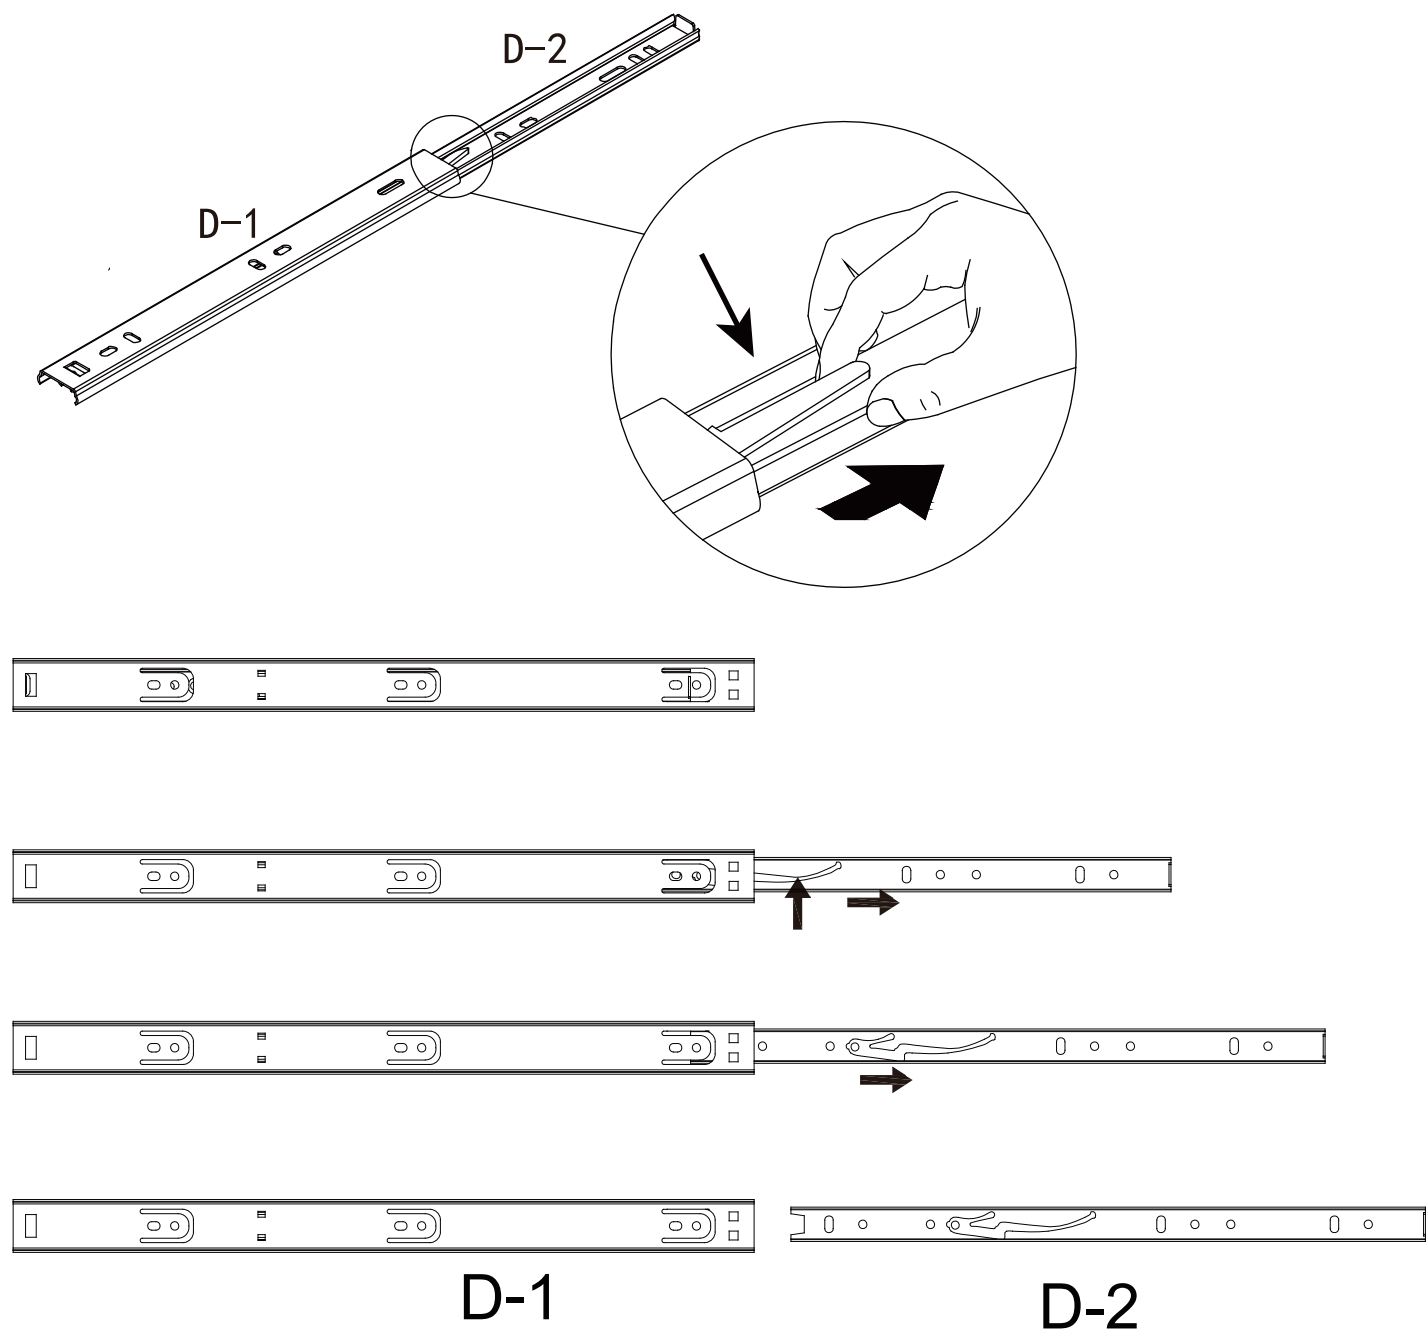




Step 19

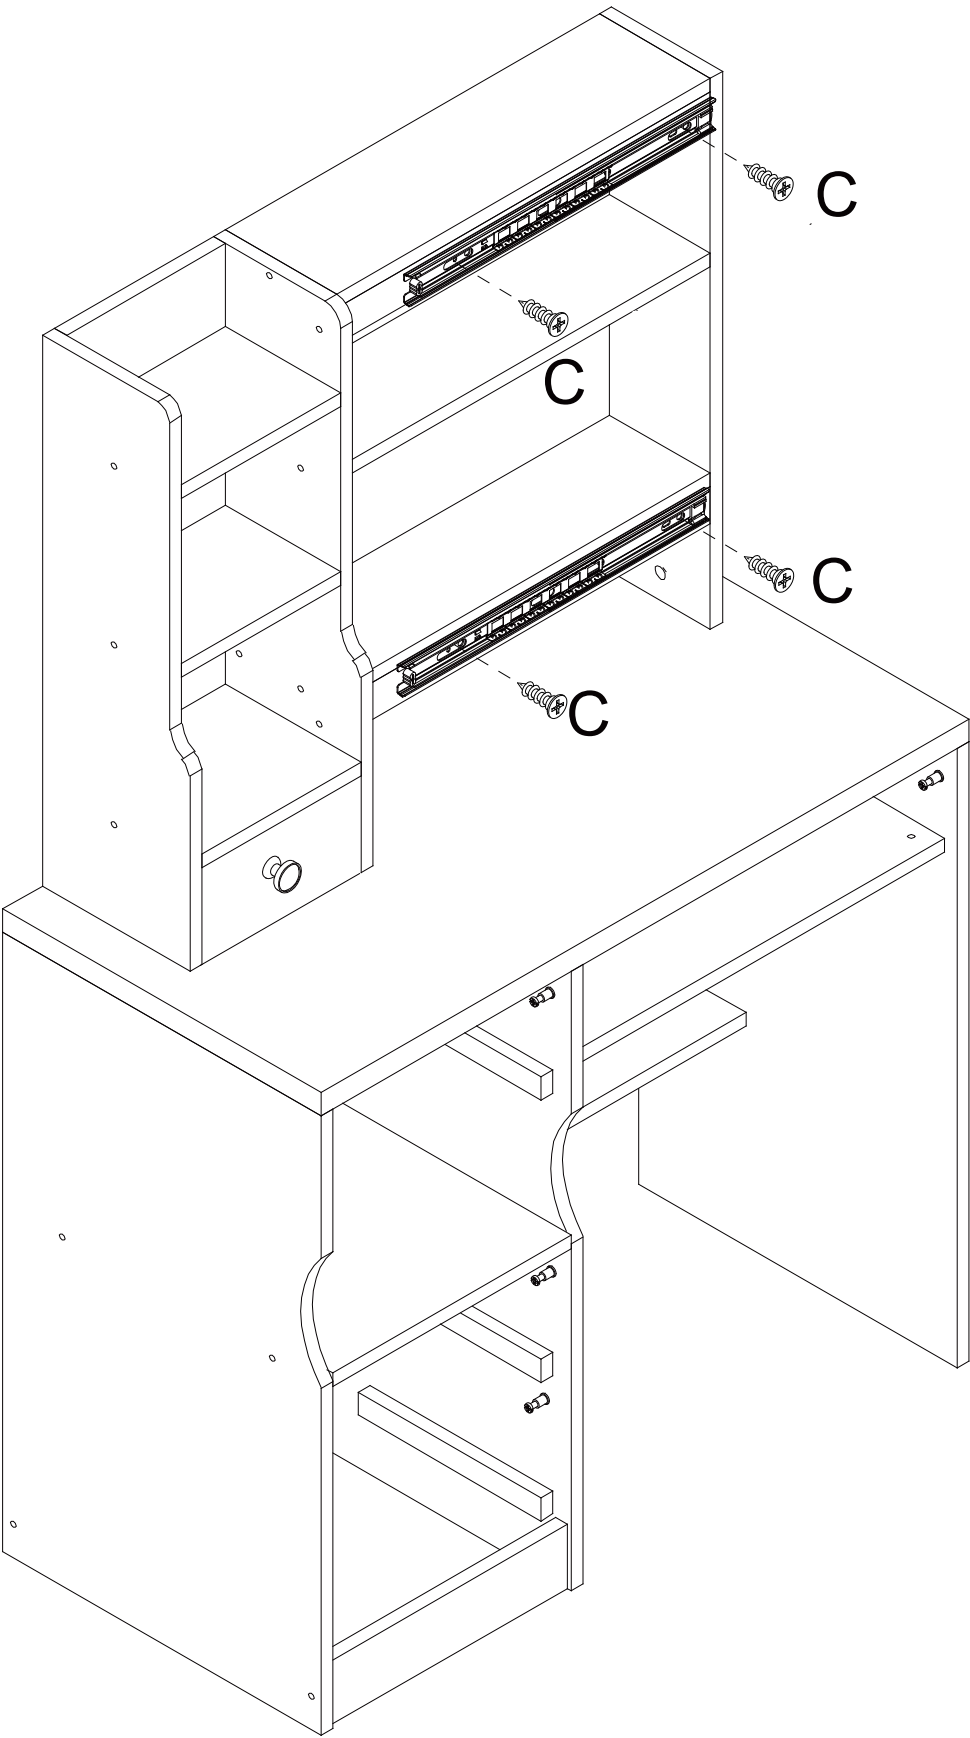

Step 20

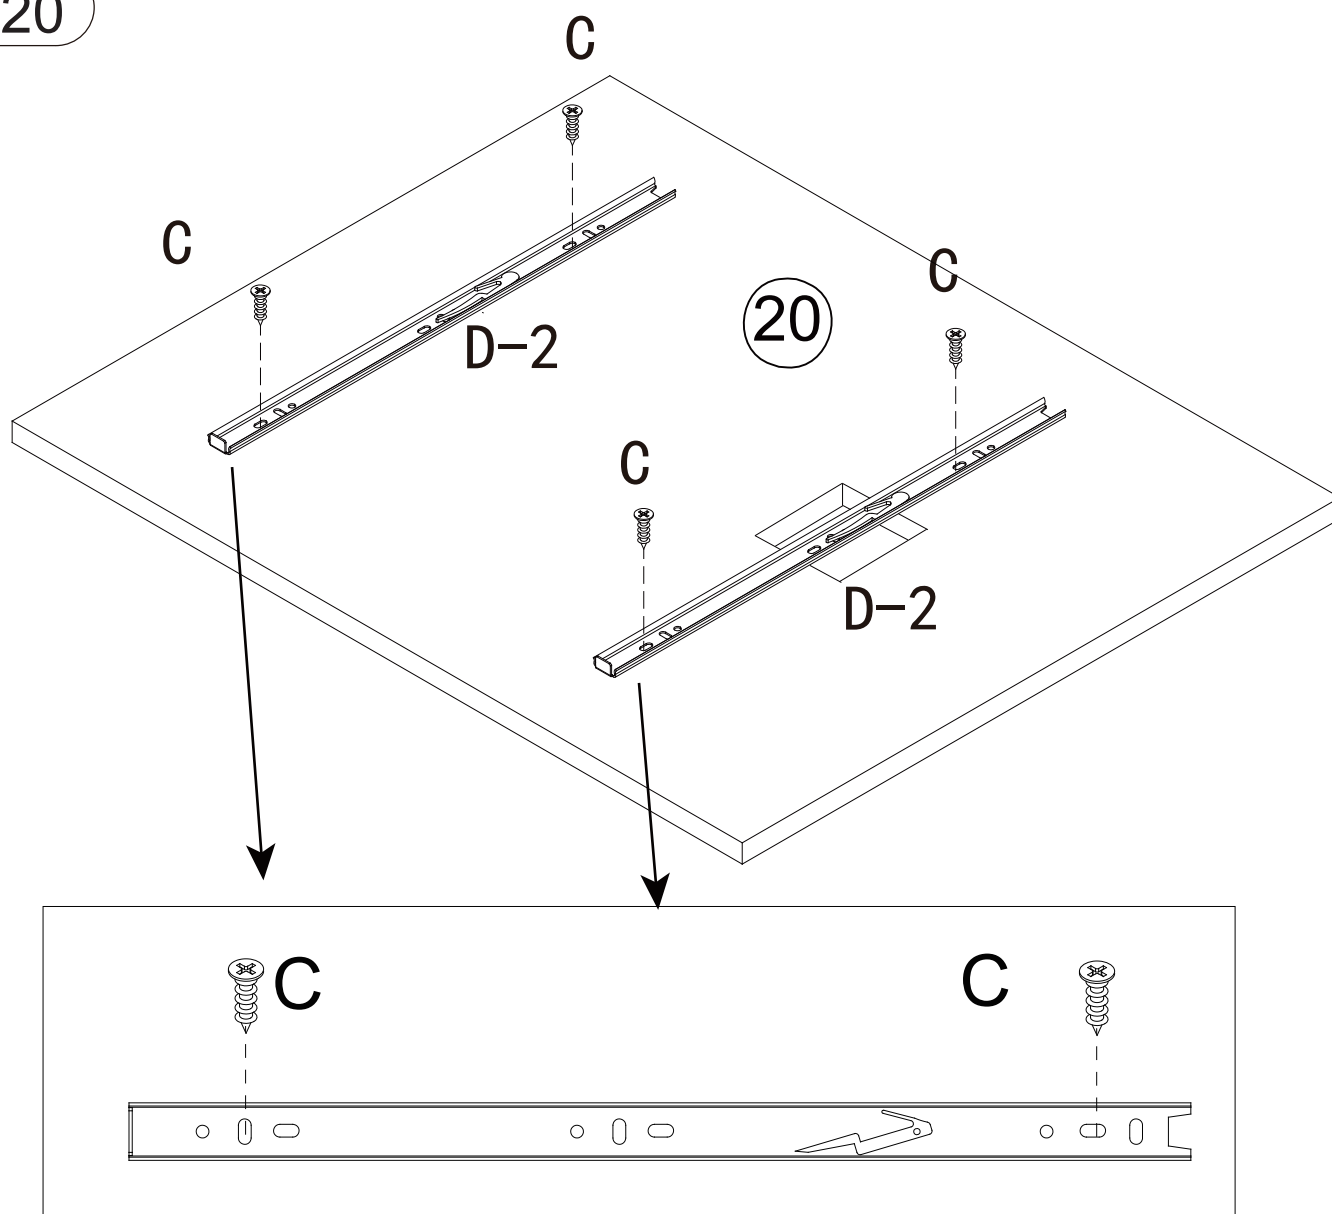


Step 21

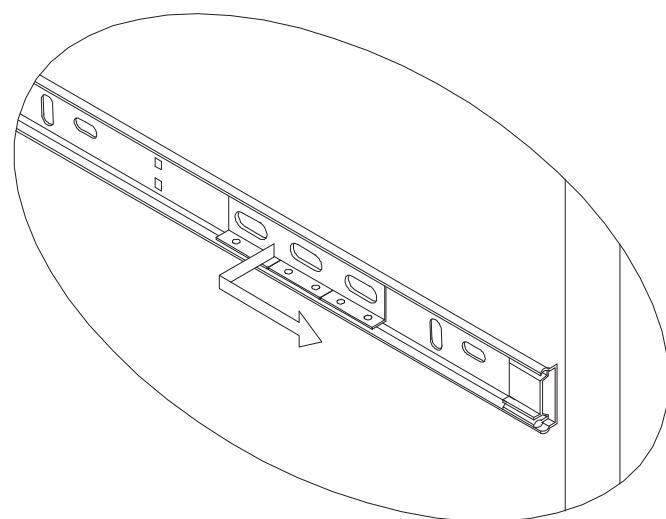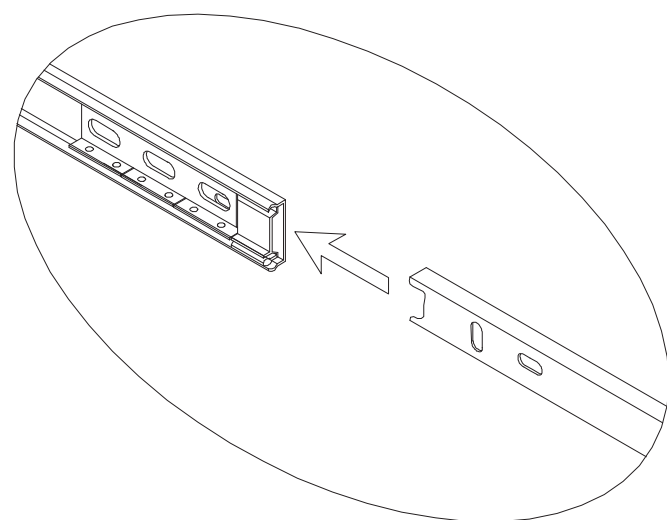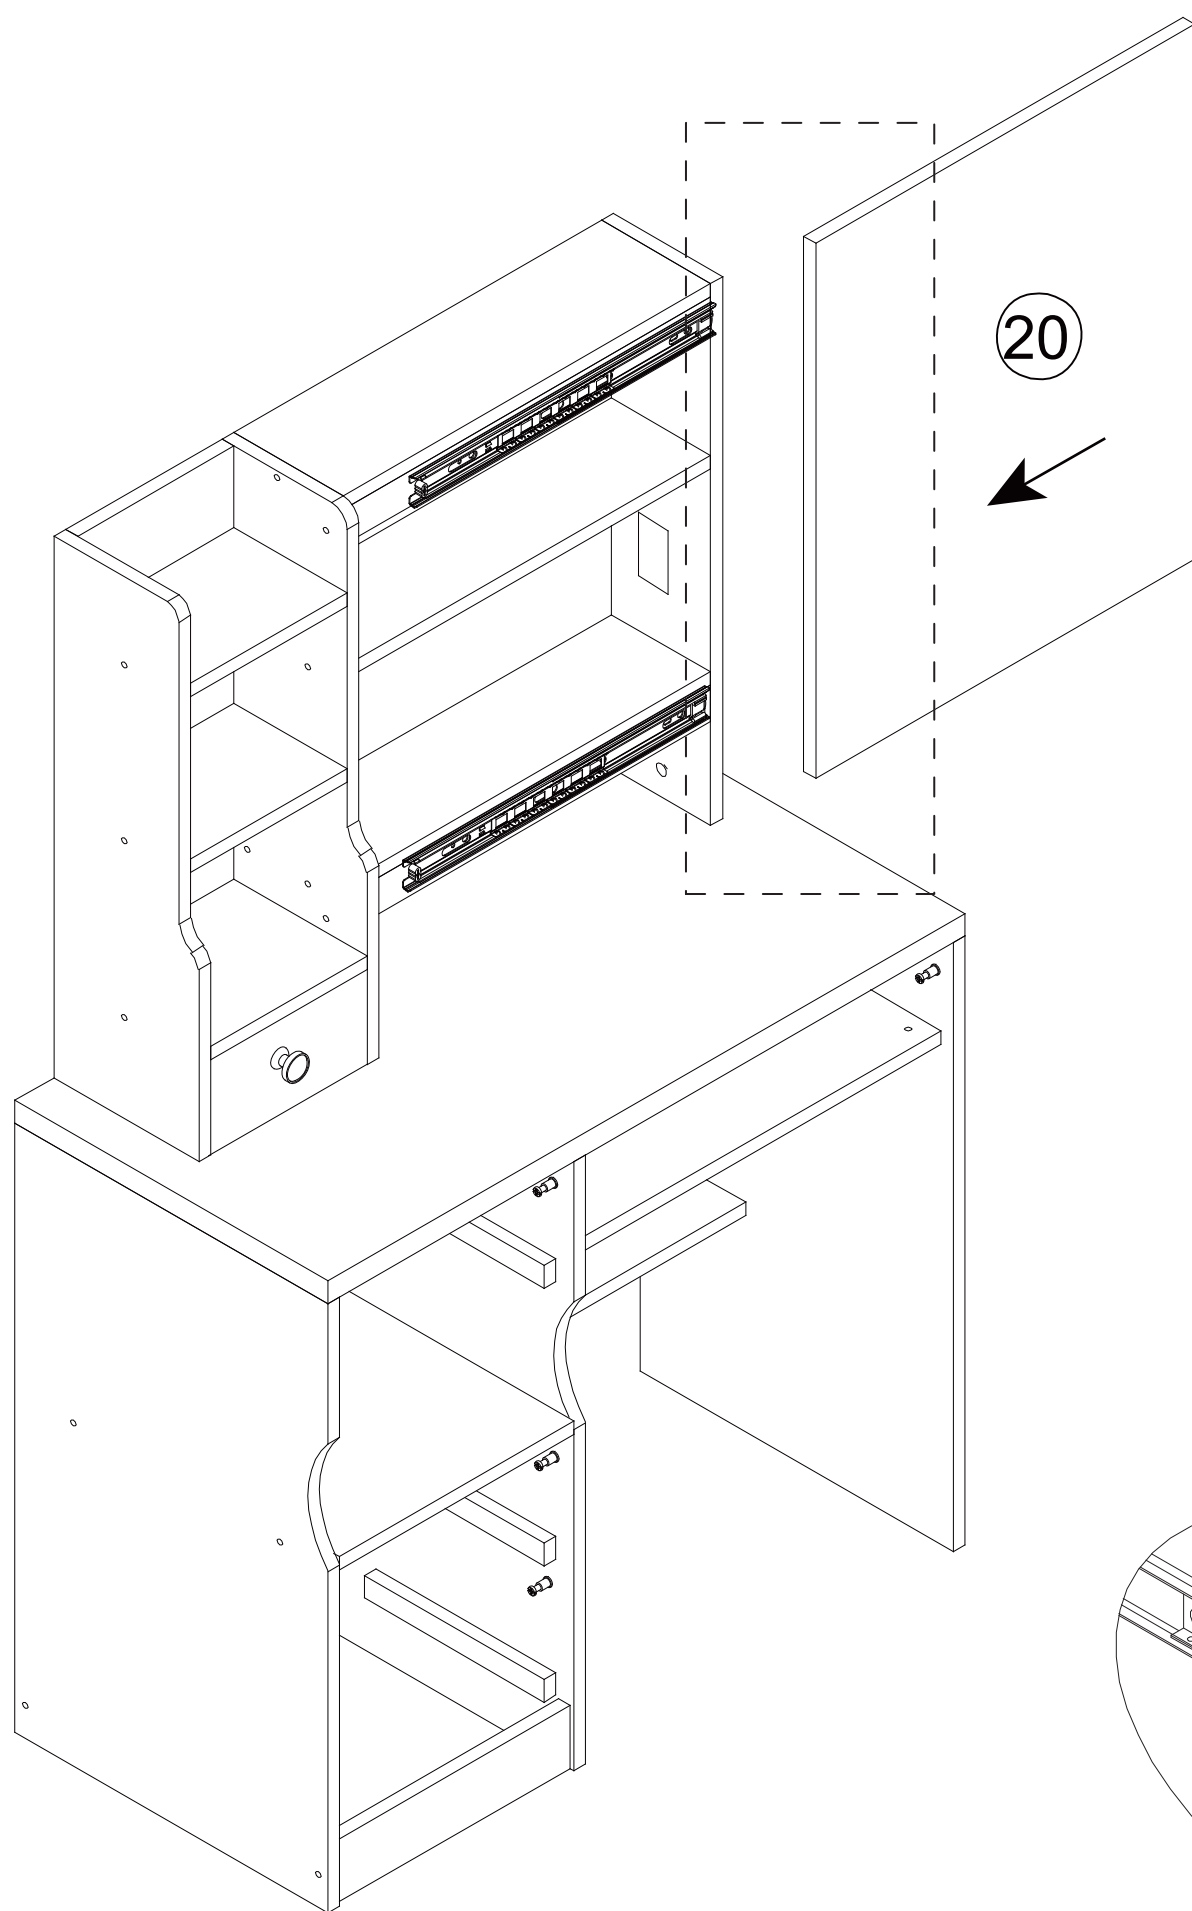




Step 23

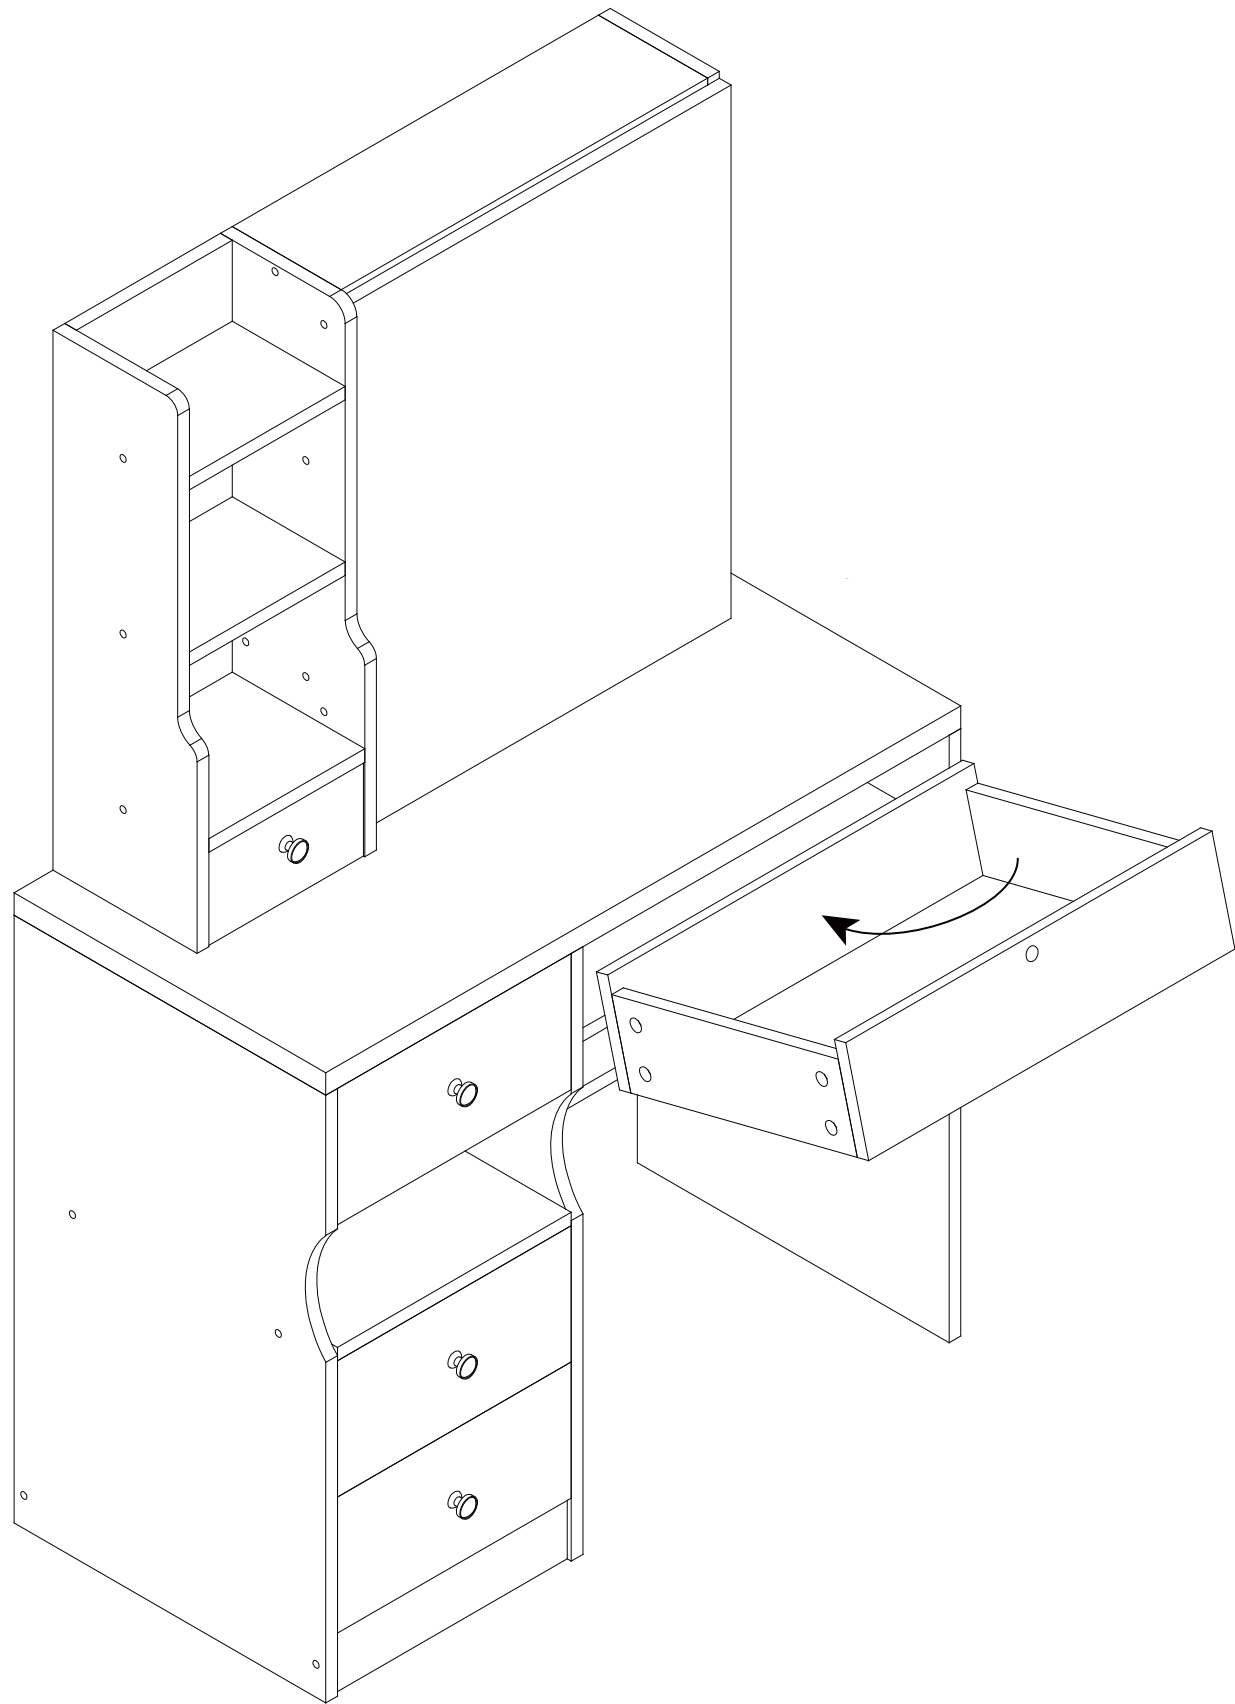

Please note that when placing the drawer in, the drawer positioning pin will block the drawer. Therefore, please follow the diagram to first insert the inner edge of the drawer using a concave method, and then push the drawer flat.

Step 24

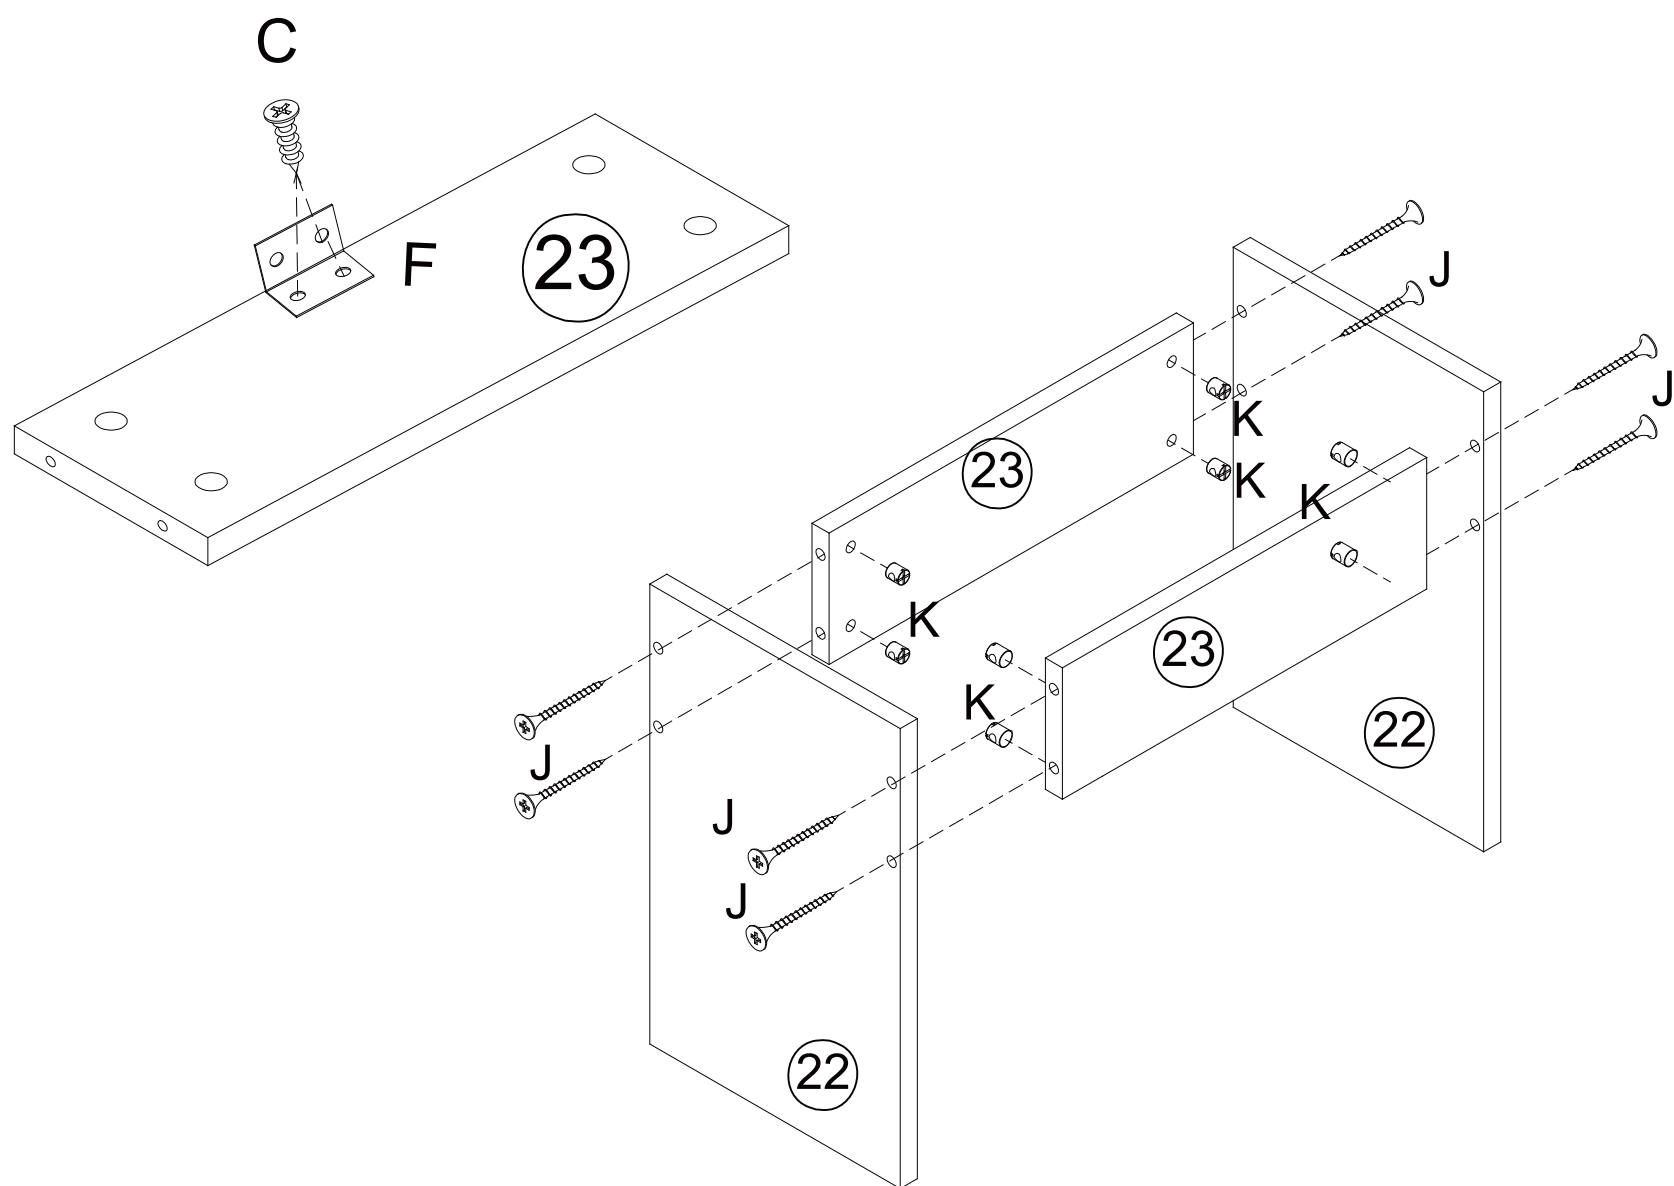

Step 24

