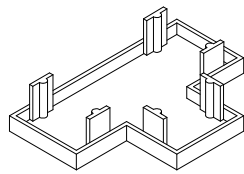
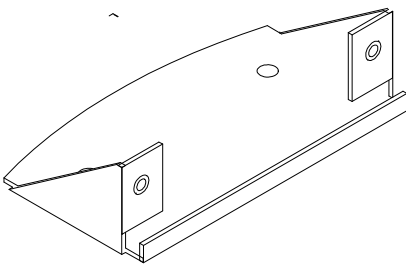
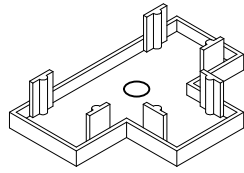

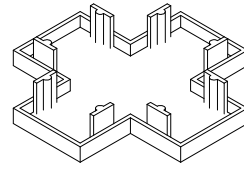
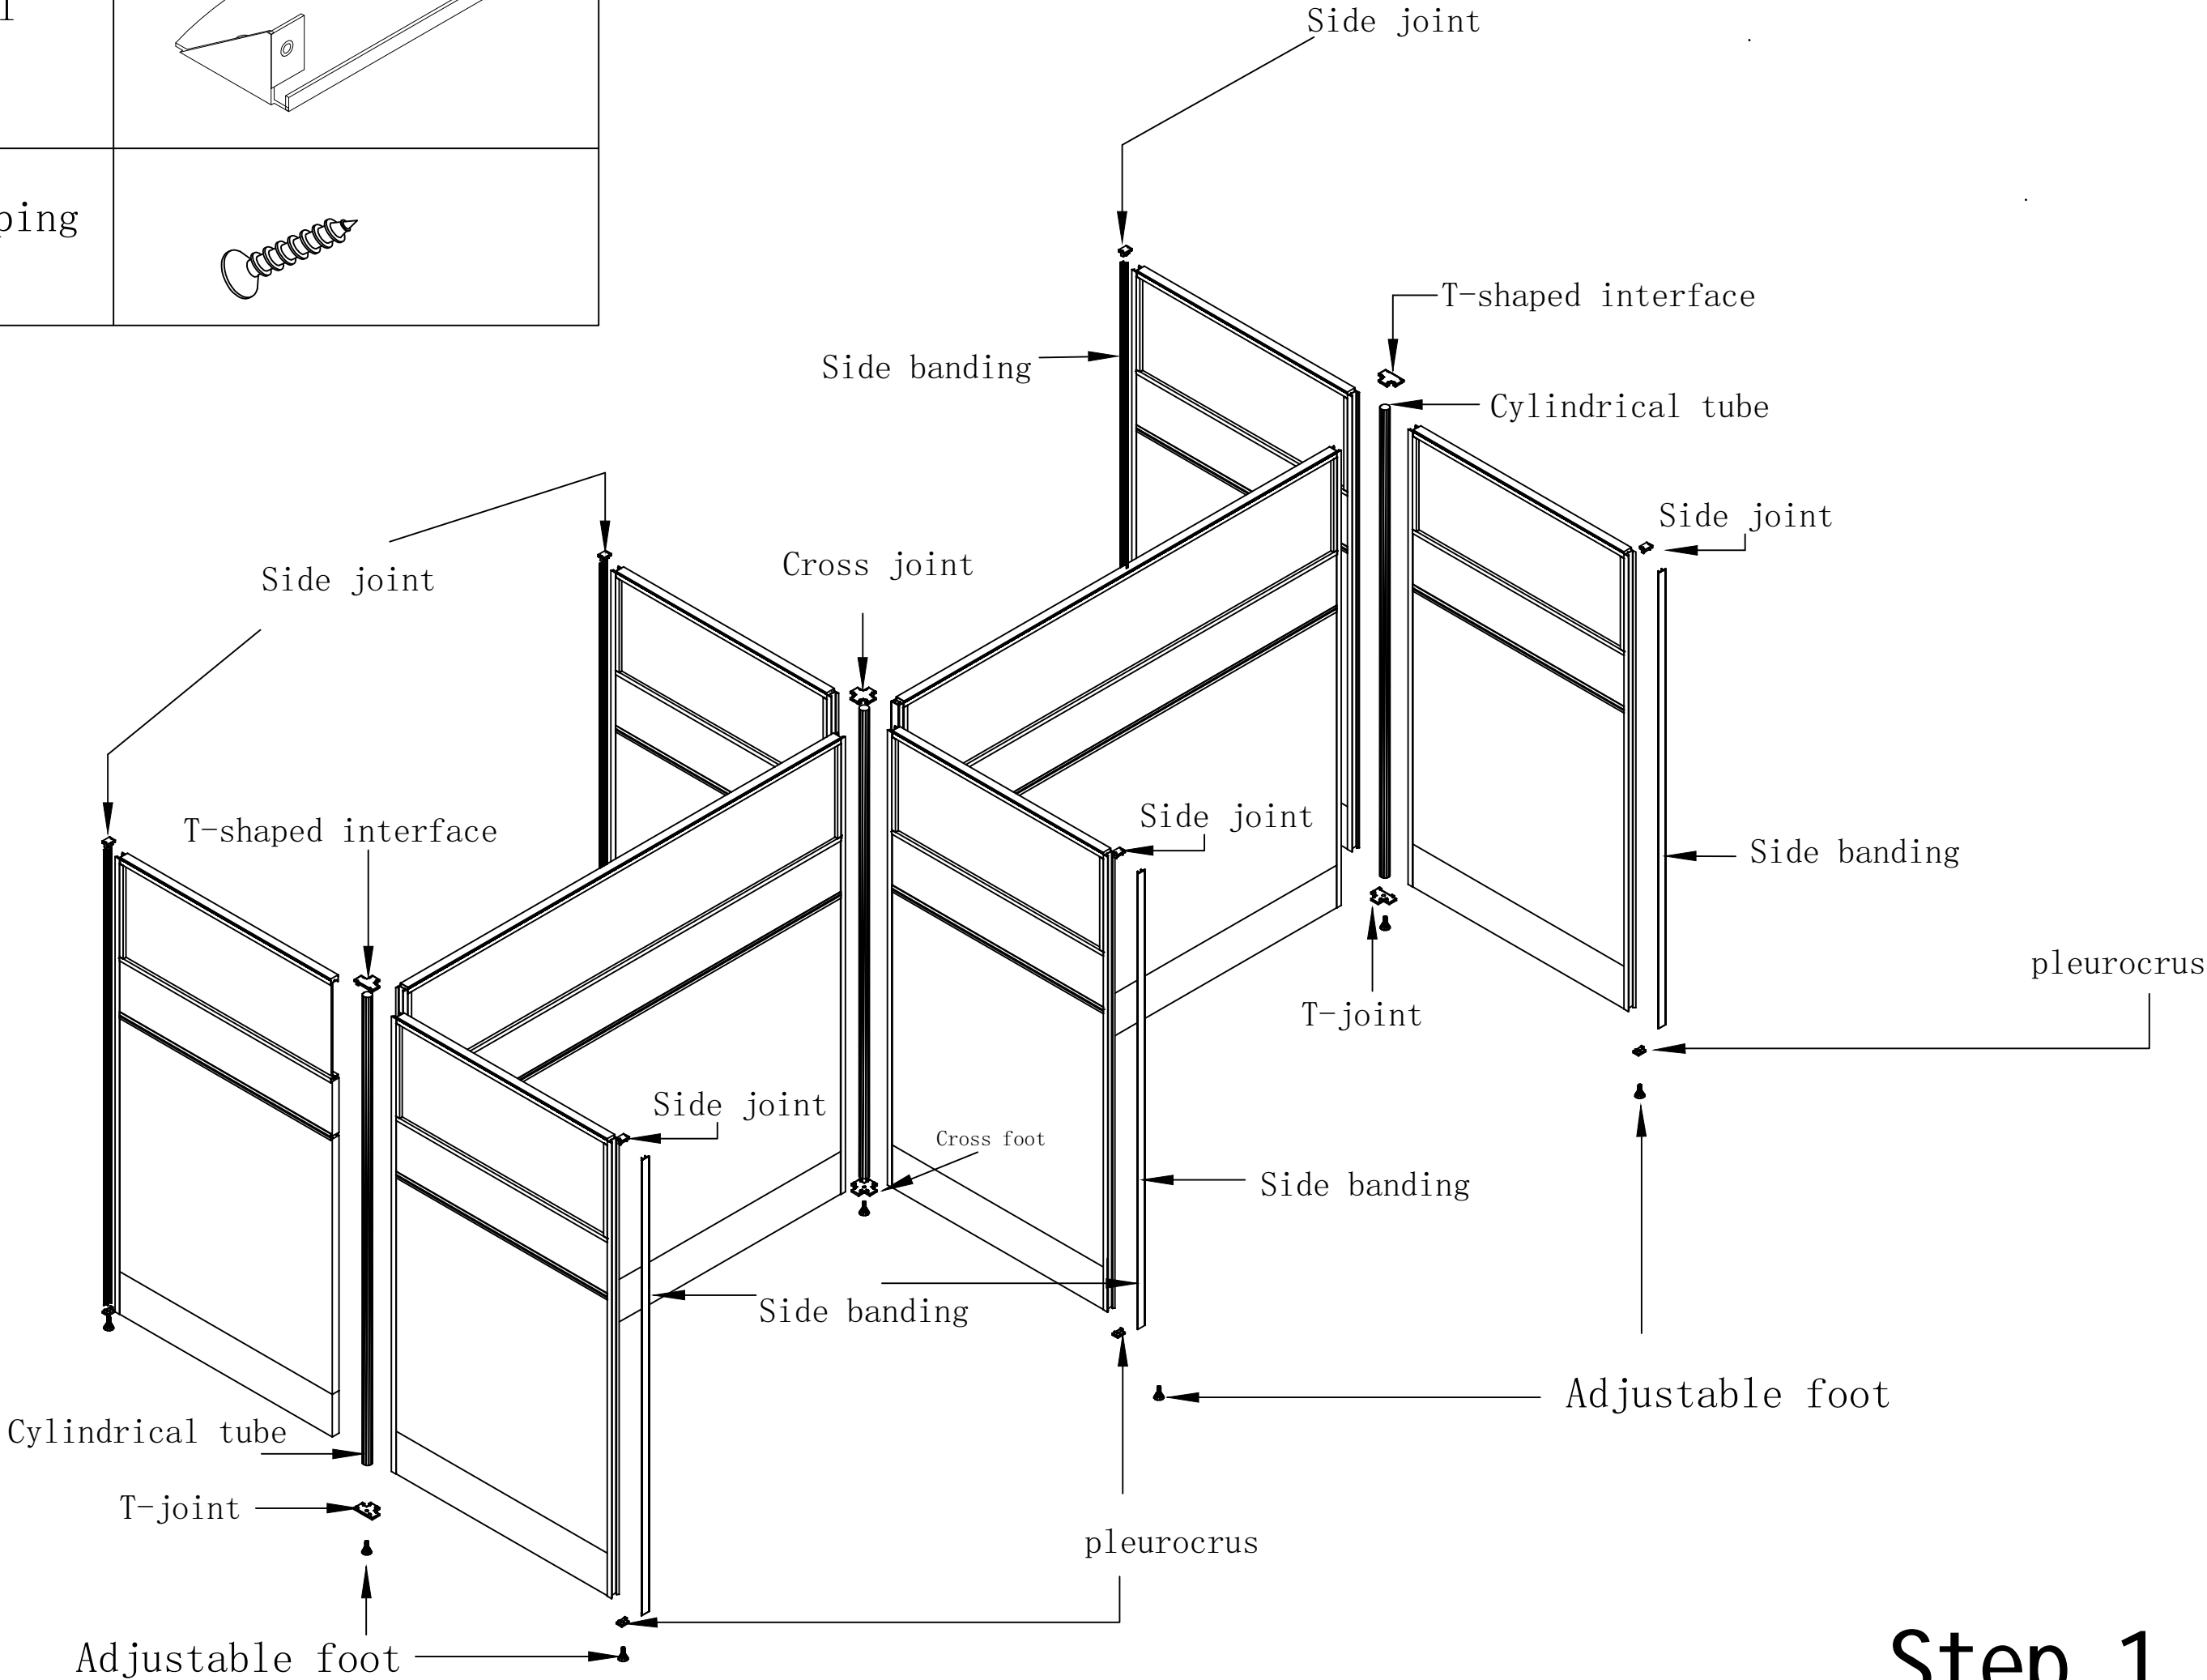
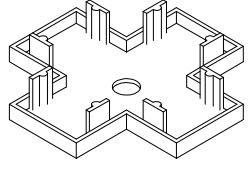
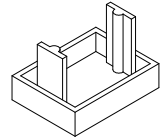
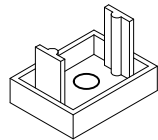
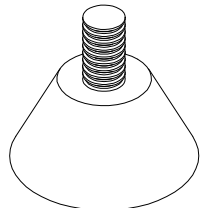
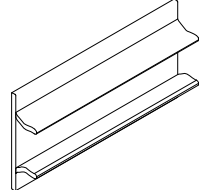
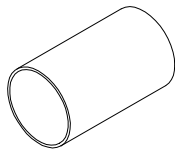



Installation guide

T-shaped interface		corbel	
T-joint		Self-tapping yarn	
Cross joint			
Cross foot			
Side joint			
pleurocrus			
Adjustable foot			
Side banding			
Cylindrical tube			


Step 1

Step 2

The bracket arm is adjusted and fixed on the screen plate with self-tapping.

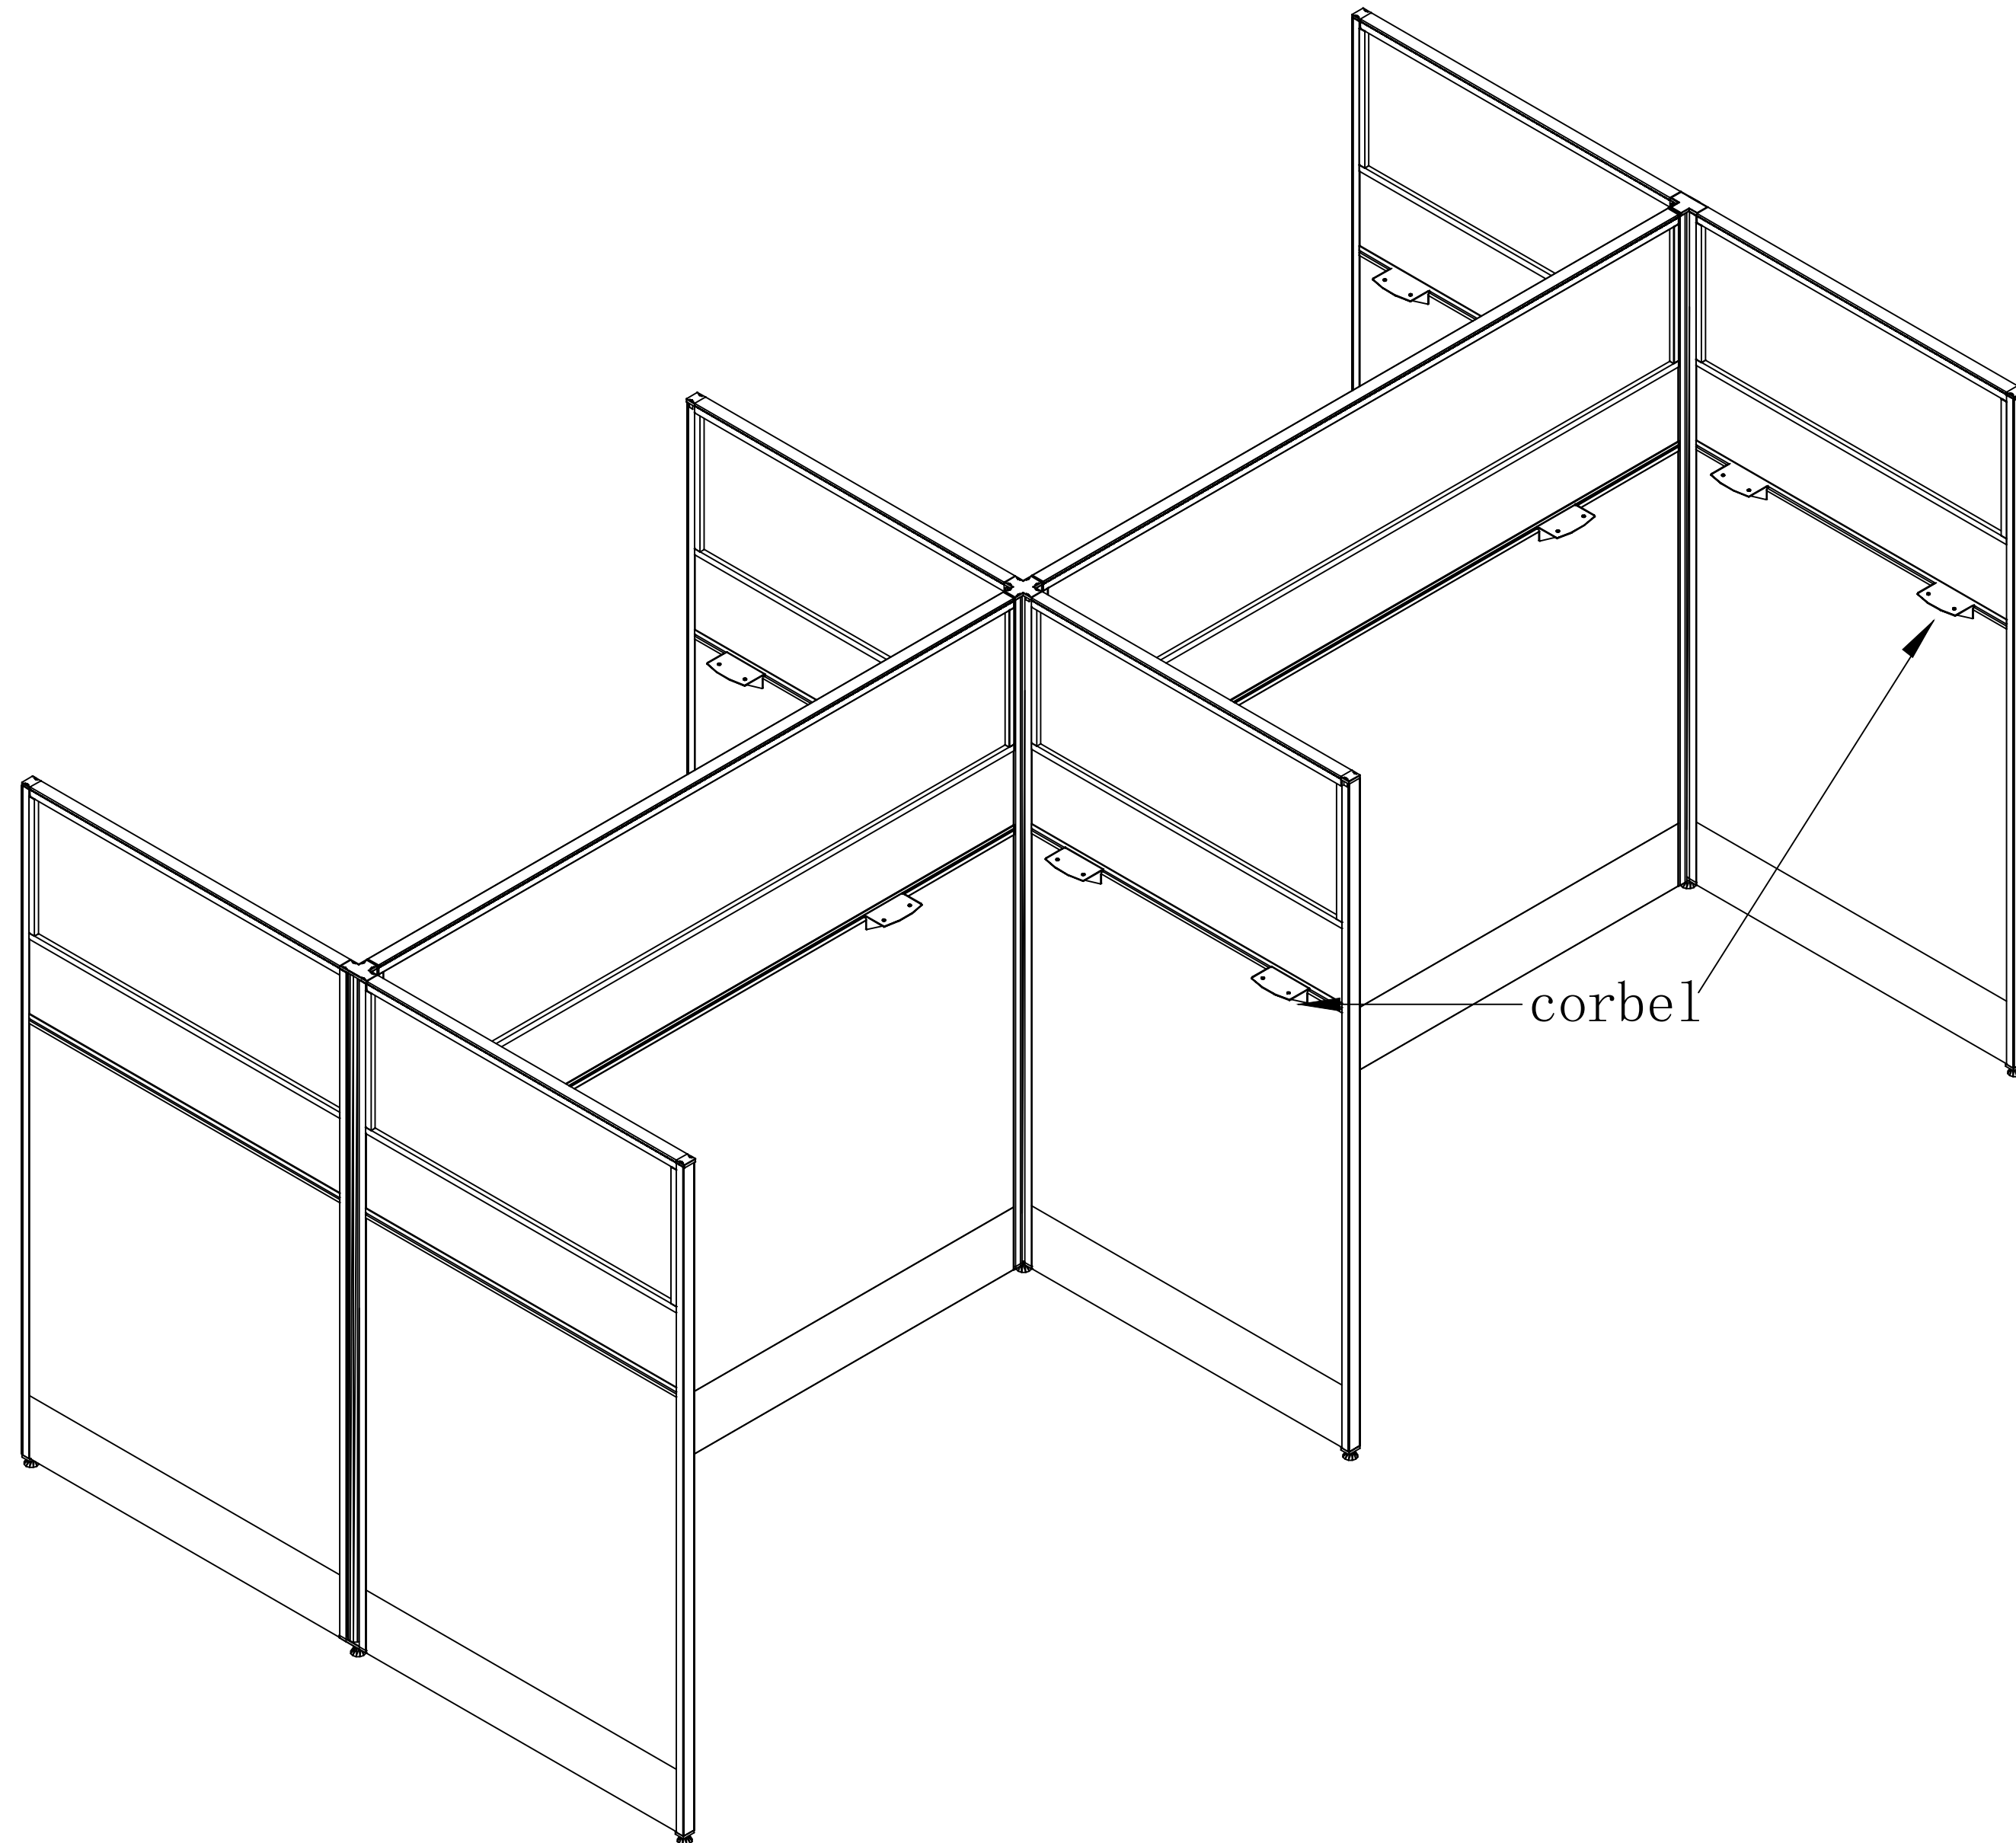

Step 3

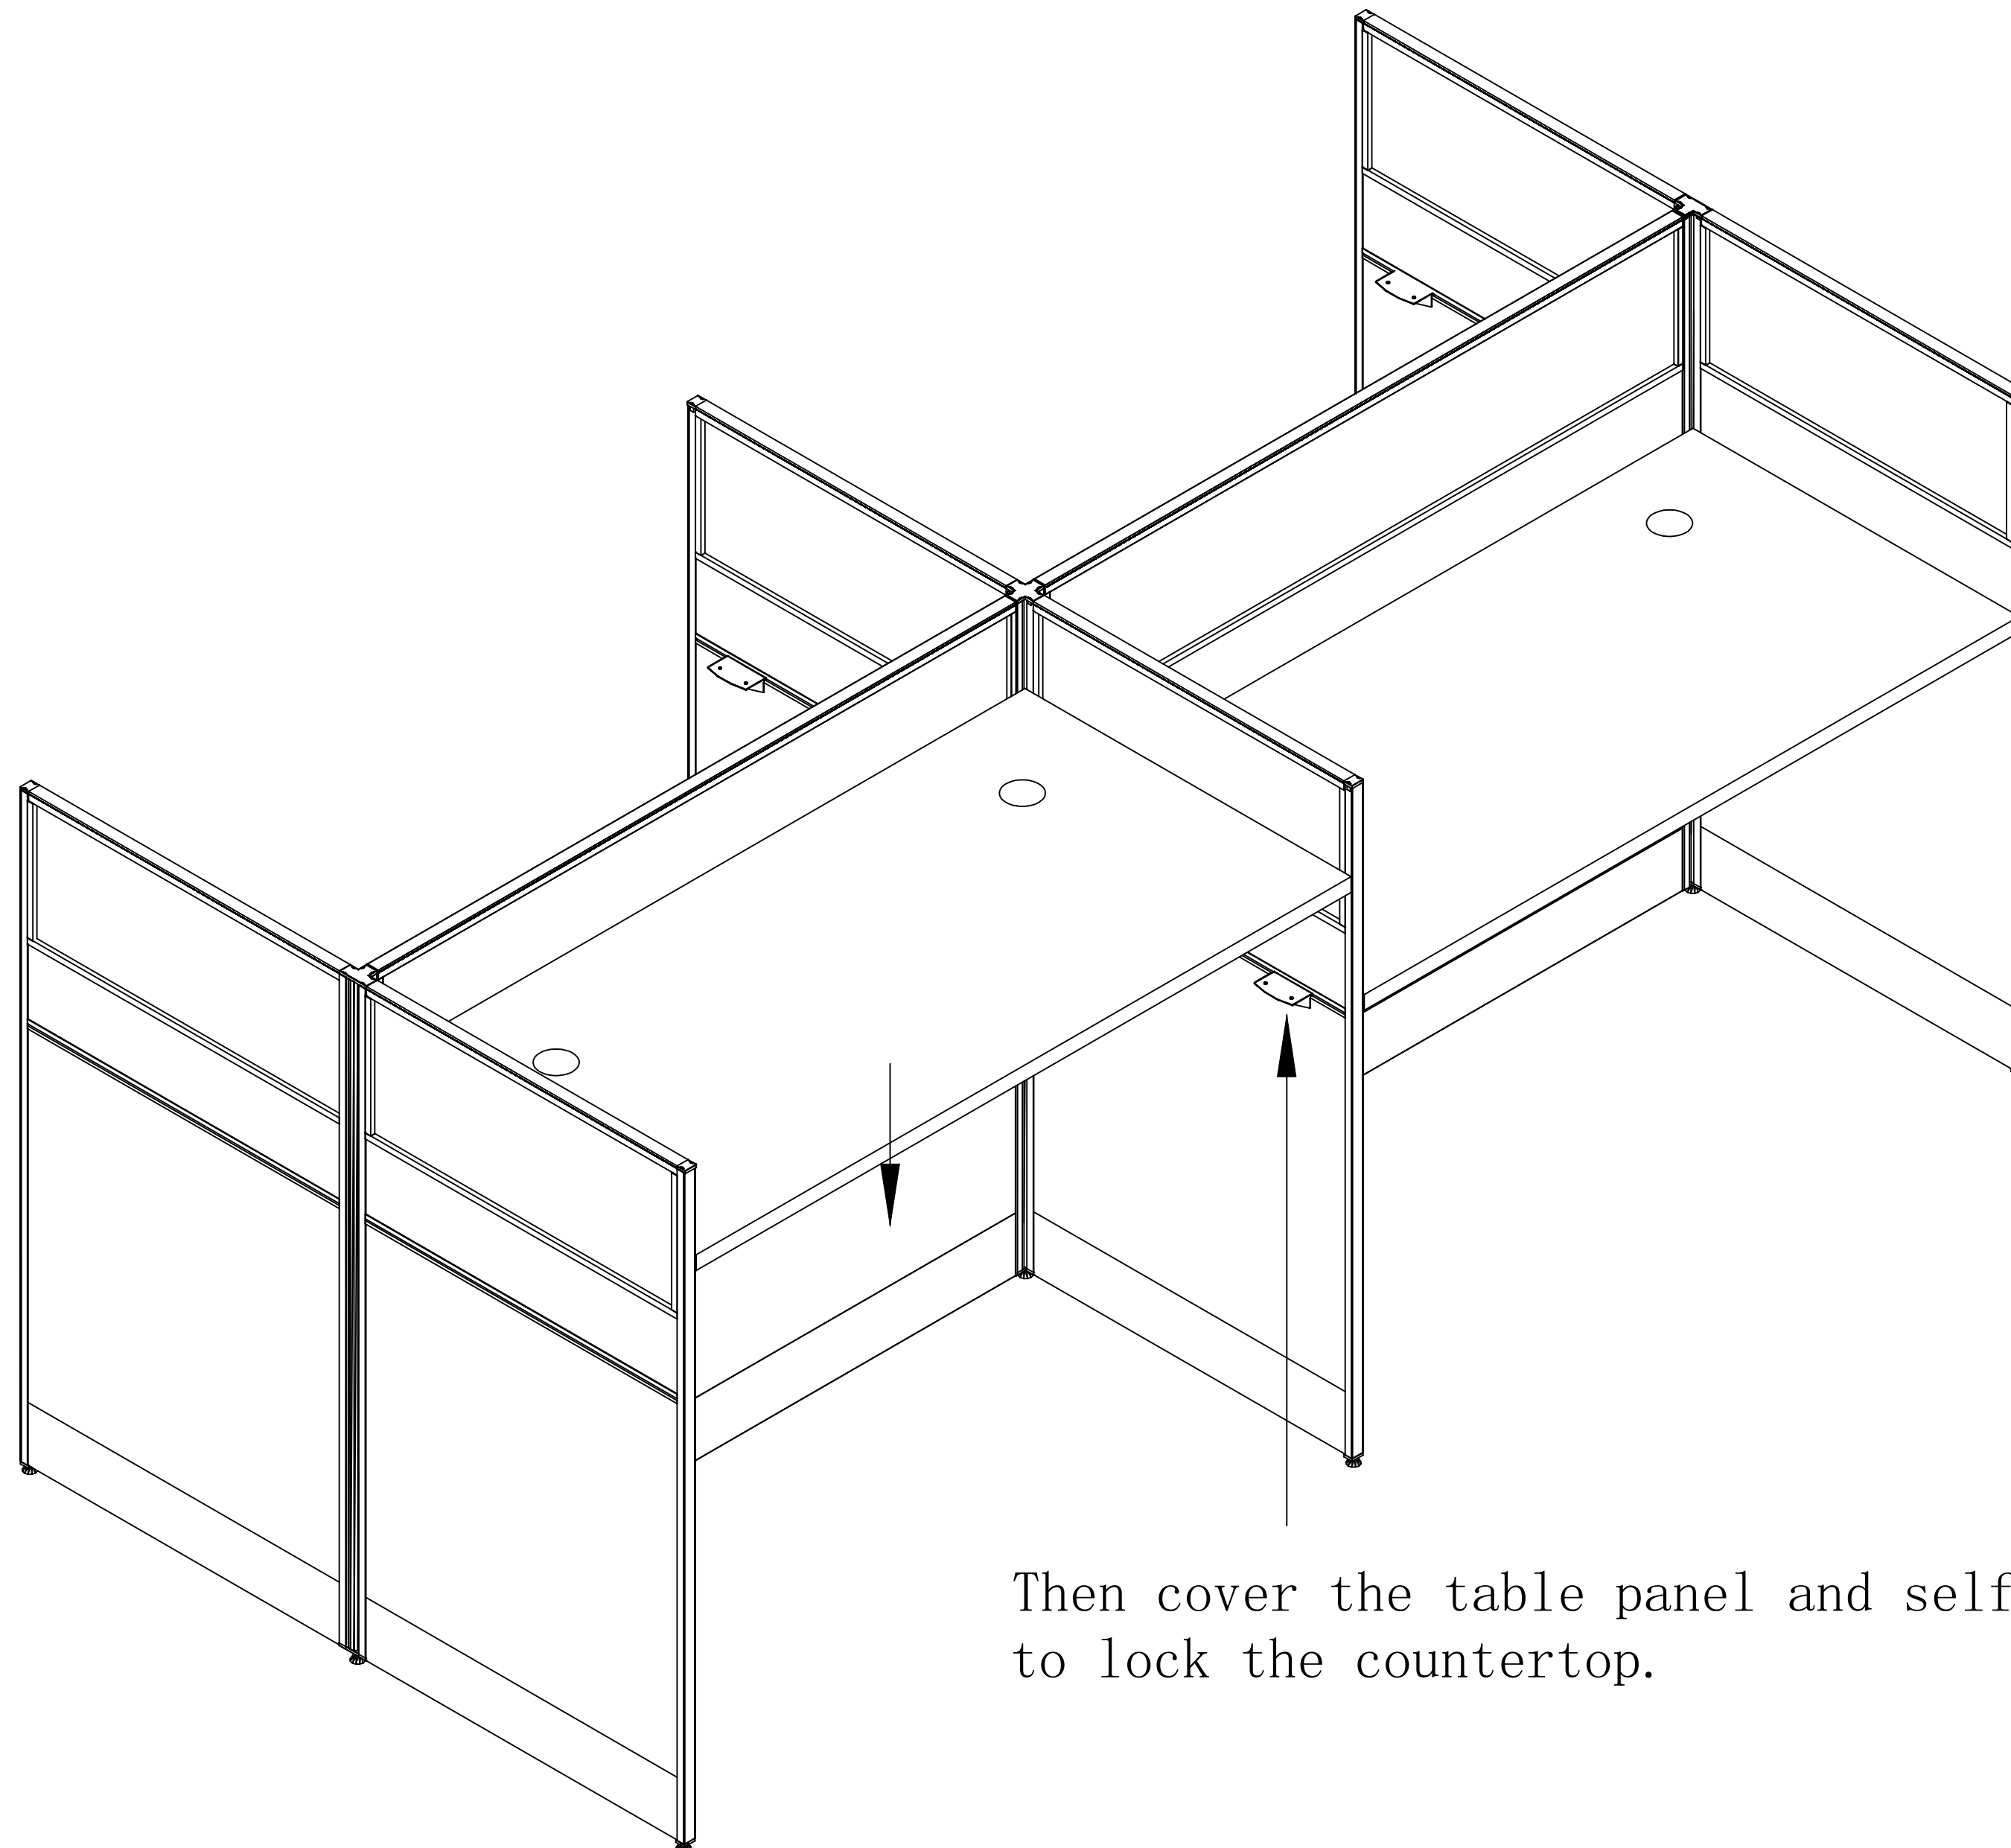

Then cover the table panel and self-tapping screws to lock the countertop.