


# 24 SLOT FILE CABINET

## INSTALLATION INSTRUCTIONS AND PROCEDURES

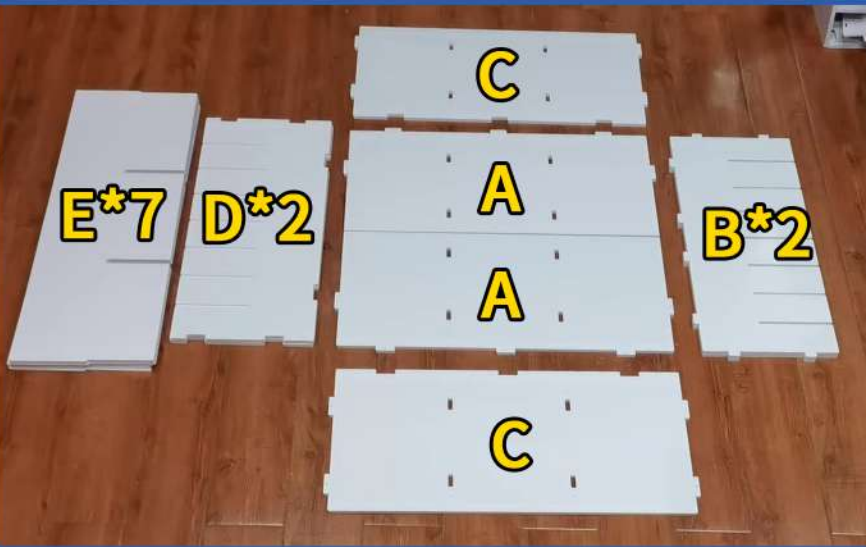

1 TWO LAMINATE

2 TWO LAMINATE

3 TWO LAMINATE

4 TWO LAMINATE

5 SEVEN LAMINATE



1. TWO PLATES A MERGE INTO ONE MAIN BODY AND INSTALL A PIECE OF BOARD B ON IT



2. INSTALL ANOTHER BOARD B



3. INSTALL A C BOARD UNDER THE MAIN BODY



4. INSTALL A C BOARD ON THE MAIN BODY



5. FLIP 90 DEGREES OVER THE MAIN BODY AND INSTALL A D BOARD



6. FIND THE HOLES ON THE LEFT AND RIGHT SIDES OF THE D BOARD AND SCREW ON THE FIXED



7. FLIP 180 DEGREES AND REPEAT STEPS 4 AND 5



8. LAY THE PRODUCT FLAT AND INSTALL SEVEN D-PLATES



9. PUT THE PRODUCT UPRIGHT AND PASTE ANTI-SKID PAD AND THEN FIND THE FOUR HOLES ON THE SCREW FIXED