















Installation Instruction

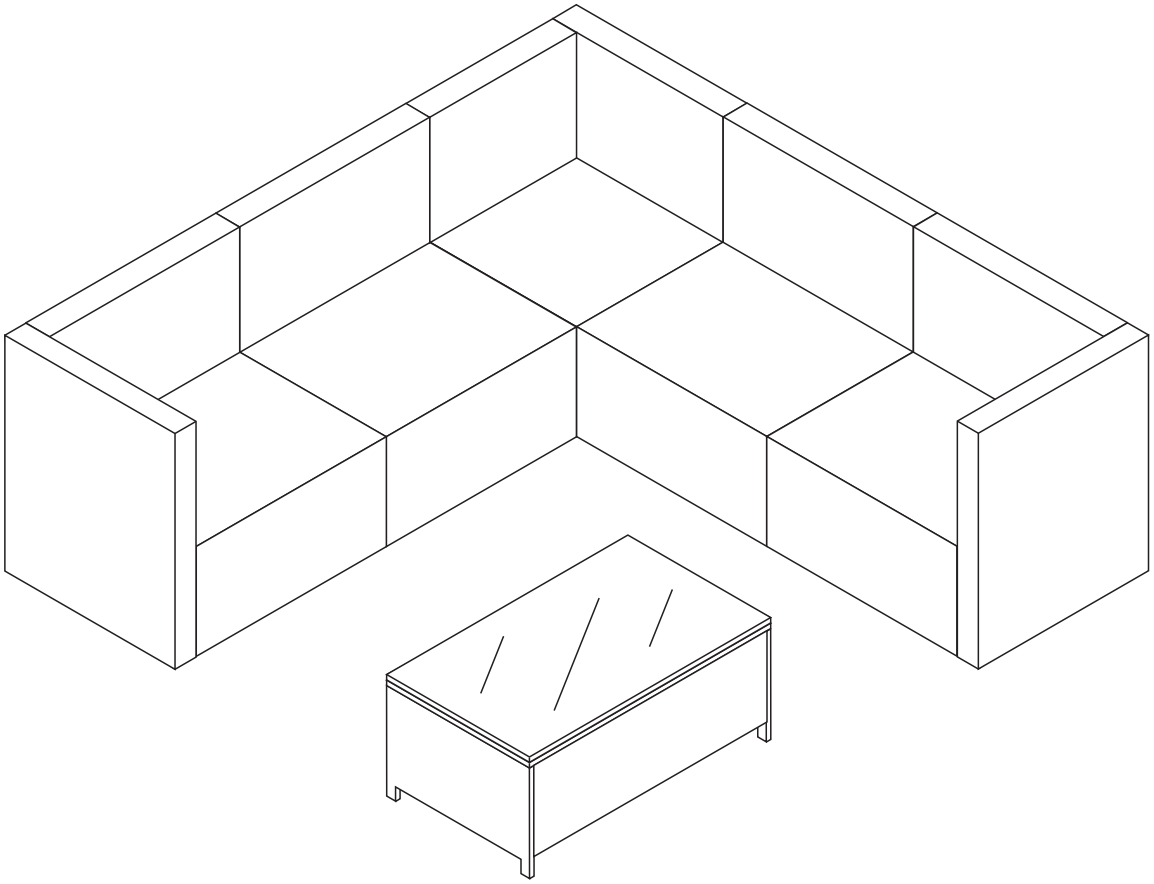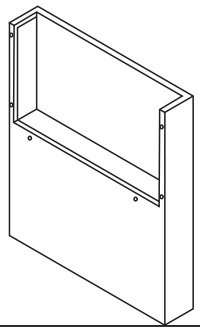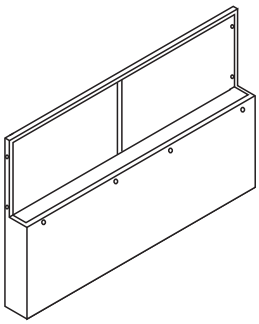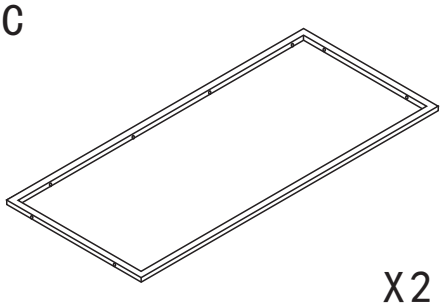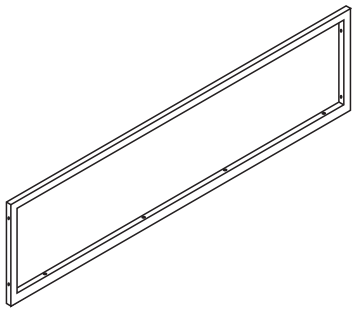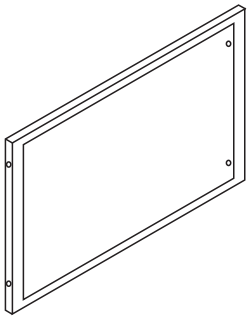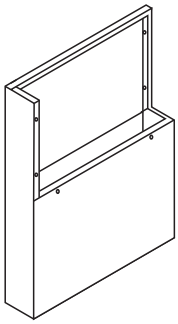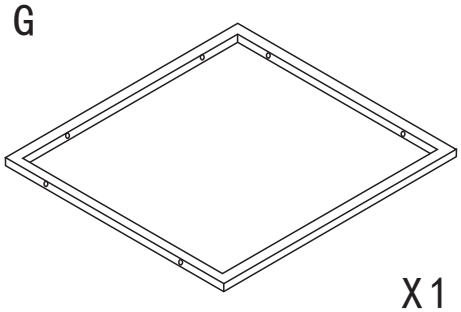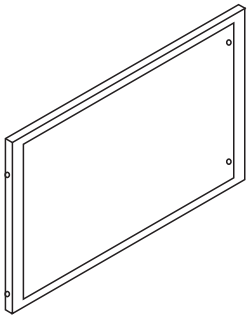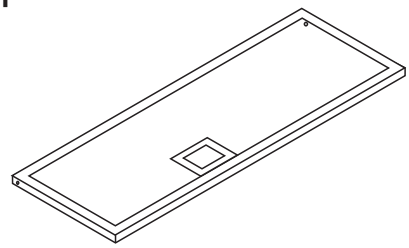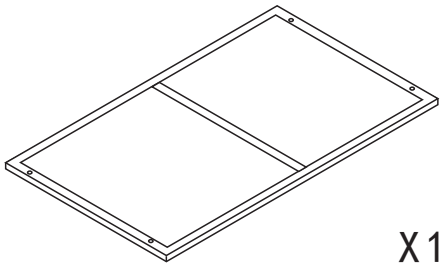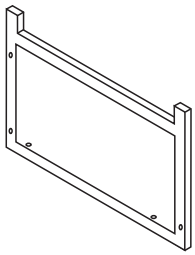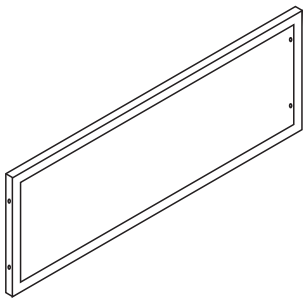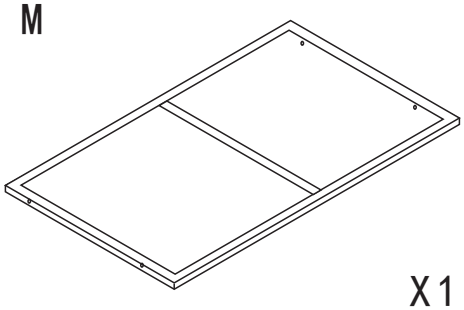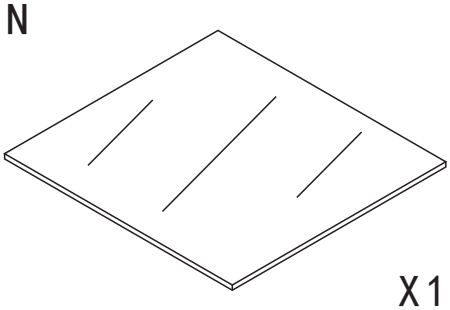


NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

A  X3	B  X2	C  X2
D  X2	E  X3	F  X1
G  X1	H  X1	I  X1
J  X1	K  X2	L  X1
M  X1	N  X1	O  M 6X30 X68
P  X2	Q  X1	


1

NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

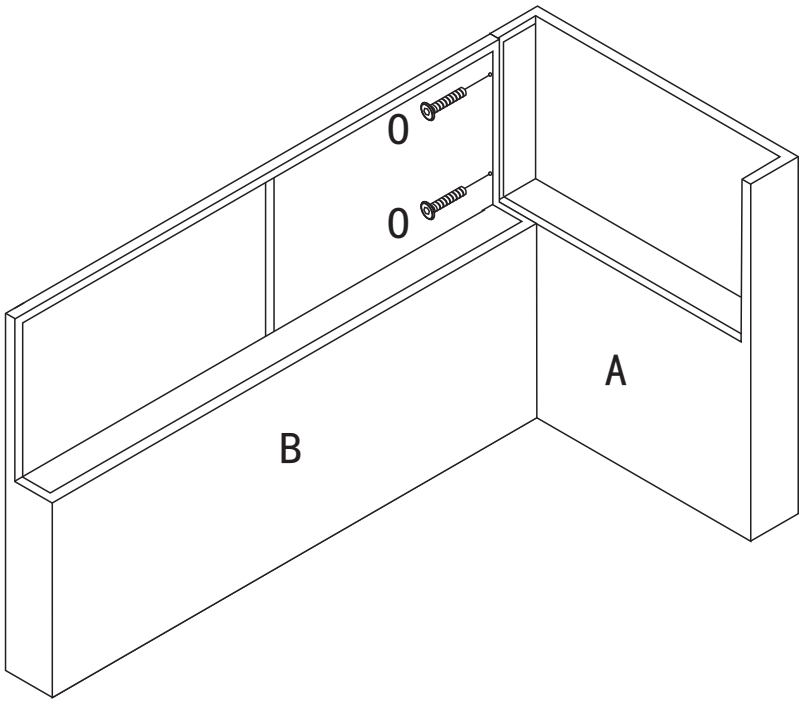


2

NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

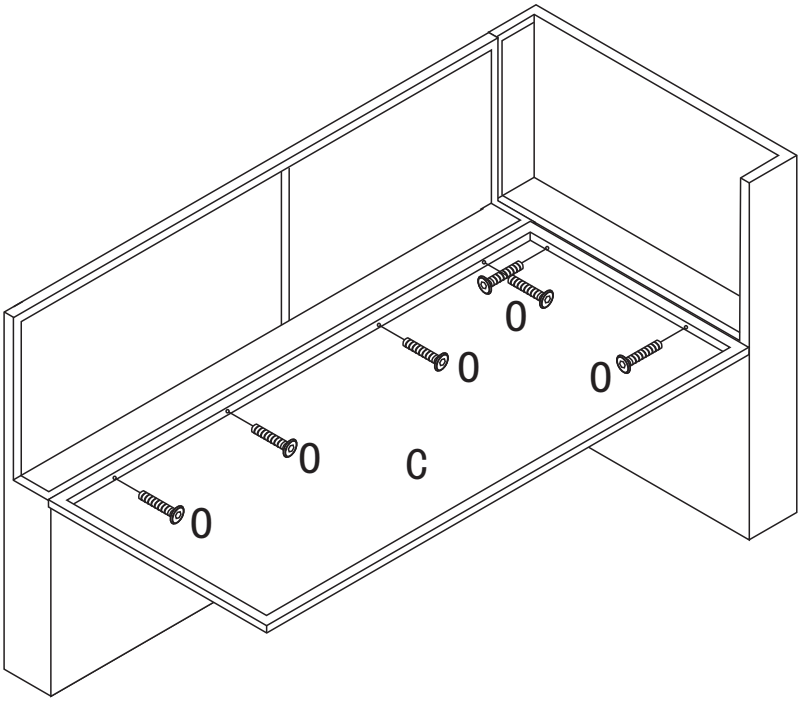


3


NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

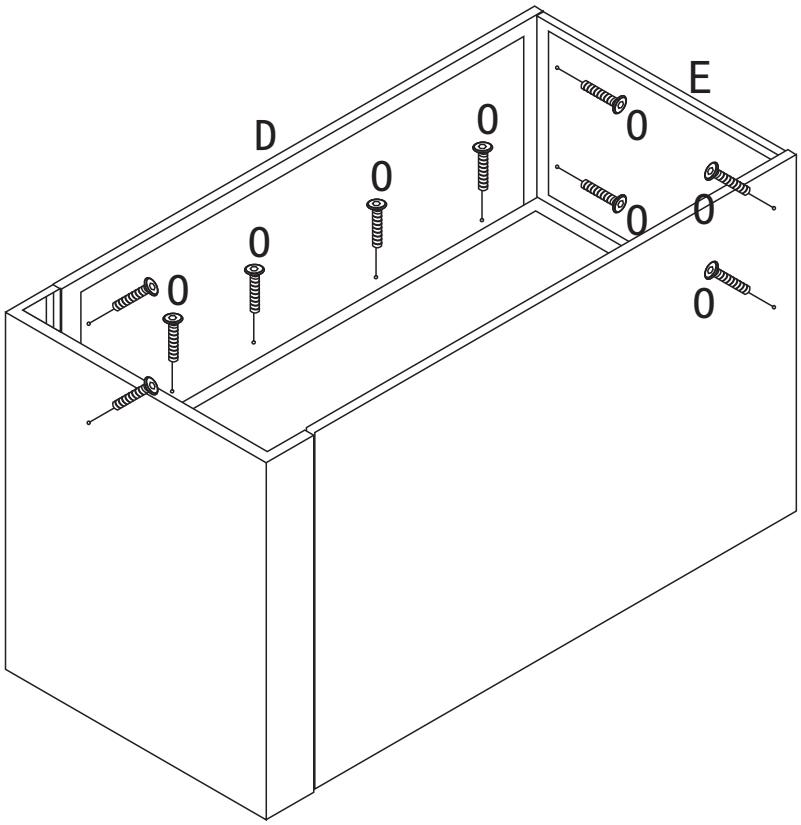

4


NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

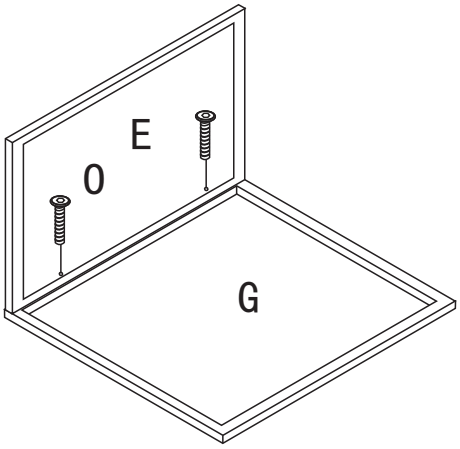

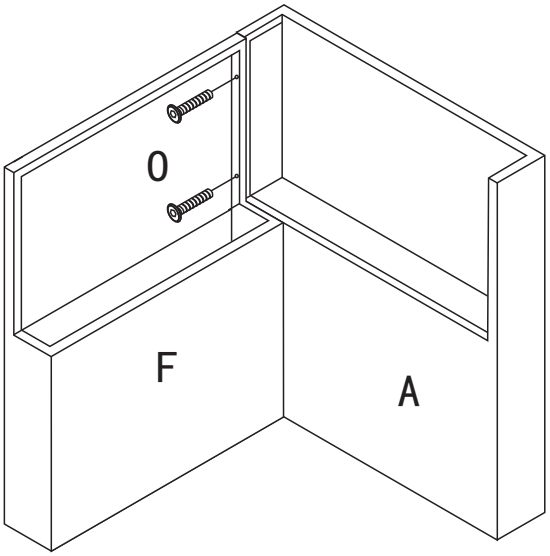


5

NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

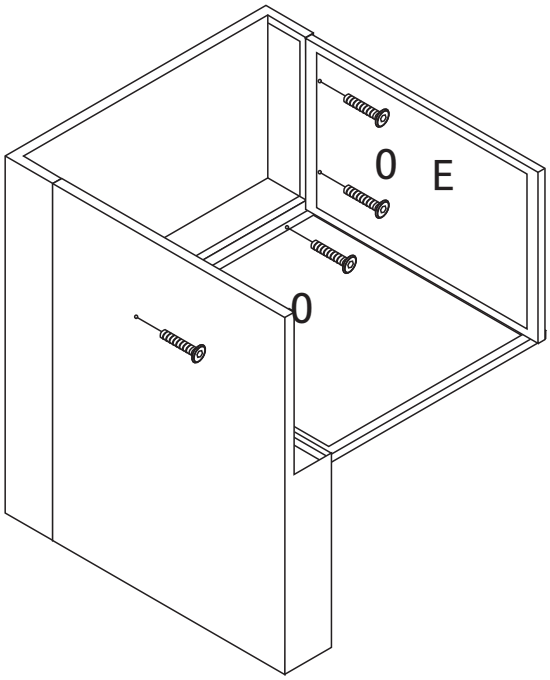


6


NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

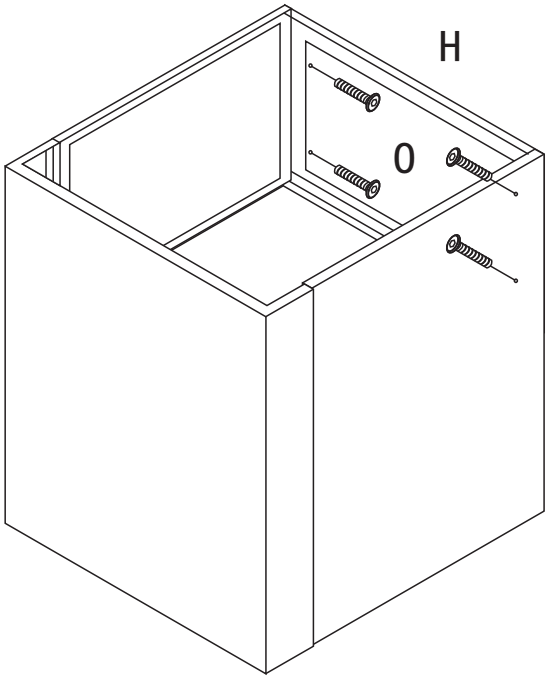

7


NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

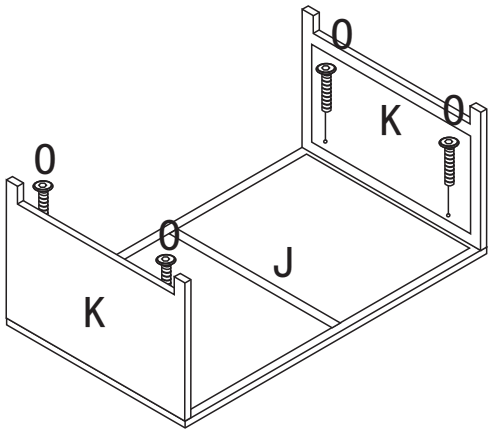

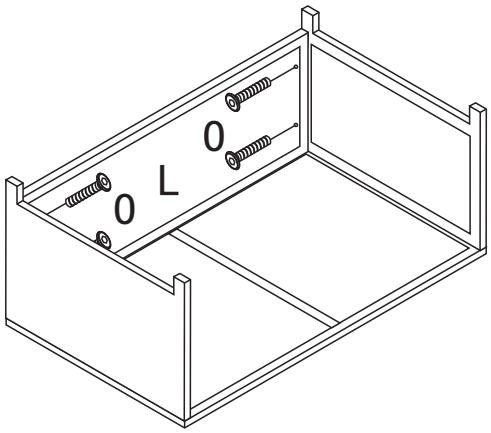


8


NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

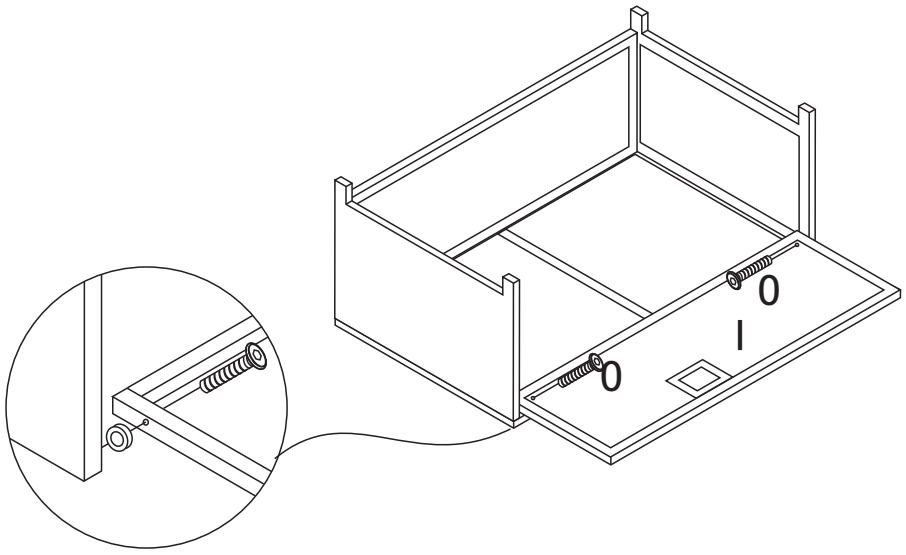

9

NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

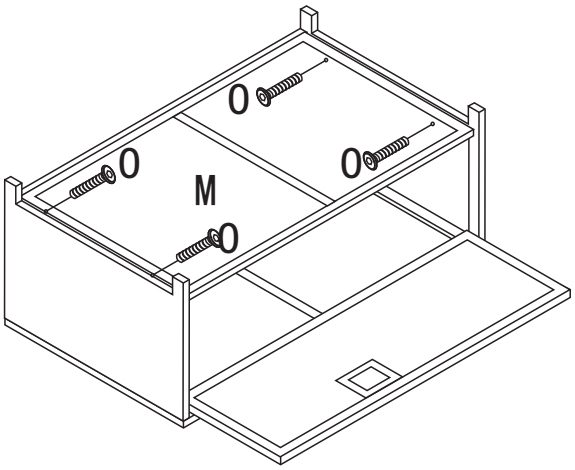

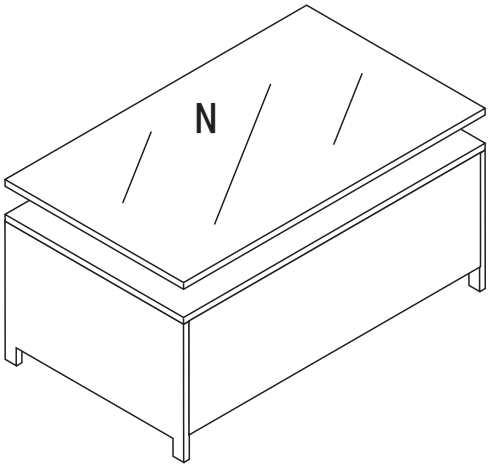

10

NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

