

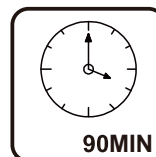
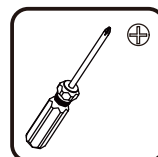
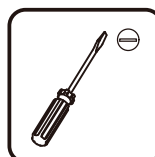



Installation & Assembly

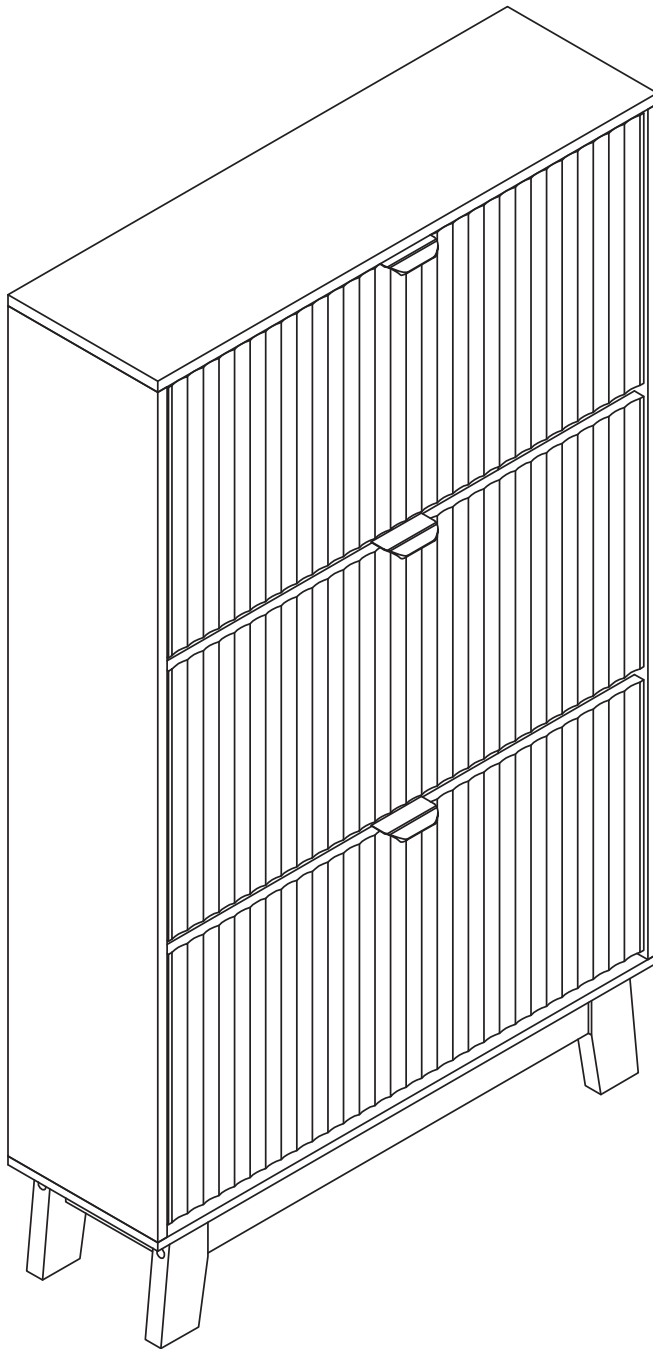


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

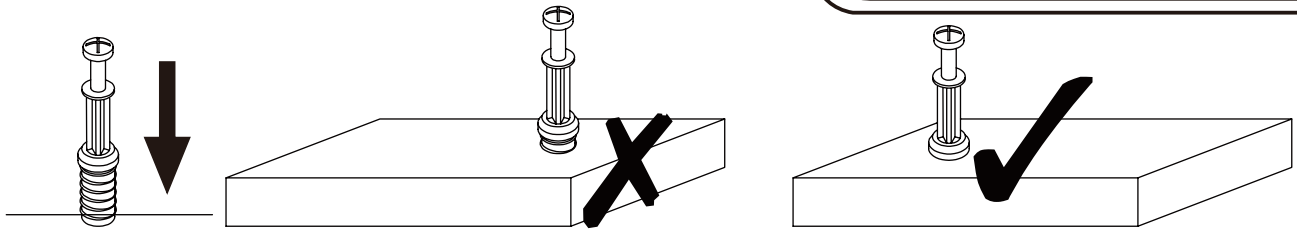


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

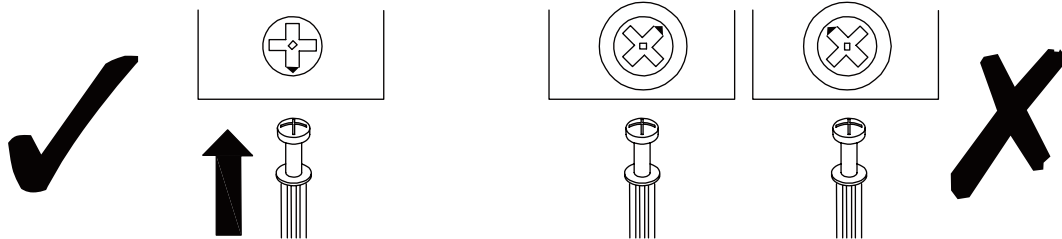












EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

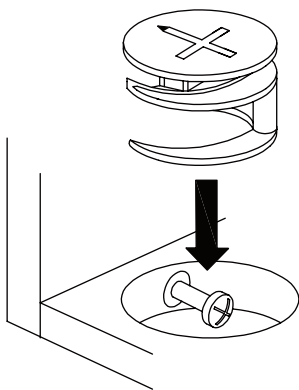


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.







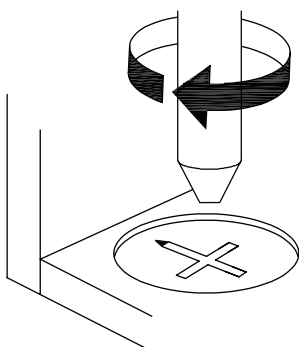


EN_Turn cam lock clockwise to tighten.

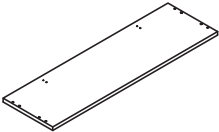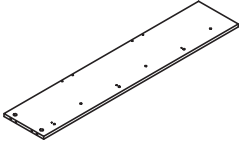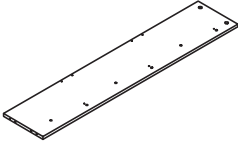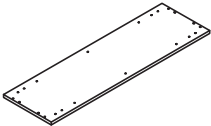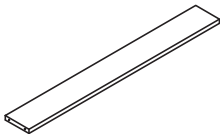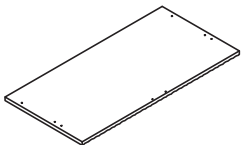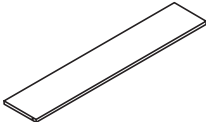NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x2	
⑥		x2	
⑦		x2	
⑧		x2	
⑨		x2	
⑩		x3	
⑪		x6	

[illegible]

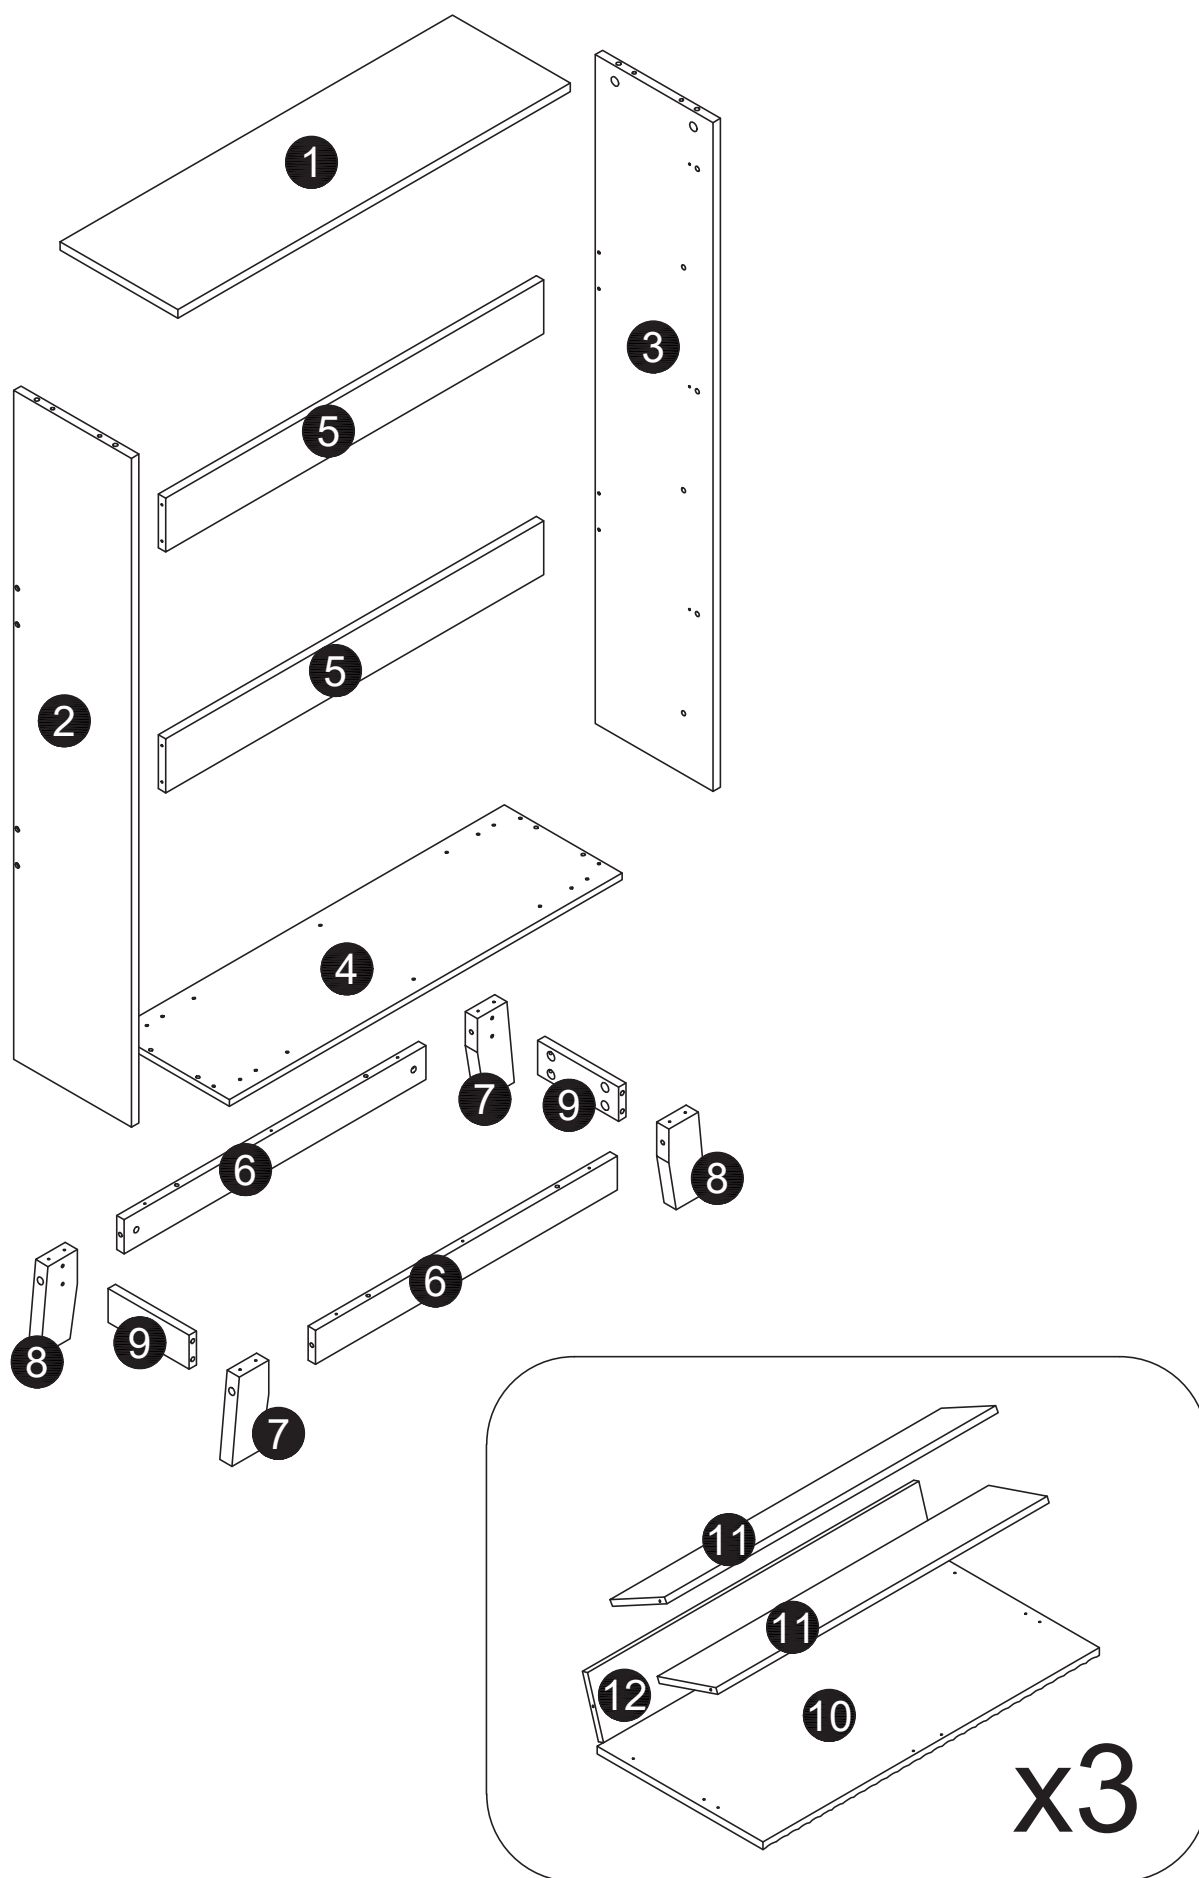


 A x12 Ø6x35mm +1(spare)	 B x12 Ø15x10mm +1(spare)	 C x12 Ø6x30mm +1(spare)	 D x14 Ø4x35mm +1(spare)	 E x48 Ø3.5x12mm +4(spare)	 F x6
 G x6	 H x6	 I x4	 J x4	 K x3	 L x3
  M x2 Ø4x14mm M-1 M-2	 N x2 Ø6x30mm	 O x8 15mm +2(spare)	 P x4	 Q x14 Ø4x30mm	 R x3
 S x1 M5					




E x6



F x6

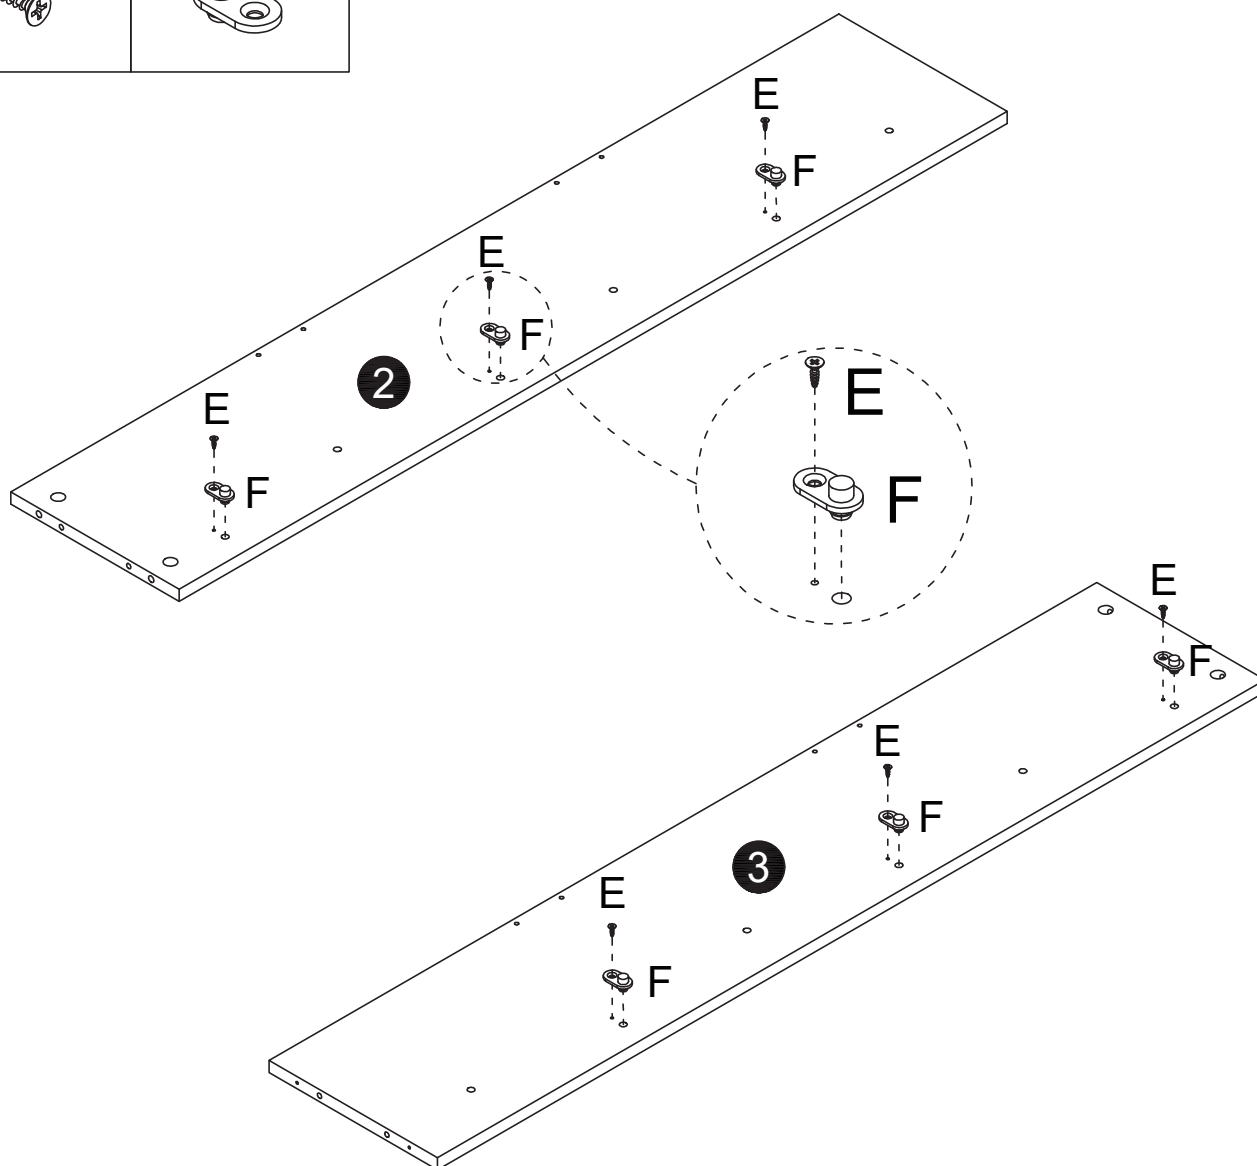

A x8

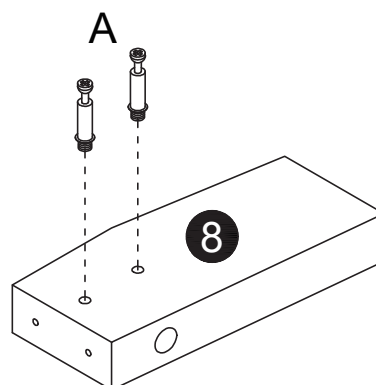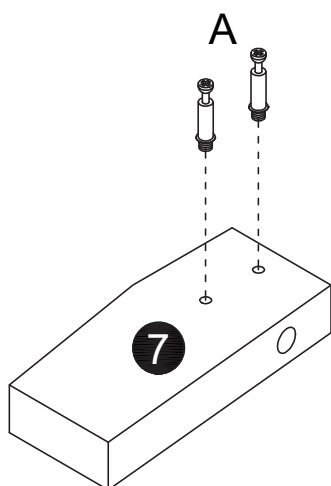



x2

B x8




P x4

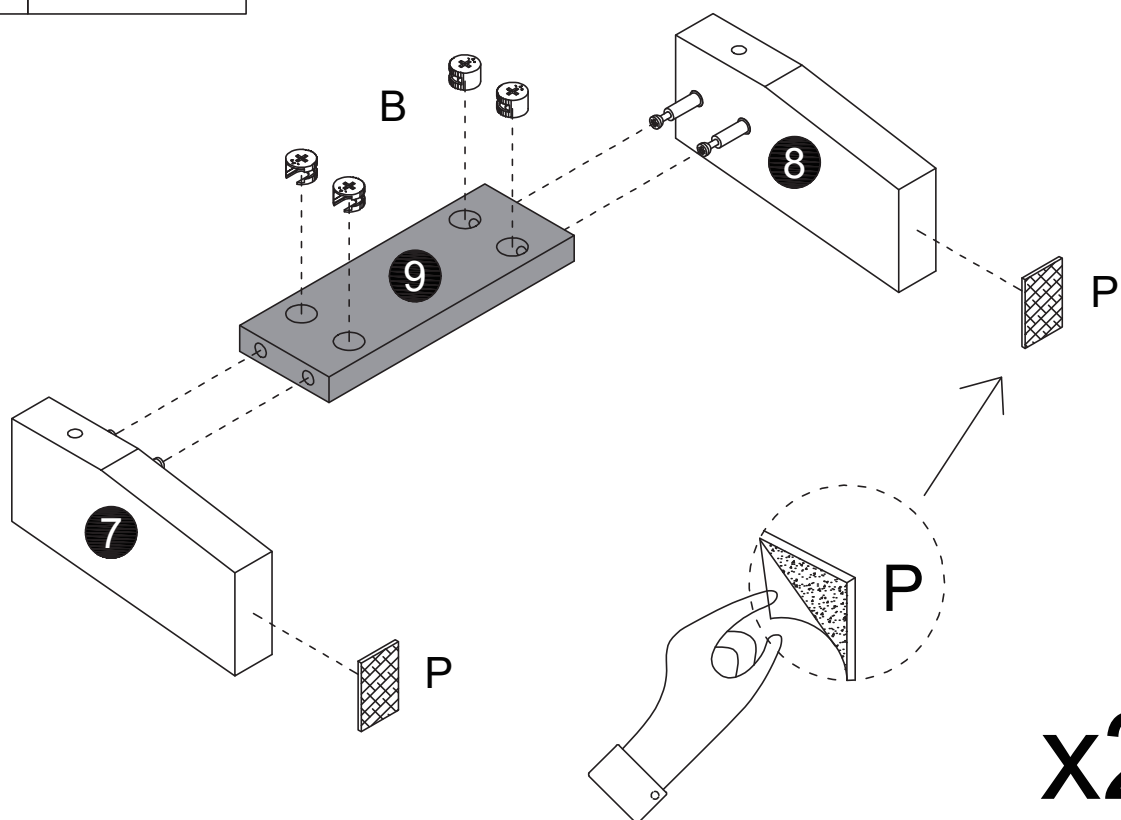

I x4




J x4

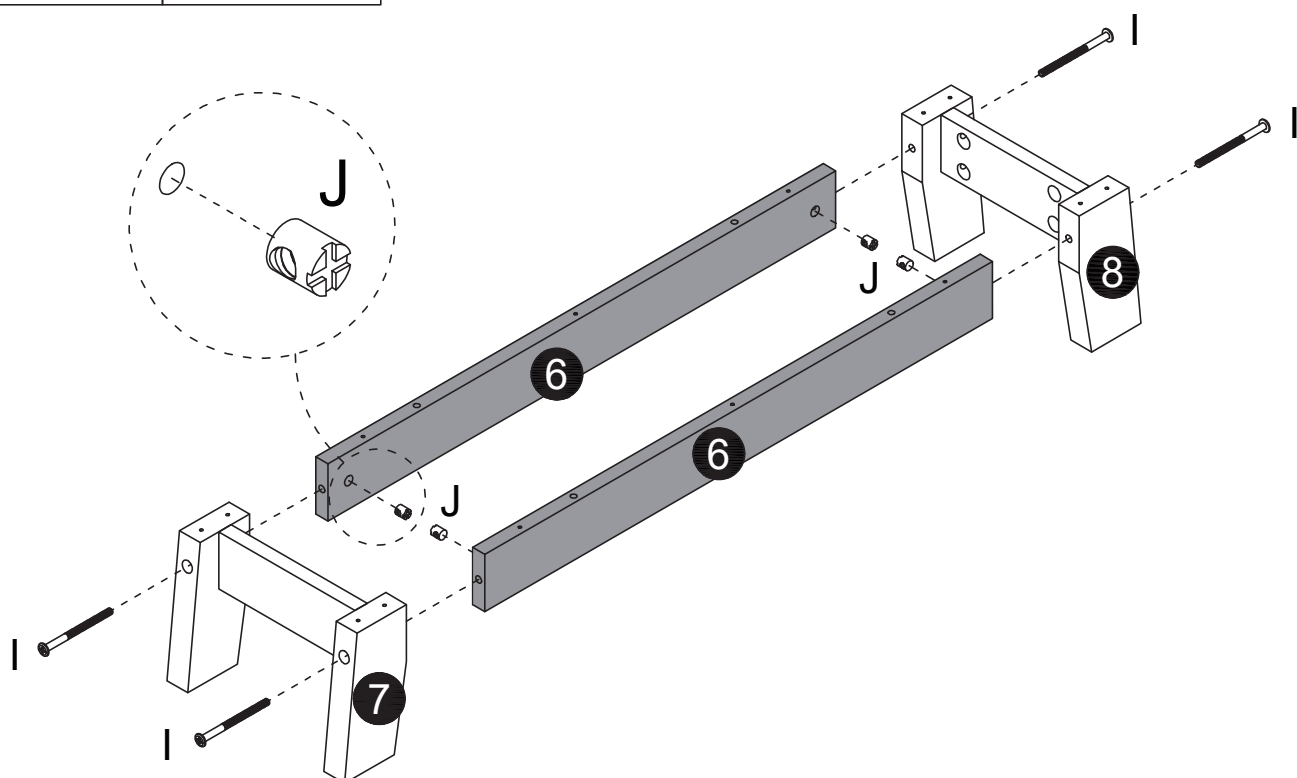



C x4

Q x14

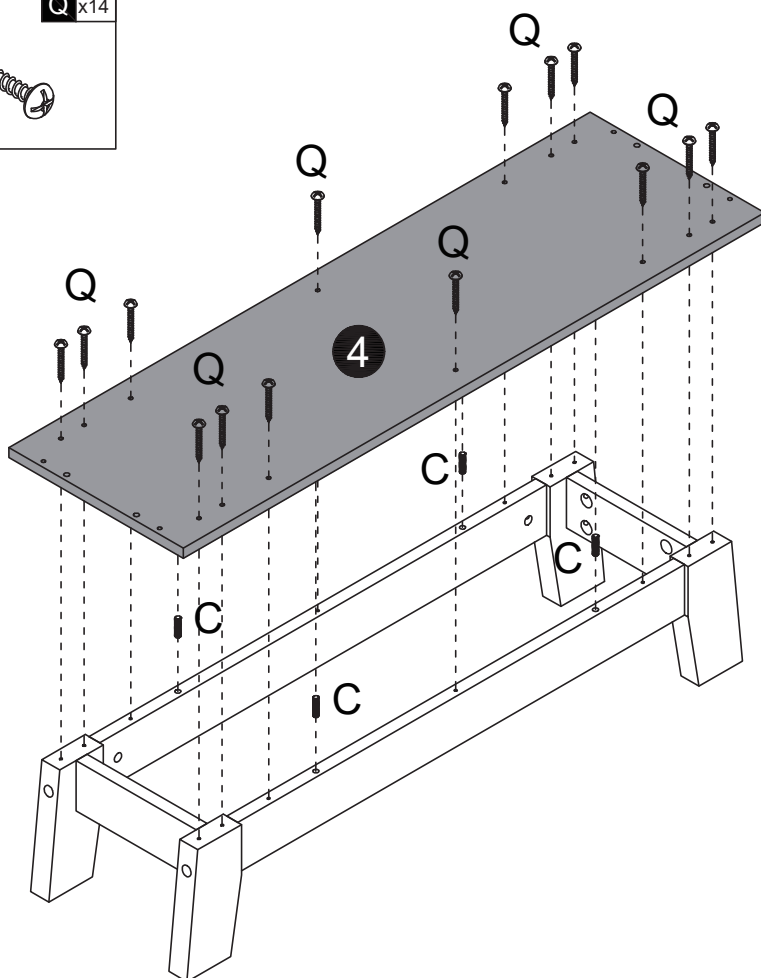


C x4


D x4

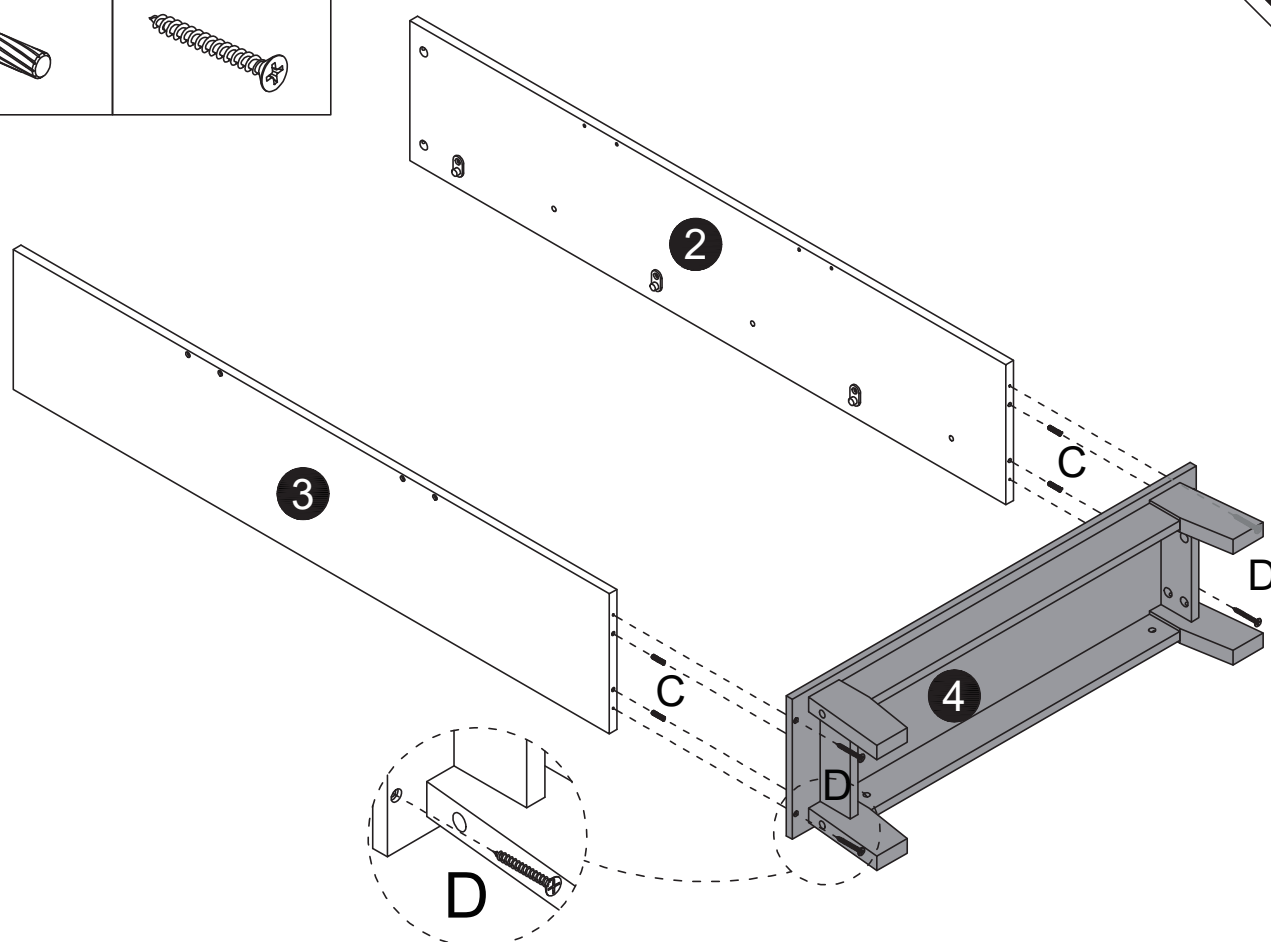


D x8



07

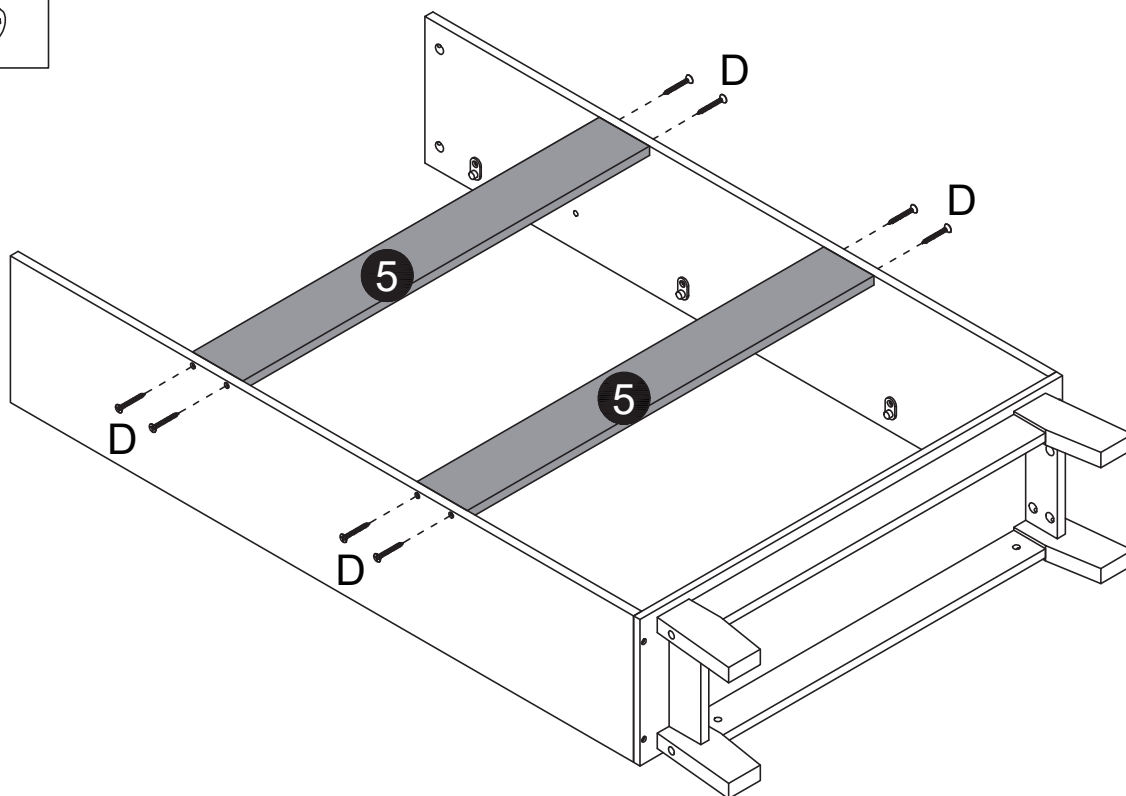

A x4




M x2



M-1

M-2


08

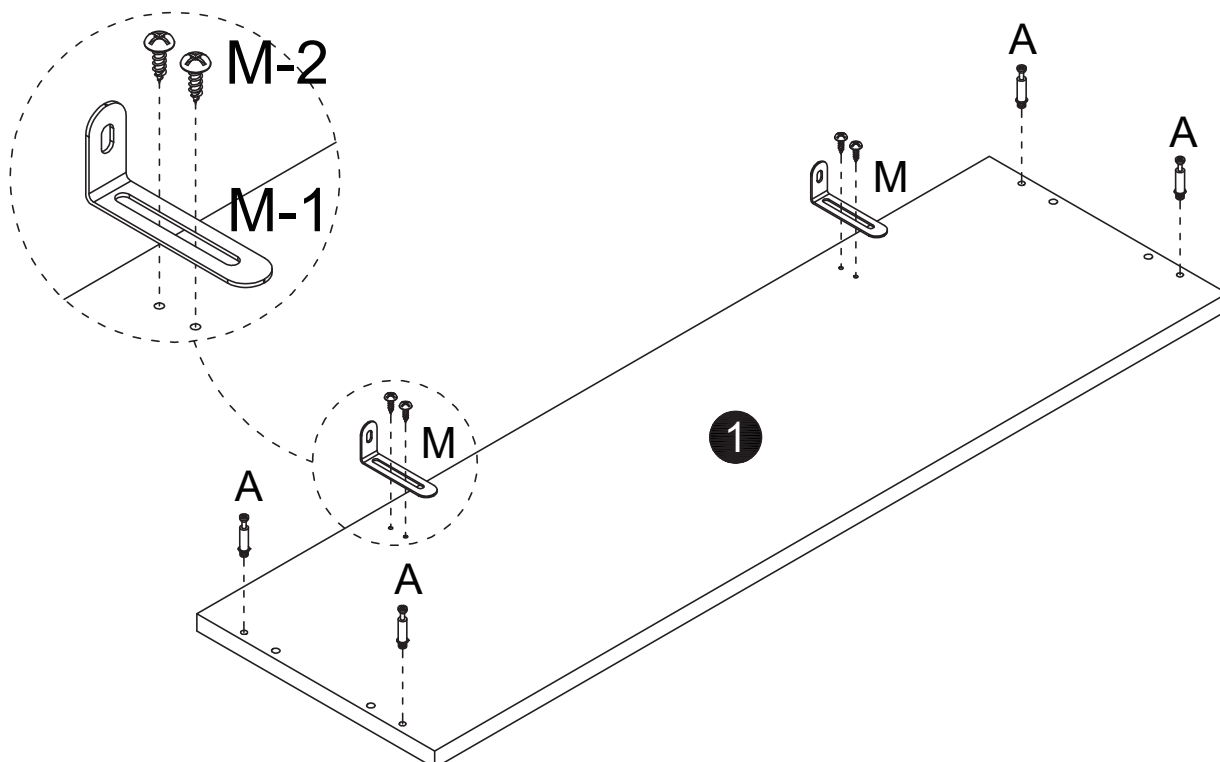


B x4

C x4


09

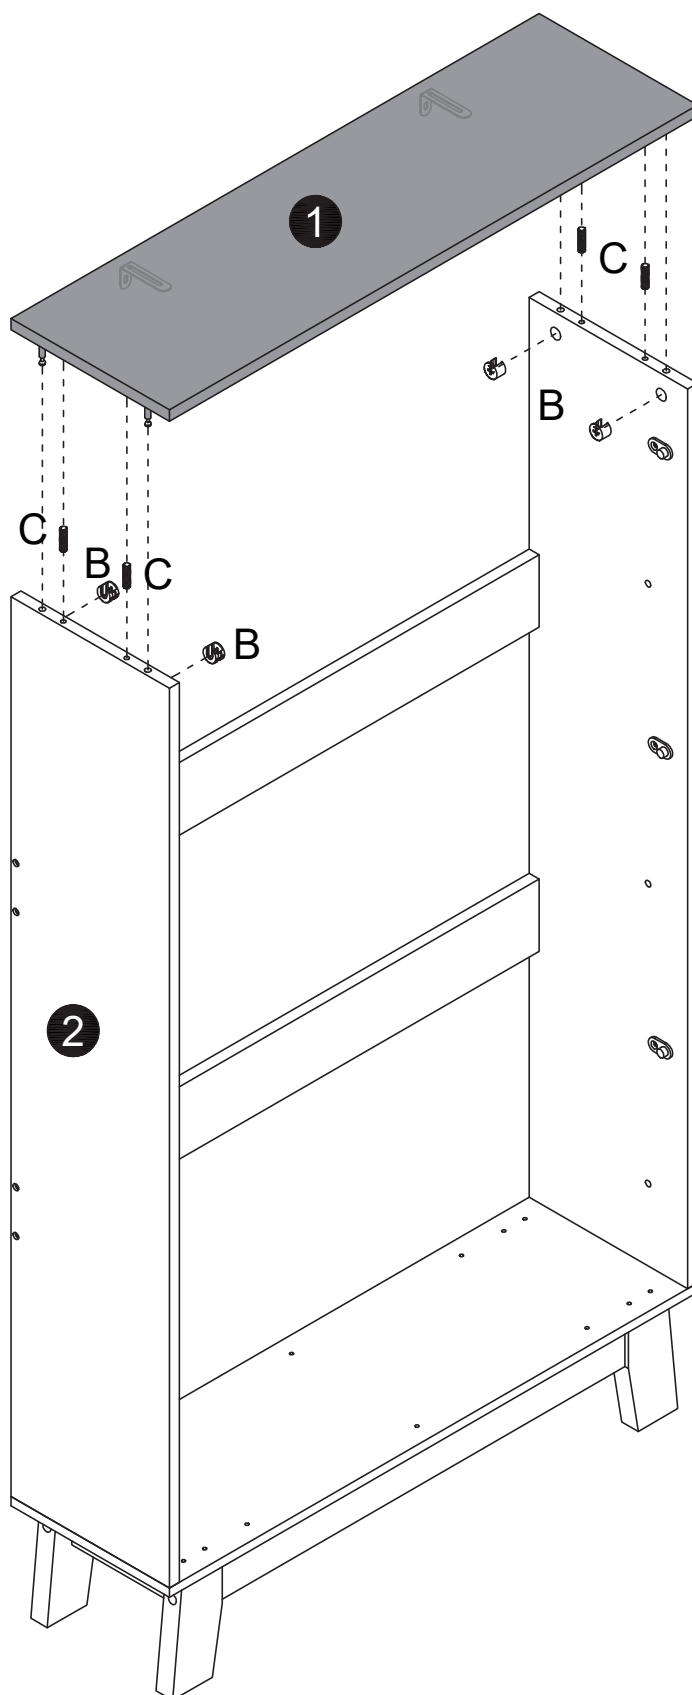


D x2



N x2




WALL

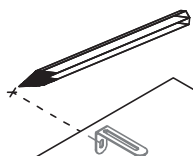

(1)x2

First, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.


WALL

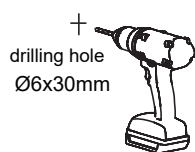

(2)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.


WALL

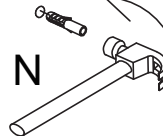

(3)x2


Then, put the expansion bolt into the hole

WALL

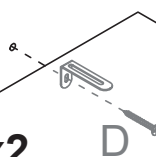

(4)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.


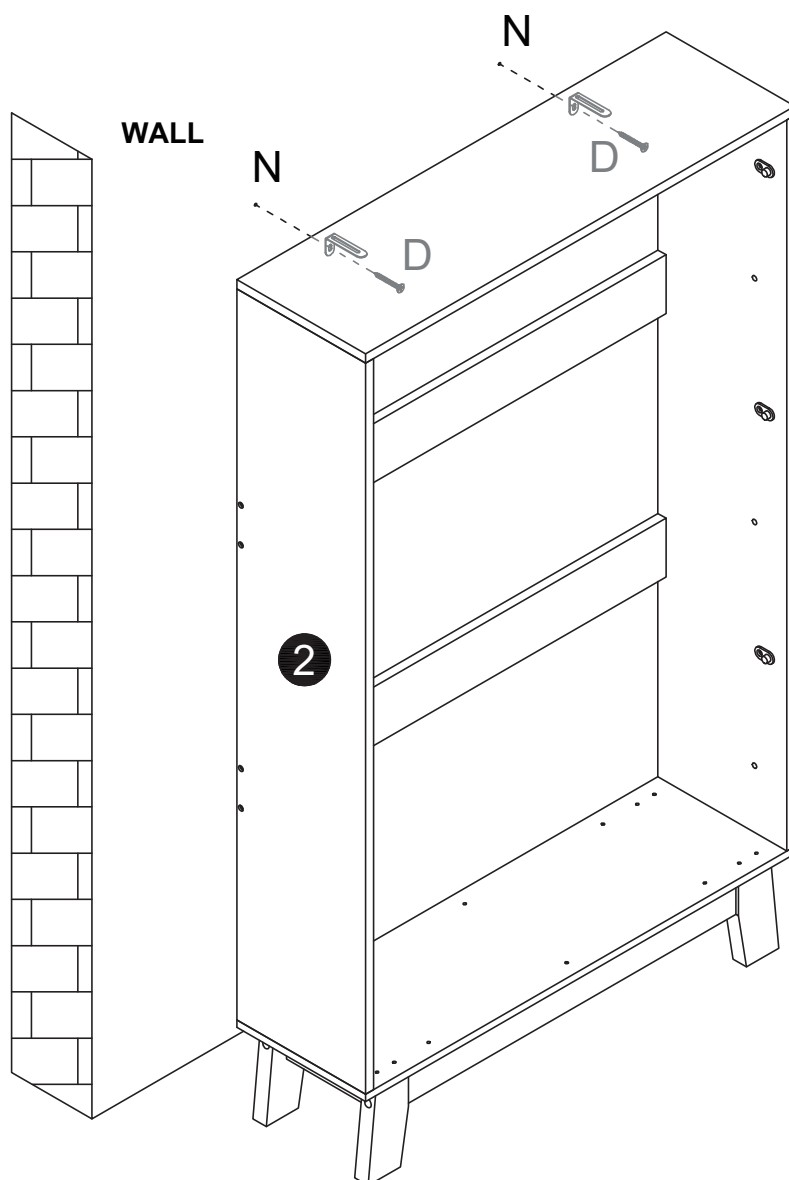


E x36

K x3

L x3

R x3

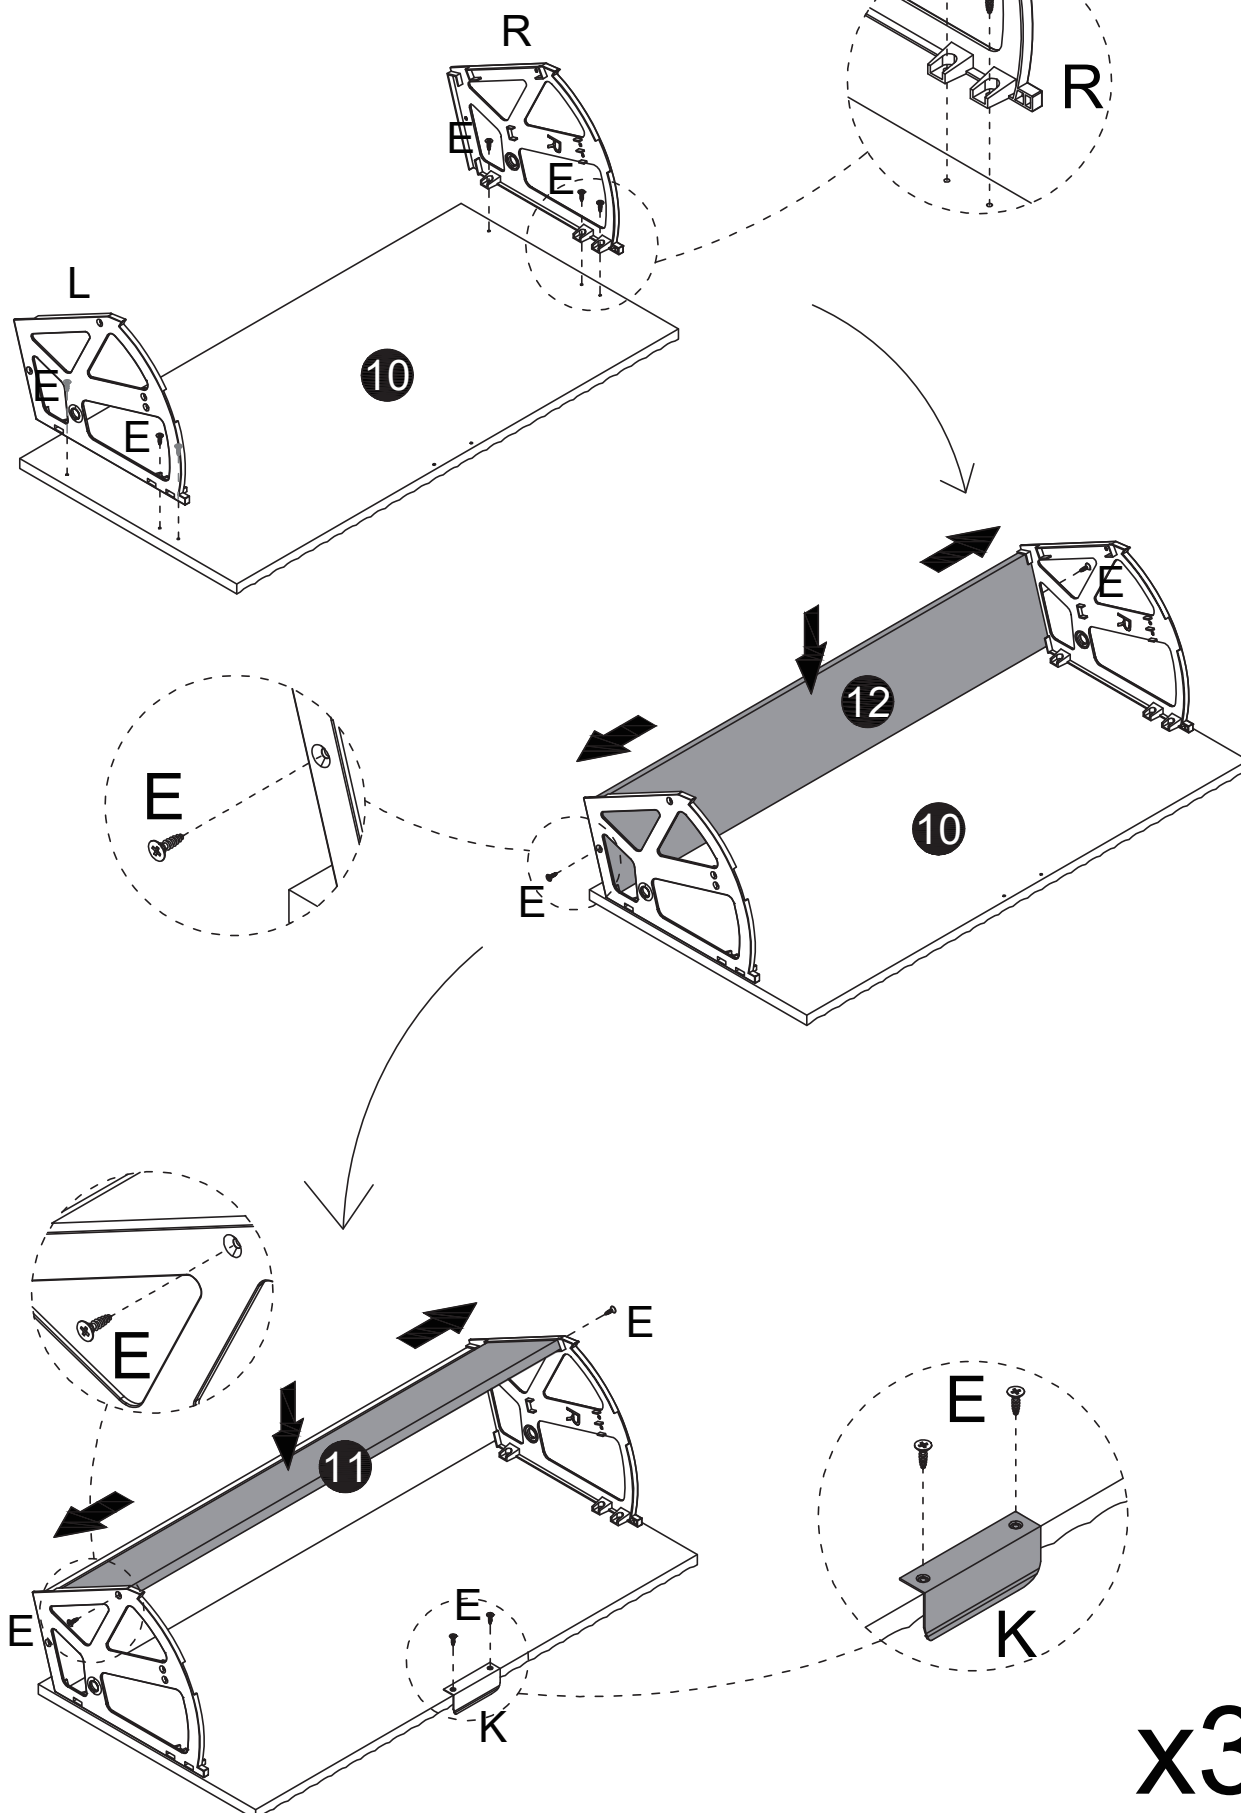


G x6





H x6



S x1




Please do not forcefully lock
the installation screws to the
maximum limit to avoid
damaging the side panel.


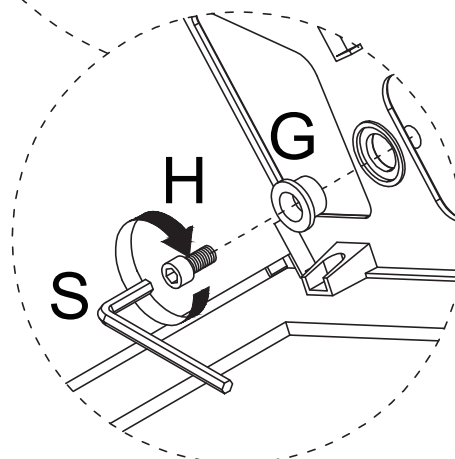
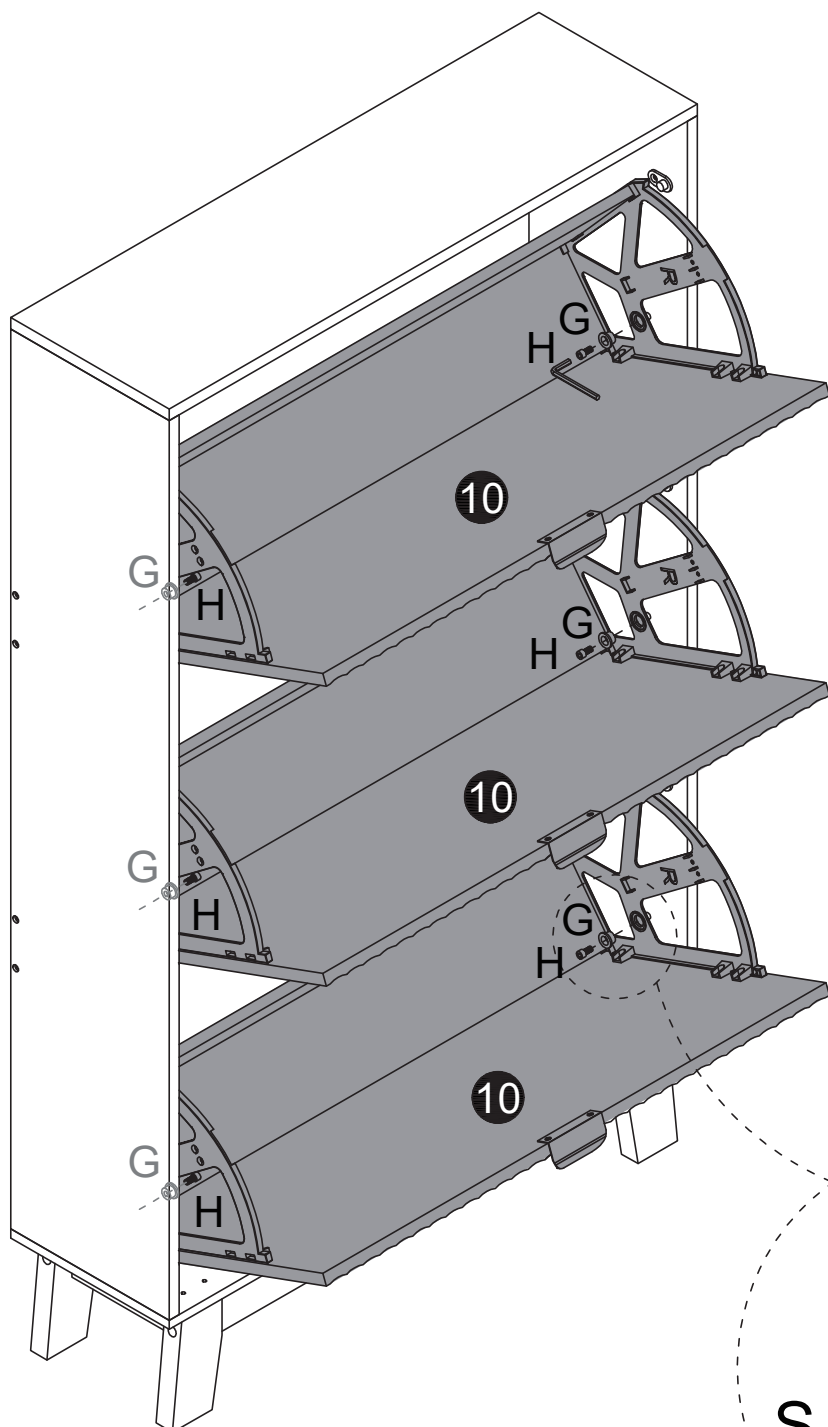


E x6

13

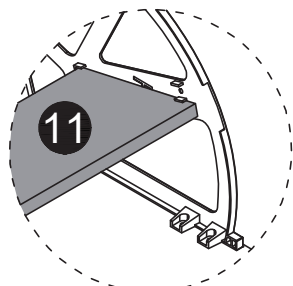

OR

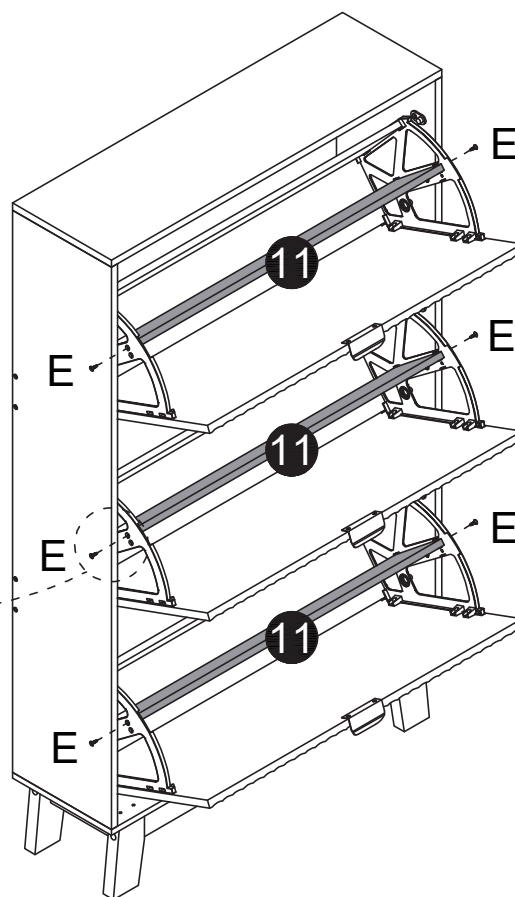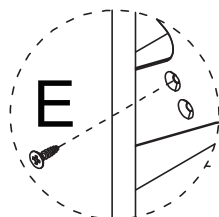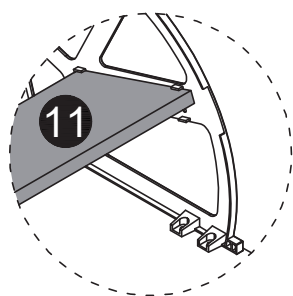

O x8

Done

