

ASSEMBLY INSTRUCTION


WALL EASY REACH CABINET

MODEL#


WER2430 WER2436

Estimated Assembly Time: 30 - 40 minutes

2-person assembly recommended

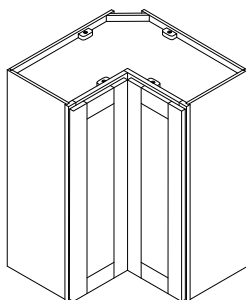

TOOLS REQUIRED

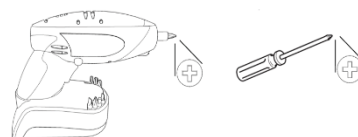

PART	DESCRIPTION	QTY	PART	DESCRIPTION	QTY
B	Box bottom panel	1	R2	Box side panel - right	1
C	Box back panel	1	S1	Box side panel - left	1
D	Face frame	1	S2	Box side panel - right	1
K	Adjustable shelf	2	Z1	Door panel with four hinge holes	1
L	Box top panel	1	Z2	Door panel without hinge hole	1
R1	Box side panel - left	1			

HARDWARE CONTENTS

DD Rubber bumper x 4




EE Adjustable shelf clip x 12




FF 1" Flat head phillips screw x 8



KK 135 Degree hinge x 2

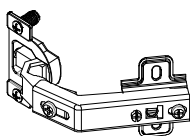


LL 165 Degree hinge x 2




MM Wooden dowel pin x 4




QQ 1/2" Flat head phillips screw x 12




RR 3/4" Round head phillips screw x 4




1

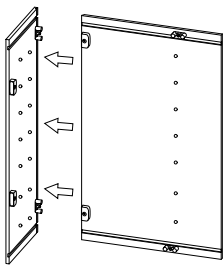


2

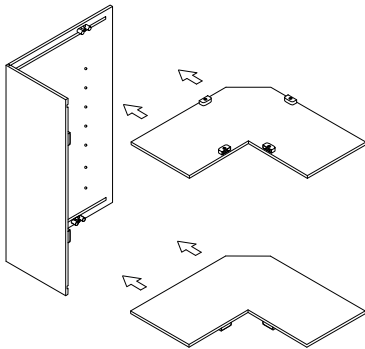


3

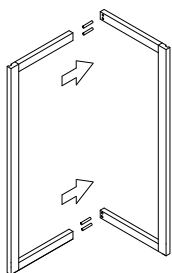


4

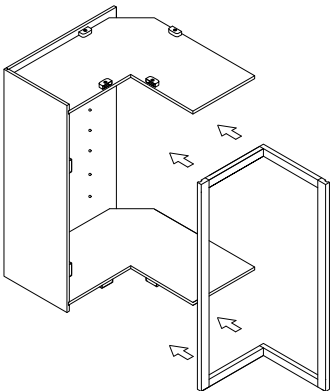


5

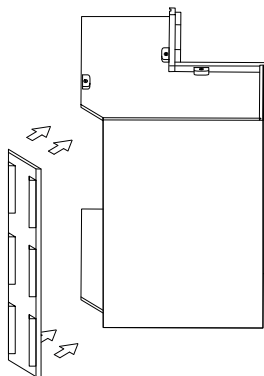


6

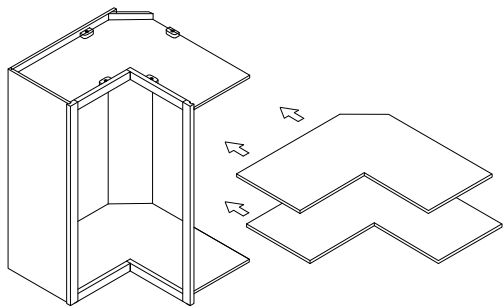


7

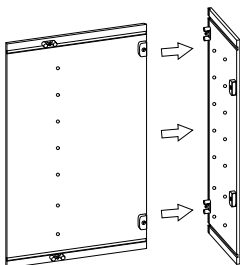



8

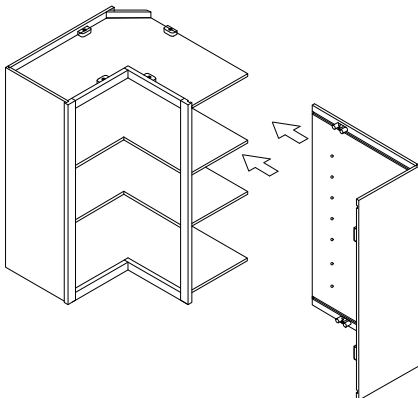


9

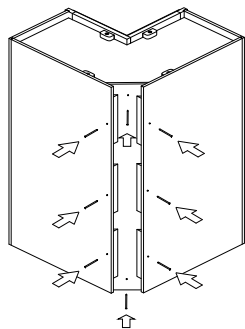

10

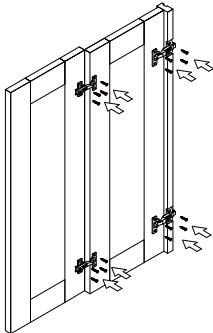
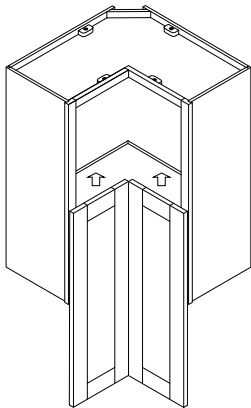


11

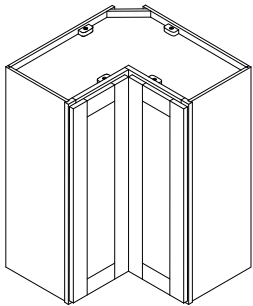


CAMLOCK CONNECTION

1. Insert the camlock to the locker.

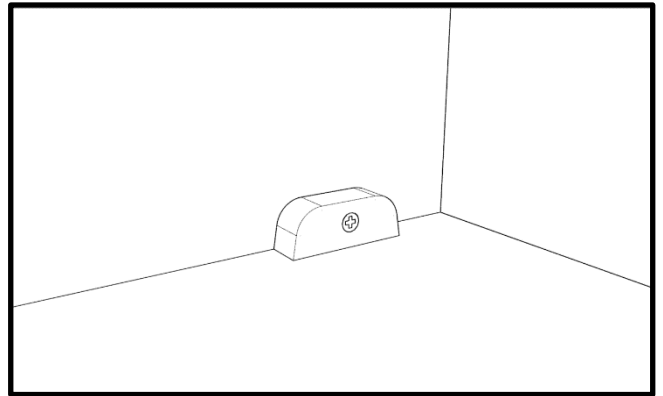
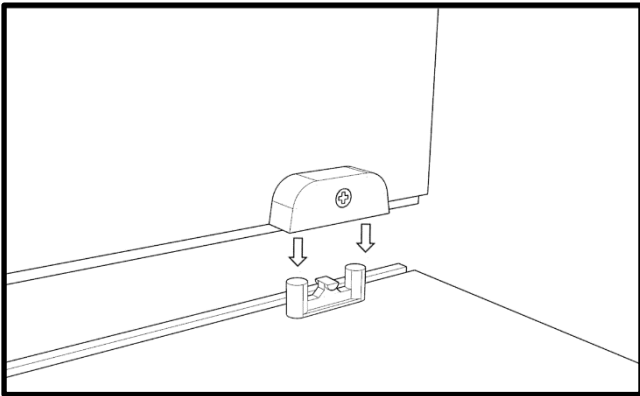


2. Turn the nut clockwise to latch two parts.


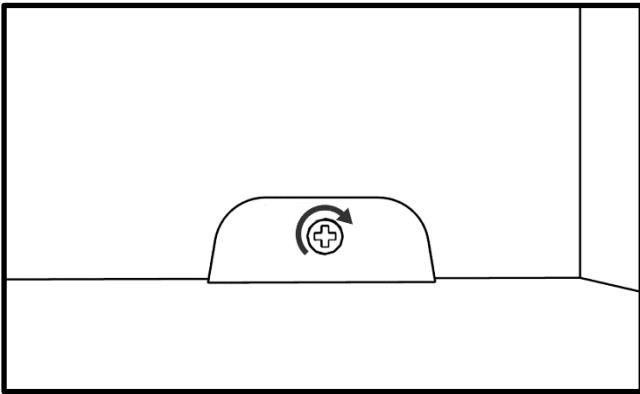


CORNER CABINETS DOOR ASSEMBLY


1. Insert two 1/2" flat Phillips screws through one 165-degree hinge into the predrilled holes on door panel Z1.

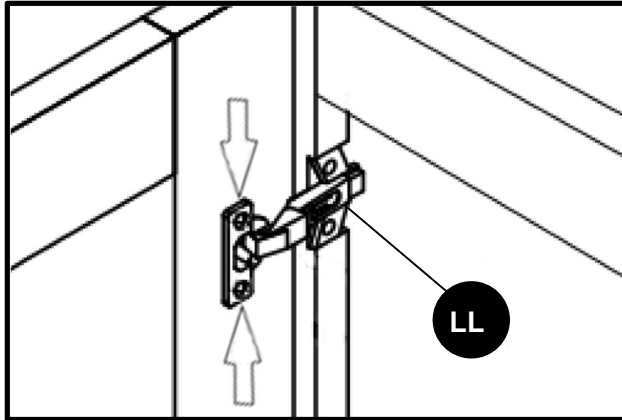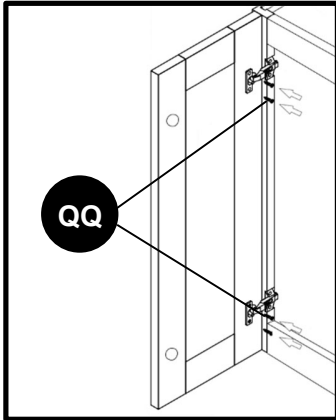

2. Insert two 3/4" round Phillips screws through one 165-degree hinge into the predrilled holes on face frame.

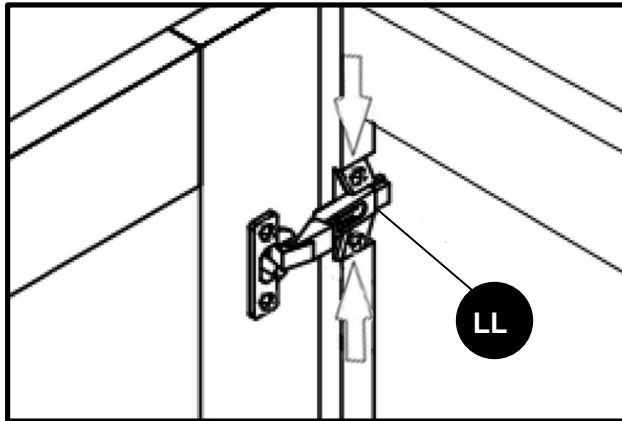
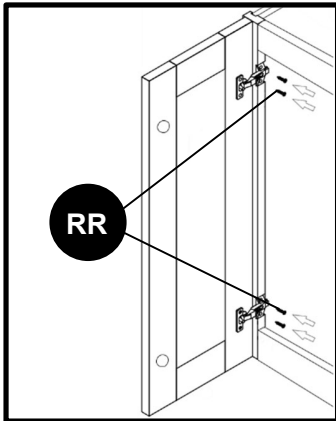


3. If the door is not level when it is installed, the customer will need to turn the inner screw 1 to adjust the door up and down, and turn the screw 2 to adjust the door forward and backward.

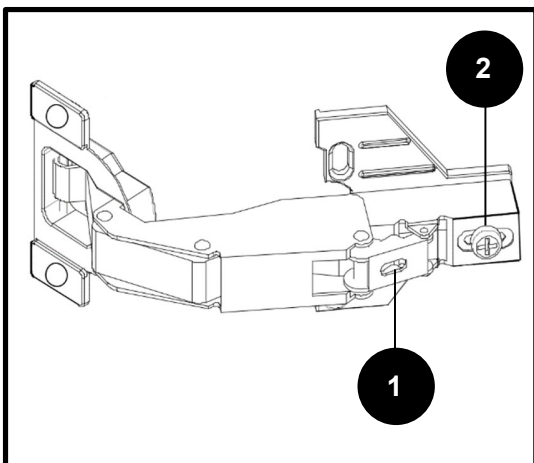


CORNER CABINETS DOOR ASSEMBLY


4. Insert four 1/2" flat Phillips screws through one 135-degree hinge into the predrilled holes on door panel Z1 and door panel Z2.

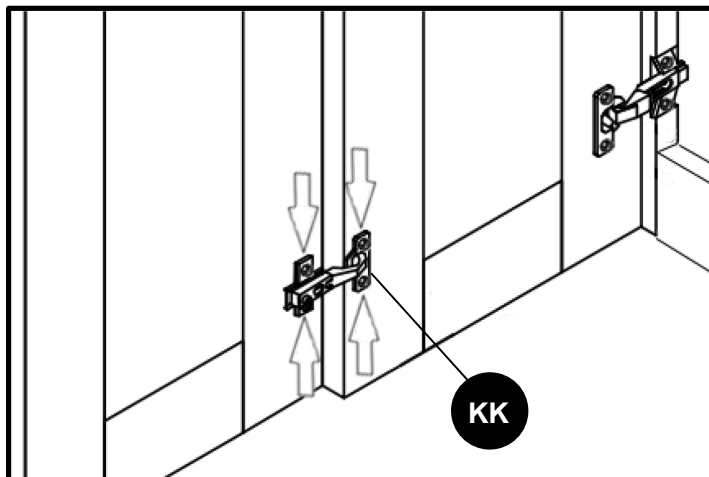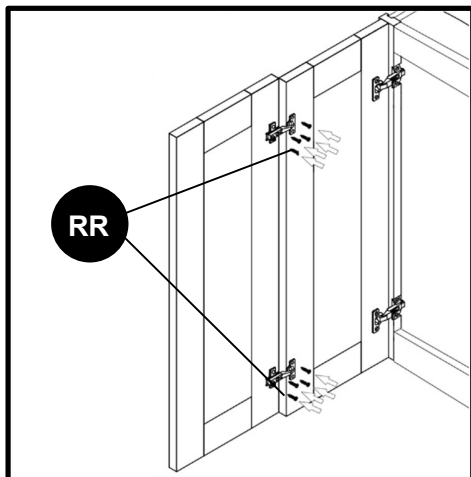

5. The customer can turn screw 1 to adjust the gap between door panels, turn screw 2 to adjust the door up and down, turn screw 3 to adjust the door forward and backward.


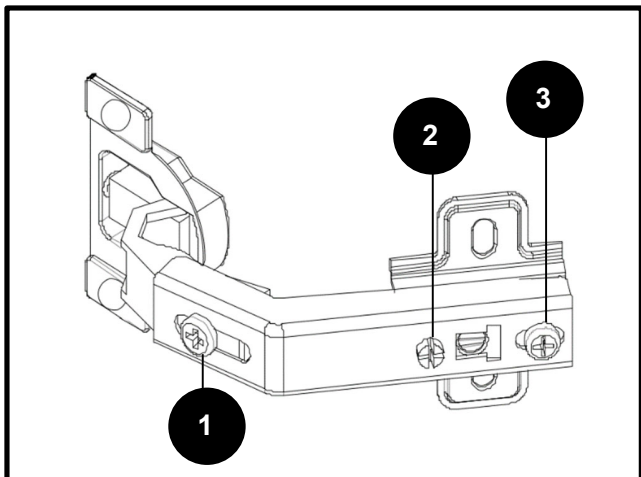


6. To reverse the door, unscrew the 3/4" round head Phillips screws from hinge RR and carefully remove the door panel. Then, reverse the door panel and drill the 3/4" round head Phillips screws to each hinge through the predrilled holes on the other side of the face frame to tighten the hinges with the cabinet face frame.

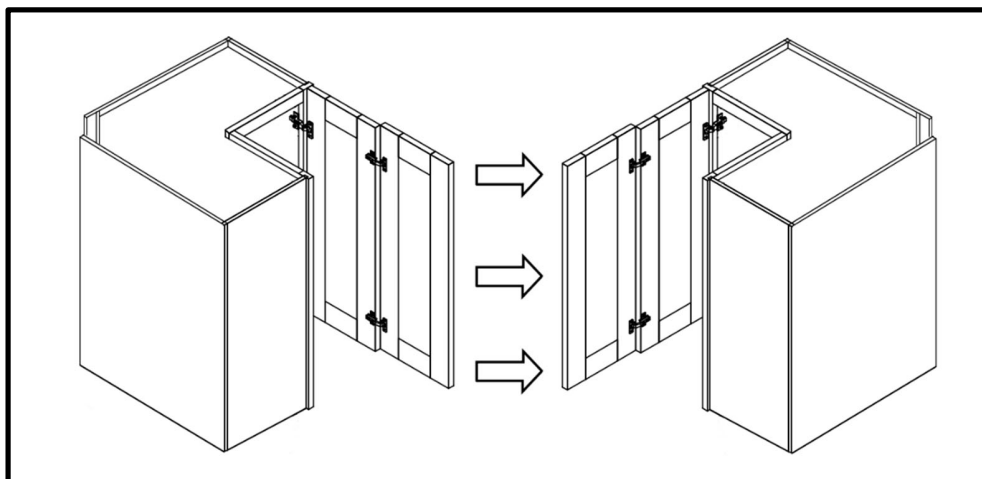


FACE FRAME ASSEMBLY INSTRUCTION

1. Insert four wooden dowel pins into one face frame, and then firmly connect the other face frame.

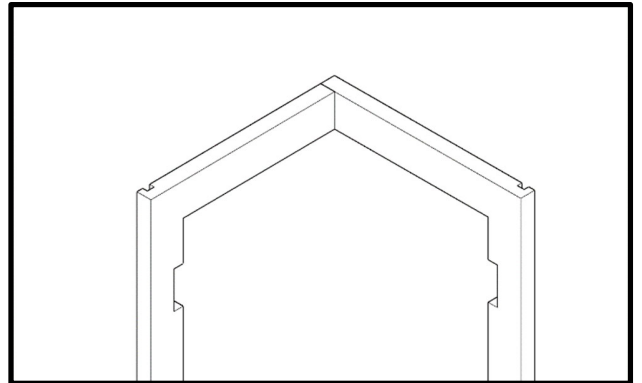
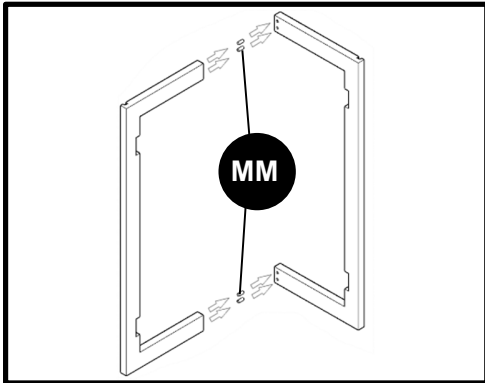


ADJUSTABLE SHELF INSTALLATION

1. Insert four shelf clips into the pre-drilled holes on the inner side of cabinet box side panels at the same height for one shelf.

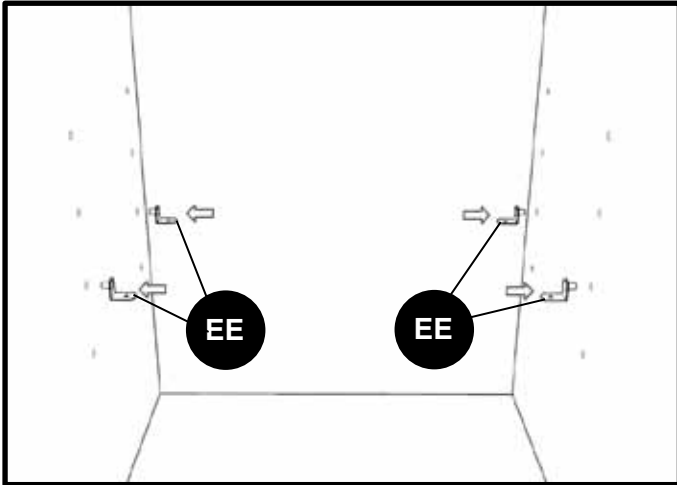


2. Insert the adjustable shelf at a tilted angle.

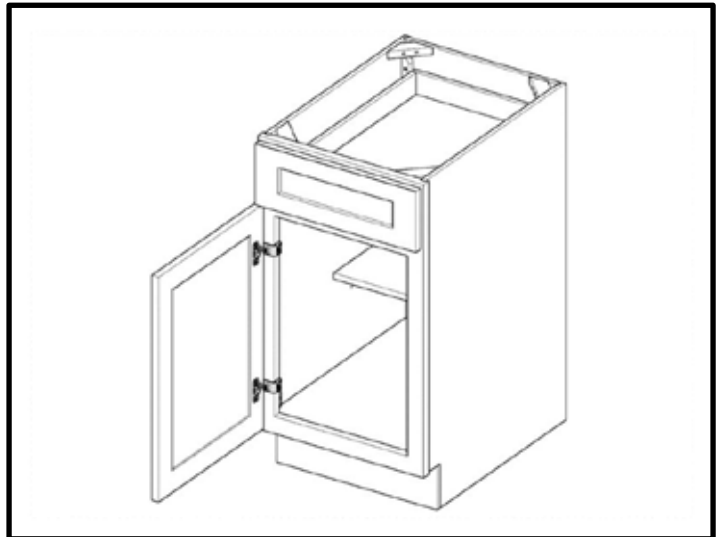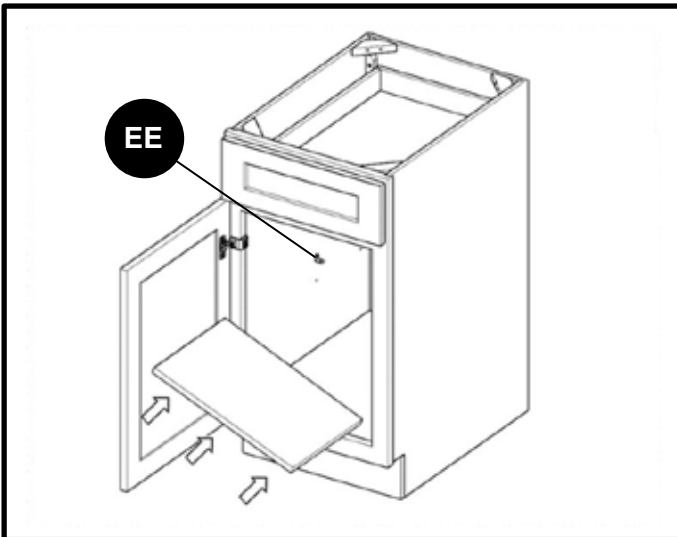

FASTEN BOX BOTTOM PANEL AND BOX BACK PANEL

1. Drill 1" flat head Phillips screw to the predrilled holes and fasten box bottom panel with box back panel

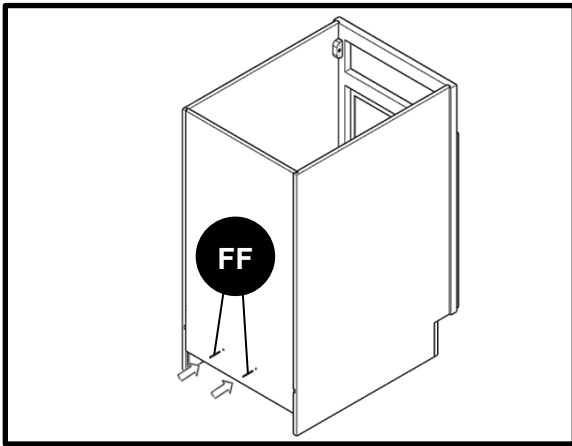

RUBBER BUMPER INSTALLATION

1. Attach rubber bumpers to 4 corners of each drawer face panel and 2 outsider corners of each door panel.

