


L35.43*W17.71*H73.62 INCH

Installation & Assembly

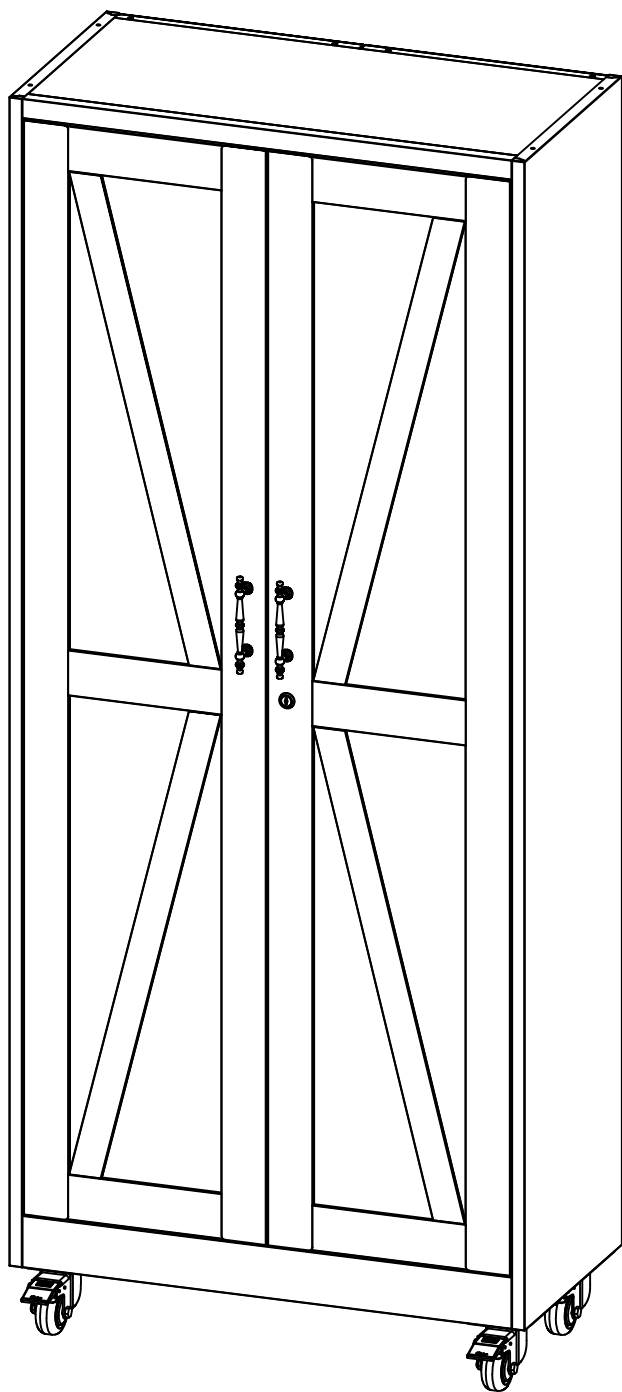


Important!












Thank you for your purchase. Please open it carefully.

If you encounter any problems during assembly and use, please contact us through email


We have the ability to solve all your problems.

Service tenet – to enable customers to enjoy high-quality service.

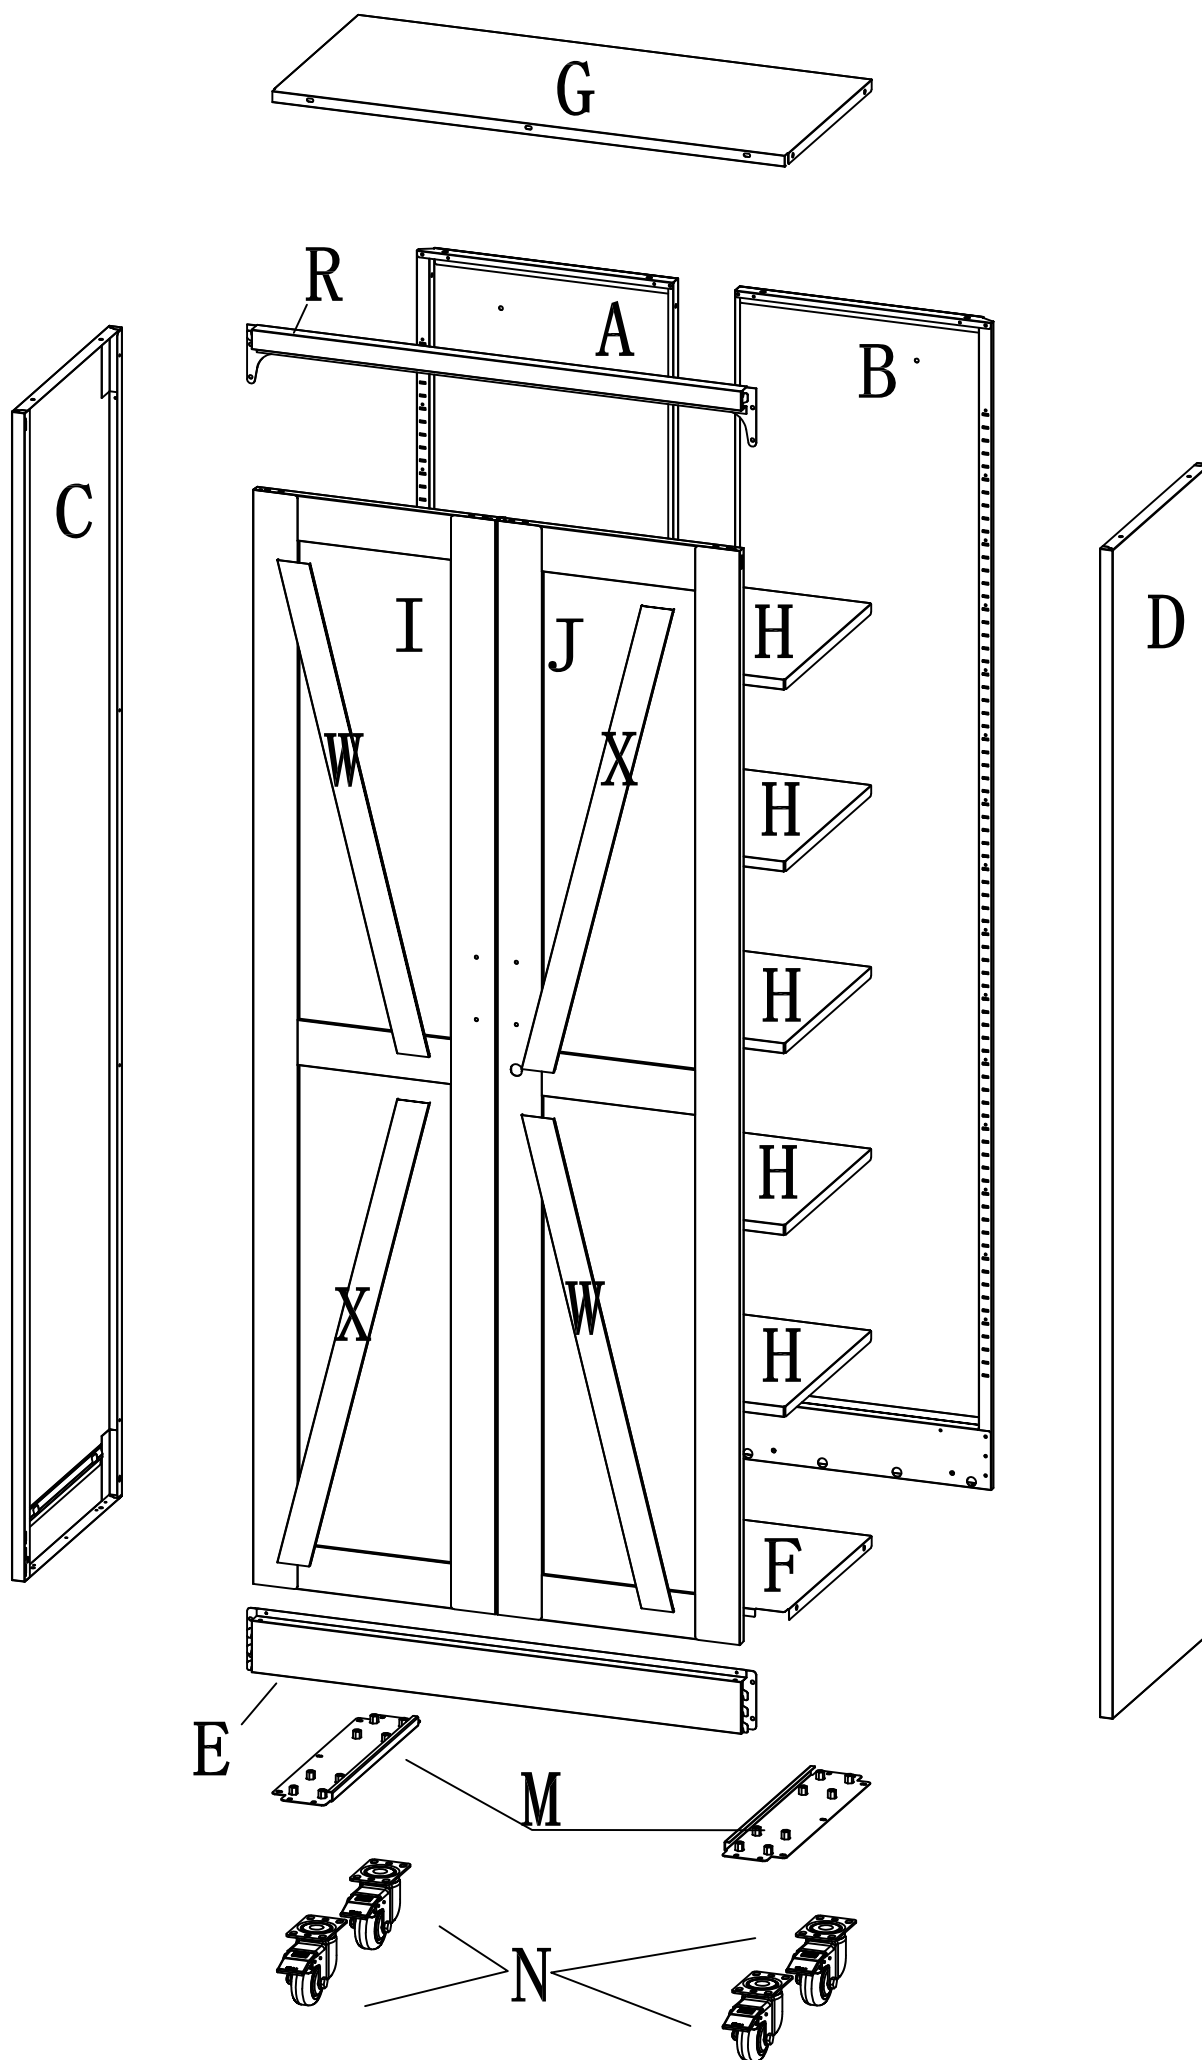

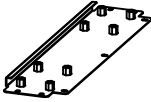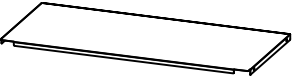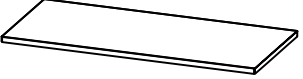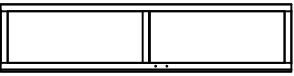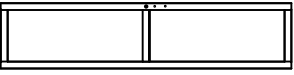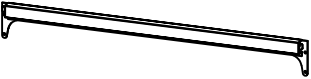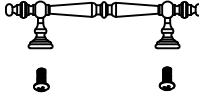
PARTS LIST		LISTE DES PIECES				LISTE DE PIEZAS			
Nom Nombre		Part Piece Pieza	Qty Qte	Spare Epargner Sobrante	Name Nom Nombre		Part Piece Pieza	Qty Qte	Spare Epargner Sobrante
A	Left Back Panel		1		M	Wheel mounting plate		2	
B	Right Back Panel		1		N	Wheel		4	
C	Left Side		1		O	Shelf Support		20	
D	Right Side		1		P	Laminate fastening buckle		20	
E	Kick Plate		1		Q	Door Pivot pin I Shim		2	
F	Bottom Panel		1		S	Magnet		4	
G	Top Panel		1		T	Anti-tilt rope		1	
H	Shelves		5		U	Reverse rope		1	
I	Left Door		1		V	Fixed caster screws		16	
J	Right Door		1		W	Decorative strip		2	
R	upper separator		1		X	Decorative strip		2	
K	13/32 "Screw		4		Y	Haft		2	
L	13/32 "Screw		42		Z	Magnetic strips and double-sided adhesive pads		12	

1

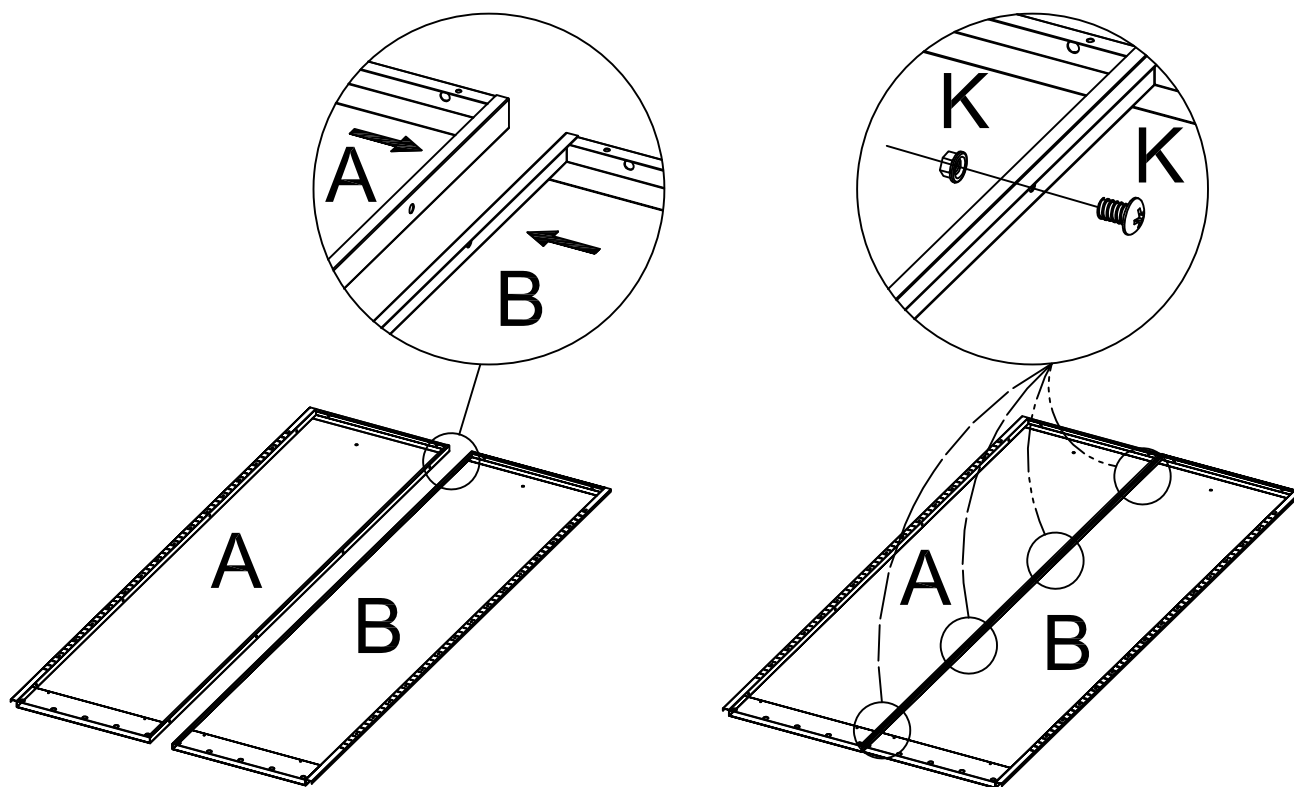

K×4 


2

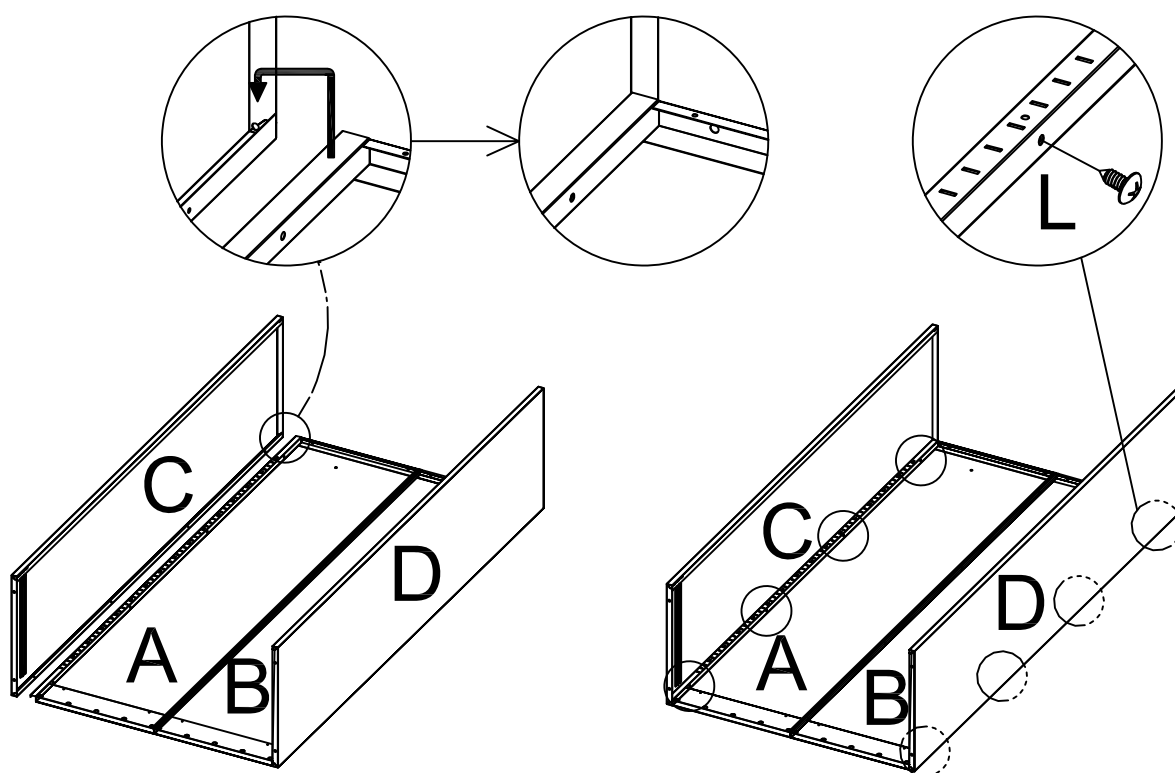


L×8 

3


Snap the three buckles on either side of Part E into the three holes in both side panels and then push it down so that it snaps into the bottom of the cabinet.

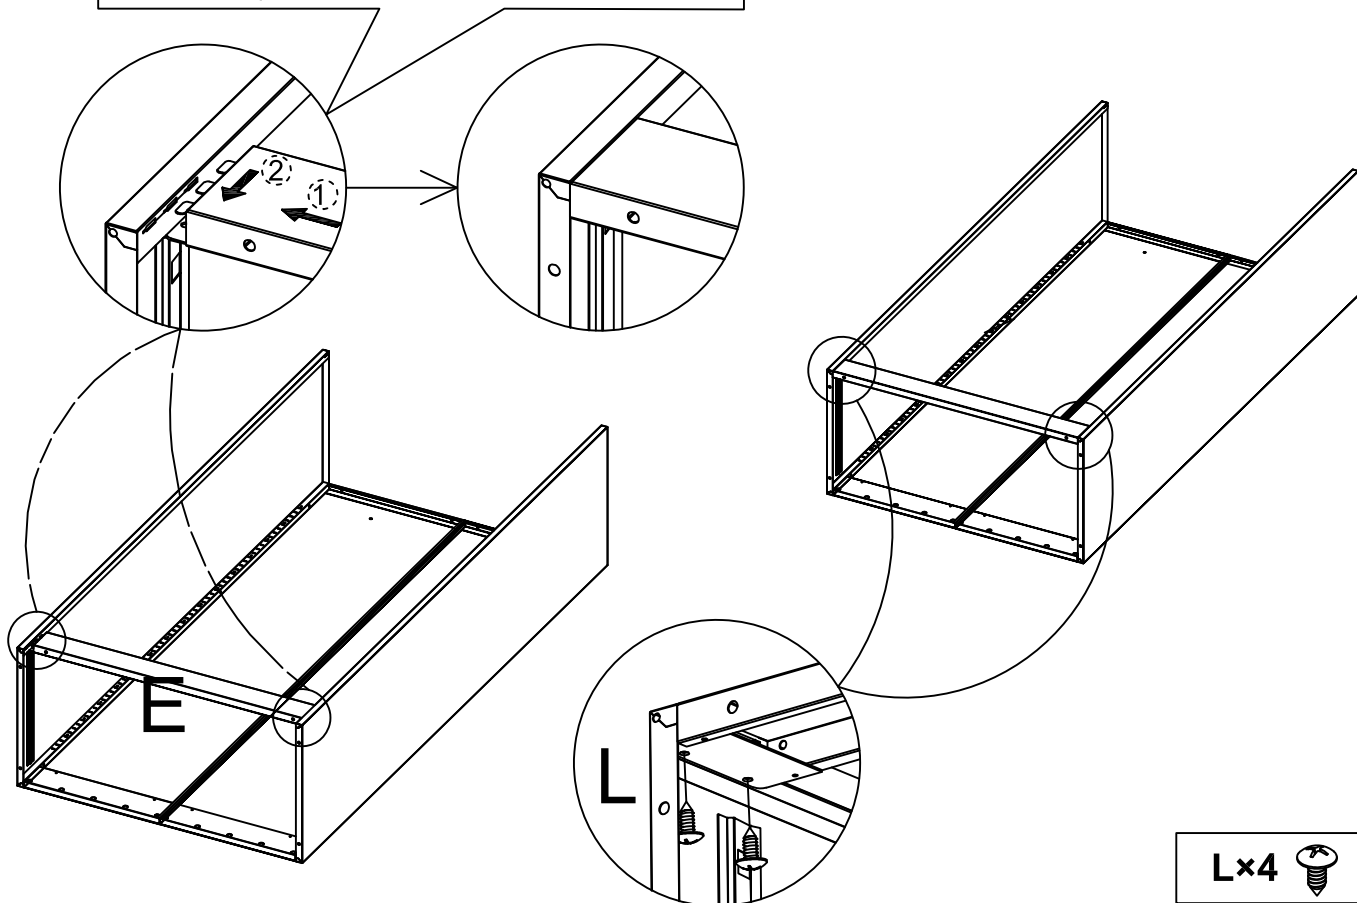

4

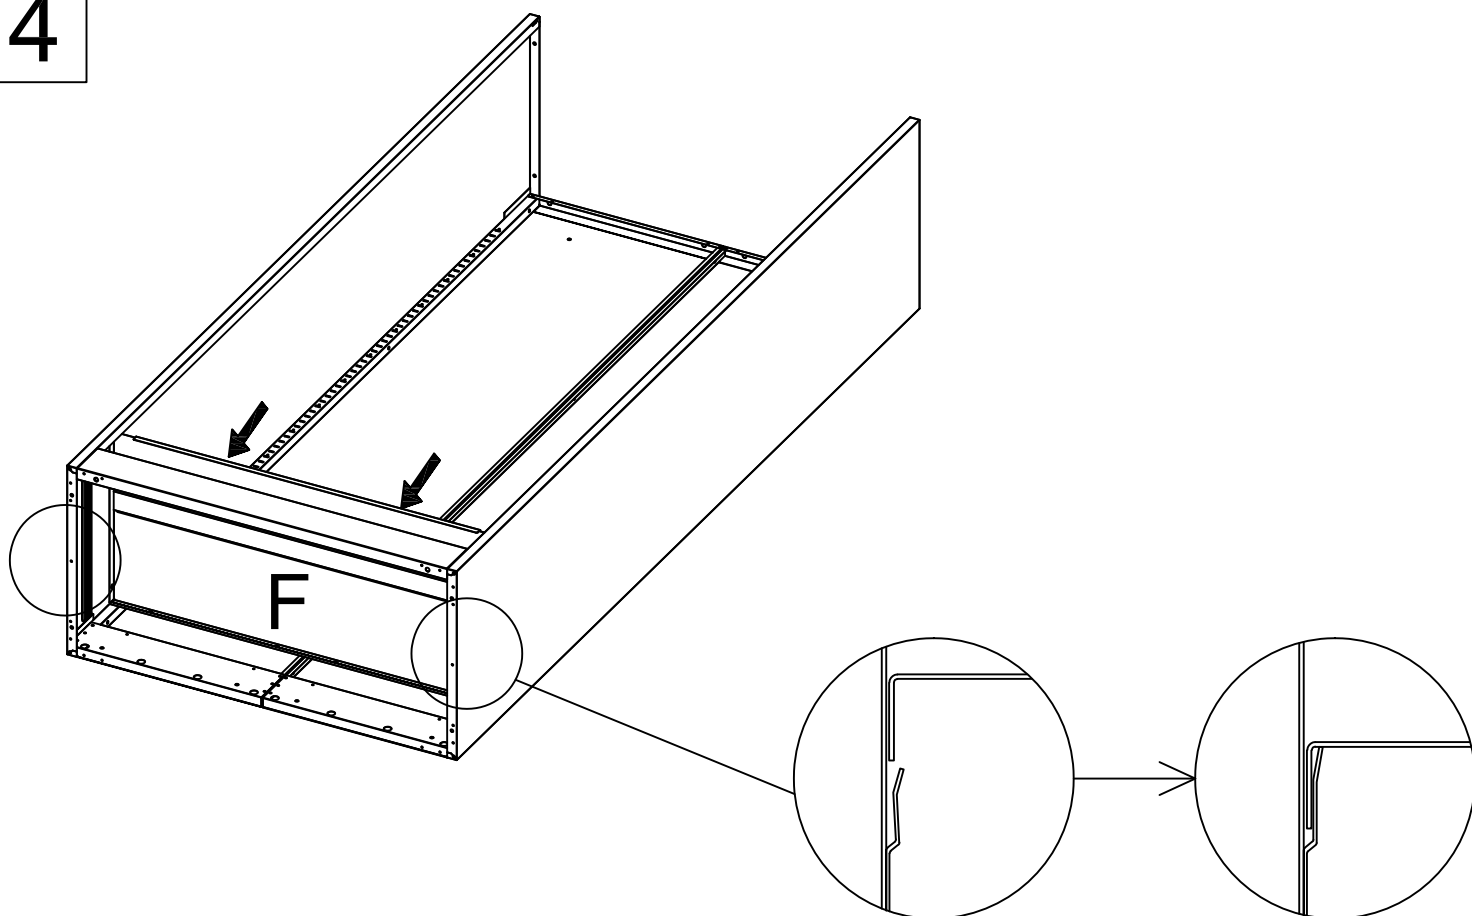


5

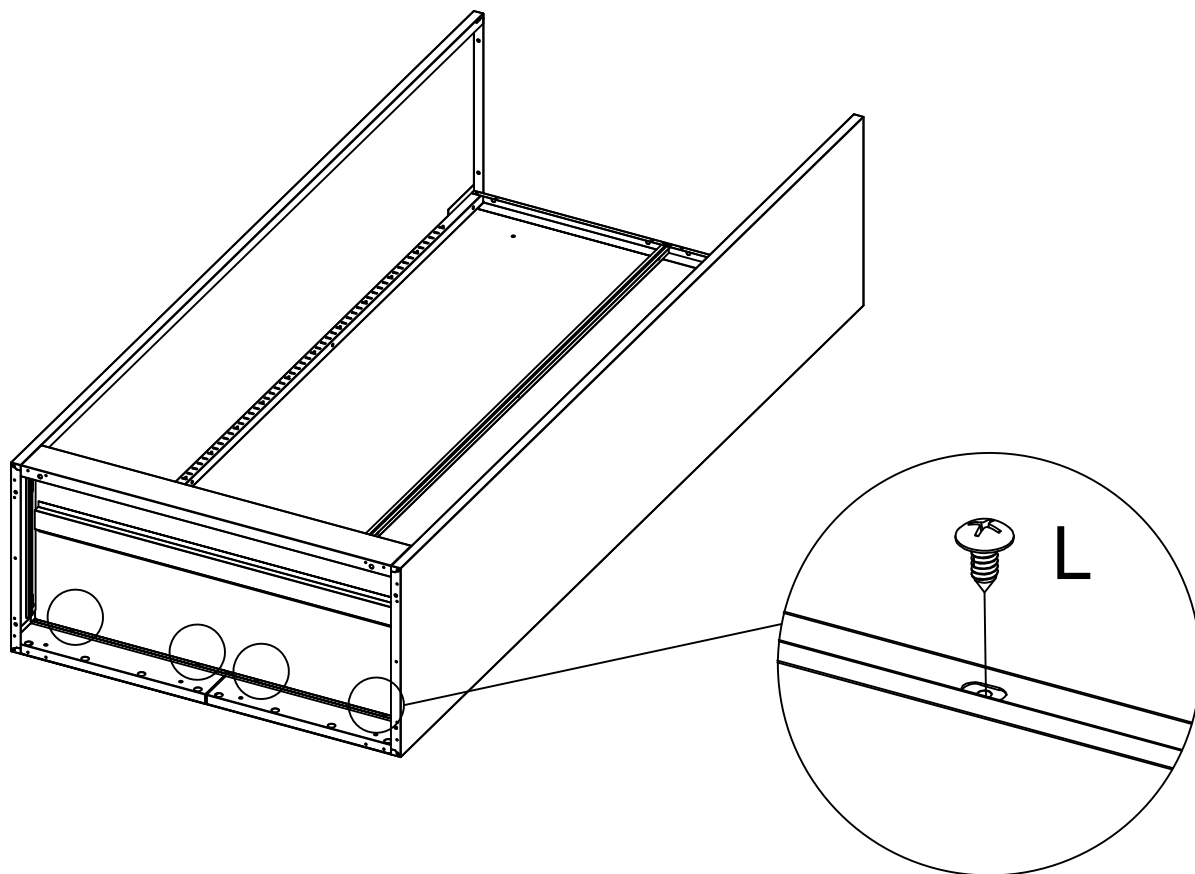

L×4




6

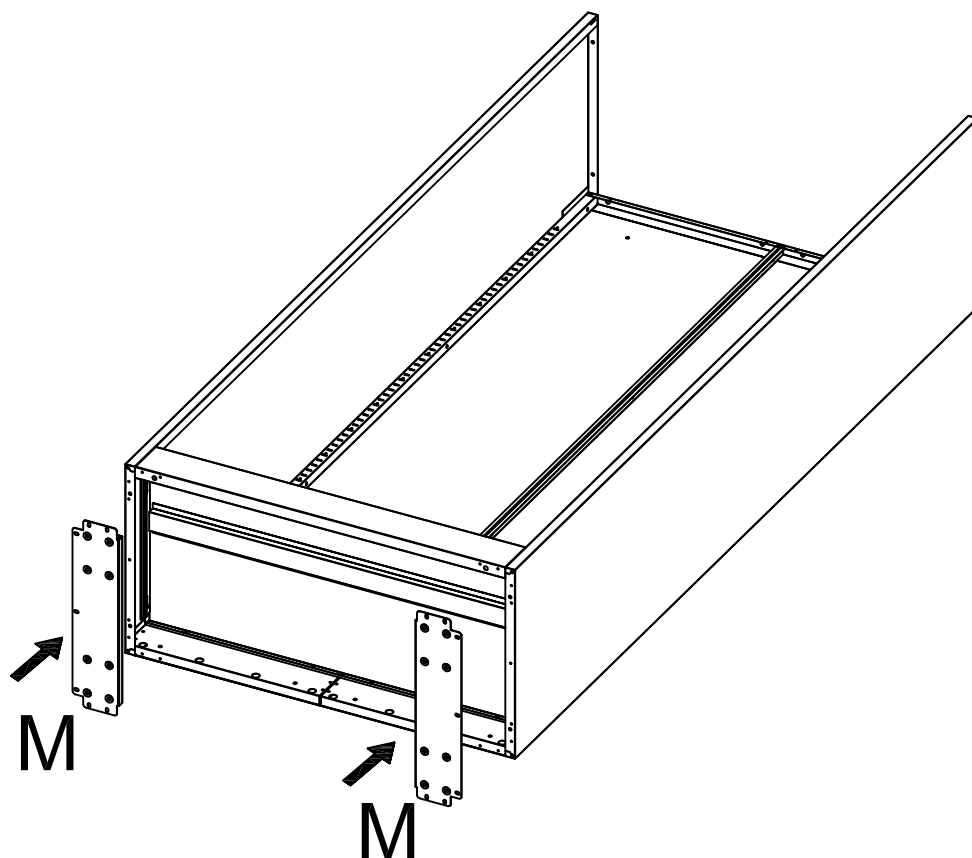


7


Fix the G plate with screws.

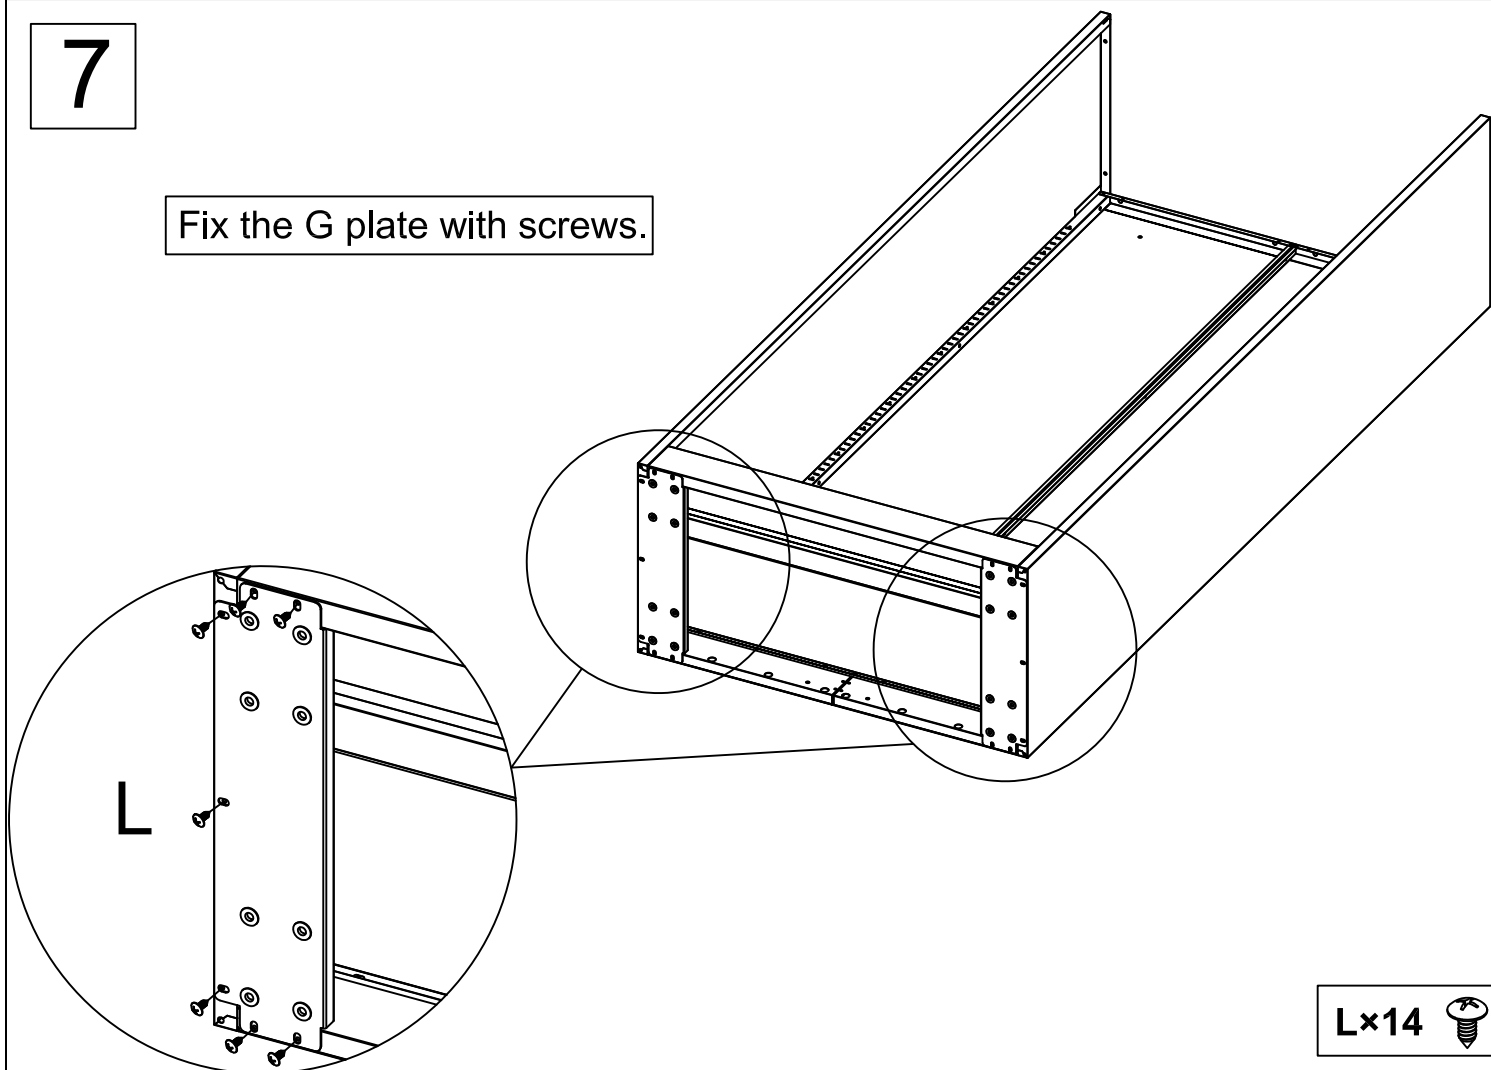


8

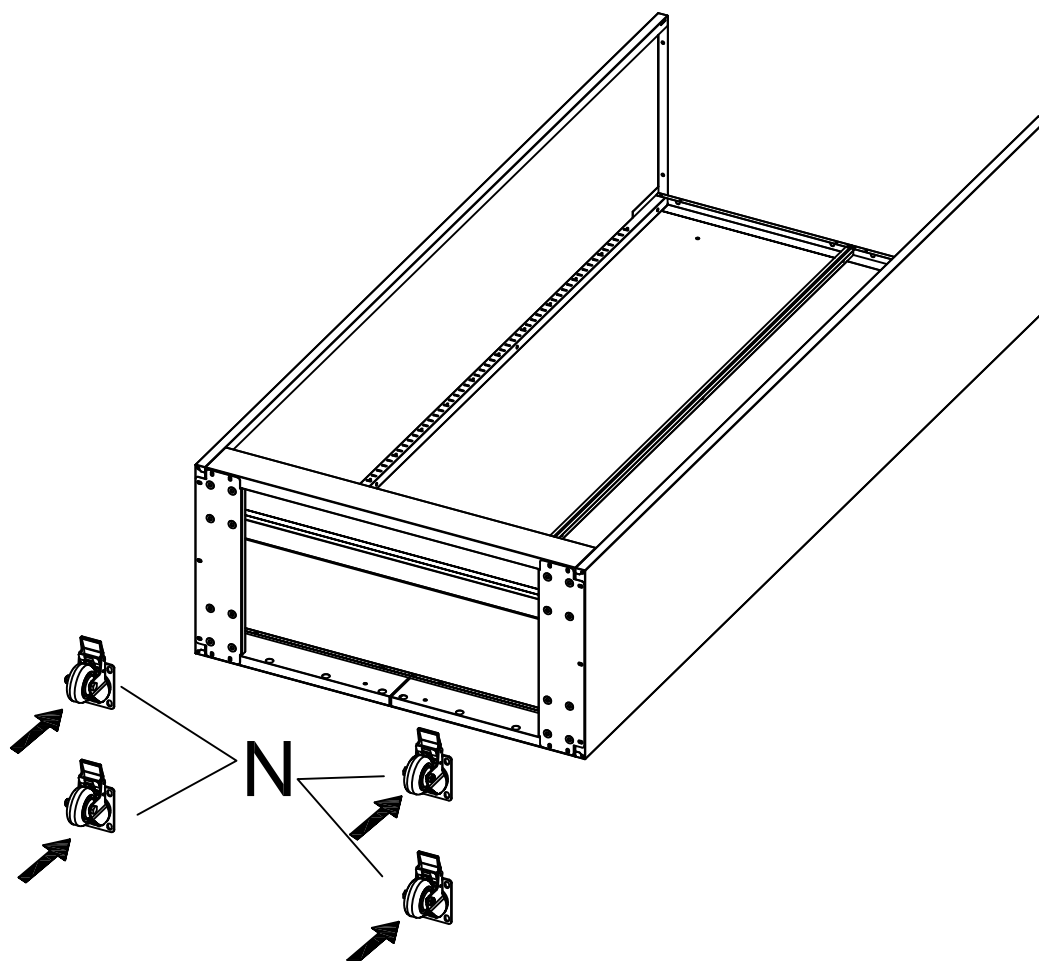

9

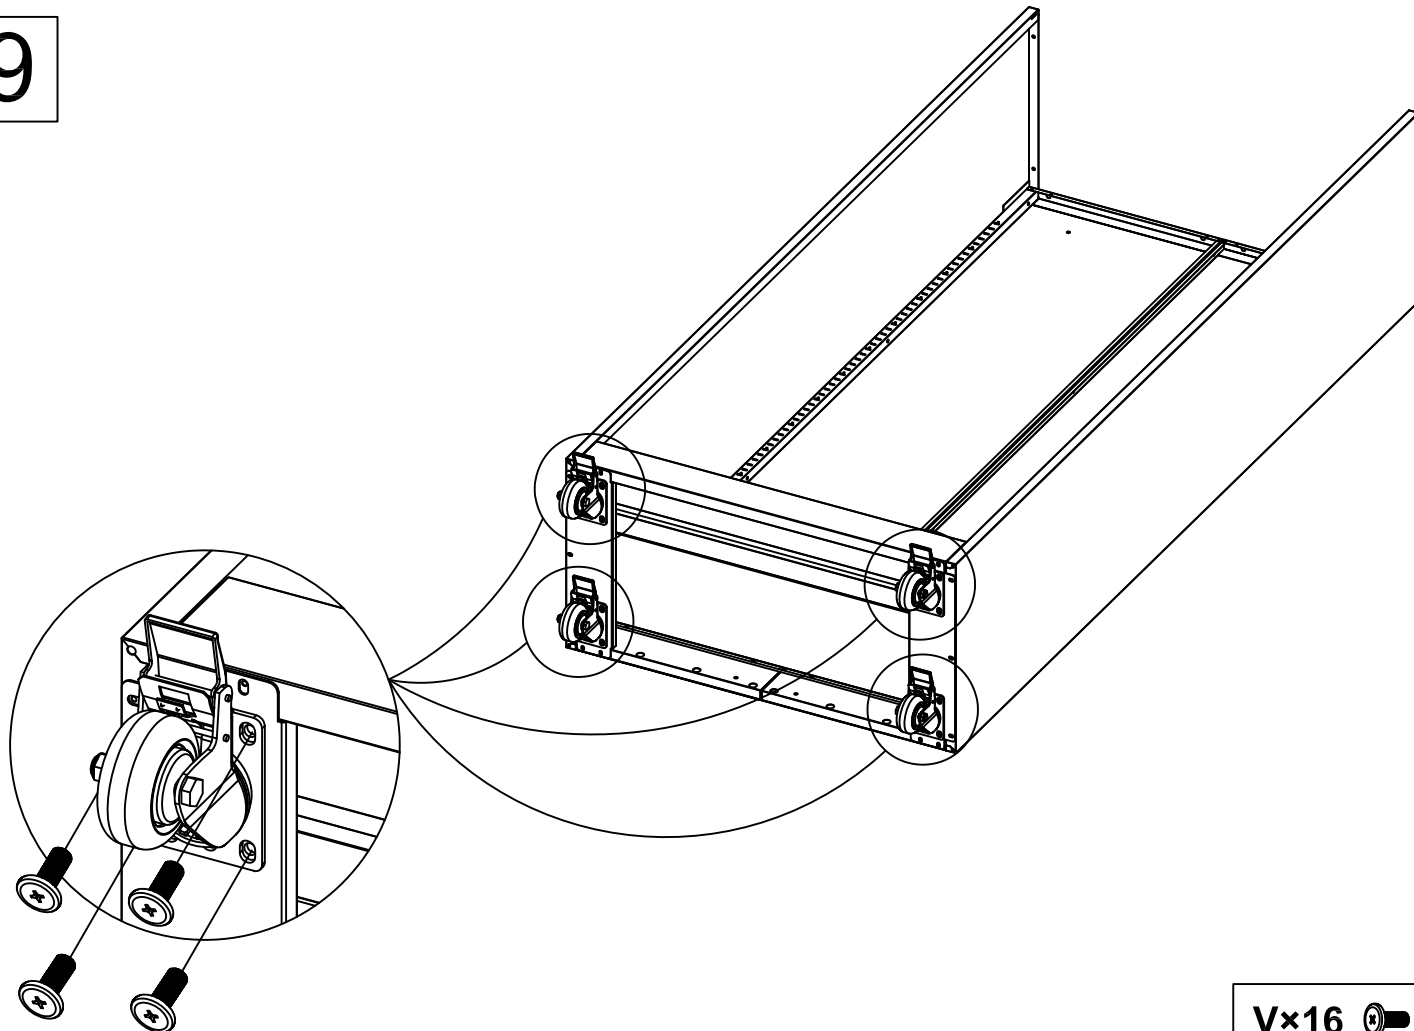



10

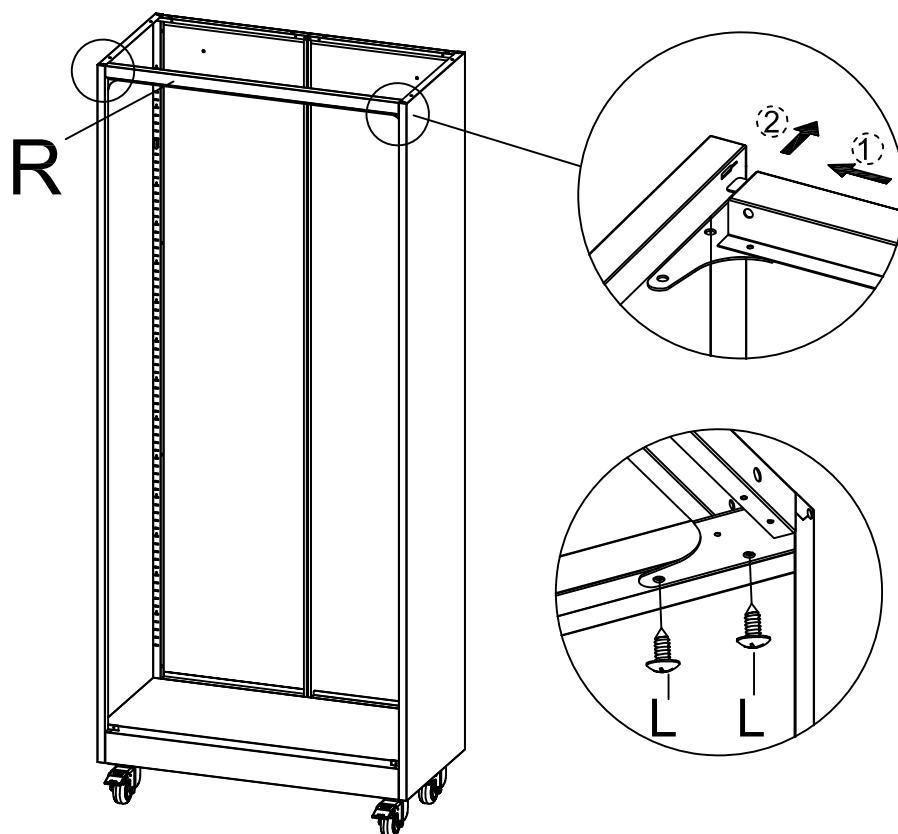

Lx4





11

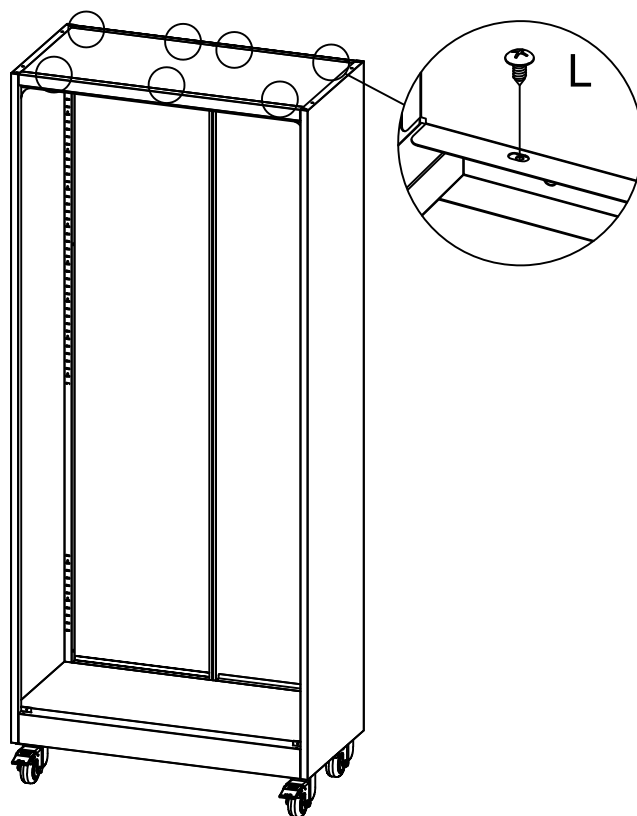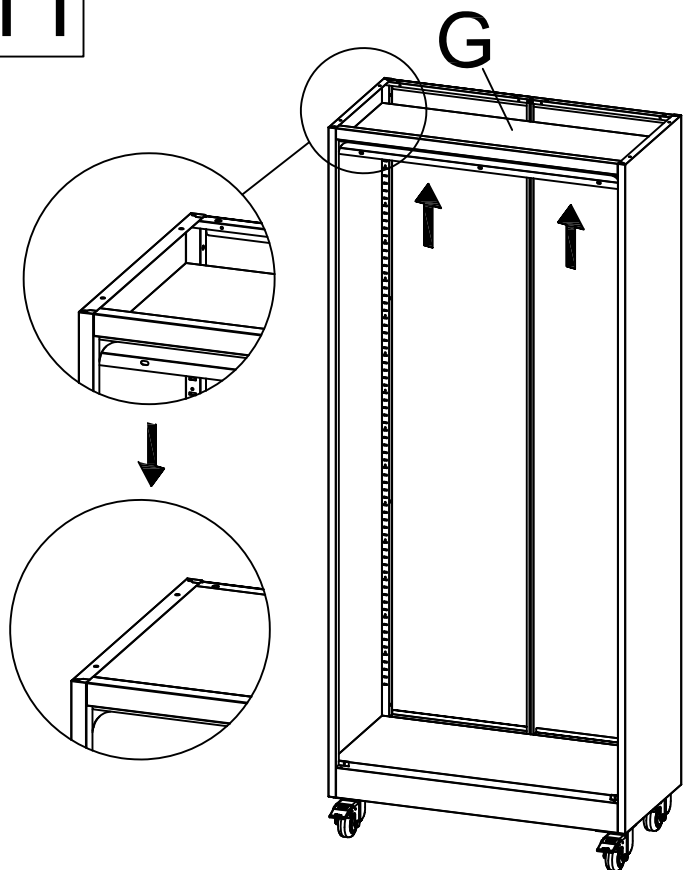







L×7 

12

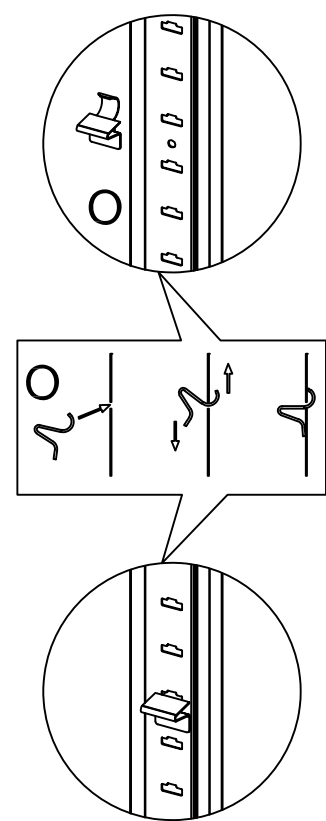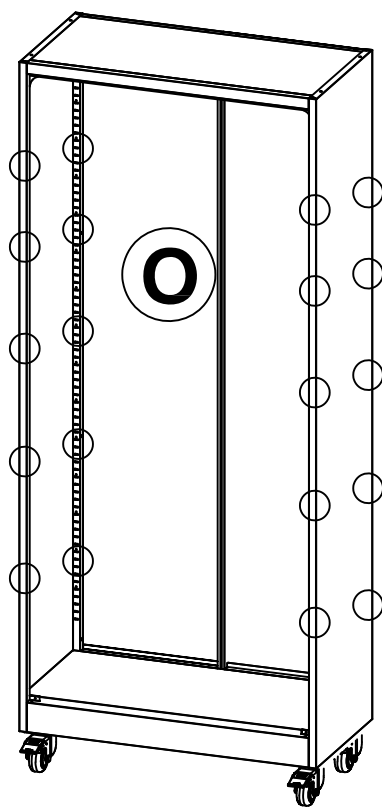



O×20 

13

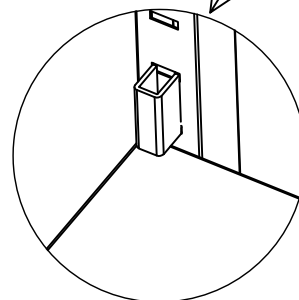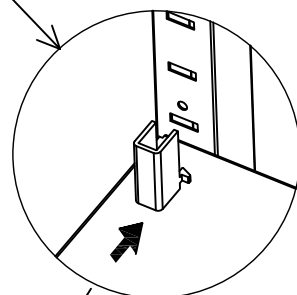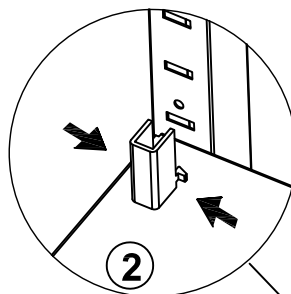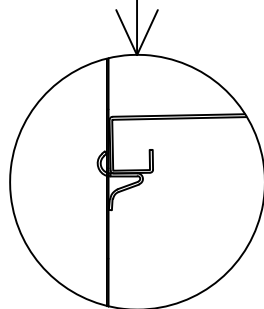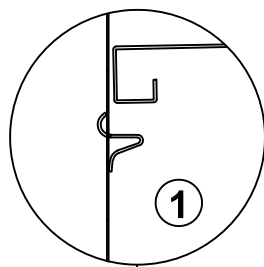
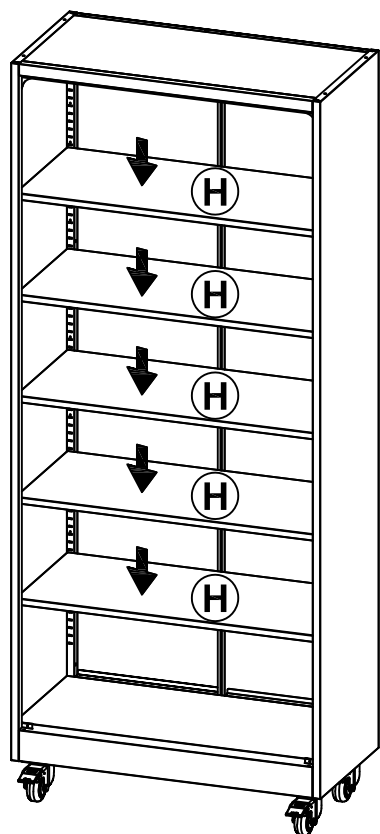


P×20


14

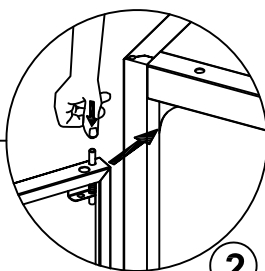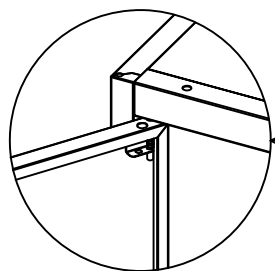

2

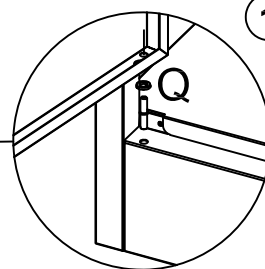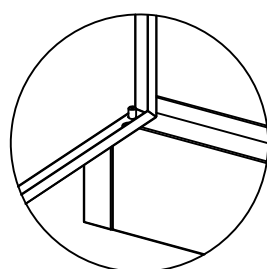


1

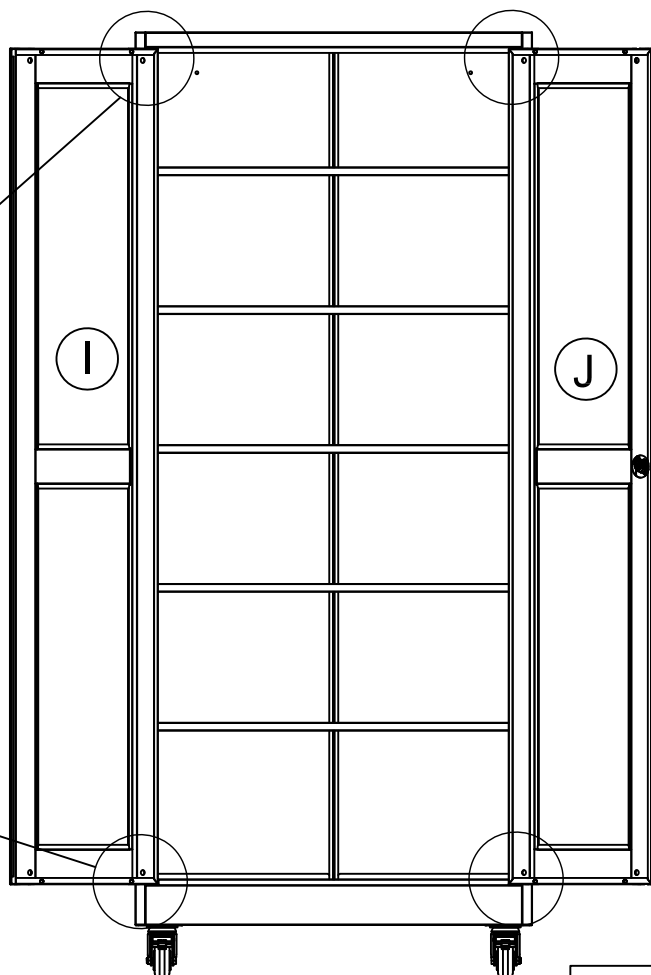

Q×2

15

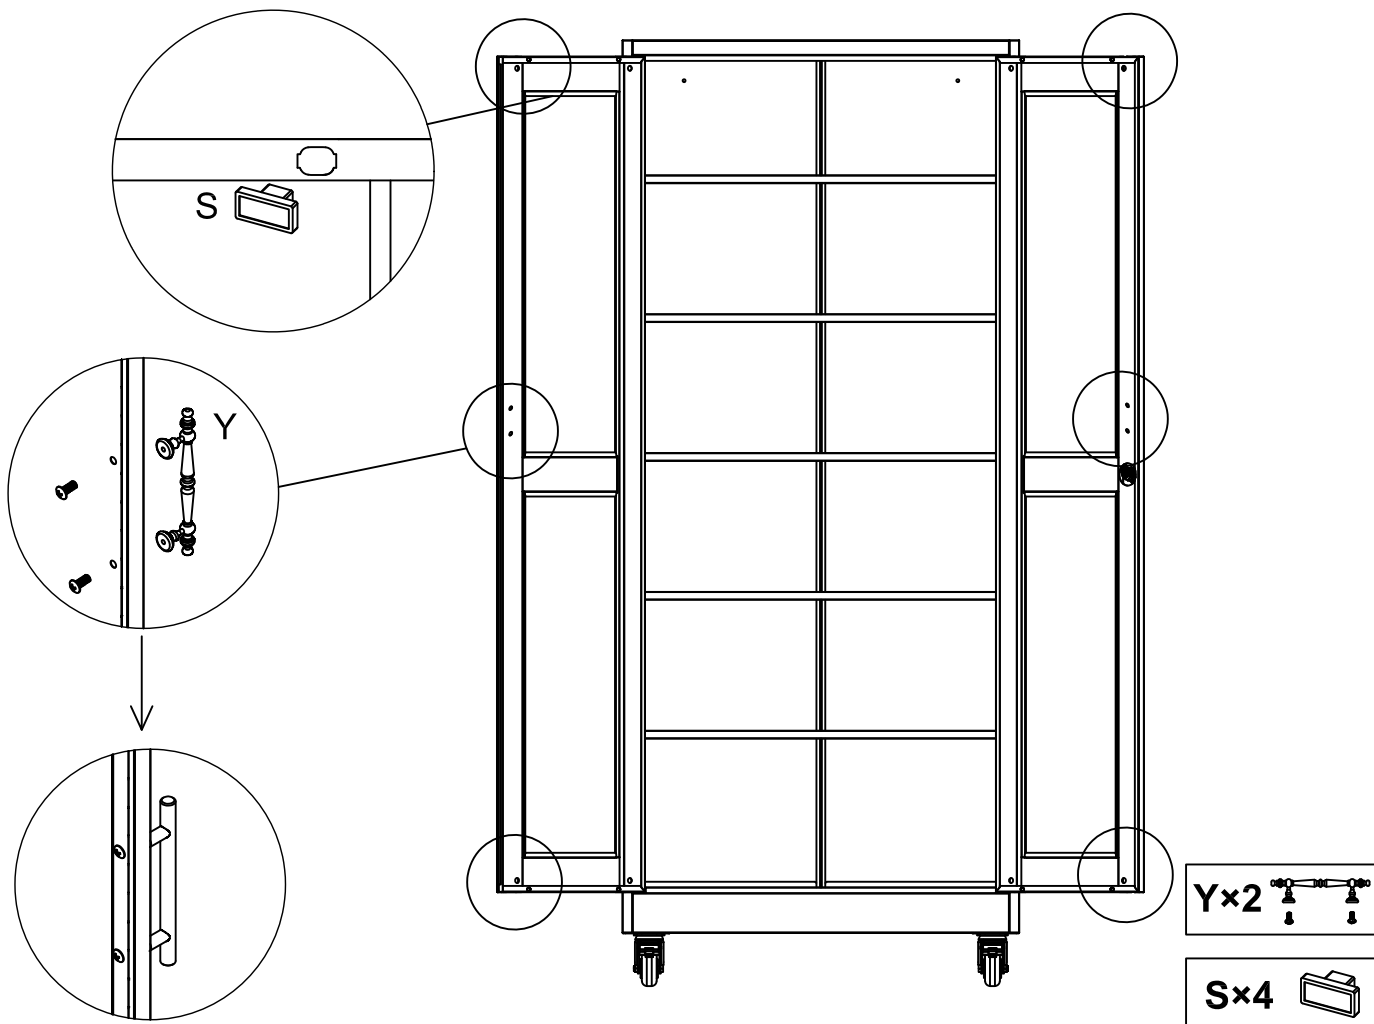


16

Step 1




Remove the adhesive
backing

Step2

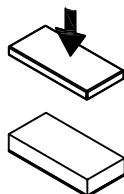


Attach the magnetic strip
to the backing adhesive.

Step3

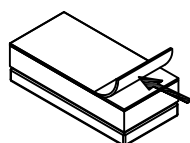


Tear the other side and let it stick to W and X.

Step4

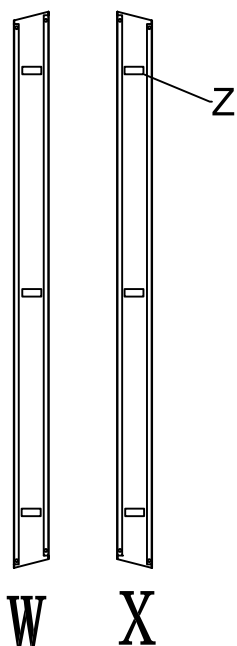

Step5

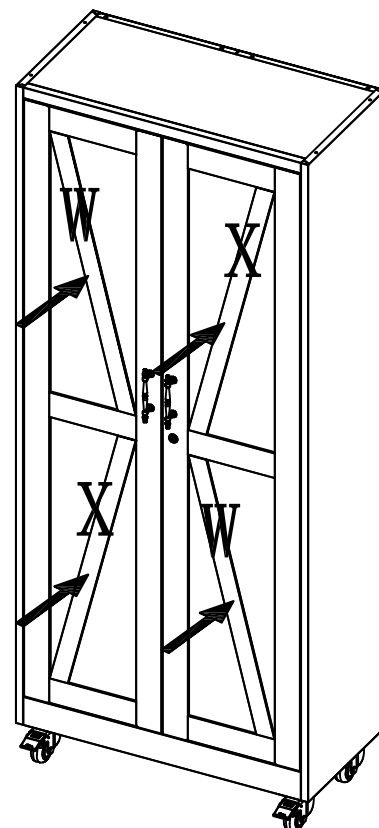


Zx12



17

The cabinet can be fixed to the wall as needed.

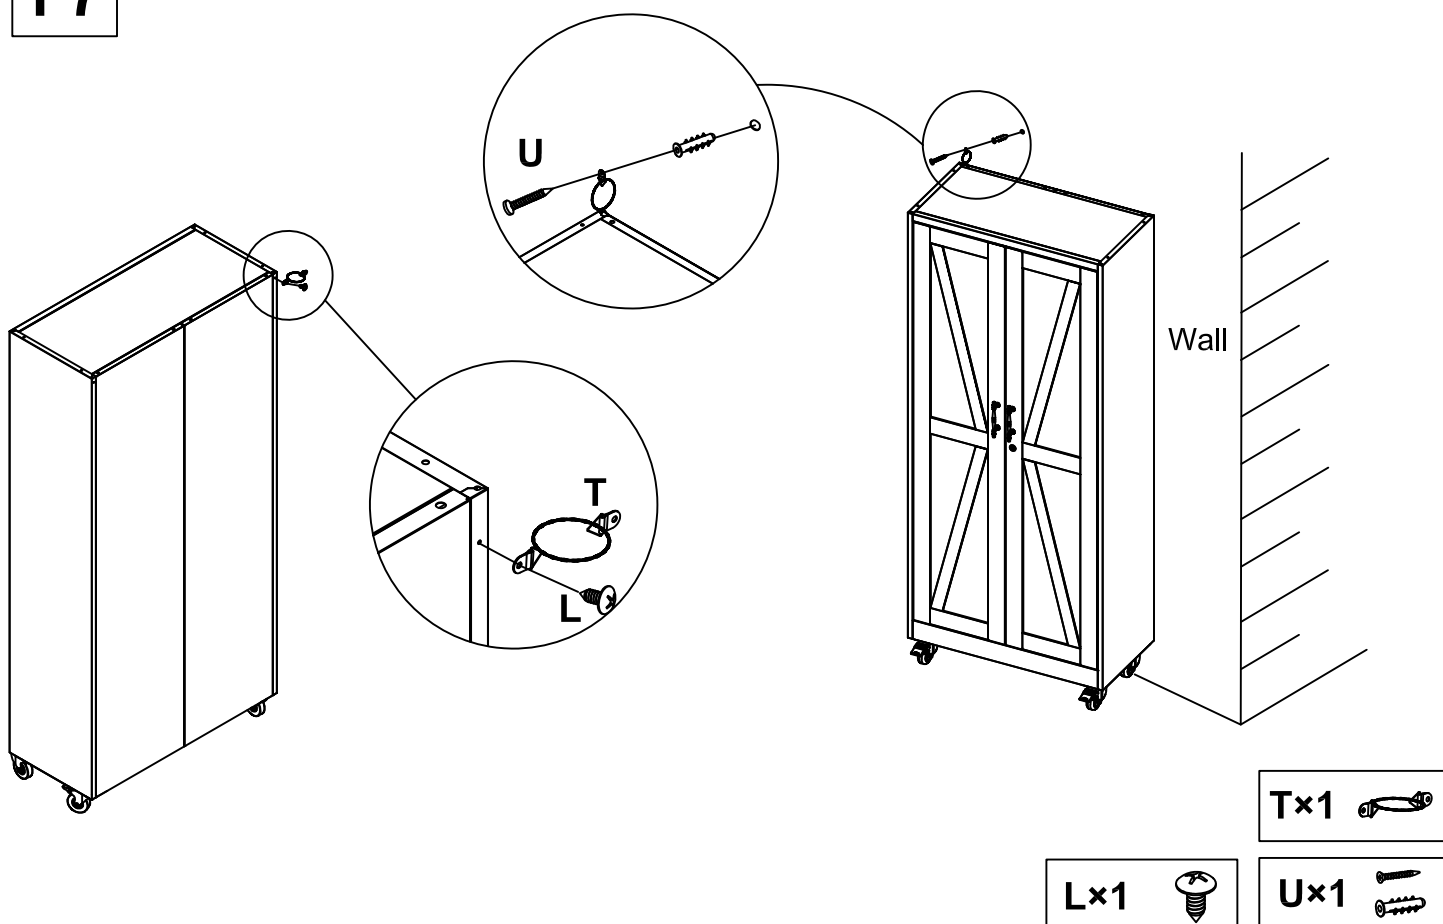

Problems and Solutions

When the door is closed, it still protrudes outward.
That's because the door is made of steel plate and has stretchability.
You can adjust it according to the method shown in the picture.

