



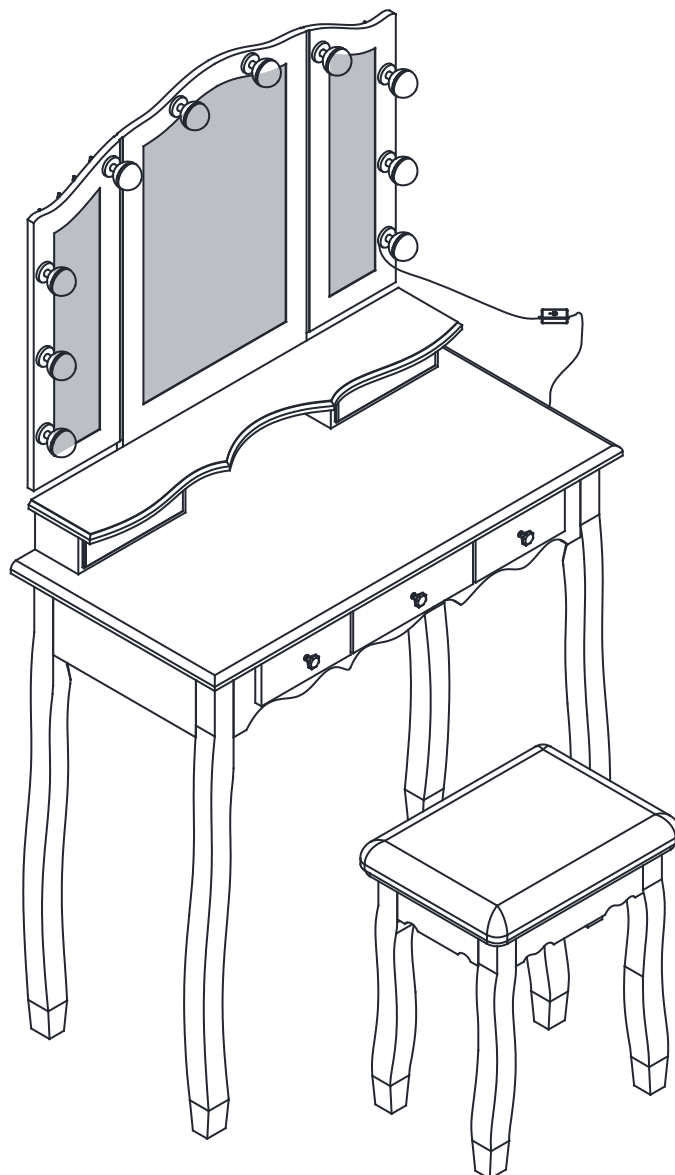
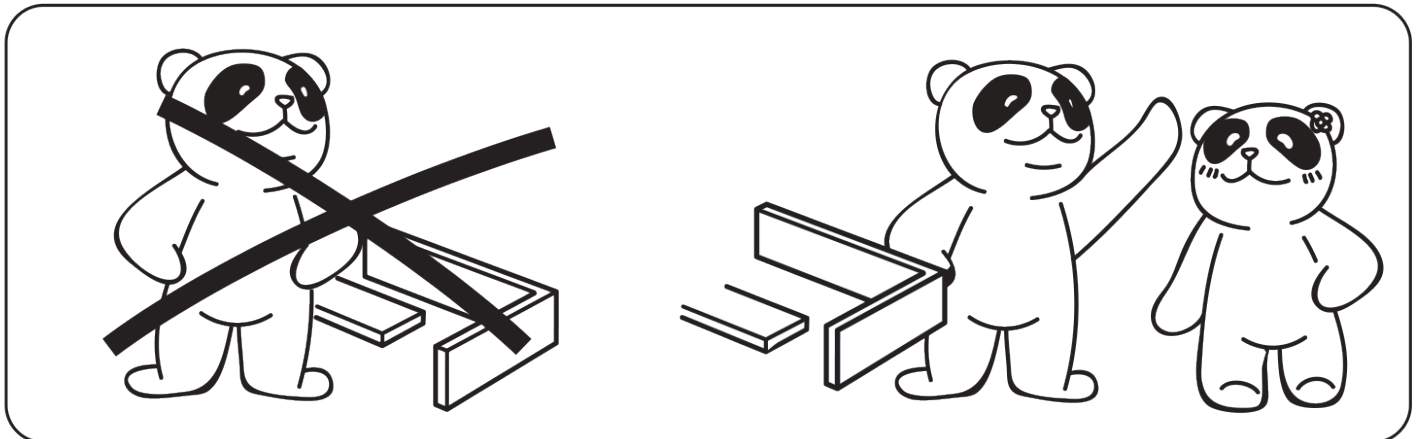
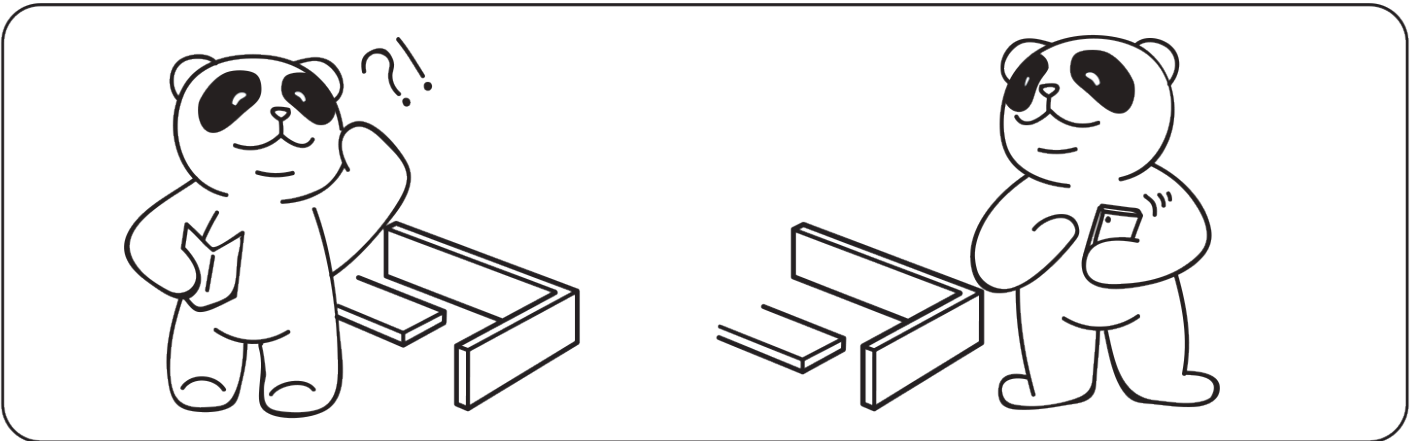


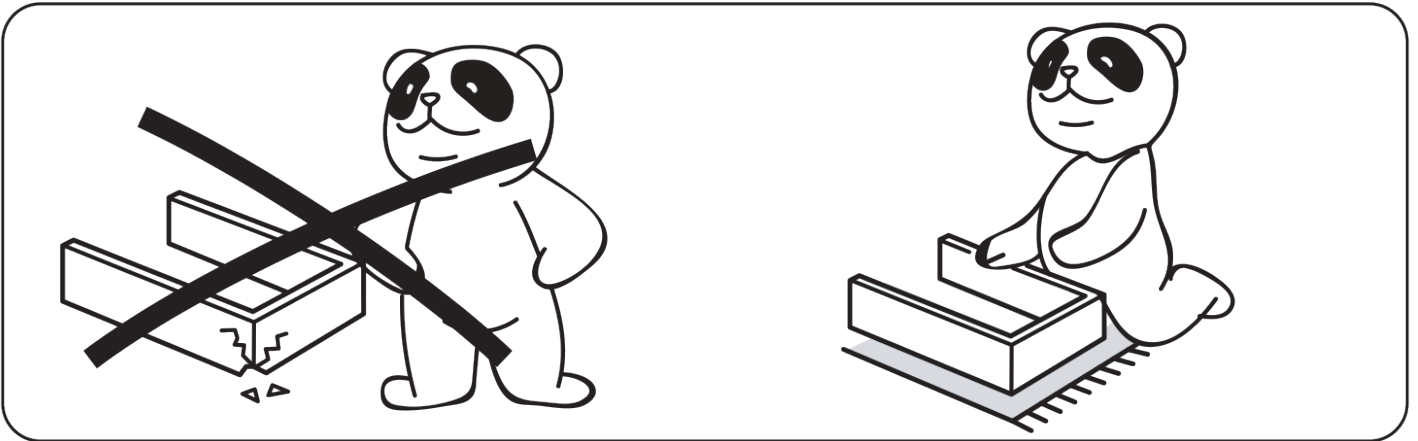

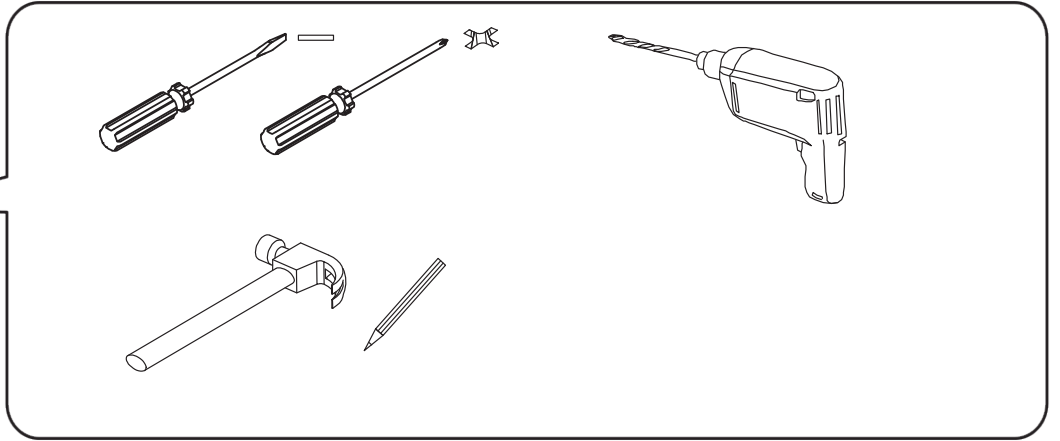



A
x16




B
x4



C
x5




D
x36

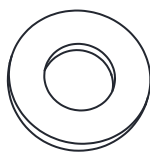

E
x16




F
x6



G
x8




H
x3

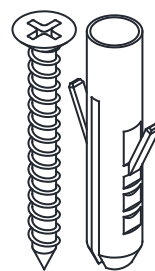

I
x1




J
x1

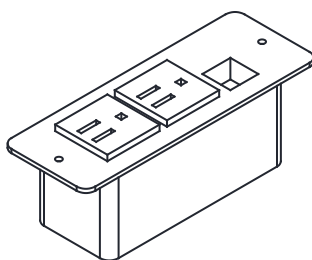


K
x1



L
x2

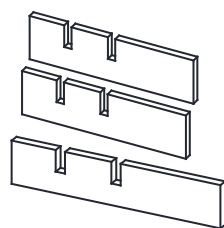


M
x1

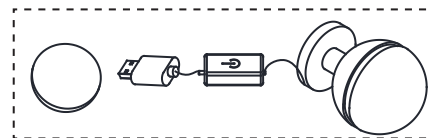


N
x1




O
x1

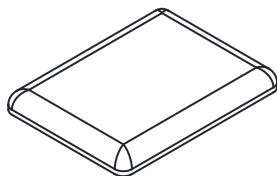


1
x1

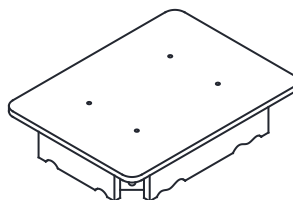


2
x1

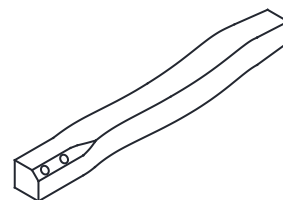


3
x4

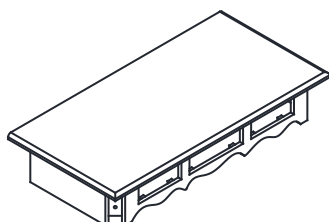


4
x1

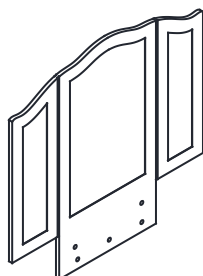


5
x1

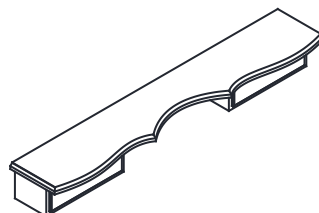


6
x1

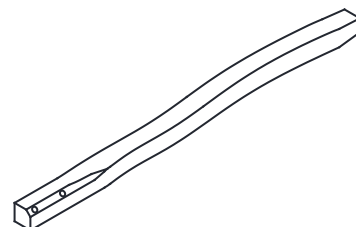


7
x4

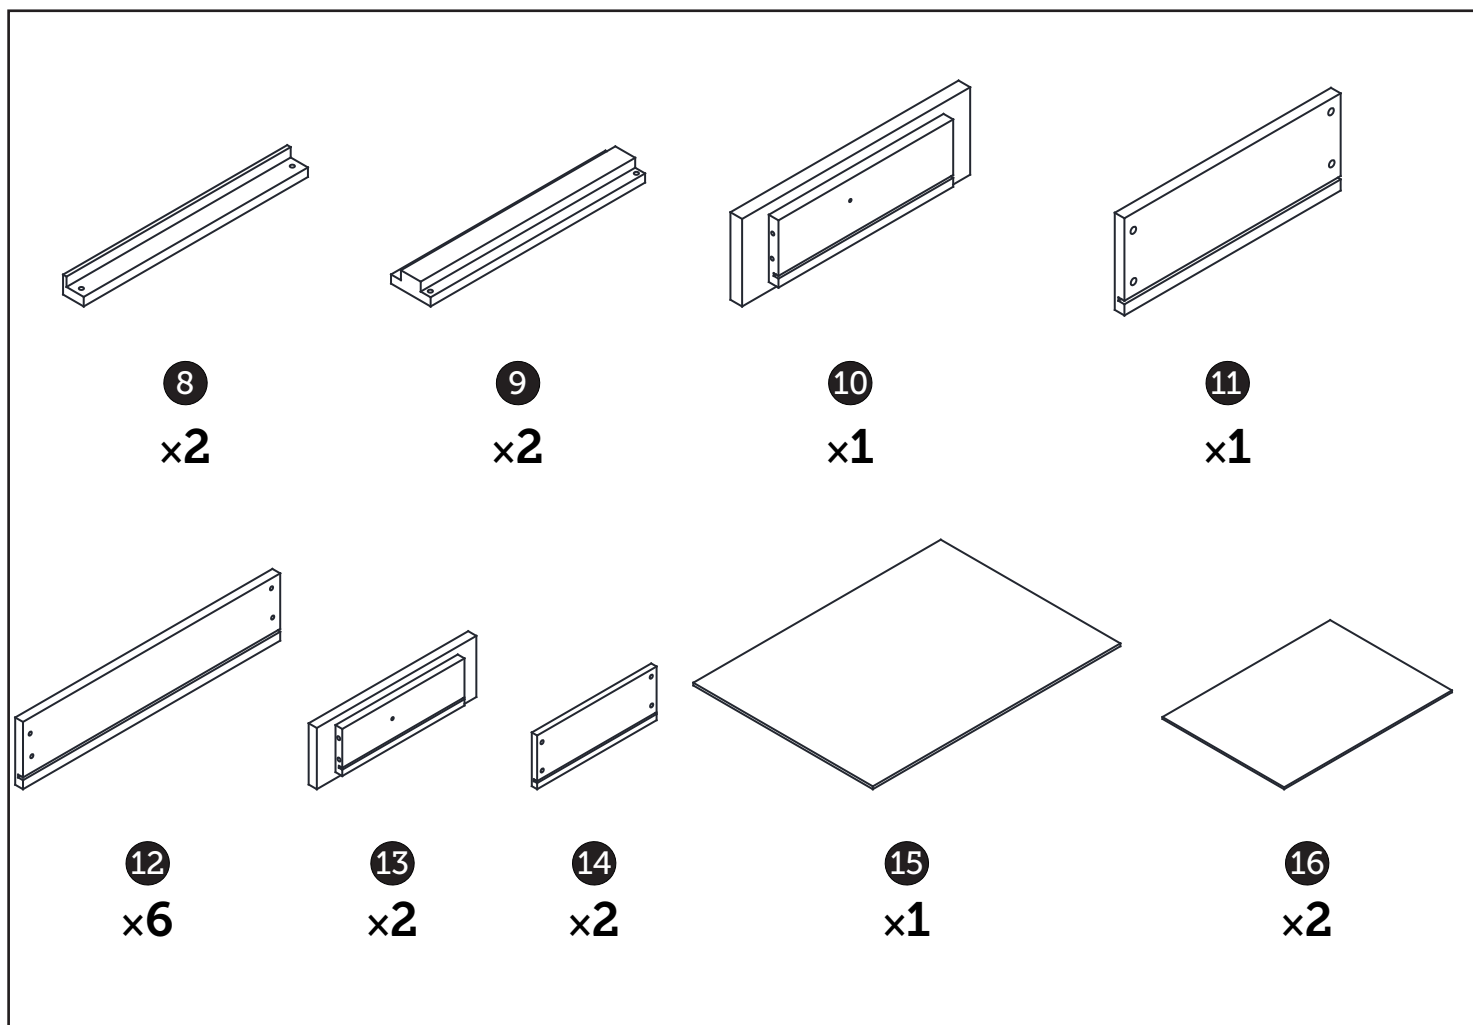


Install the footstool

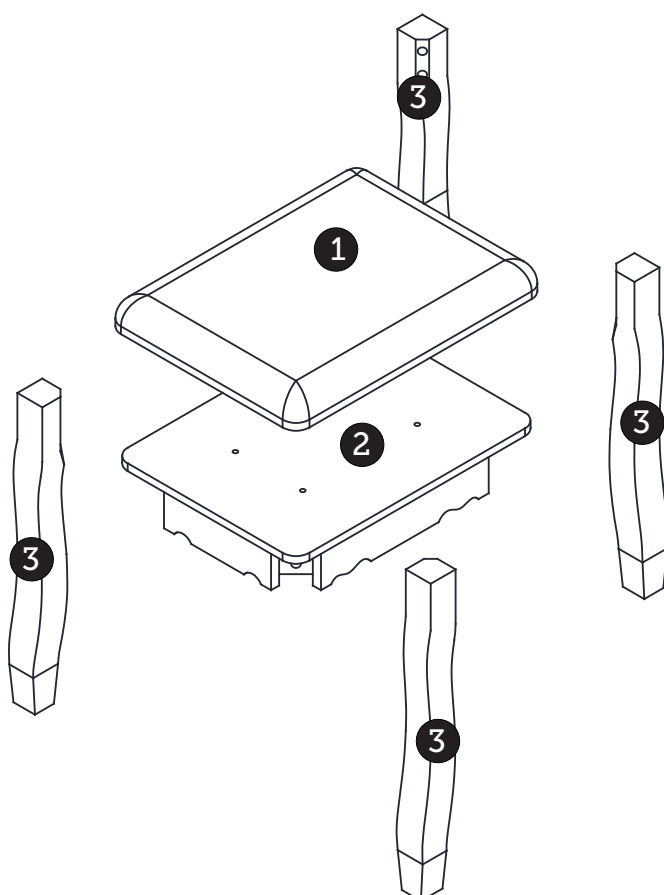


1

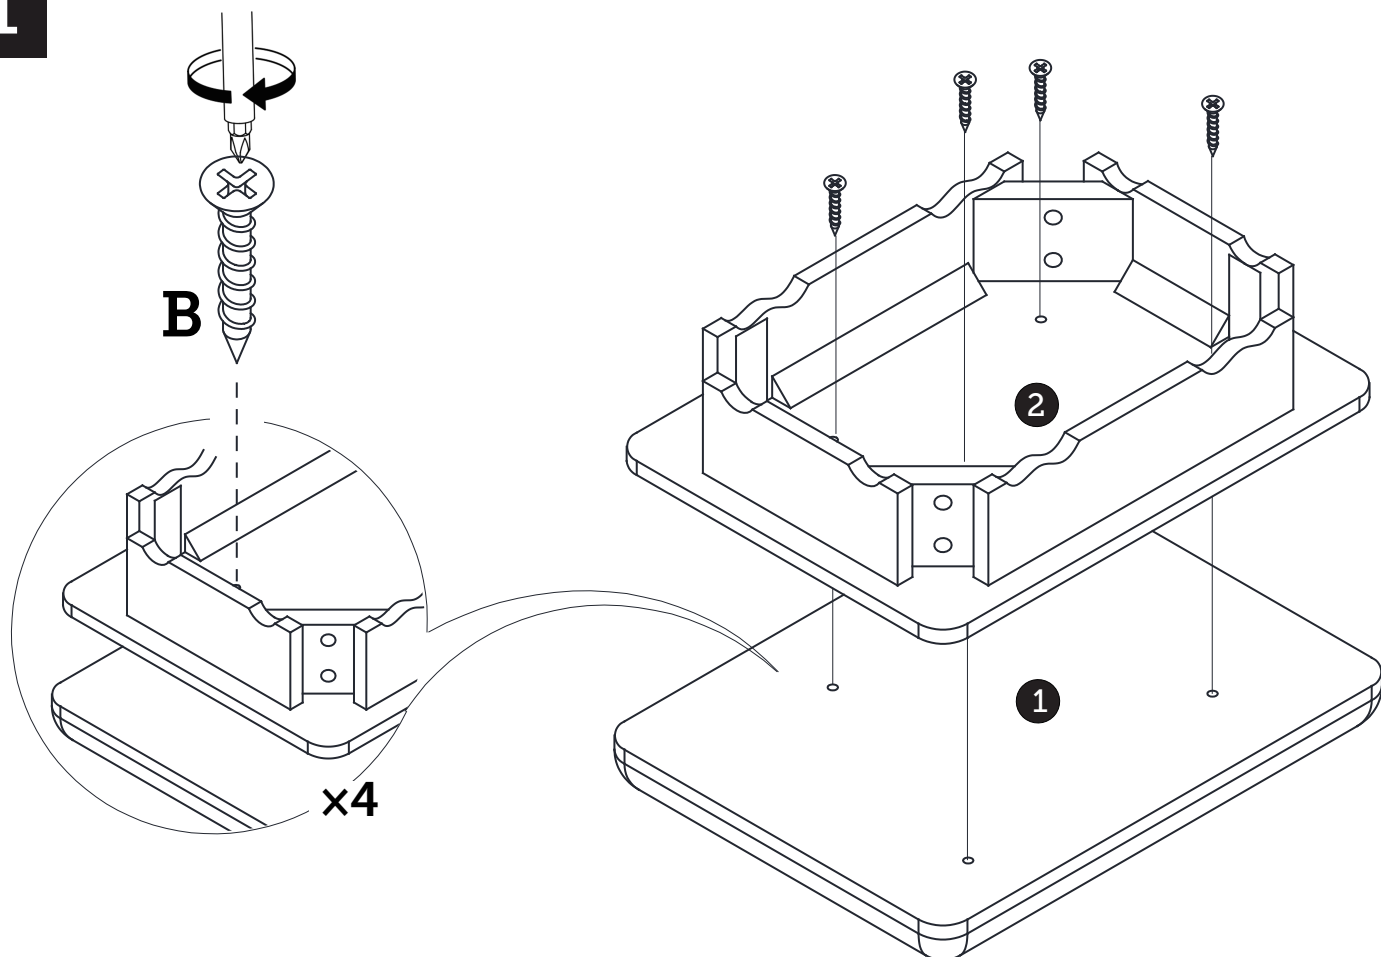


2

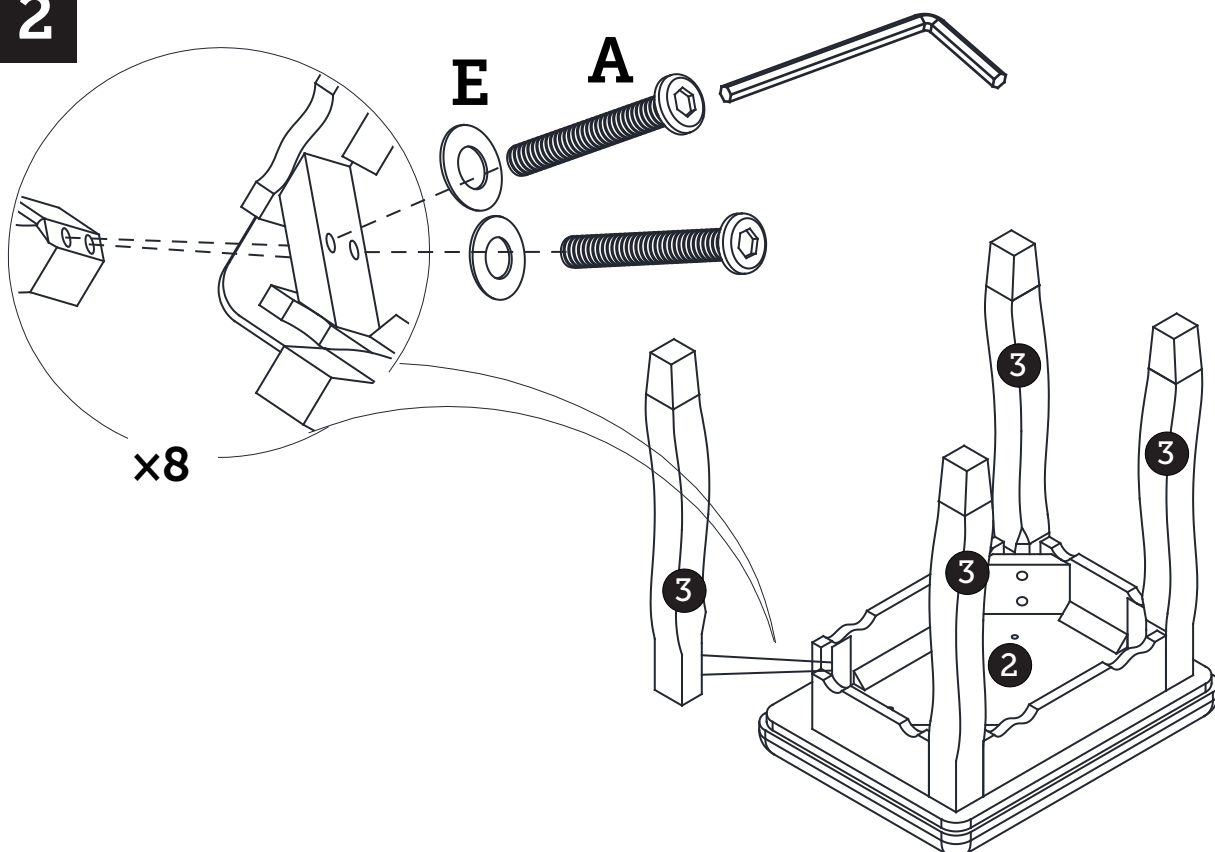


Install dressing table

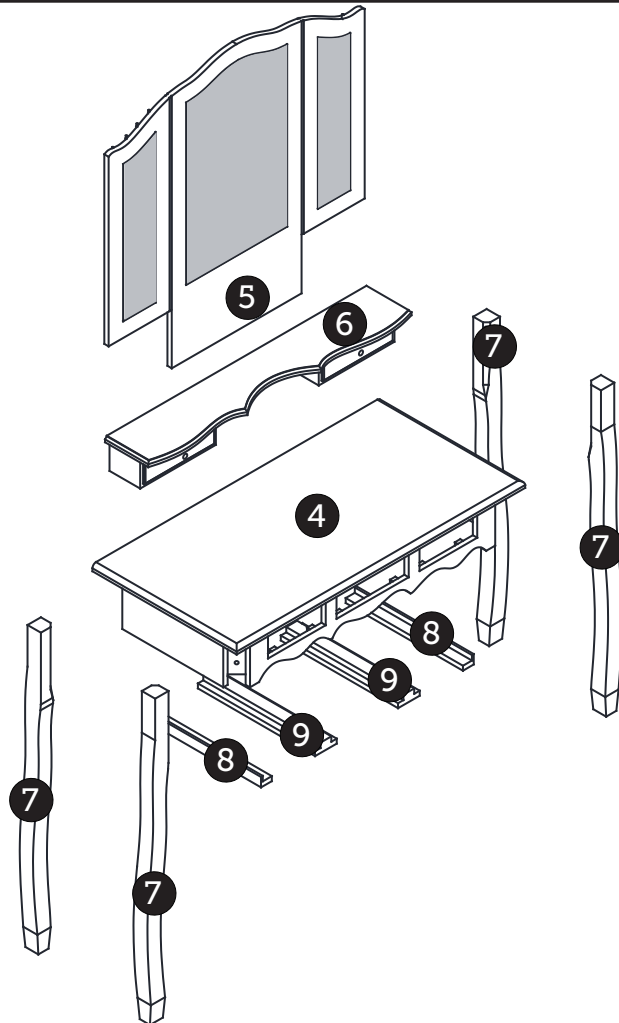


3

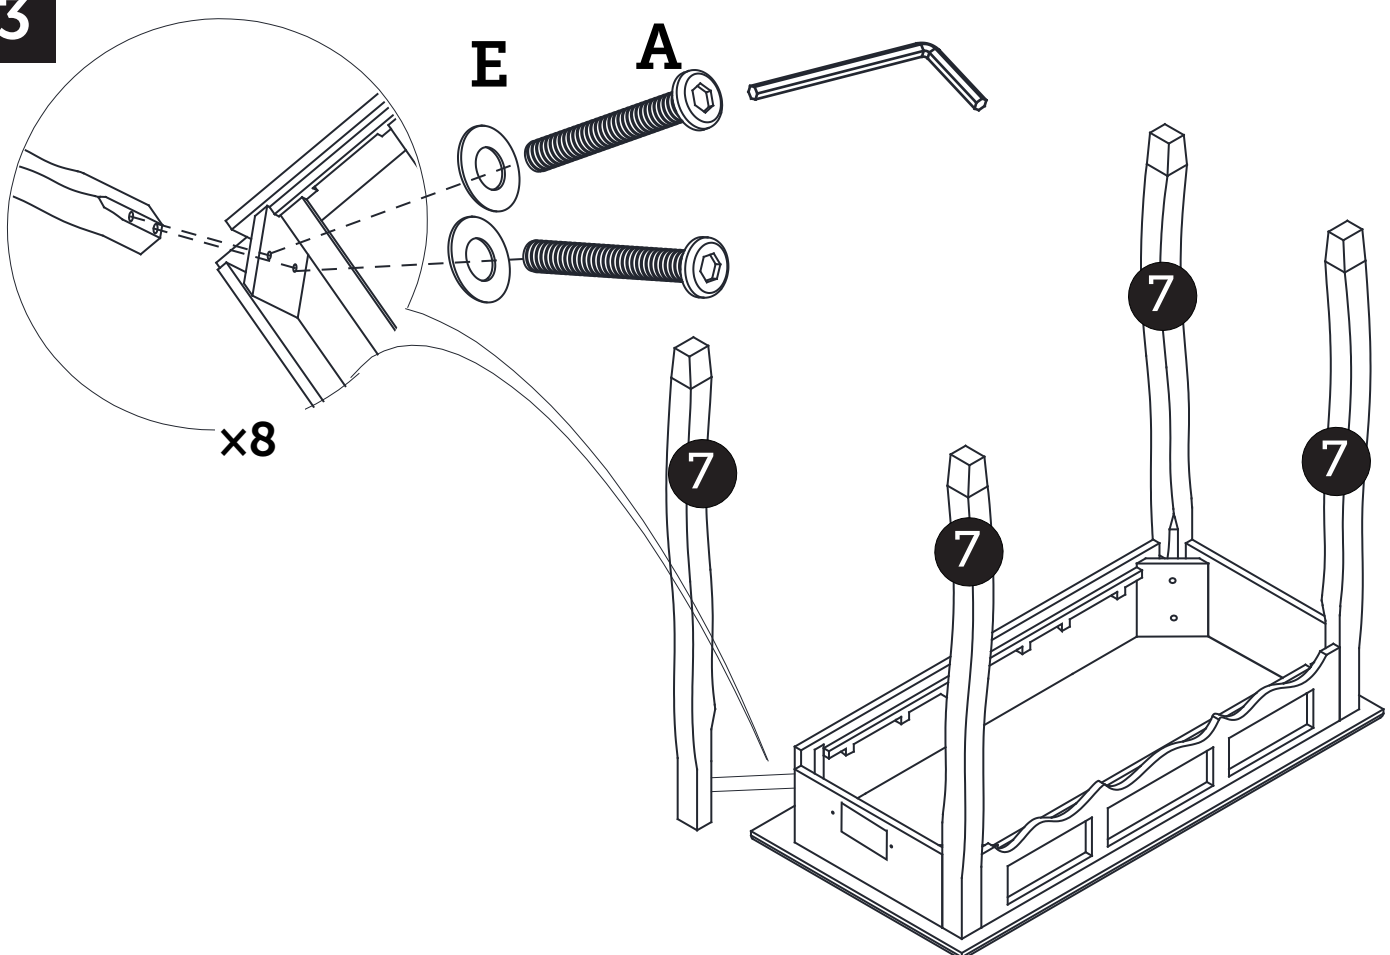


4

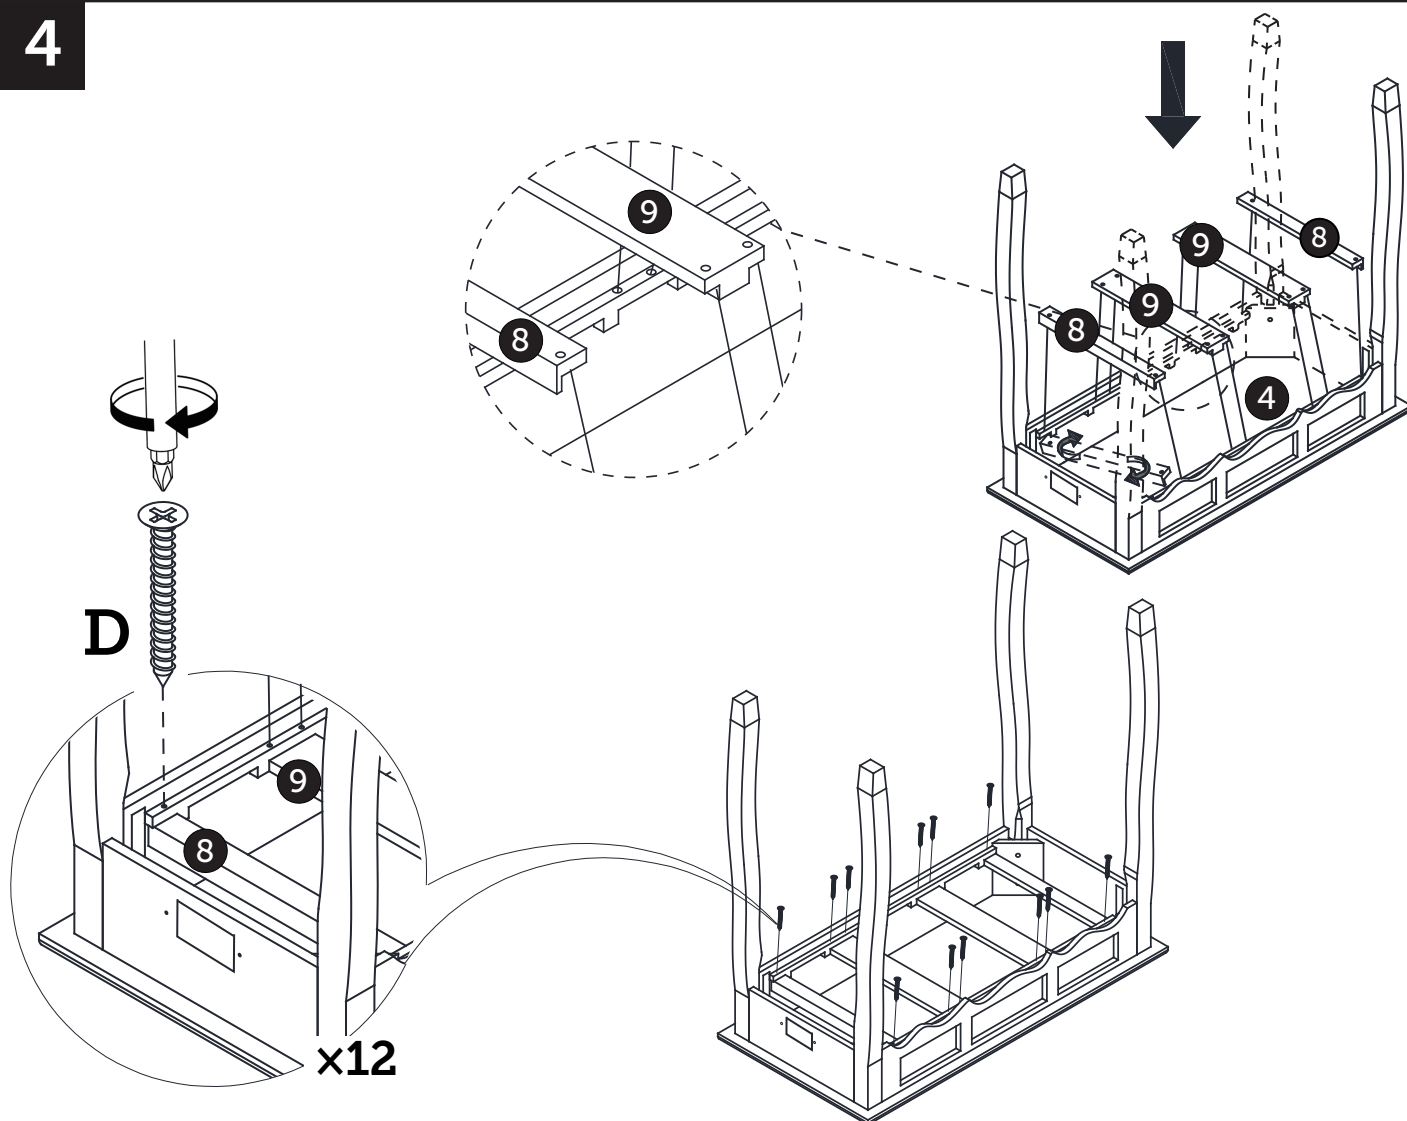


5

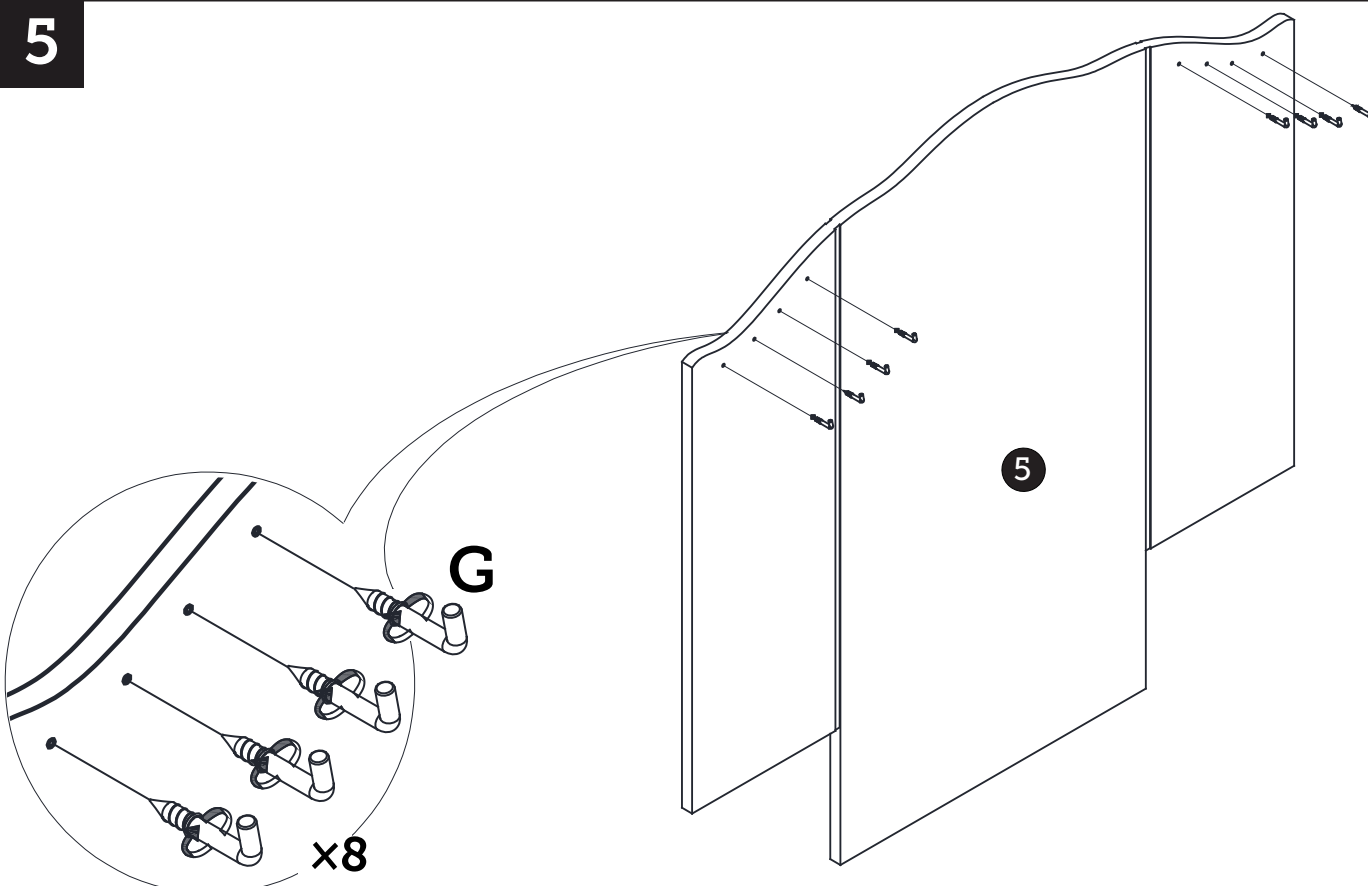


6

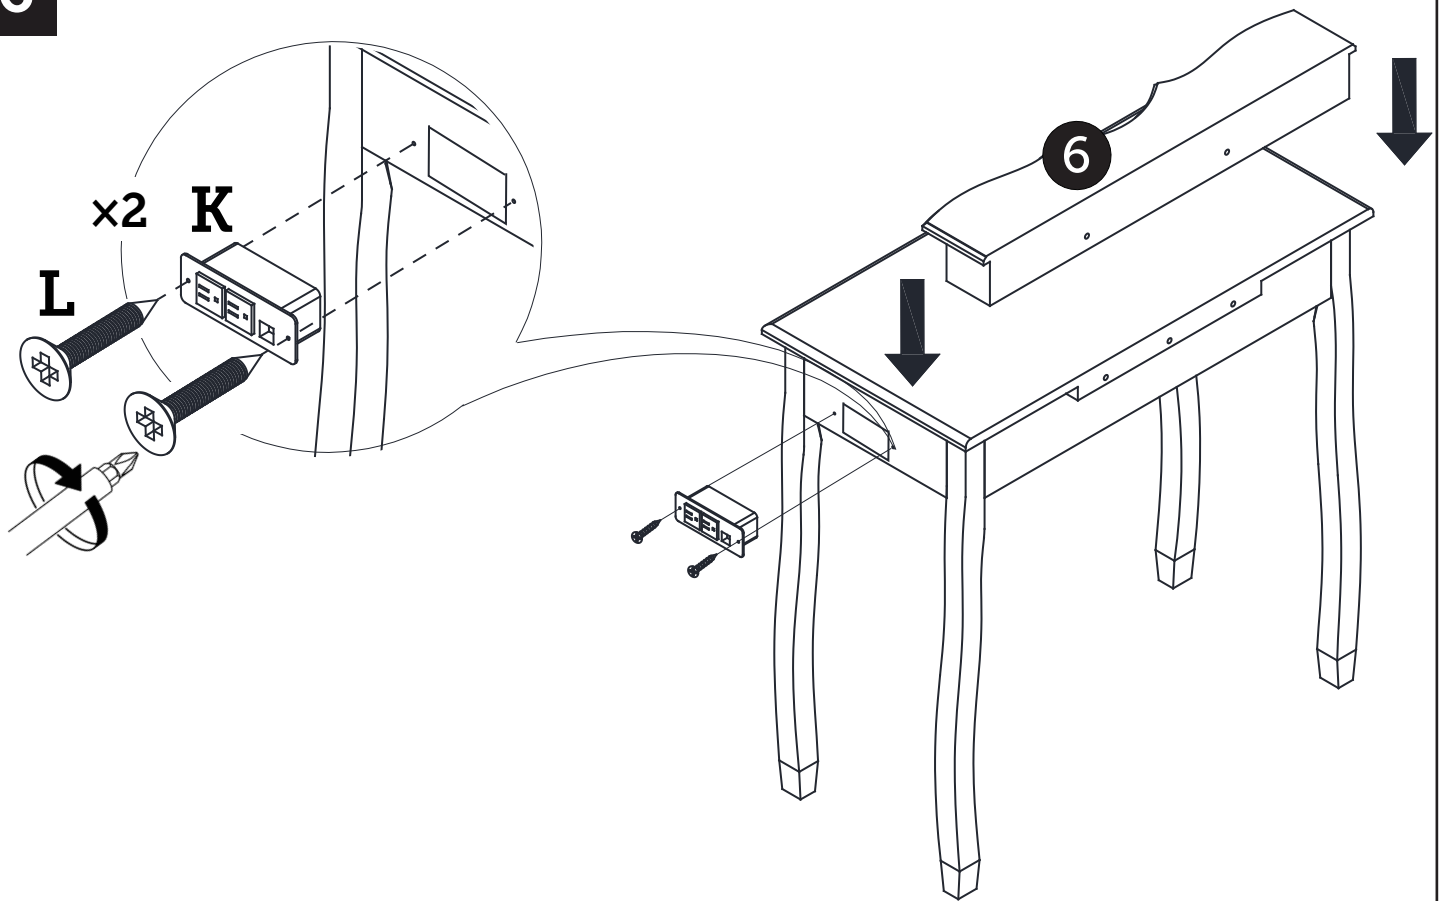


7

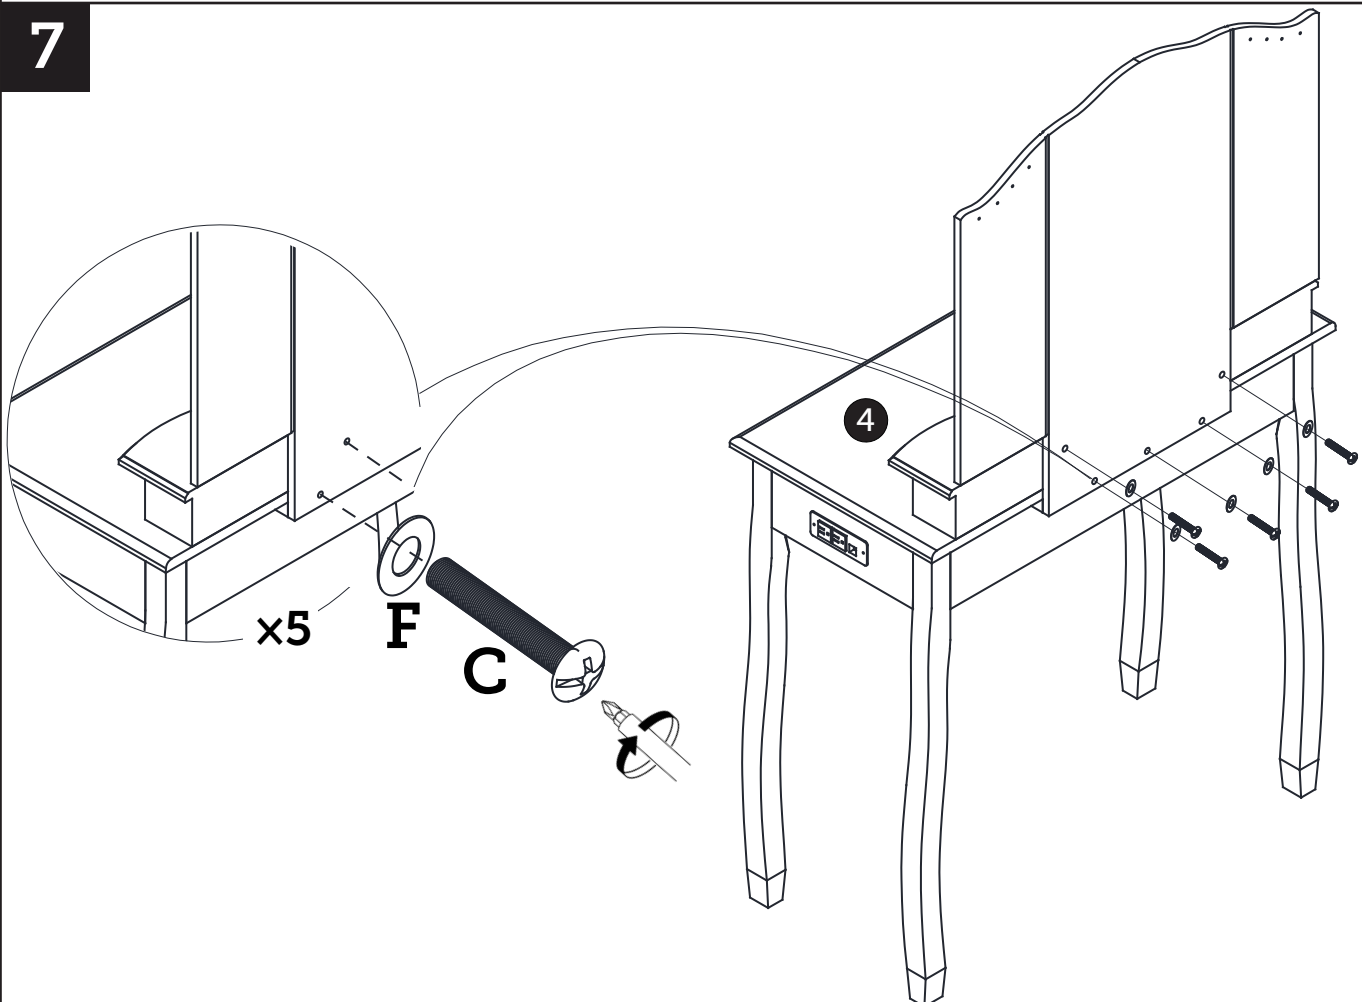

8

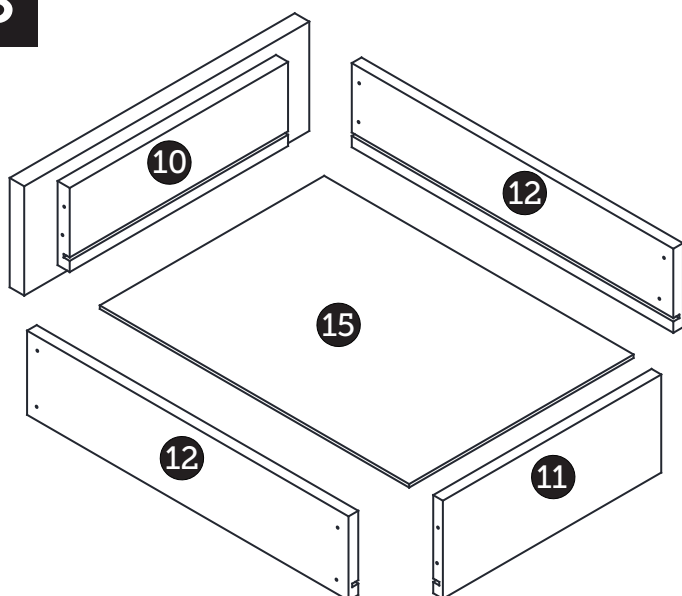


1x

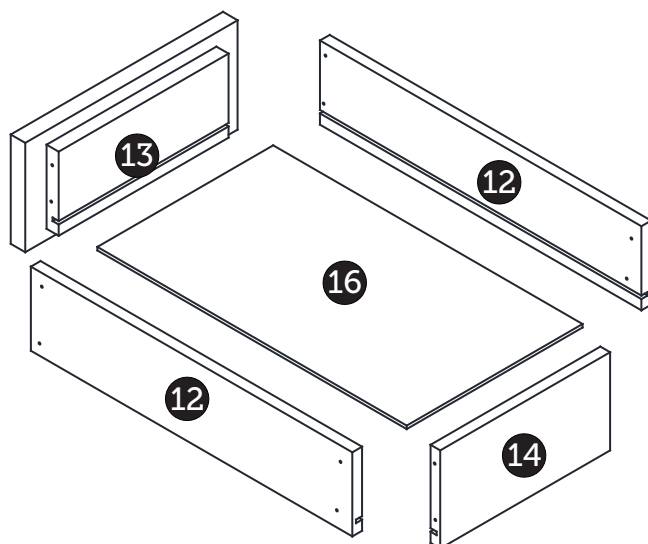


2x


9 x2

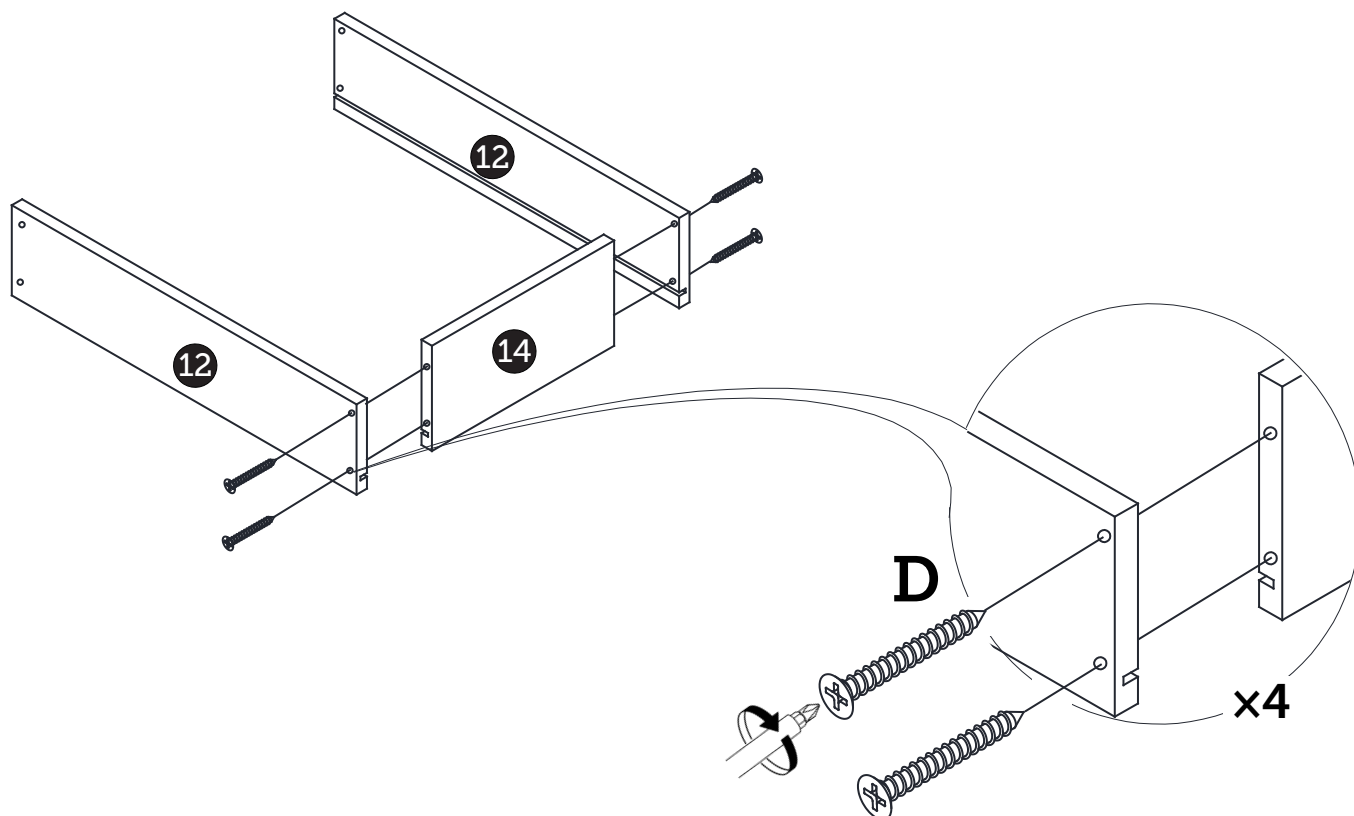


10 x2

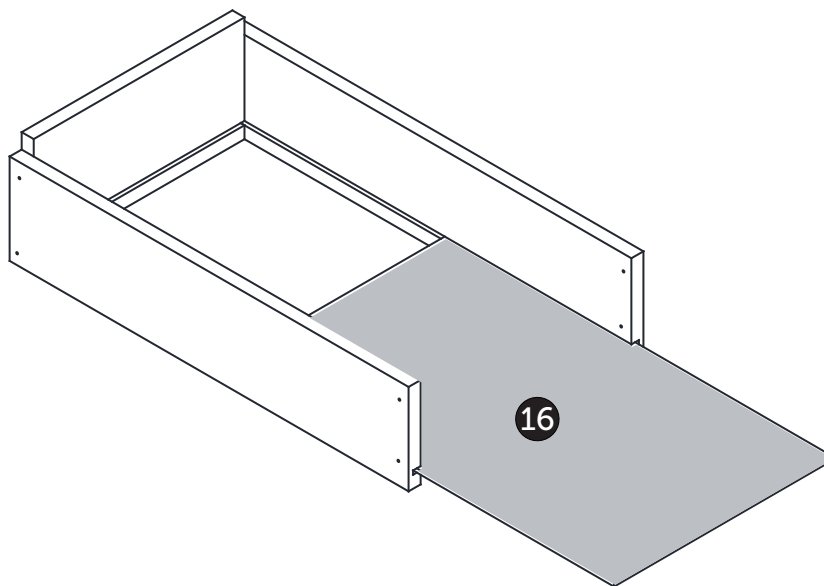


11 x2

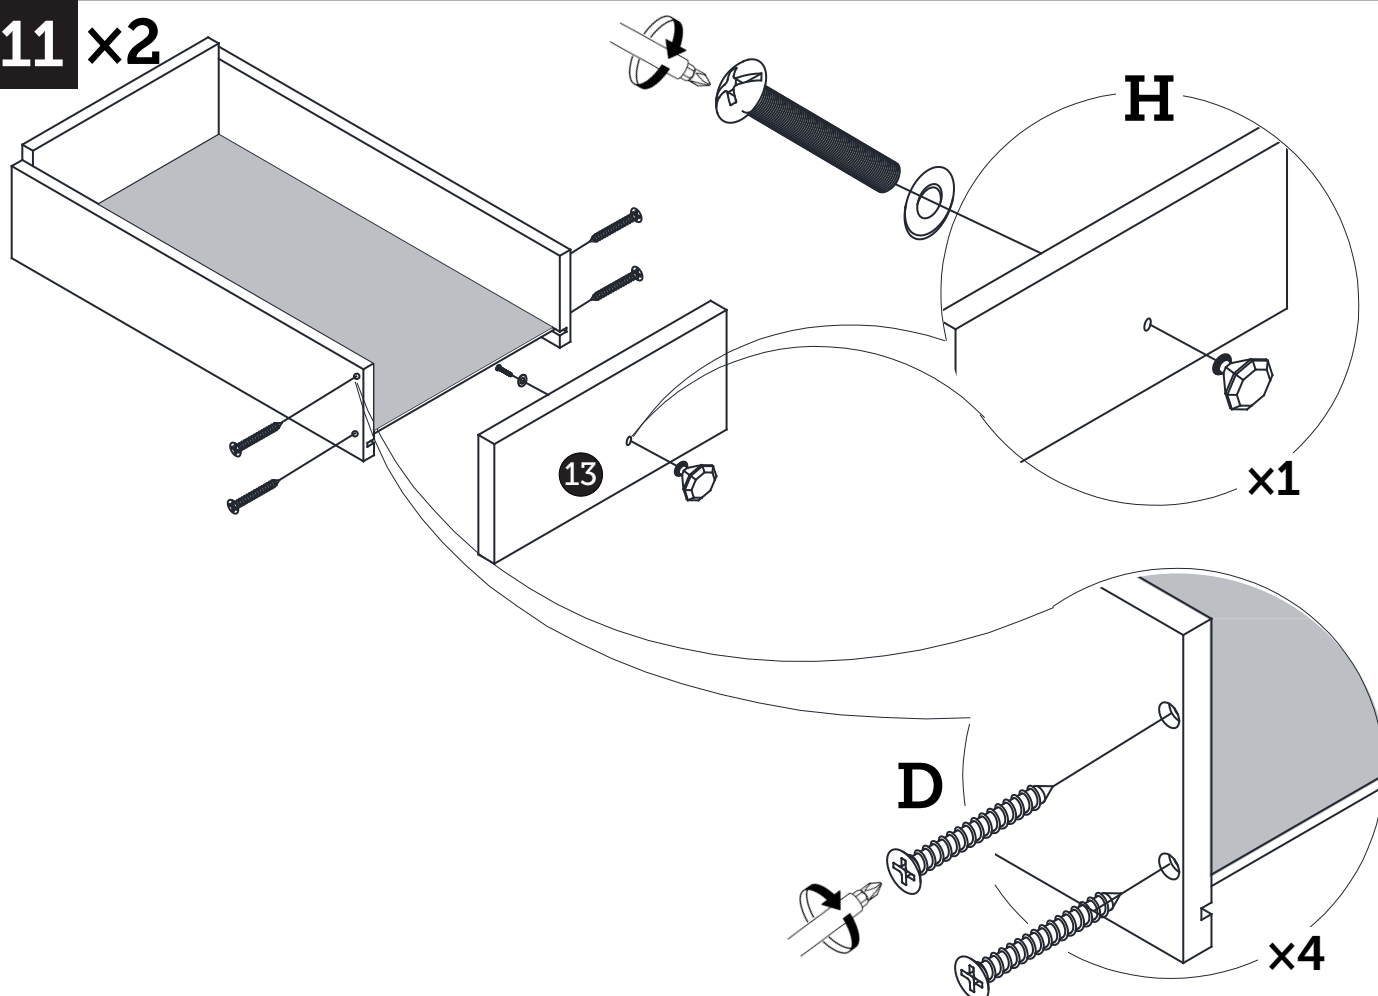


12

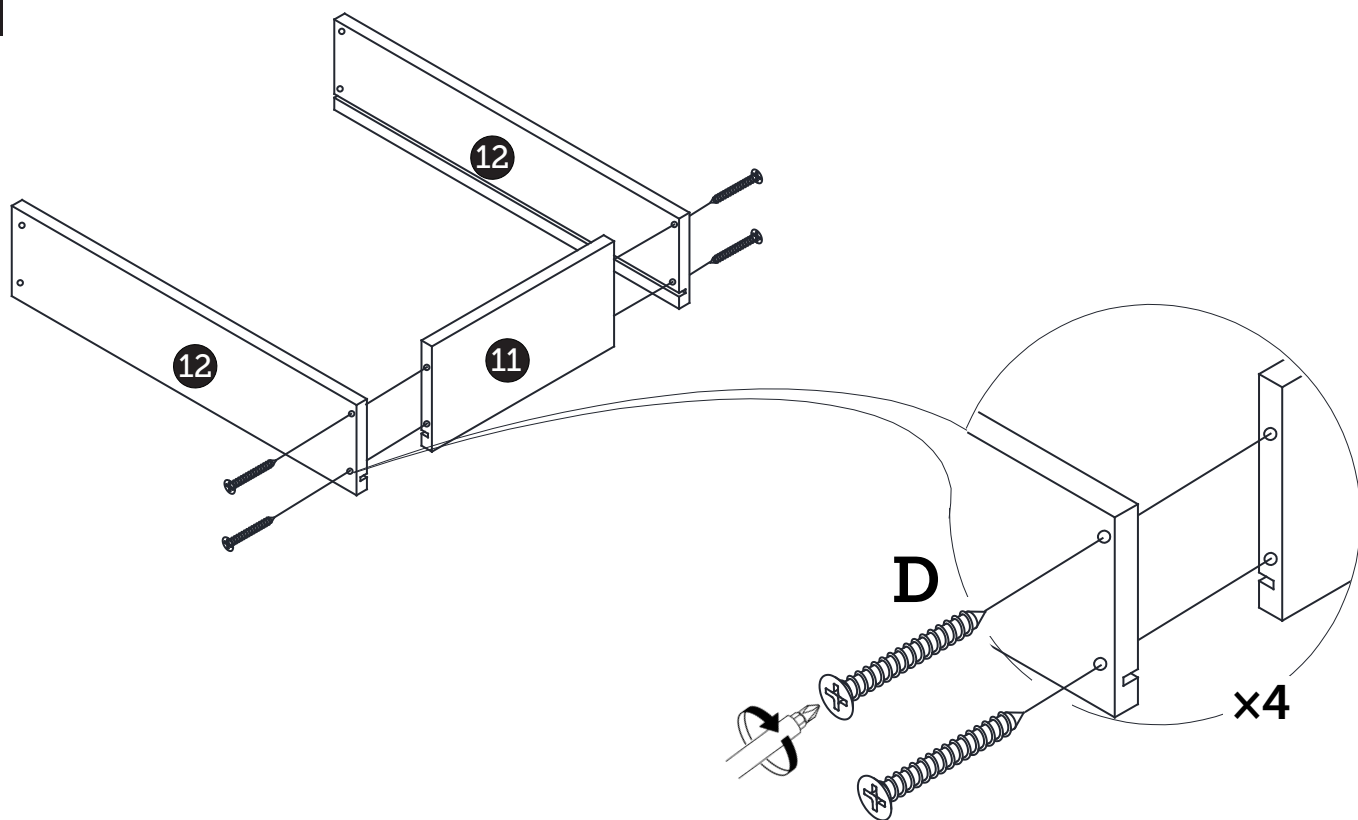


13

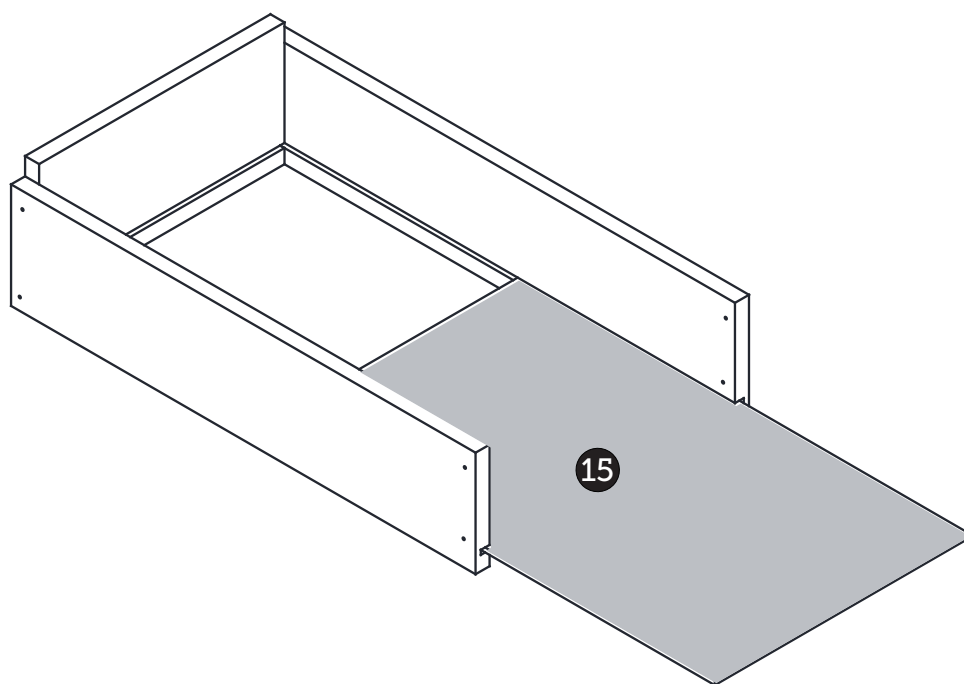

14

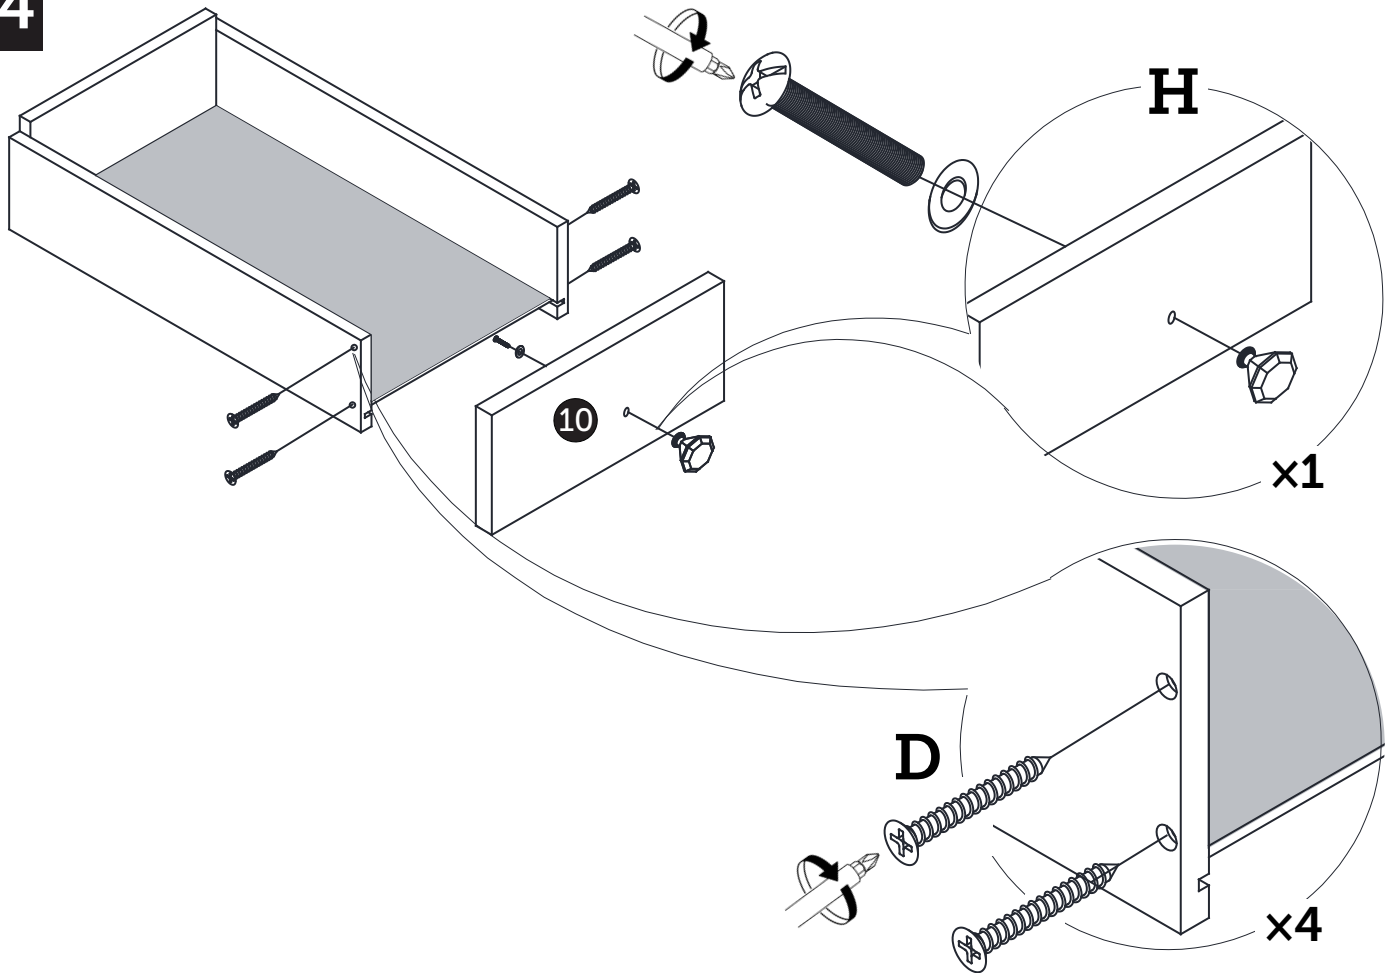



15 x3

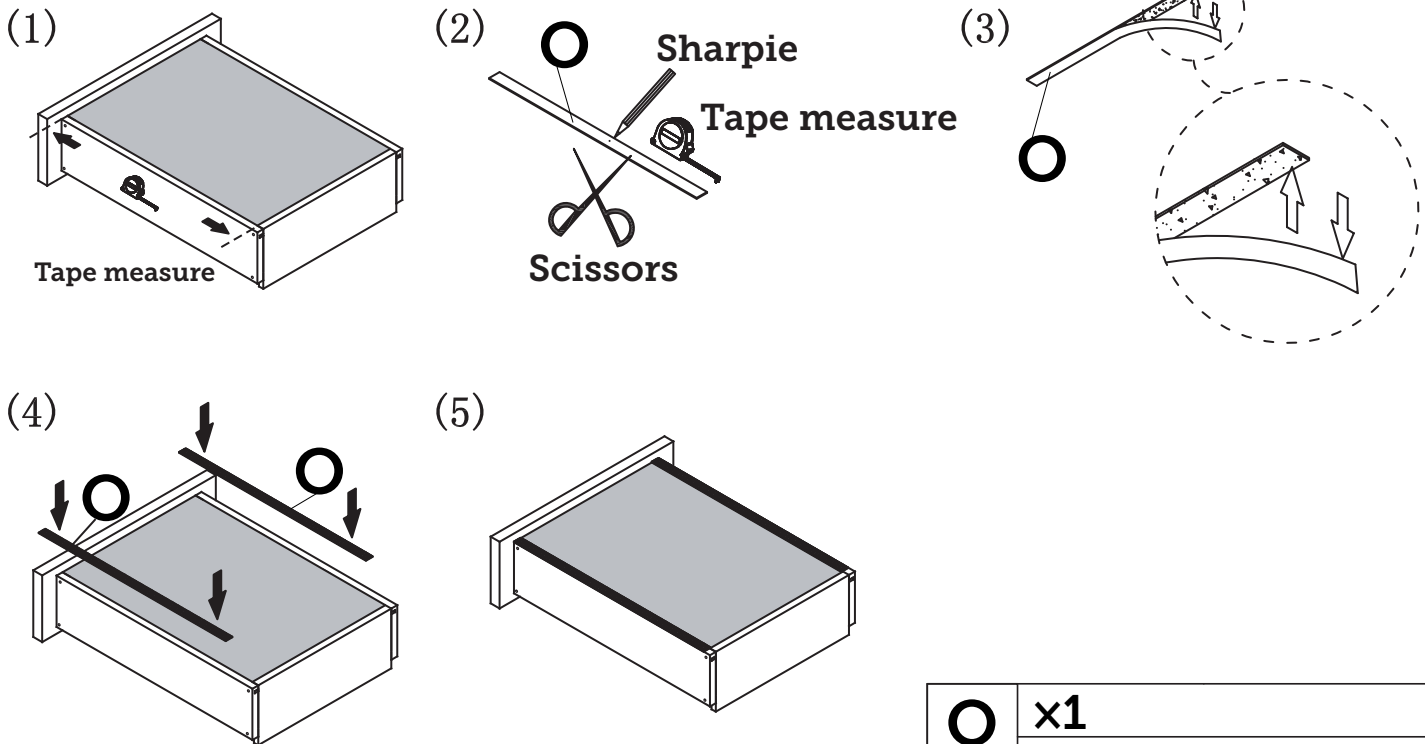



O x1




16

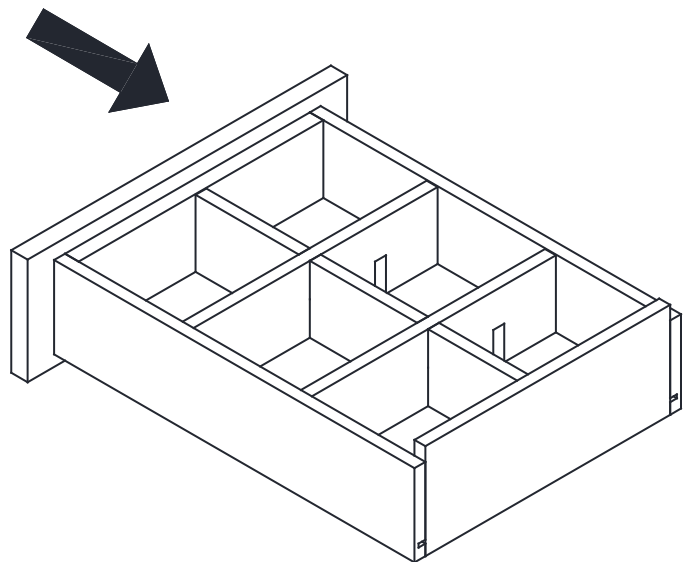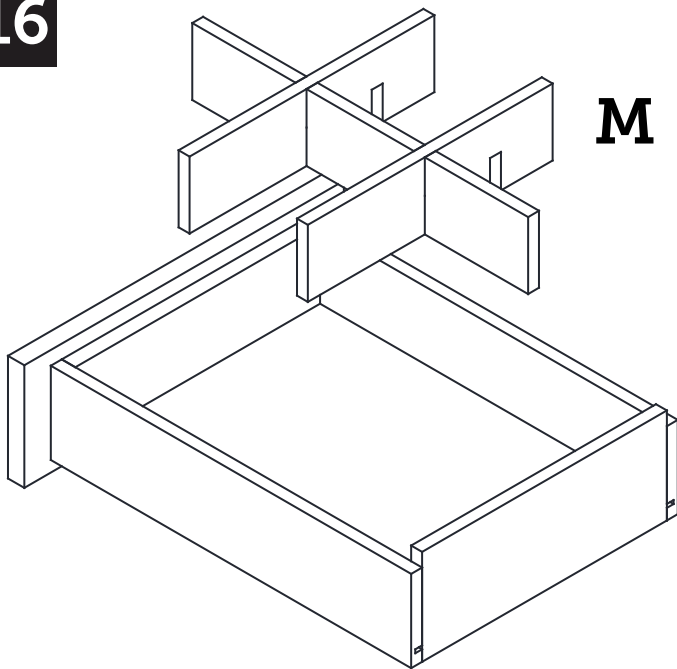


17

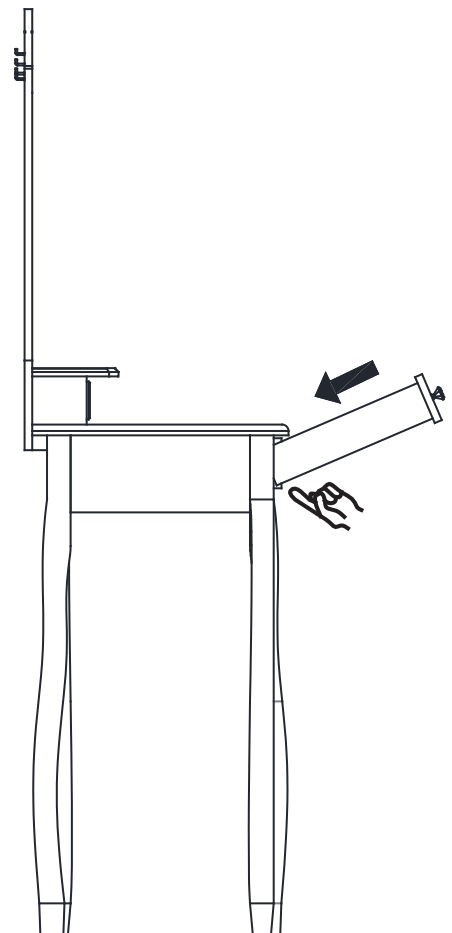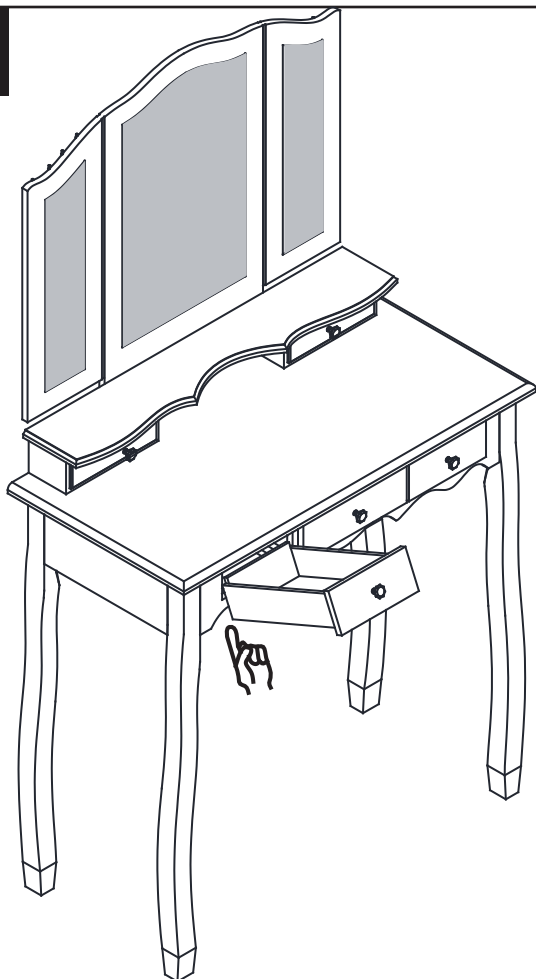

18

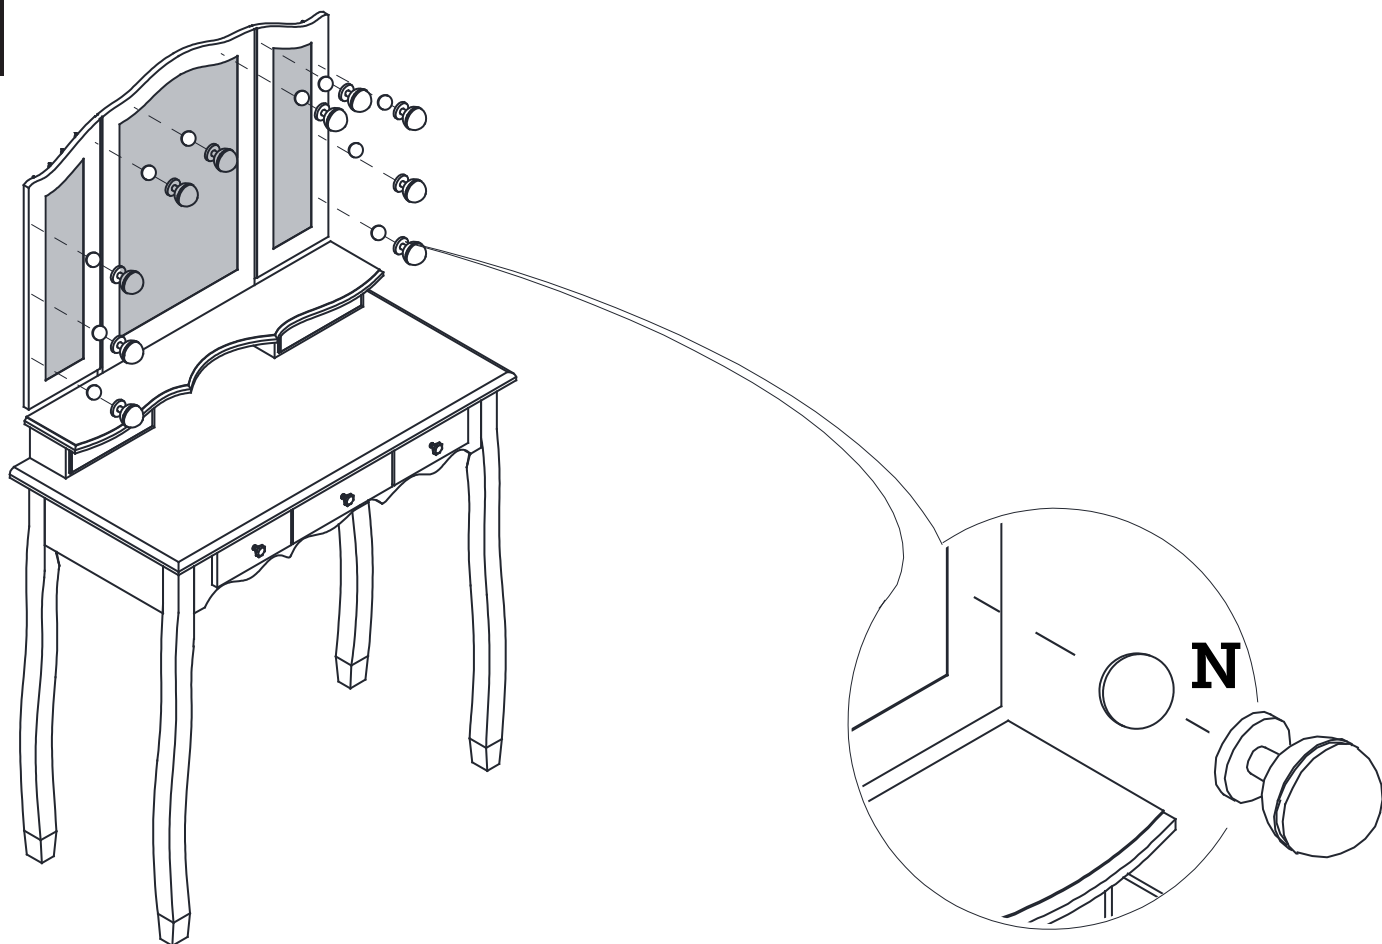


19

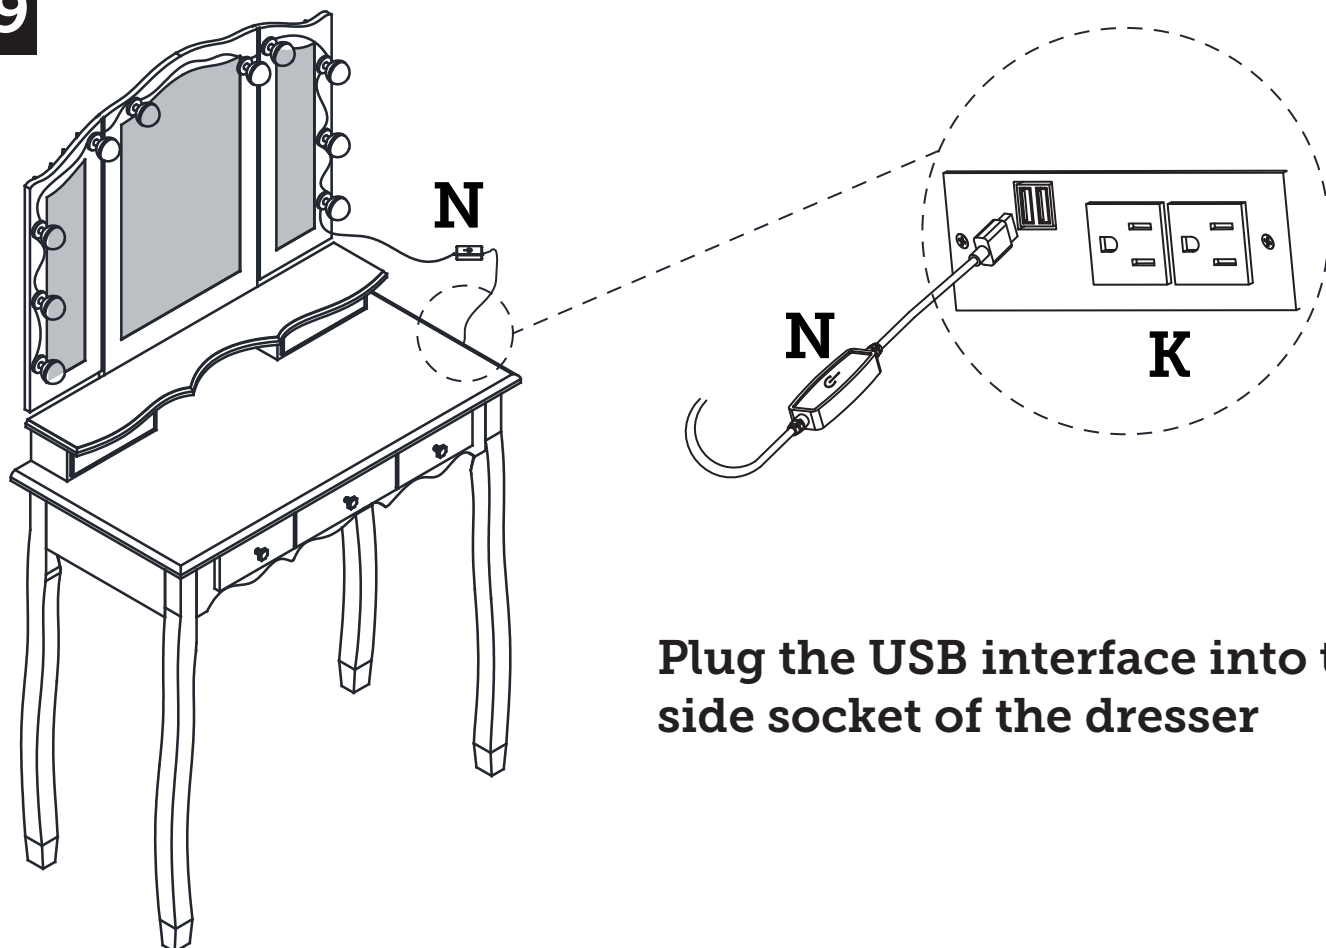

Plug the USB interface into the side socket of the dresser

20

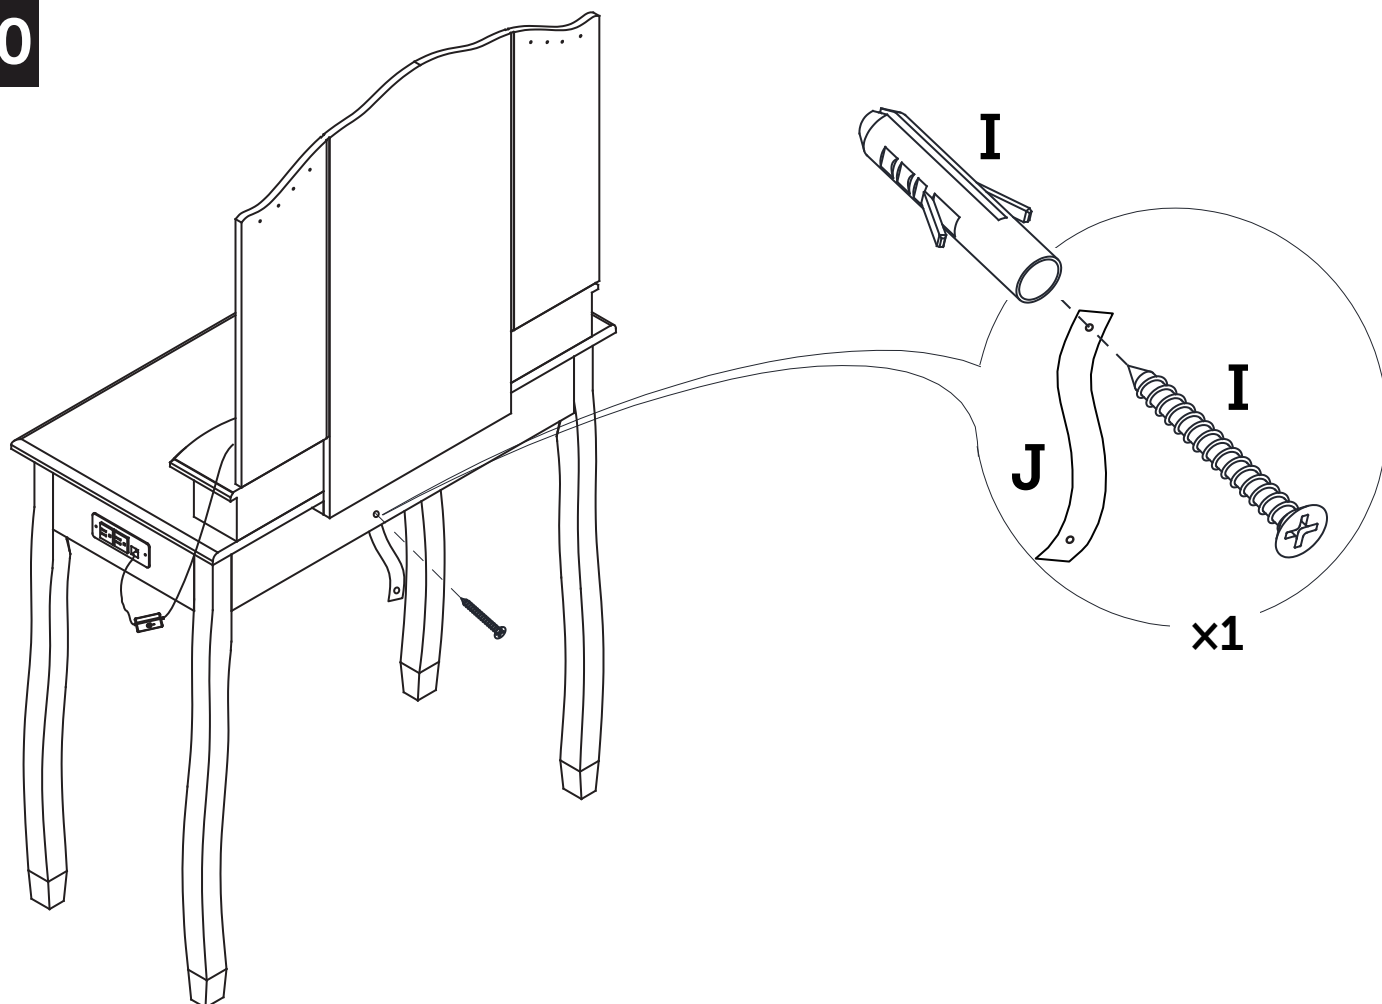

21

