




REVERSIBLE BED FRAME

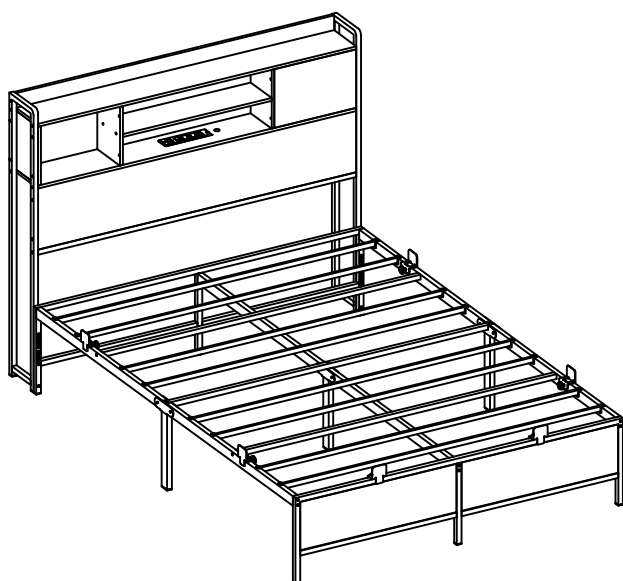

Option A

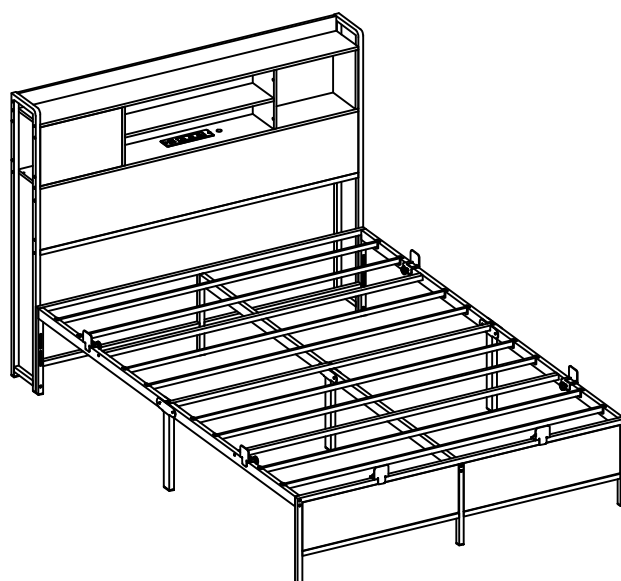

Option B

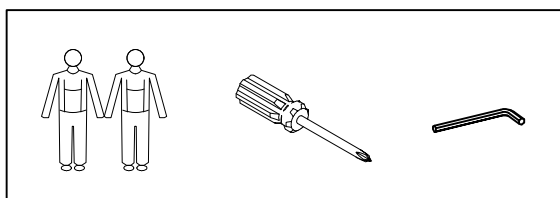

CAUTION

Put the screws in loosely until all pieces are together and then tighten them all.
It will save your time if you make a mistake while installing.

Dear Customers,

Thank you for purchasing our products.



As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please contact us freely at the first time. We will provide you with a 100% satisfactory solution.

Thanks again for your order. Please feel free to contact us from Amazon or **homeycs@hotmail.com** in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it.



Please follow the instruction manuals and use a pad to protect the product during your assembly.

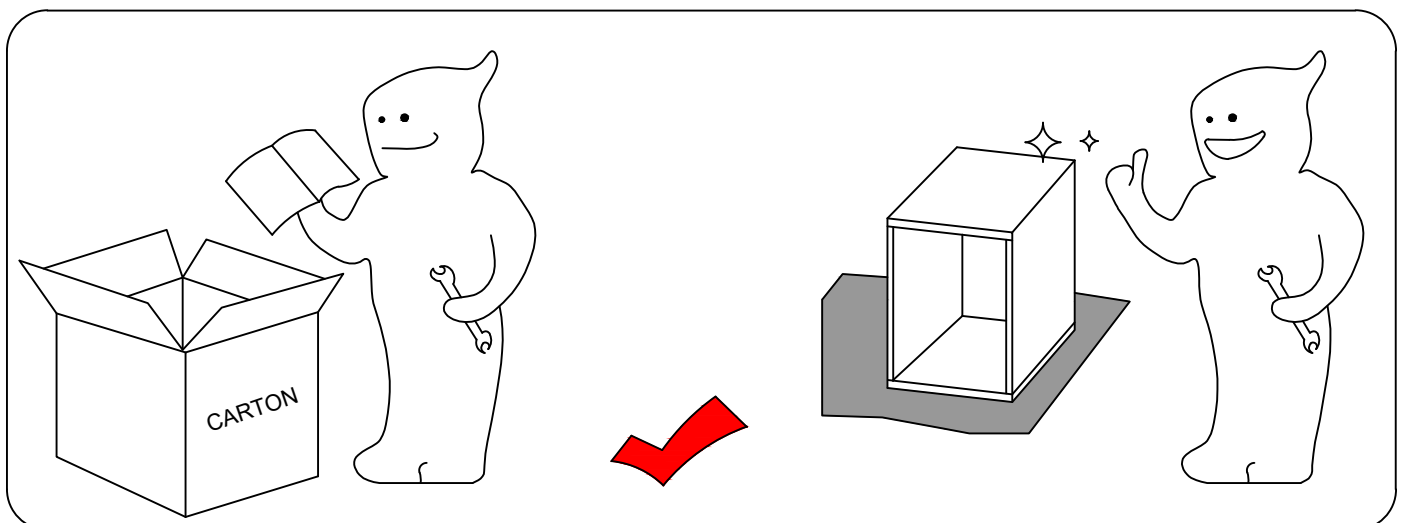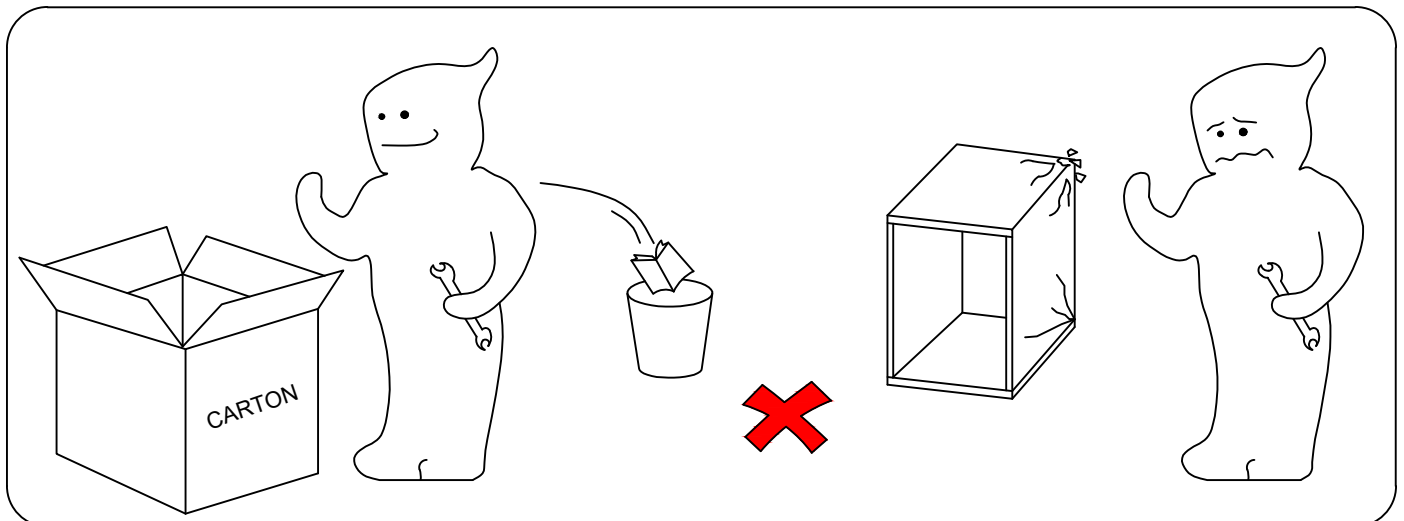


✉ **homeycs@hotmail.com**

Using Camlocks


Connect the male camlock as directed in the assembly instructions using a screwdriver.

1 DO NOT OVER TIGHTEN

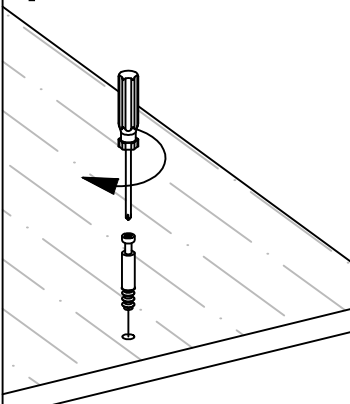

Push the male camlock into the entry hole.


2

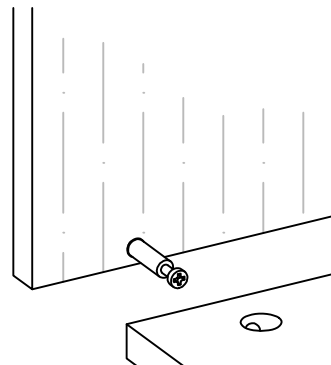

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

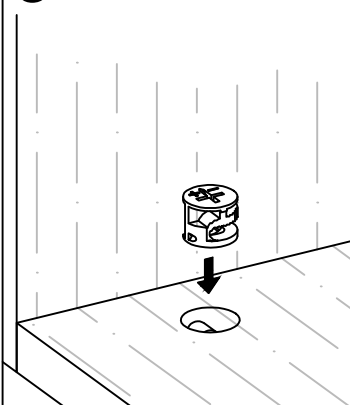



Turn the female camlock clockwise with a screwdriver.


















You should feel a click when the camlock is locked in place.

The joint is now secure.


















4

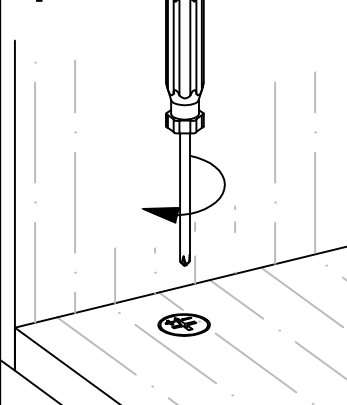


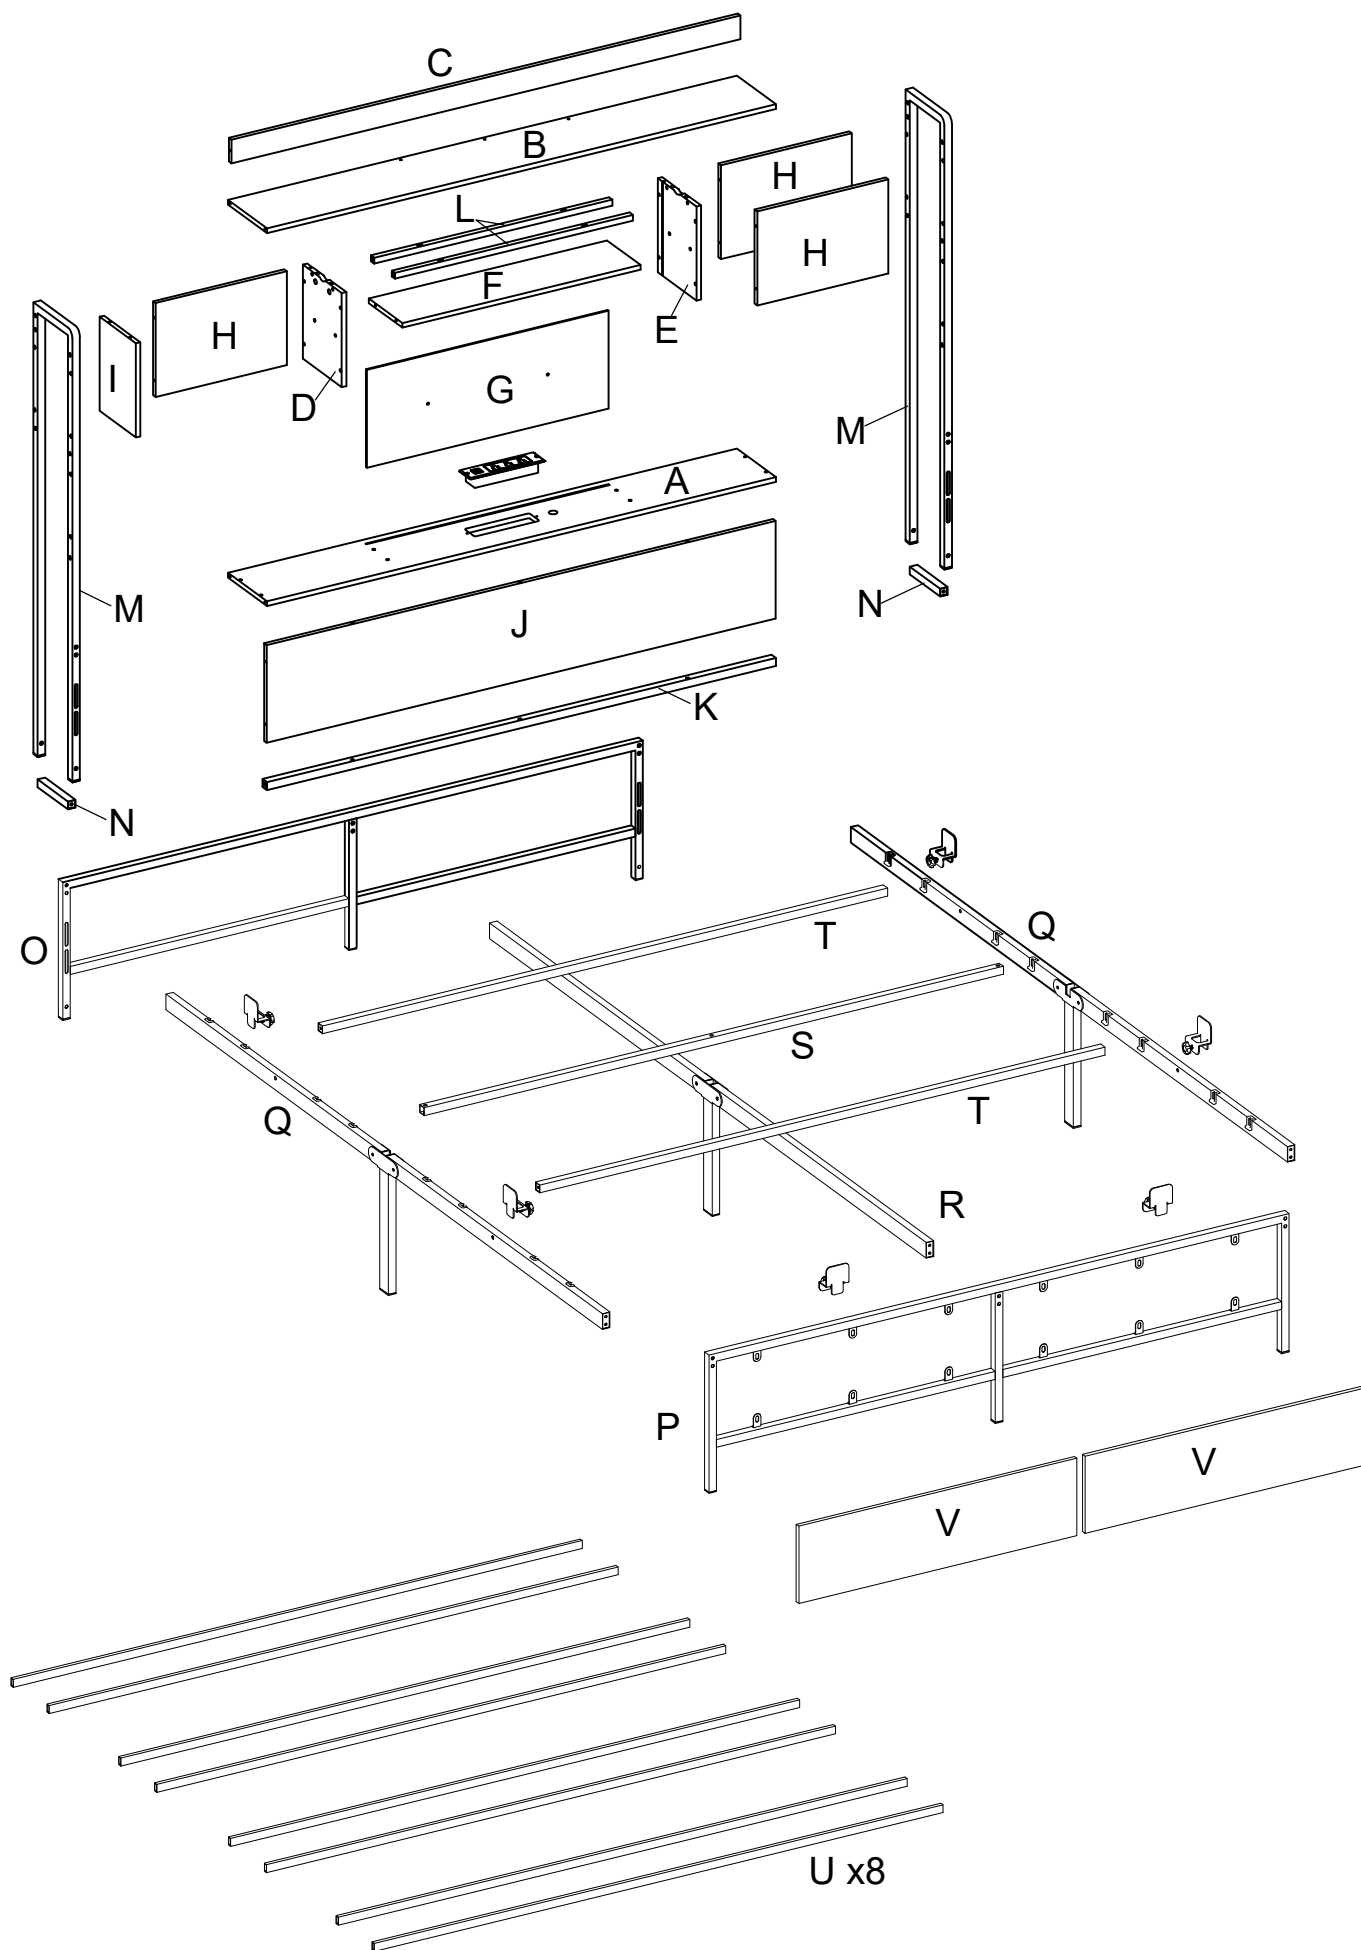


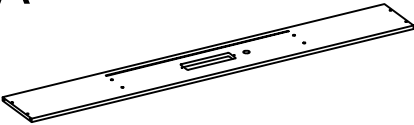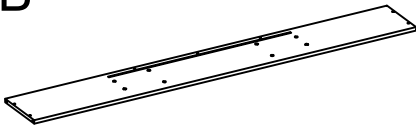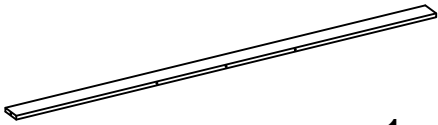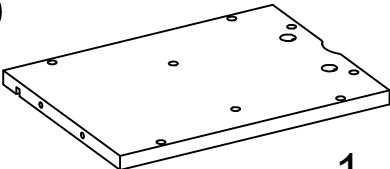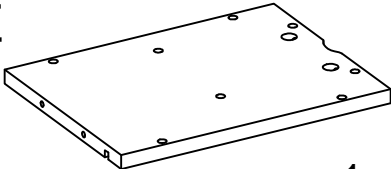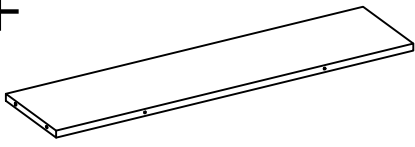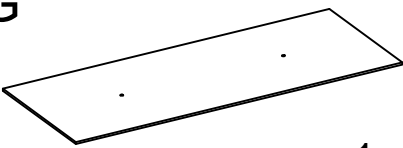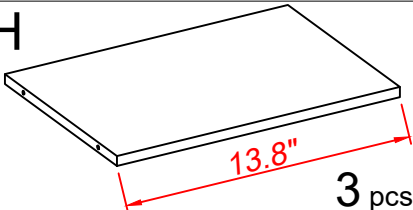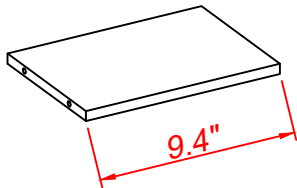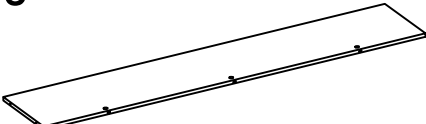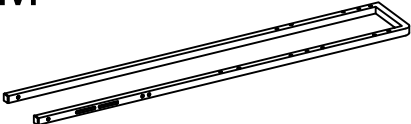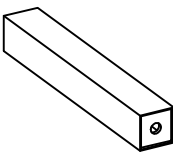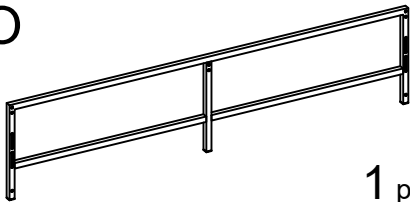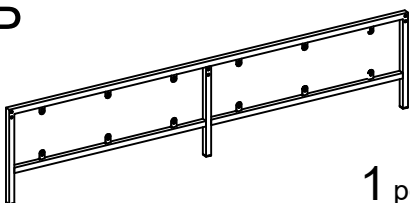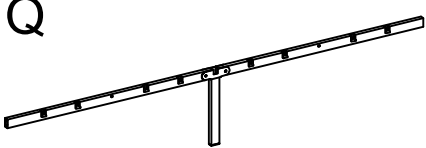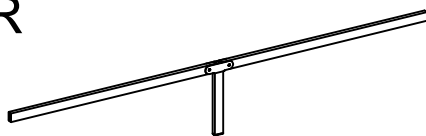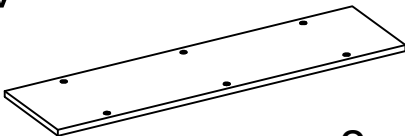PART LIST		
A  1 pc	B  1 pc	C  1 pc
D  1 pc	E  1 pc	F  1 pc
G  1 pc	H  3 pcs	I  1 pc
J  1 pc	K  1 pc	L  2 pcs
M  2 pcs	N  2 pcs	O  1 pc
P  1 pc	Q  2 pcs	R  1 pc
S  1 pc	T  2 pcs	U  8 pcs
V  2 pcs		



HARDWARE LIST

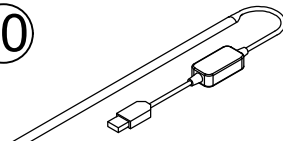①  M41 pc	②  M6x554 pcs	③  M6x16x1.08 pcs	
④  4 pcs	⑤  1 pc	⑥  10mm1 pc	⑦  M3x1216 pcs
⑧  1 pc	⑨  RF Remote Control1 pc	⑩  Full: 120cm Queen: 140cm1 pc	⑪  3 pcs
⑫  8 pcs	⑬  20x2m1 pc	⑭  M6x358 pcs	⑮  M6x224 pcs
⑯  M6x287 pcs	⑰  Ø127 pcs	⑱  M5x4529 pcs	⑲  M4x305 pcs
⑳  M6x408 pcs	㉑  M6x304 pcs	㉒  M82 pcs	㉓  M66 pcs
㉔  M6x809 pcs	㉕  M6x4012 pcs	㉖  M6x812 pcs	
㉗  6 pcs	㉘  M8x256 pcs		

STEP 1

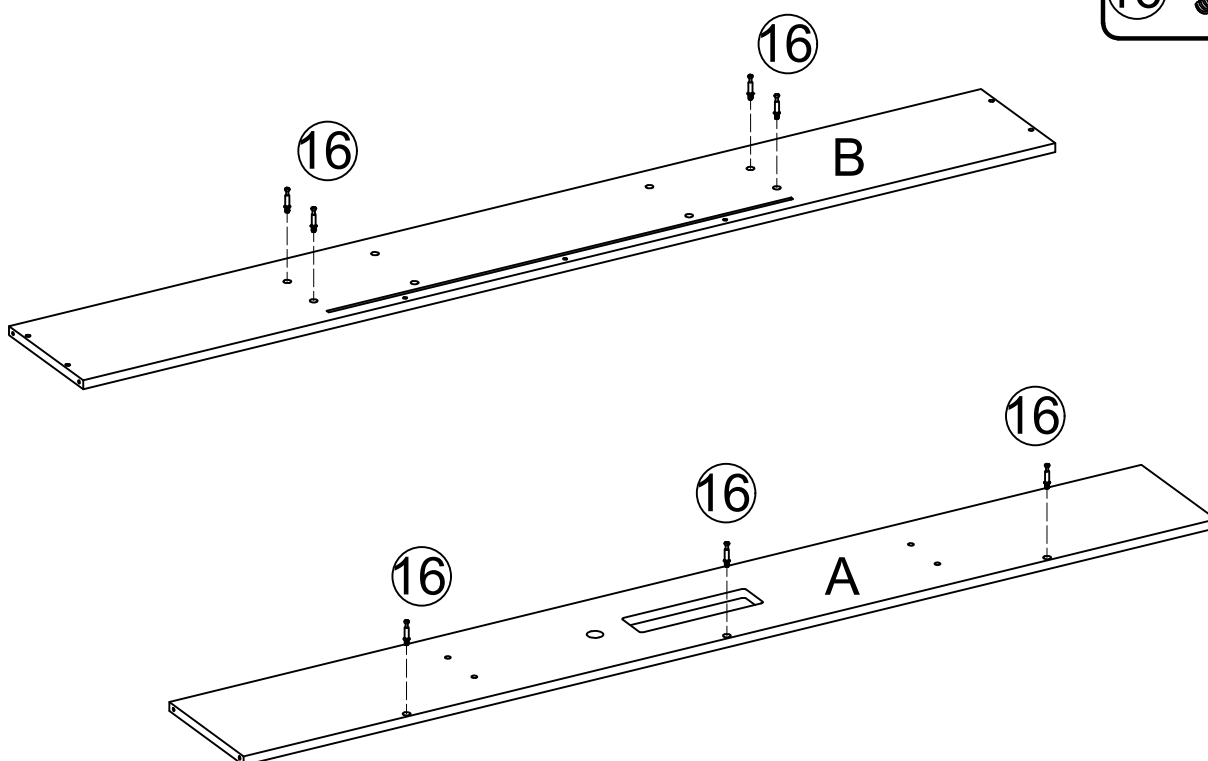


STEP 2

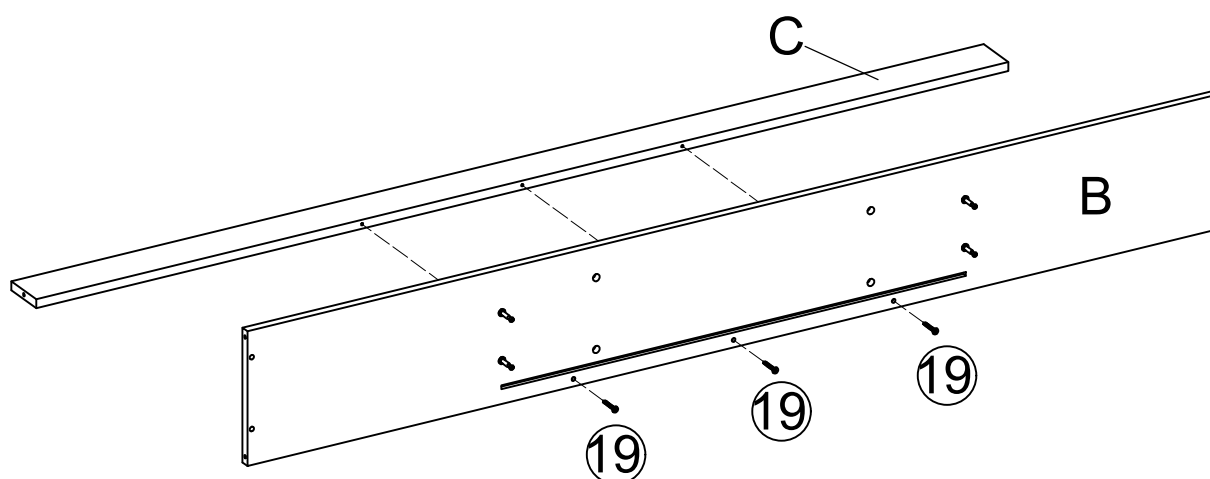

STEP 3

14  x4


Keep the holes of the Part D, Part E
and Part L toward this direction as
shown

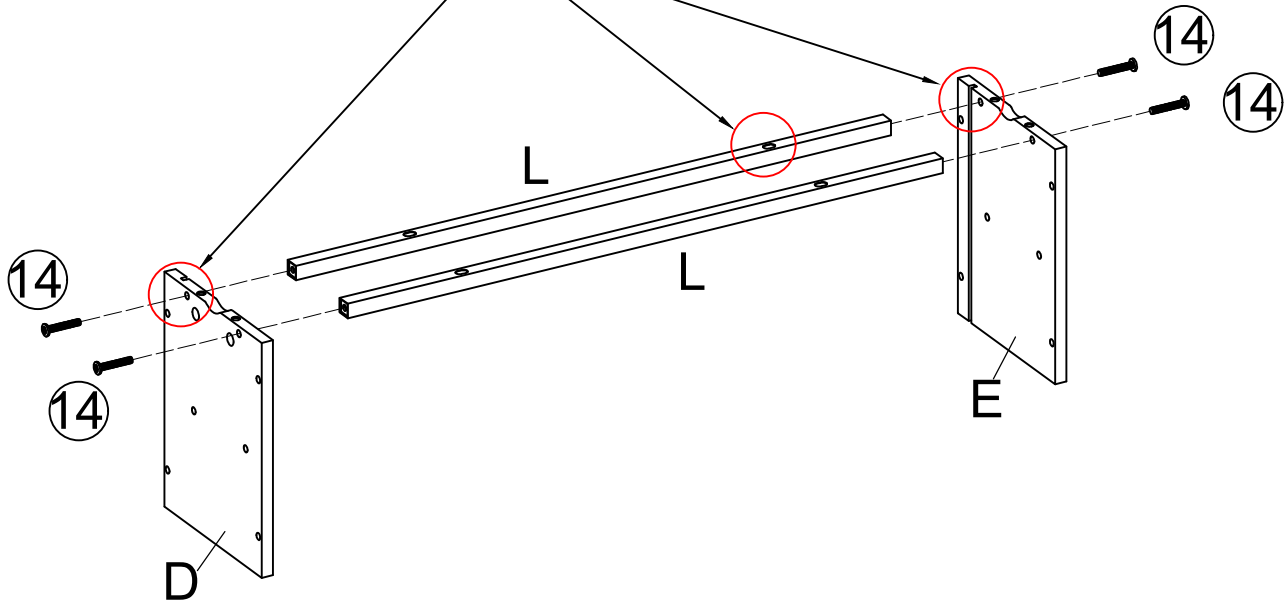

STEP 4

15  x4

17  x4

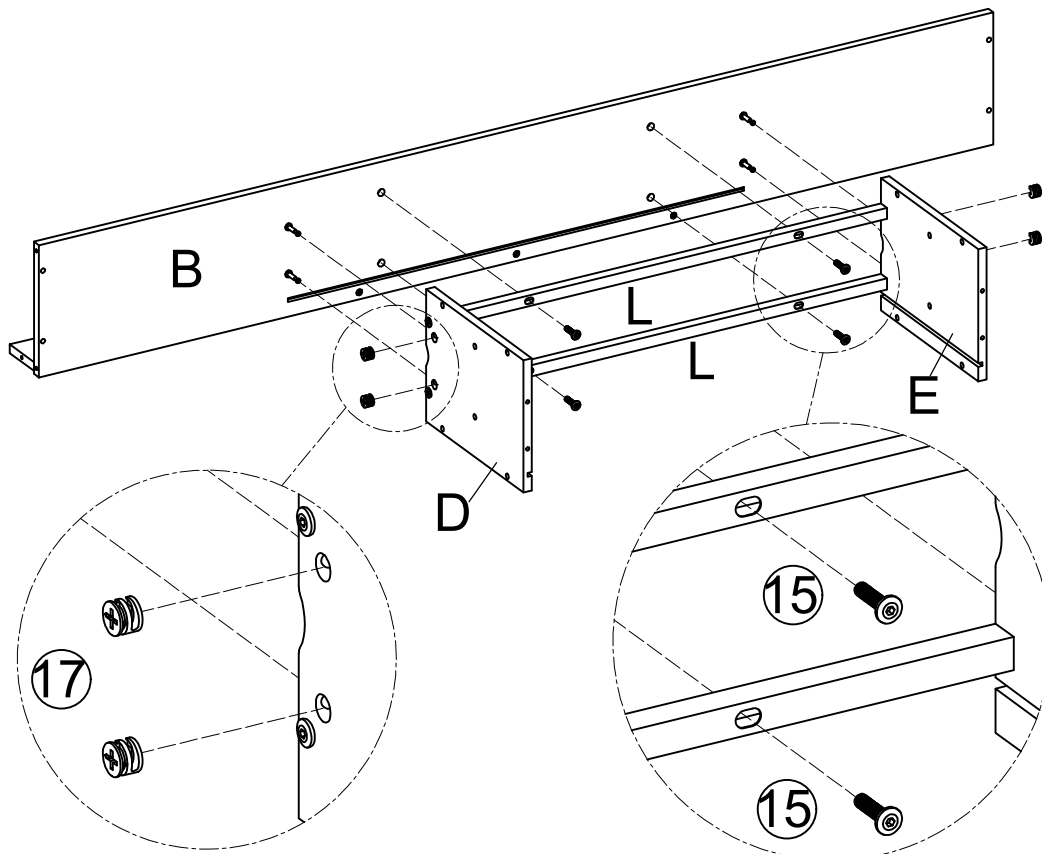



Option A




STEP 5

Tear off the tape of the LED strip, stick the LED strip to the bottom of top panel(B). Fix the LED strip with plastic clips.
Note: Do not cover the lamp beads.

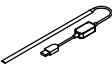- 7**  x14
- 10**  x1
- 11**  x3
- 12**  x8

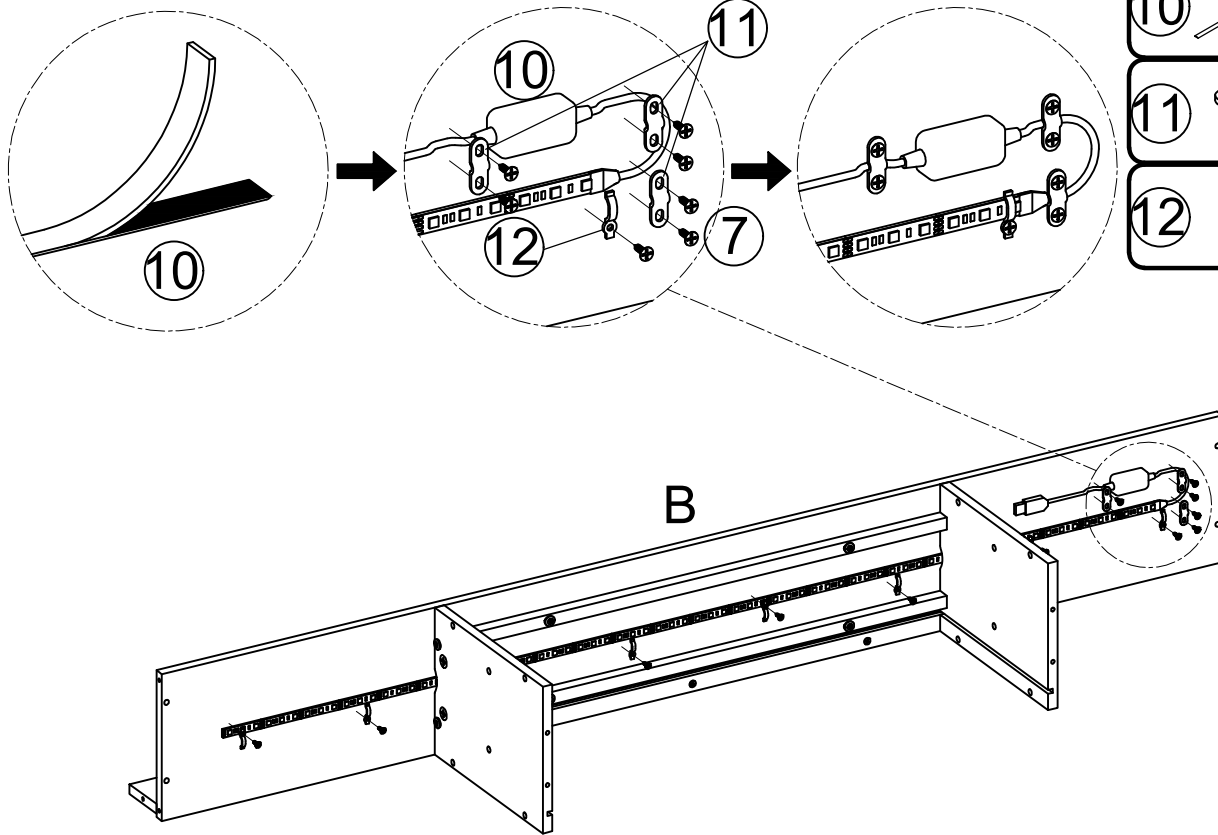


NOTE: please make sure the LED strip is in proper position first before tear off the tape.

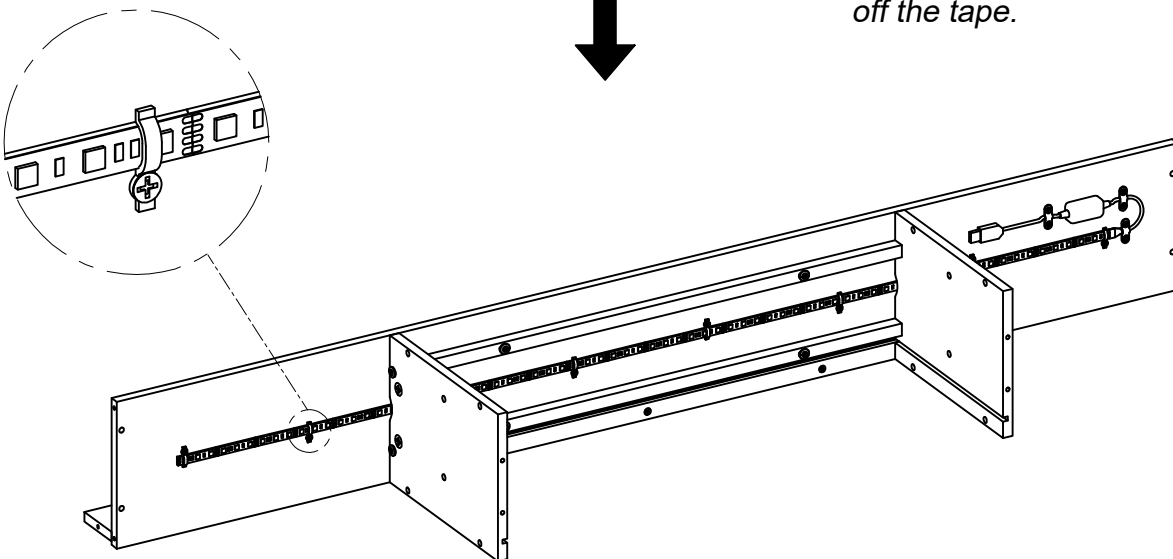


STEP 6

18  x2

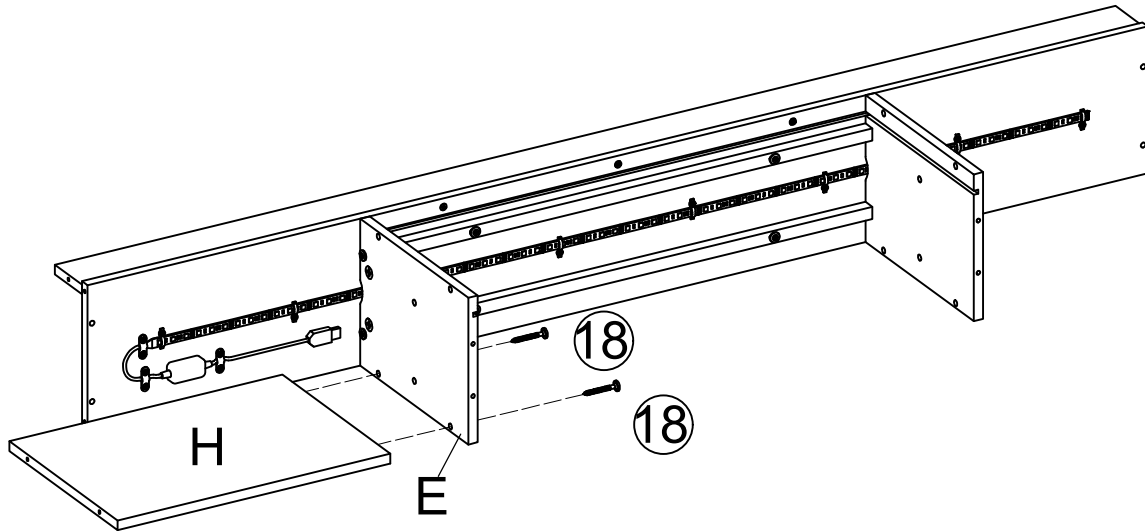


STEP 7


20  x4

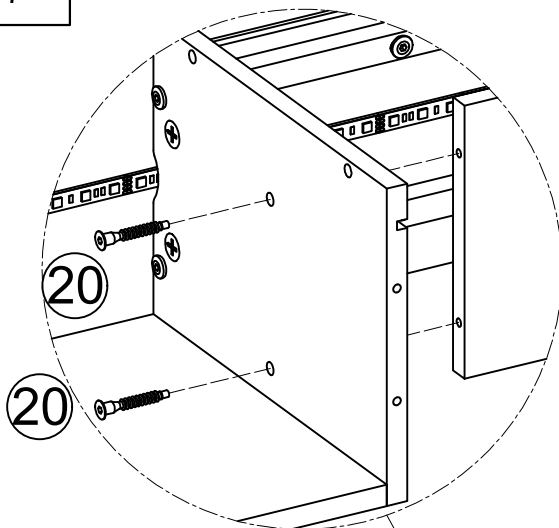


Keep the holes of the Part F toward this direction as shown

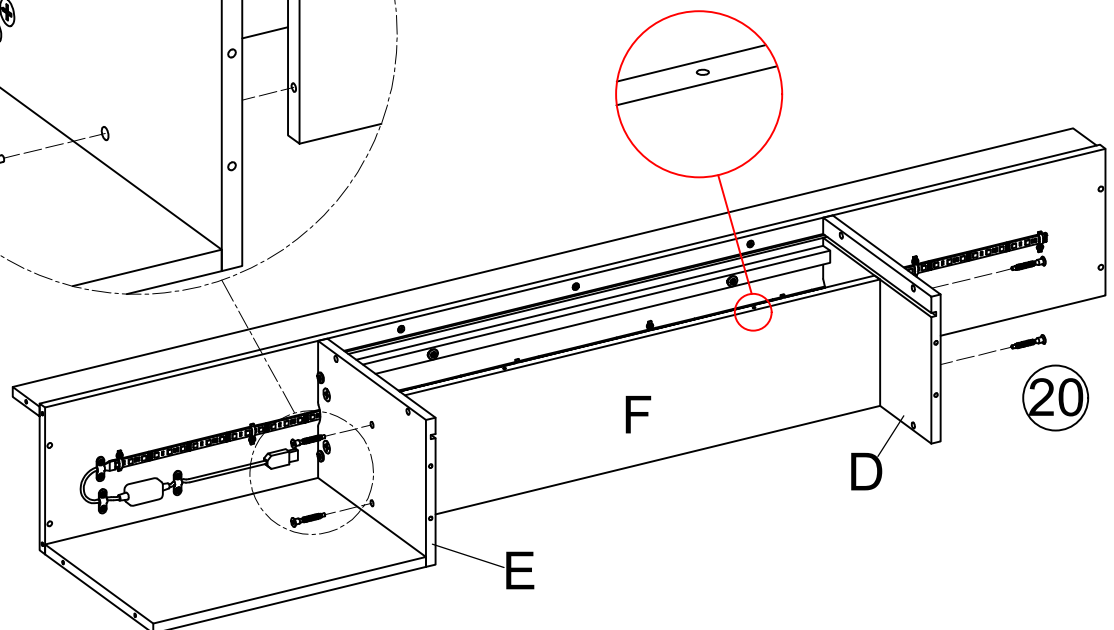

STEP 8

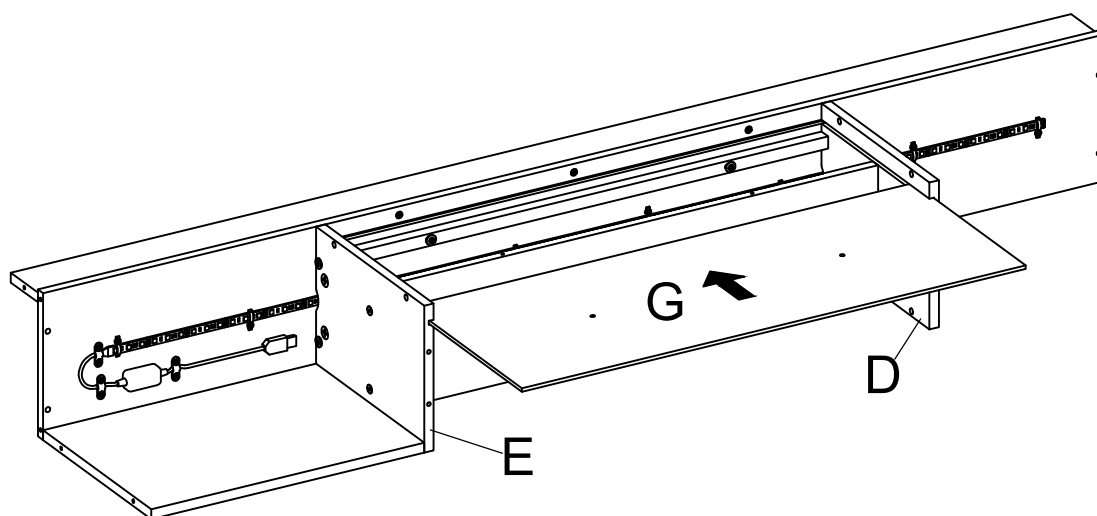


STEP 9

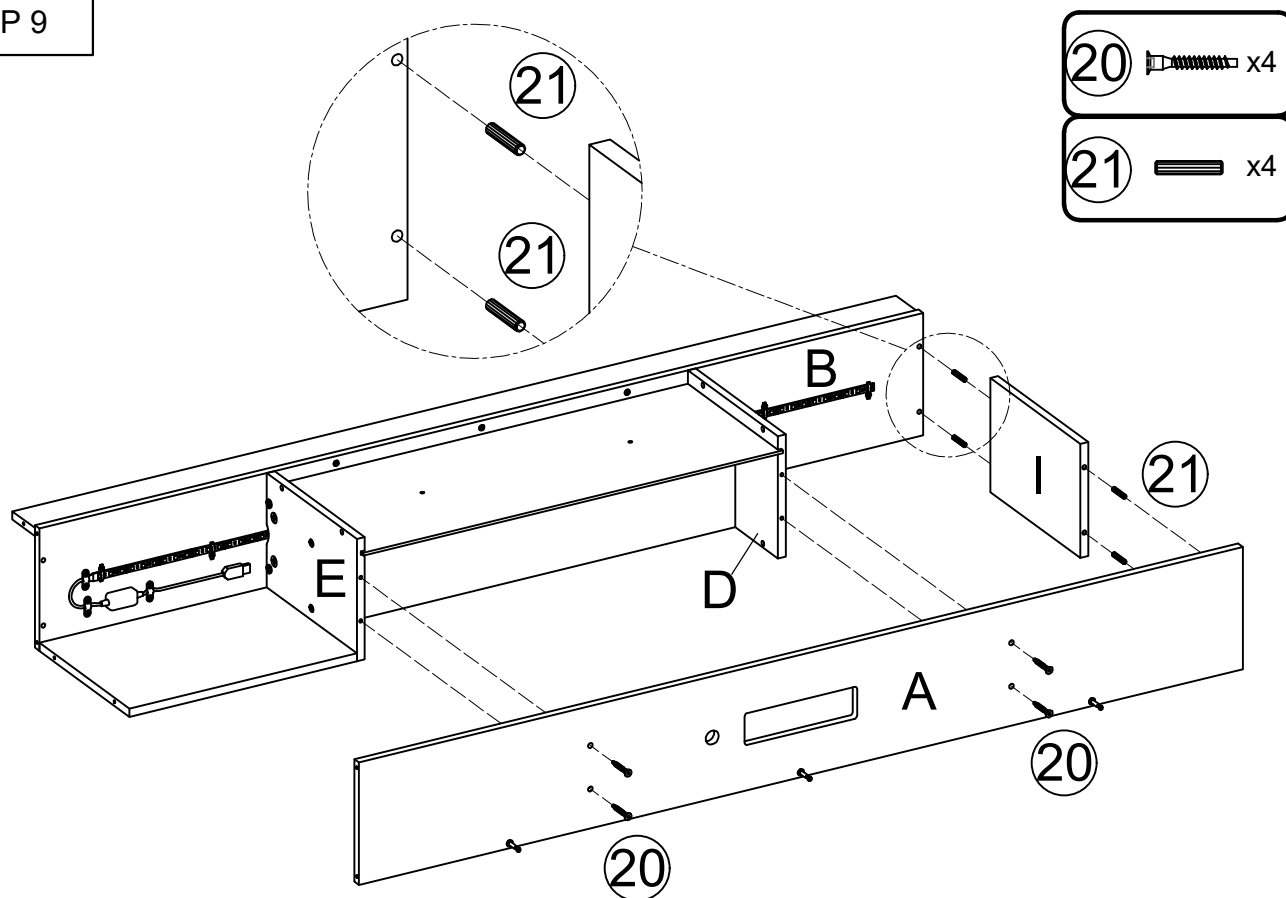


STEP 10

19  x2

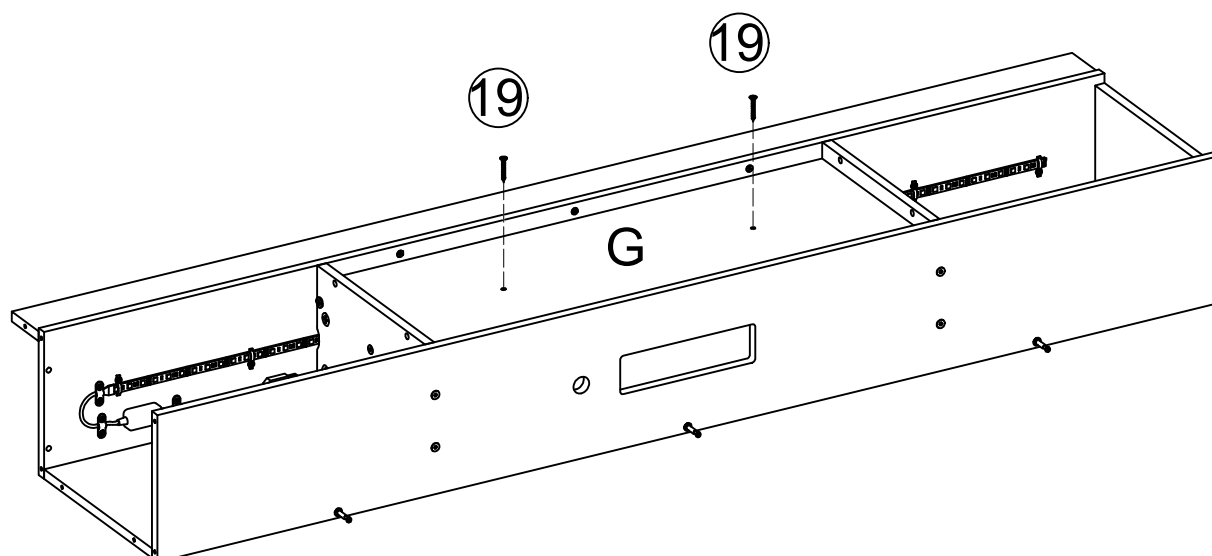


STEP 11

18  x4

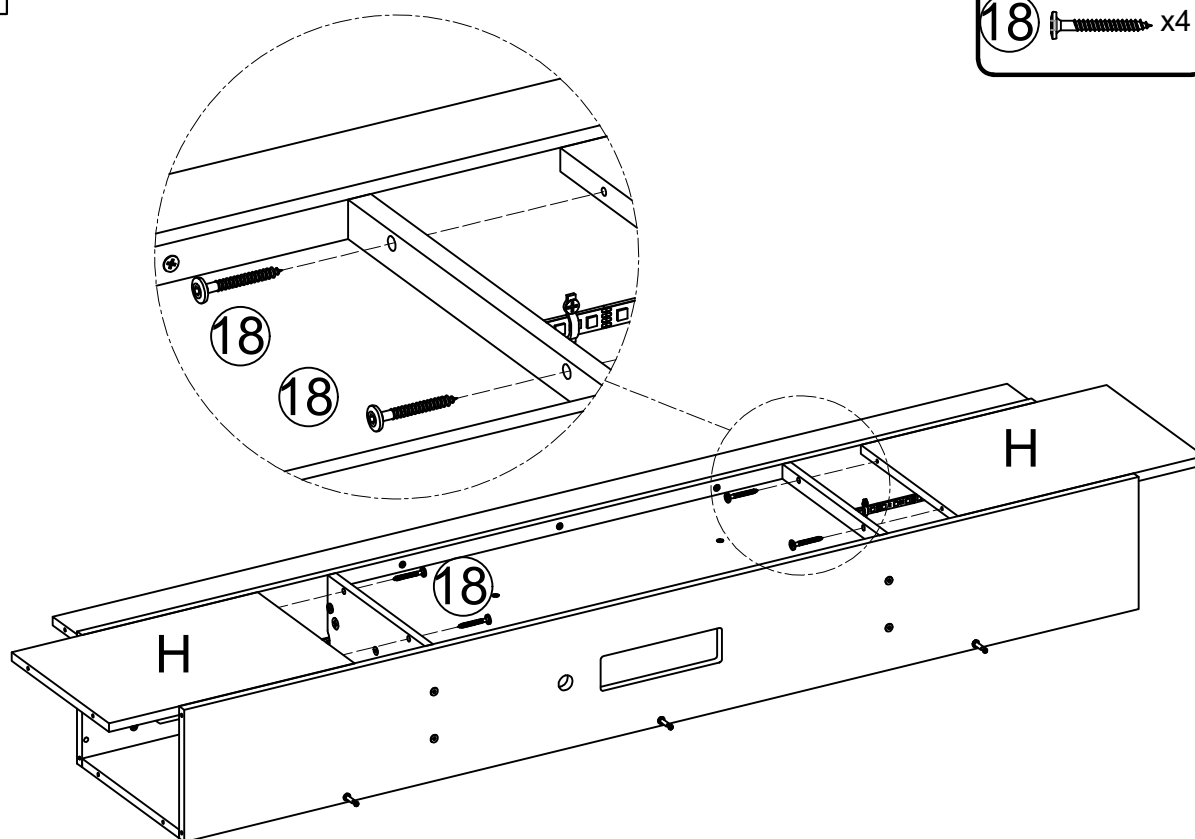


STEP 12

17  x3


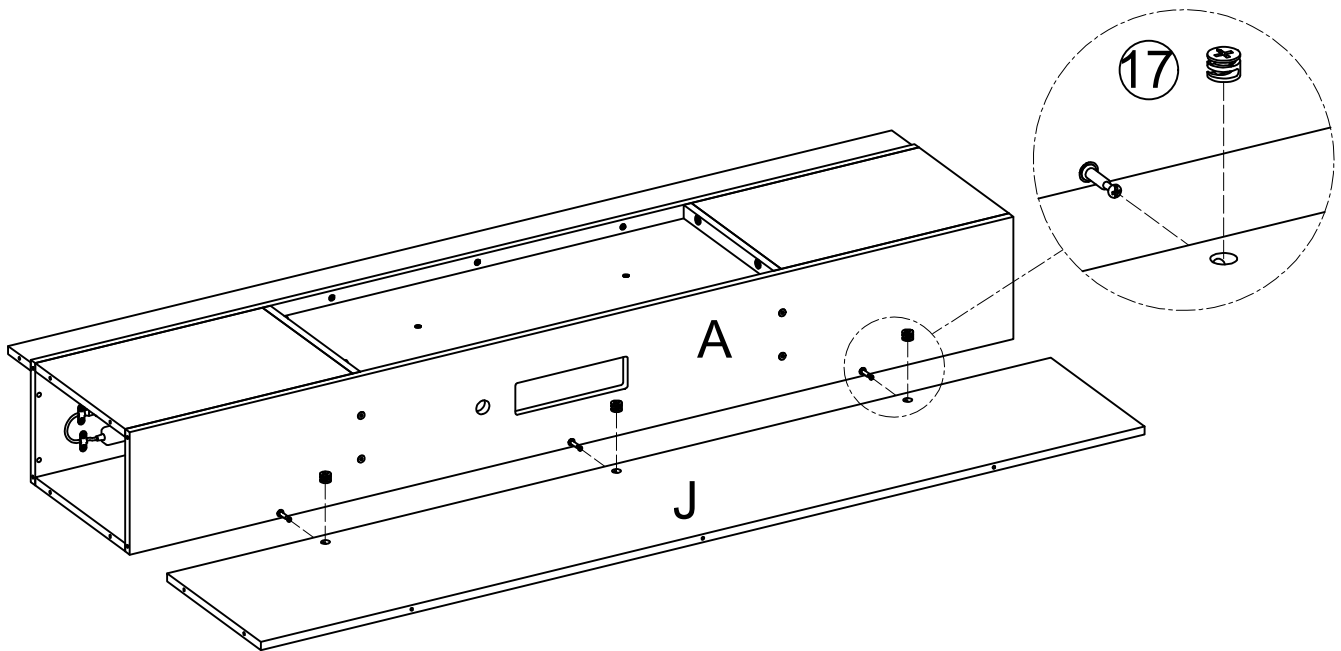


STEP 13



18  x3

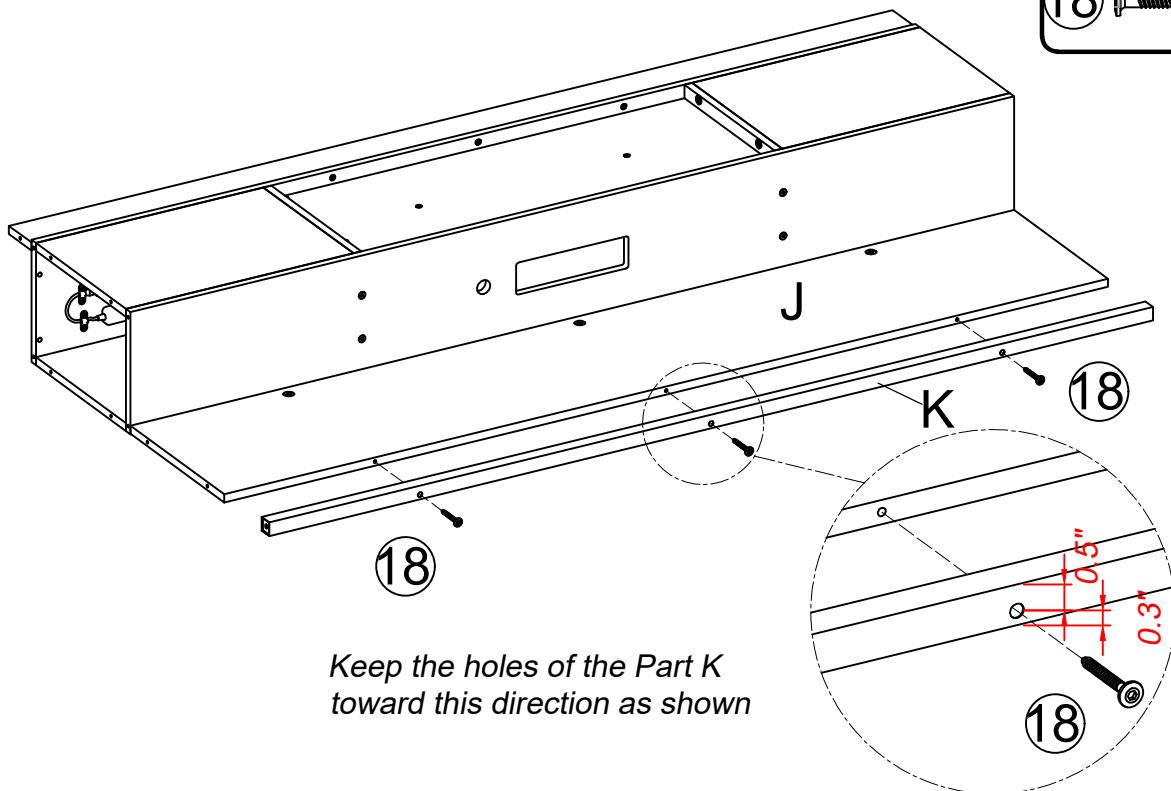


STEP 14

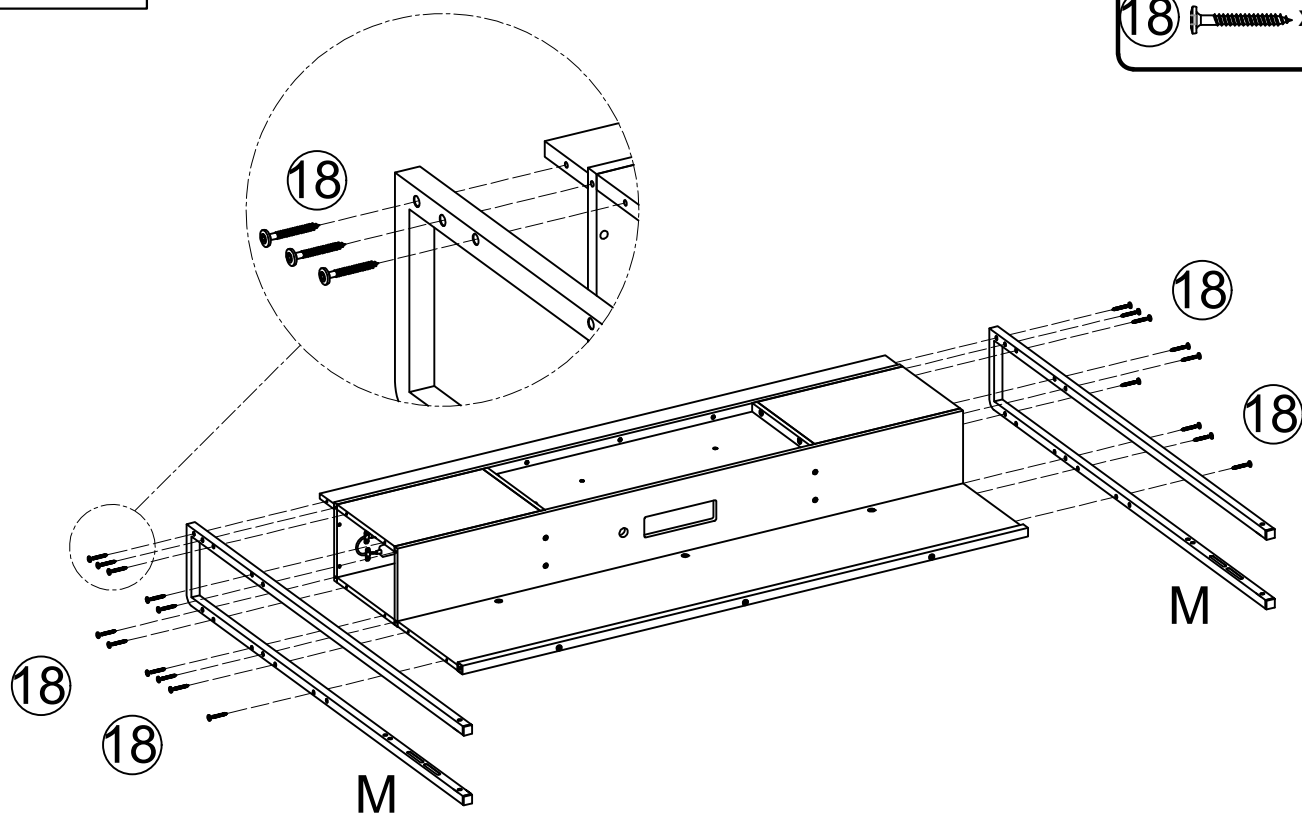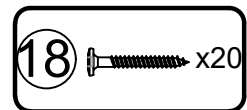

STEP 15

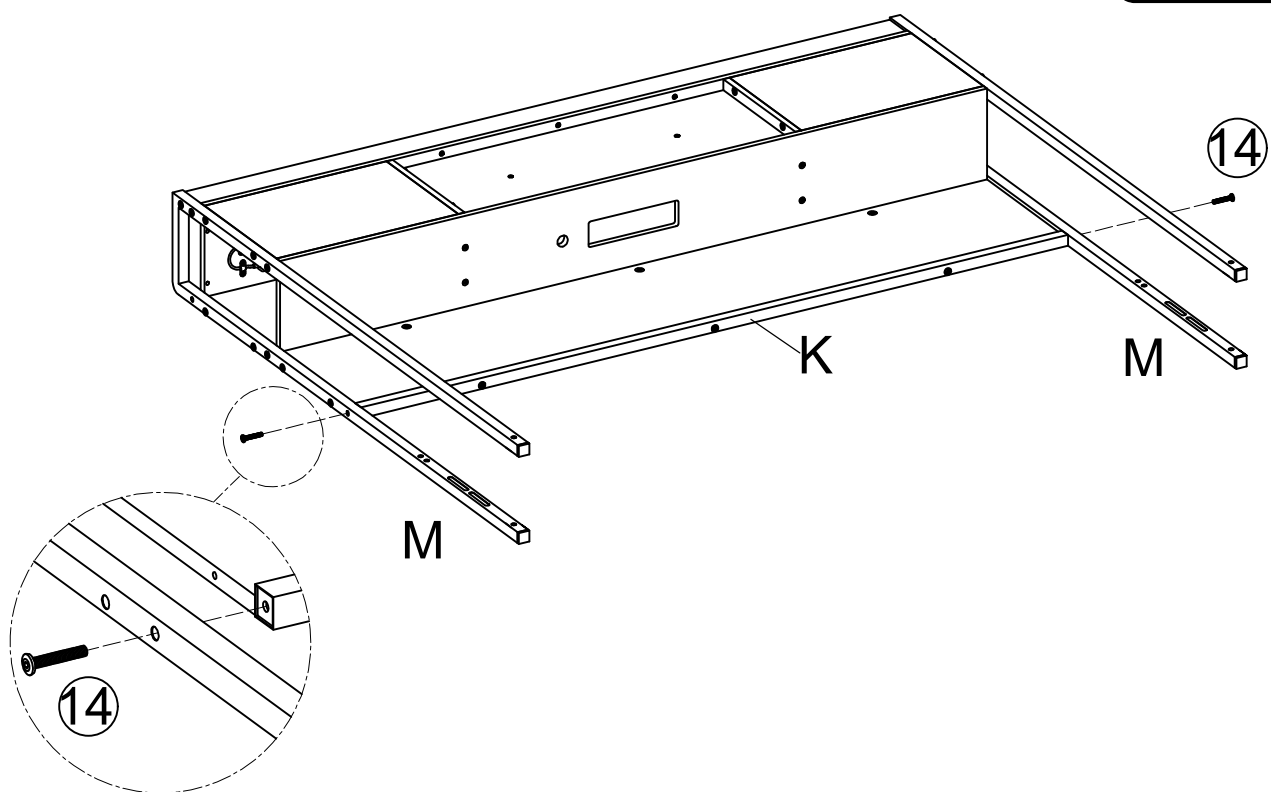
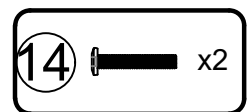


STEP 16


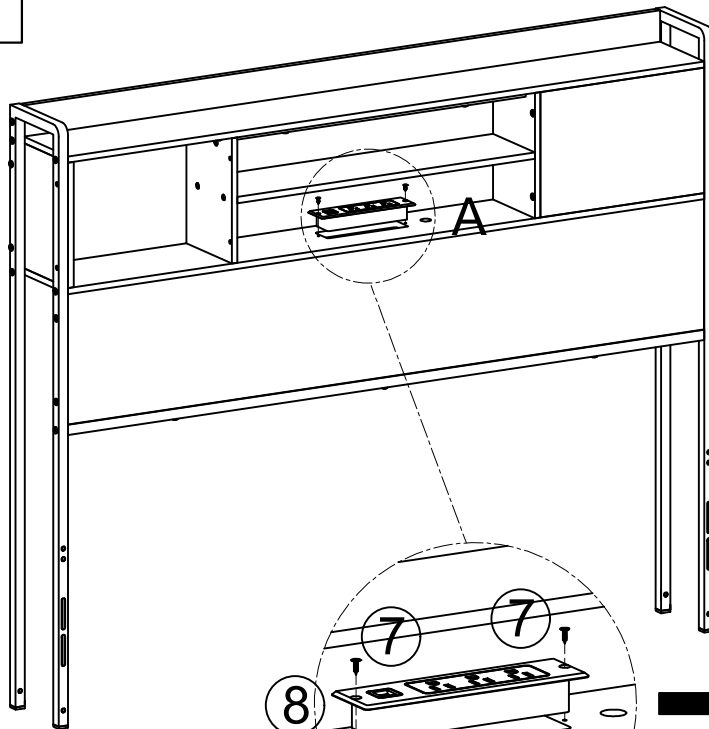


- 7  x2
- 8  x1



USB cable
through
this hole.

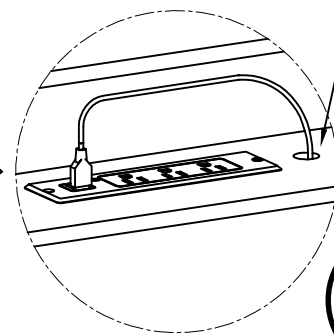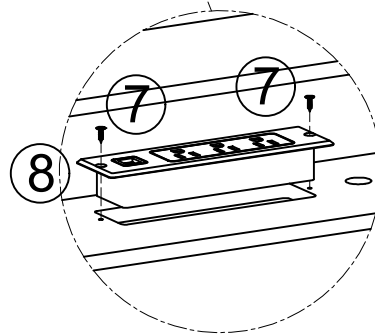

STEP 17

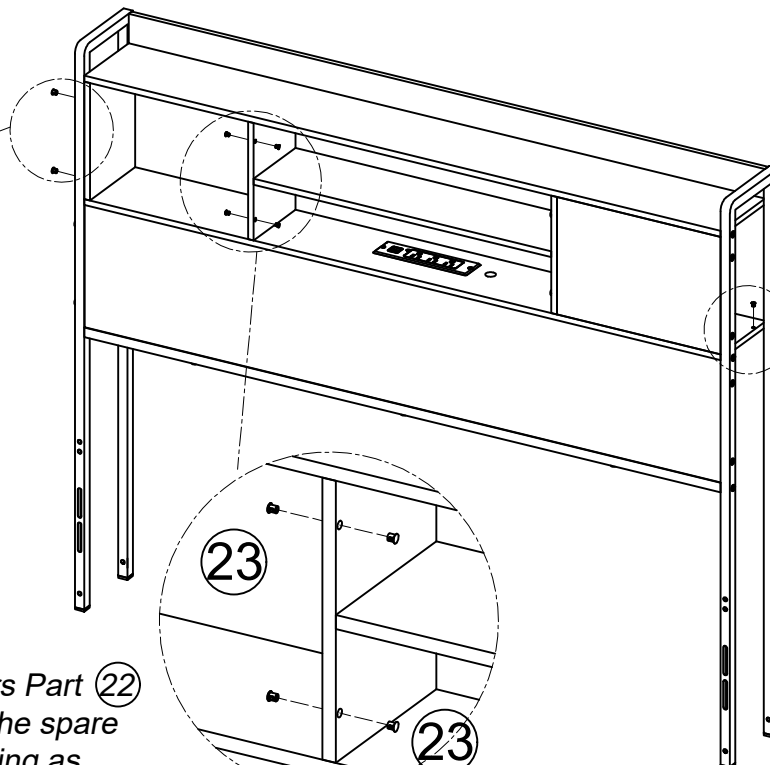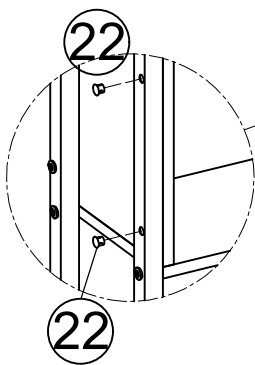

- 22  x2
- 23  x6

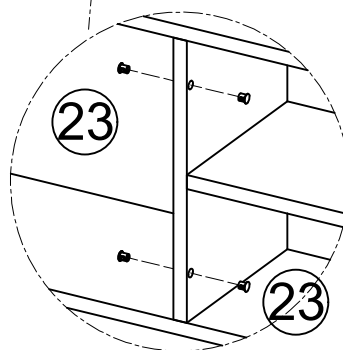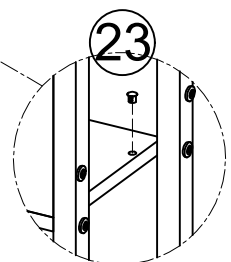


Plug Plastic Covers Part 22
and 23 to cover the spare
holes for nice looking as
you need.


Option B




STEP 5

Tear off the tape of the LED strip, stick the LED strip to the bottom of top panel(B). Fix the LED strip with plastic clips.
Note: Do not cover the lamp beads.

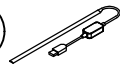- 7  x14
- 10  x1
- 11  x3
- 12  x8

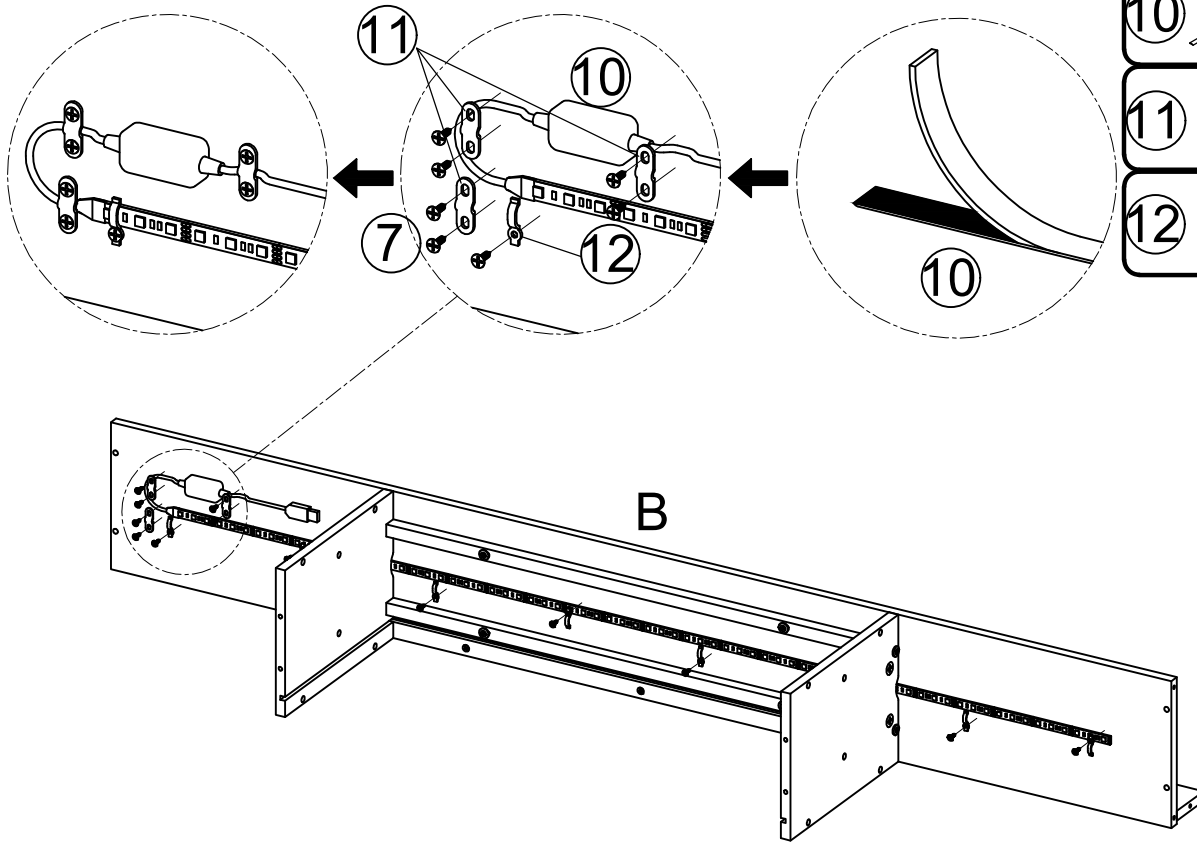


NOTE: please make sure the LED strip is in proper position first before tear off the tape.

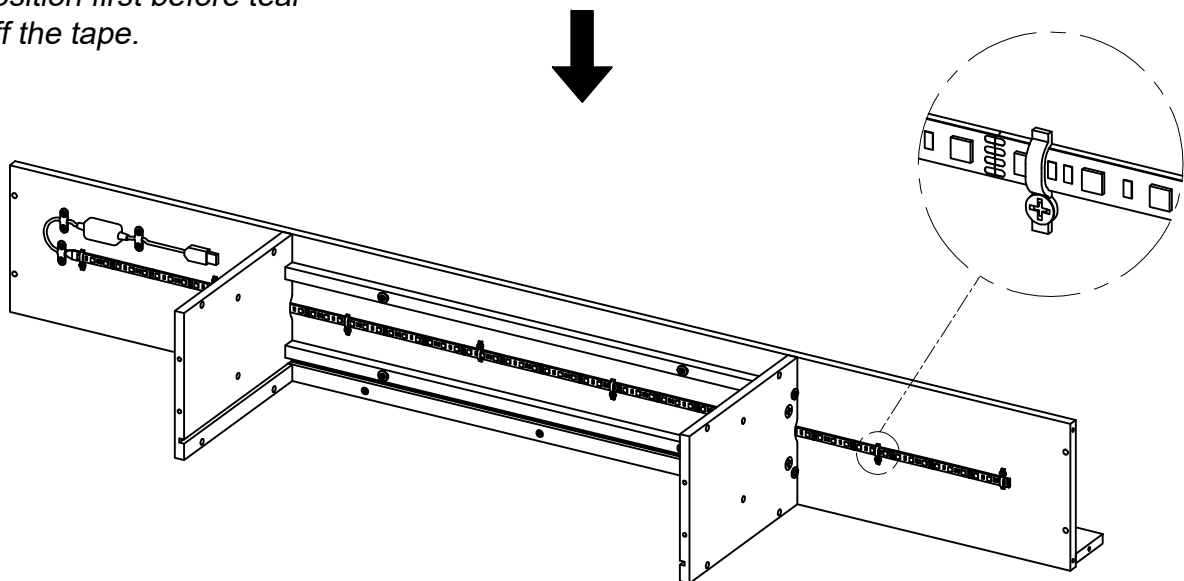

STEP 6


18  x2

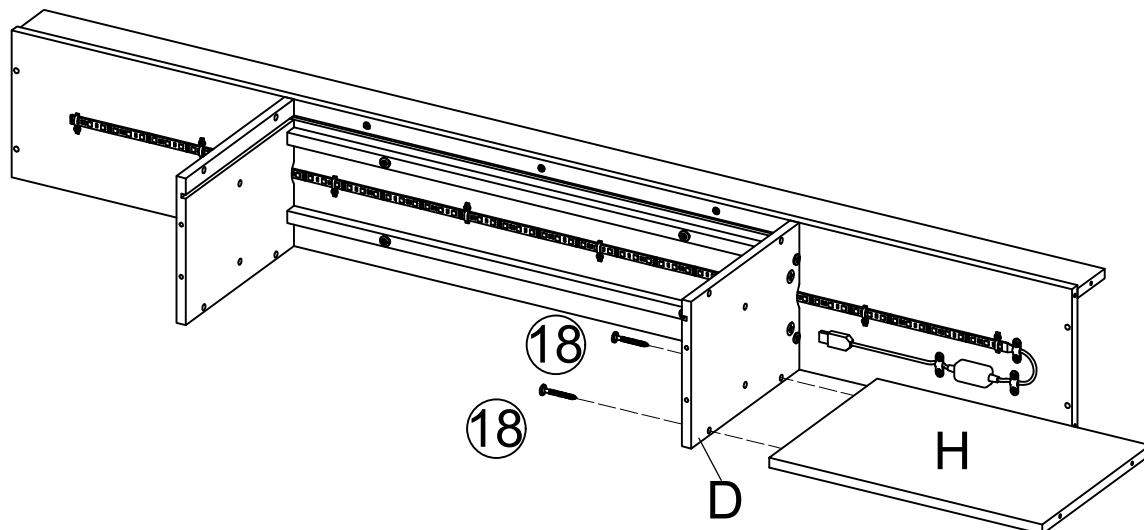


STEP 7

20  x4


Keep the holes of the Part F toward this direction as shown

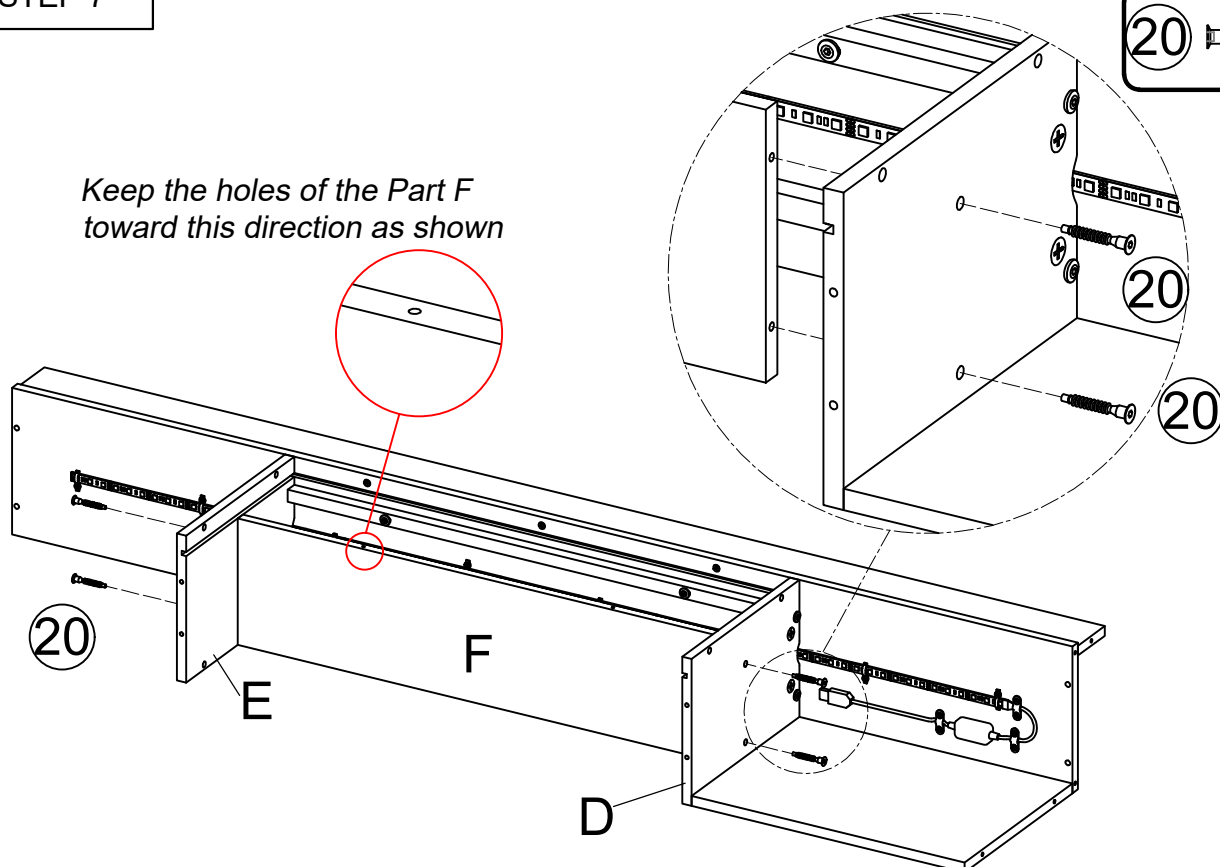

STEP 8

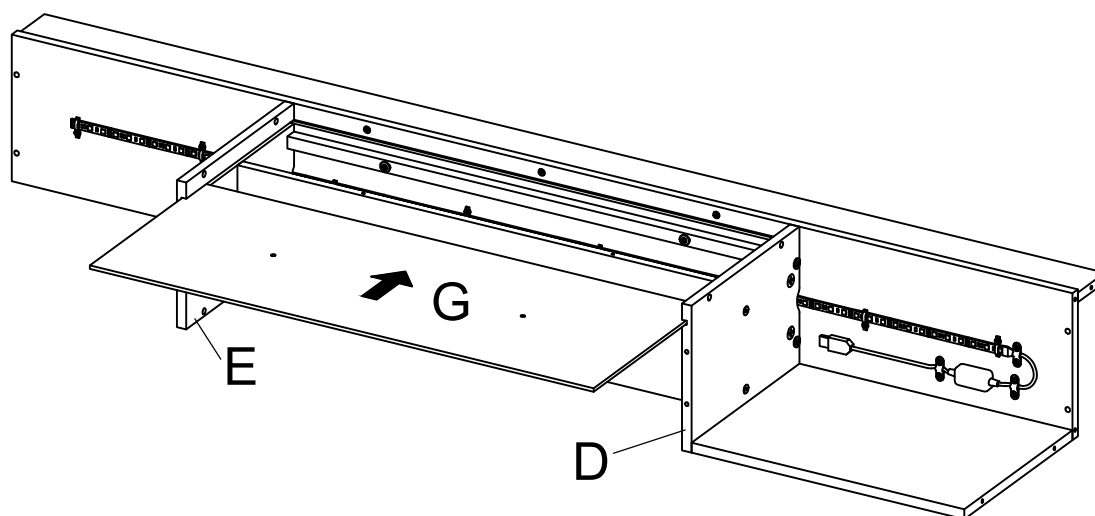


STEP 9

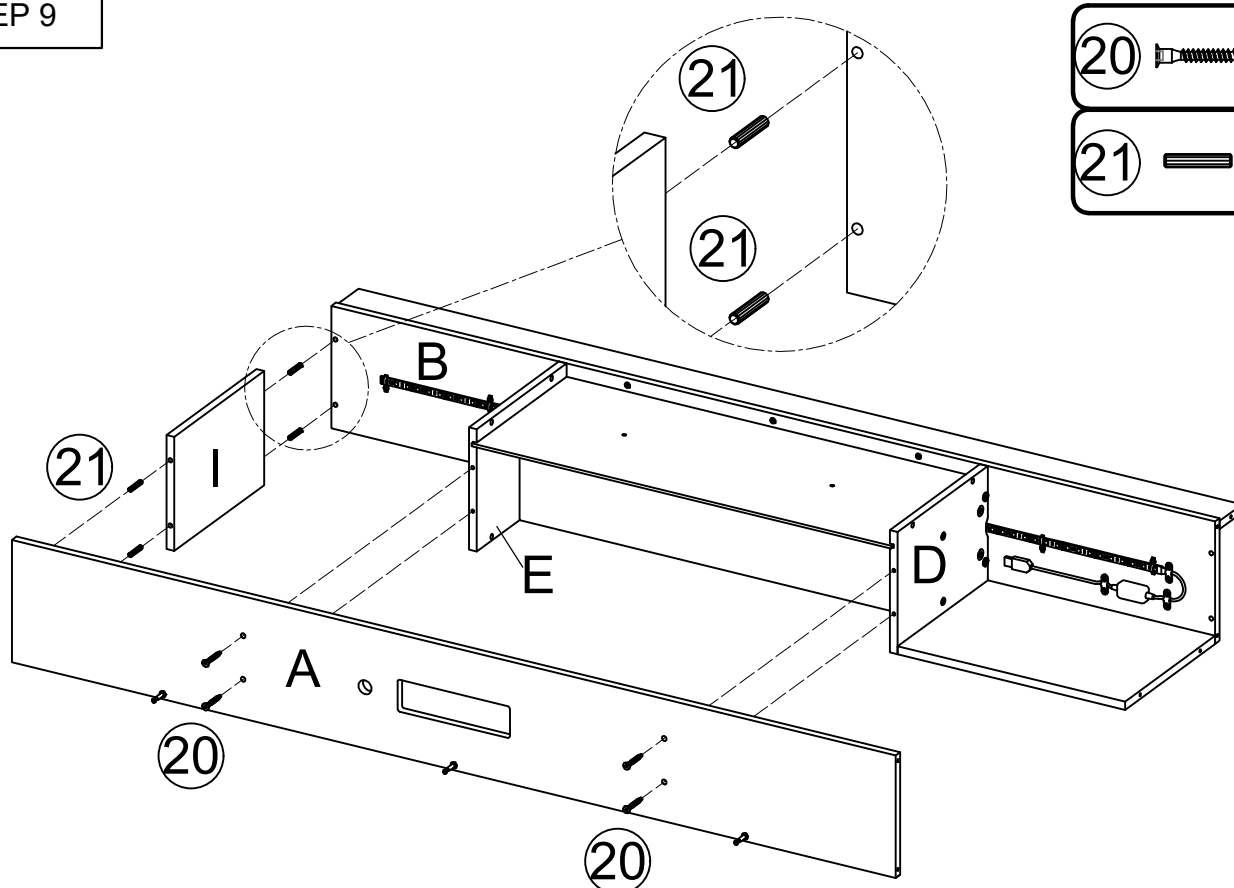


STEP 10

19  x2

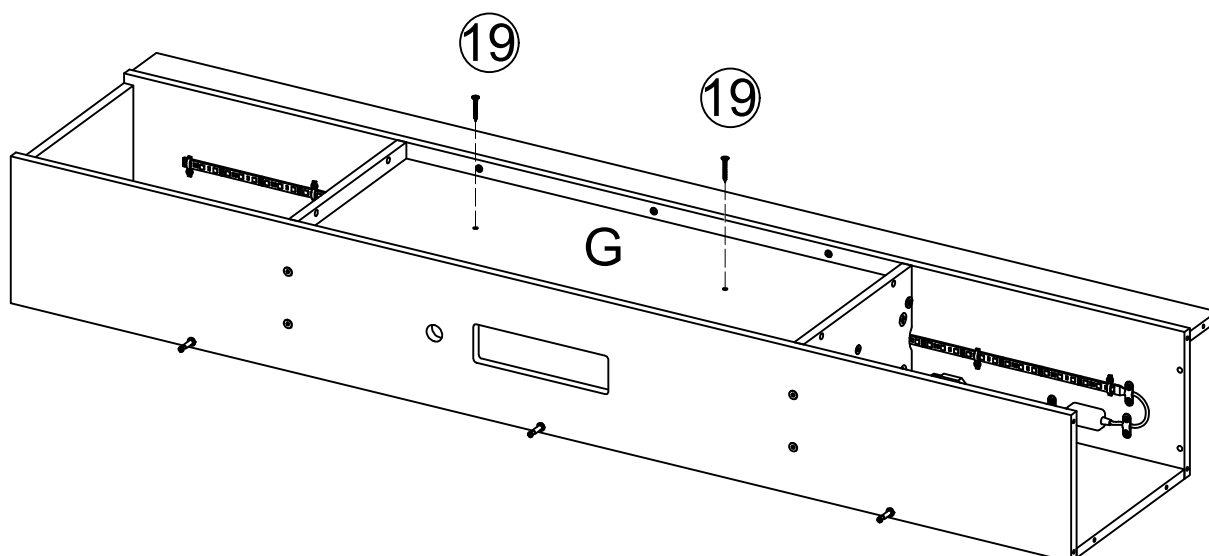


STEP 11

18  x4

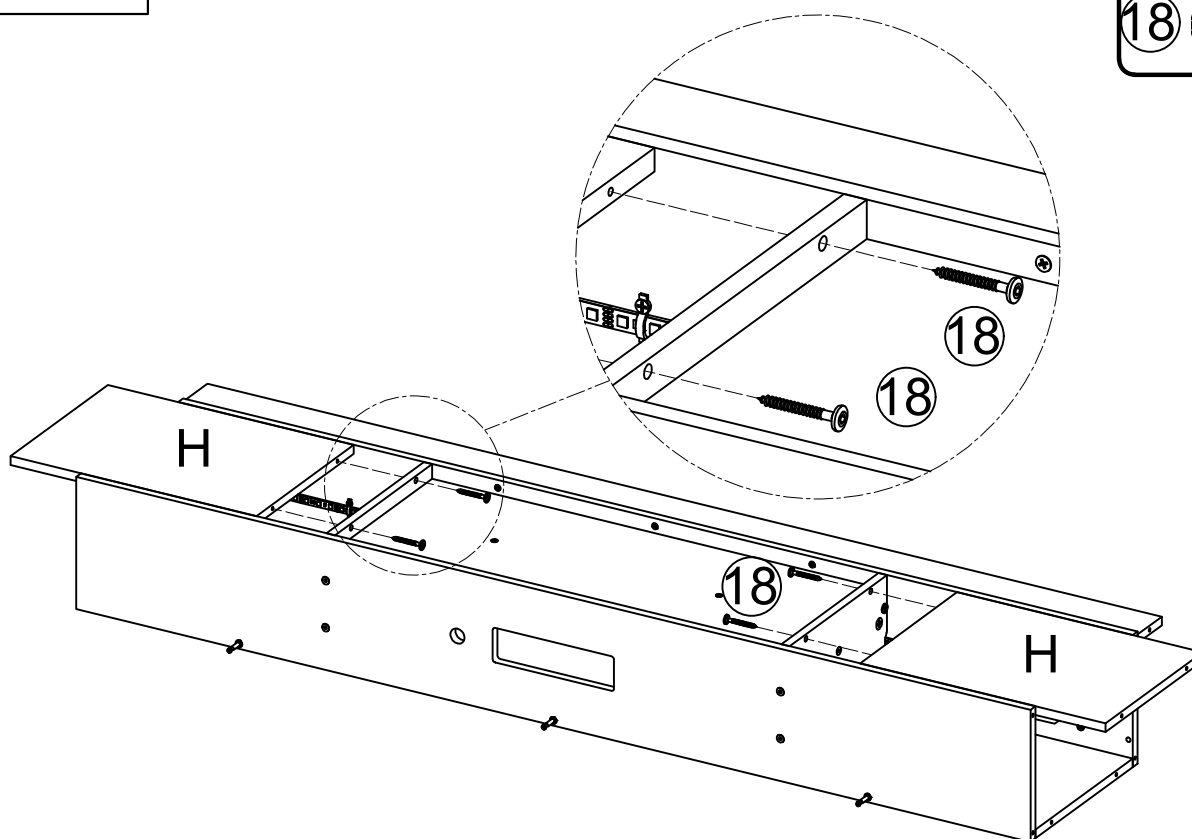


STEP 12

17  x3

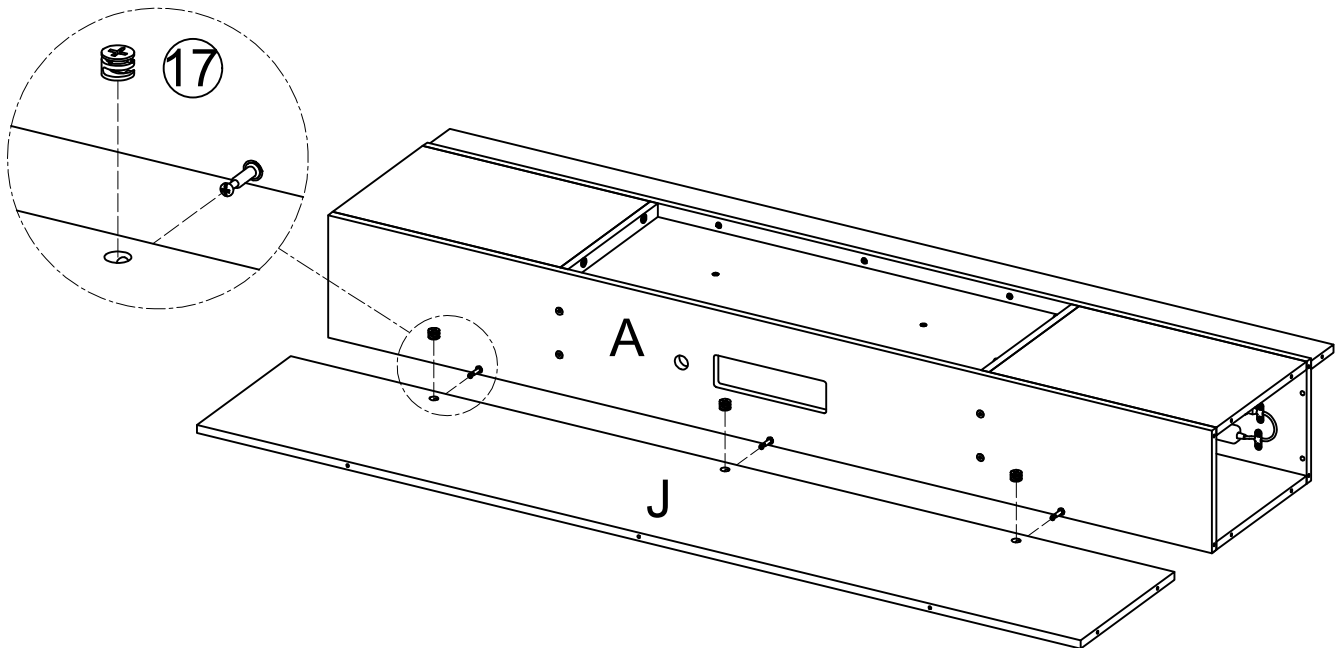


STEP 13

18  x3

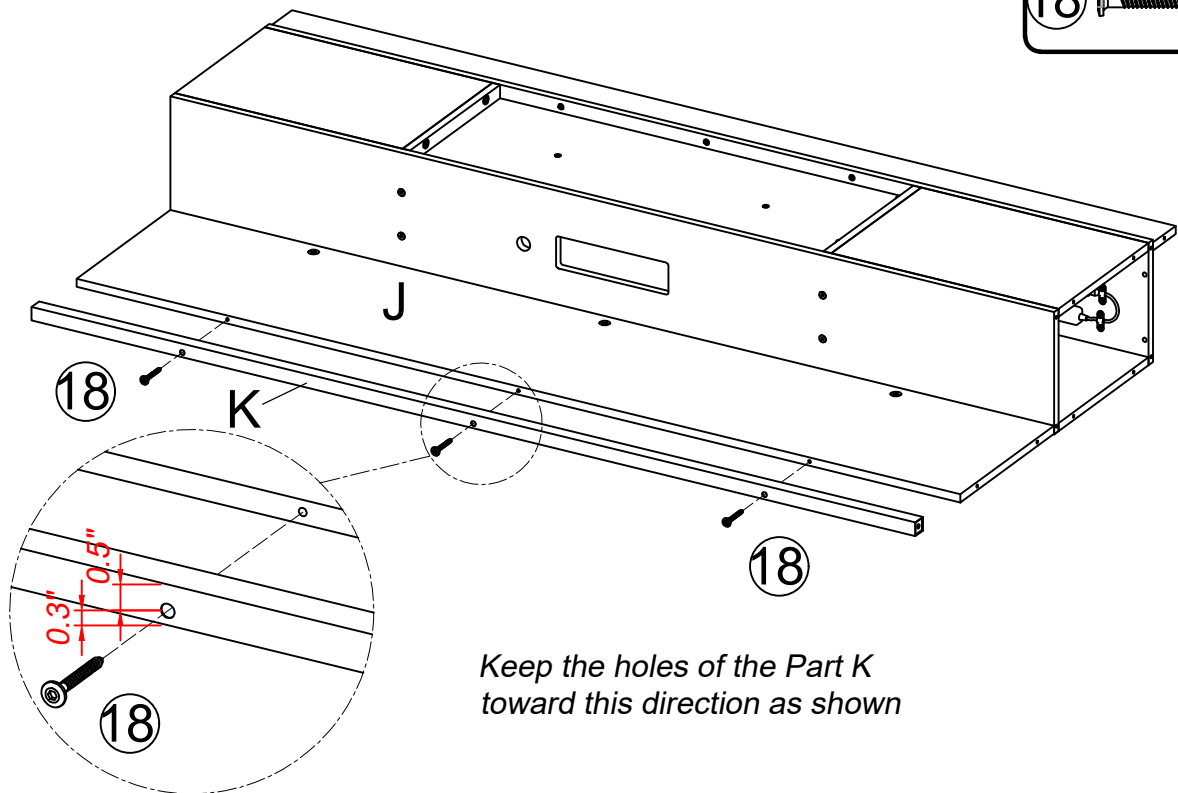


STEP 14

18  x20

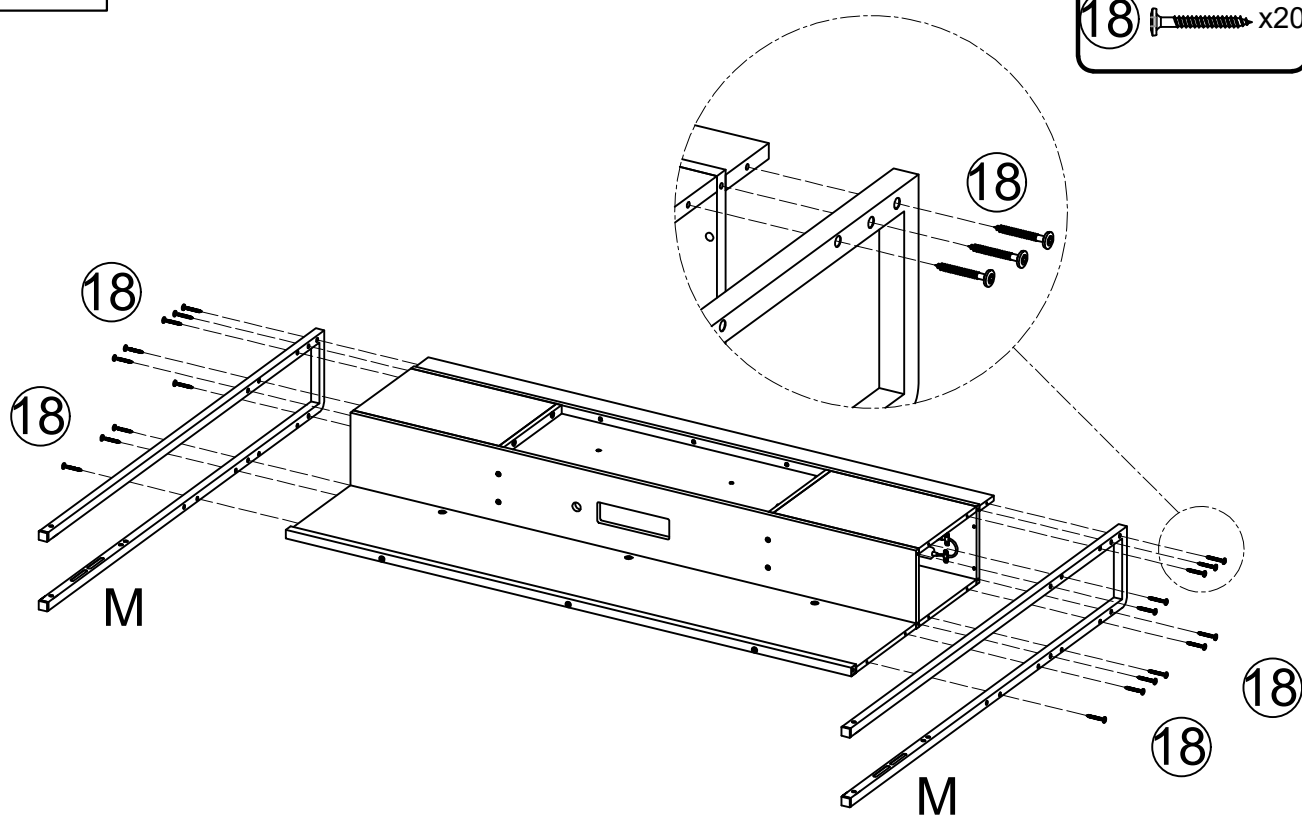


STEP 15

14  x2

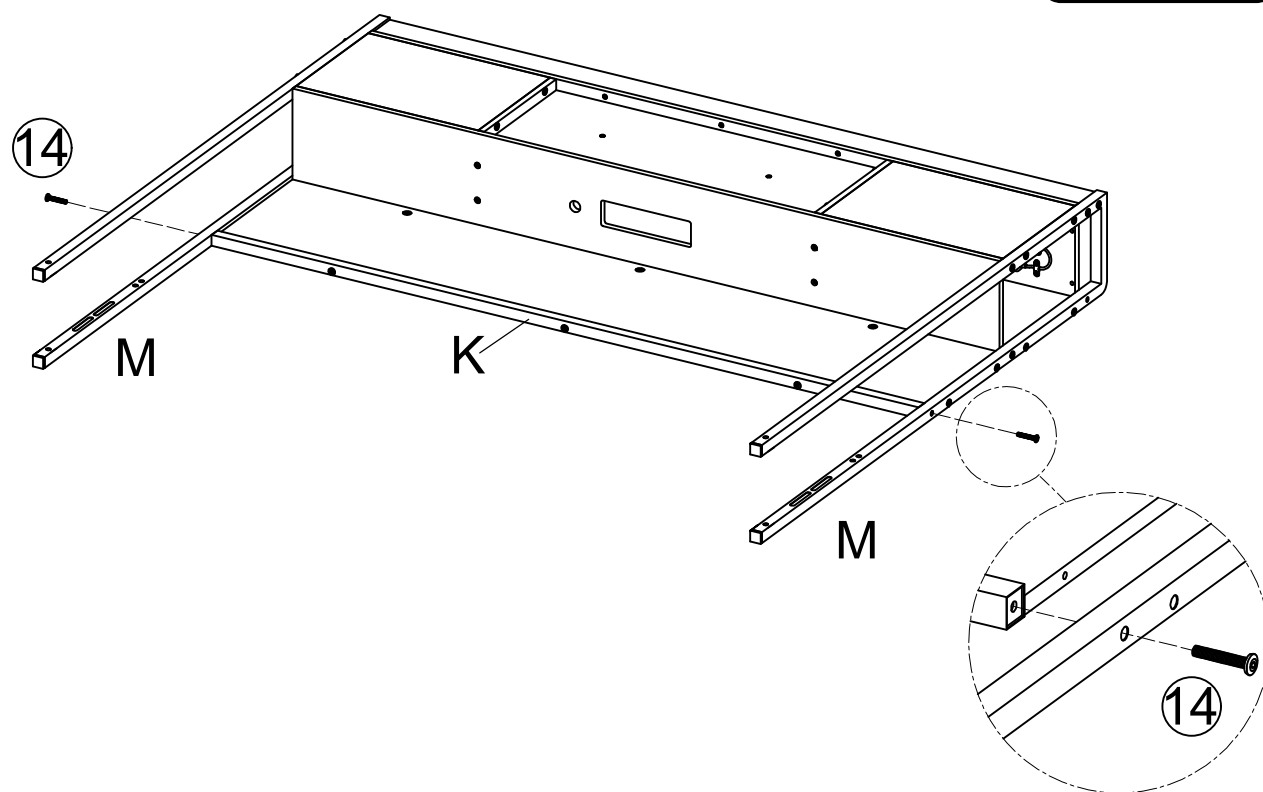


STEP 16

- 7  x2
- 8  x1

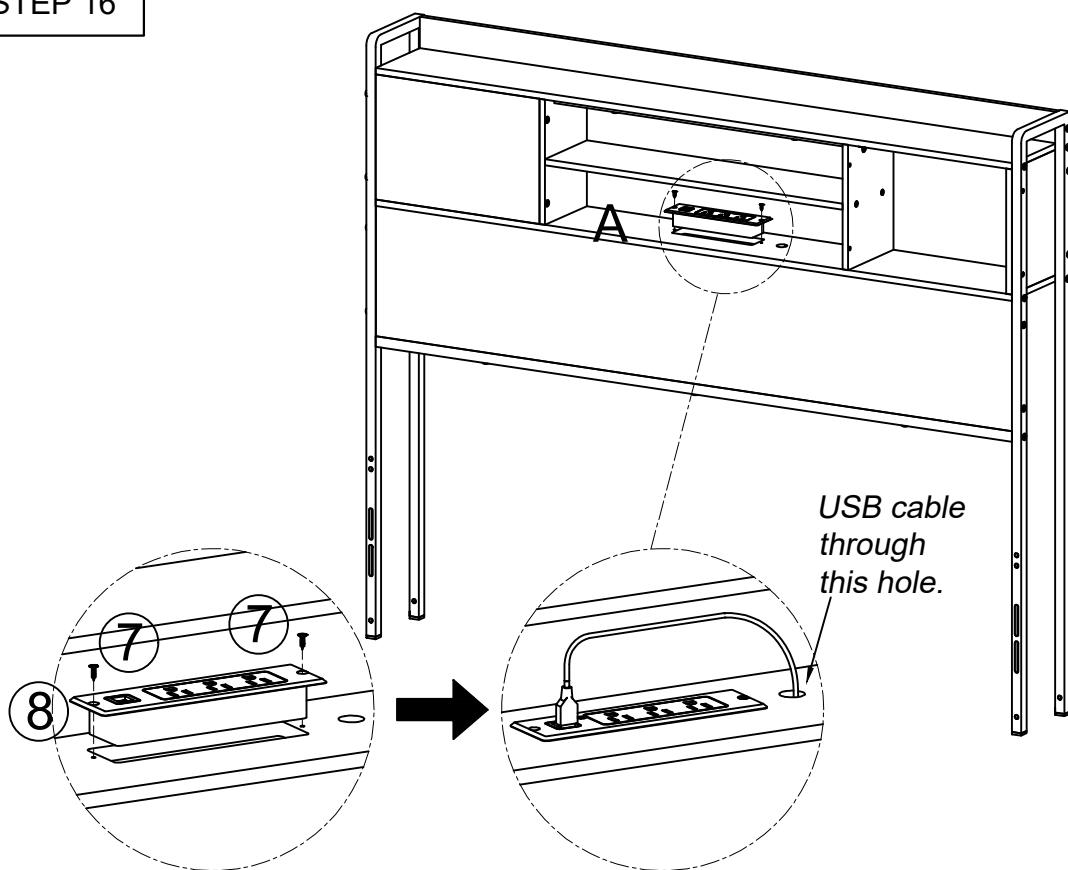



STEP 17

- 22  x2
- 23  x6

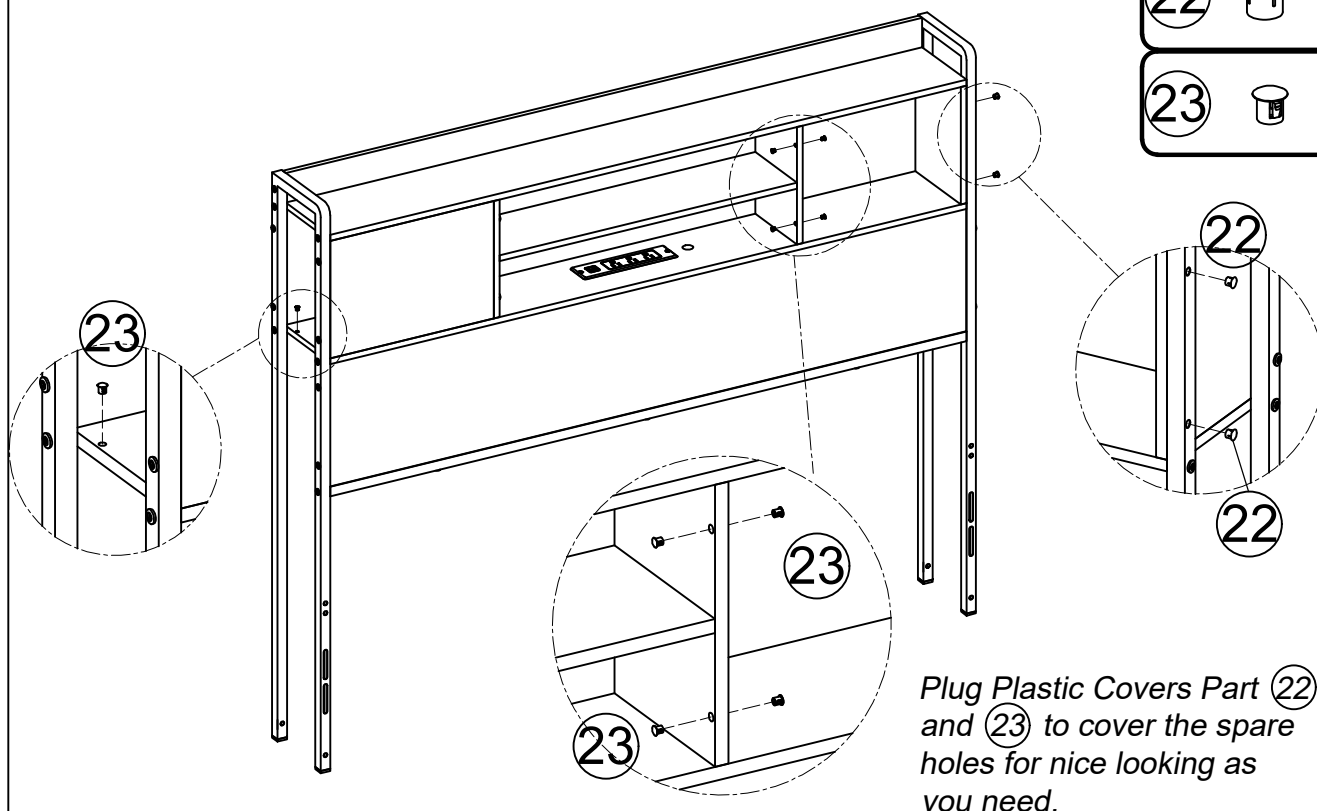


STEP 18


26 x12

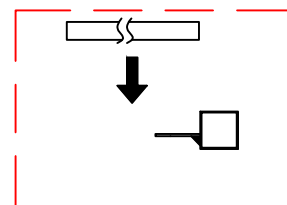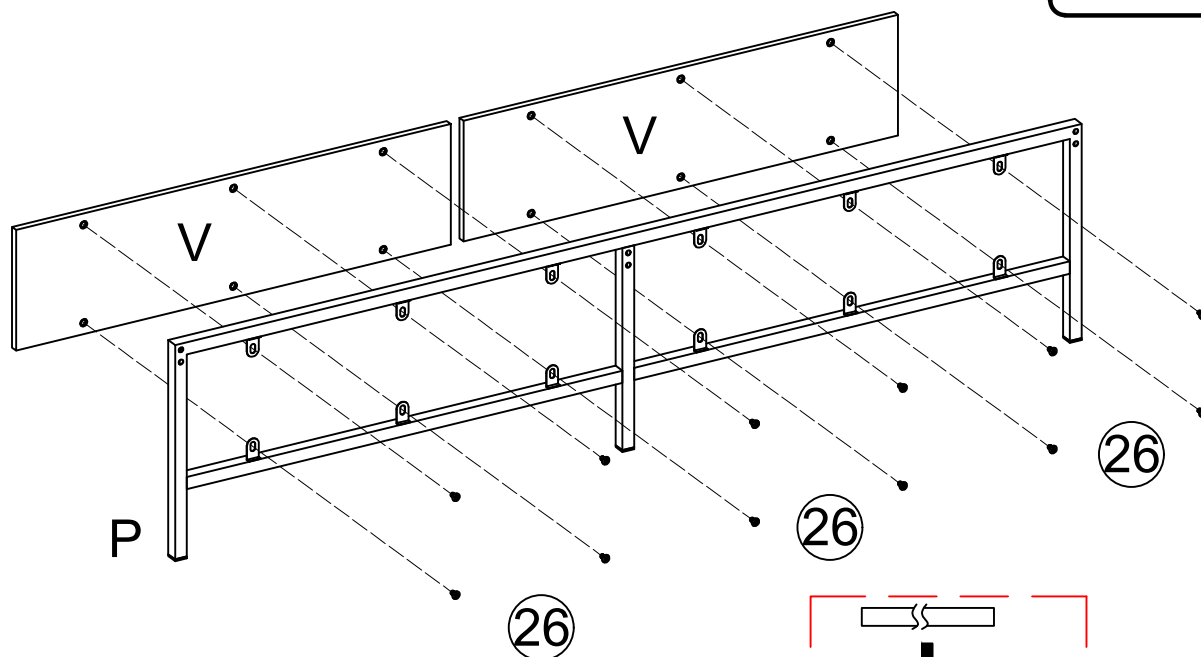


STEP 19

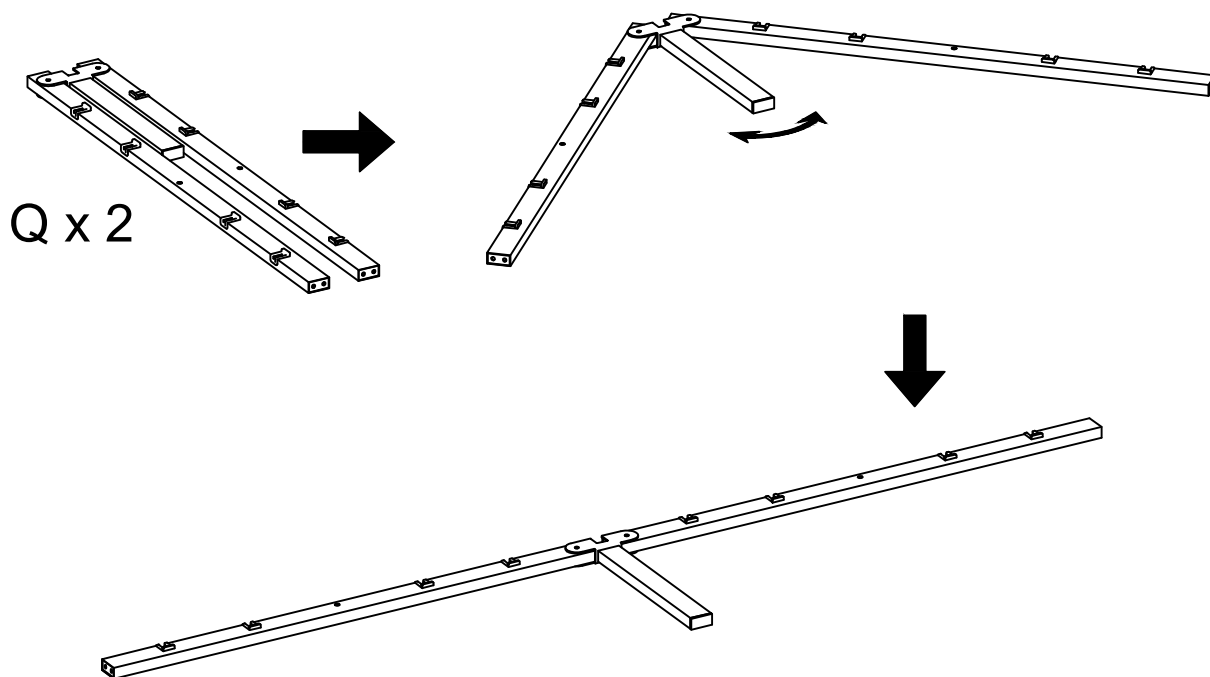

STEP 20

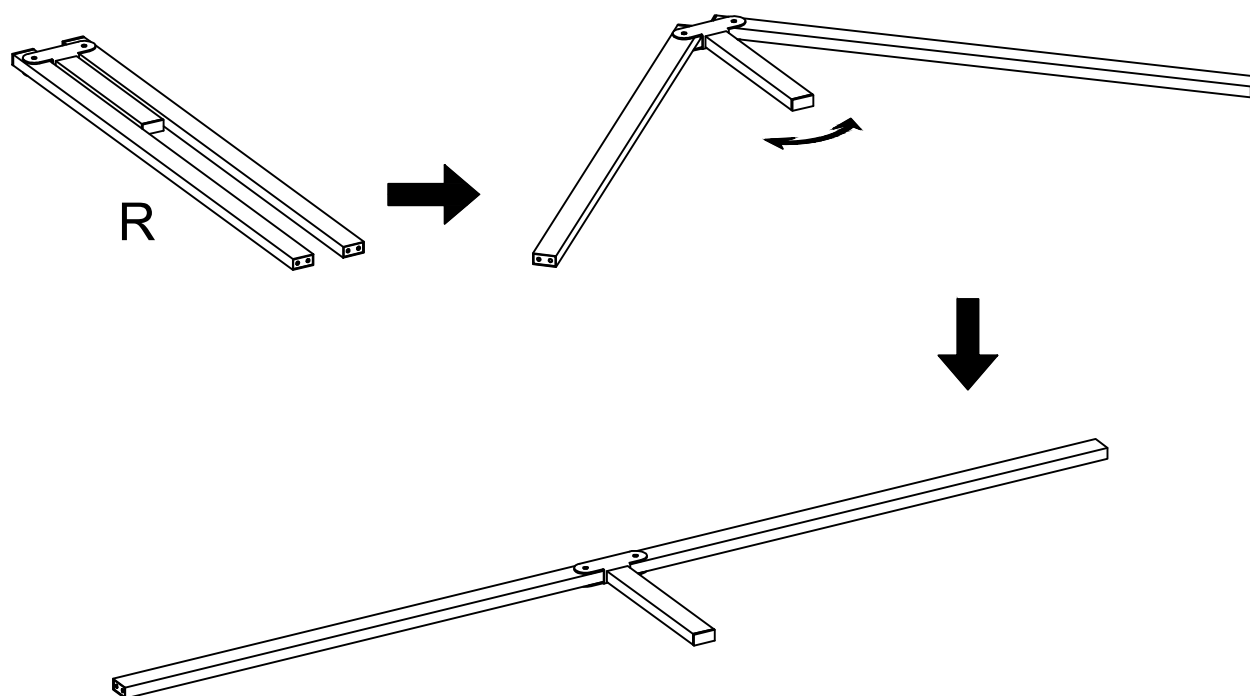

STEP 21

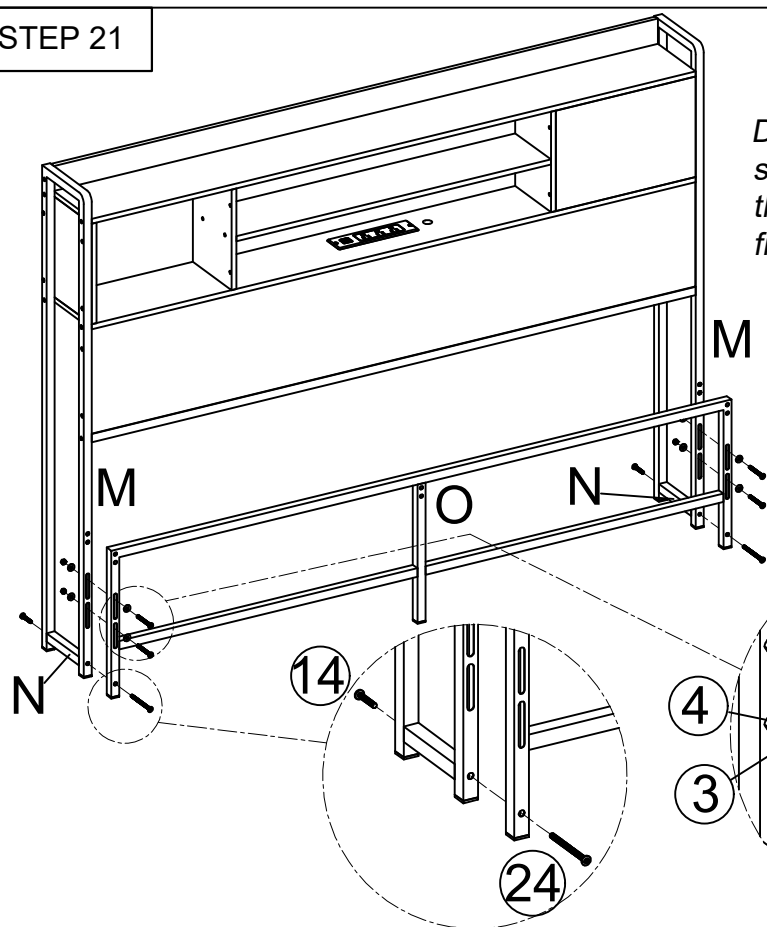


Don't fully tighten the screws before aligning all the screws with the bed frame in step 22.

- 2**  x4
- 3**  x8
- 4**  x4
- 6**  x1
- 14**  x2
- 24**  x2

STEP 22

24 — x4


25 — x8

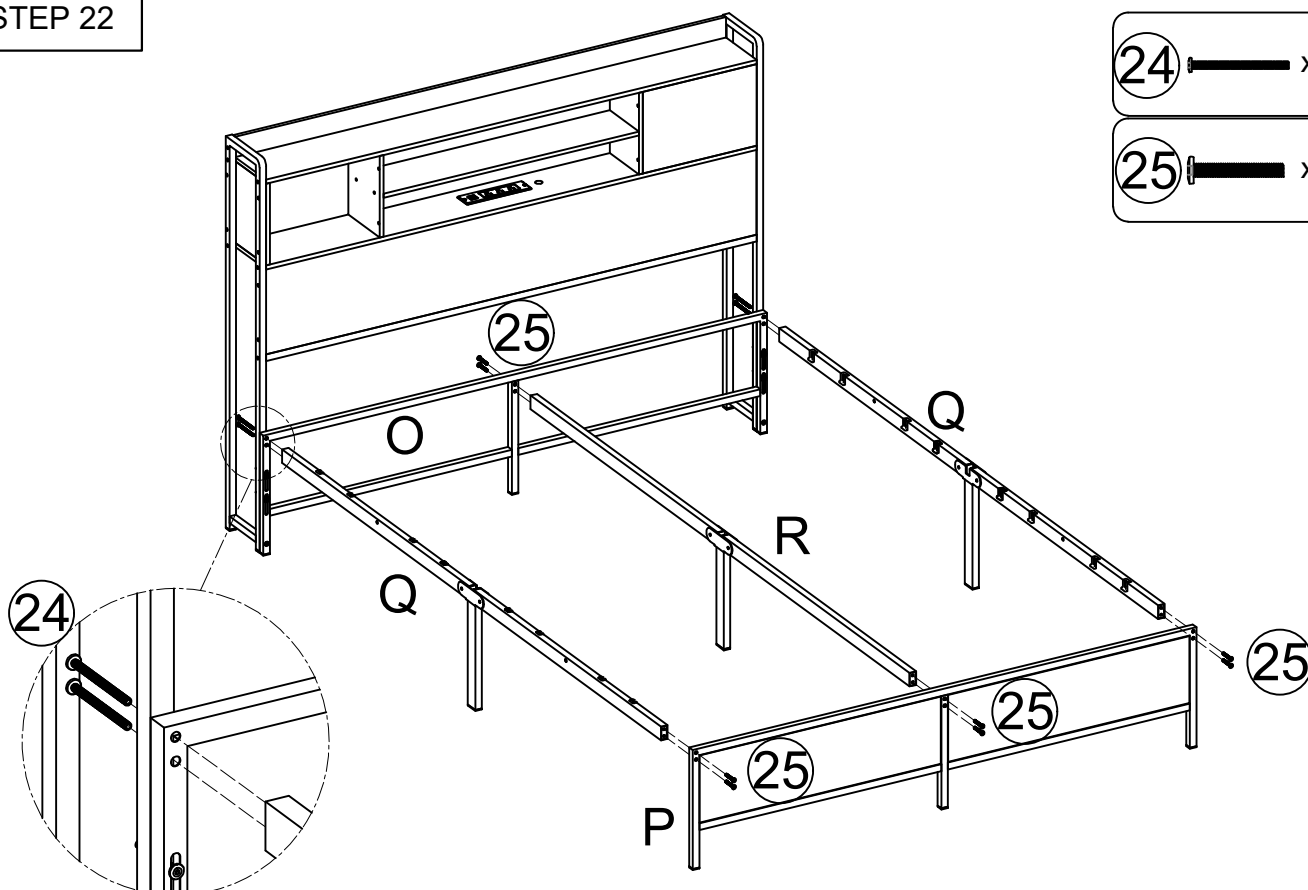


STEP 23

13 — x1


Tear off the tape of the Shock-absorbing Silent Foam Strip (#13), and stick the strip to the top of the bed frame (R).

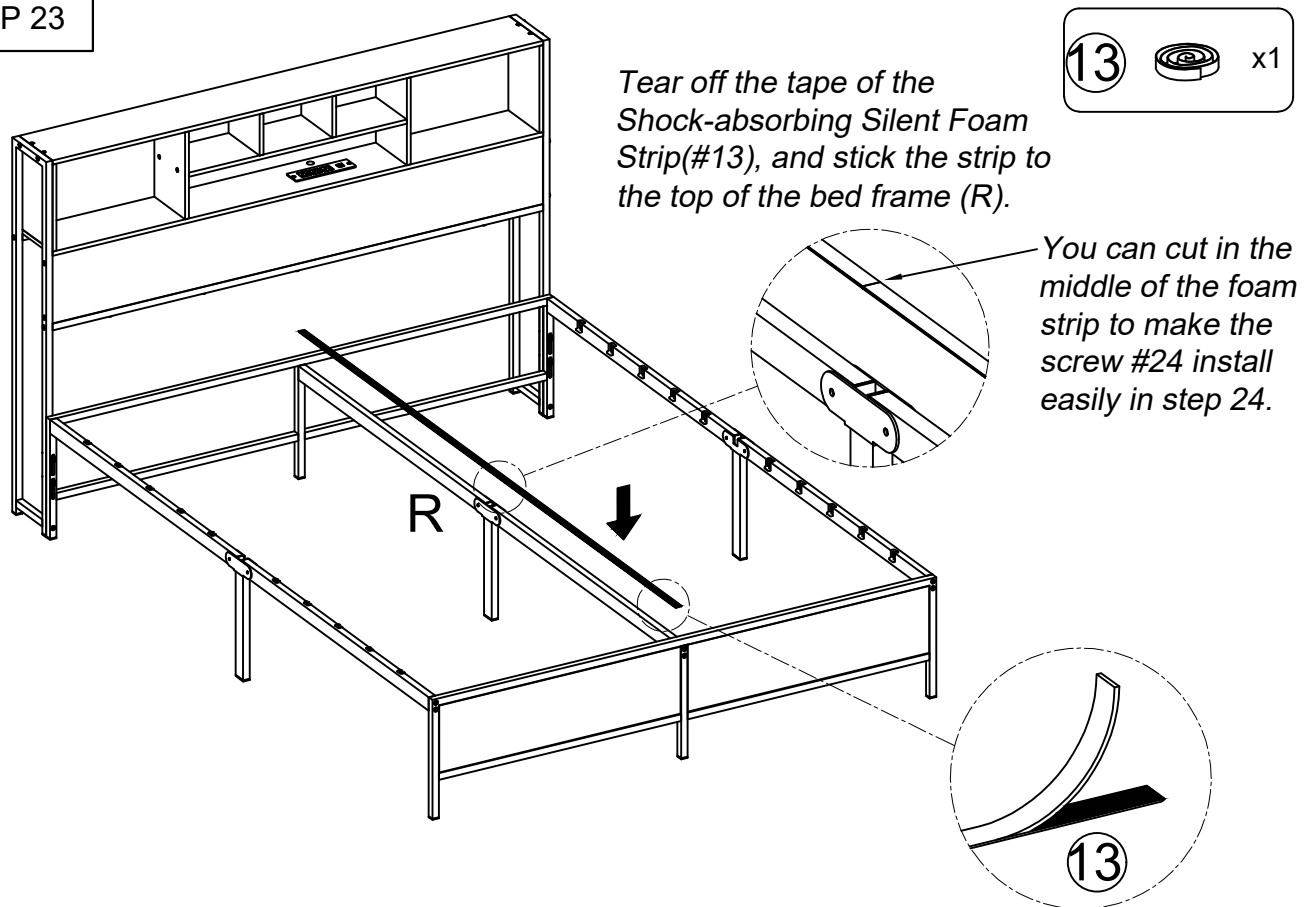


STEP 24

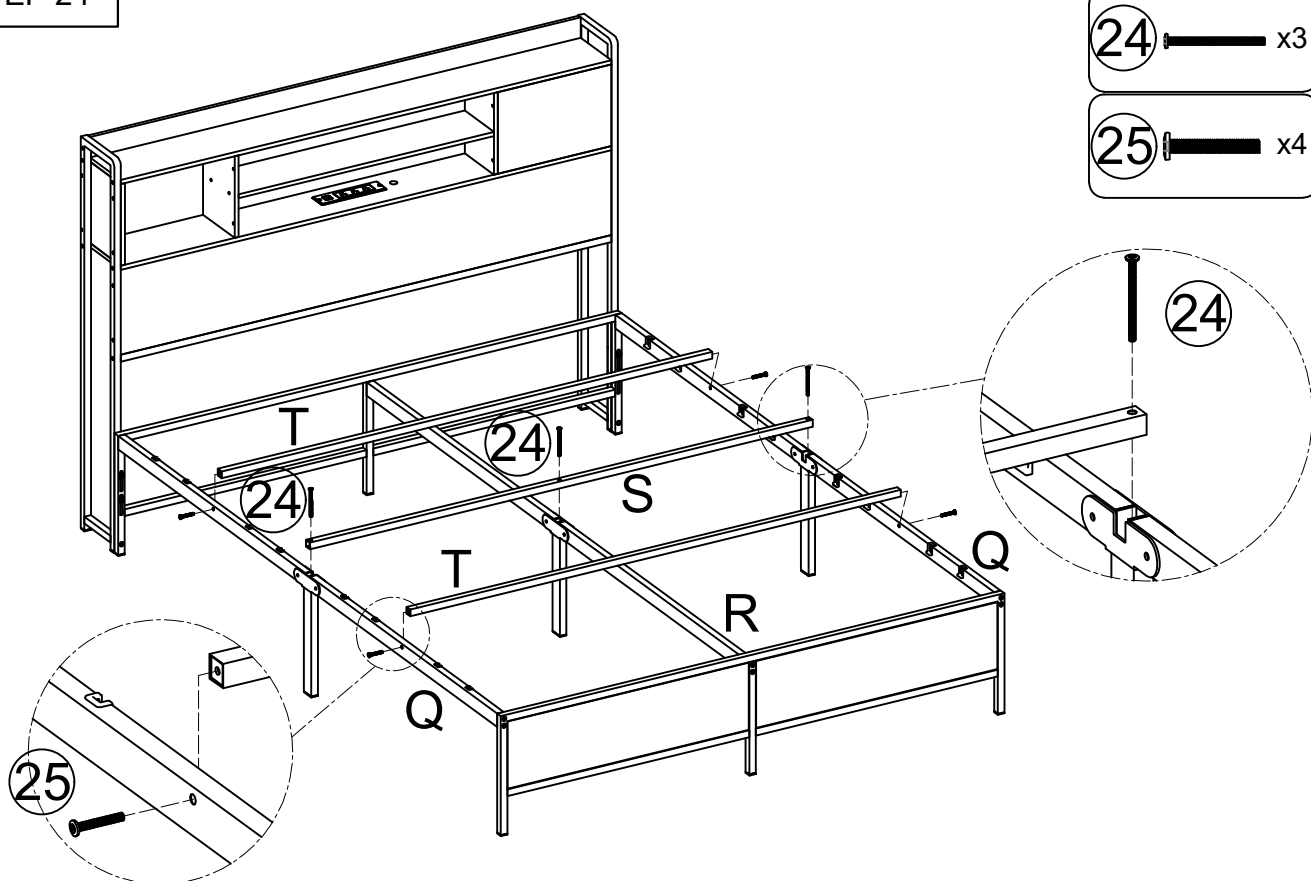

STEP 25

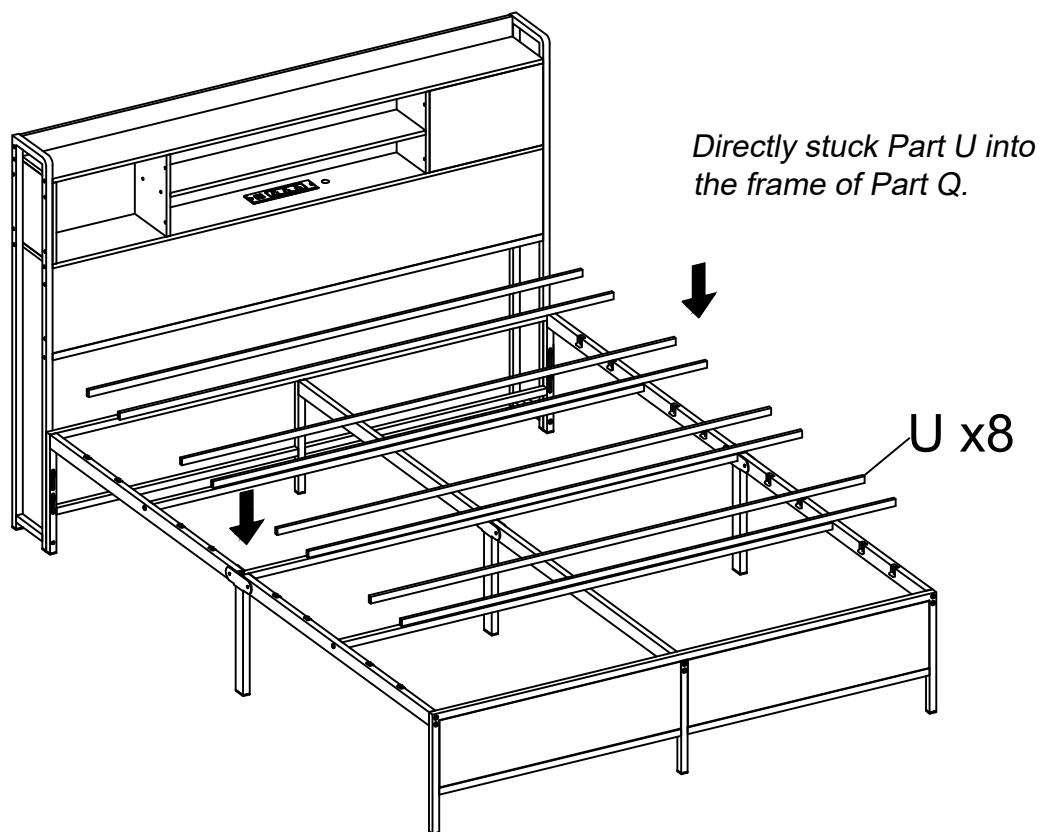

STEP 26

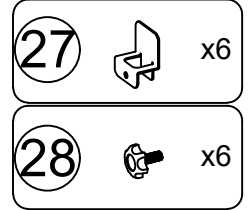

The Mattress Anti-Slip Gaskets(#27) can be installed anywhere you like, and the screws (#28) snap into the frame without the need for holes to be drilled.

