


Please note: Items cannot be returned once assembled.

Installation & Assembly

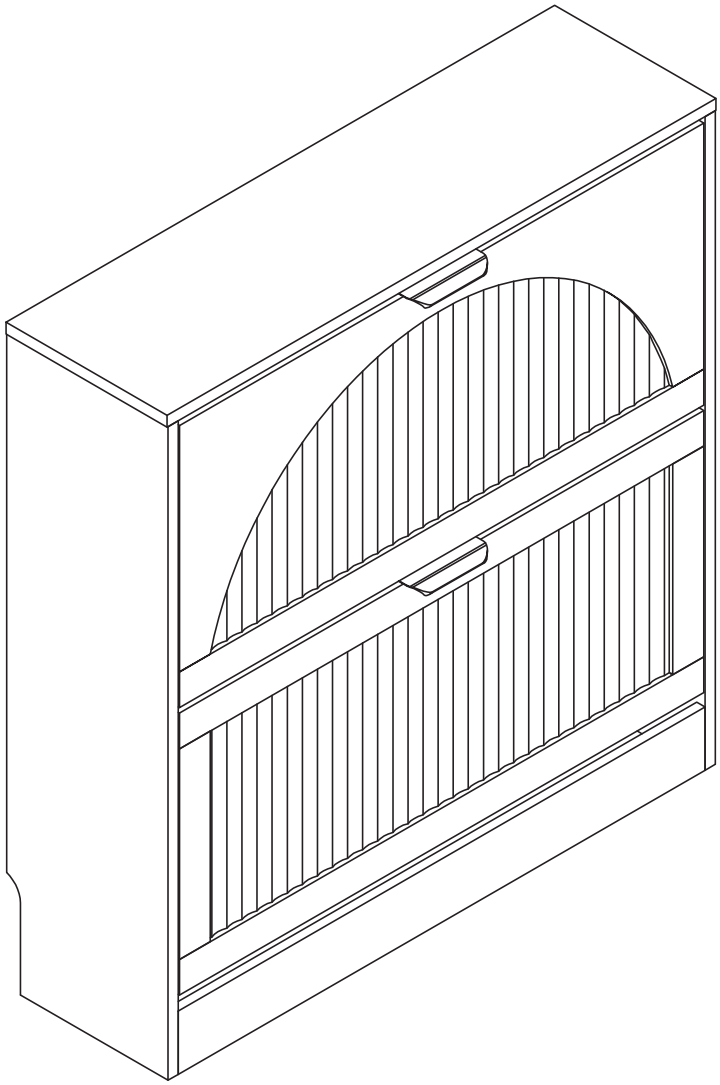


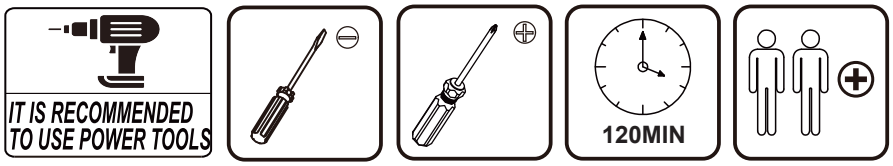


***EN*_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

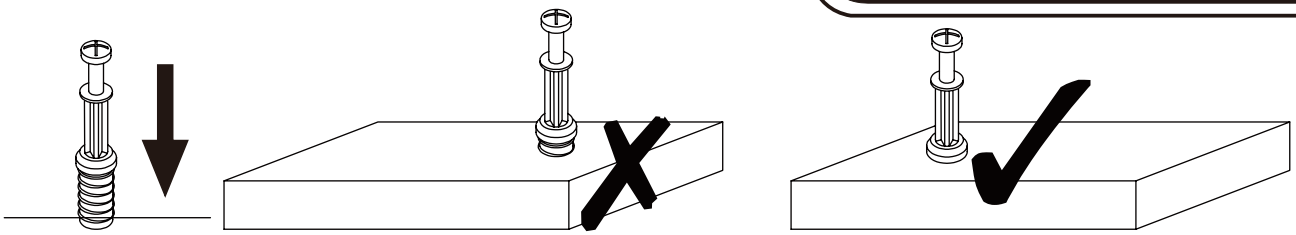


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel.Do not overtighten or undertighten.

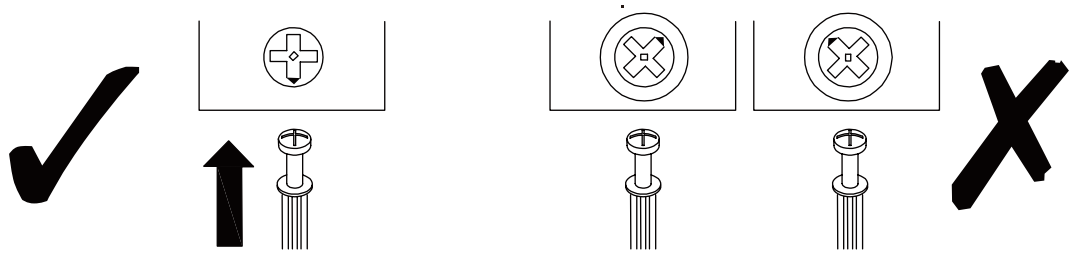











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

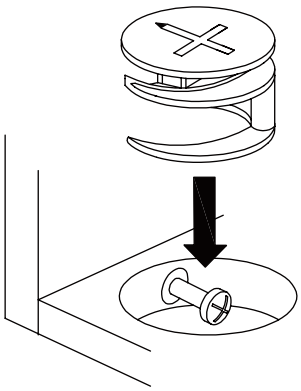



EN_ Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

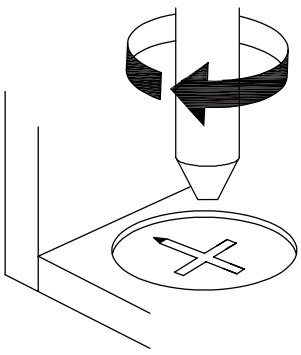


EN_ Turn cam lock clockwise to tighten.

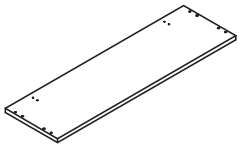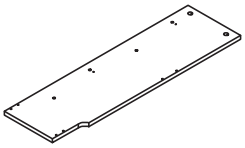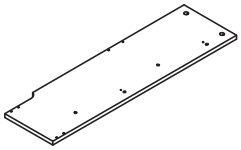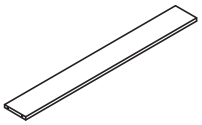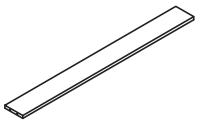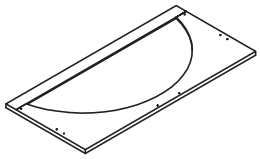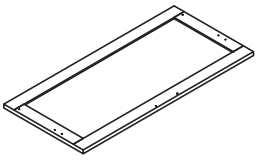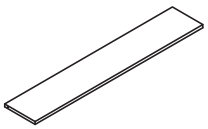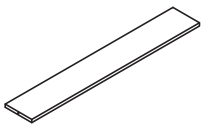NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x2	
⑥		x1	
⑦		x1	
⑧		x4	
⑨		x2	
	 Hardware Kit	x1	

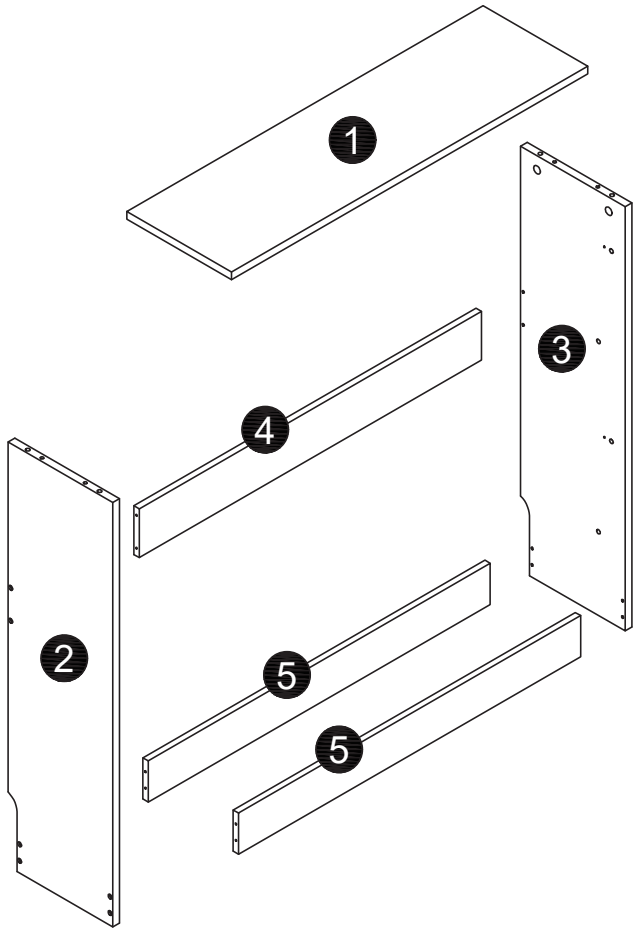
1
3
4
2
5
5

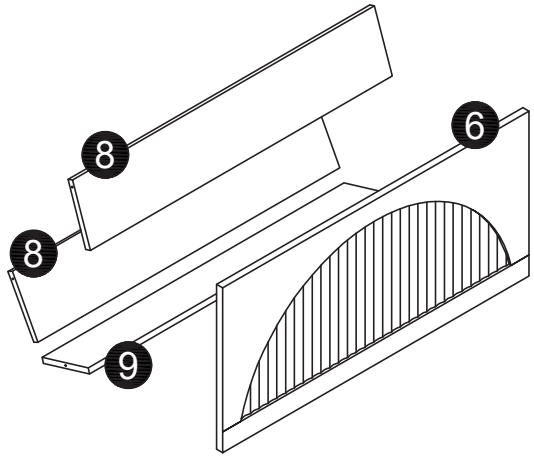
8
6
8
9

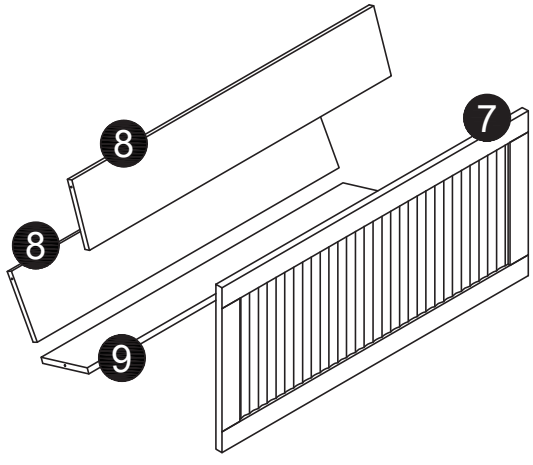

8
7
8
9

HARDWARE

A x4 Ø6x35mm	B x4 Ø15x10mm	C x4 Ø6x30mm	D x14 Ø4x35mm +1(spare)	E x32 Ø3.5x12mm +3(spare)	F x4 +1(spare)
G x4 +1(spare)	H x4 +1(spare)	I x2	J x12 +2(spare)	K x2	L x2
M x2 M-1 M-2	R x2				


E x4	F x4


01

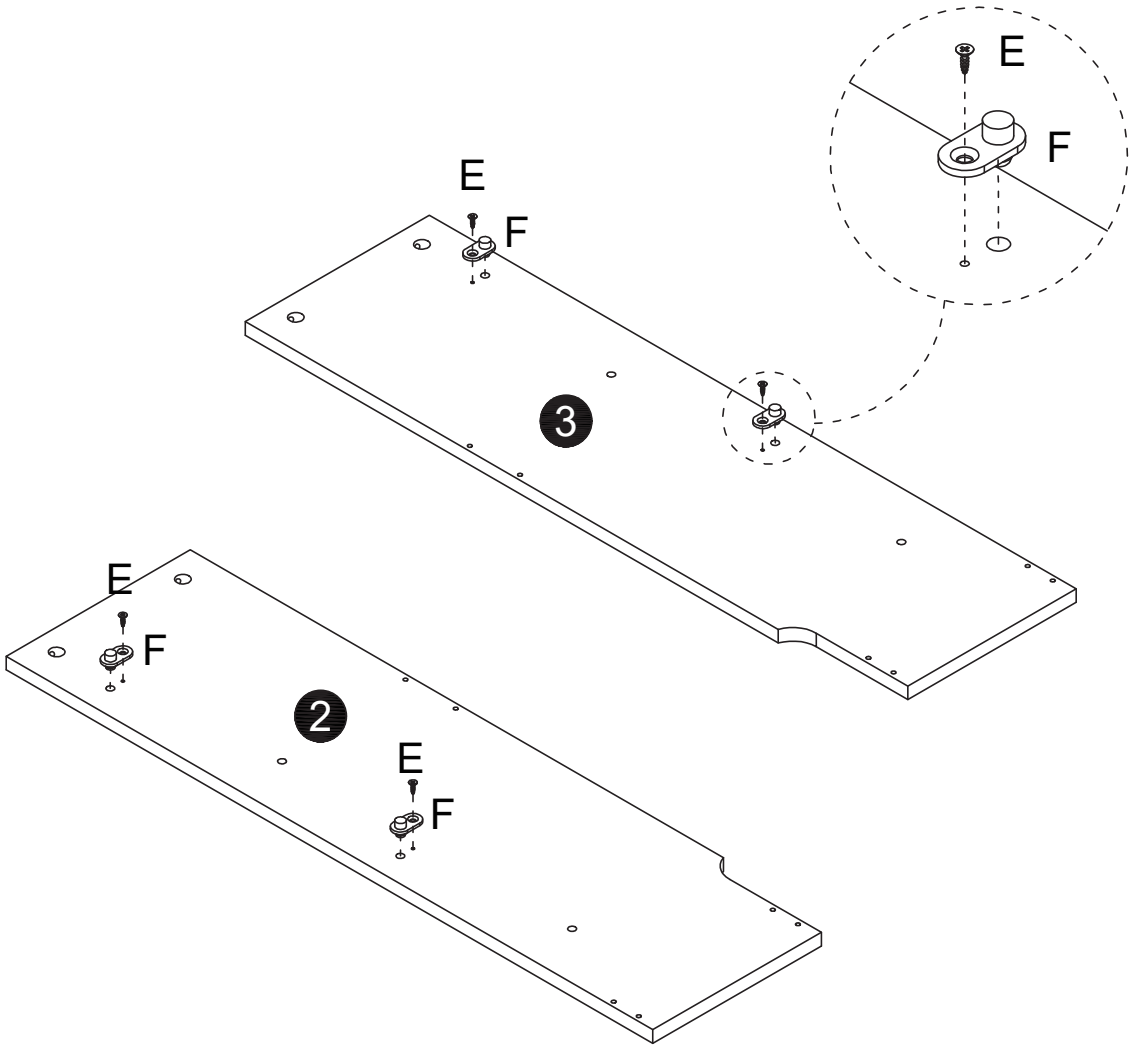

02


D x12



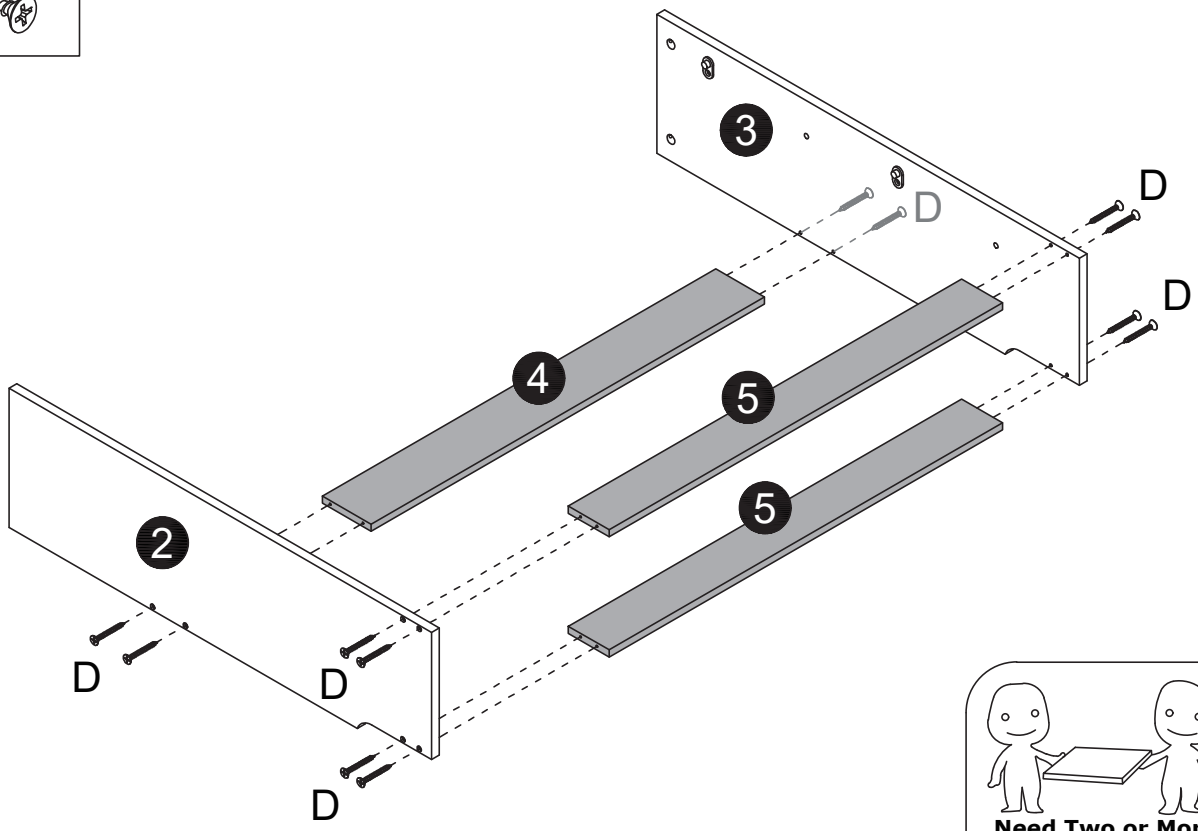

03


A x4



M x2



M-1 M-2

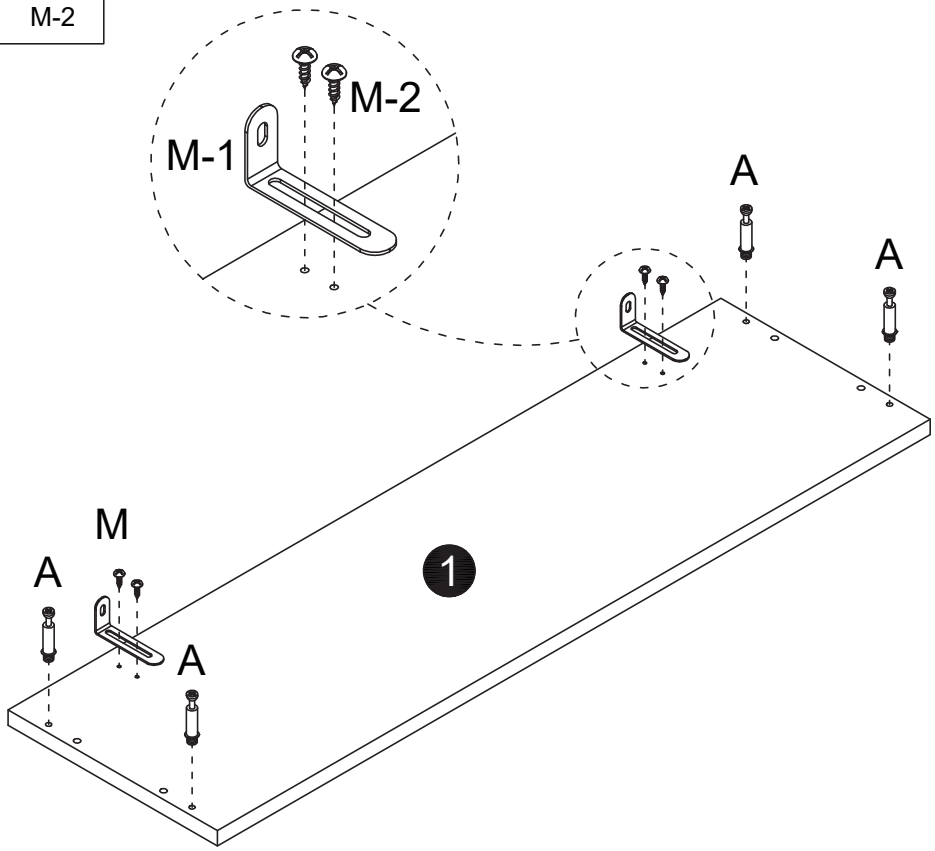



B x4




C x4



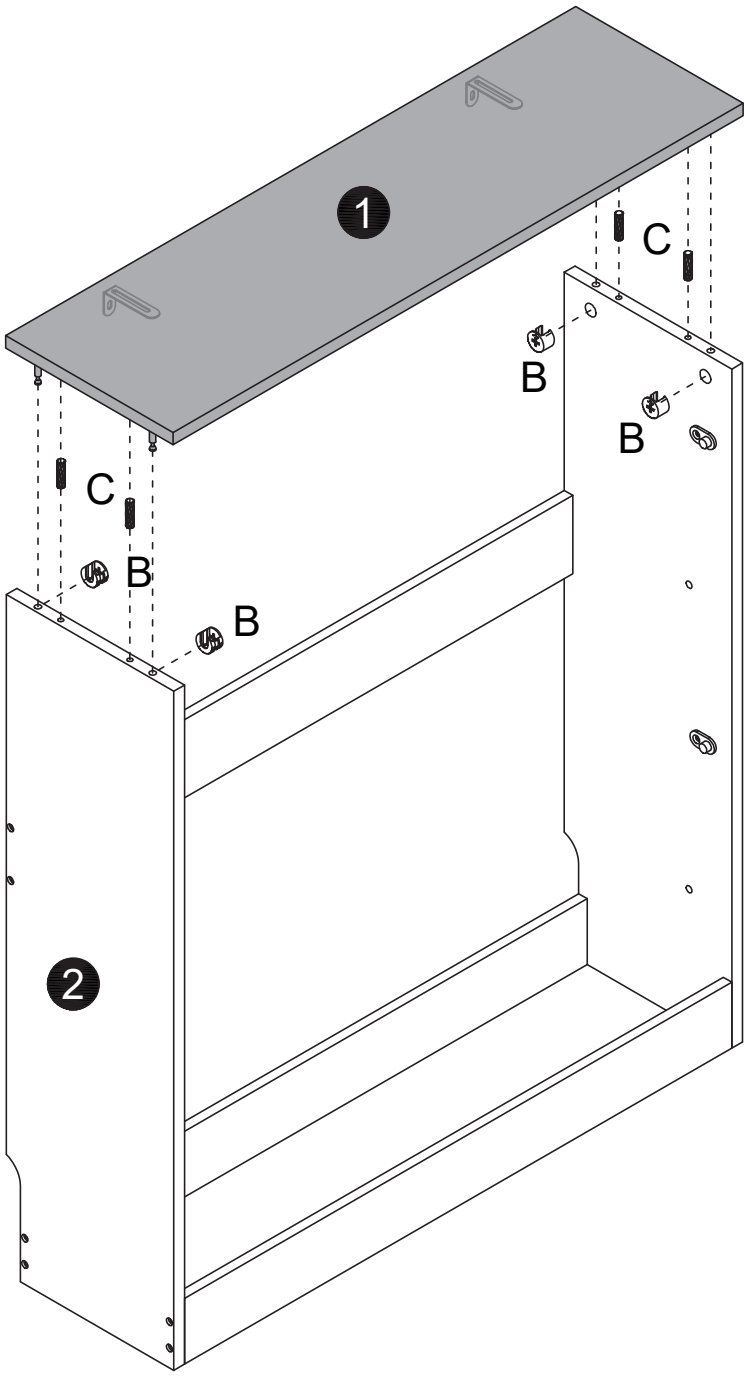

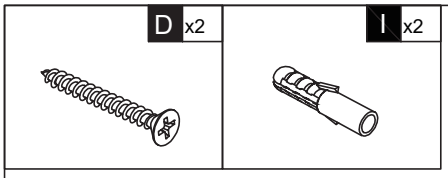


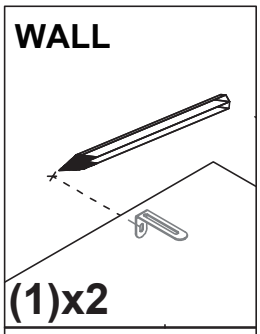


First, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.




Then use a tape drill to make holes in the wall that are suitable for the product screws.

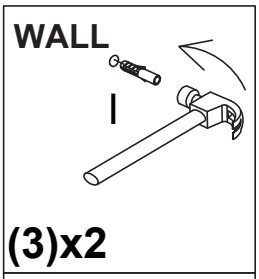

Then,put the expansion bolt into the hole

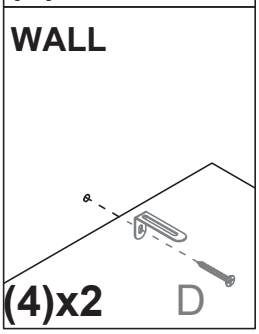


Finally,pass the matching screws throughthe "anti-rewind" and tighten themto fix them on the wall.

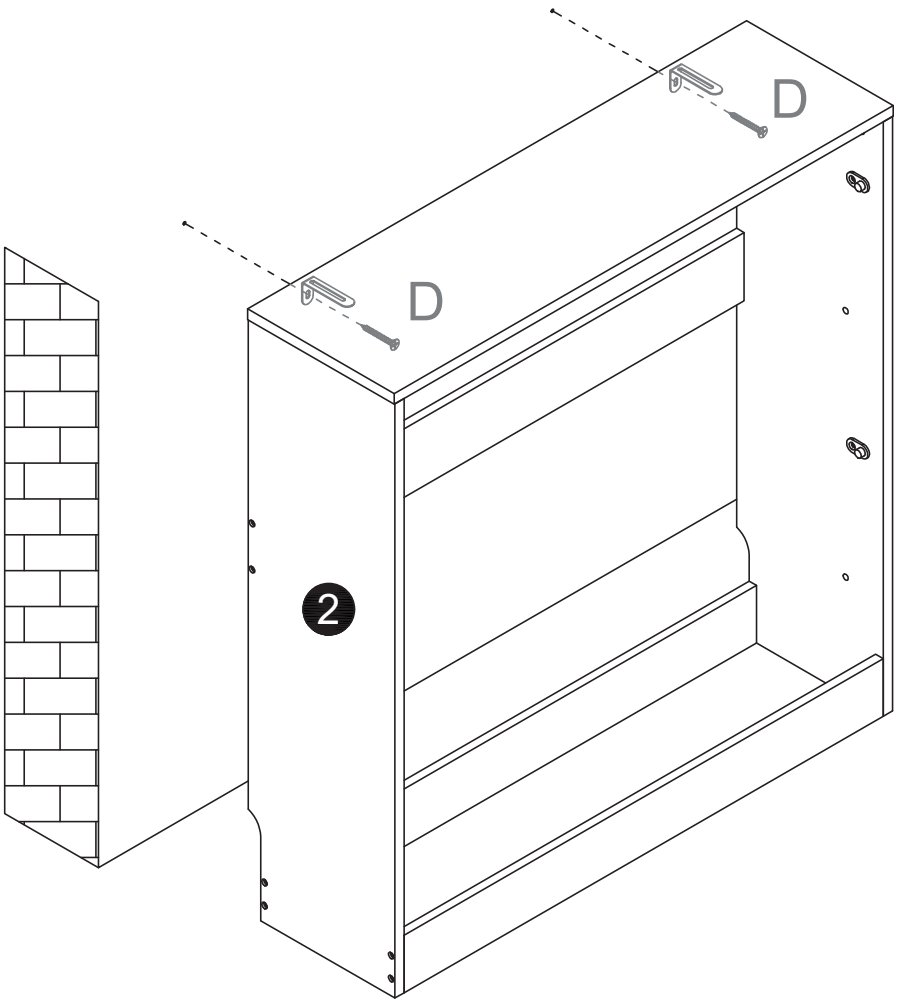


E x6




L x1




R x1



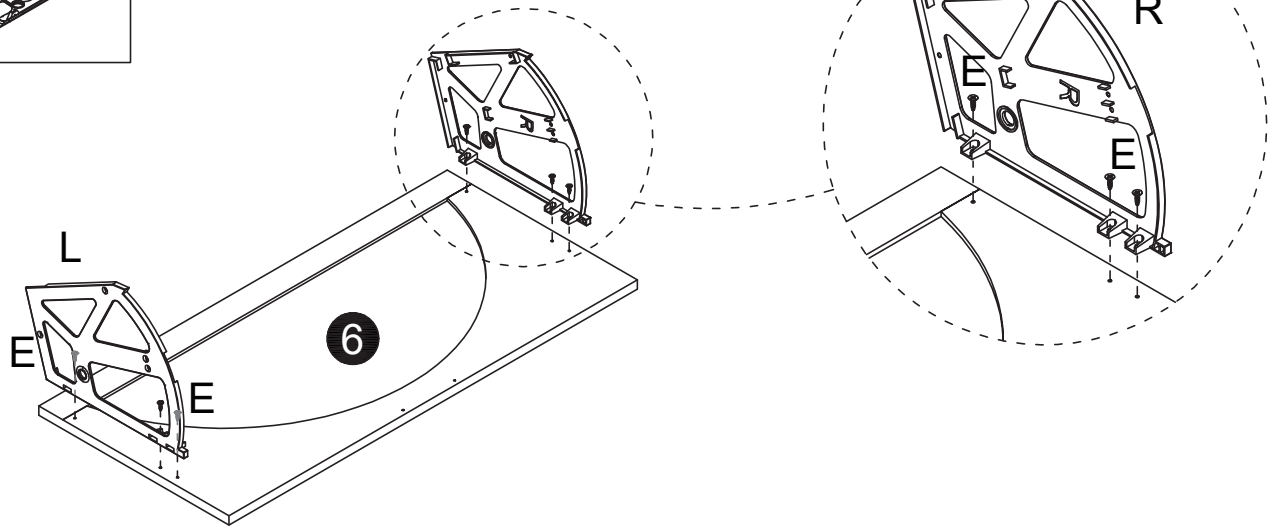


E x2



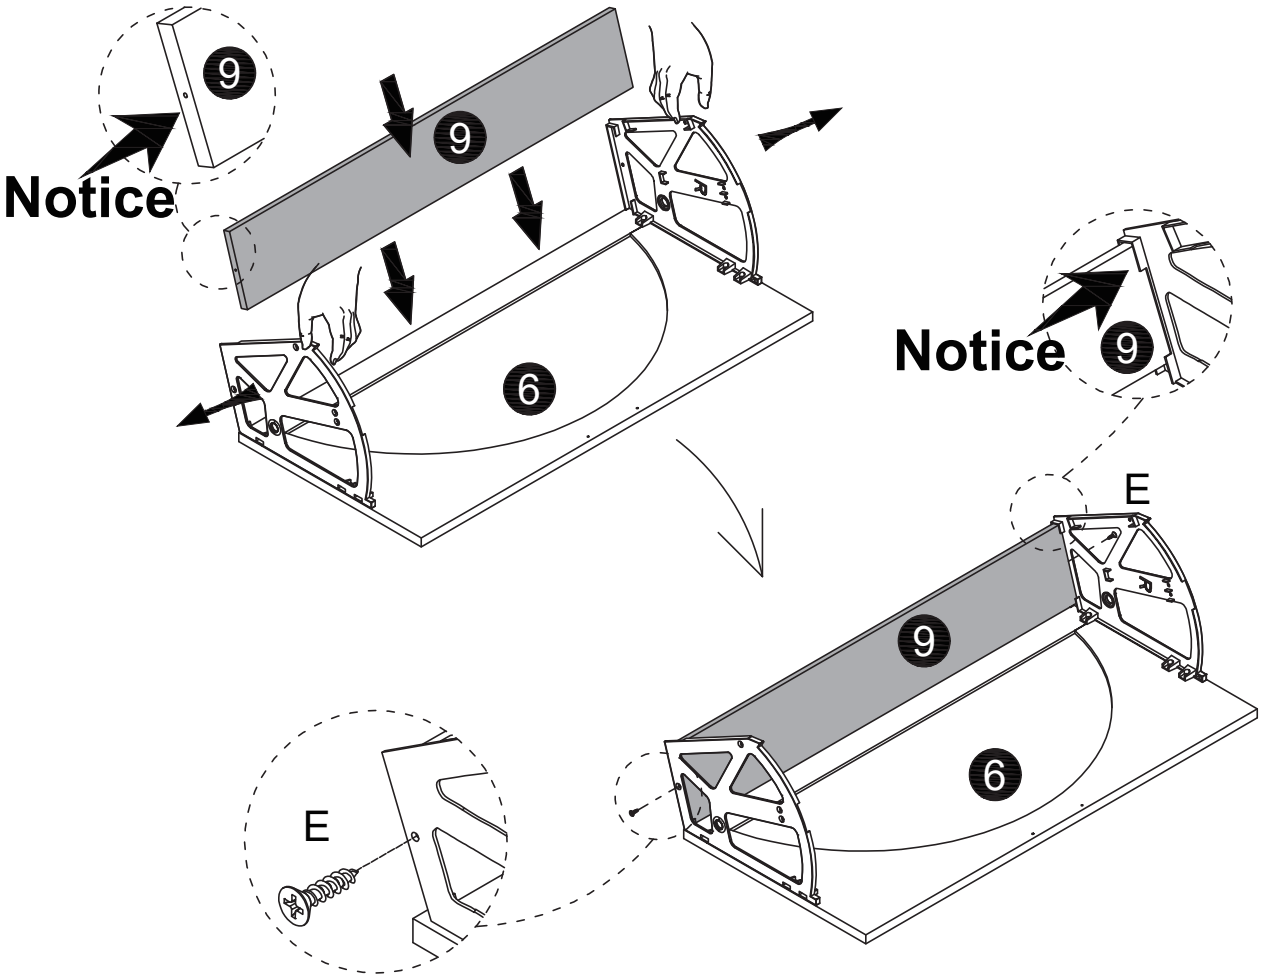

E x2




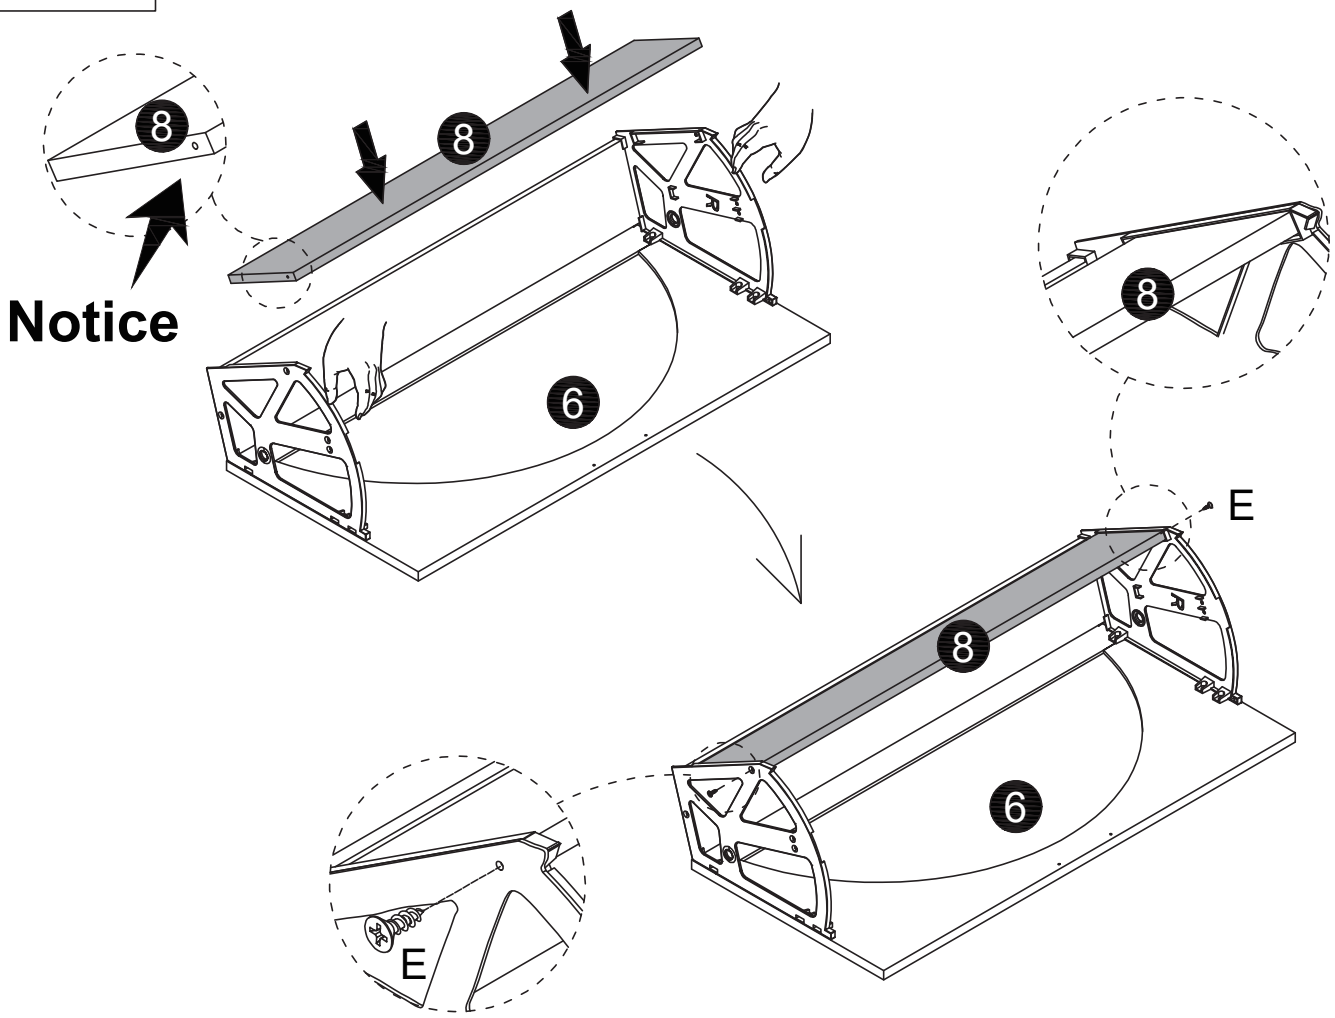



E x2



K x1




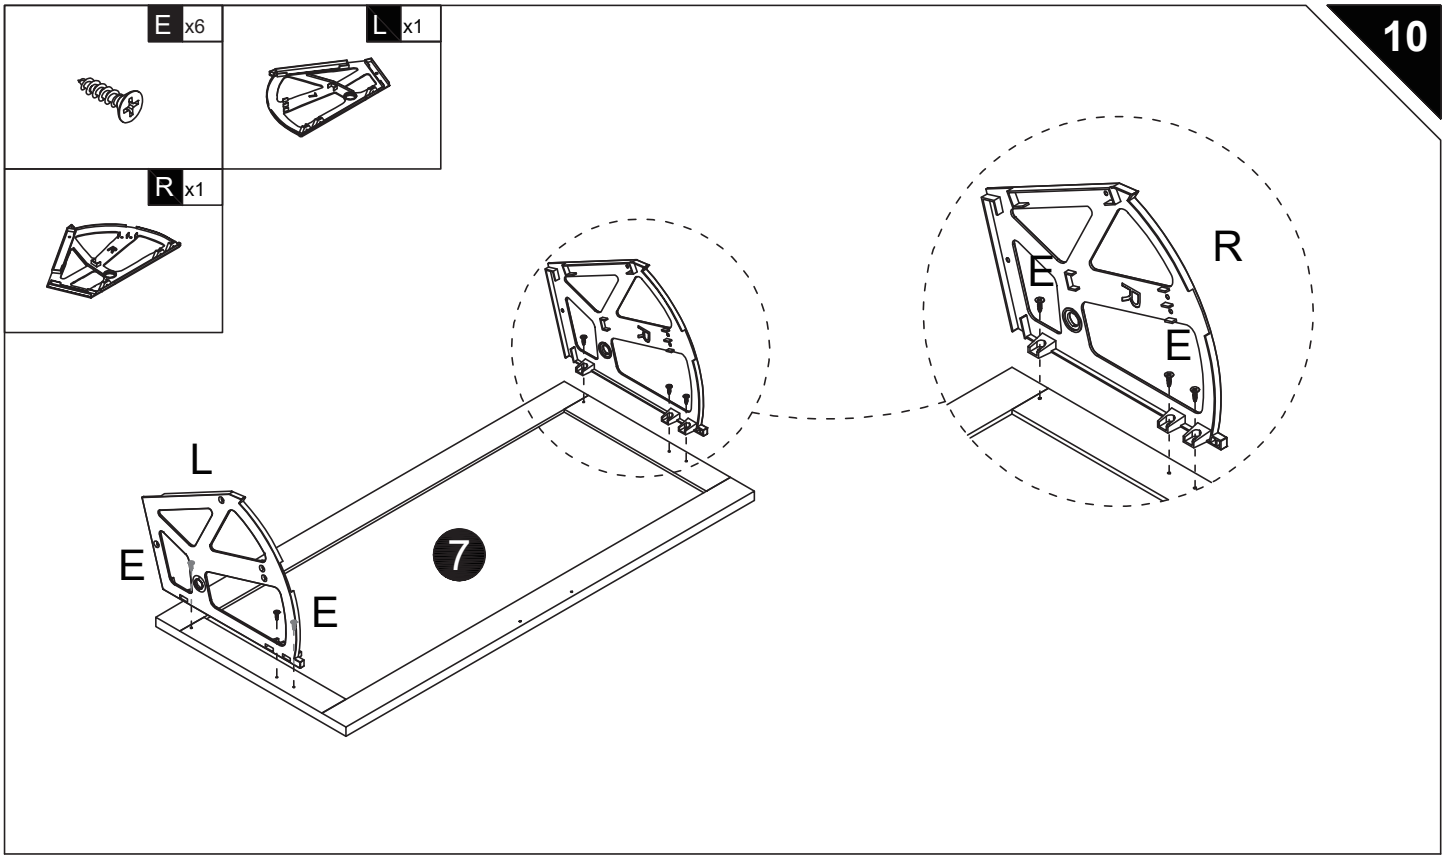
E x6
L x1
R x1
L
E
E
7
R
E
E

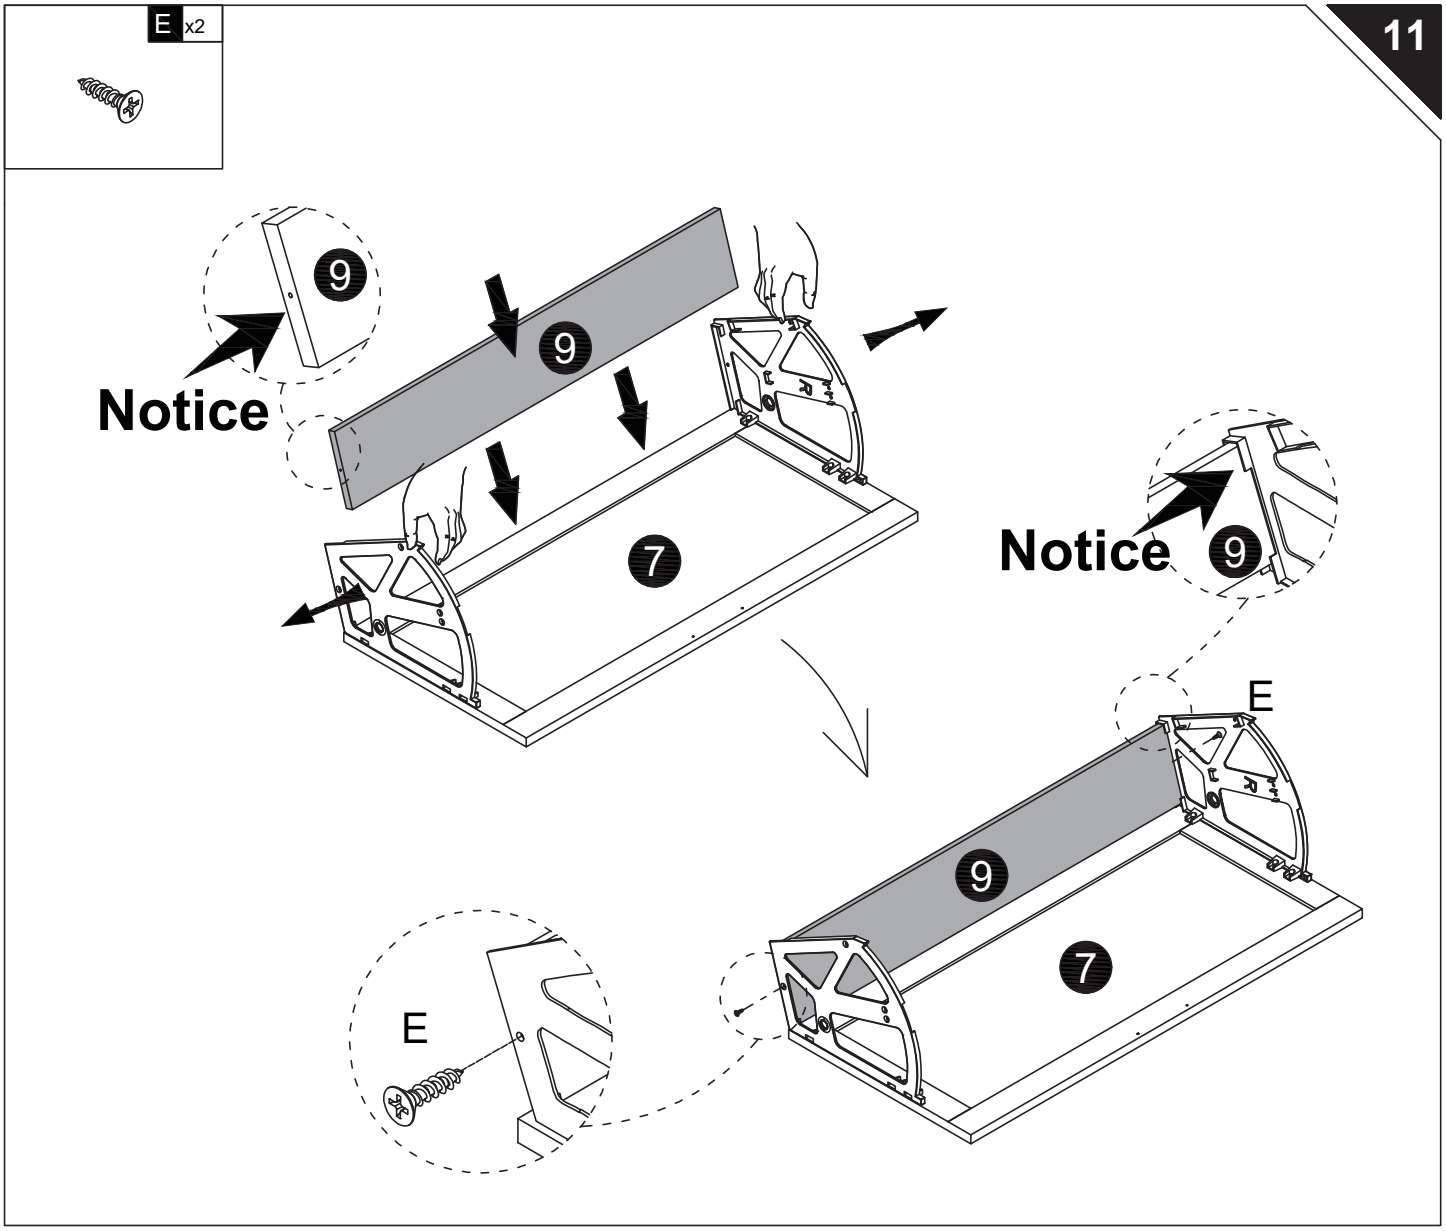
E x2
9
Notice
9
7
Notice
9
E
9
7
E

E x2




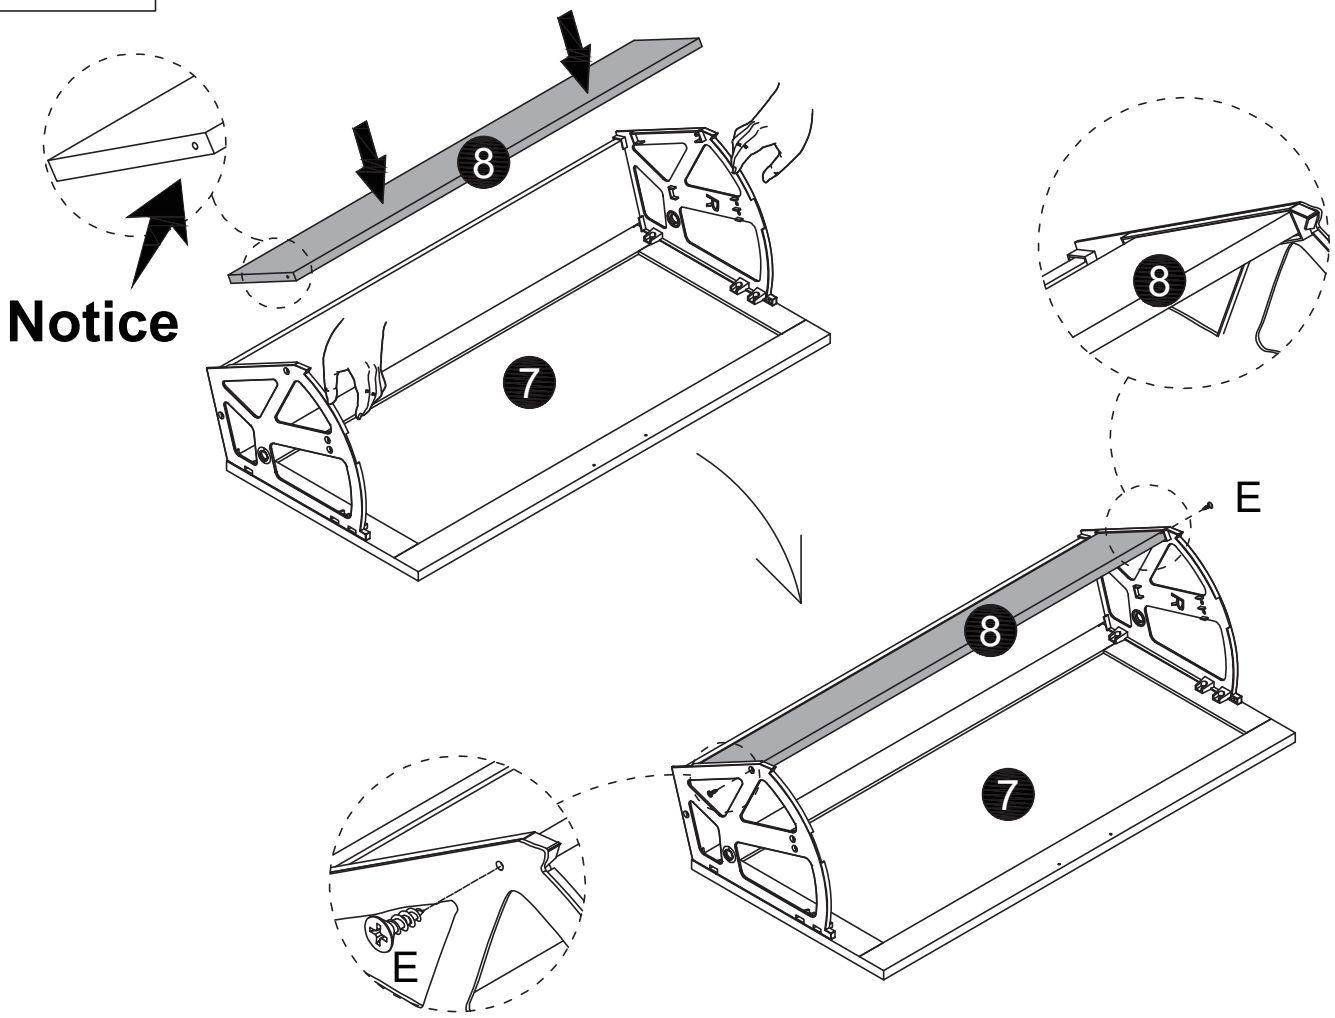


E x2



K x1




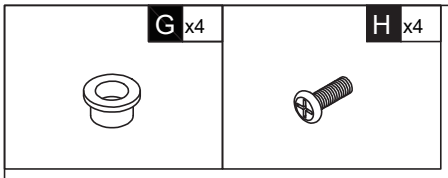



Note: When installing H, it is sufficient to reach 90% progress. Installing 100% may cause damage to G.

E x4

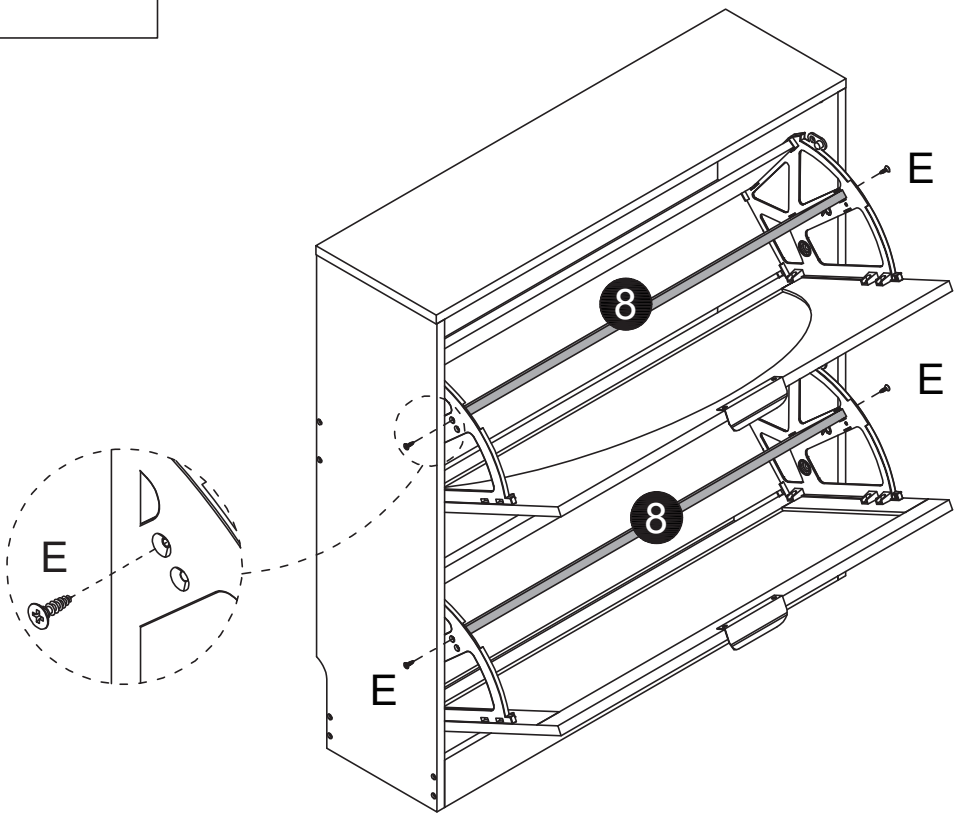

J x12

