

ASSEMBLY INSTRUCTION

MODEL NUMBER: 2-86F

NOTES:


- Do not skip any step.
- Do not fully tight screws until all the bed parts are assembled.










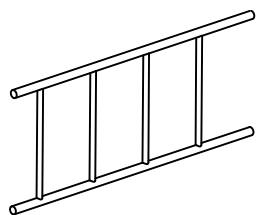
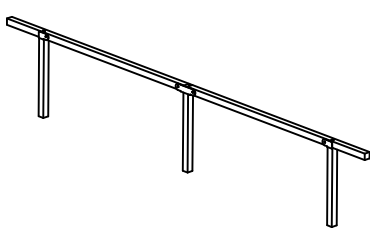















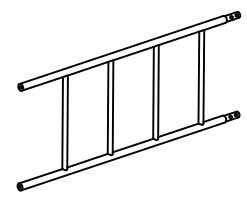
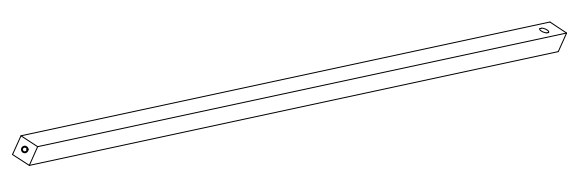
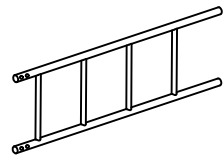
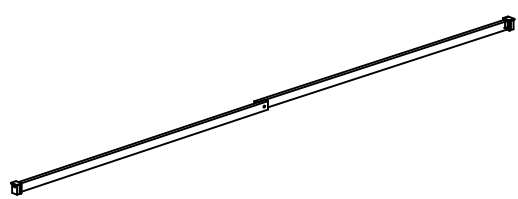
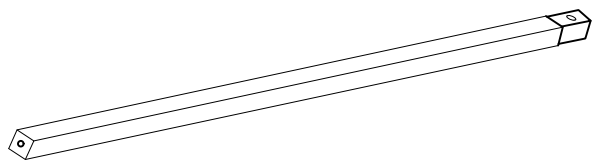
WARNING:

- WARNIND FOR YOUNG CHILDREN-This product contains small components,please ensure that they are kept away from small children while assembling.



Warranty Information:

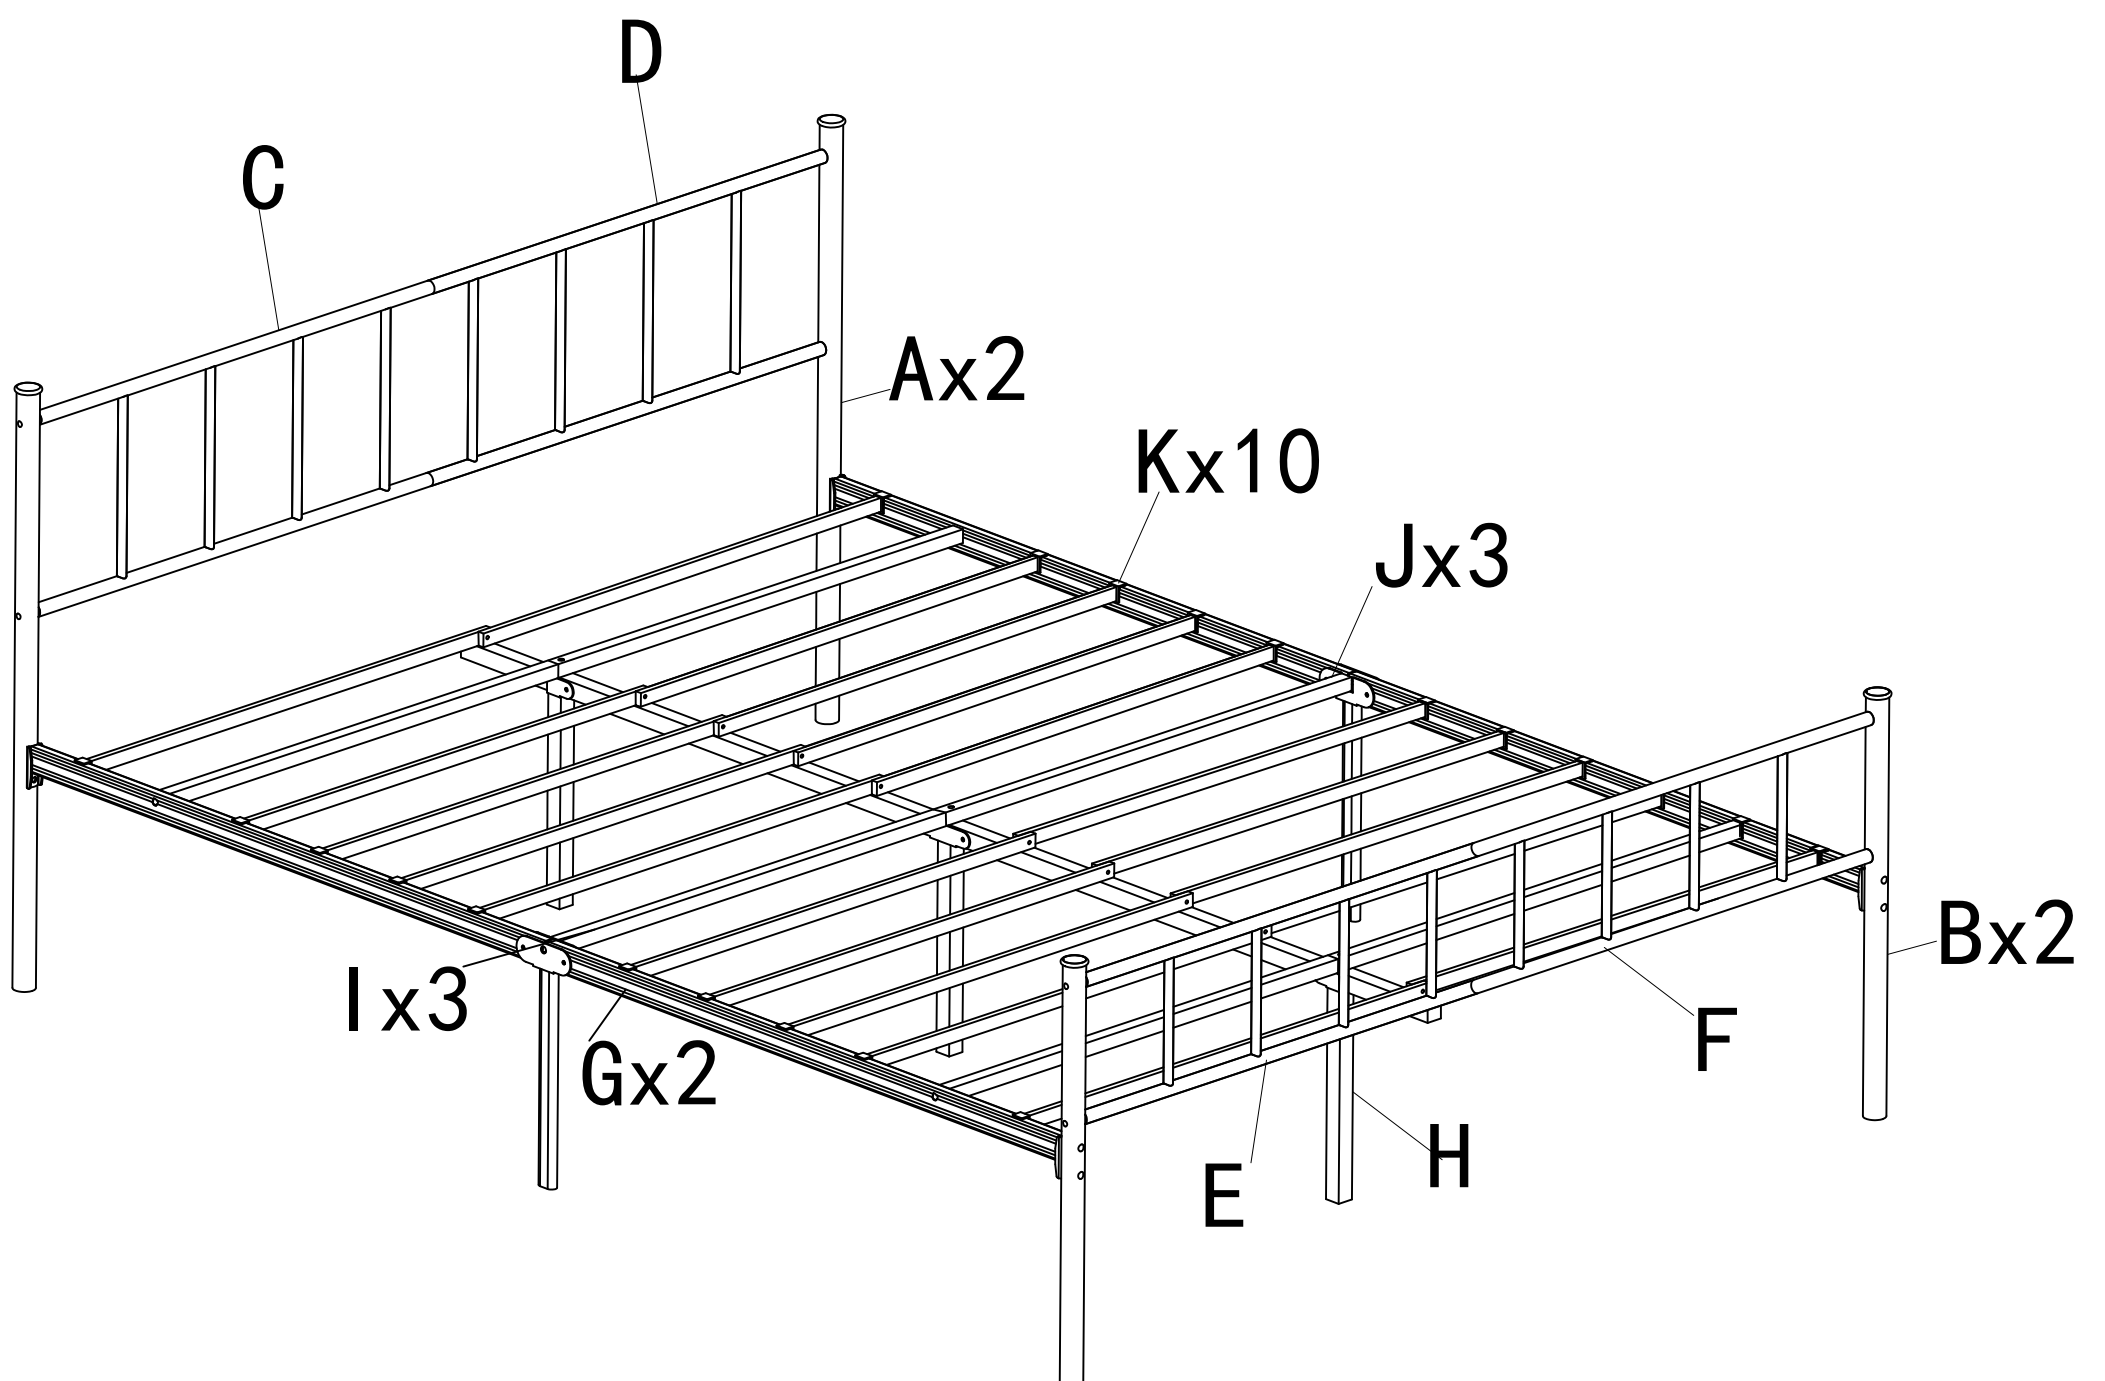- We warran ty th is product to be free from defects in materials.If u have any query about bed , pls contact our after-salesupportemail: Pakkahome@outlook.com

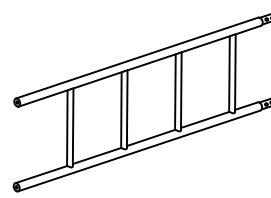

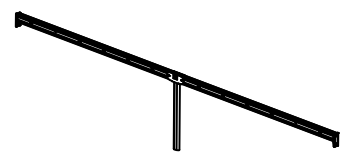
<p style="text-align: center;">A</p>	<p style="text-align: center;">F</p>	<p>aa  M6×55mm 17</p>																		
<p style="text-align: center;"></p> <p style="text-align: center;">2PCS</p>	<p style="text-align: center;"></p> <p style="text-align: center;">1PC</p>	<p>bb  M8×50mm 8</p>																		
<p style="text-align: center;">B</p>	<p style="text-align: center;">G</p>	<p>cc  M6×12mm 8</p>																		
<p style="text-align: center;"></p> <p style="text-align: center;">2PCS</p>	<p style="text-align: center;"></p> <p style="text-align: center;">2PCS</p>	<p>dd  4×4mm 1</p>																		
<p style="text-align: center;">C</p>	<p style="text-align: center;">H</p>	<p>ee  16</p>																		
<p style="text-align: center;"></p> <p style="text-align: center;">1PC</p>	<p style="text-align: center;"></p> <p style="text-align: center;">1PC</p>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td data-bbox="1379 1605 1574 1717" rowspan="5" style="text-align: center; vertical-align: middle;">SPARE</td> <td data-bbox="1574 1605 1688 1717" style="text-align: center;">aa</td> <td data-bbox="1688 1605 1933 1717" style="text-align: center;"></td> <td data-bbox="1933 1605 2072 1717" style="text-align: center;">1</td> </tr> <tr> <td data-bbox="1574 1717 1688 1829" style="text-align: center;">bb</td> <td data-bbox="1688 1717 1933 1829" style="text-align: center;"></td> <td data-bbox="1933 1717 2072 1829" style="text-align: center;">1</td> </tr> <tr> <td data-bbox="1574 1829 1688 1941" style="text-align: center;">cc</td> <td data-bbox="1688 1829 1933 1941" style="text-align: center;"></td> <td data-bbox="1933 1829 2072 1941" style="text-align: center;">1</td> </tr> <tr> <td data-bbox="1574 1941 1688 2053" style="text-align: center;">ee</td> <td data-bbox="1688 1941 1933 2053" style="text-align: center;"></td> <td data-bbox="1933 1941 2072 2053" style="text-align: center;">1</td> </tr> <tr> <td data-bbox="1574 2053 1688 2165" style="text-align: center;">gg</td> <td data-bbox="1688 2053 1933 2165" style="text-align: center;"></td> <td data-bbox="1933 2053 2072 2165" style="text-align: center;">2</td> </tr> </table>			SPARE	aa		1	bb		1	cc		1	ee		1	gg		2
SPARE	aa						1													
	bb						1													
	cc						1													
	ee						1													
	gg		2																	
<p style="text-align: center;">D</p>	<p style="text-align: center;">J</p>	<p style="text-align: center;"></p> <p style="text-align: center;">1PC</p>																		
<p style="text-align: center;">E</p>	<p style="text-align: center;">K</p>	<p style="text-align: center;"></p> <p style="text-align: center;">3PCS</p>																		
<p style="text-align: center;"></p> <p style="text-align: center;">1PC</p>	<p style="text-align: center;"></p> <p style="text-align: center;">10PCS</p>																			
<p style="text-align: center;">I</p>																				
<p style="text-align: center;"></p> <p style="text-align: center;">3PCS</p>																				
		<div style="border: 1px solid black; display: inline-block; padding: 5px 15px; font-size: 24px; font-weight: bold;">2/8</div>																		



Step 1


cc		M6×12mm	4
dd		4×4mm	1




Note: For easy setup intention, do not tighten screws during the installation process

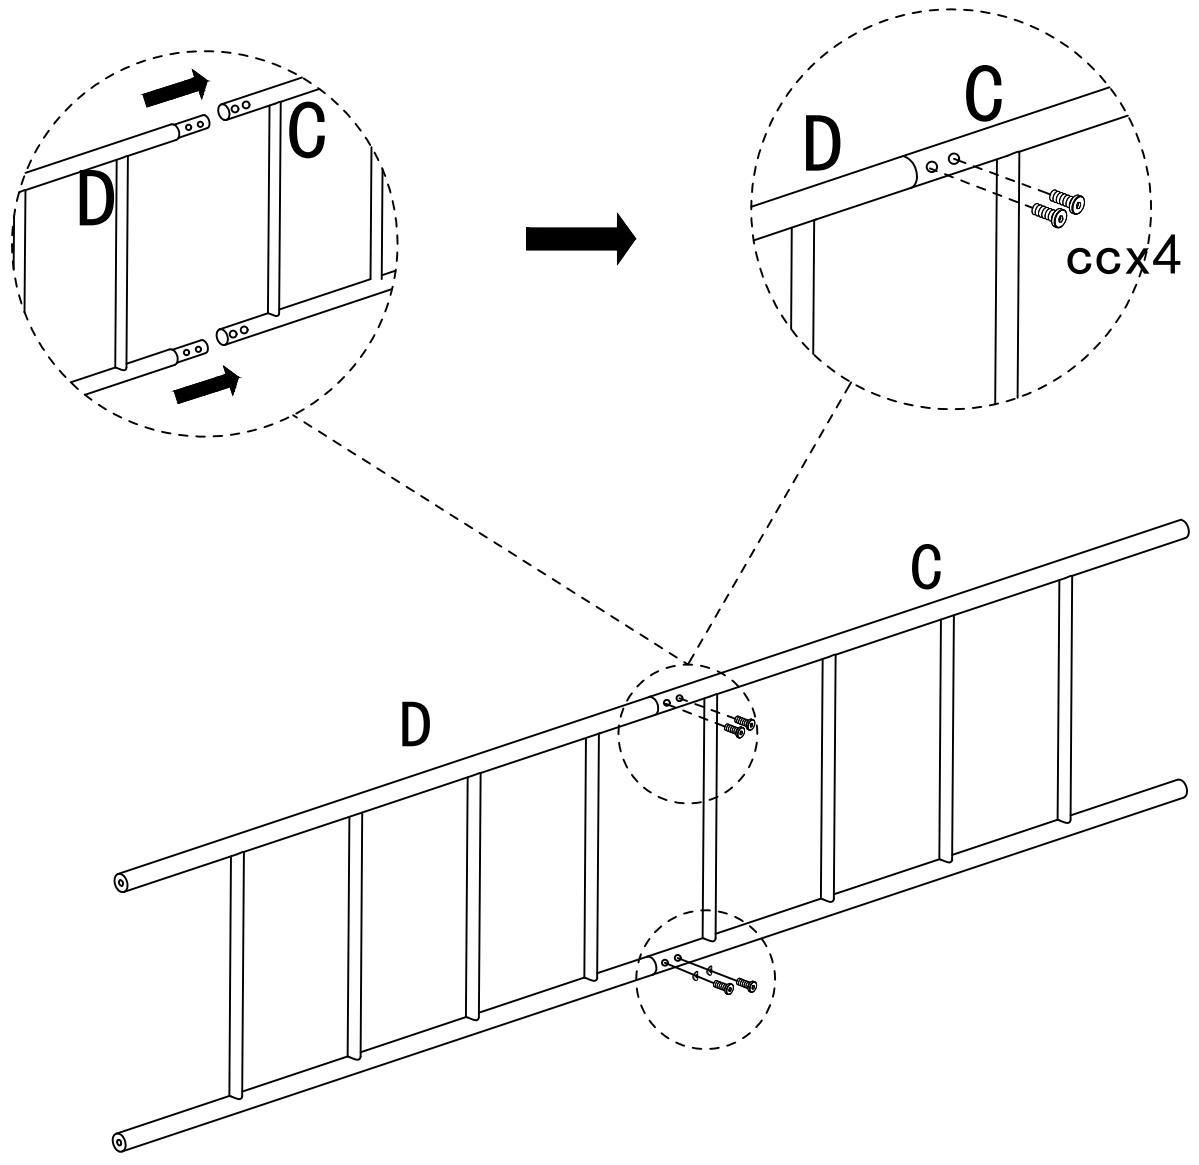





Step 2


cc		M6×12mm	4
dd		4×4mm	1

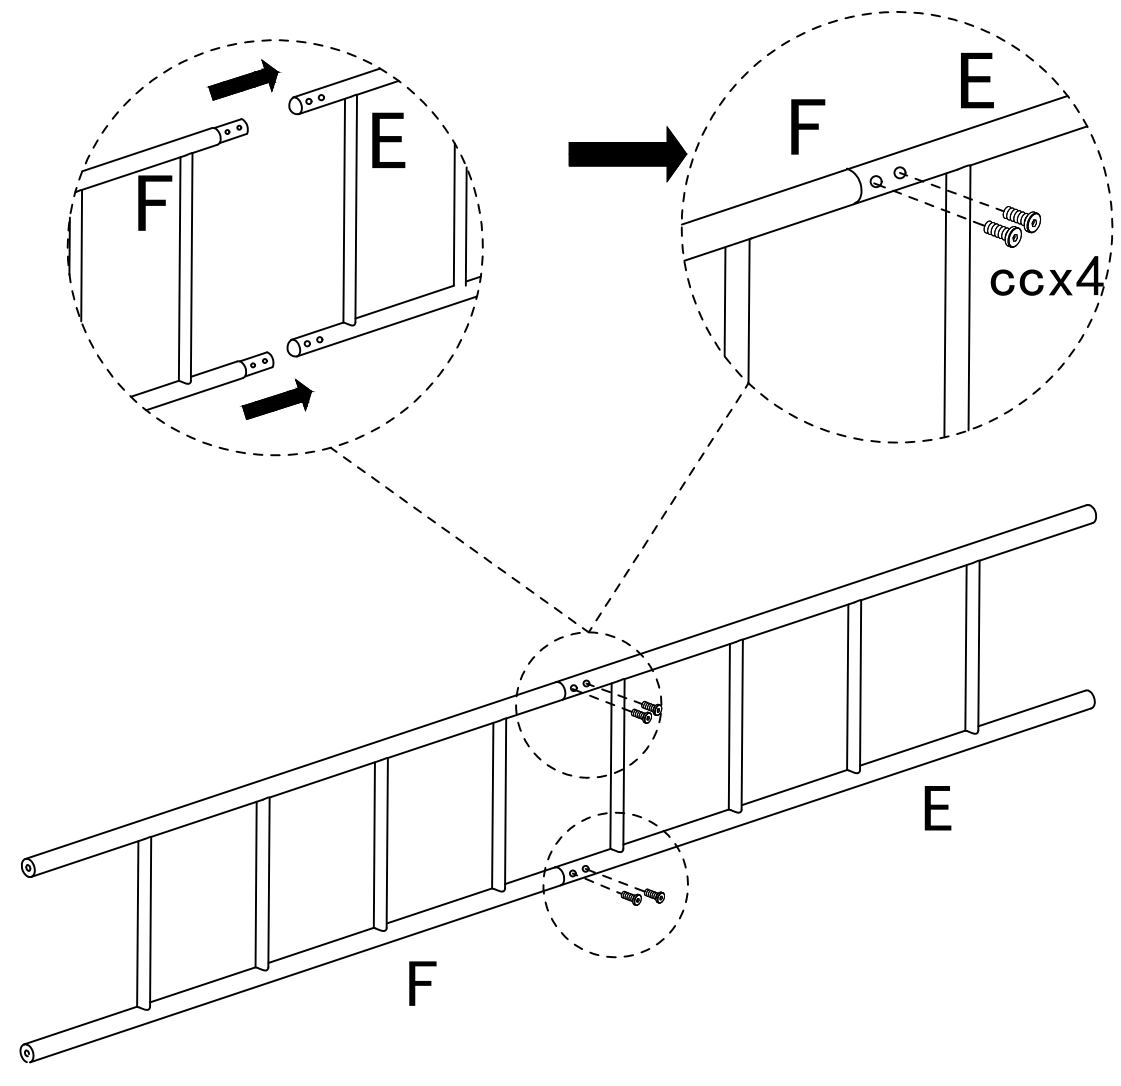





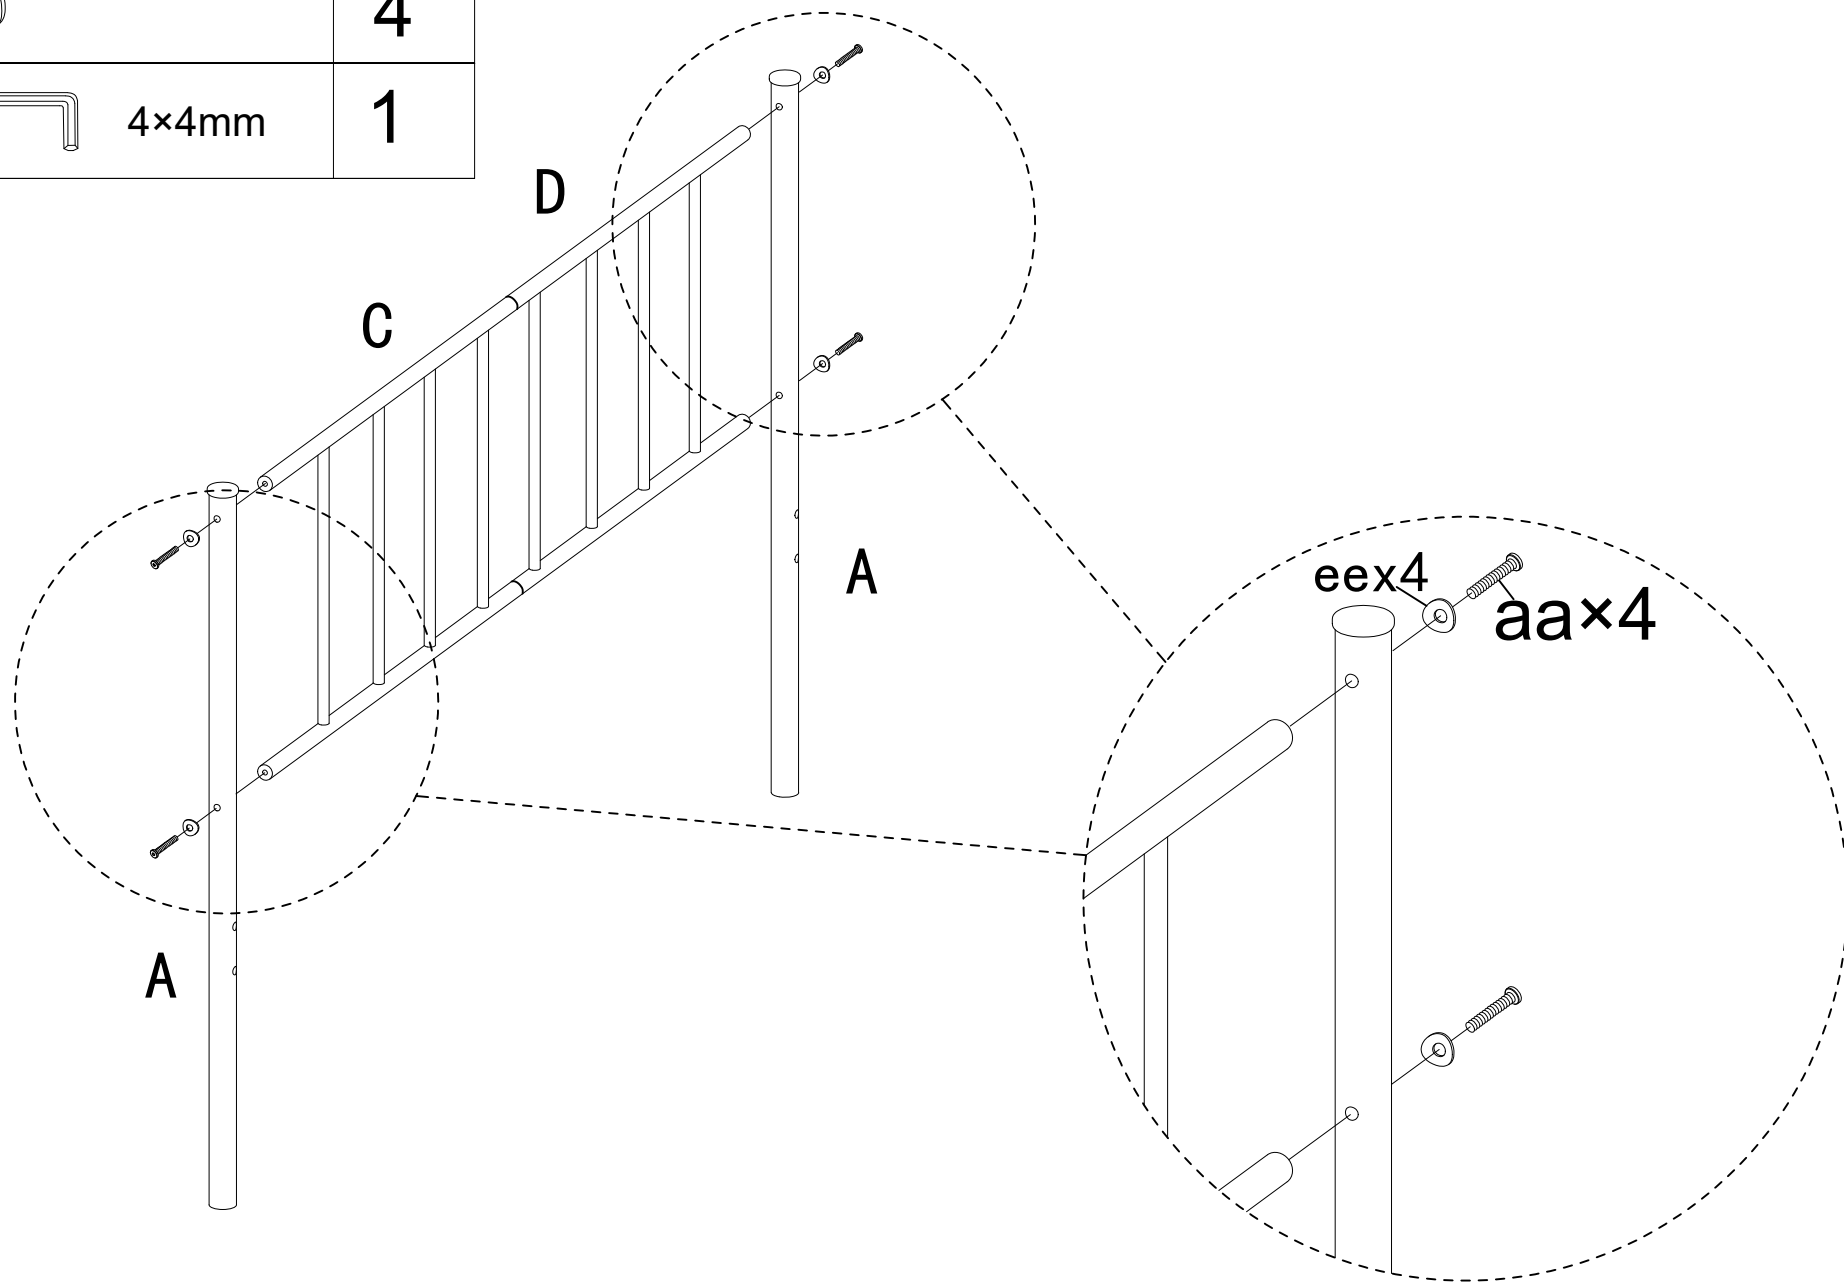aa	 M6×55mm	4
ee		4
dd	 4×4mm	1





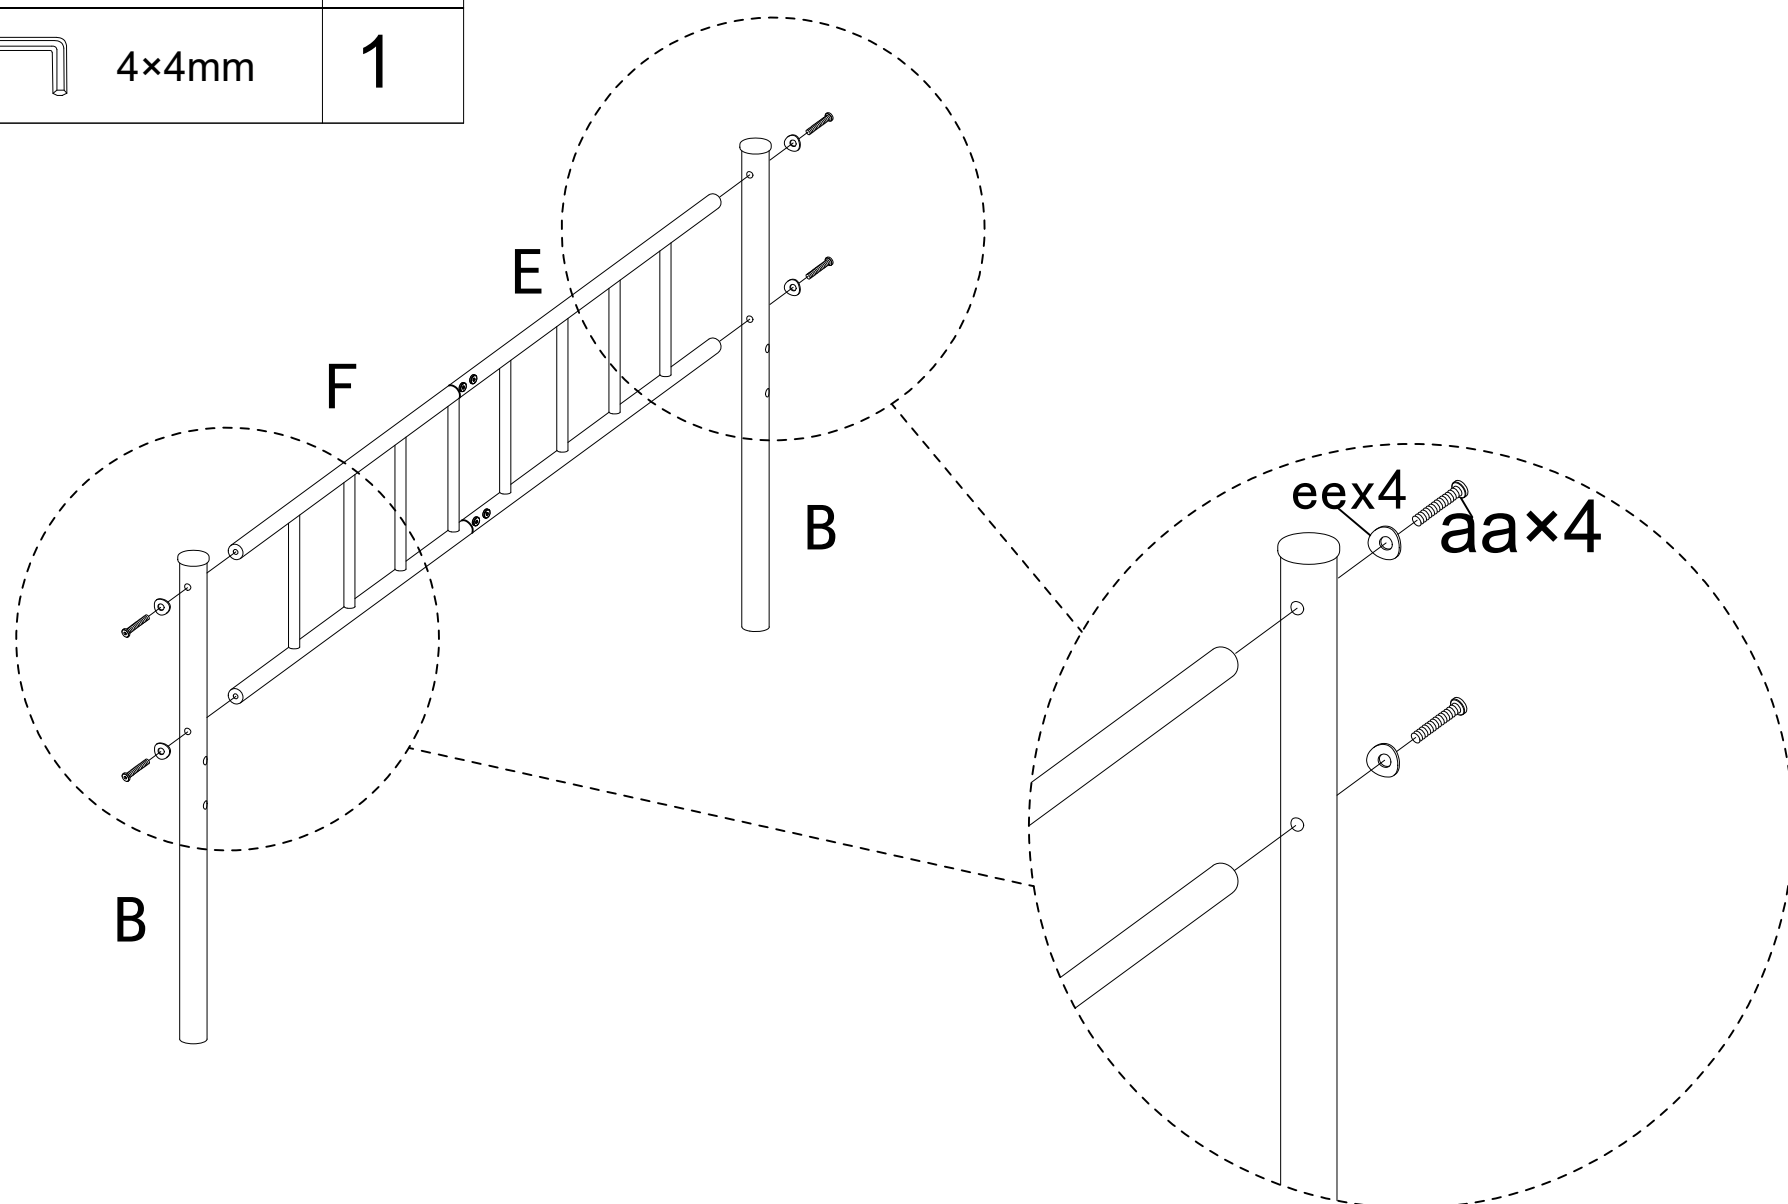
aa	 M6×55mm	4
ee		4
dd	 4×4mm	1

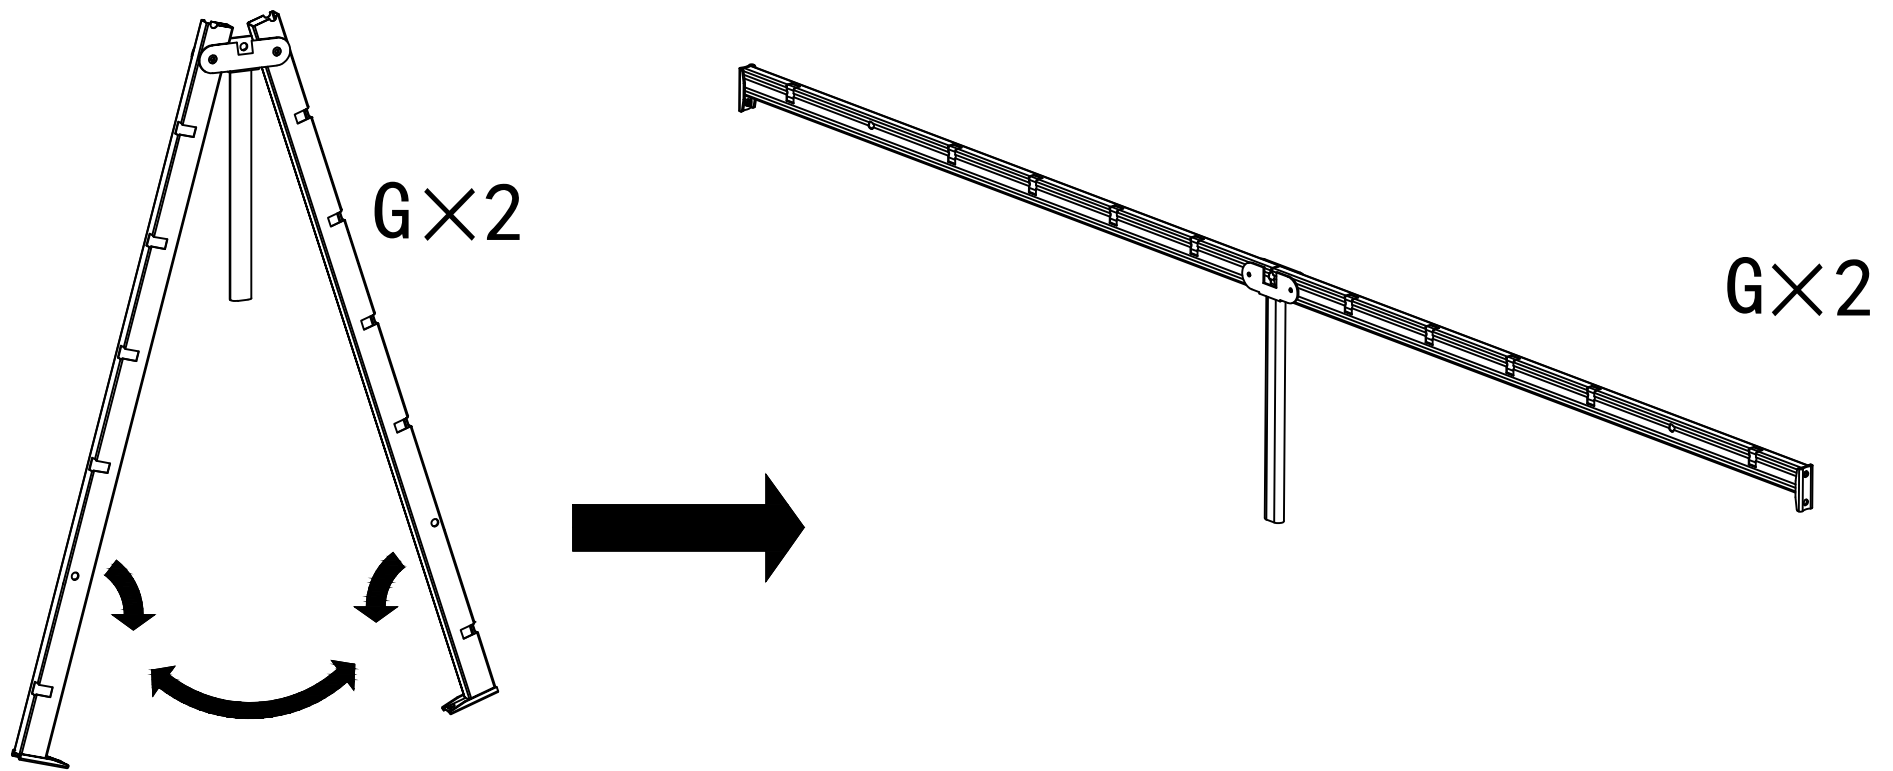



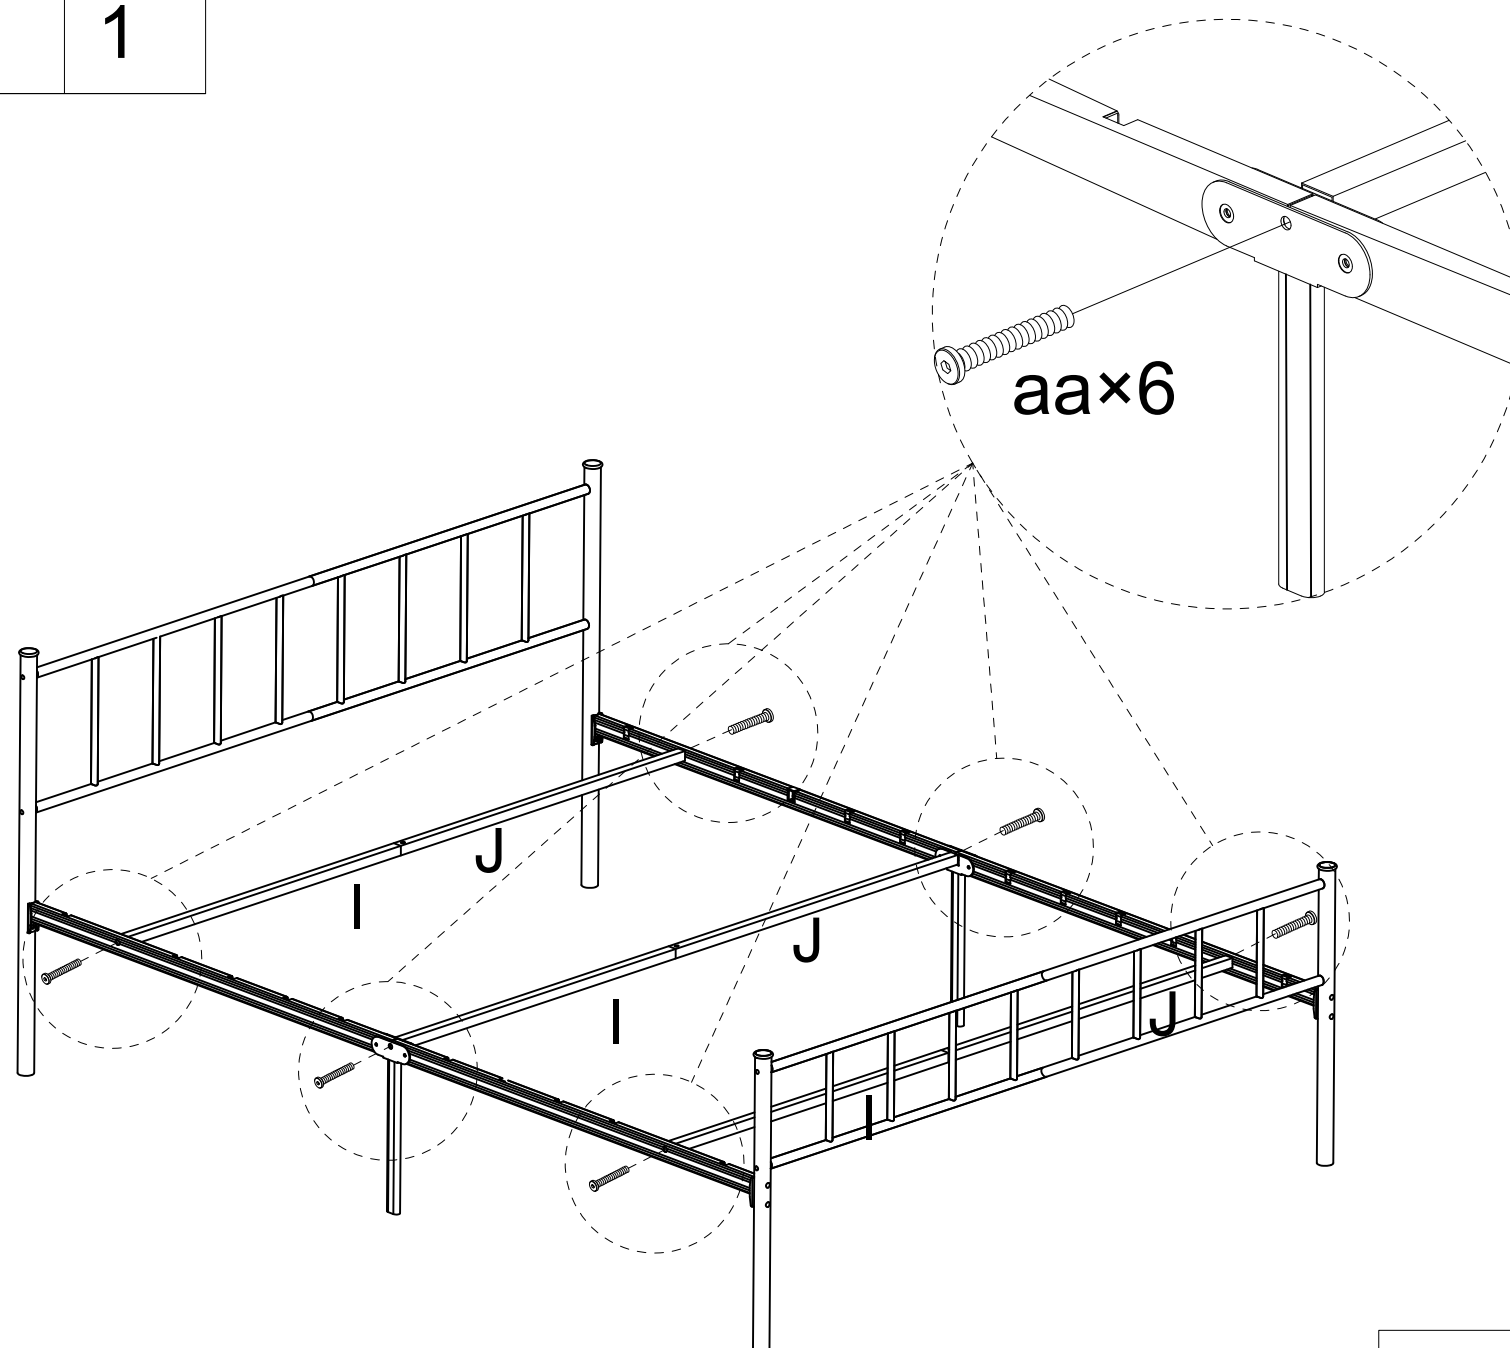




bb	 M8x50mm	8
ee		8
dd	 4x4mm	1

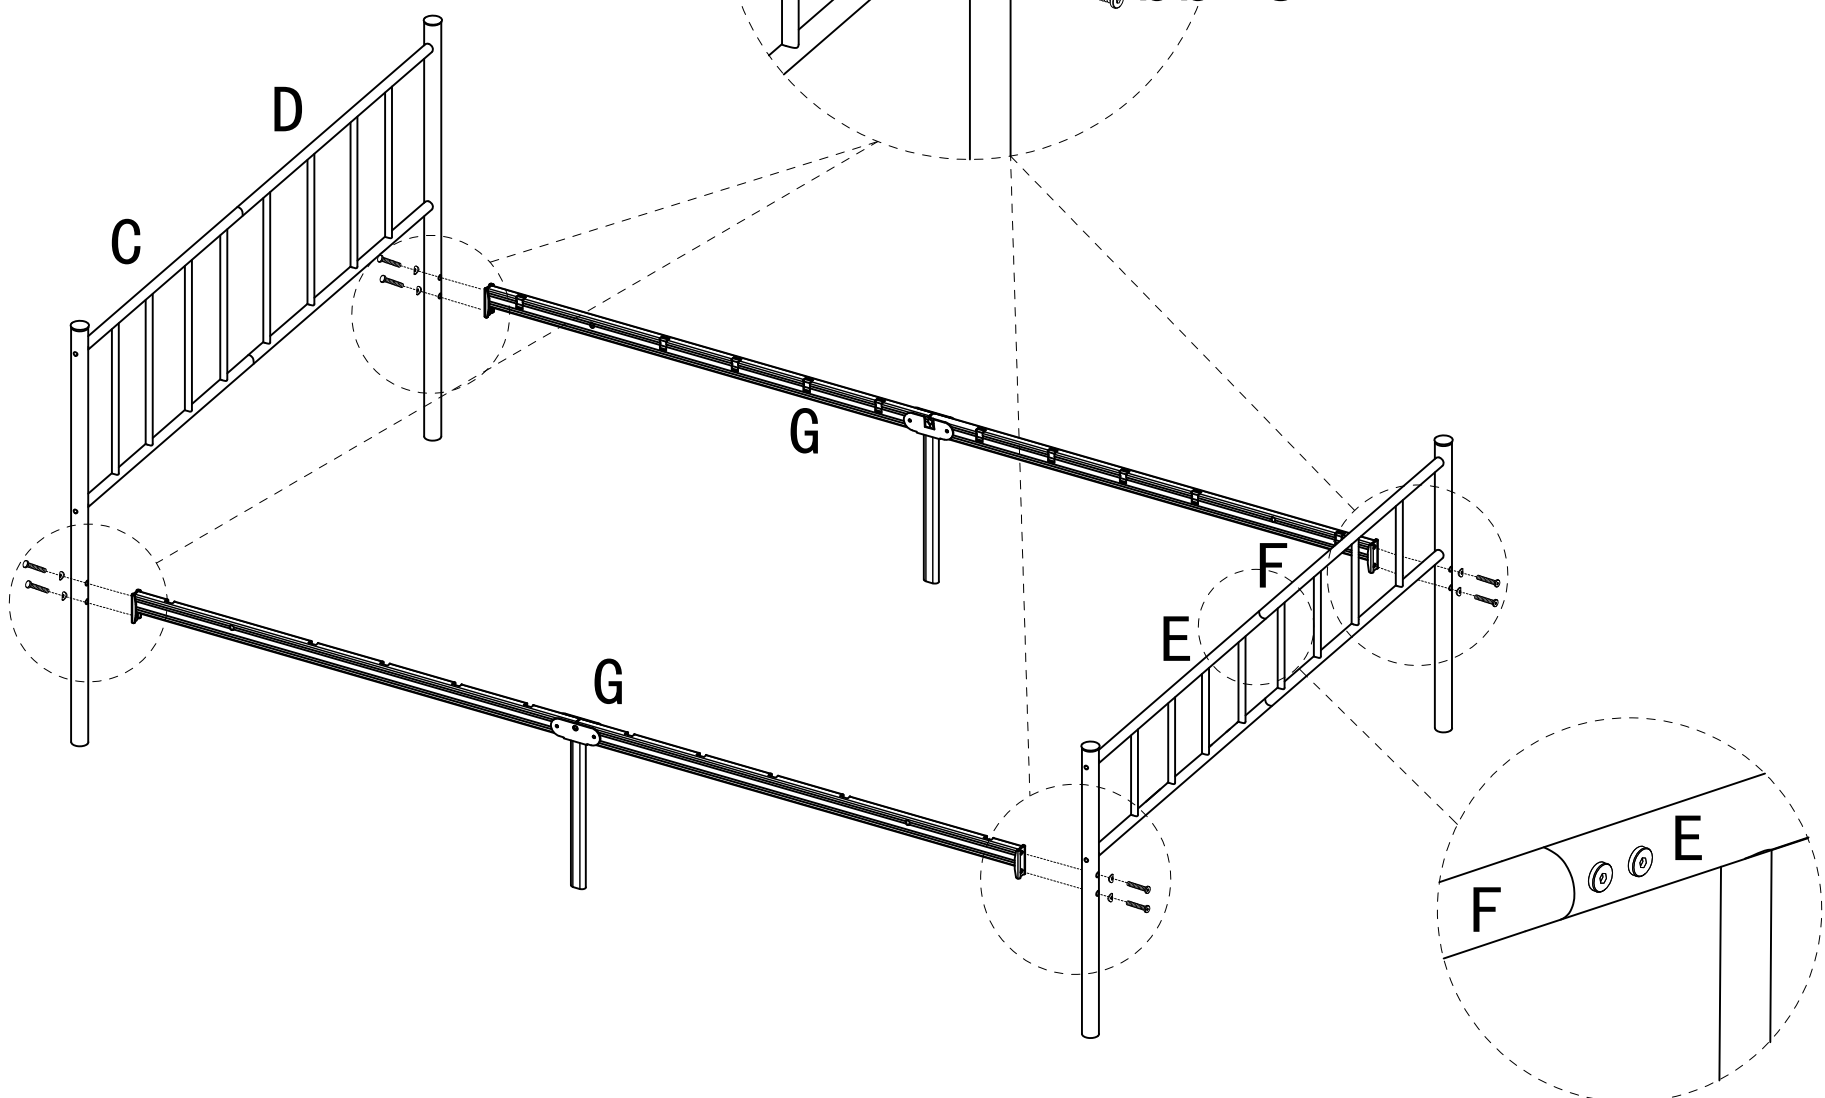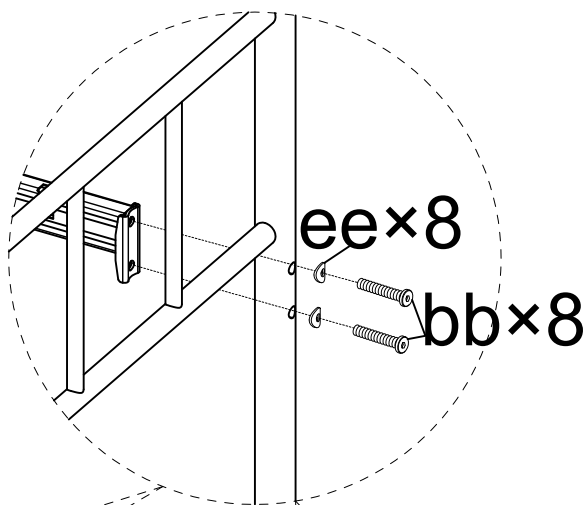

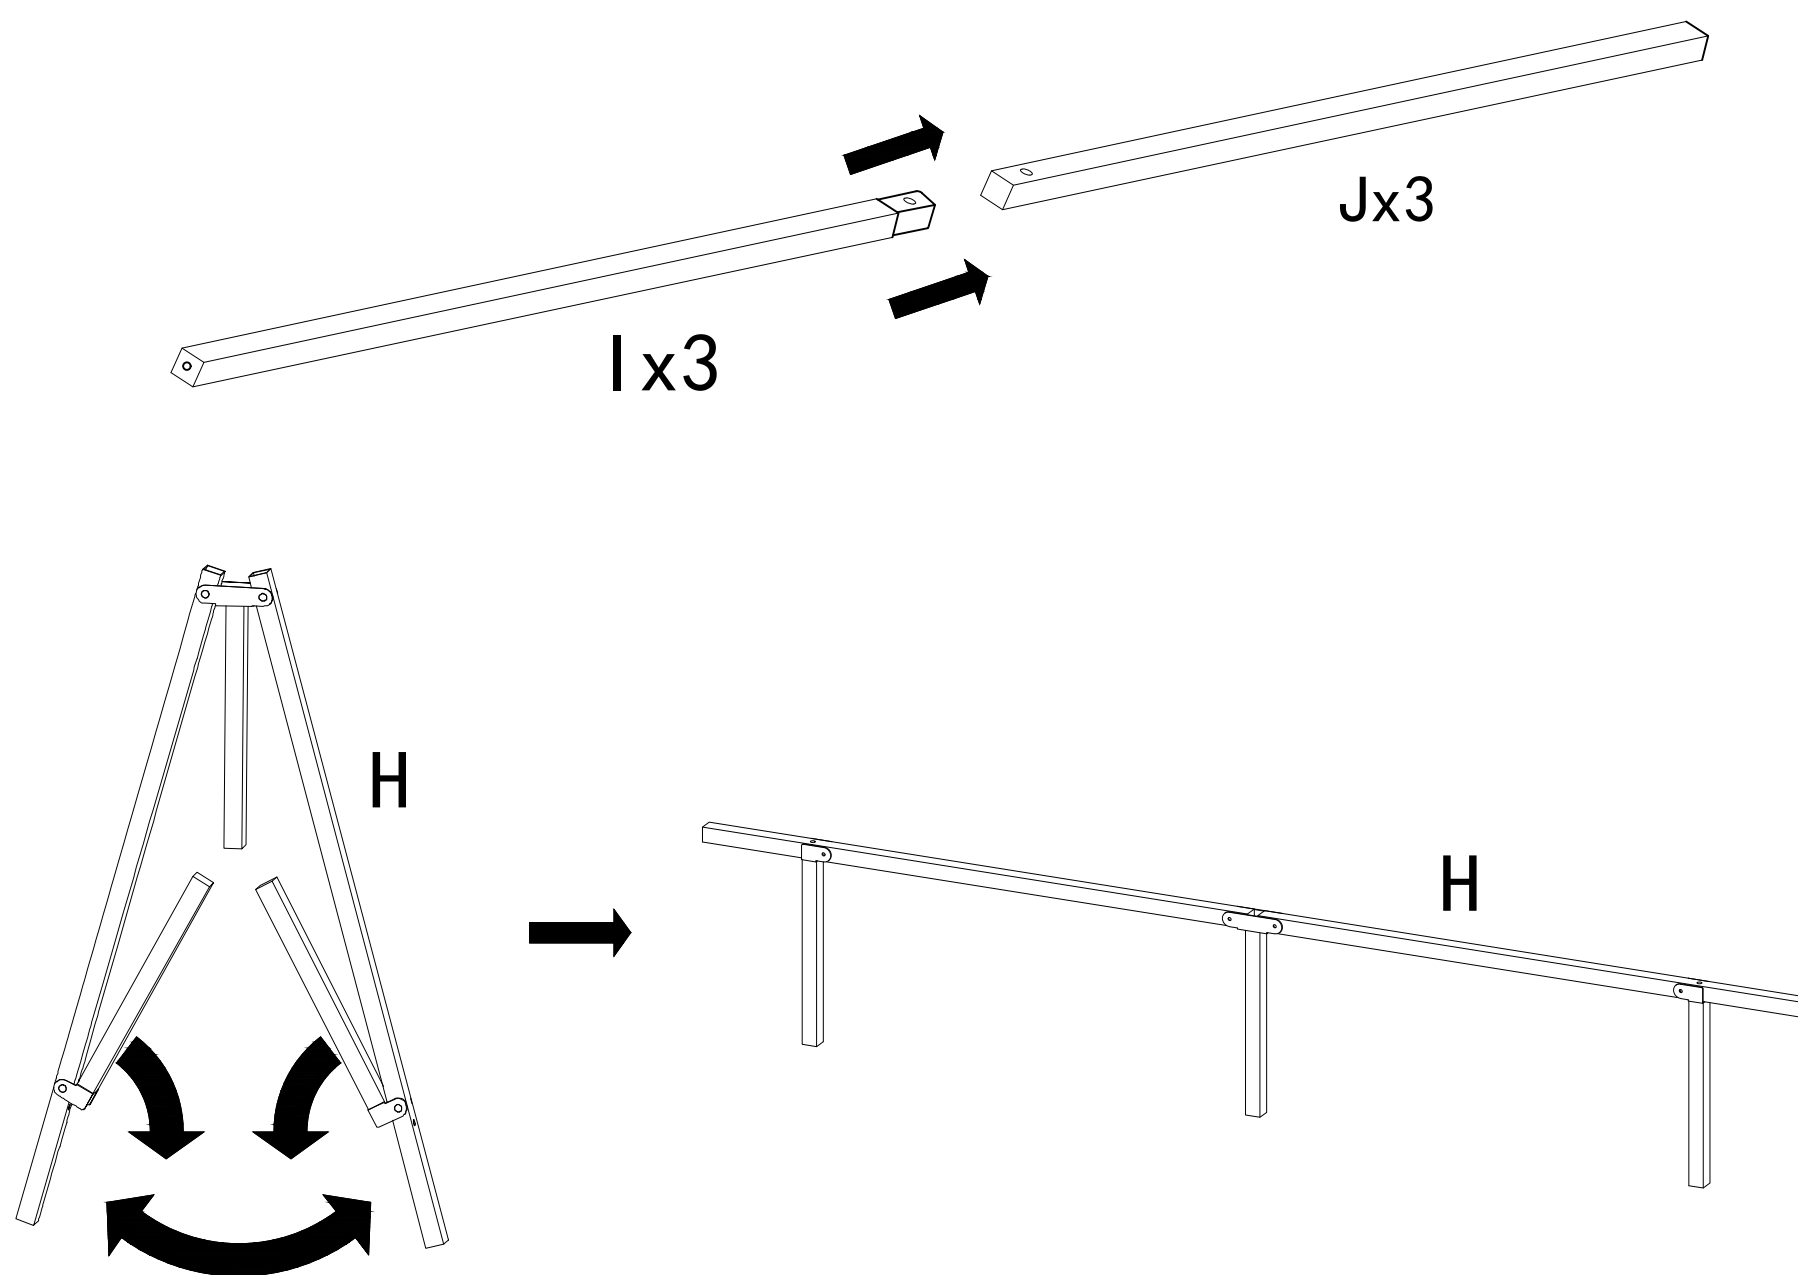

aa		M6×55mm	6
dd		4×4mm	1



aa	 M6×55mm	3
dd	 4×4mm	1

