


ASSEMBLY INSTRUCTIONS

KING (4+8)

(Box 1)

BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard 	1 pc
B	Headboard Leg (L/R) 	2 pcs
C	Footboard 	1 pc
D	Bed Slats 	4 pcs
E	Bed Slats Support 30x30x225mm 	8 pcs

(Box 2)

BOX OF SIDE RAIL


No	ITEM	Qty
F		2 pcs

(Box 1)


BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
1	JCBC M6 x 30mm 	6 pcs
2	SPRING WASHER 1/4" Rbw 	6 pcs
3	Flat Washer 1/4"ID x 13mmOD Blk 	6 pcs
4	ALLEN KEY m4x65mm Blk 	1 pc
5	Csk M4 x 32mm 	8 pcs
6	ALLEN KEY m5x65mm Blk 	1 pc
7	12V+12W+1A Adaptor With ETL Certificate (US)(INSIDE THE BOX WITH RED LABEL) 	1 pc

STEP 1 : Attach Headboard Leg (C) to Headboard (A) as shown using JCBC BOLT(1)with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4).

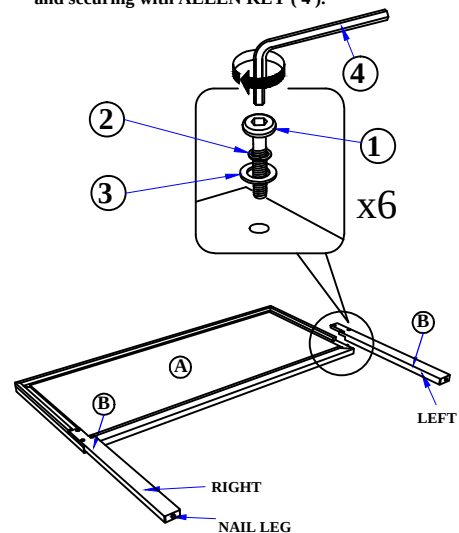


STEP 2: Hook SIDE RAIL (F) TO HEADBOARD (A) closely and push down to fit. Repeat step 2 with other end of rail to hook onto FOOTBOARD (C).

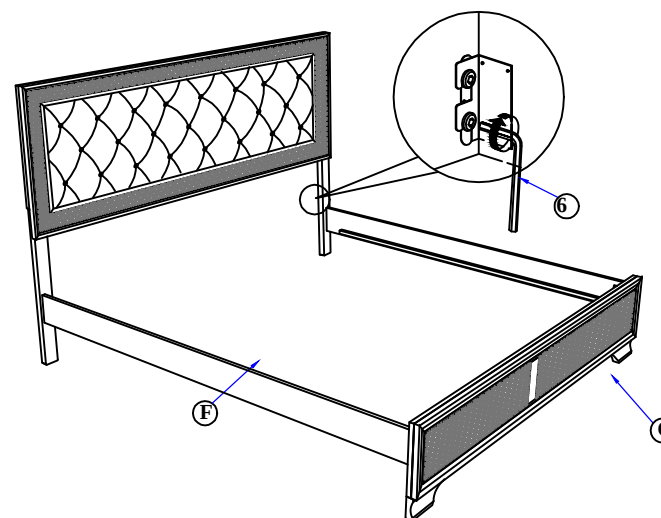

STEP 3 : Tighten the 4 Corner with Allen Key (6). Fix the Bed Slat Support Leg (E) , to Bed Slat (D) as shown . Install the bed slat (D) to side rail (F) and tighten with Csk Screw (5) as per diagram shown. (NOTE: THE SETUP MUST BE DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

STEP 3.4 :

REMARK!!
REMOVE THE
ADAPTOR FROM THE
BOX WITH RED LABEL

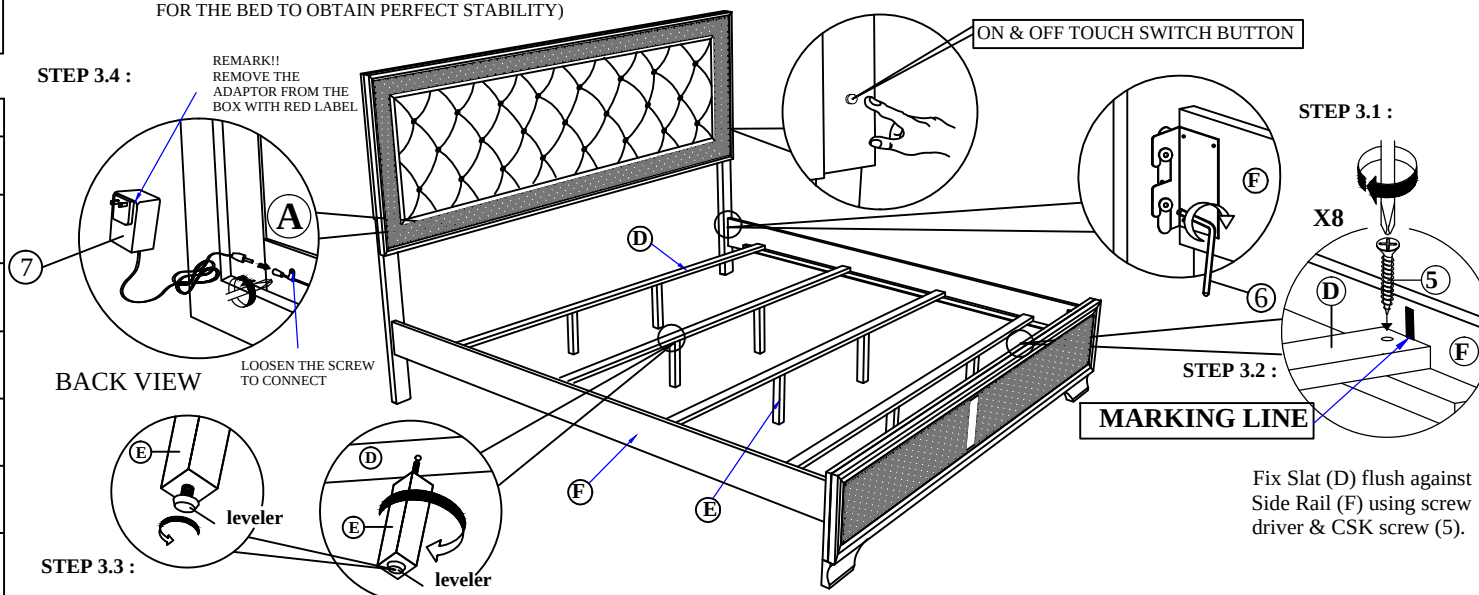

Fix Slat (D) flush against Side Rail (F) using screw driver & CSK screw (5).

NOTE : MUST TIGHTEN SCREWS PERIODCALLY OR SCREWS WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.