



CLOCK HAND INSTALLATION GUIDE

HOUR – MINUTE – SECOND HANDS

Please follow the steps below to ensure your clock operates correctly and smoothly.



1. PREPARATION



Make sure the clock mechanism is properly fixed and stable.



Do not insert the battery before starting the installation.

IMPORTANT NOTES



All hands must be aligned at 12:00 before starting to ensure accurate timekeeping.



Avoid bending the hands during installation.



If the hands touch each other, the clock may not function properly.

2 HOUR HAND INSTALLATION



- Carefully place the hour hand onto the shorter central shaft.
- Align the hand so it points exactly to 12:00 (upwards).
- Press gently to secure it, avoiding excessive force.

SIDE VIEW



3 MINUTE HAND INSTALLATION




- Place the minute hand onto the second shaft, above the hour hand.
- Align it precisely to 12:00.
- Press gently until it is properly seated.

SIDE VIEW



4 SECOND HAND INSTALLATION (IF INCLUDED)

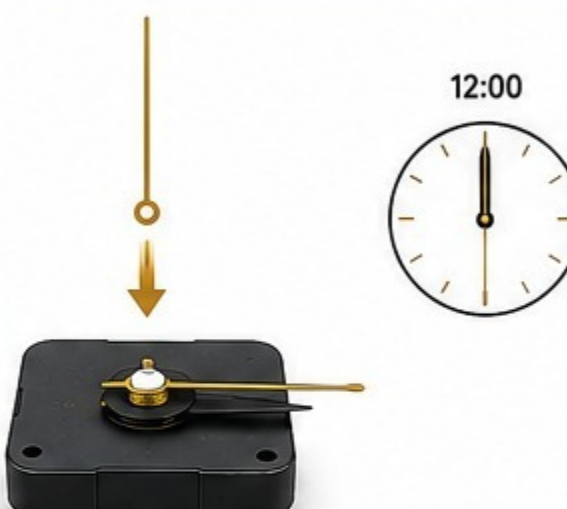

- Attach the second hand to the thin top shaft.
- Align it to 12:00 as well.
- Press gently to ensure smooth rotation.

SIDE VIEW



5 FINAL CHECK & OPERATION



Make sure all hands do not touch each other.



Gently rotate the hands to check for free movement.



Insert the battery to start the clock.



ALL HANDS MUST BE AT 12:00 POSITION BEFORE STARTING.



Proper installation ensures long-lasting and silent operation.

INSTALLATION SUMMARY



READY



2 HOUR HAND



3 MINUTE HAND



4 SECOND HAND



5 START CLOCK



Thank you for choosing our product!



PENDULUM & WALL BRACKET INSTALLATION GUIDE

STEP-BY-STEP INSTALLATION

Please follow the steps below to properly install your pendulum and wall bracket.



1 PREPARE PARTS



- Ensure you have both parts: the pendulum and the wall bracket.
- Check that the wall bracket is securely attached to the clock.

IMPORTANT NOTES



Ensure the wall bracket is firmly inserted and stable.



Handle the pendulum with care to avoid bending.




Do not force the pendulum onto the bracket.

2 POSITION THE BRACKET



- Make sure the wall bracket is properly inserted into the designated hole on the wall.
- The bracket should be level and secure.

3 ALIGN THE PENDULUM

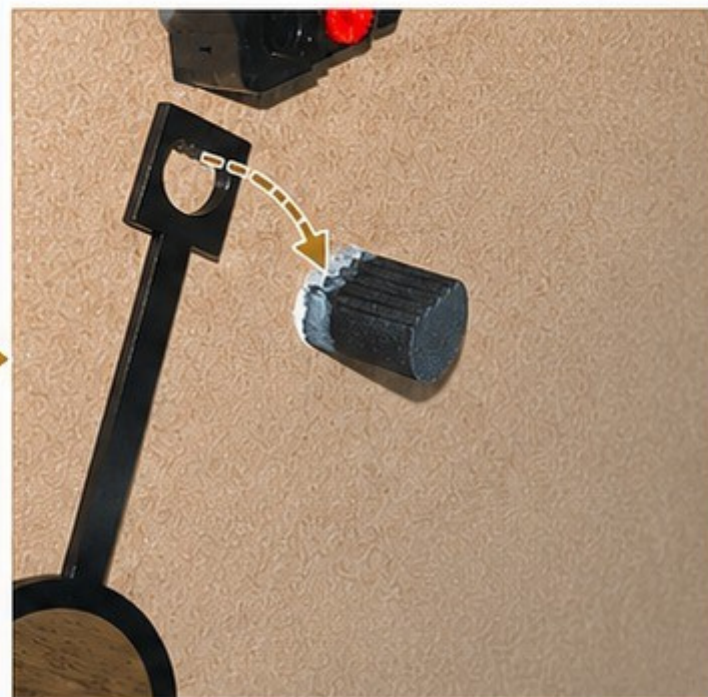

- Align the top hole of the pendulum with the wall bracket.
- Gently slide it onto the bracket until it is fully seated.

4 INSTALLATION COMPLETE



- The pendulum should hang freely and vertically.
- Installation is now complete.



CHECK & ENSURE

Make sure the pendulum moves freely without any obstruction.



Proper installation ensures accurate and silent operation.

INSTALLATION SUMMARY



PARTS READY




1 PREPARE PARTS



2 POSITION BRACKET



3 ALIGN PENDULUM

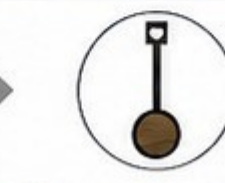

4 INSTALL COMPLETE



Thank you for choosing our product!