


THANK YOU SO MUCH FOR PURCHASING OUR PRODUCT. IF YOU HAVE ANY TROUBLE PUTTING YOUR KIT TOGETHER OR MISSING PIECES PLEASE CONTACT US FOR ANY HELP AND RETURNS.

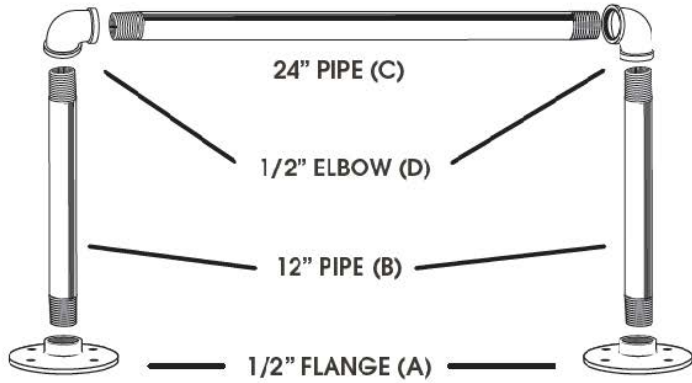

Parts List:

- A - 1/2" FLANGE (2 PCS)
- B - 1/2" X 12" CONNECTOR (2 PCS)
- C - 1/2" X 24" CONNECTOR (1 PCS)
- D - 1/2" ELBOW (2 PCS)
- E - 8 X SCREWS & ANCHORS


RECOMMENDED TOOLS



RECOMMENDED DRILL WITH 3/16" BIT FOR WALL ANCHOR



RECOMMENDED STUD FINDER

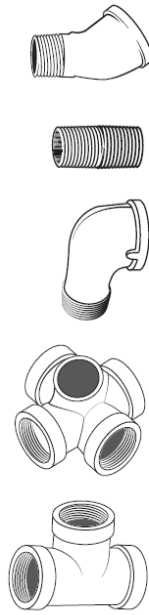

THIS IS INDUSTRIAL GRADE AUTHENTIC PIPE. IT COMES COVERED IN ANTI-RUST OIL. THEY ARE DIRTY TO THE TOUCH BUT CAN BE CLEANED AND SEALED TO PREVENT RUST AND BE CLEAN TO THE TOUCH. SEE CLEAN AND SEAL SHEET FOR WAYS TO CLEAN AND SEAL THE PIPE.

50LB MAX WEIGHT LIMIT ON RACK

1. Build rack as shown above. Tighten flanges and pipes into elbows as much as you can by hand, keep the left flange slightly loose, for steps 5-6.

2. Place rack on wall. Mark the holes of your left flange.



Mark Holes to drill

3. Pre-drill 3/16" holes at each mark you will be using anchors. Do not pre-drill if you are screwing into a stud.



3/16"


Pre-Drill Holes

4. Screw in anchors into the pre-drilled holes. Do not over tighten.




Screw In Anchors (do not over tighten)

5. The left flange should be loose enough for you to move the right flange into a level position after the left flange has been screwed into the wall. Affix the left flange to the wall.

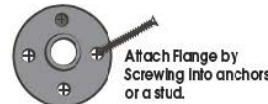

Attach Flange by Screwing into anchors or a stud.

6. With the left flange installed. Rotate the rack to level the rack using a level from the top of each flange until level. Mark the right flange holes.

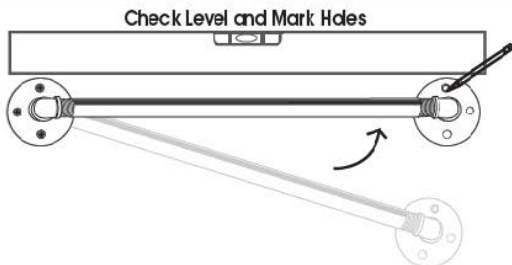

Check Level and Mark Holes

7. Repeat steps 3 - 5 on to install the right side.

8. Enjoy your new clothes rack.

CLEAN AND SEAL

IMPORTANT: Pipe Décor industrial grade black pipes and fittings are coated with a rust preventive oil during manufacturing. You can use your kit as is or clean it before use. **BUT IF YOU CLEAN YOUR KIT YOU MUST SEAL IT TO PREVENT RUSTING.**

CLEAN

Recommended Supplies: Regular De-greasing Dish Soap and Wash Cloths. Gloves are optional.

1. In your kitchen sink or utility sink wash your pipe decor pieces with warm water and dish soap until the oil is removed. Rinse well after washing.
2. Wipe the pipe dry with a wash cloth and wait until **COMPLETELY DRY**. The pieces must be completely dry before sealing them.

SEAL

Recommended Supplies: Polyurethane Matte or Satin Finish Spray or Finishing Wax, Gloves and Wash or Lint-Free Cloths.

- 1A. Spray each dry pipe and fitting with a polyurethane matte or satin finish. Wait until dry to assemble kit.
- 1B. Coat each dry piece with a finishing wax. Wait 20 minutes then polish with a wash cloth by wiping them down. The faster wiping will result in a shinier finish.