
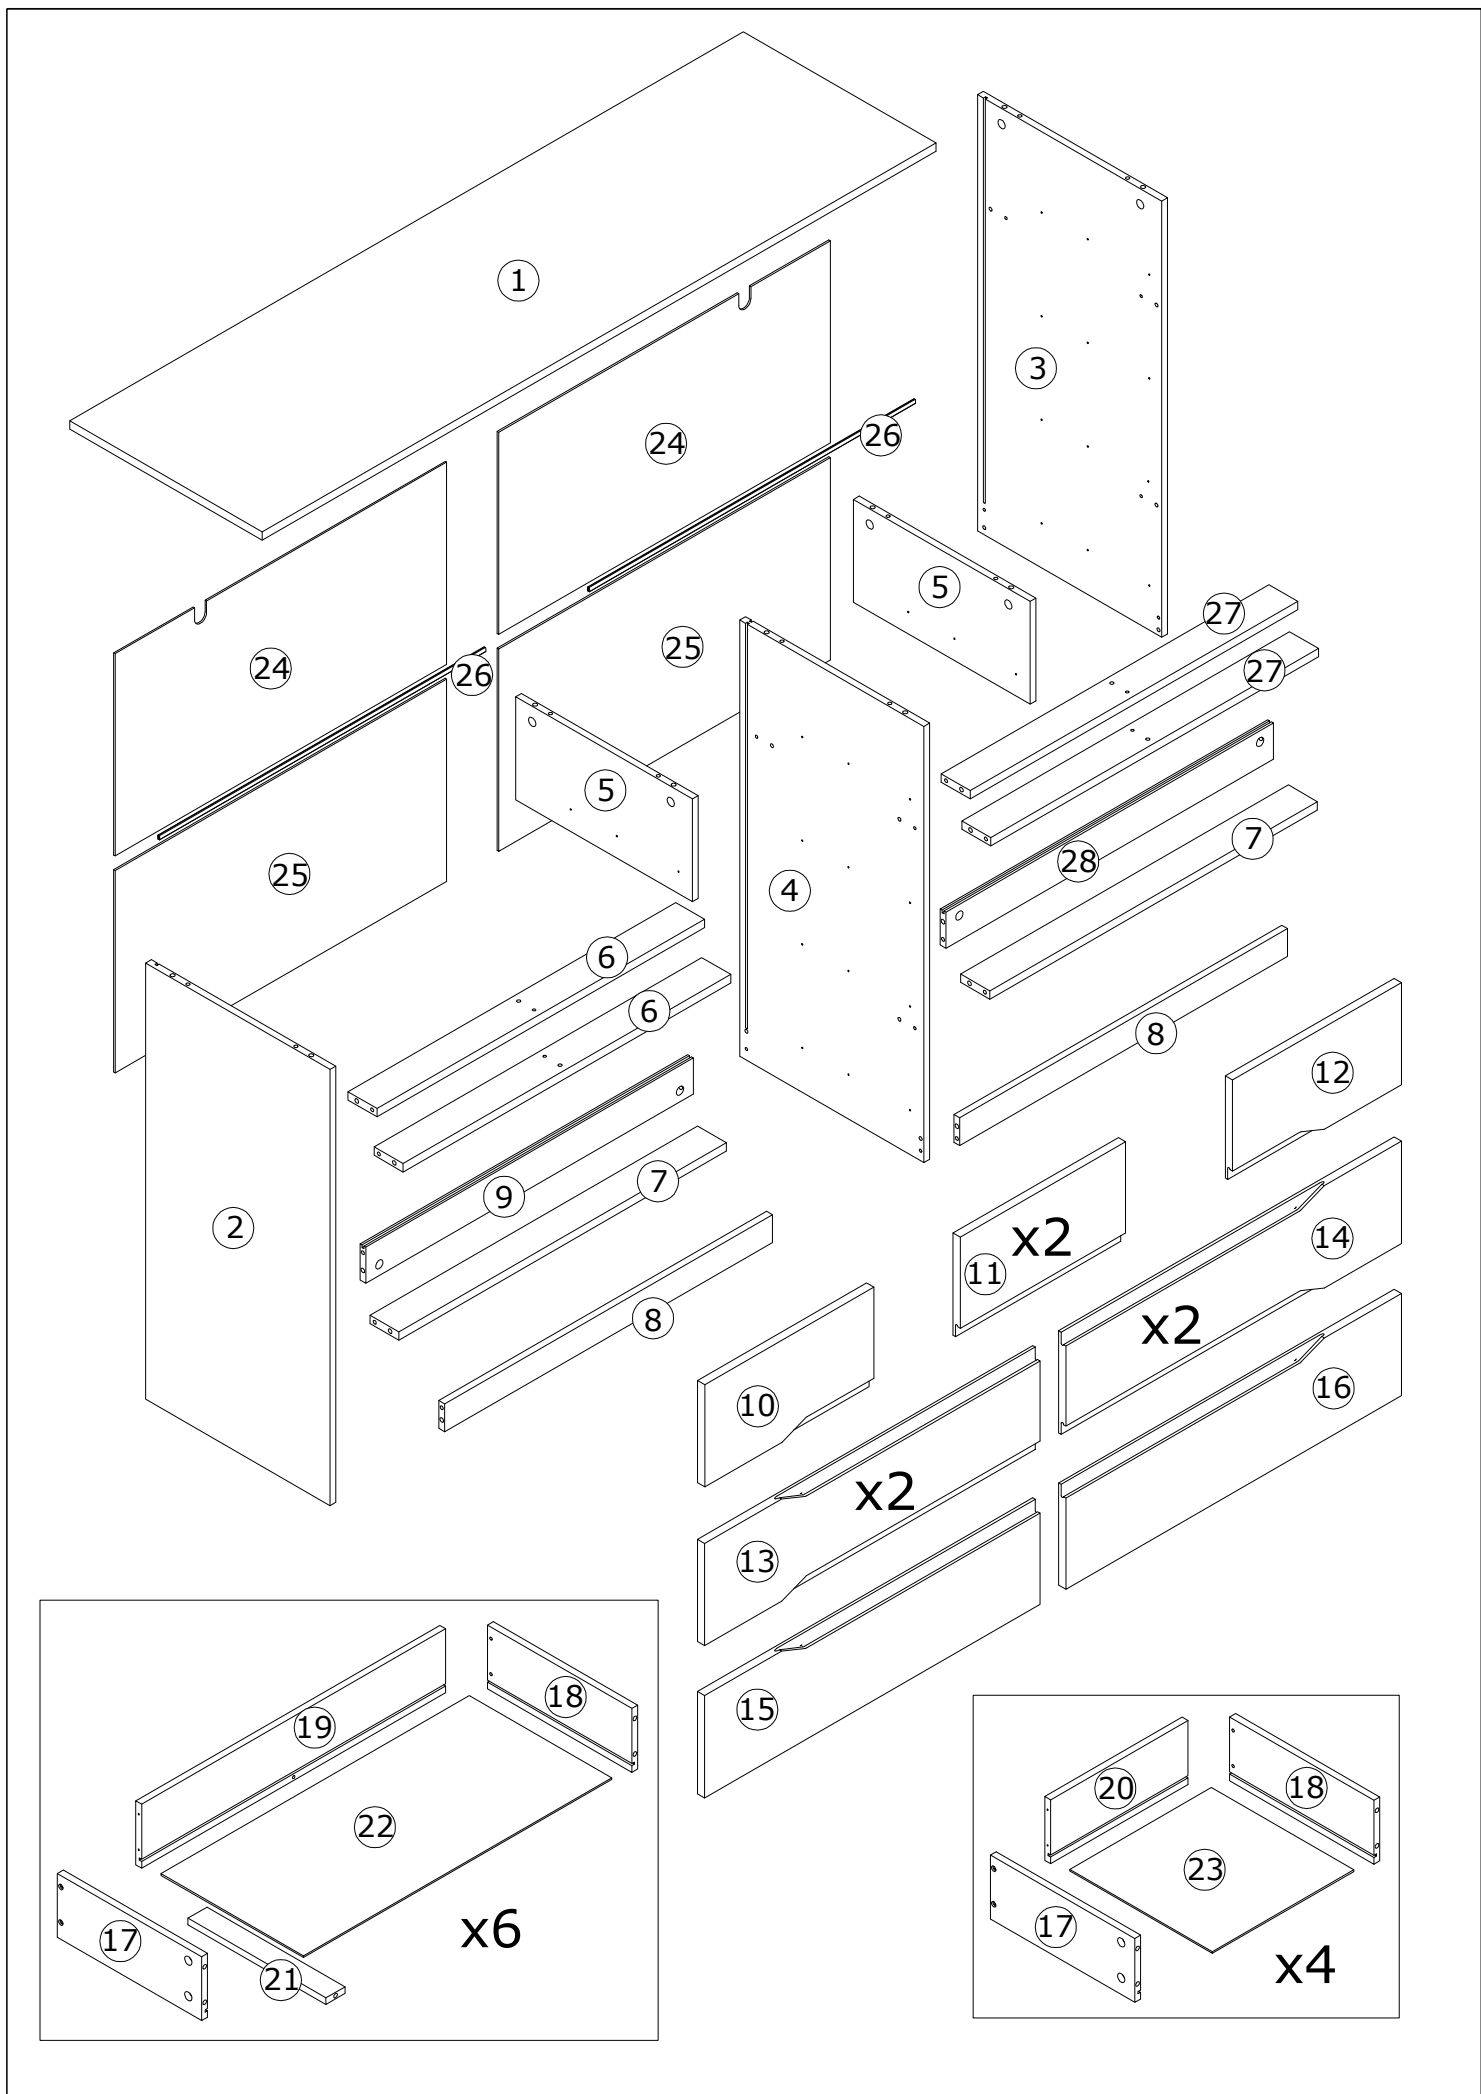
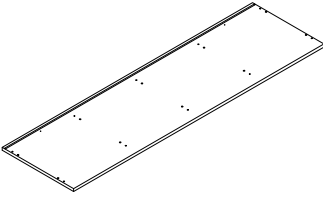
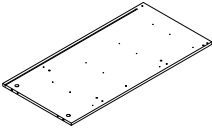
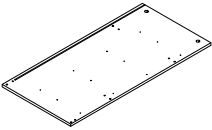
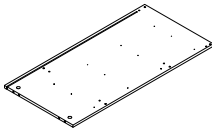















Installation instruction









Parts and Operation Elements

							
①	1pc	②	1pc	③	1pc	④	1pc
							
⑤	2pcs	⑥	2pcs	⑦	2pcs	⑧	2pcs
							
⑨	1pc	⑩	1pc	⑪	2pcs	⑫	1pc
							
⑬	2pcs	⑭	2pcs	⑮	1pc	⑯	1pc
							
⑰	10pcs	⑱	10pcs	⑲	6pcs	⑳	4pcs
							
㉑	6pcs	㉒	6pcs	㉓	4pcs	㉔	2pcs

Parts and Operation Elements

							
25	2pcs	26	2pcs	27	2pcs	28	1pc





Hardware

 Cam bolt		 Cam lock		 Wood dowel 6 x 30mm		 4 x 35mm screw	
A	76+4pcs	B	76+4pcs	C	34+3pcs	D	52+4pcs
 3 x 12mm screw		 Back bracket		 3 x 14mm screw		 L wall fixing	
E	120+4pcs	F	16+2pcs	G	16+2pcs	H	2pcs
 4 x 12mm screw		 30mm wall plug		 300mm		 300mm	
J	2pcs	K	2pcs	CL	10pcs	CR	10pcs
 300mm		 300mm					
DL	10pcs	DR	10pcs				





SPARE BAG

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

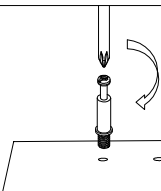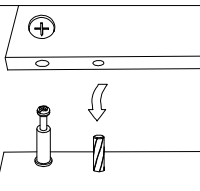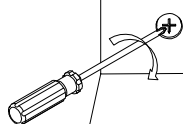		Arrow must face hole 	
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.

1

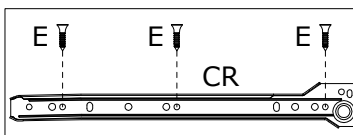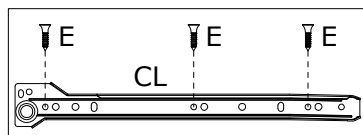





E x24



CL x4





CR x4

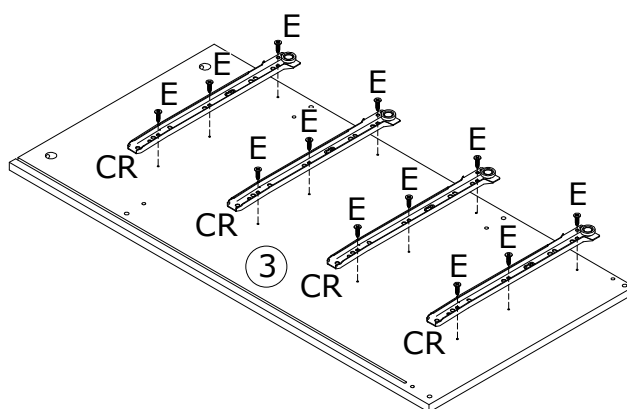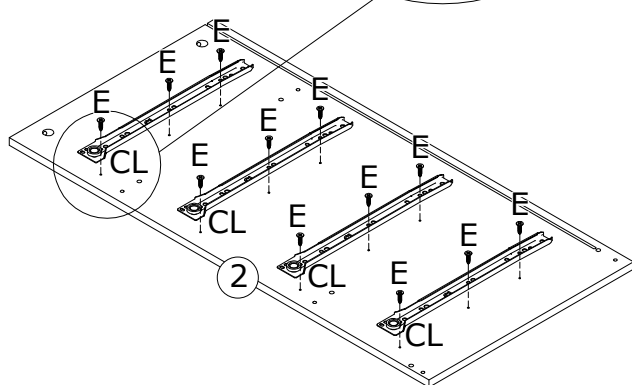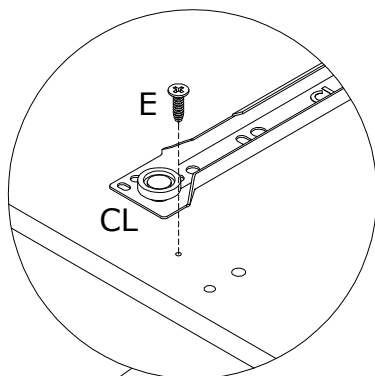


2

A x10

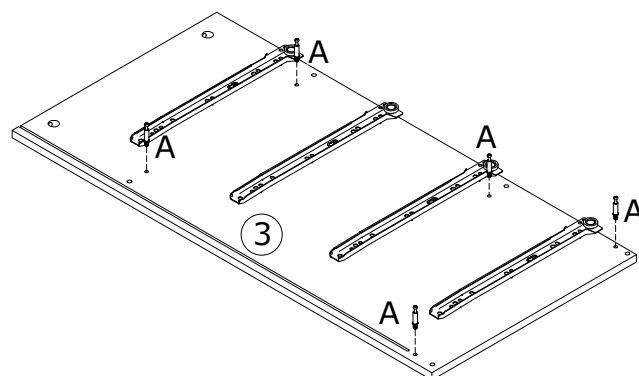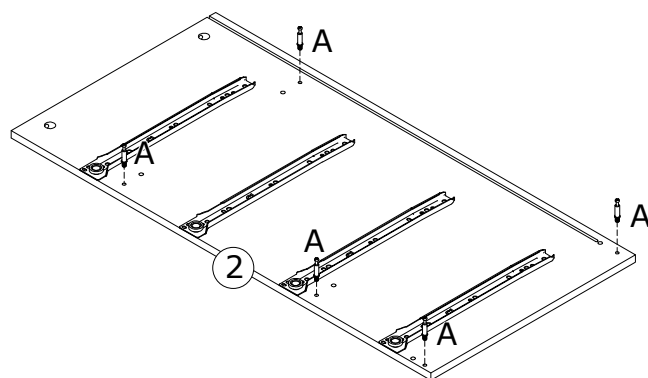


3

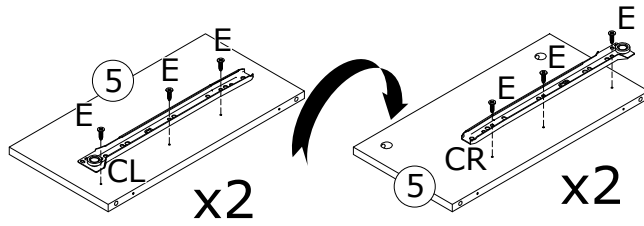

E x36


CL x6

CR x6

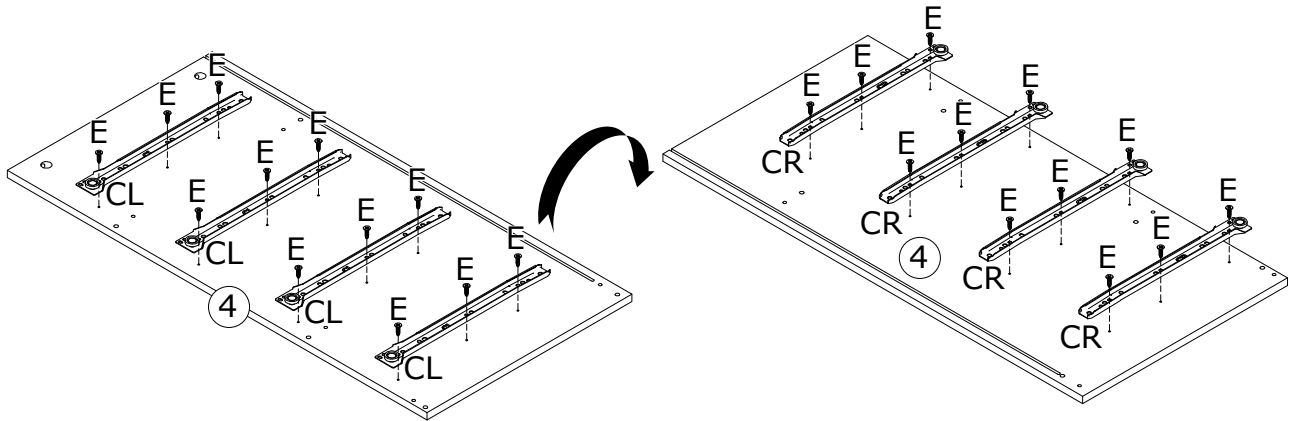


4

A x10

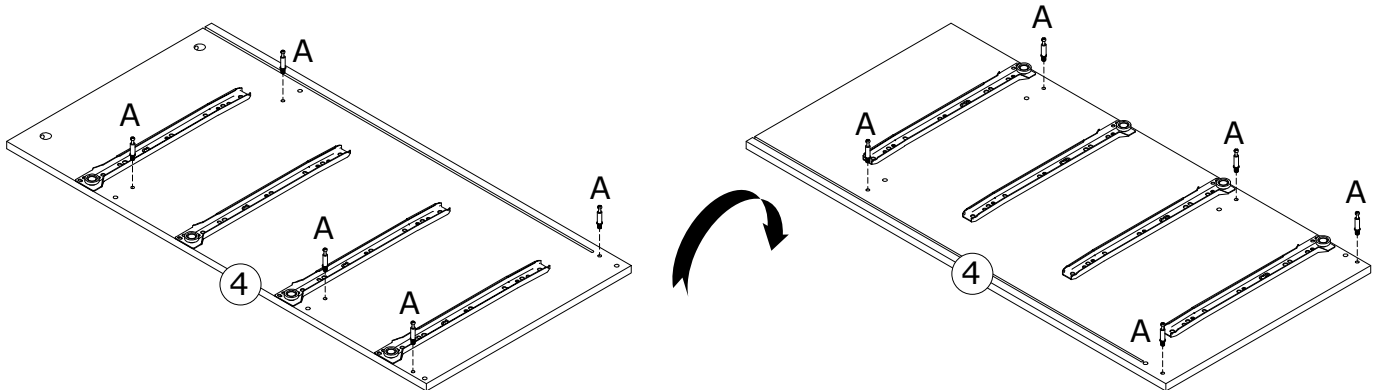

5

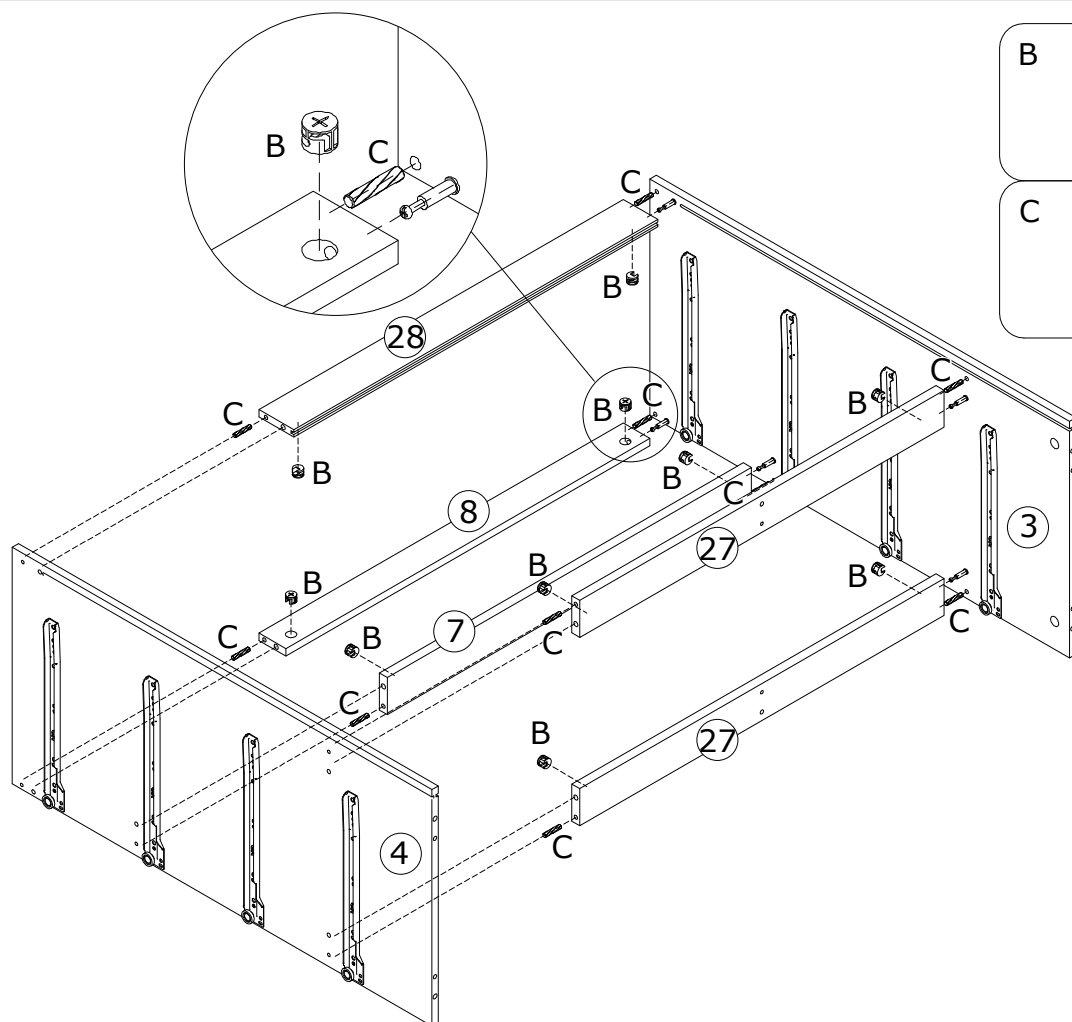


B x10



C x10



6

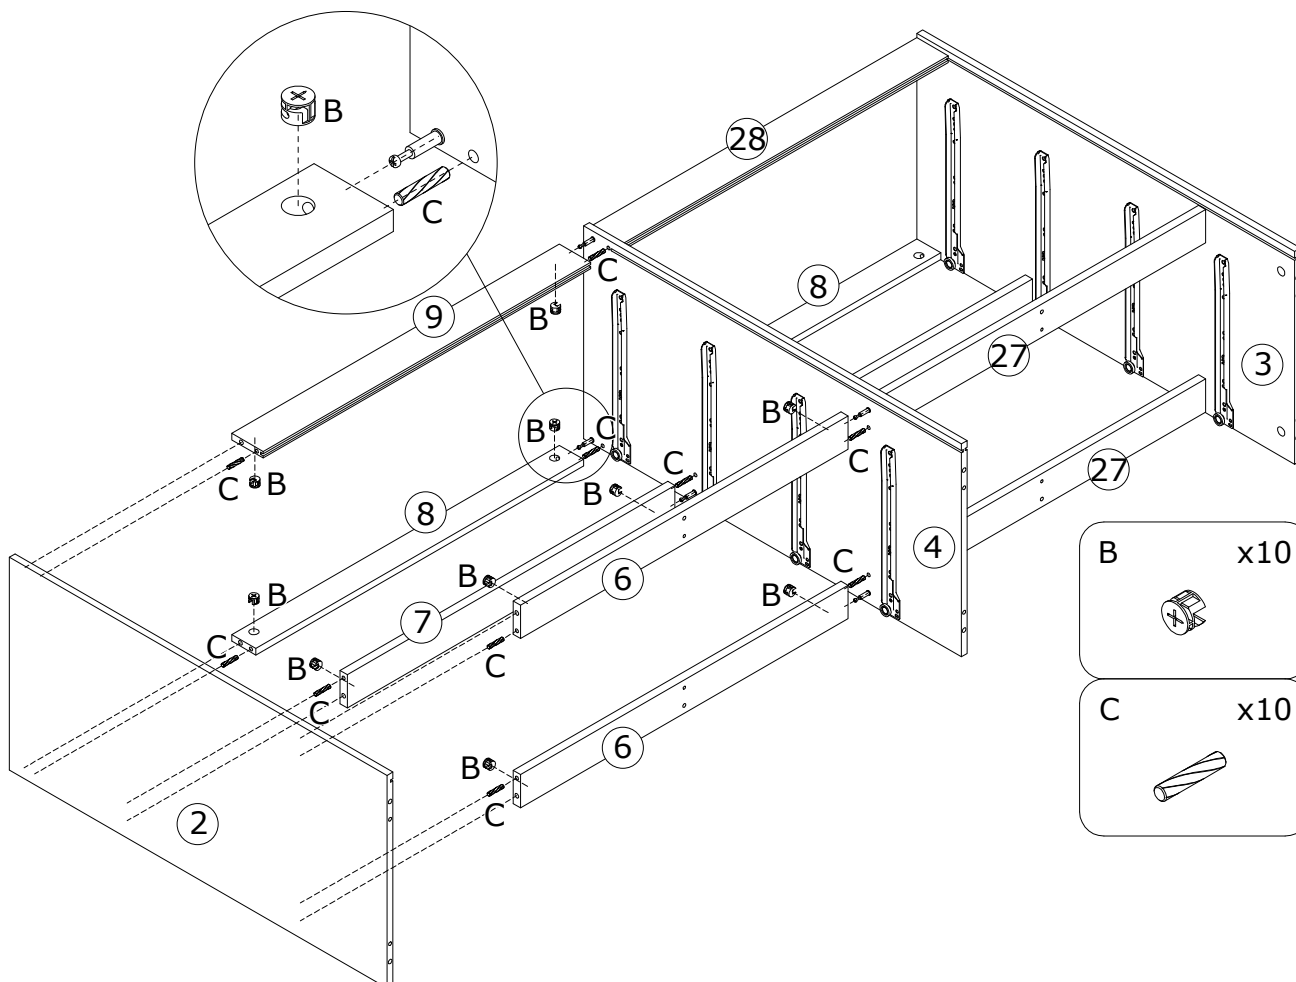


B x10




C x10



7

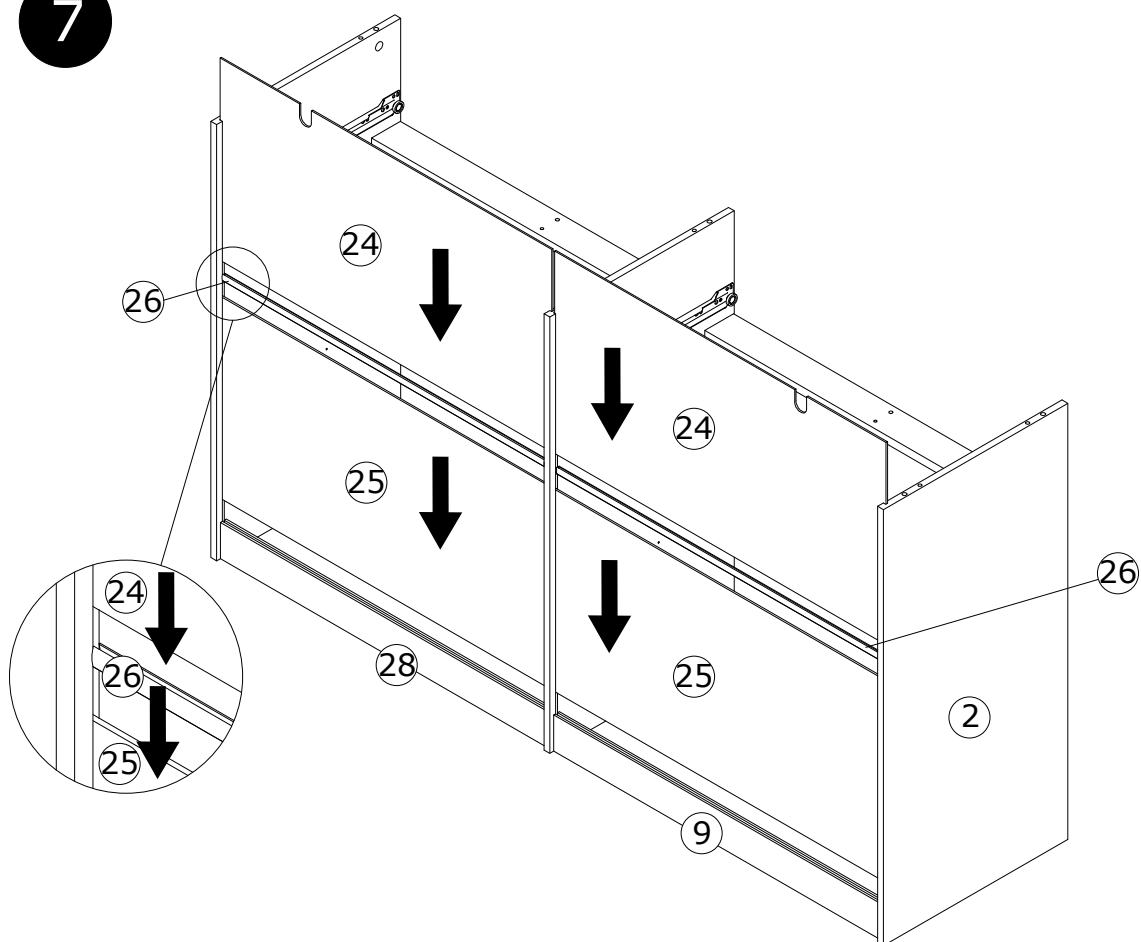

8

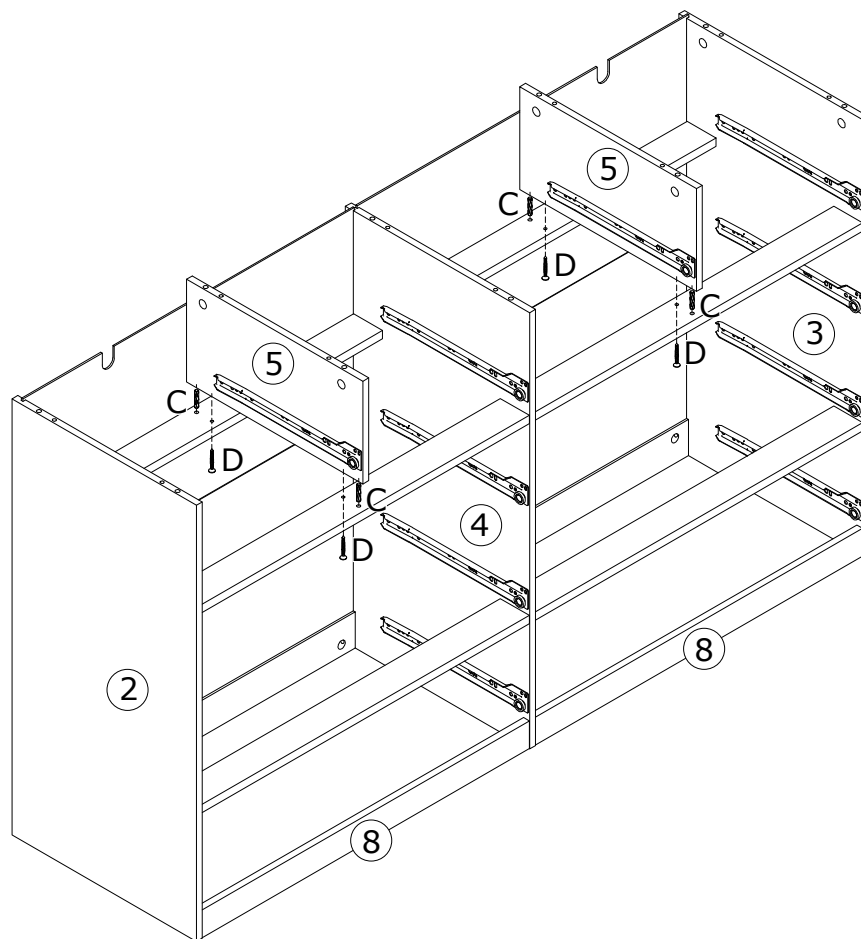


D x4




C x4




9

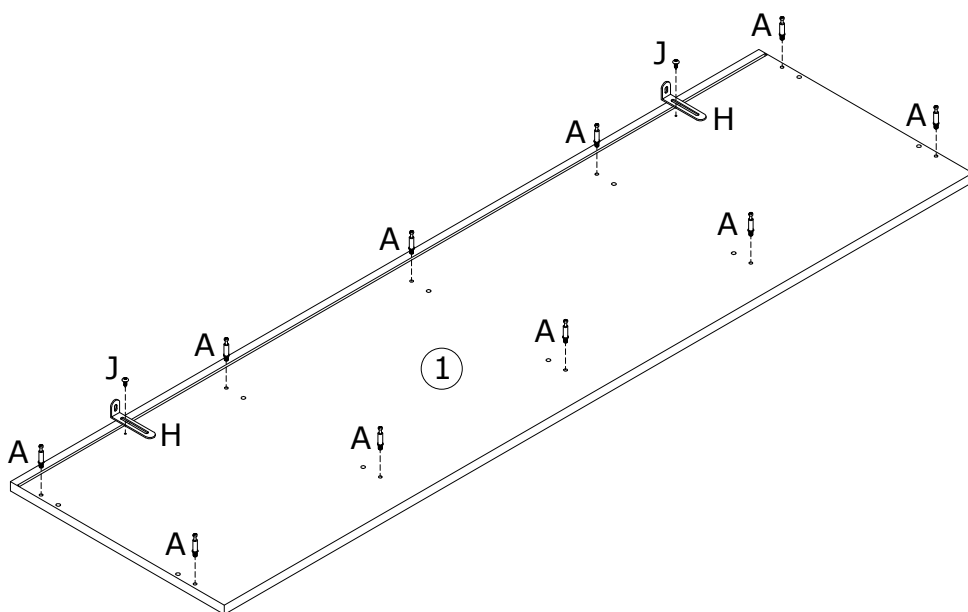

A x10




H x2



J x2



10




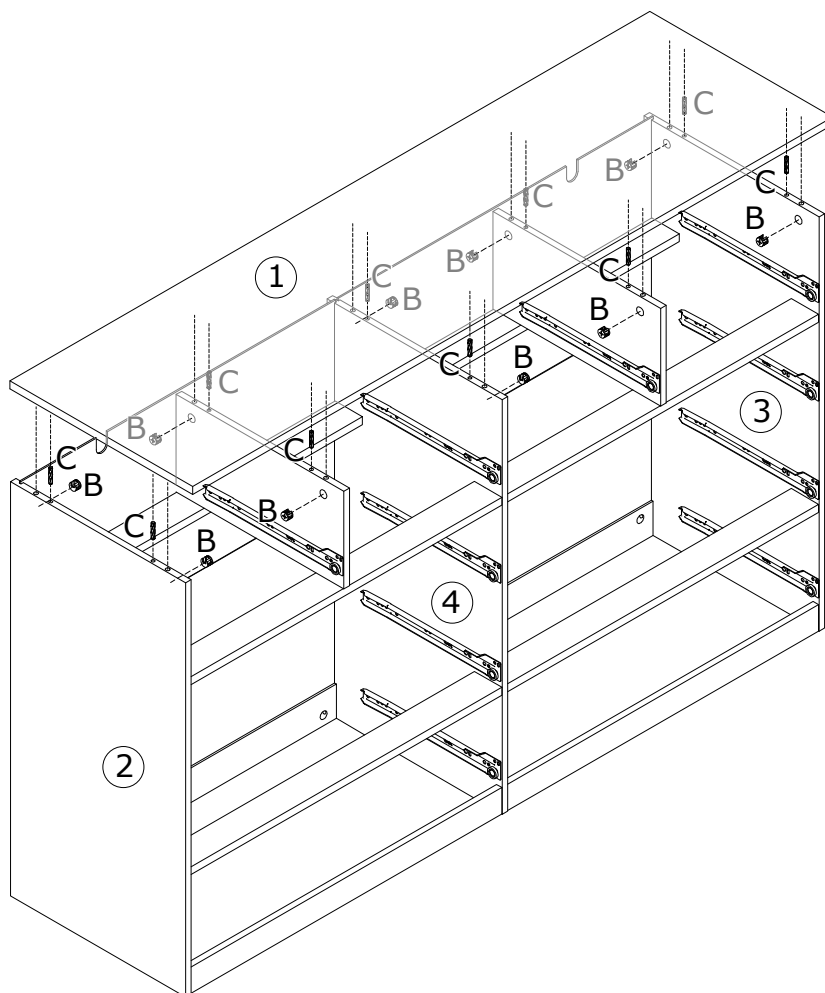


B x10






C x10





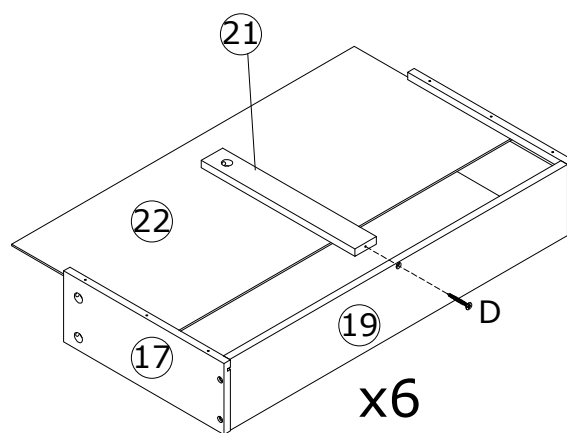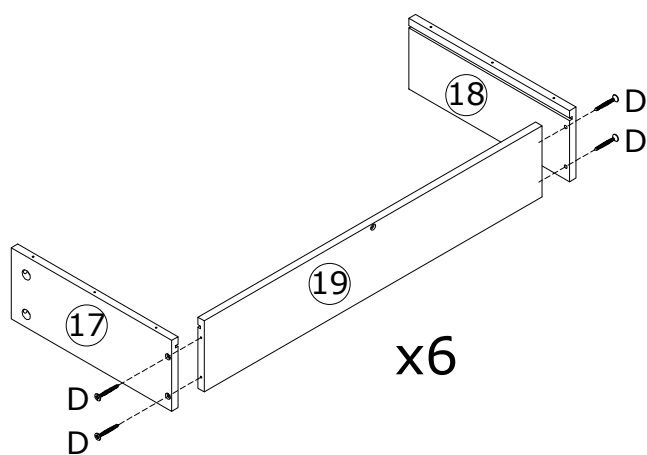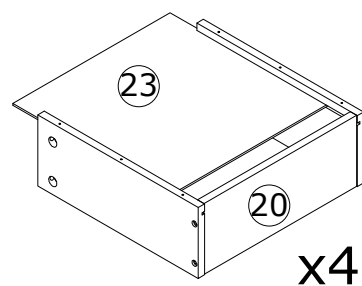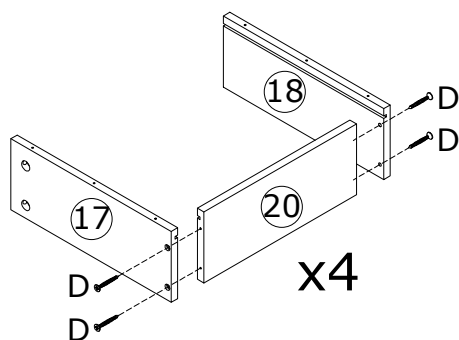


12

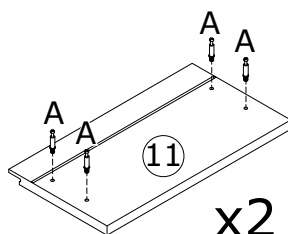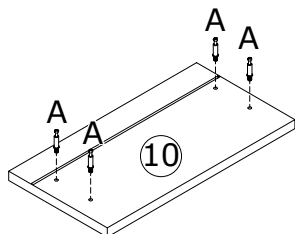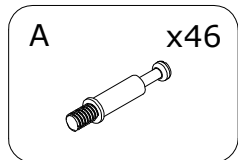



x2

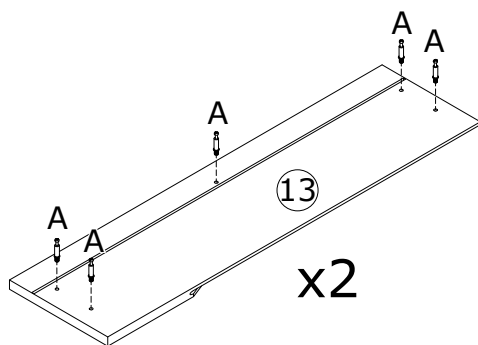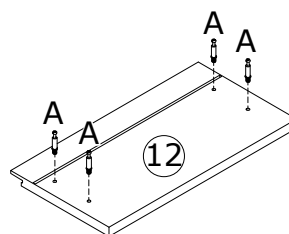

x2





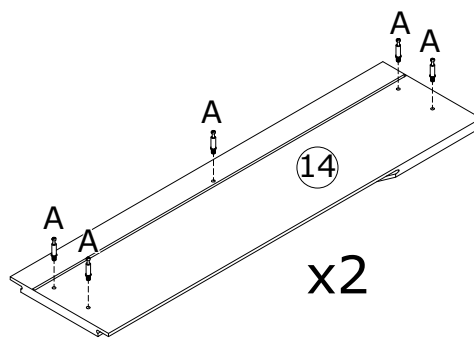


x2







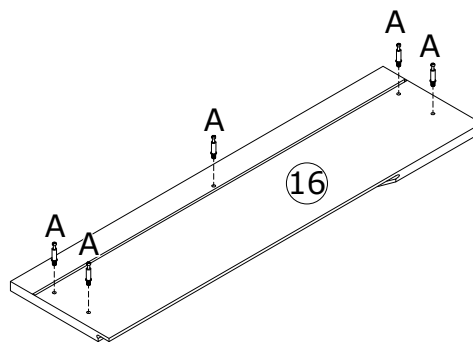
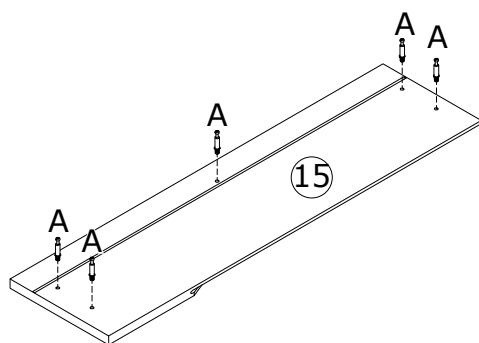


13



B x46

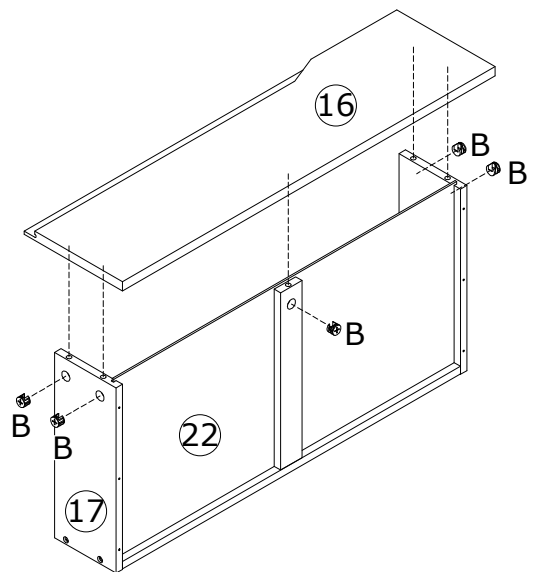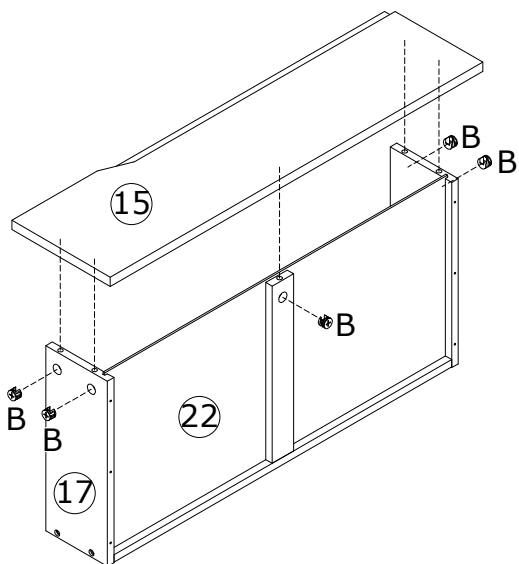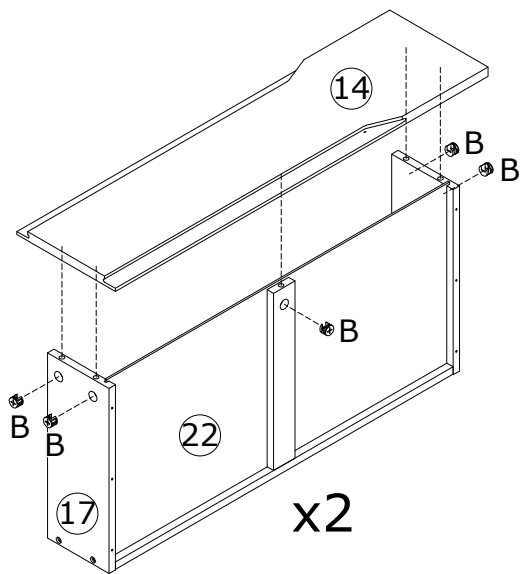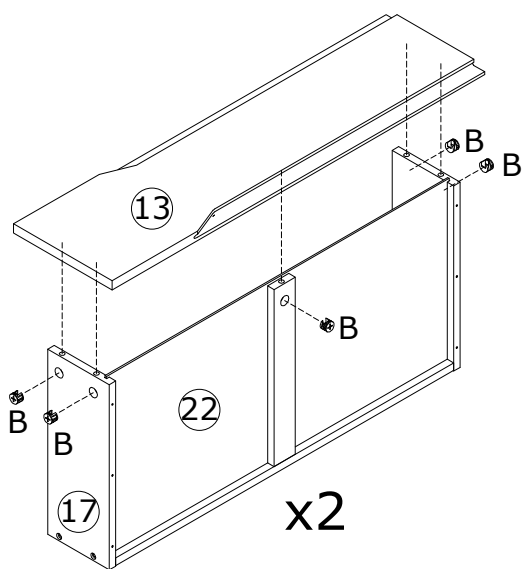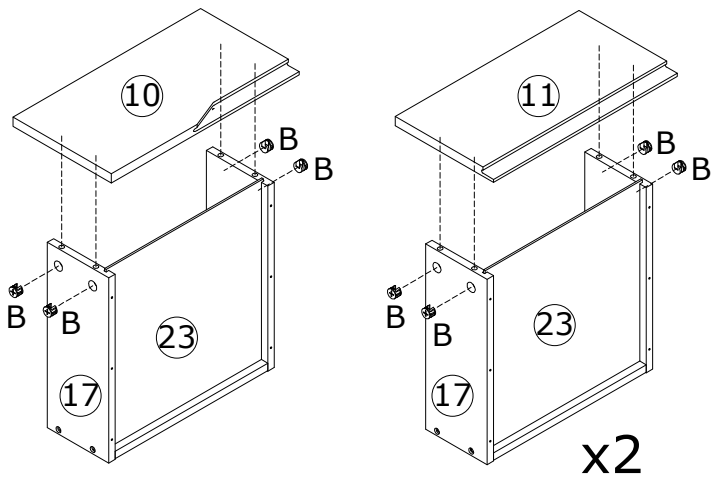


14

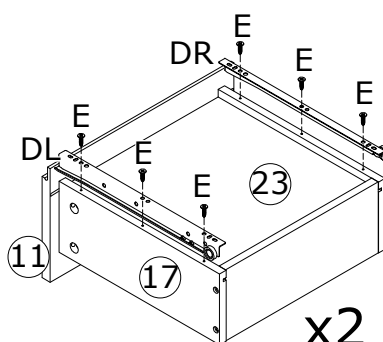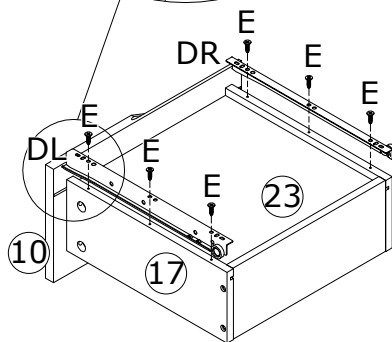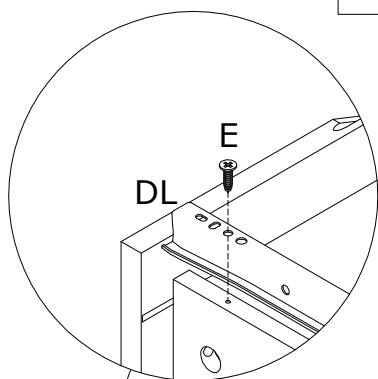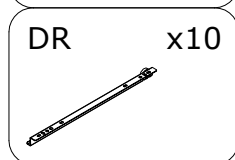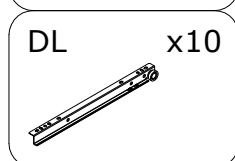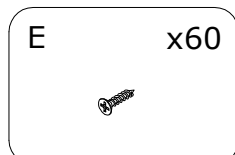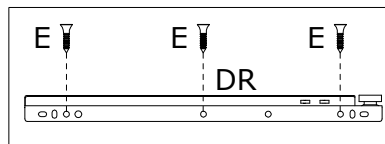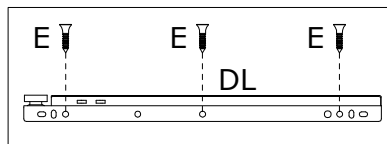



x2

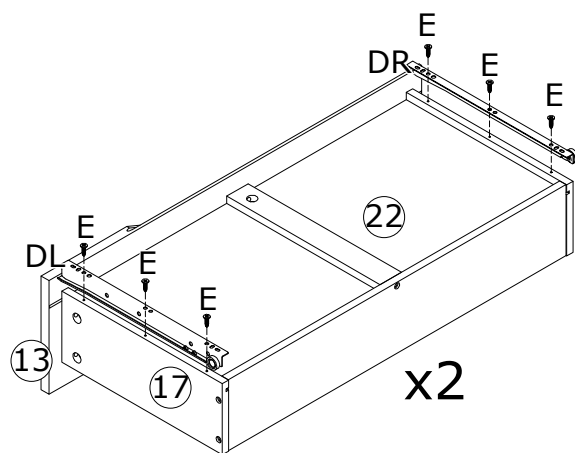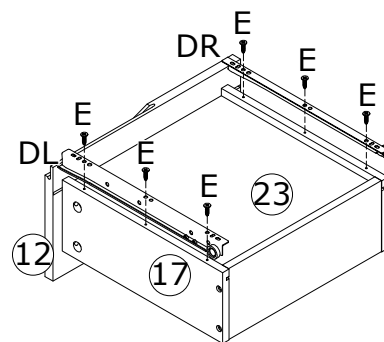

x2

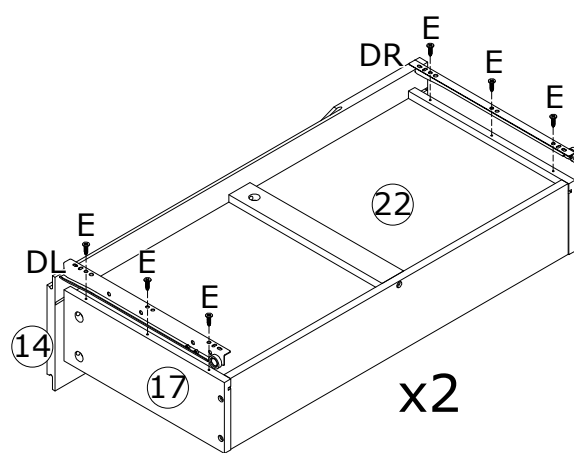

x2

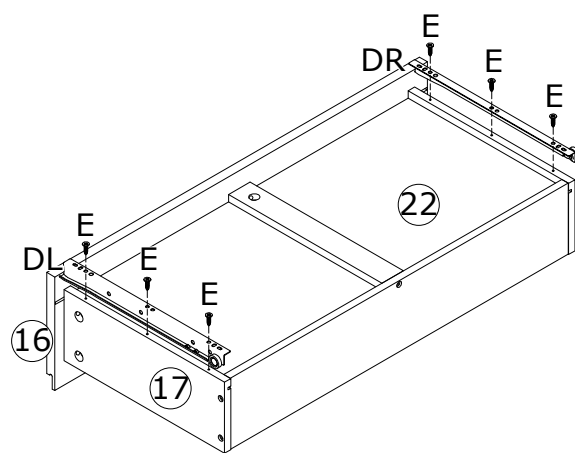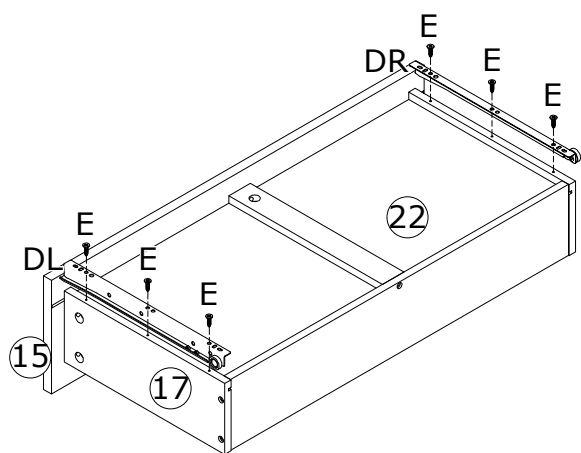


15


F x16



G x16

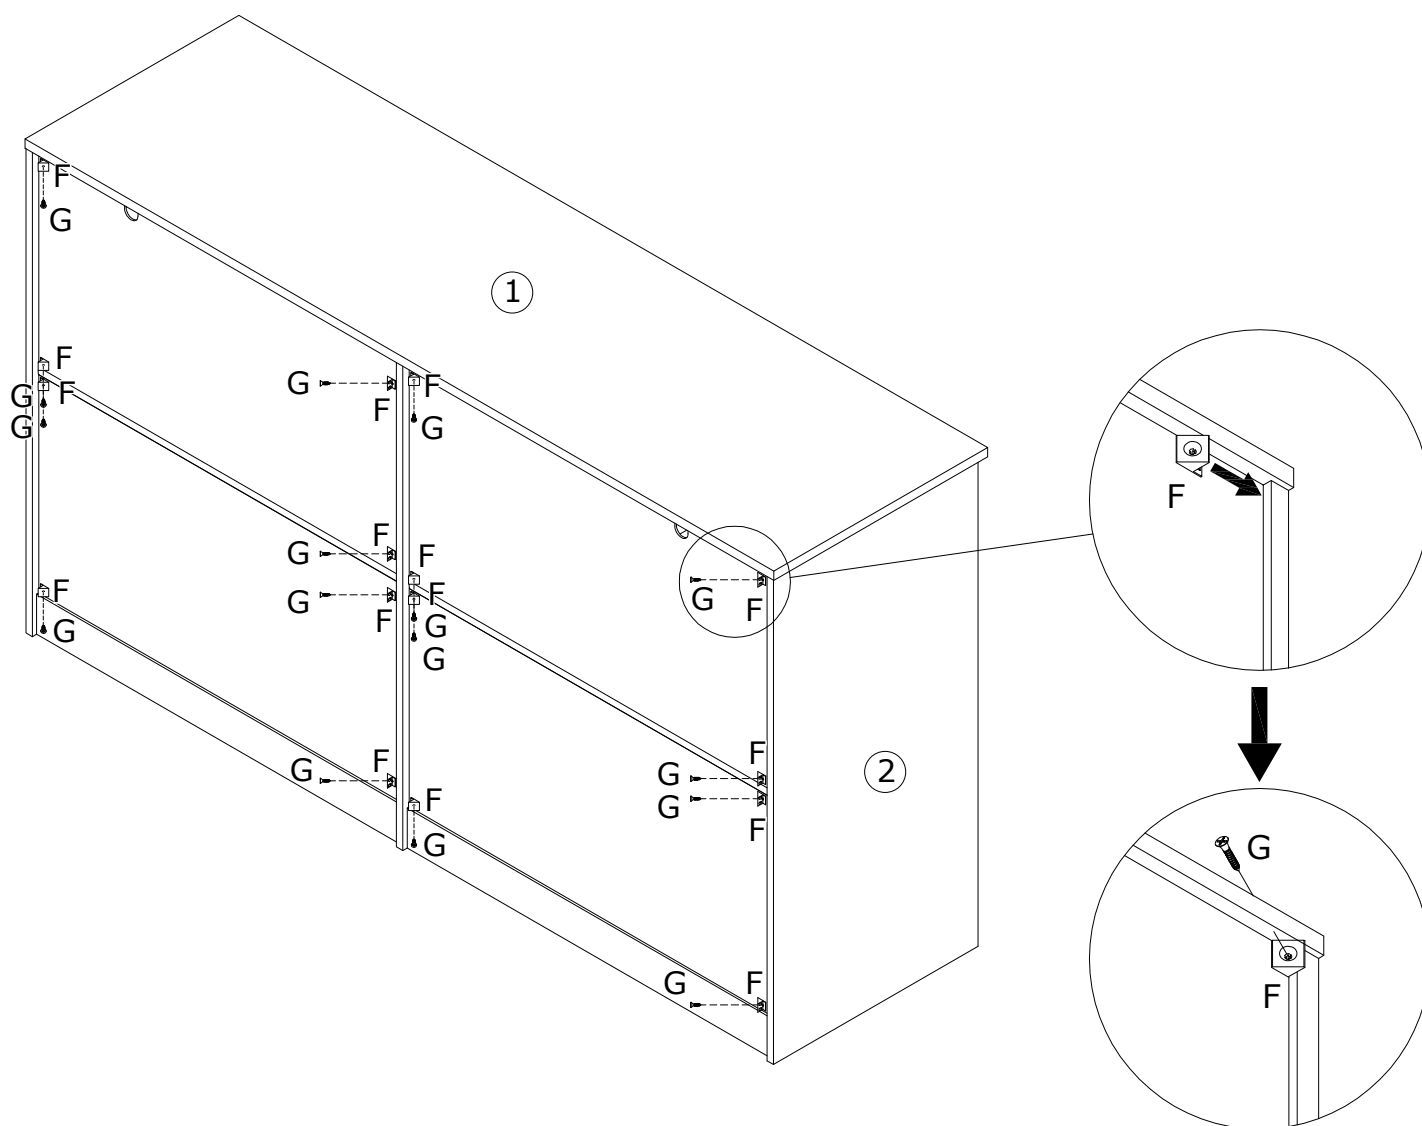





16

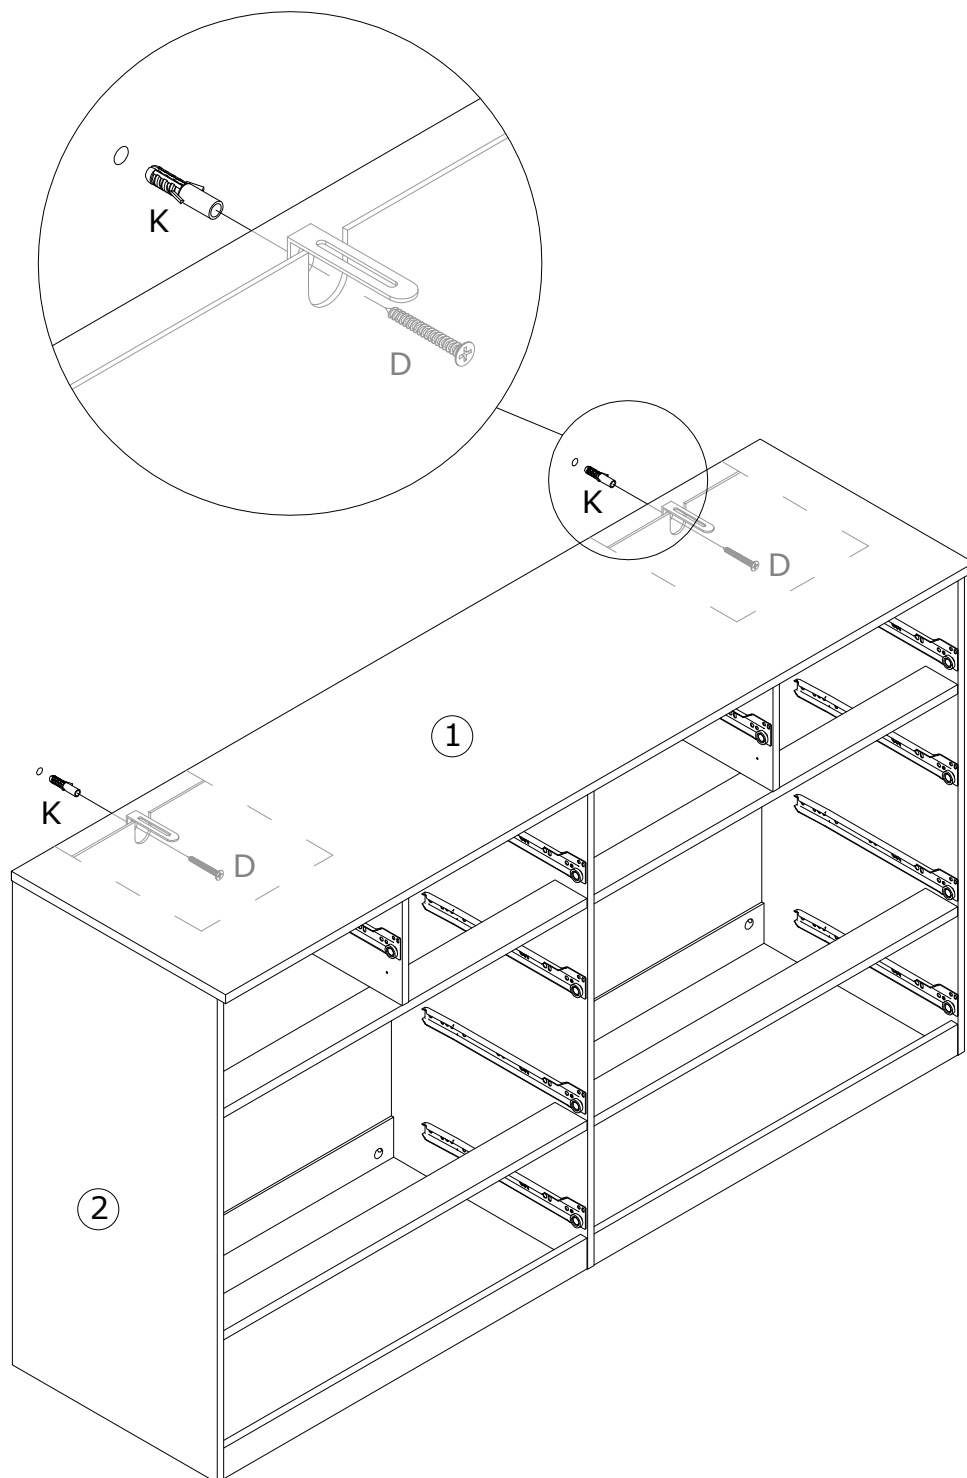


D x2




K x2




1.

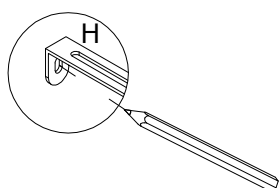

2.

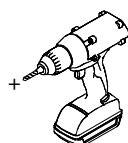

3.

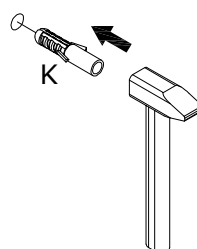

4.

