


# Set-up Instruction


Size: Twin/Twin XL

If you have any questions about the product, please don't hesitate to contact us. You can reach us through your order. Thanks for your support!

## Package Parts List

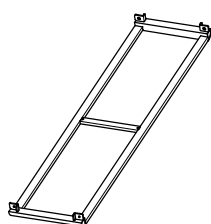


A\*2PCS



B\*2PCS



E\*2PCS




G\*1PCS



J\*4PCS



H\*10PCS



D\*1pcs  
(Bed cover)

## Accessories List



T\*2pcs  
M6\*35 (bolt)



L\*8pcs  
M6\*20 (bolt)




P\*10pcs  
M6\*8 (bolt)




Z\*1pcs

## Step1:


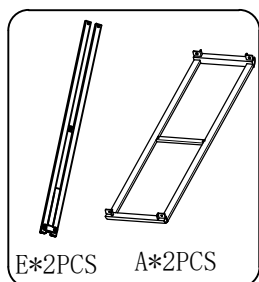


E\*2PCS

A\*2PCS

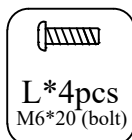


L\*4pcs  
M6\*20 (bolt)

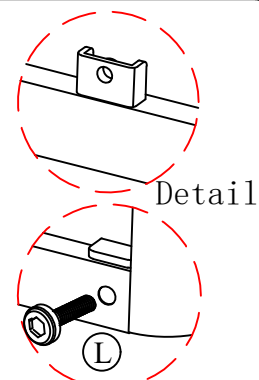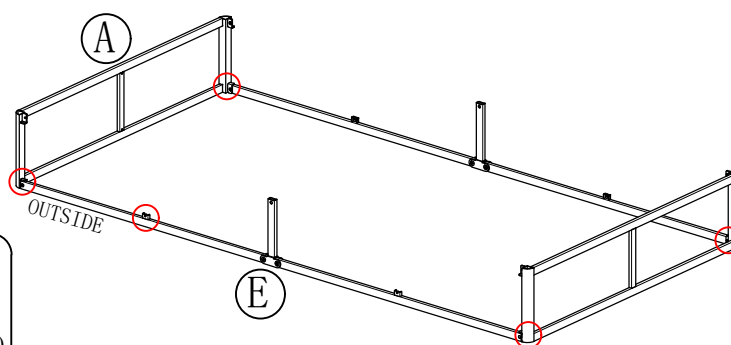


Detail



## Step2:

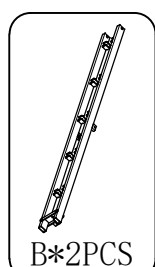

B\*2PCS


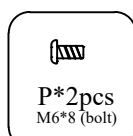


P\*2pcs  
M6\*8 (bolt)



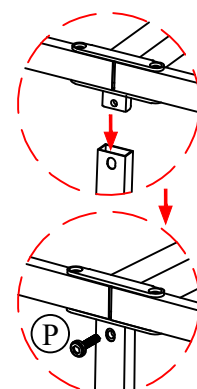
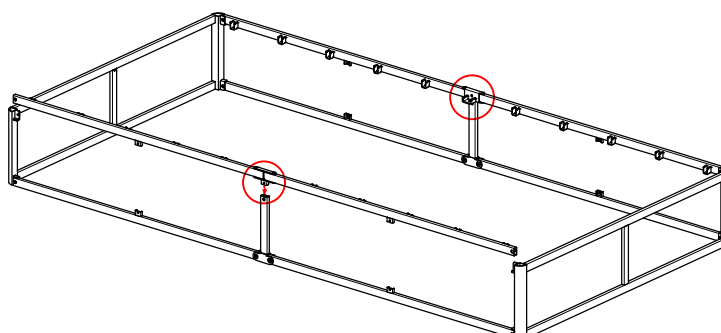


P





### Step3:

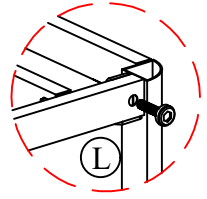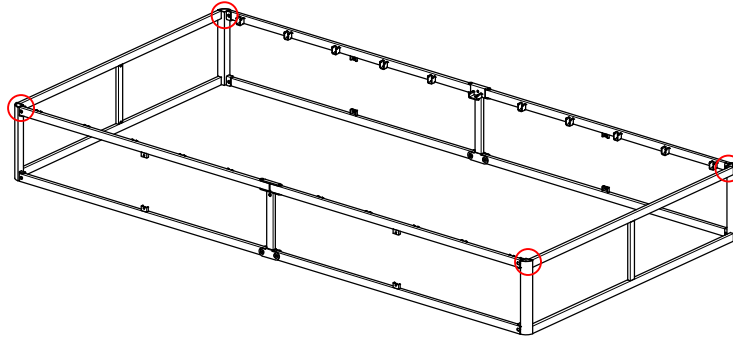



### Step4:

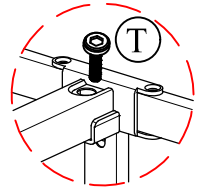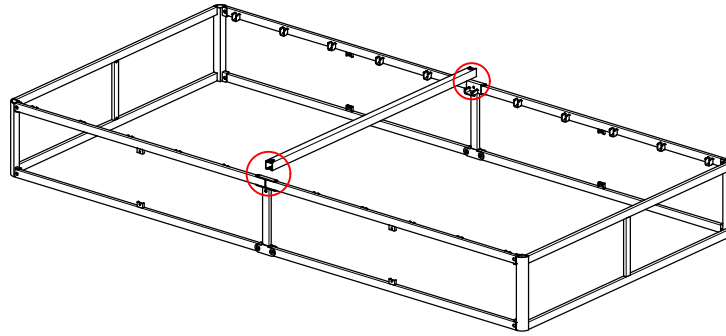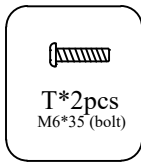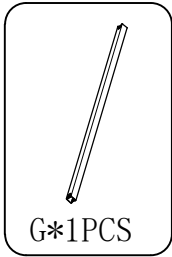

### Step5:

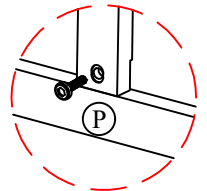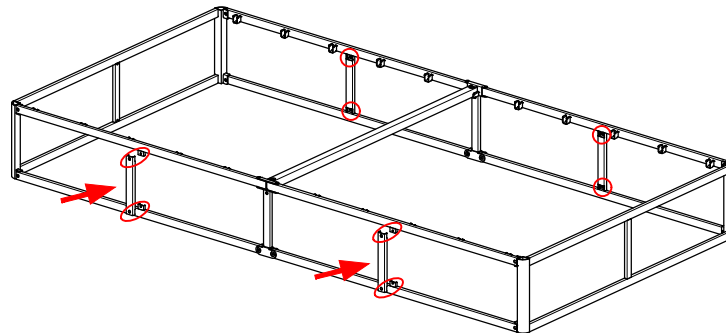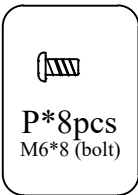
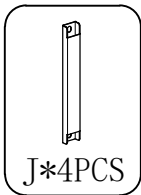


### Step6:

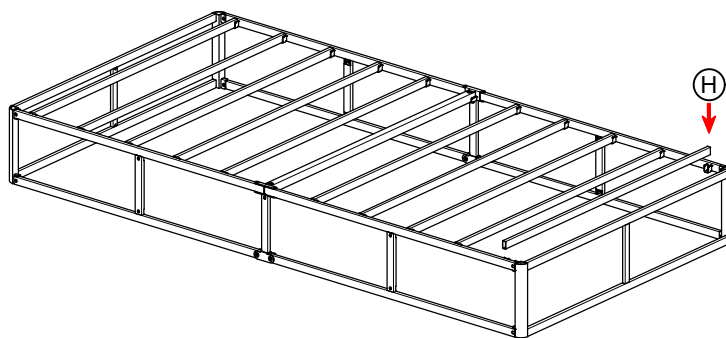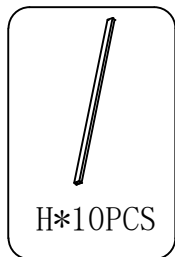

### Step7:

(Put on the fabric bedcover)

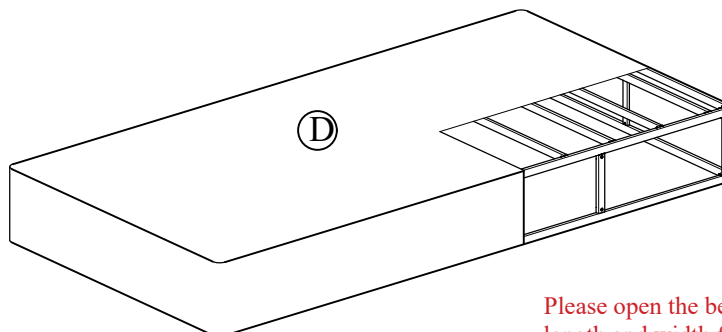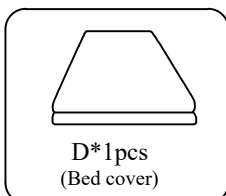

Please open the bed cover and distinguish the length and width first before use it, and make sure it will cover the box spring perfect.