
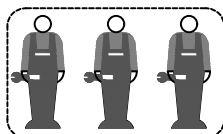



THE BED ASSEMBLY INSTRUCTIONS

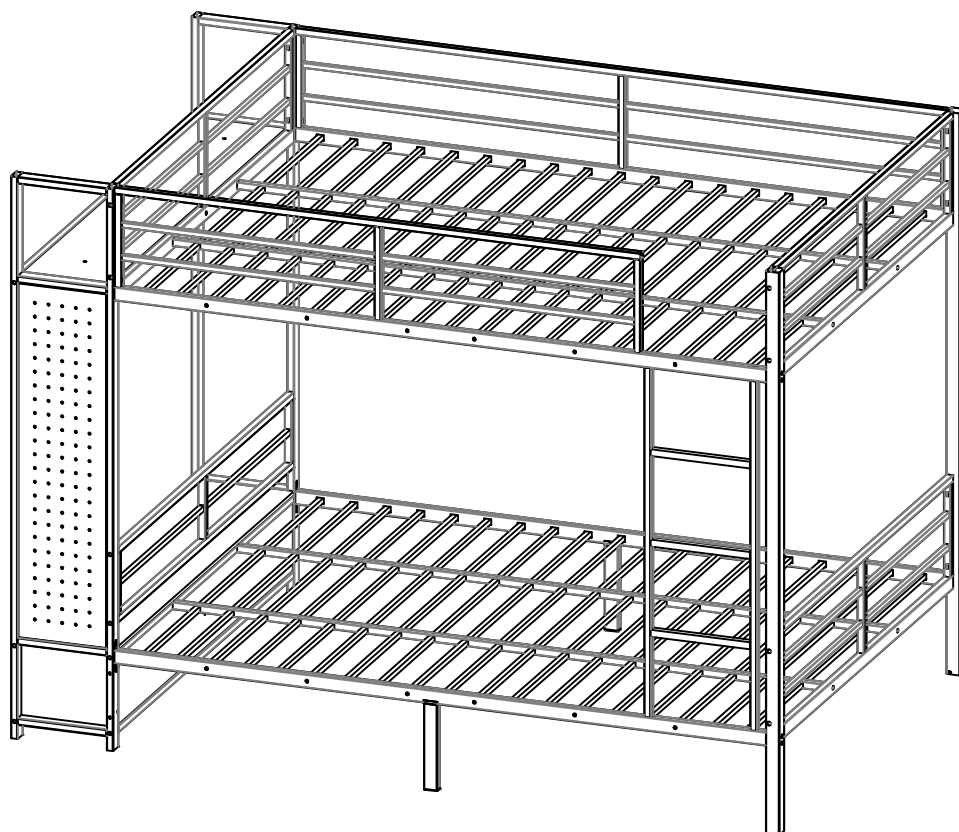








SAFETY WARNINGS AND GENERAL NOTES:

1. Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed.
 2. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
 3. Do not allow children under 6 years of age to use the upper bunk.
 4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
 5. Do not allow horseplay on or under beds.
 6. Always prohibit jumping on the bed.
 7. Prohibit more than one person on upper bunk.
 8. Always use the ladder for entering and leaving the upper bunk.
 9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
 10. Use of a night-tight may provide added safety precaution for a child using the upper bunk.
 11. Always use guardrails on both long sides of the upper bunk.
 12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
The use of water or sleep flotation mattresses is prohibited.
 13. **STRANGULATION HAZARD**-Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.
 14. Keep these instructions for future reference.
 15. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
 16. Be certain all staples are out of the box before beginning assembly on the shipping carton.
 17. USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON
- | | | | |
|---------------------------------------|---------|--------|-----------|
| Down bed | | | |
| Mattress type | Length | Width | Thickness |
| Full Standard | 74"-75" | 53-54" | 8" |
| Up bed (bunk bed and tribed included) | | | |
| Mattress type | Length | Width | Thickness |
| Full Standard | 74"-75" | 53-54" | 6"Max |
18. SURFACE OF MATTRESS MUST BE AT LEAST 5"(127MM) BELOW THE UPPER EDGE OF GUARDRAILS.
 19. Replacement Parts:
Replacement Parts, including additional guardrails, may be obtained from any of our (Shenzhen Yuefeng Zhiqi Technology Co.,Ltd) dealers.

Bed parts view

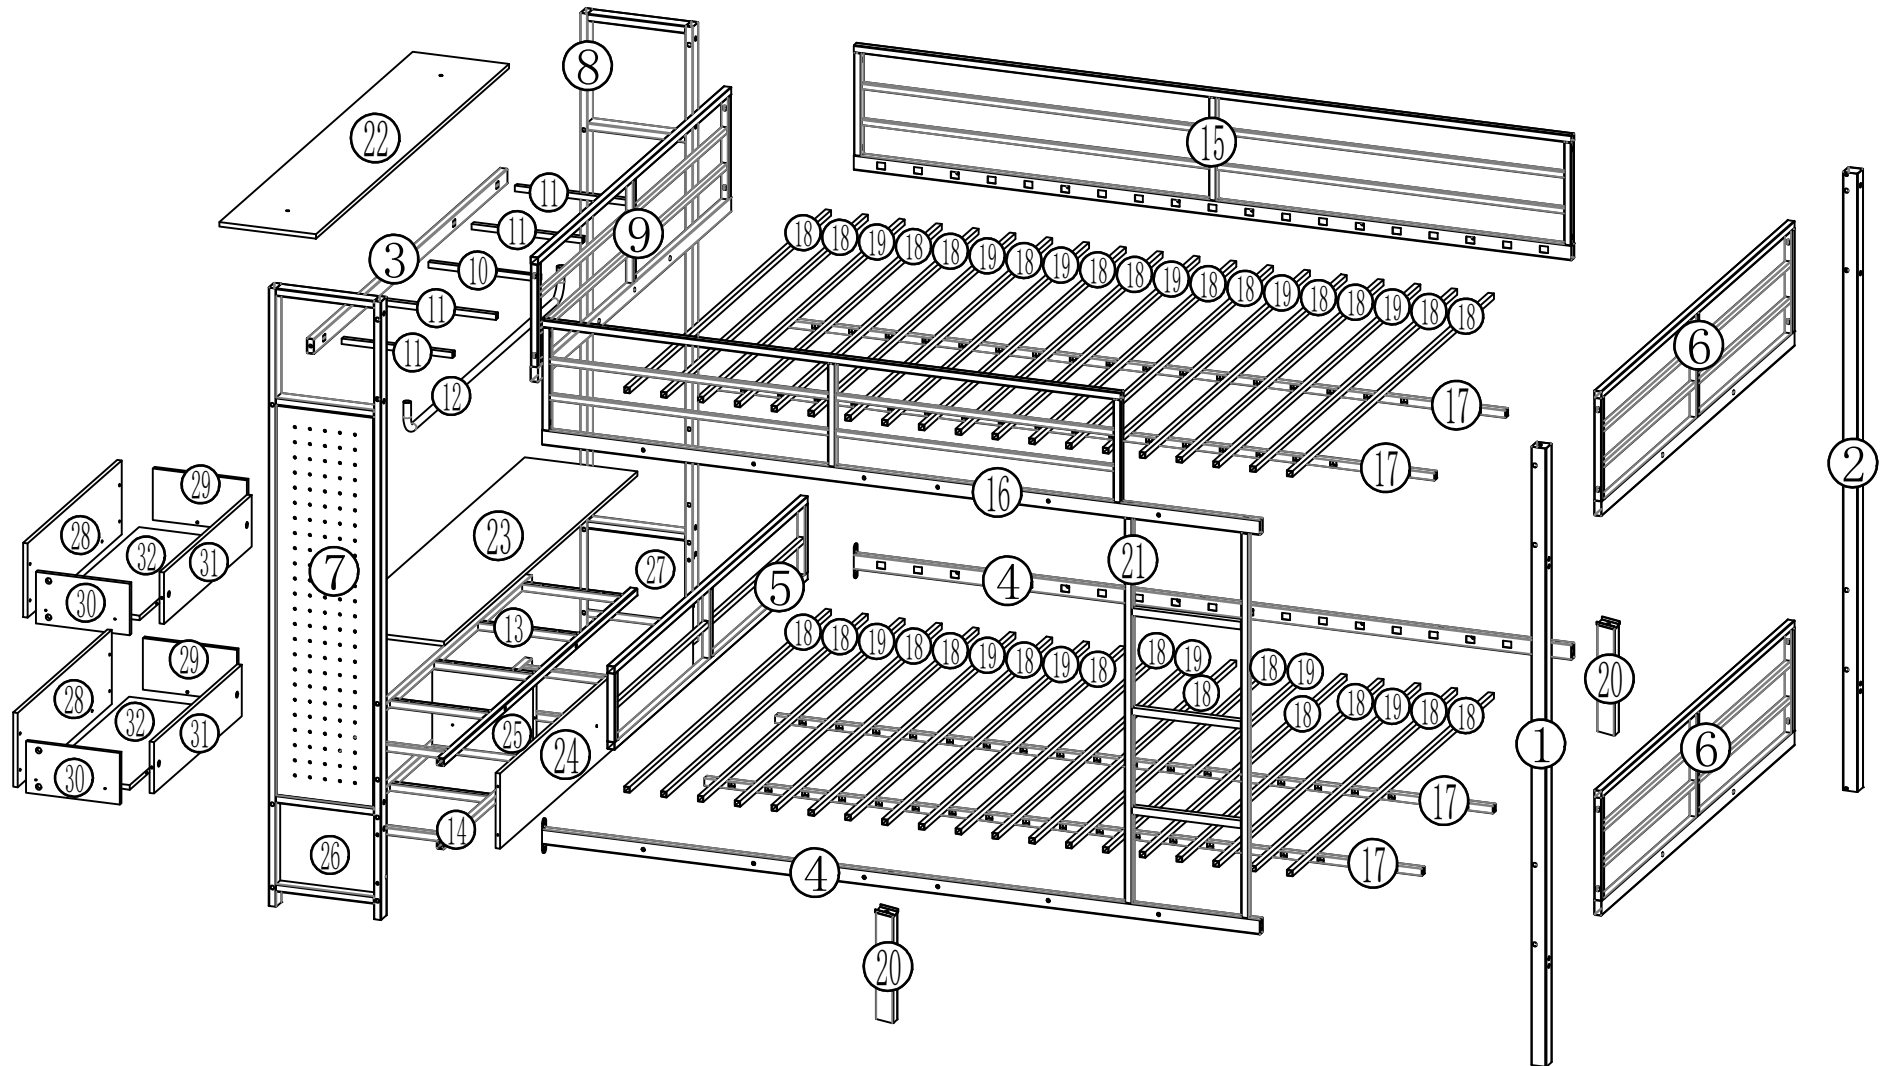

Part List

					
#1--1PCS	#2--1PCS	#3--1PCS	#4--2PCS	#5--1PCS	
					
#6--2PCS	#7--1PCS	#8--1PCS	#9--1PCS	#10--1PCS	
					
#11--4PCS	#12--1PCS	#13--1PCS	#14--1PCS	#15--1PCS	
					
#16--1PCS	#17--4PCS	#18--26PCS	#19--12PCS	#20--2PCS	
					
#21--1PCS	#22--1PCS	#23--1PCS	#24--1PCS	#25--1PCS	#26--1PCS
					
#27--1PCS	#28--2PCS	#29--2PCS	#30--2PCS	#31--2PCS	#32--2PCS


Hardware List

																	
A-M4*10 16PCS	B-M8*15 4PCS	C-M8*35 14PCS	D-M8*55 40PCS	E-M6*25 26PCS	F-M8*15 18PCS	G-M4*35 12PCS	H-M4*50 4PCS	K-76PCS	L	M	N-M4*25 9PCS	P-M4*18 2PCS	O-1PCS	S-M6 24PCS	T-24PCS	U-2PCS	V-4PCS

Follow the steps below
to use the camlocks.


Step 1:

According to the assembly instructions, first press the male camlock into the wooden board hole, then use a screwdriver to connect the male camlock. (DO NOT OVER TIGHTEN. NE PAS SERRER EXCESSIVEMENT)

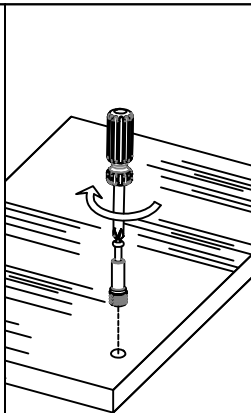

Step 2:


Push the male camlock into the entry hole

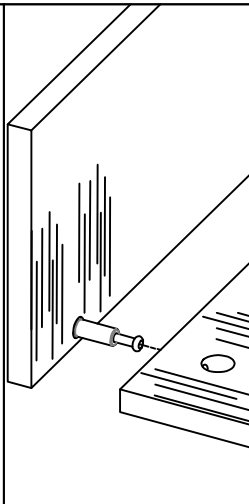

Step 3:

Insert the female camlock as shown in the instruction.

Note:
ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock

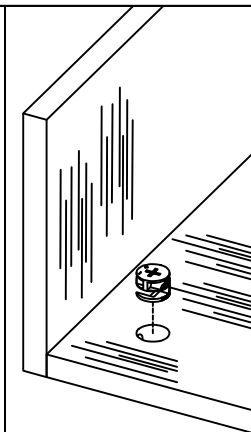


Step 4:


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure

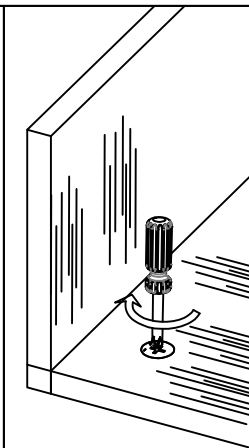


Step 1:

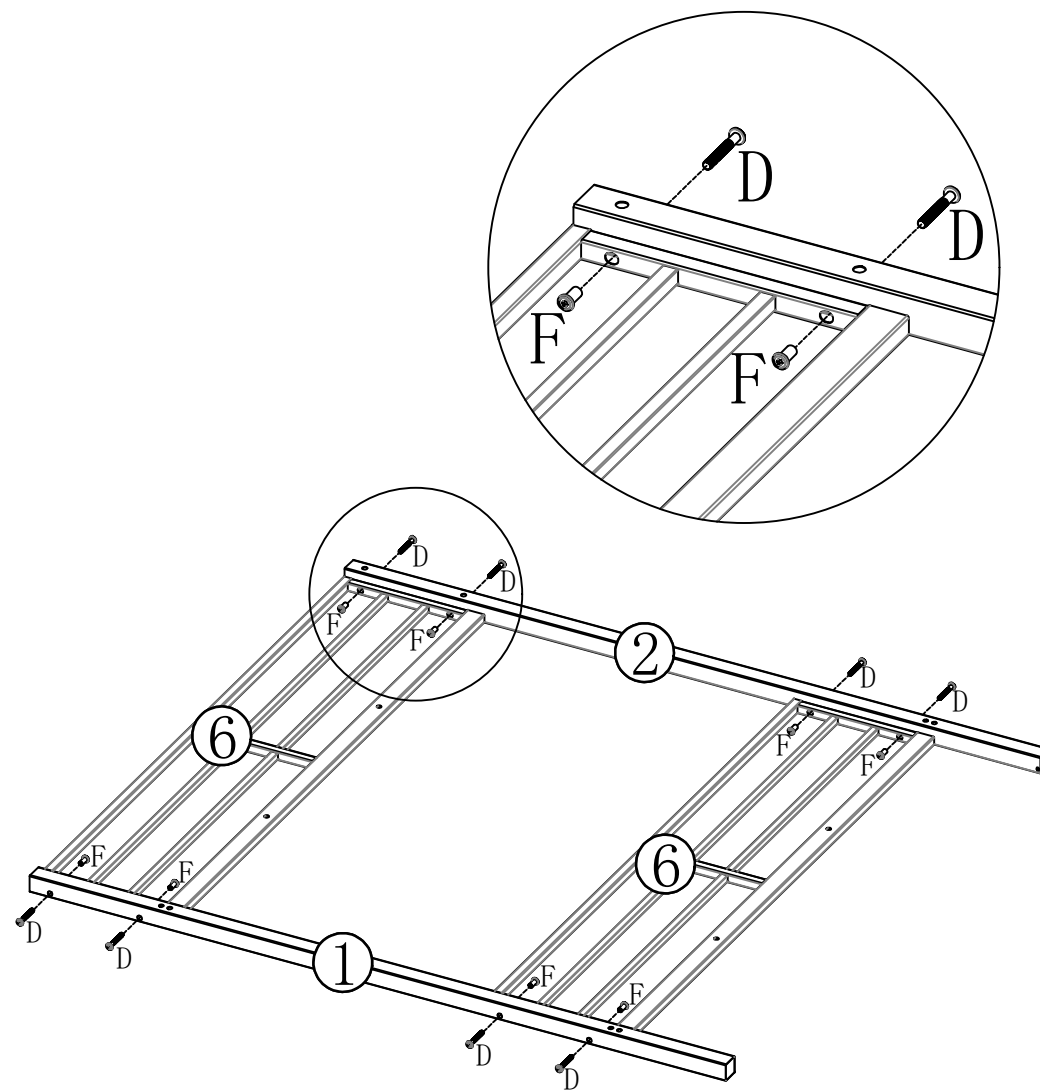

D
8*55-8PCS





F
8*15-8PCS




L

Step 2:

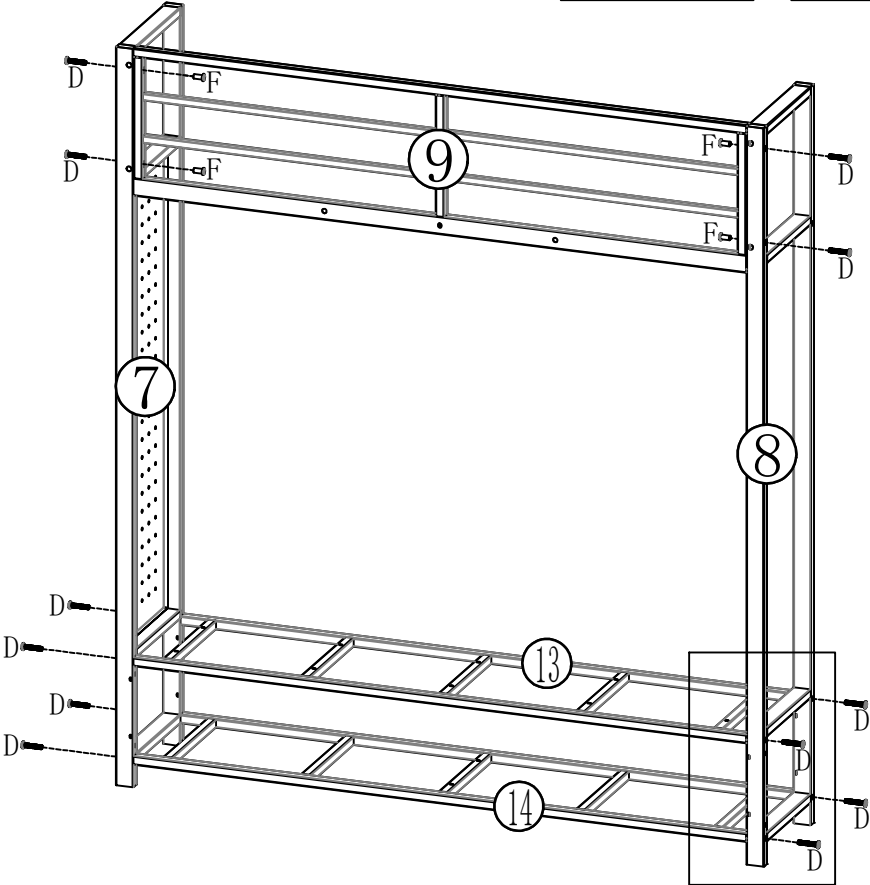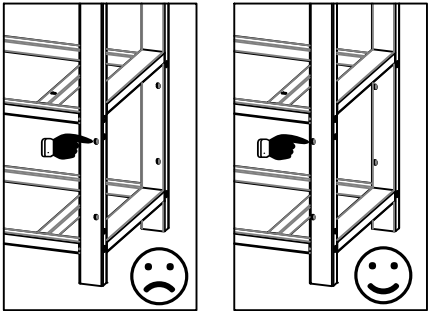

Step 3:

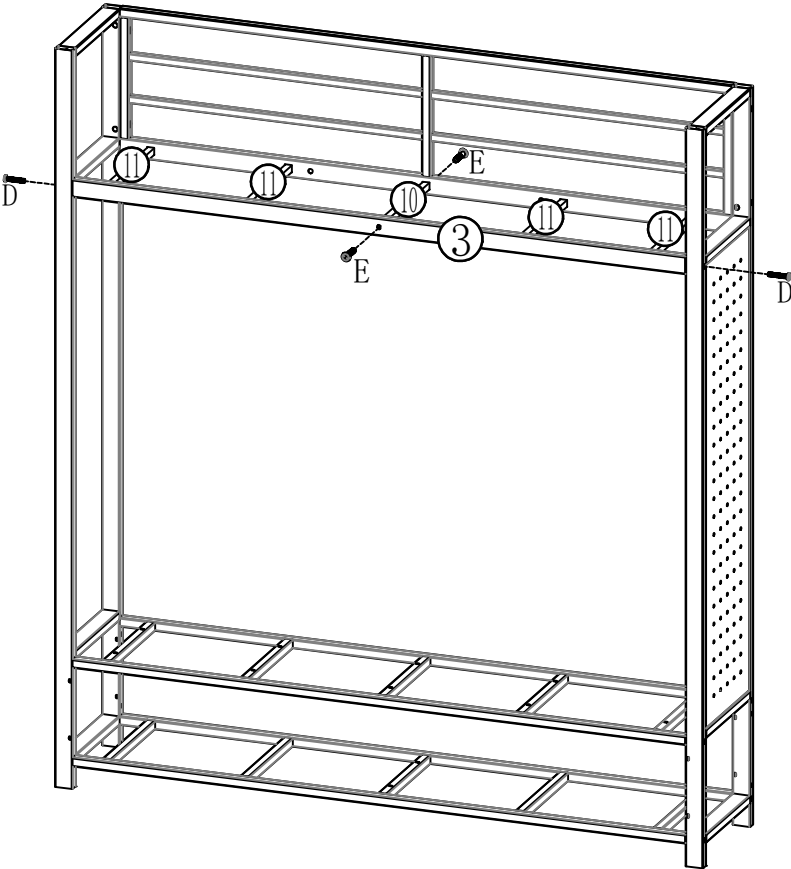

D
8*55-12PCS



F
8*15-4PCS



L



D
8*55-2PCS








E
6*25-2PCS



L

Step 4:


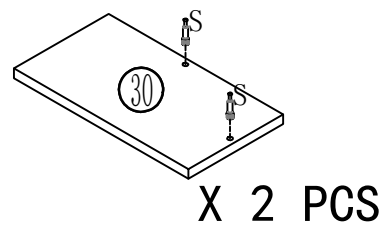
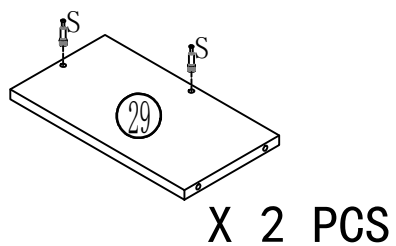
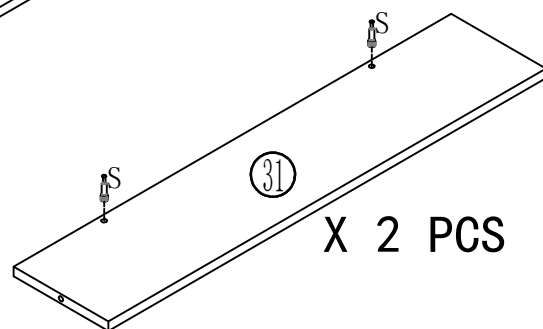
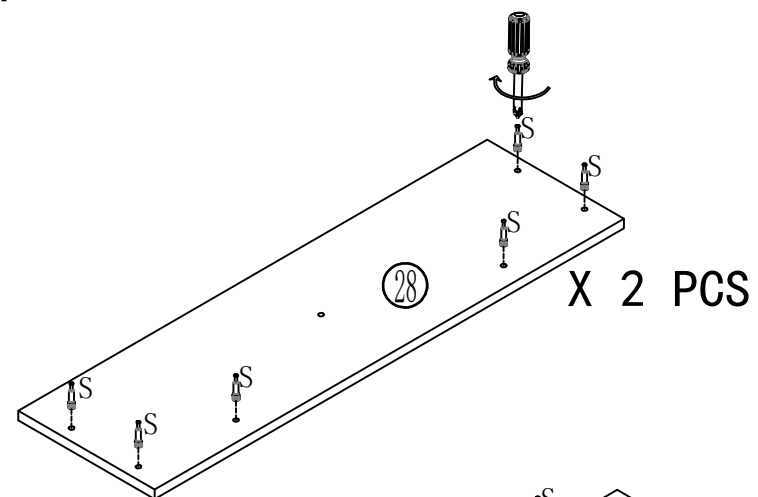


S
6*25-24PCS



M

Step 5:

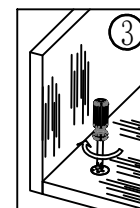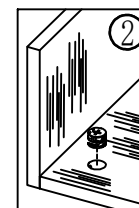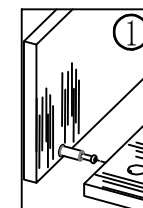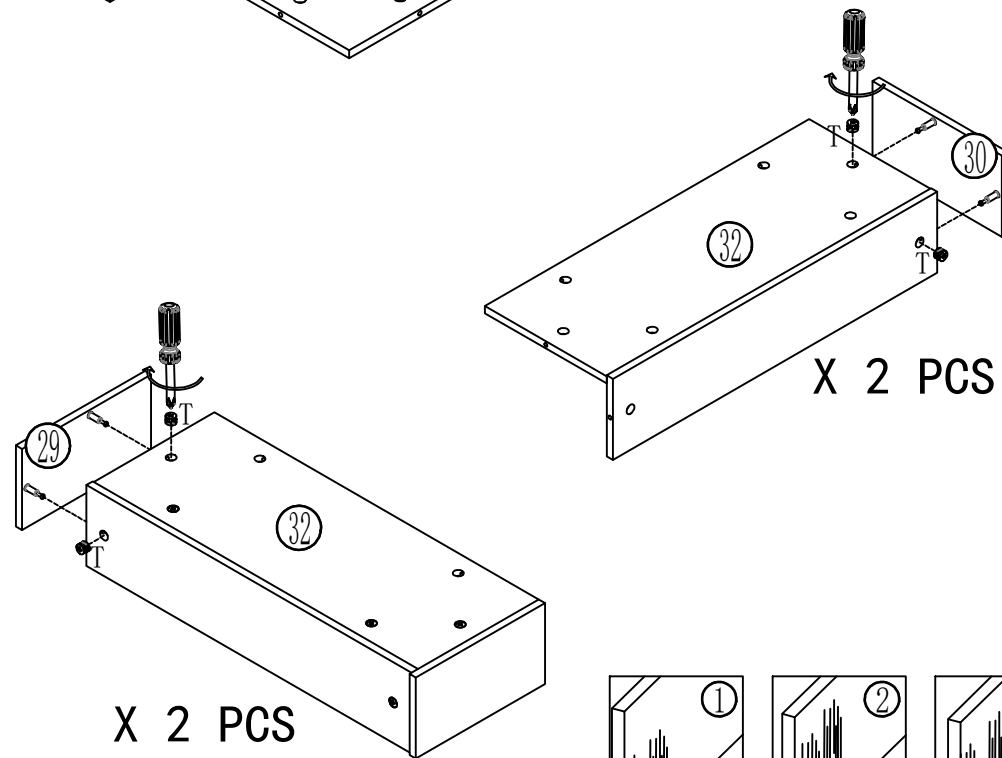
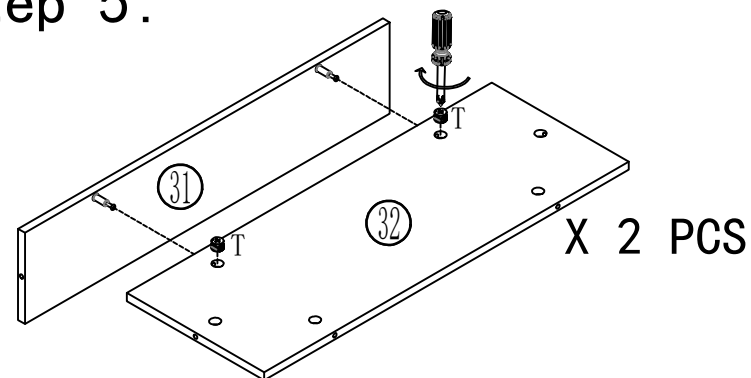


T
12PCS







M

Step 6:

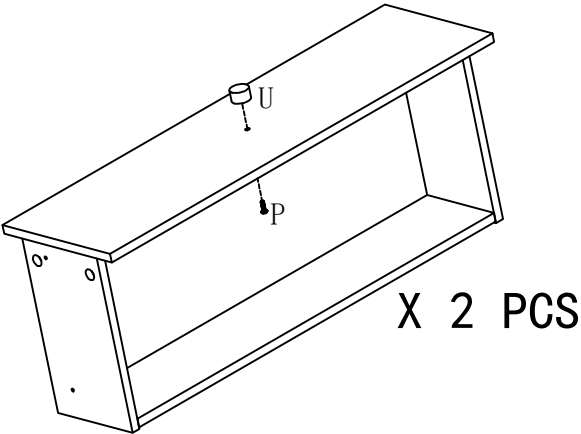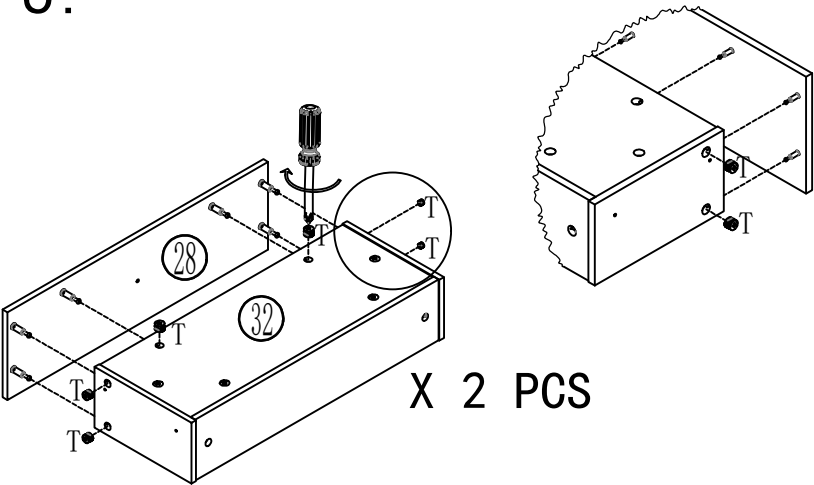

Step 7:

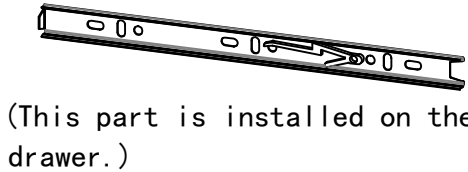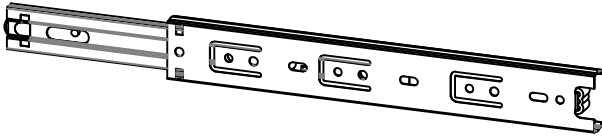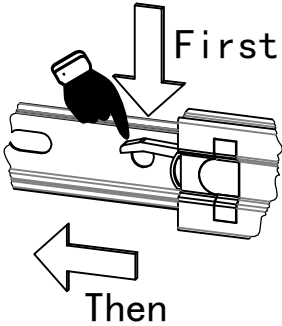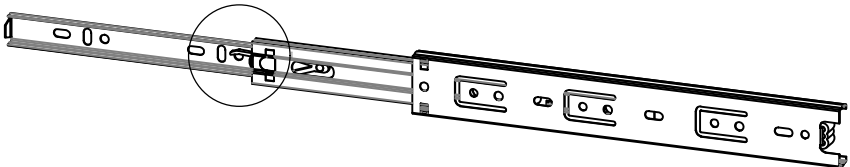

T
12PCS



U
2PCS



P
4*22-2PCS




M






V-4PCS

Step 8:

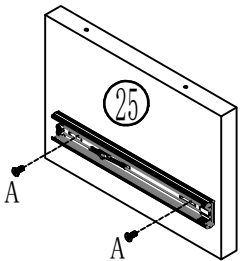

Flip this wooden board
to the other side, then
install three-section slide
rails as well.

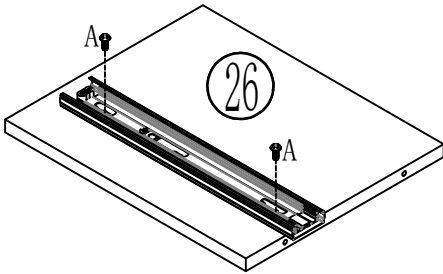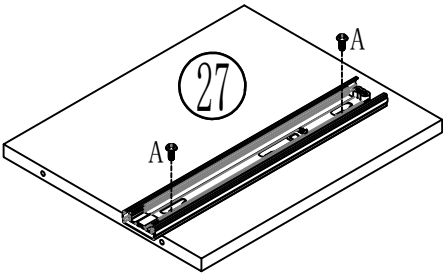
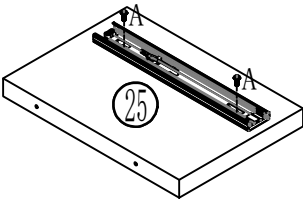


A
4*10-8PCS




M

Step 9:

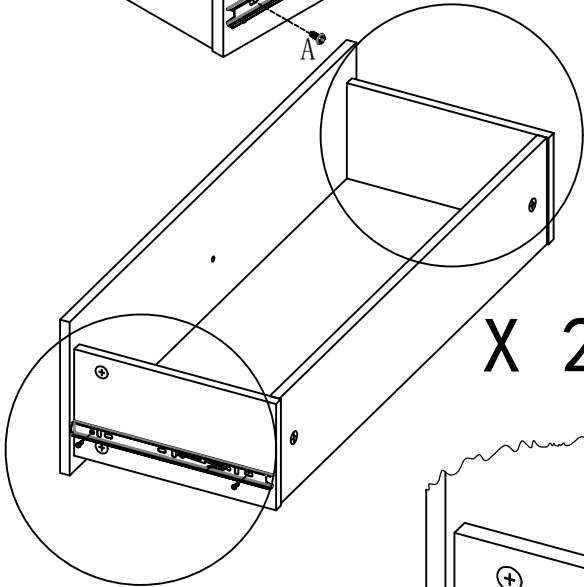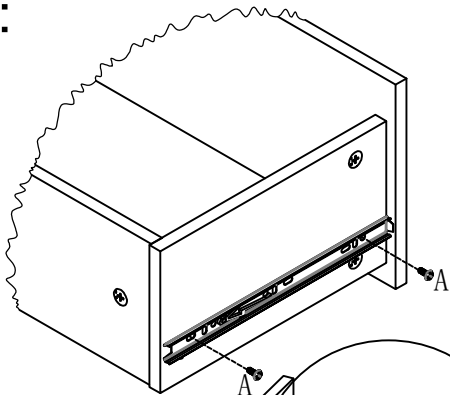

X 2 PCS

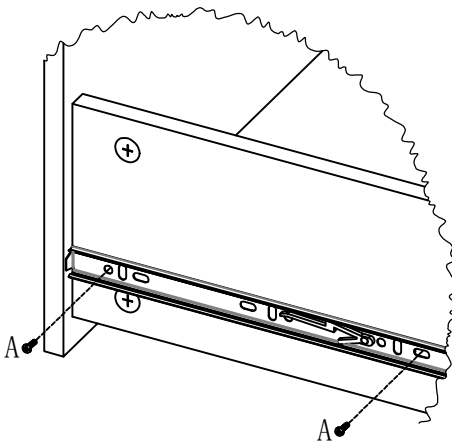


A
4*10-8PCS



M

Step 10:

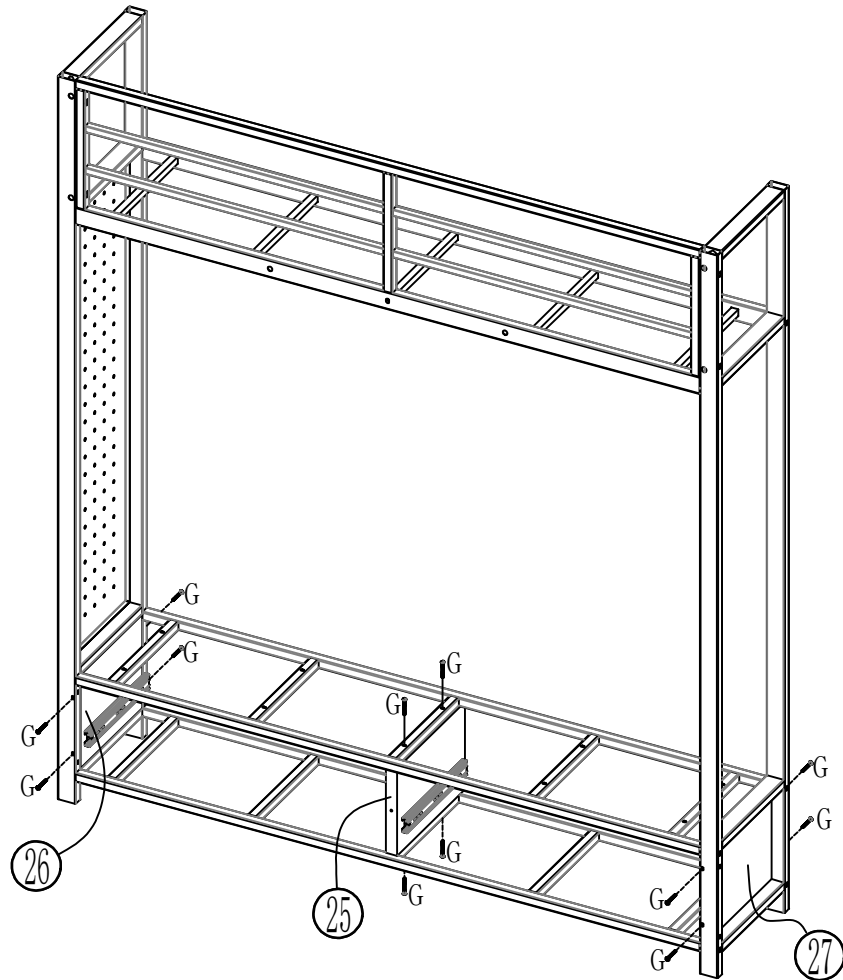


G
4*35-12PCS



M

Step 11:

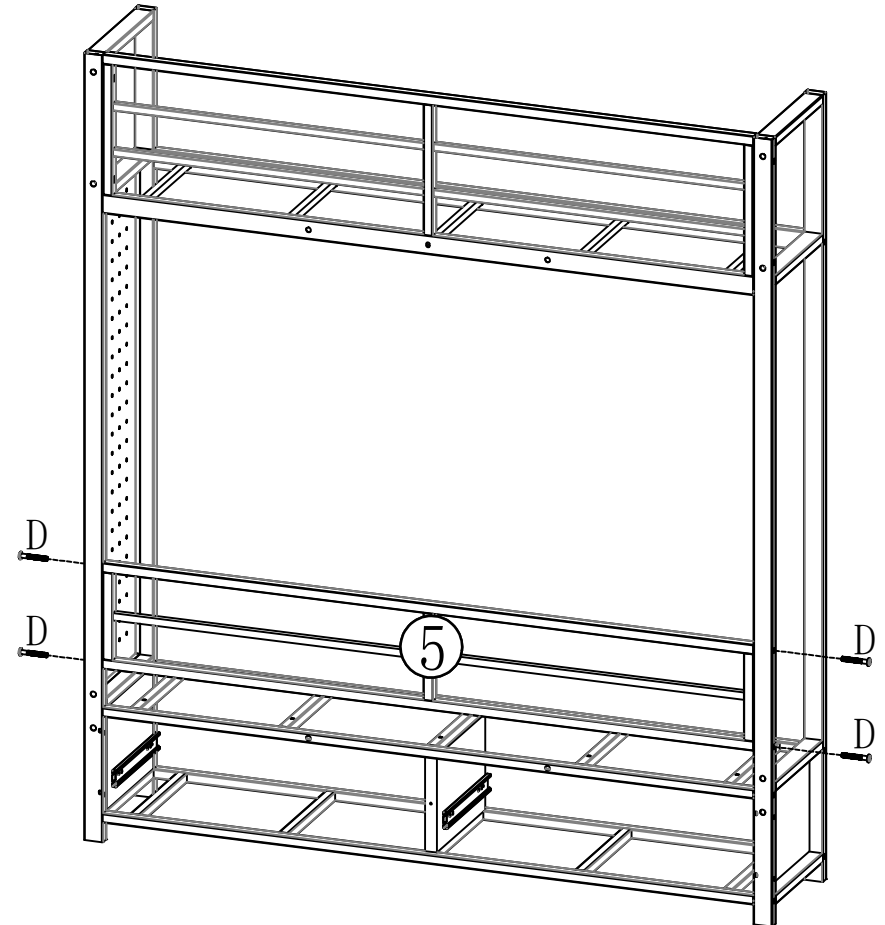


D
8*55-4PCS




L

Step 12:

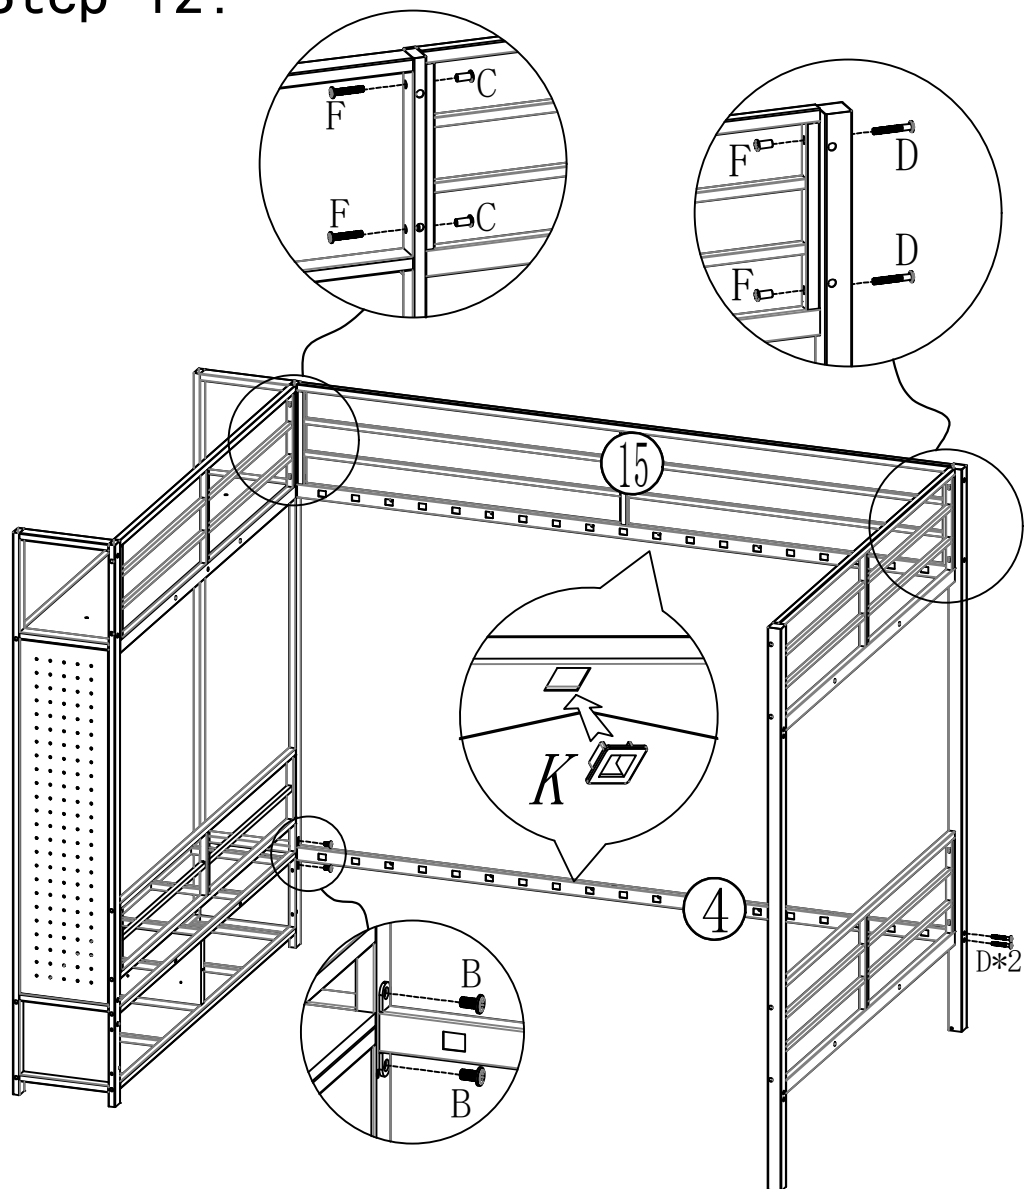


Step 13:

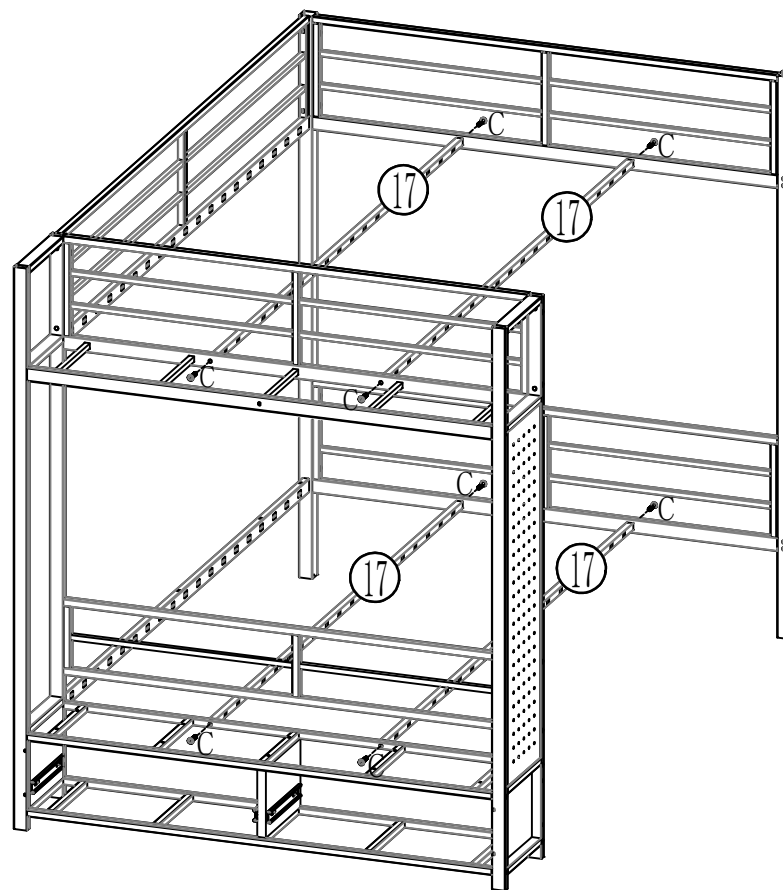


							
B	C	D	F	K	L	C	L
M8*15--2PCS	M8*35-2PCS	M8*55-4PCS	M8*15-4PCS	K--38PCS		M8*35-8PCS	

Step 14:

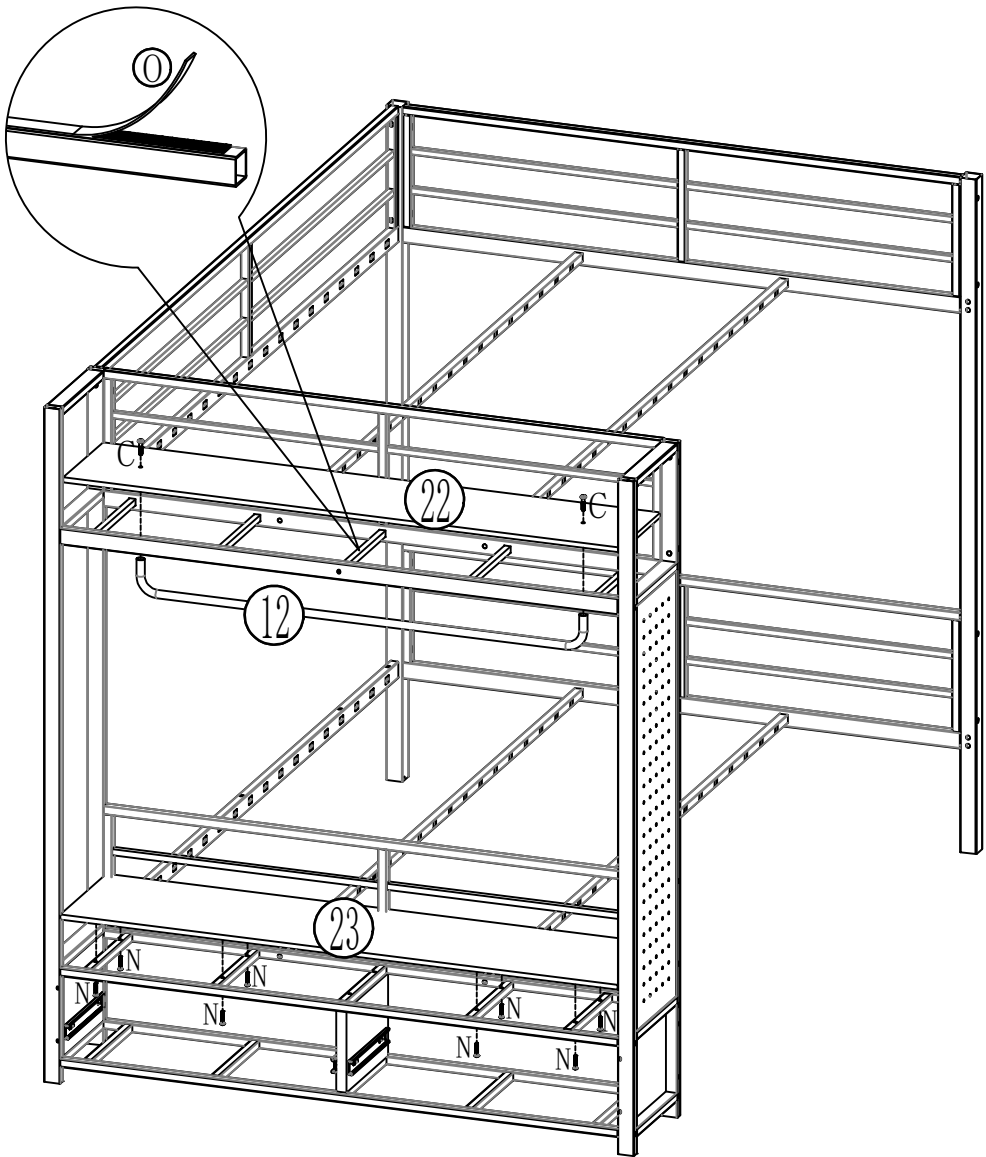

Step 15:

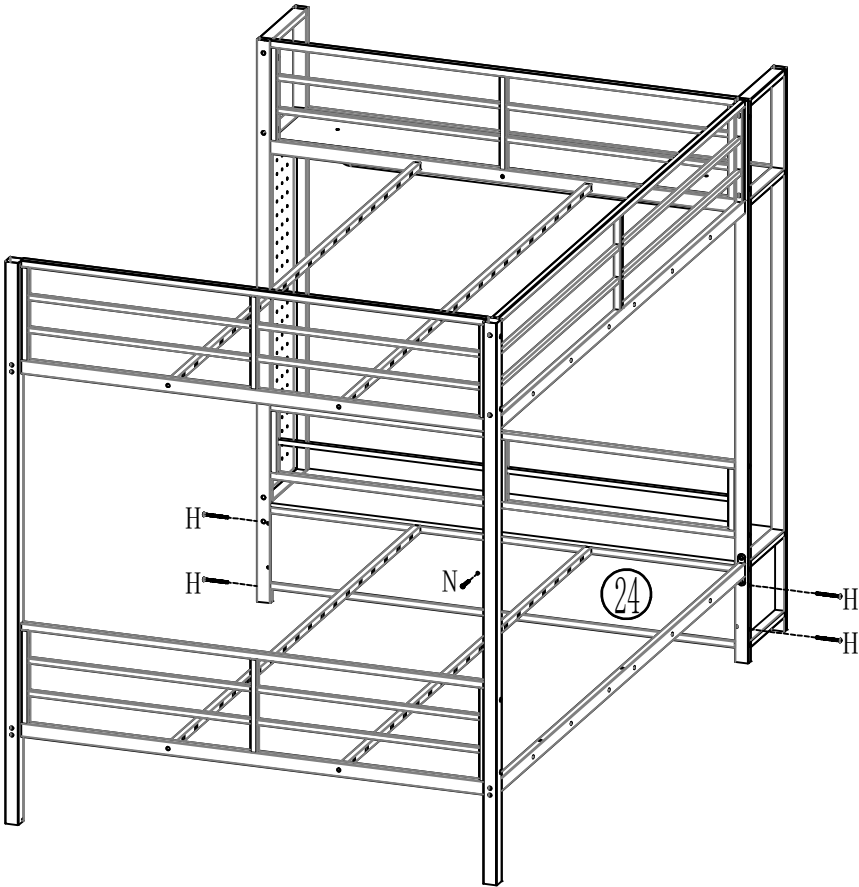


C
M8*35-2PCS



N
4*25-8PCS



M



L



H
4*50-4PCS




N
4*25-1PCS




M


Step 16:

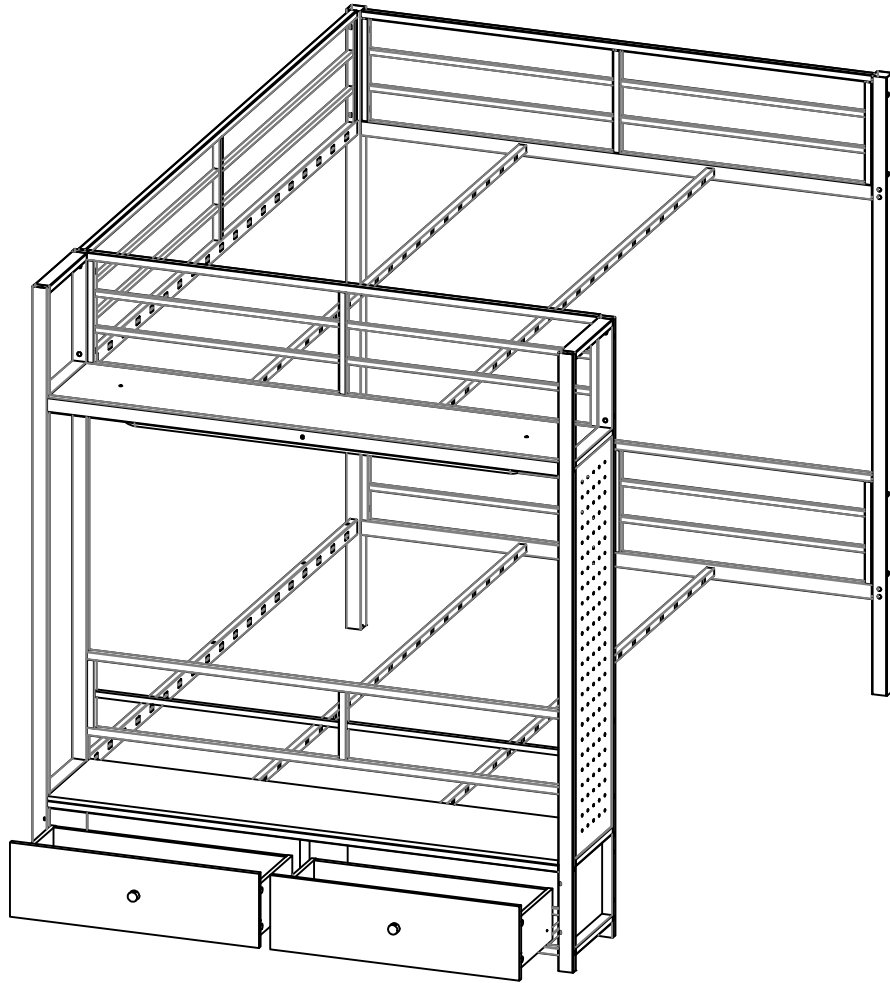


Step 17:


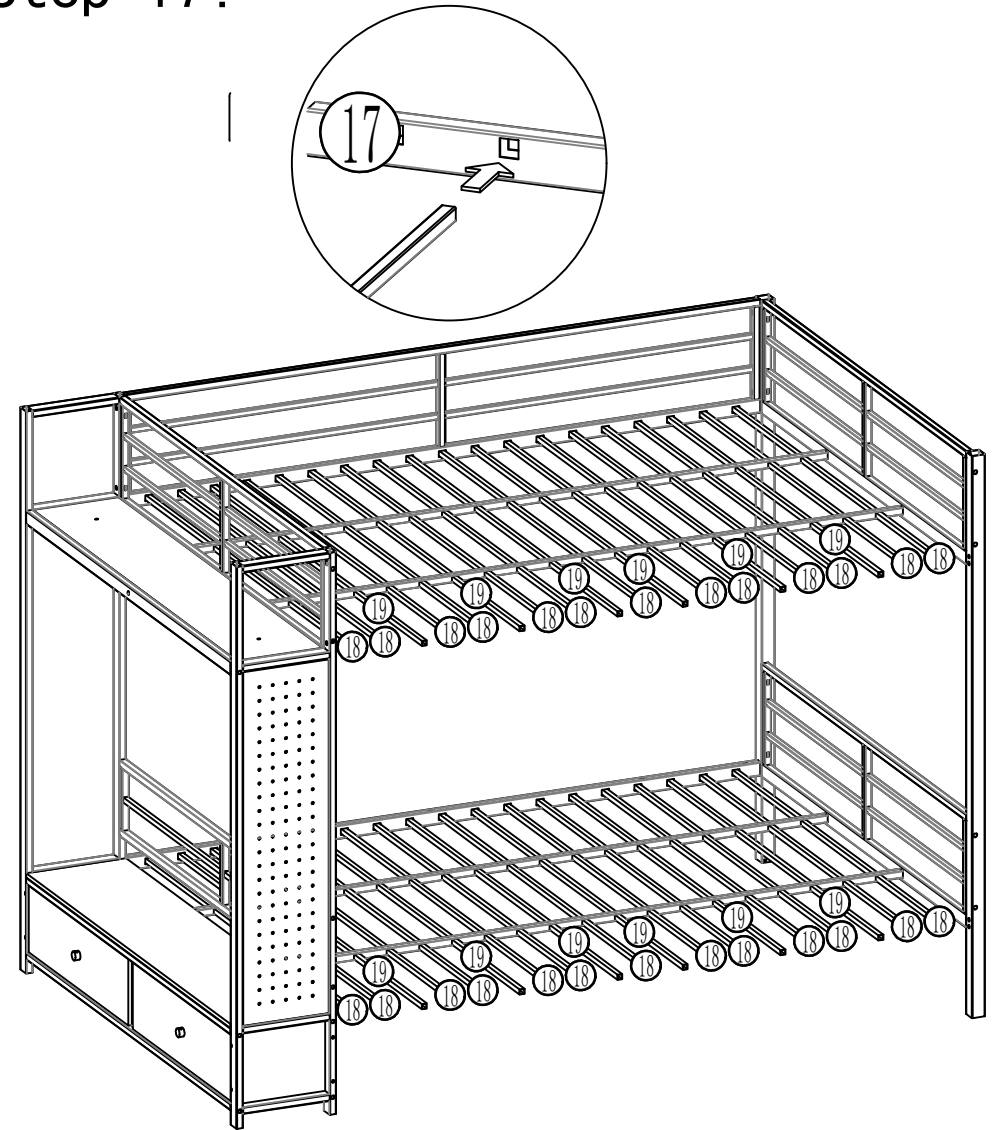


Step 18:

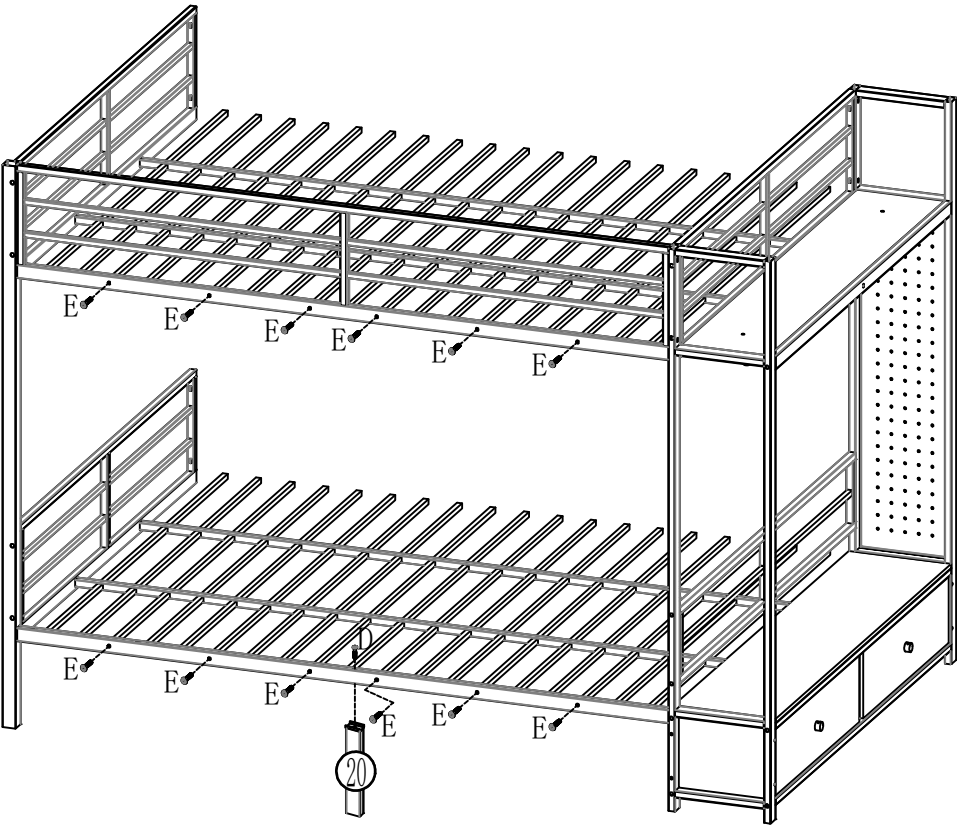


Step 19:

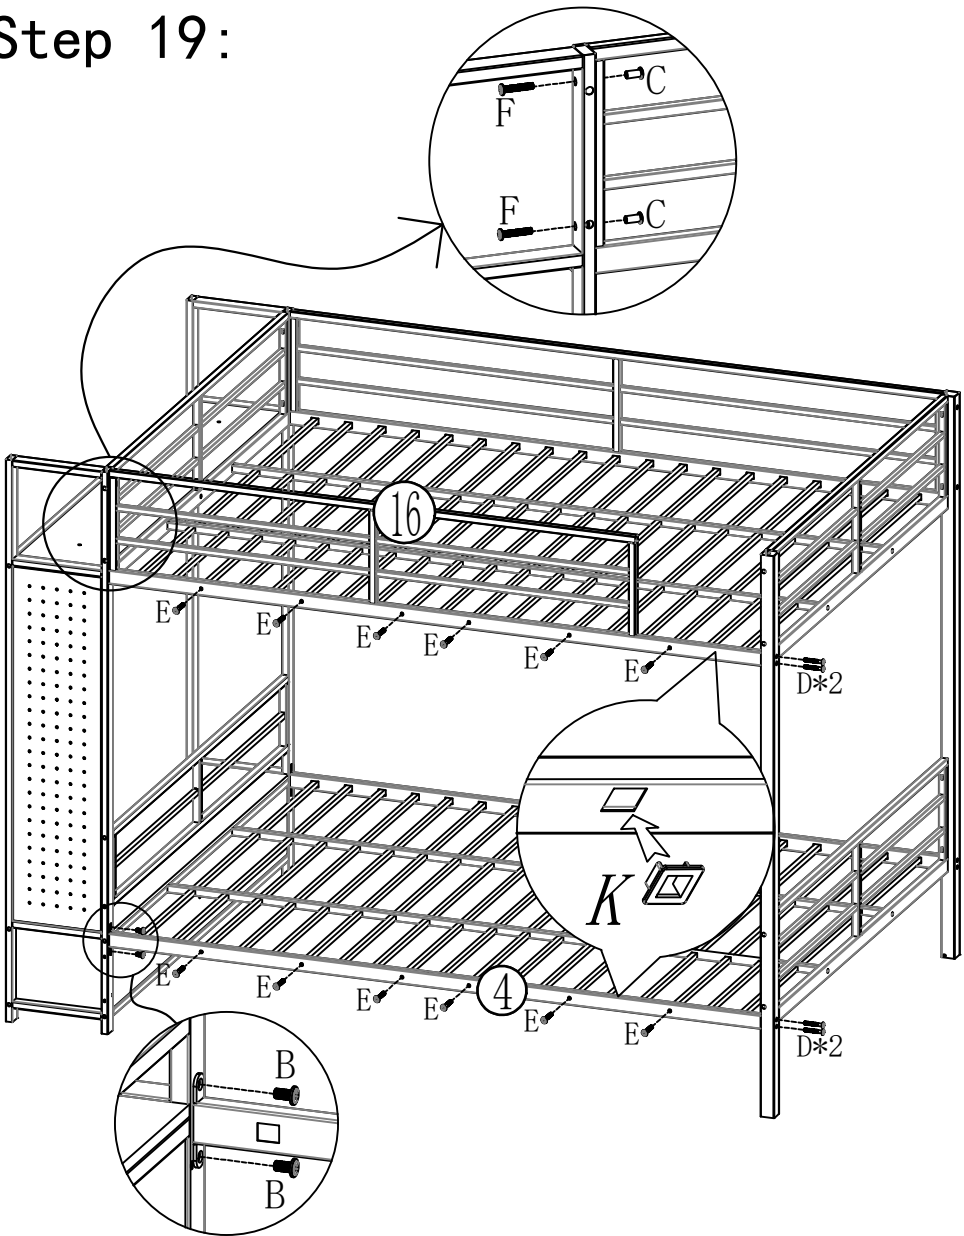

									
D M8*55-1PCS	E M6*25-12PCS	L	B M8*15 2PCS	C M8*35 2PCS	D M8*55 4PCS	E M6*25 12PCS	F M8*15 2PCS	K-38PCS	L

Step 20:

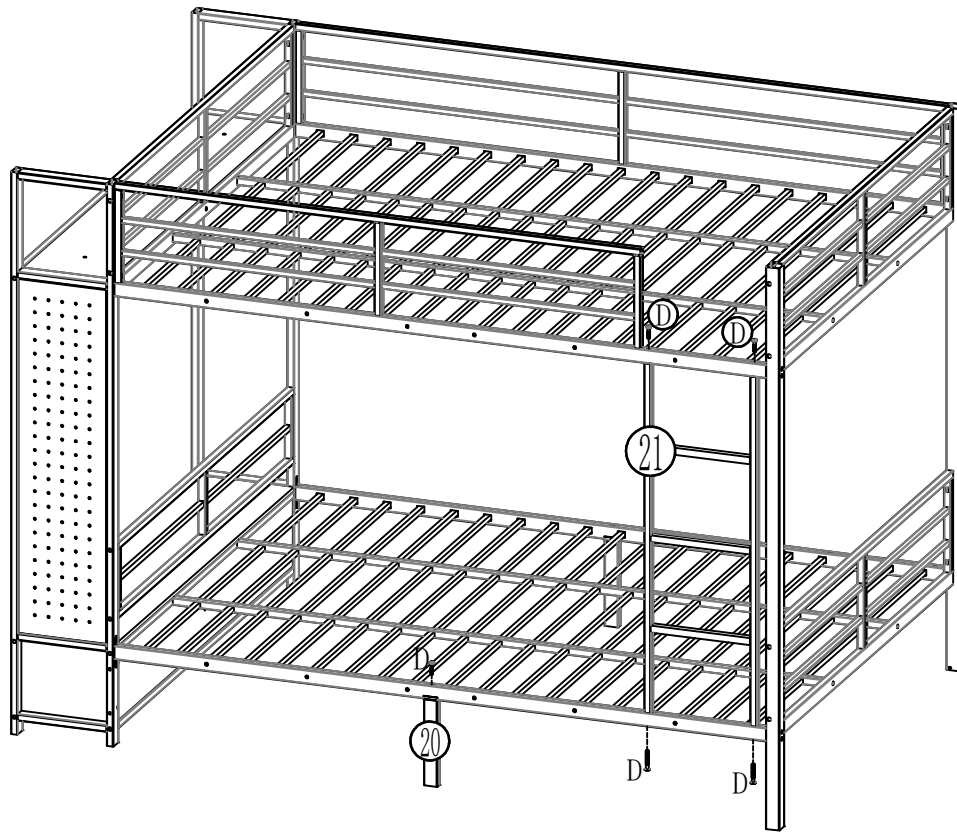


D
M8*55-5PCS



L

Completed

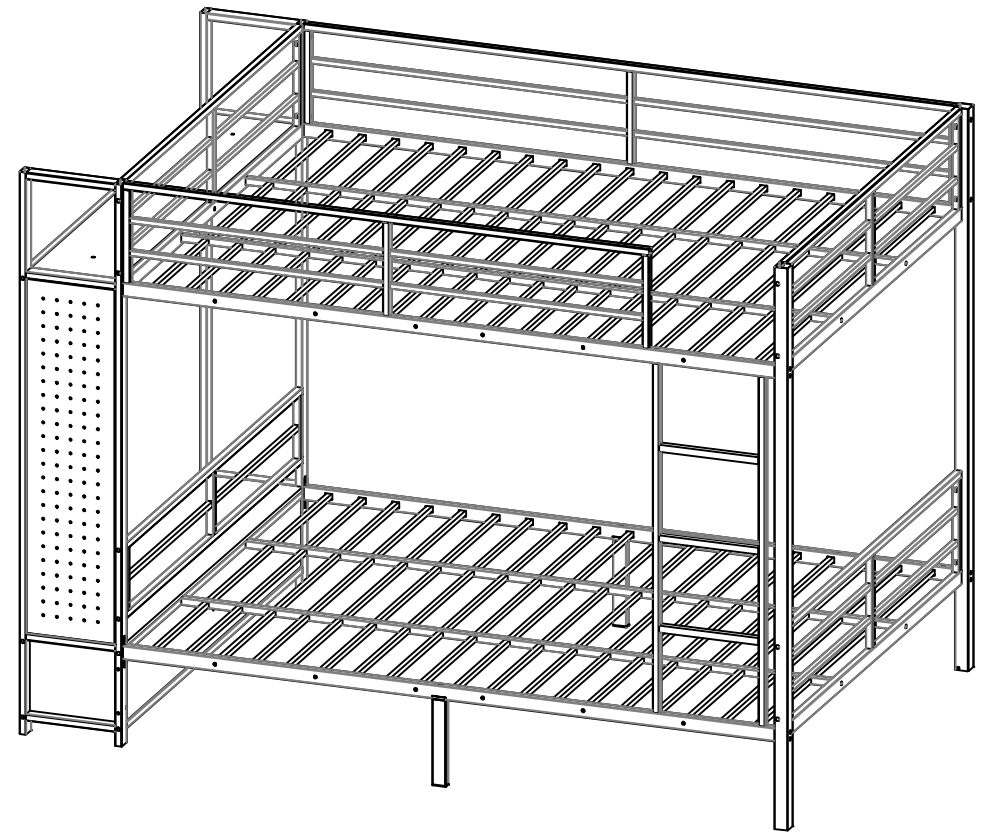

Attention

*Please make sure all bolts are fastened before use
thank you.*