


IMPORTANT NOTE










1. Please check that all parts are complete before installation.
2. Please strictly follow the installation steps to install.
3. Please install the bed on a clean and smooth surface to prevent any damage.
4. Please do not use the power tools to assemble the bed.
5. Please periodically check all the fittings and re-tighten as necessary.
6. Please do not use the bed unless all bolts and screw are firmly secured.
7. Please contact us if you need any help, we will reply you in six hours.

Important tips:





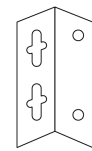
Don't tighten the screws first, make sure all parts are installed before tightening the screws.

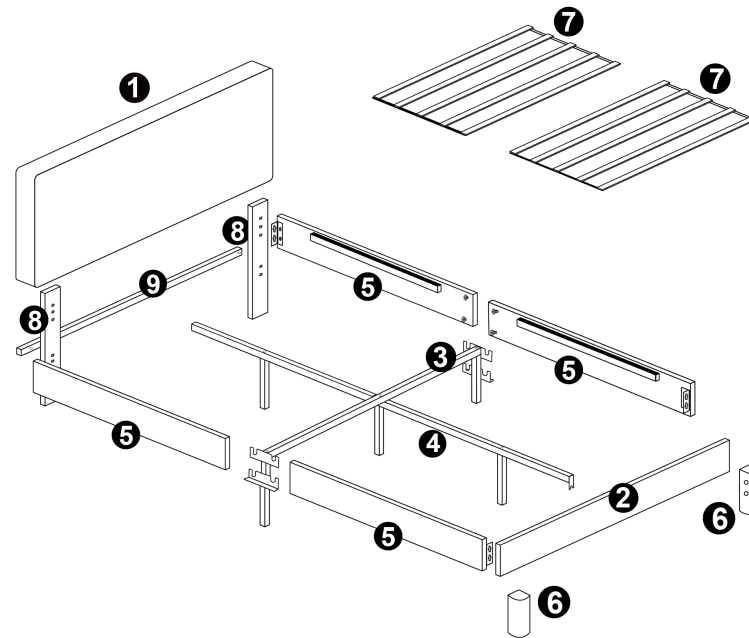


PART LIST
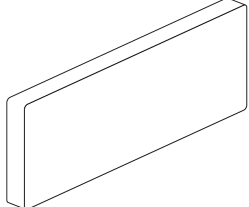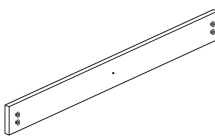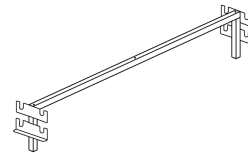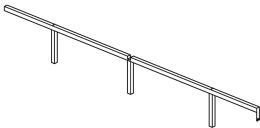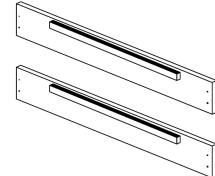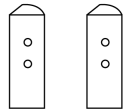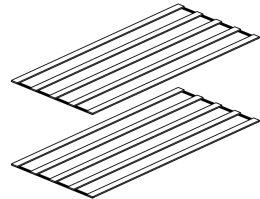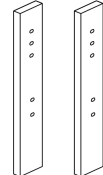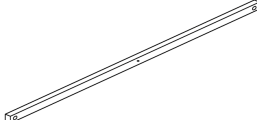
| | | |
|--|---|---|
| <p>(1) Headboard panel x 1pcs</p>  | <p>(2) Tailboard x 1pcs</p>  | <p>(3) Transverse center x 1pcs</p>  |
| <p>(4) Center support bar x 1pcs</p>  | <p>(5) Side panel x 4pcs</p>  | <p>(6) Leg with anti-slip gasket x 2pcs</p>  |
| <p>(7) Slat x 2pcs</p>  | <p>(8) Headboard support x 2pcs</p>  | <p>(9) Headstock bar x 1pcs</p>  |


PART LIST

| | | |
|--|---|--|
| <p>Bolt M8x20mm x 41pcs</p>  <p>Bolt M8x40mm x 7pcs</p>  <p>Bolt M8x45mm x 5pcs</p>  <p>Bolt M8x20mm Spare parts x 1pcs Bolt M8x40mm Spare parts x 1pcs Bolt M8x45mm Spare parts x 1pcs</p> | <p>(H5) Allen Key M5 x1pc (Installation tool)</p>  | <p>Hanging piece</p>  |
|--|---|--|


Step 1 Lay the headboard (1) flat on the clean floor, put the headboard support frame (8) on it, and tighten it with (M8 X 45mm) and (H5).

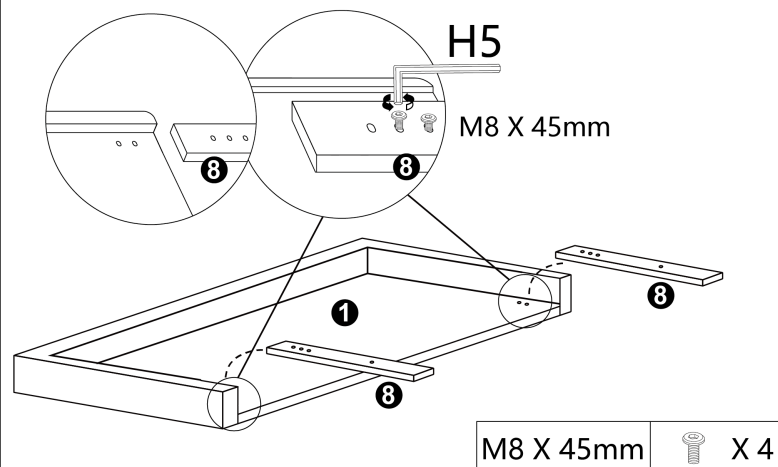

Step 2 Two heights can be adjusted.

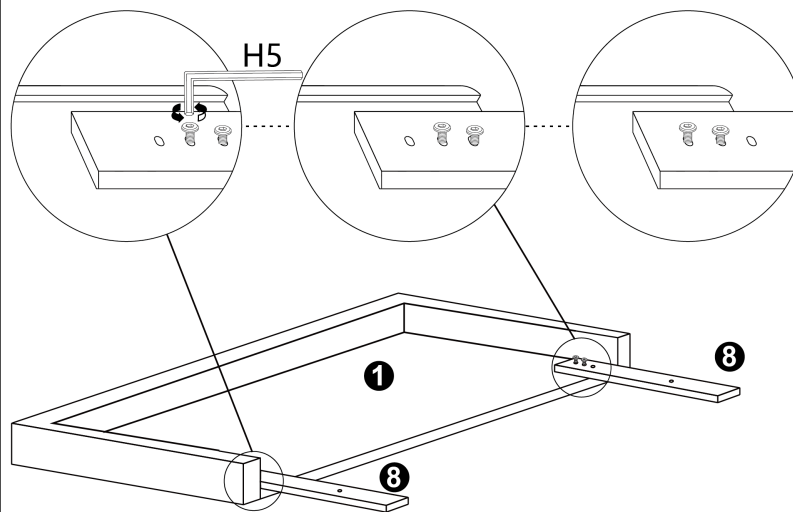


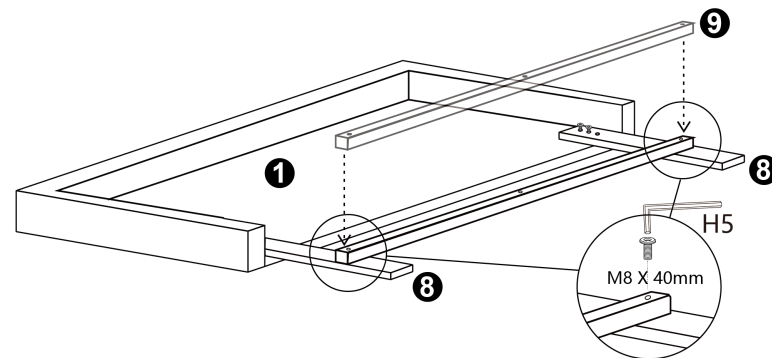

Step 3 Place the crossbar (9) on the bed foot (8) and tighten it with 40MM screws.




| | |
|-----------|---|
| M8 X 40mm |  X 2 |
|-----------|---|

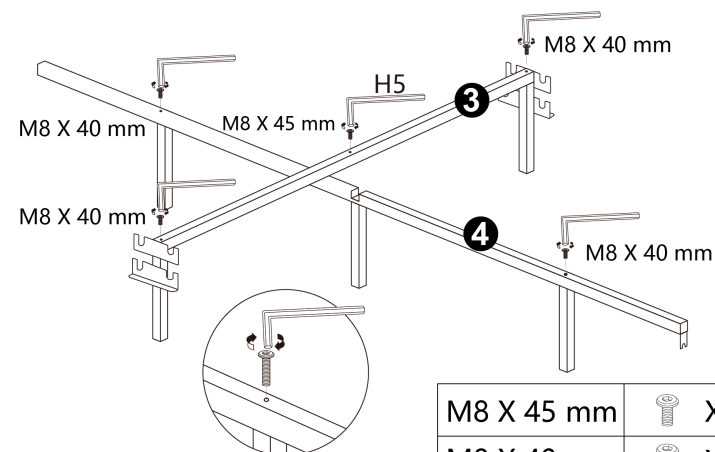

Step 4 Open part (3) and part (4), place part (3) on top of part (4), and tighten the corresponding screws.




| | |
|------------|---|
| M8 X 45 mm |  X 1 |
| M8 X 40 mm |  X 4 |

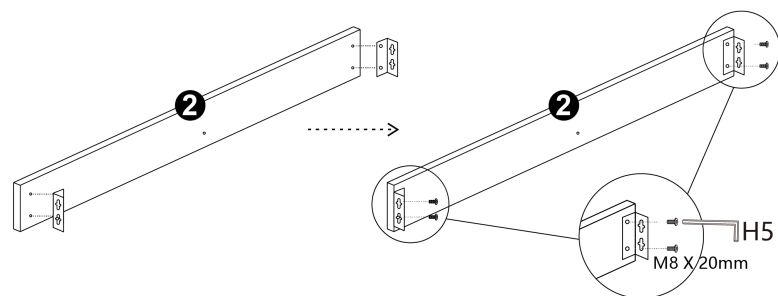
Step 5 Tighten the bracket into the hole on the upper tail plate (2) using a 20 mm screw.




| | | |
|---------------|---|-----|
| Hanging piece |  | X 2 |
| M8 X 20mm |  | X 4 |

Step 6 Align the bed legs (6) to the holes on the upper bed footboard and tighten them with 20 mm screws.

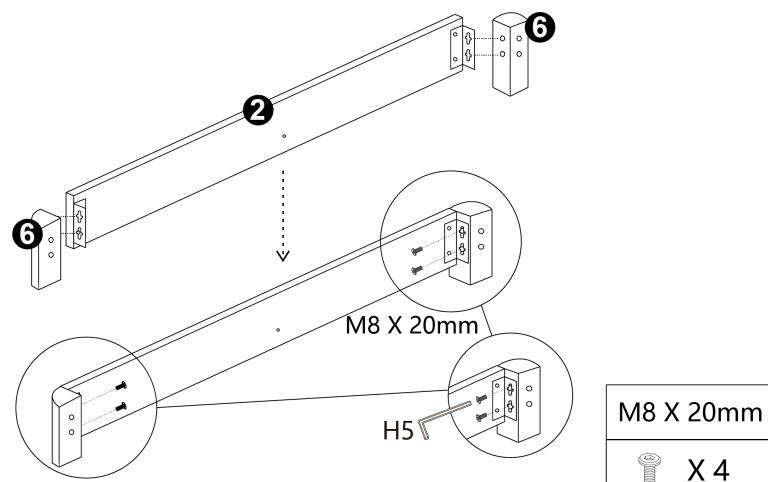


| | | |
|-----------|---|-----|
| M8 X 20mm |  | X 4 |
|-----------|---|-----|


Step 7 The two bed side panels have a lock plate on the left and screws on the right, and the other two bed side panels have a lock plate on the right and screws on the left.

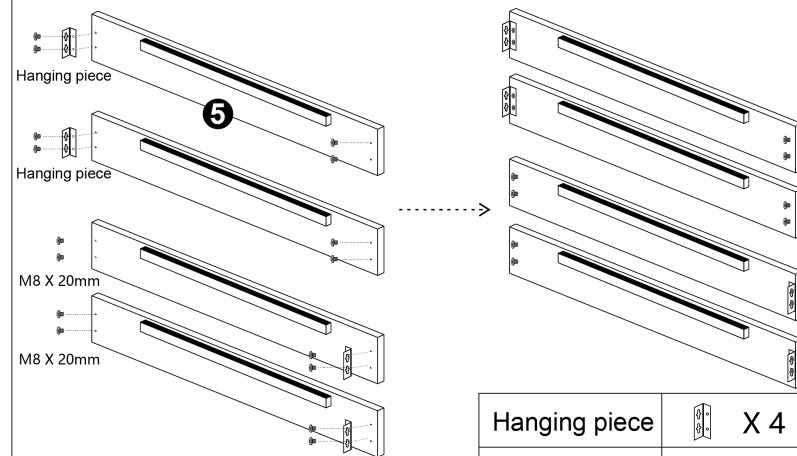

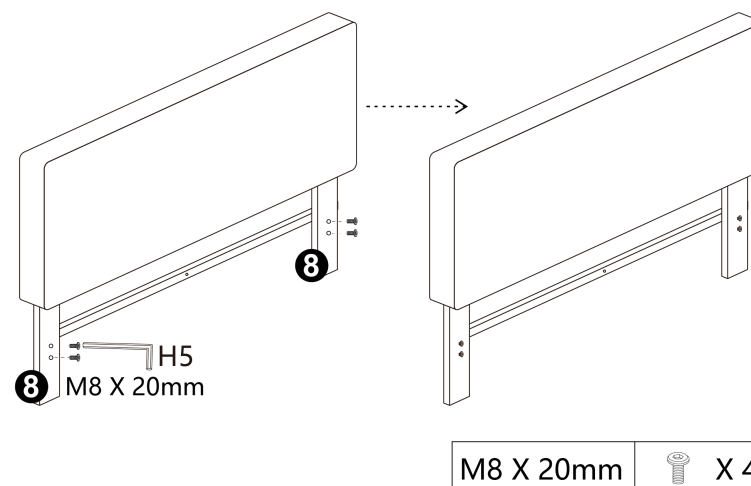

Step 8 Screw the 20 mm screws into the front holes of the bed legs (8).

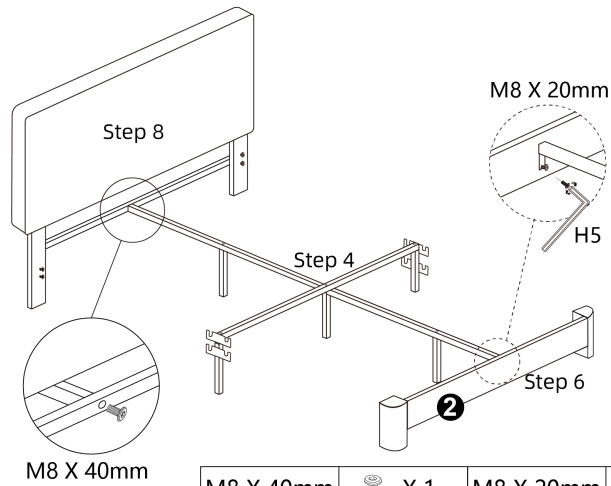



Step 9 Put the accessories installed in step (4), step (6), and step (8) together according to the figure below, and tighten the corresponding screws.





| | | | |
|-----------|---|-----------|---|
| M8 X 40mm |  X 1 | M8 X 20mm |  X 1 |
|-----------|---|-----------|---|


Step 10 Install the side panels installed in step (7) as shown in the figure.

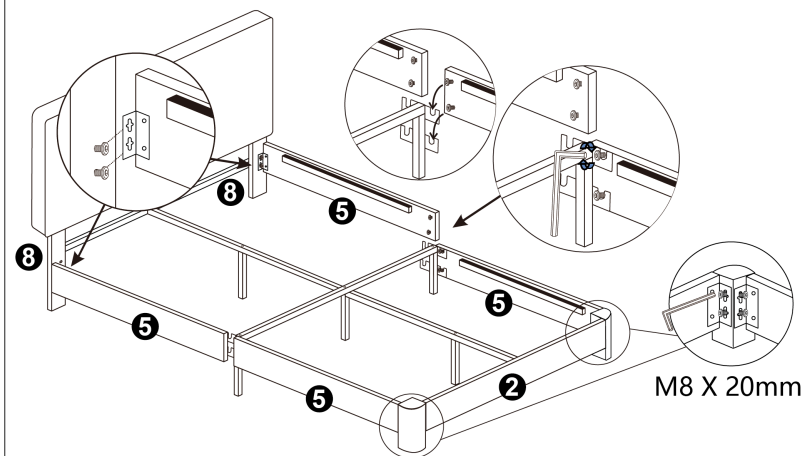

| | |
|-----------|---|
| M8 X 20mm |  X 4 |
|-----------|---|

Step 11 Open part (7) and place it on part (5)

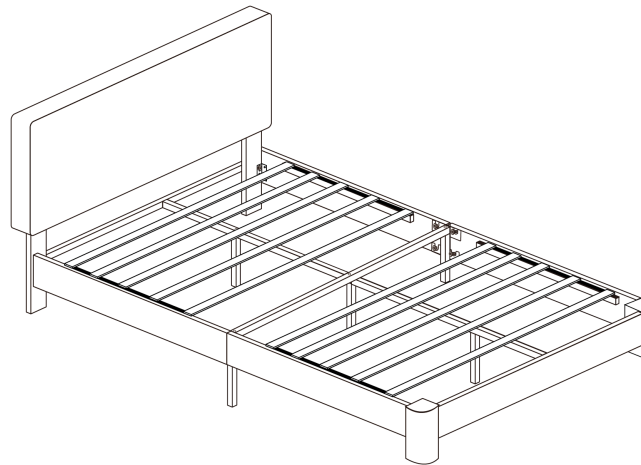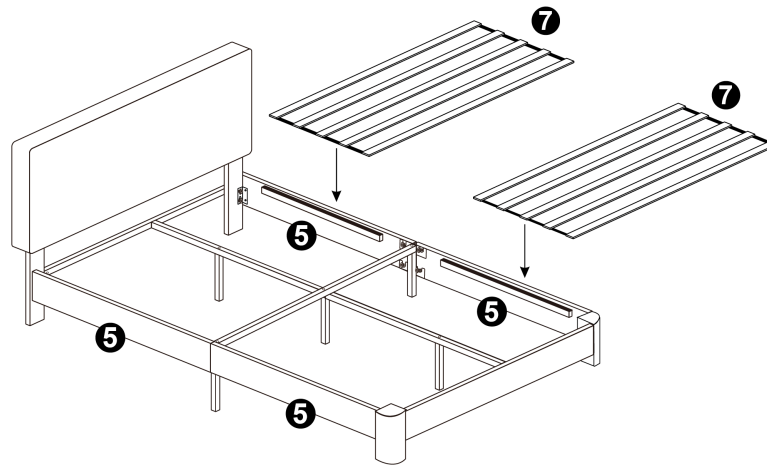

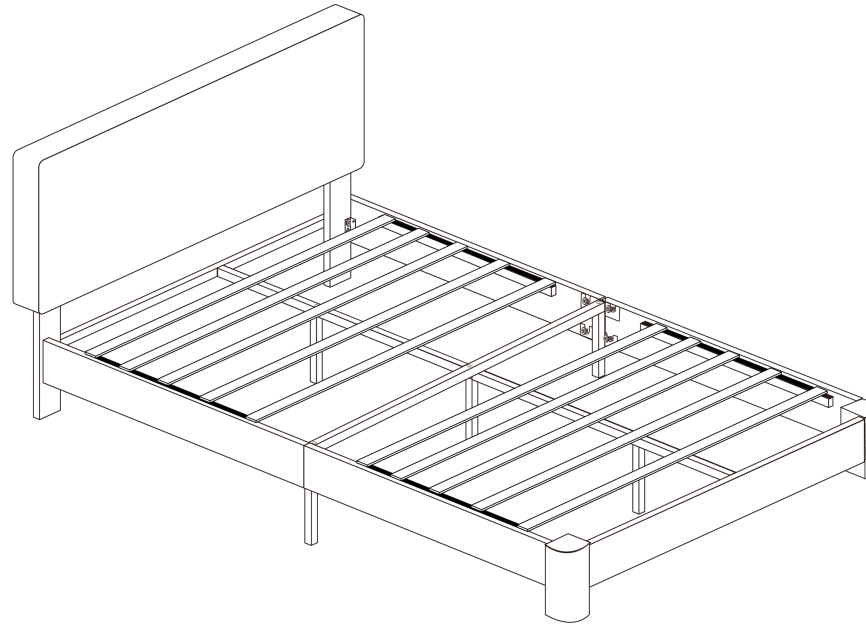

Job complete!

In the interest of our environment, please dispose
of all packaging thoughtfully, thanks!