


Assembly Instructions

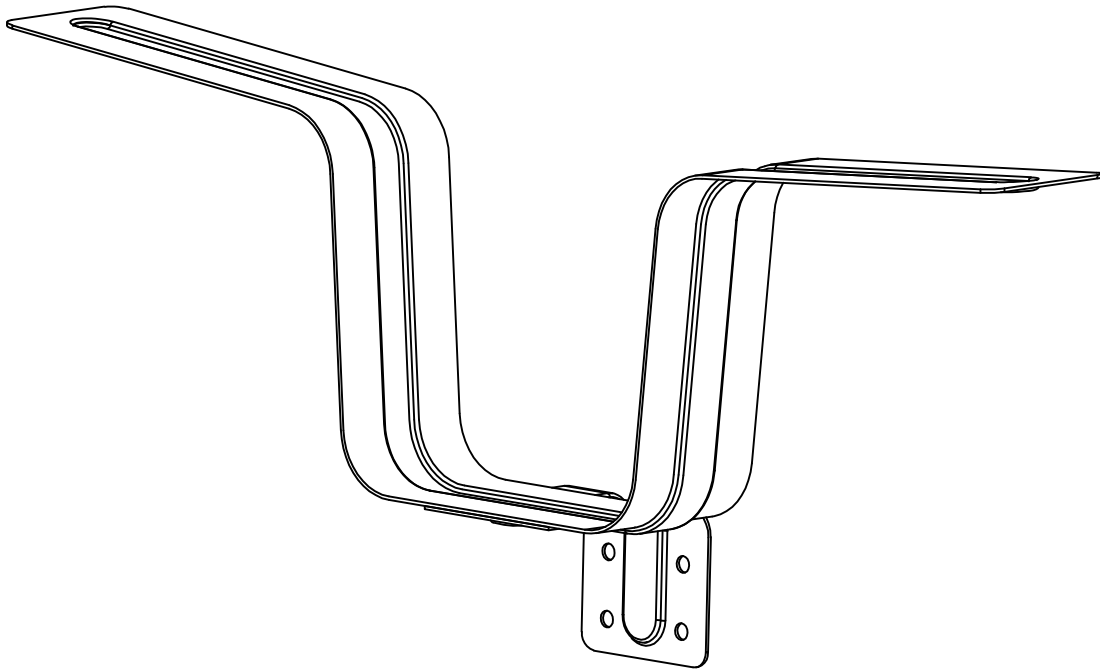


**DESIGN
TRANSFORMS
LIFE**

Hardware List




A
Ø8*38
25pcs

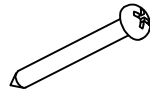

B
M4*40
25pcs



C
M4*12
25pcs

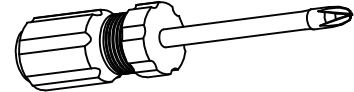


D
Ø5*98
1pc

Installation Tip


1. Drywall or Plaster Walls

Use Screw B (M4x40) with the included Wall Anchors A (Ø8x38) for a secure hold.

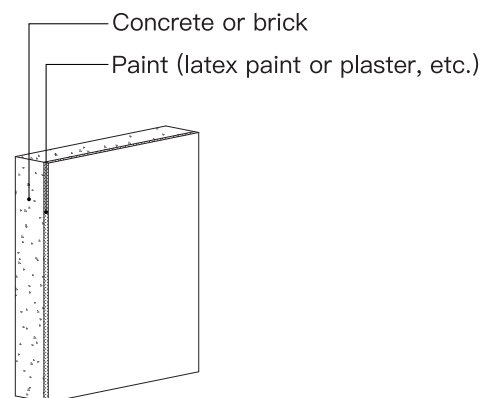


2. Solid Wood Surfaces

Use Screw C (M4x12) directly.
No wall anchors needed.

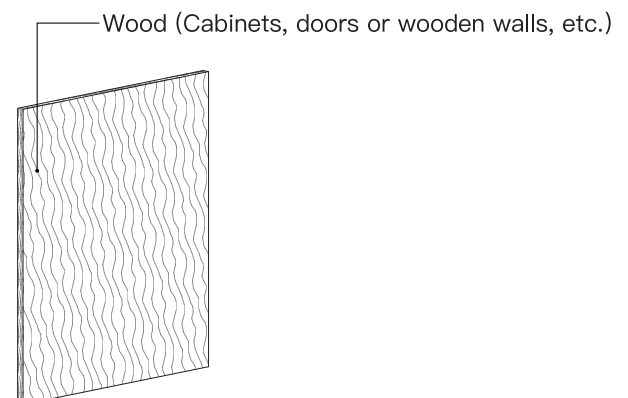


3. Wood or Metal Stud Walls

Use Screw B (M4x40) directly into the stud. No wall anchors needed.

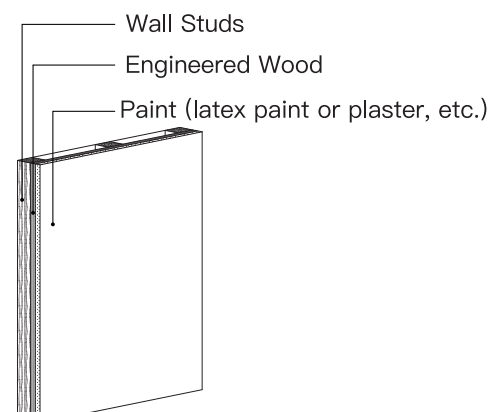


Drywall or Plaster Walls


Use Screw B (M4x40) with the included Wall Anchors A (Ø8x38) for a secure hold.

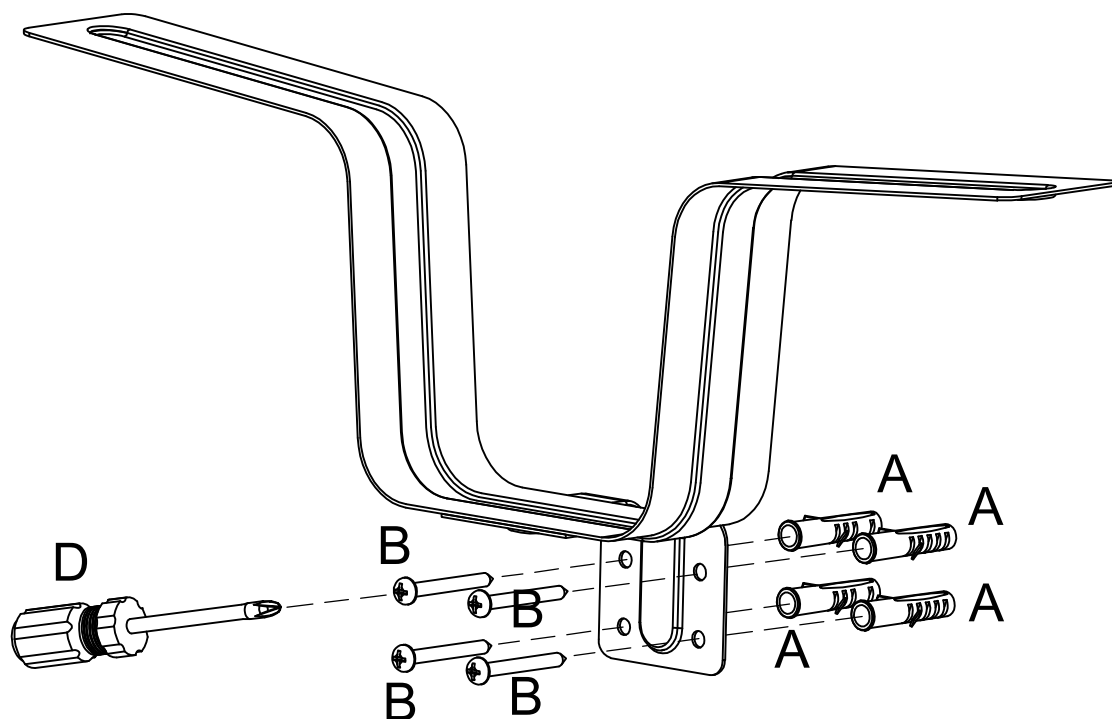

A
Ø8*38
25pcs

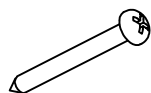


B
M4*40
25pcs

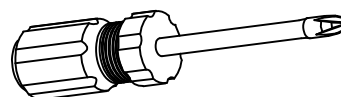

D
Ø5*98
1pc

Solid Wood Surfaces

Use Screw C (M4x12) directly. No wall anchors needed.

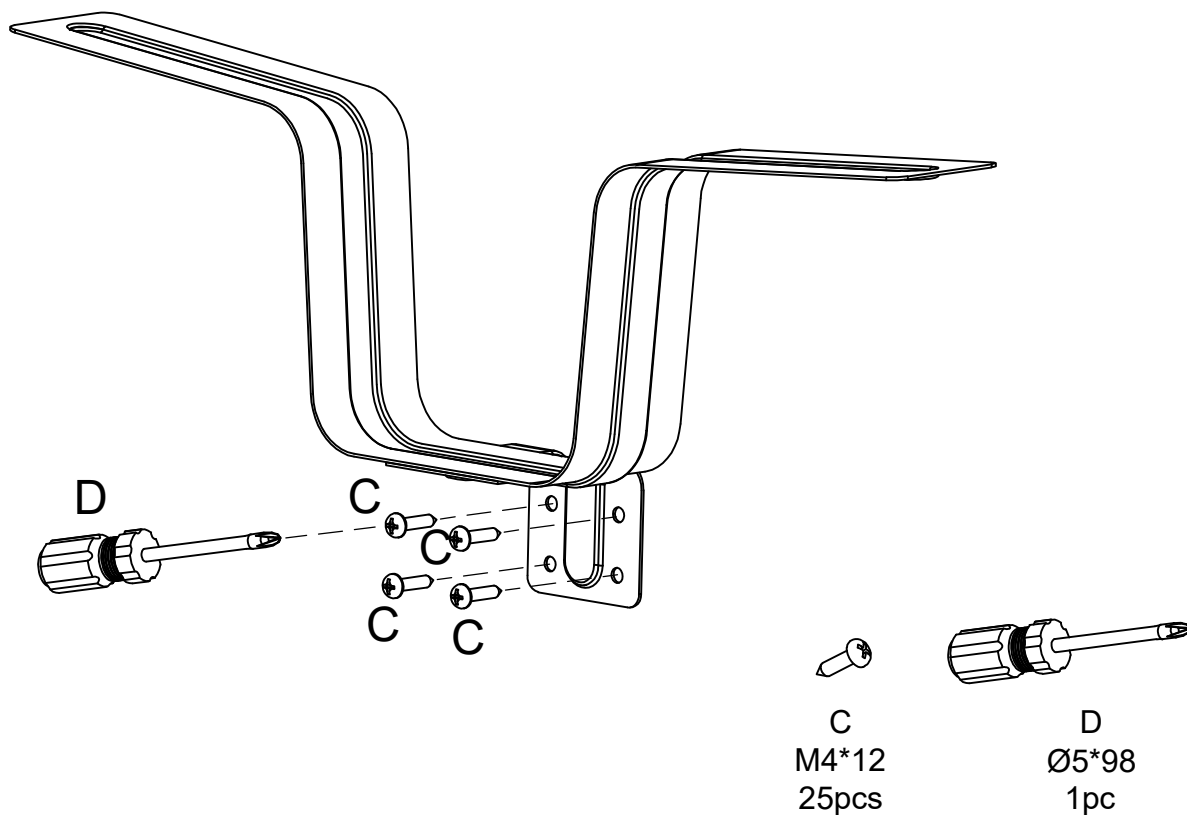

Wood or Metal Stud Walls

Use Screw B (M4x40) directly into the stud. No wall anchors needed.

