

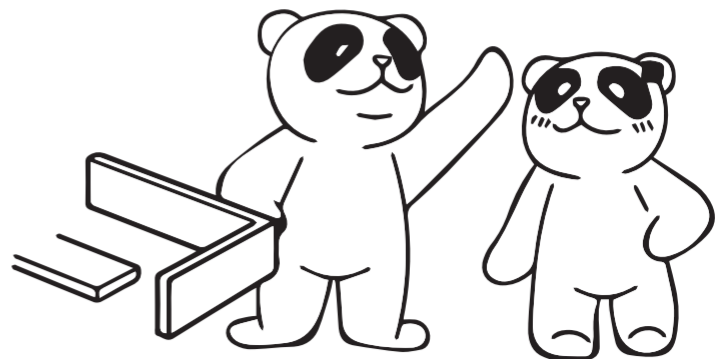
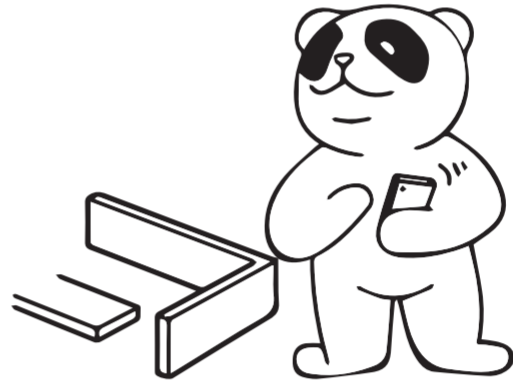
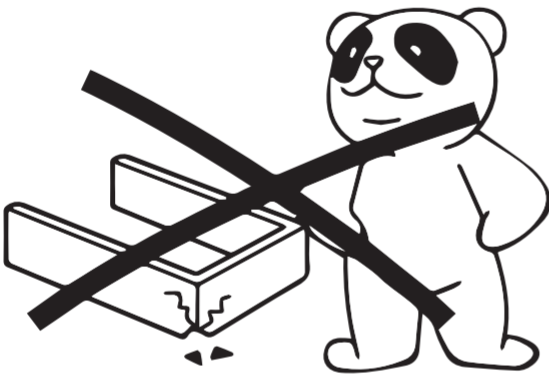


Instruction Manual










Thanks a lot your support and purchasing.

Please feel free to contact us if you have any questions with assembly or need replacement parts.
















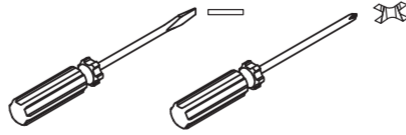


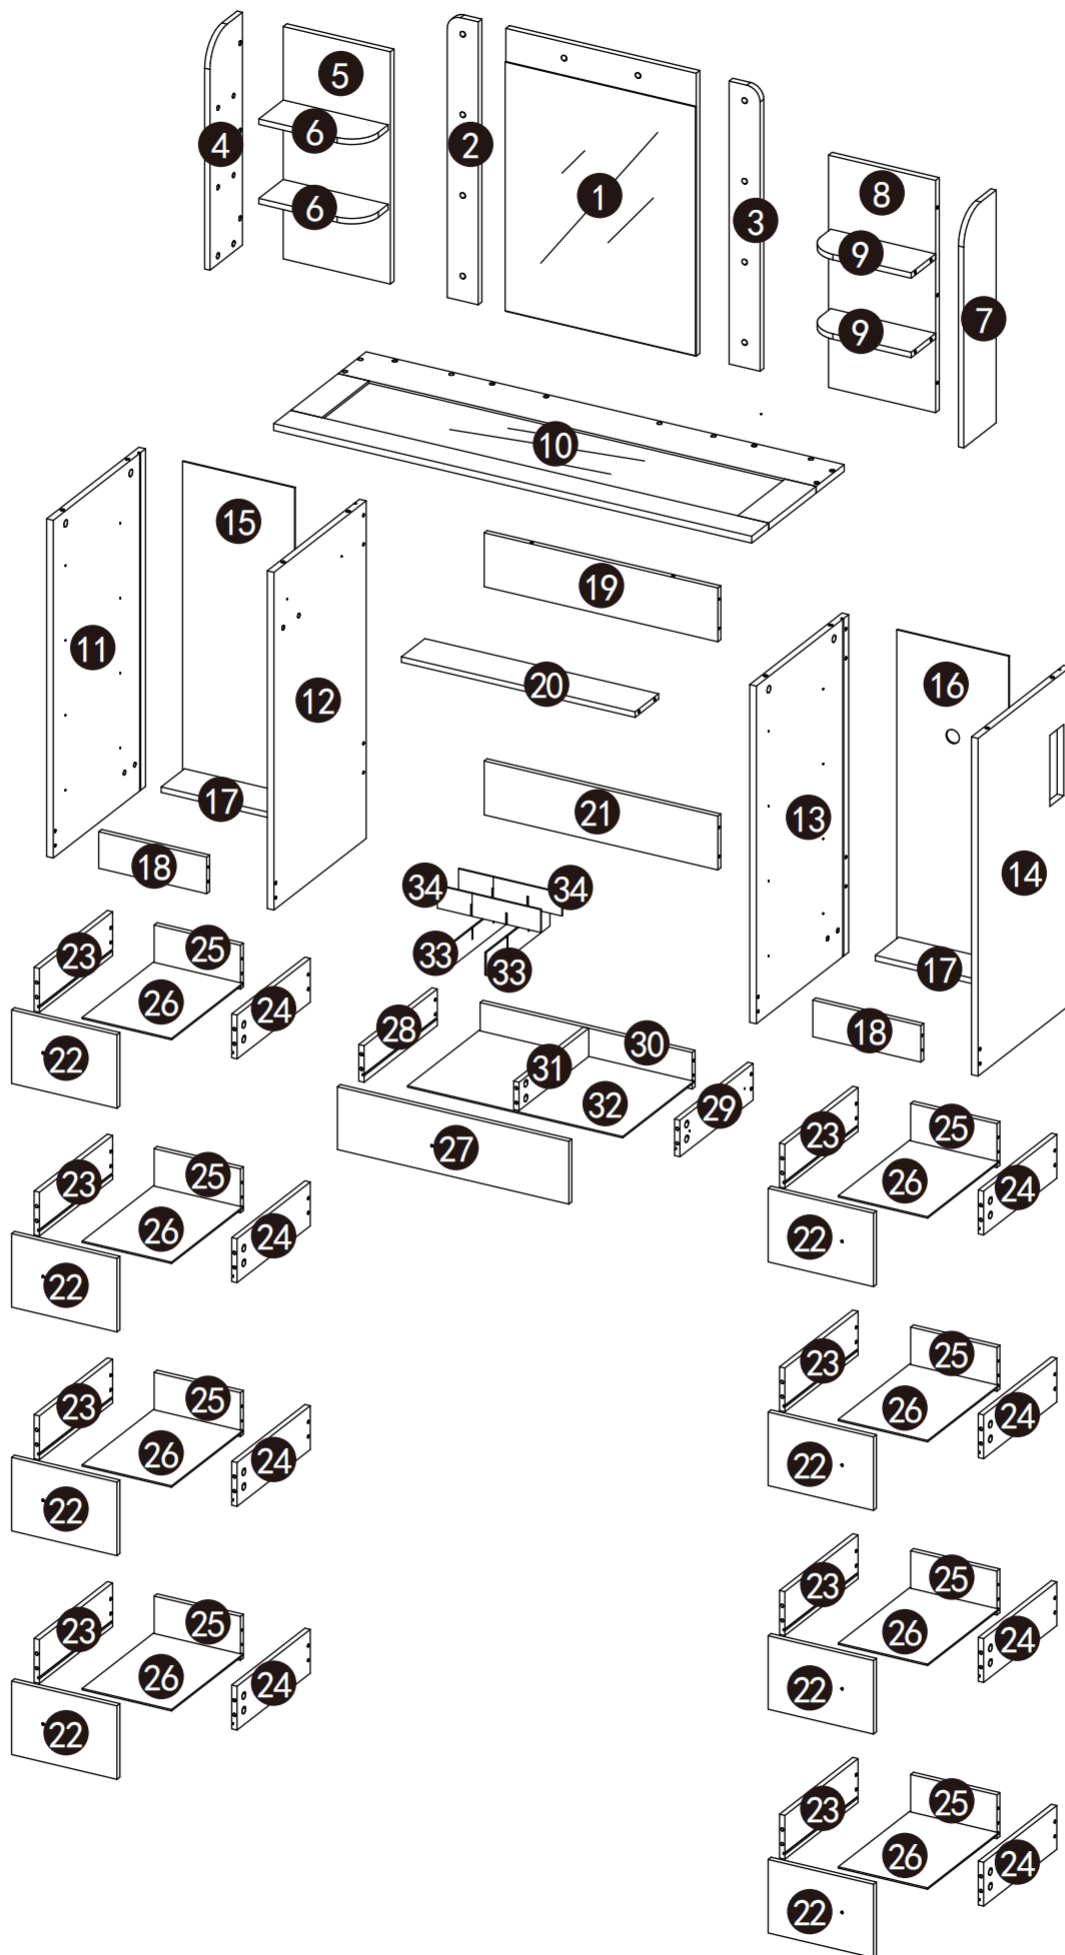




PARTS LIST

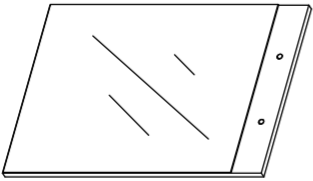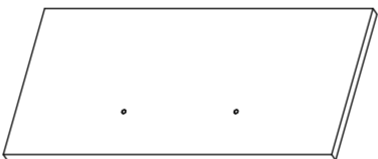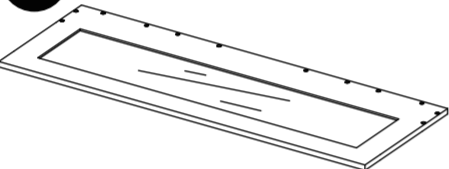
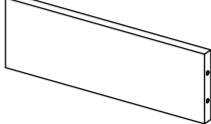
1  470x640x12mm x1	2  70x640x12mm x1	3  70x640x12mm x1
4  570x140x12mm x1	5  206x569x12mm x1	6  205x126x12mm x2
7  570x140x12mm x1	8  206x569x12mm x1	9  205x126x12mm x2
10  1050x400x15mm x1	11  745x398x12mm x1	12  745x398x12mm x1
13  745x398x12mm x1	14  745x398x12mm x1	15  233x661x3mm x1
16  233x661x3mm x1	17  225x100x12mm x2	18  225x80x12mm x2

PARTS LIST

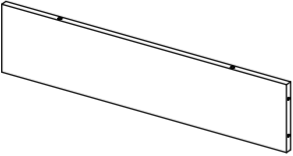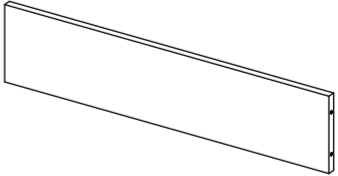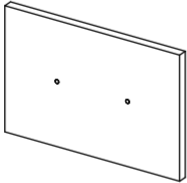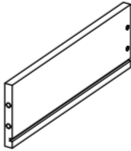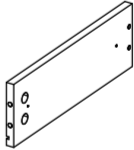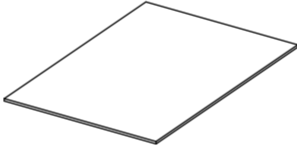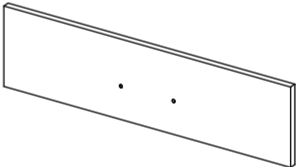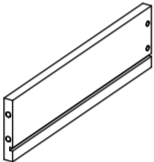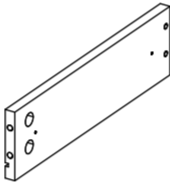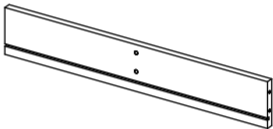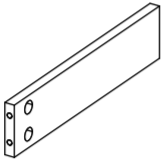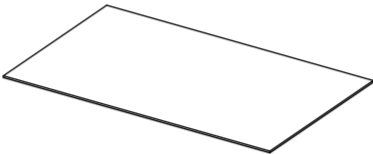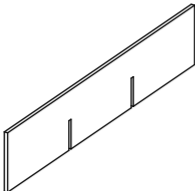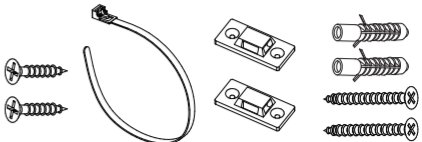19  548x100x12mm x1	20  548x80x12mm x1	21  548x120x12mm x1
22  221x163x12mm x8	23  300x100x12mm x8	24  300x100x12mm x8
25  175x100x12mm x8	26  296x183x3mm x8	27  544x140x12mm x1
28  300x100x12mm x1	29  300x100x12mm x1	30  498x100x12mm x1
31  288x83x12mm x1	32  506x296x3mm x1	33  287x60x5 x2
34  242x60x5mm x2		P  x1


HARDWARE LIST

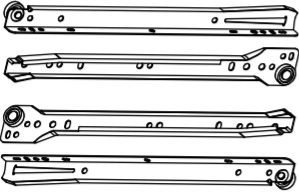A  6x40 x86	B  15x11 x86
C  12inches x2	D  x1
E  M3.5x12 x106	F  M5x40/#3 x58/x1
G  x8	H  96mm x9
J  x8	K  x12
L  21mm x20	M  M4x14 x18
N  12inches x8	O  LED x1

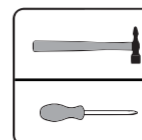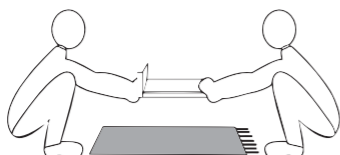


Hardware installation indication

Installation method of three in one rod and buckle

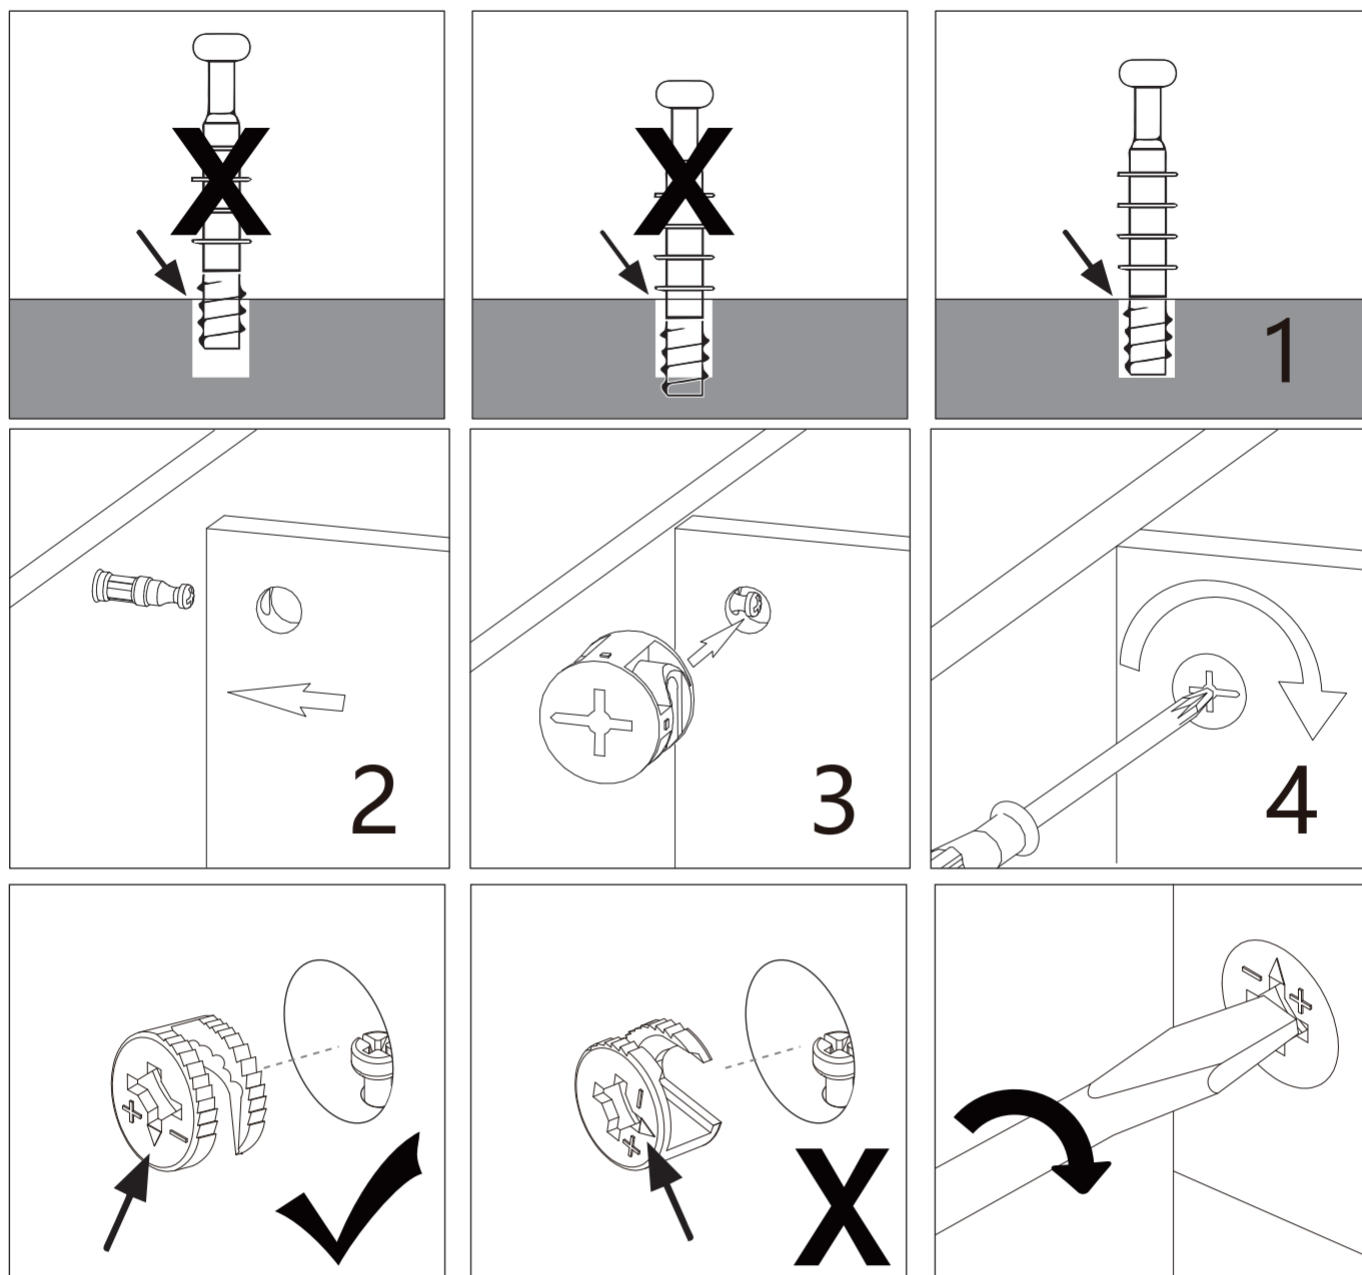

Screw installation method


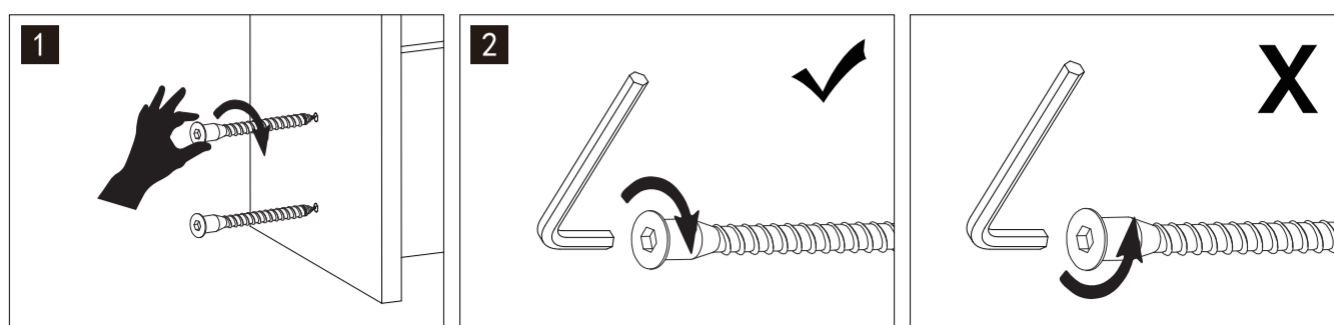




CL



CR

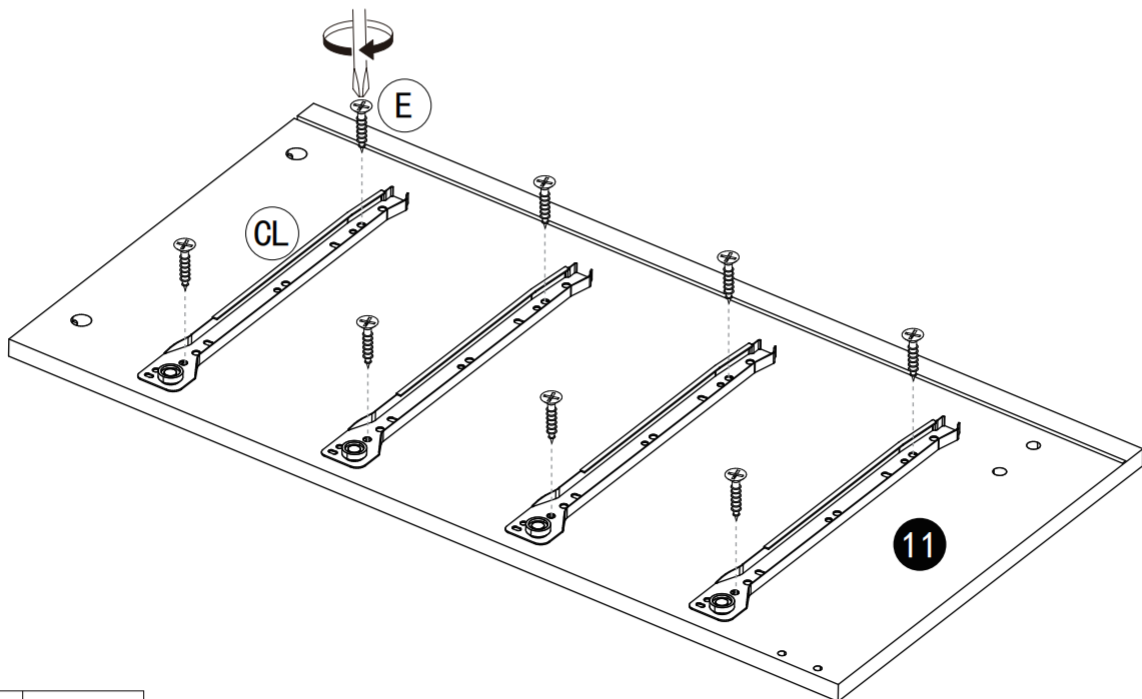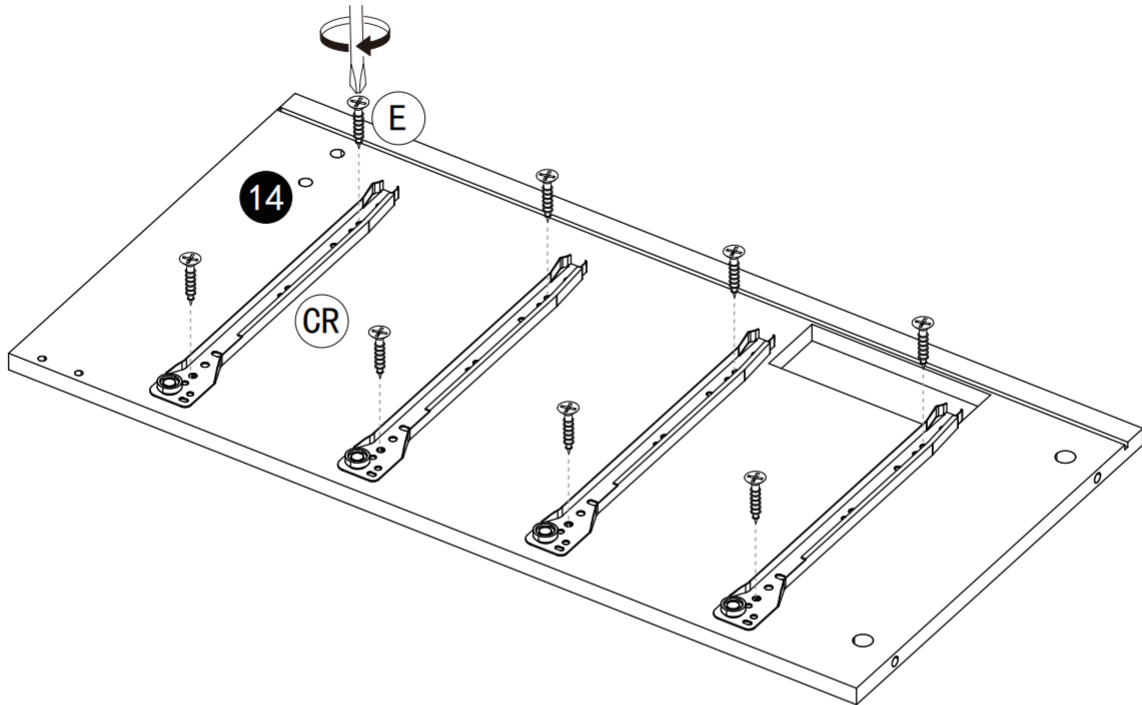


CL		x4
CR		x4
E		x16

INSTALLATION STEPS


Press the plastic part in the indicated direction to separate drawer runner **C1** and **C2** before assembling.

REMARK: Please grip the **C1** part while sliding the **C2** part.

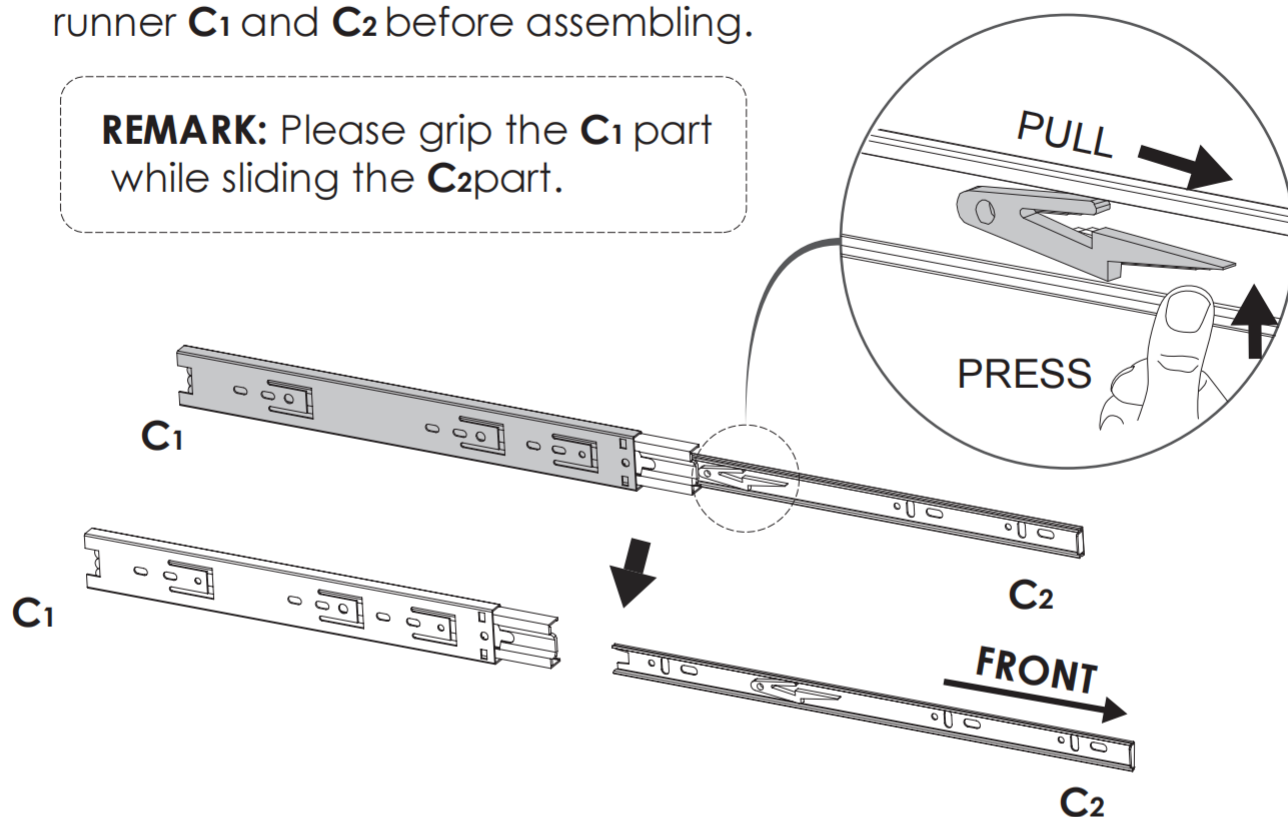



REMARK:

1. Please locate the holes from the back of part **C1**.


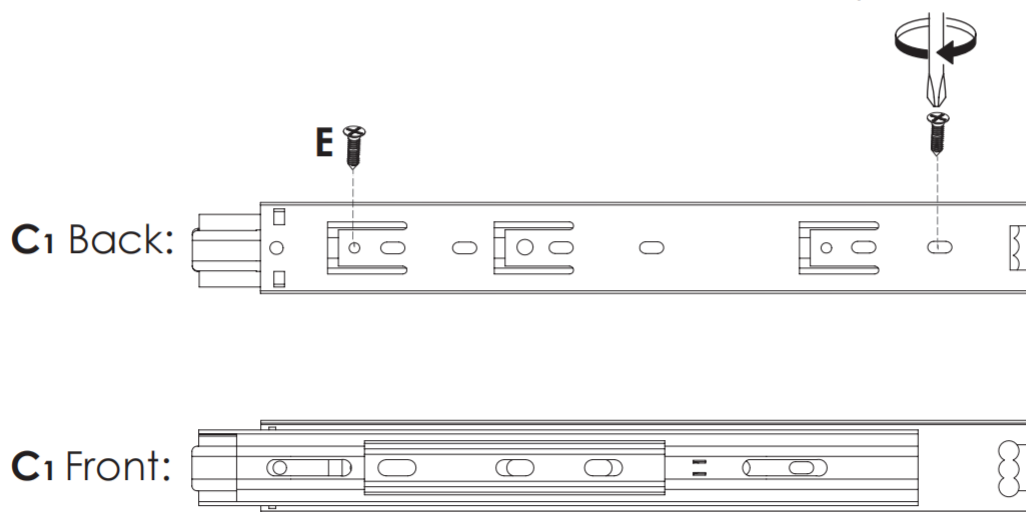


2. But install part **E** from the front of part **C1**.



3

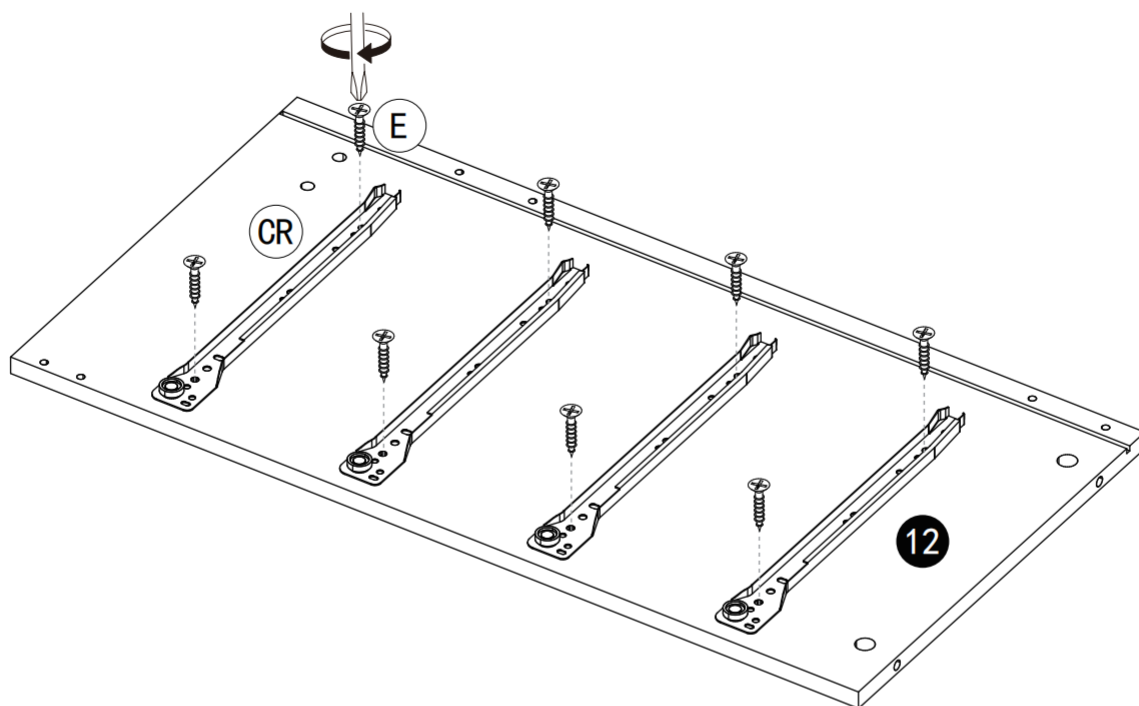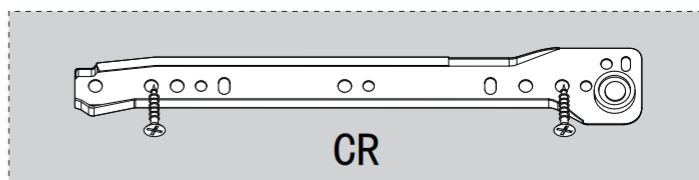



flip over

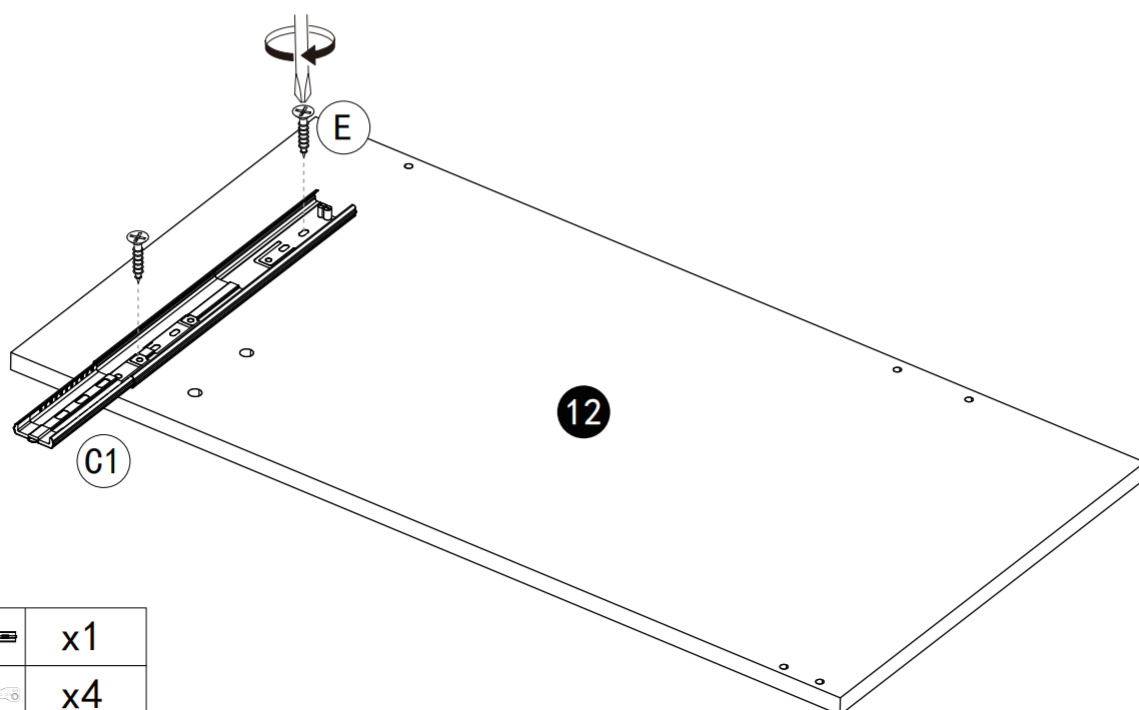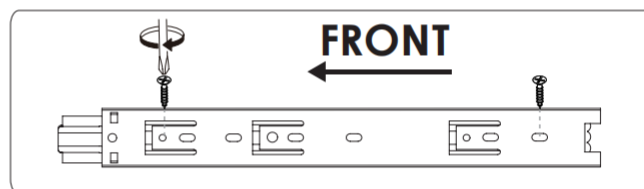

C1		x1
CR		x4
E		x10


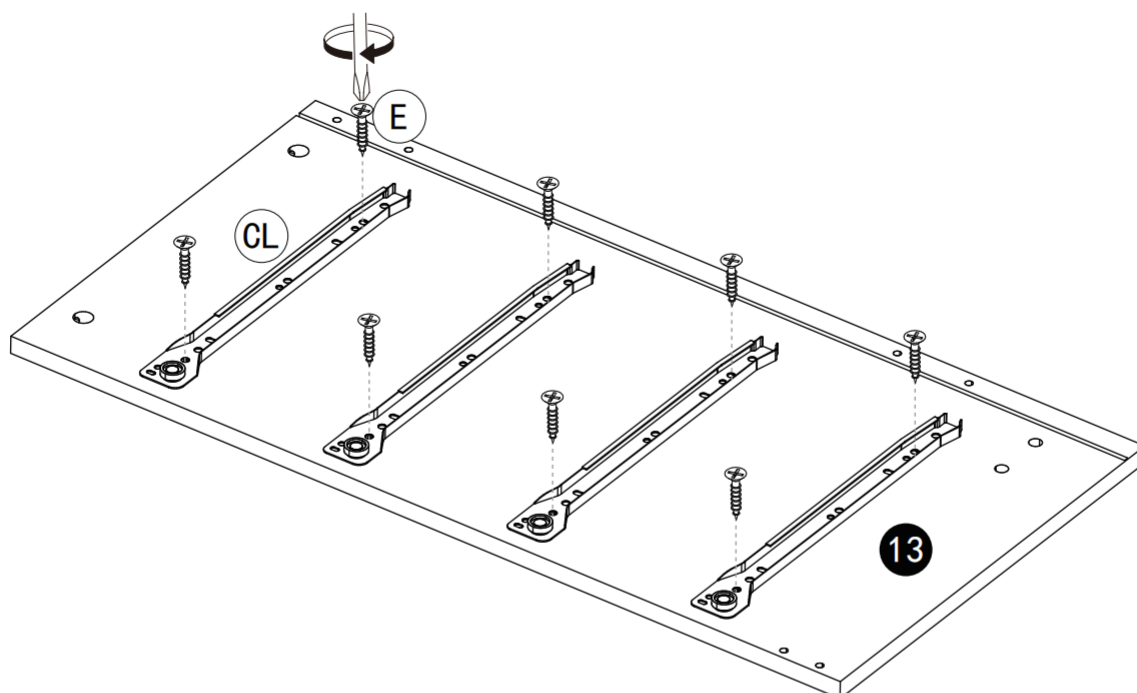
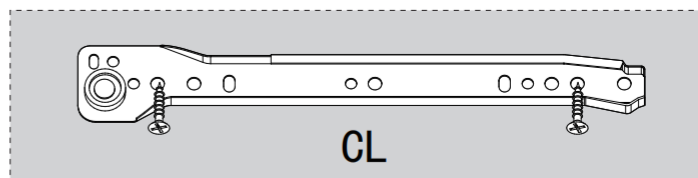



flip over


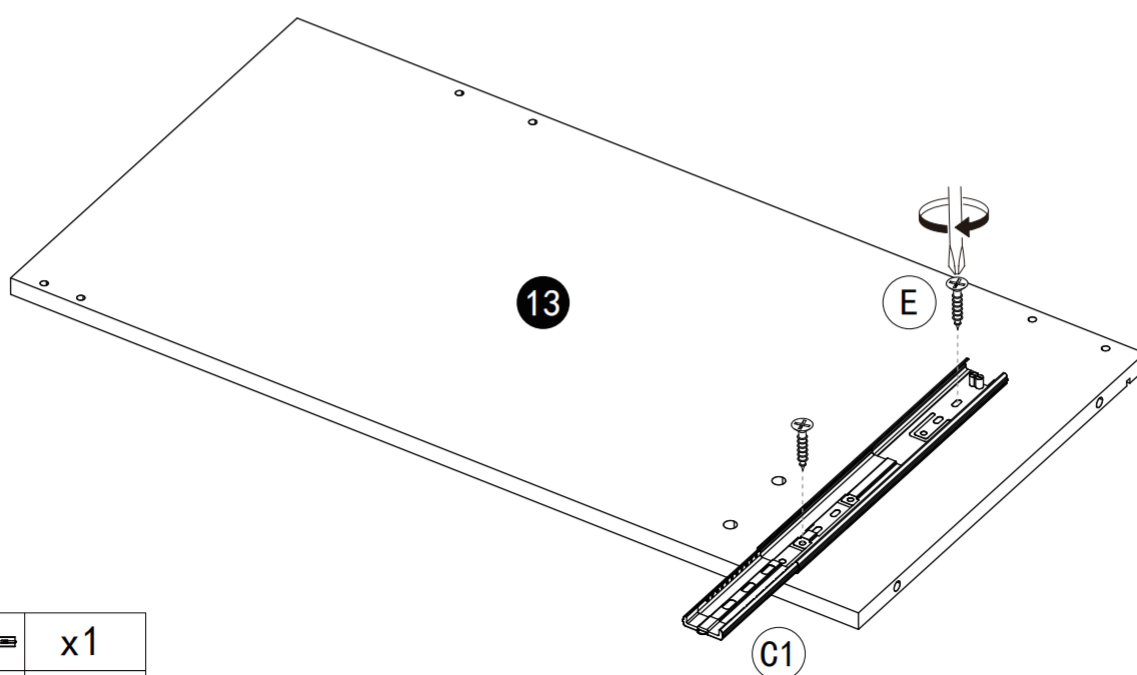
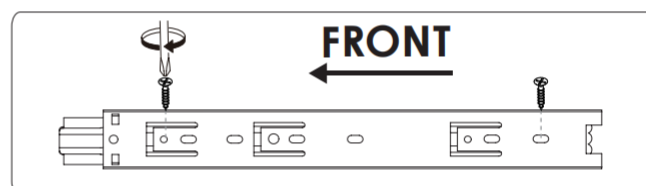


C1		x1
CL		x4
E		x10



Installation method of three in one rod and buckle

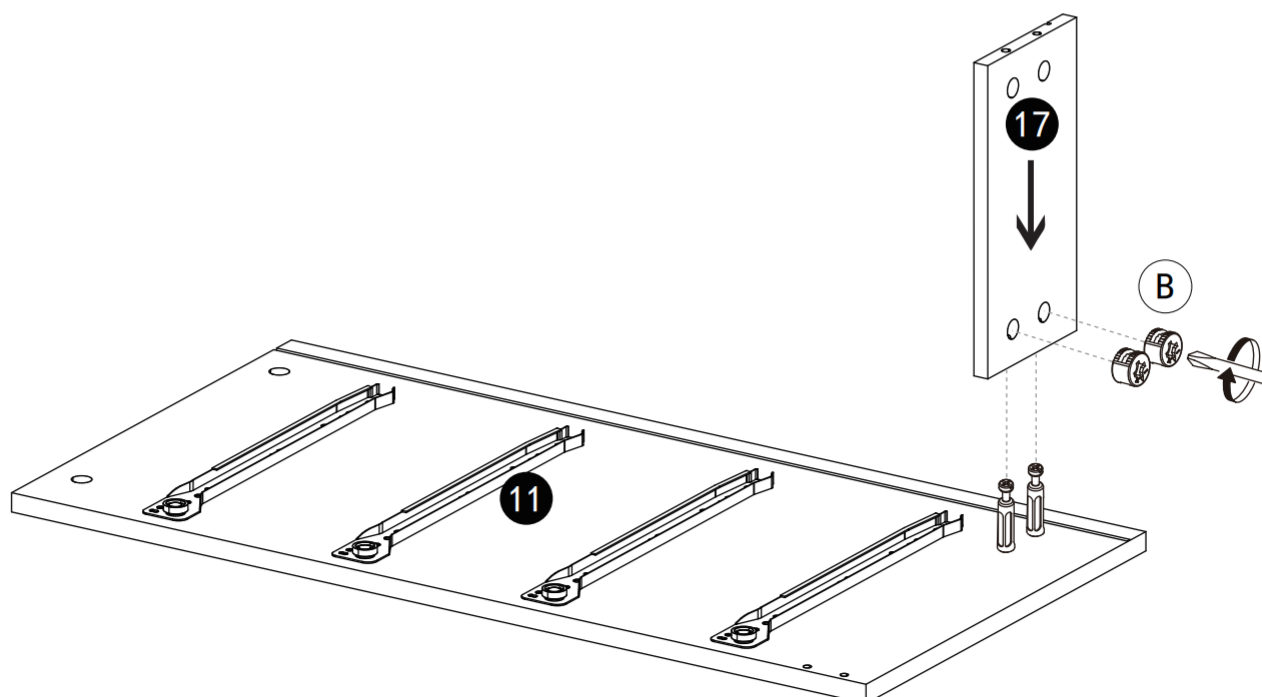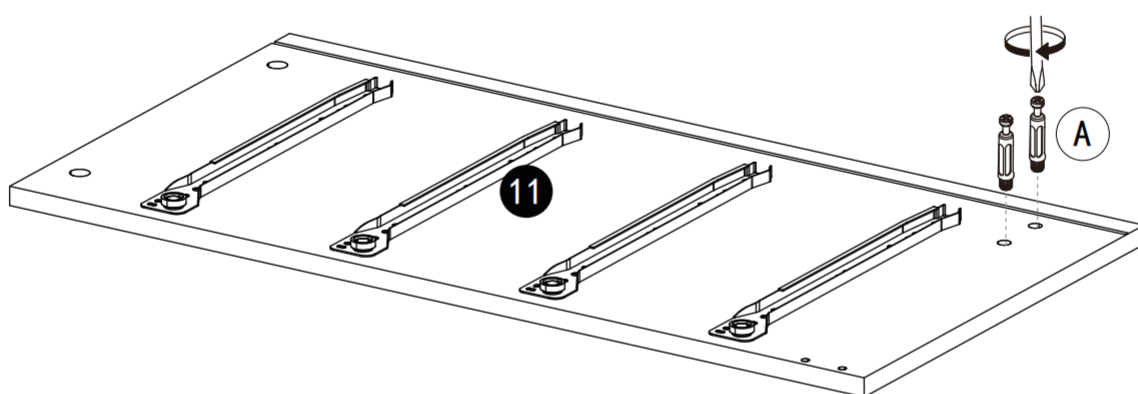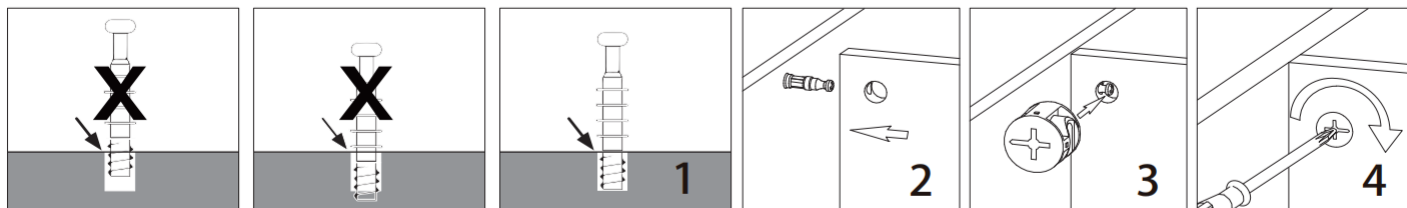



A		x2
B		x2

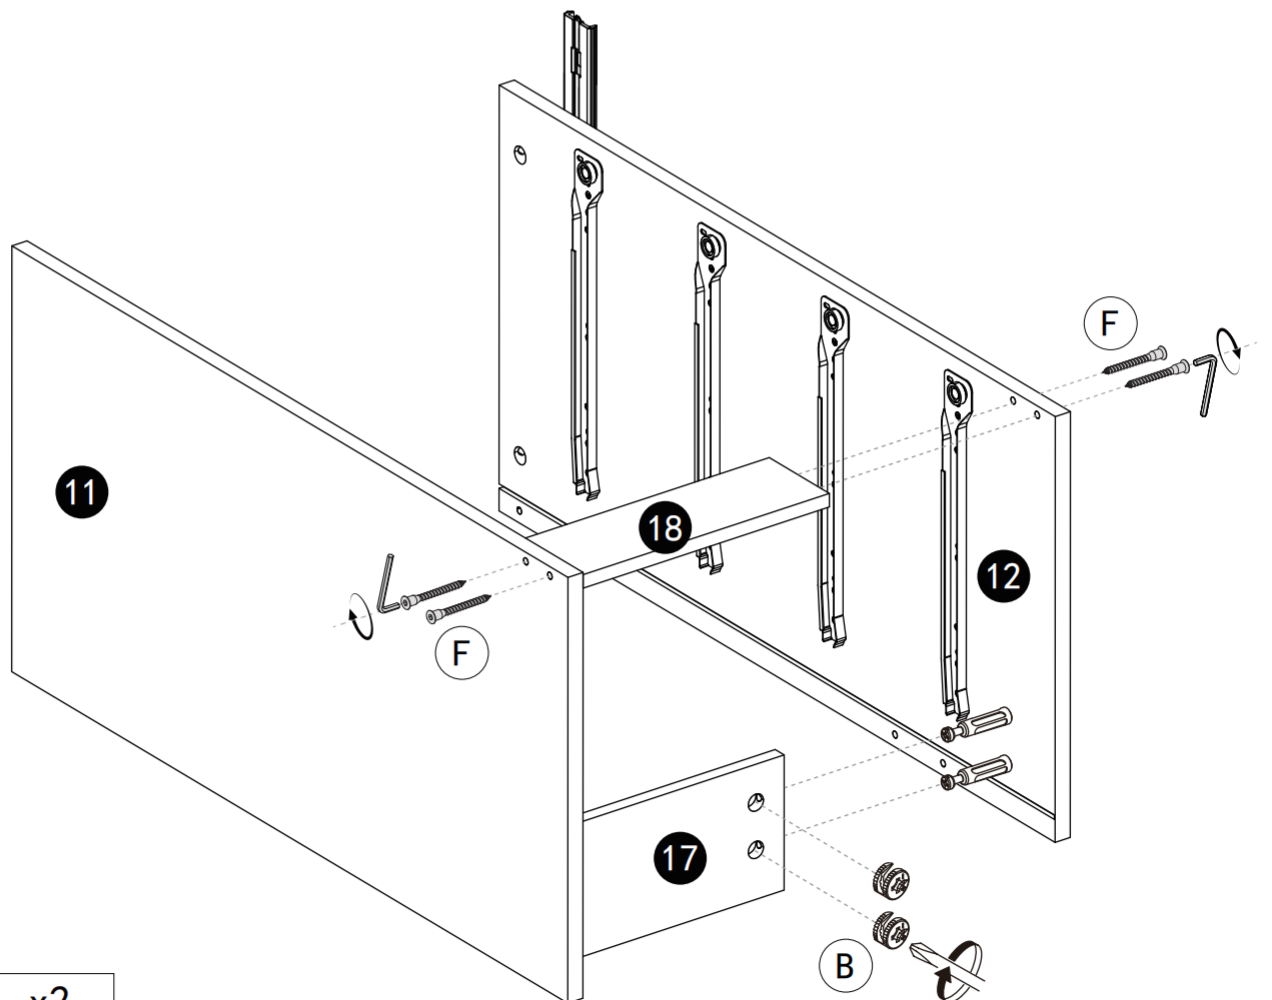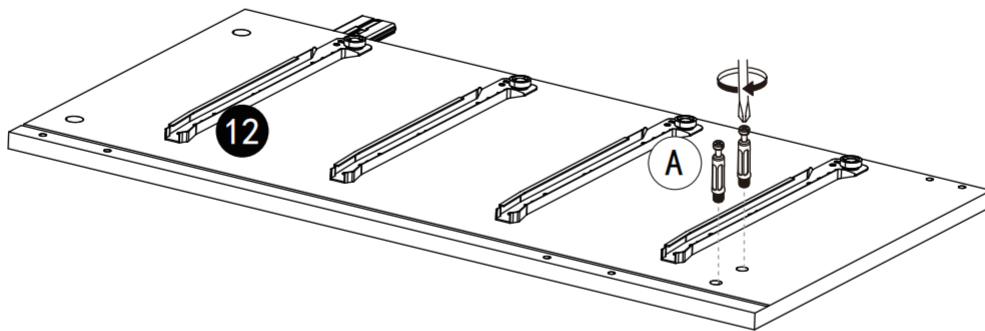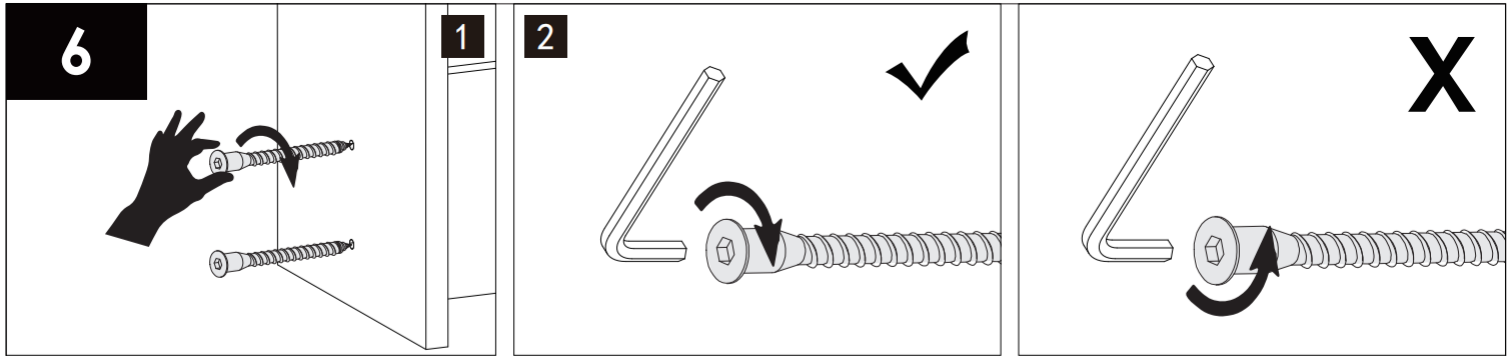



A		x2		
B		x2	F	 x4

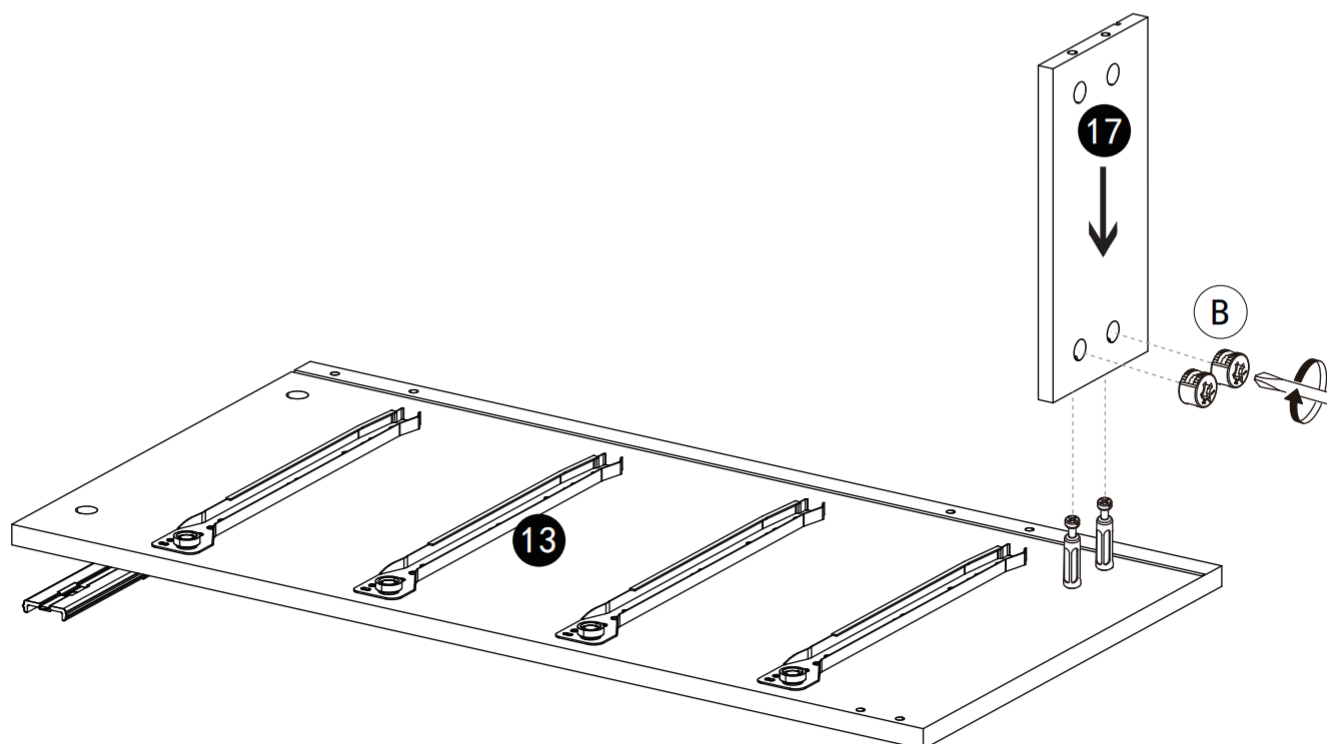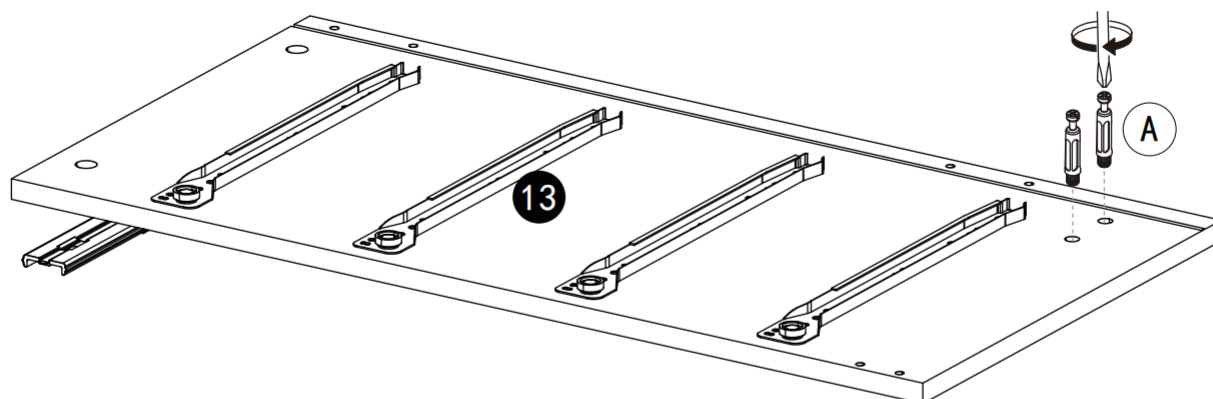



A		x2
B		x2

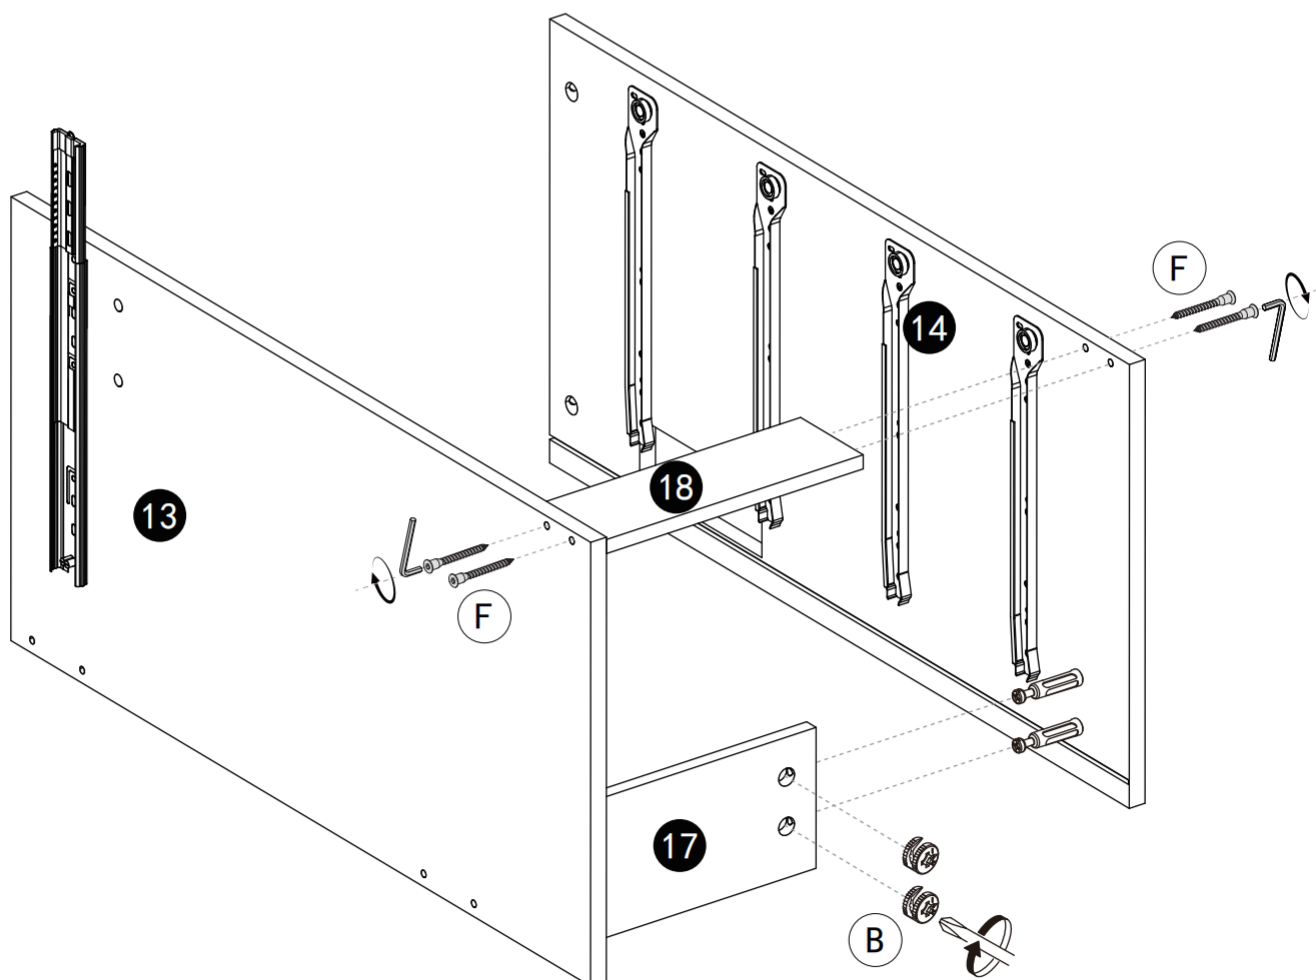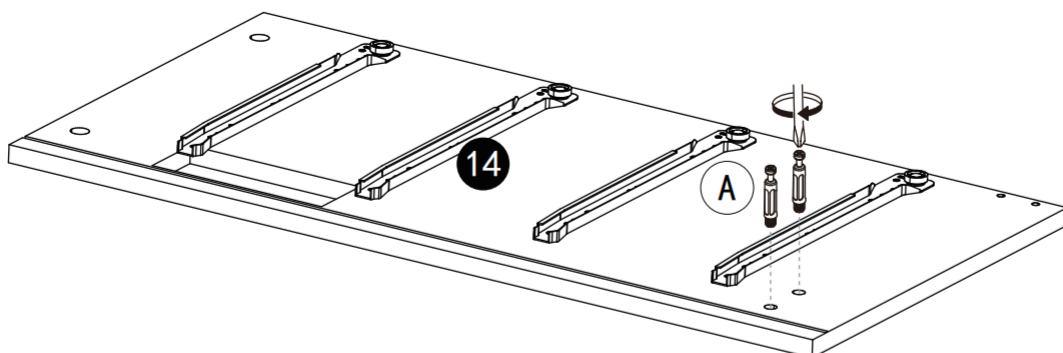



A		x2			
B		x2	F		x4

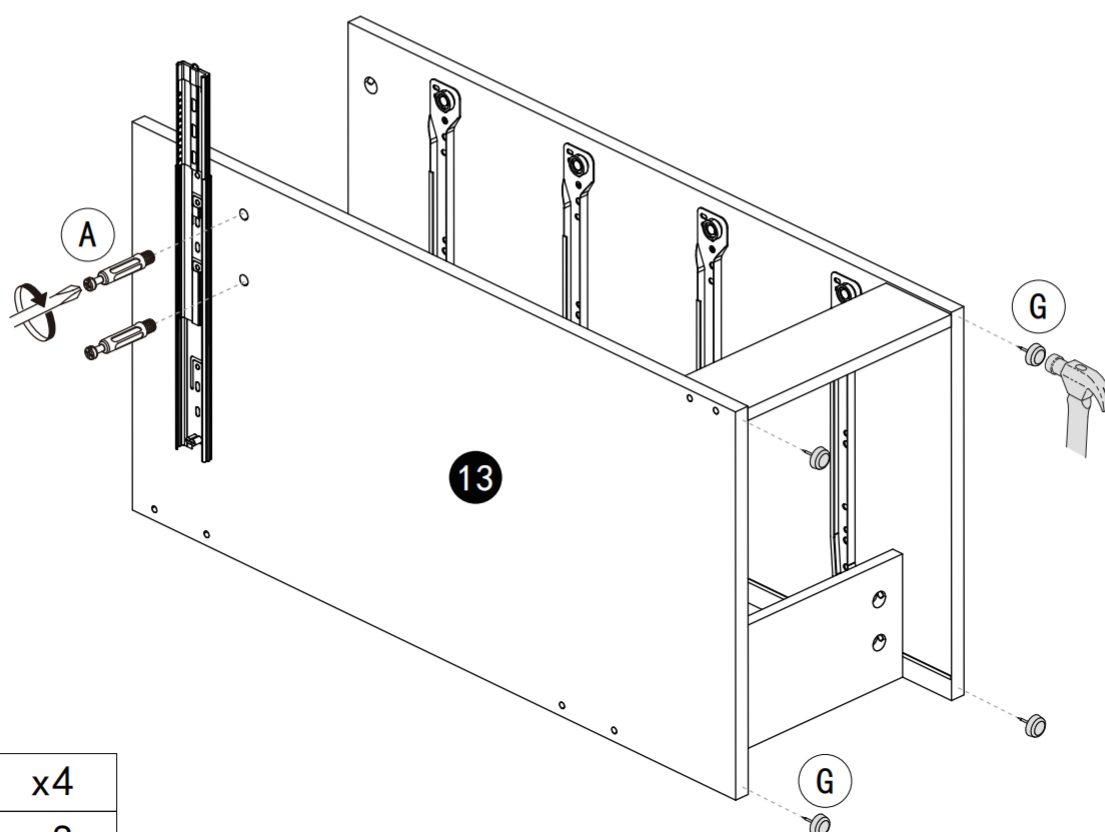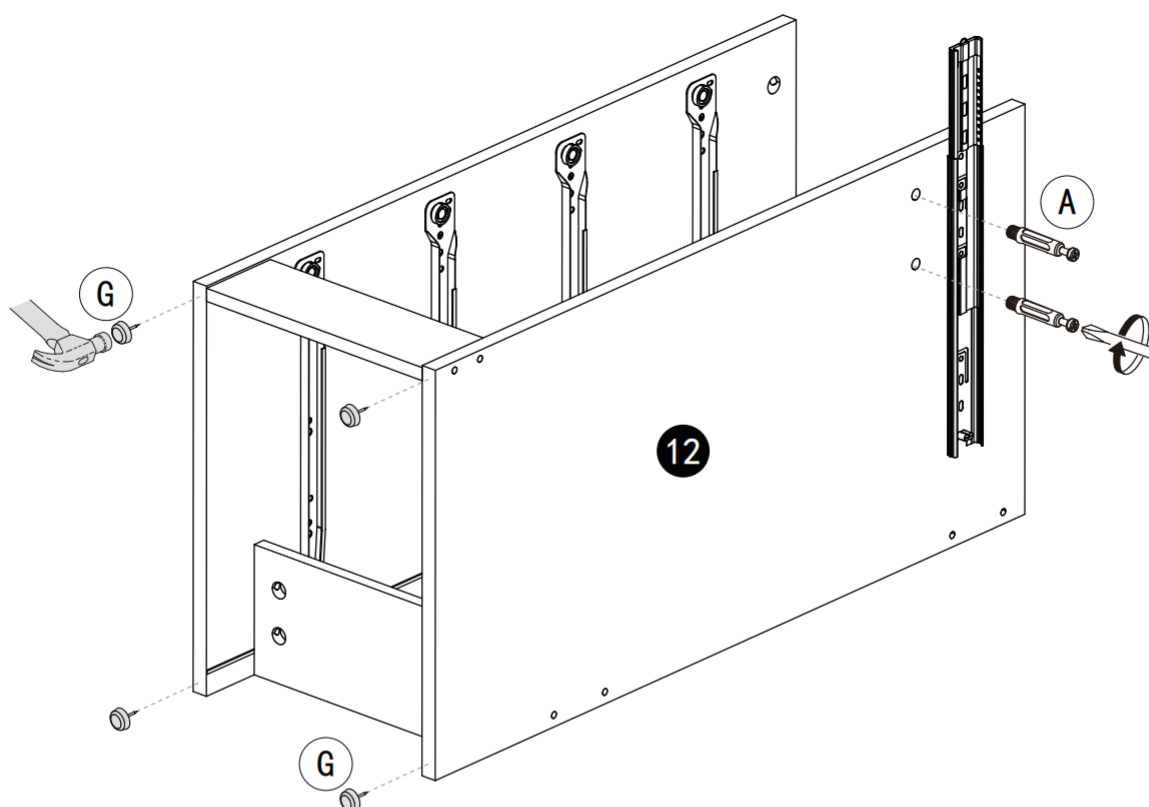


A		x4
G		x8

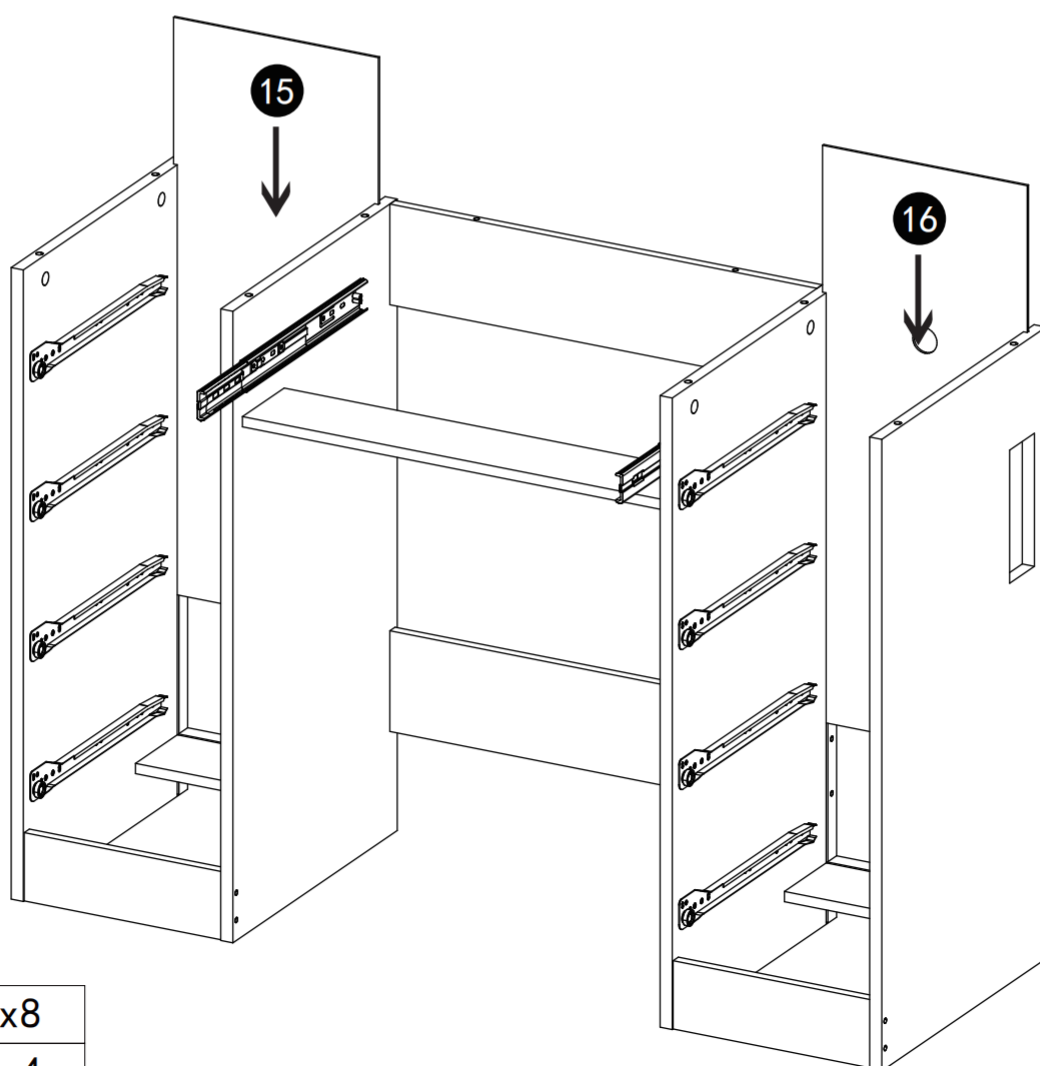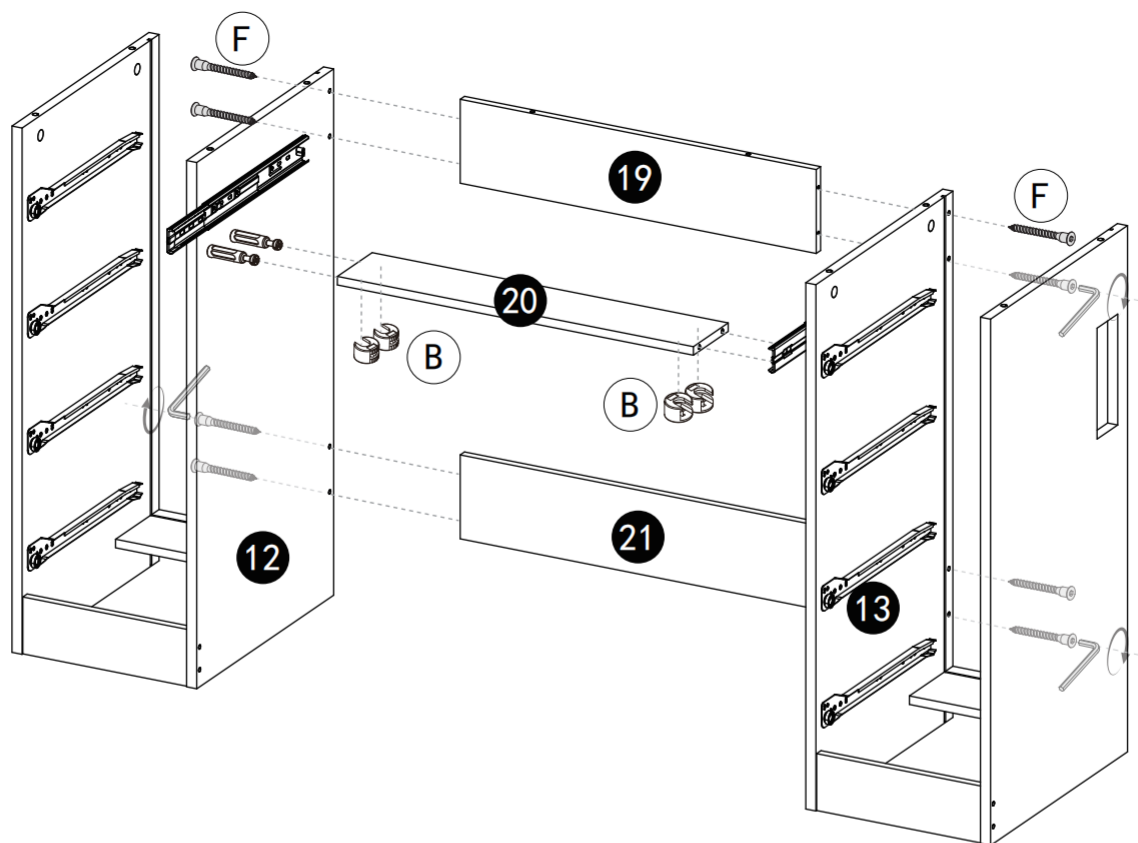





F		x8
B		x4

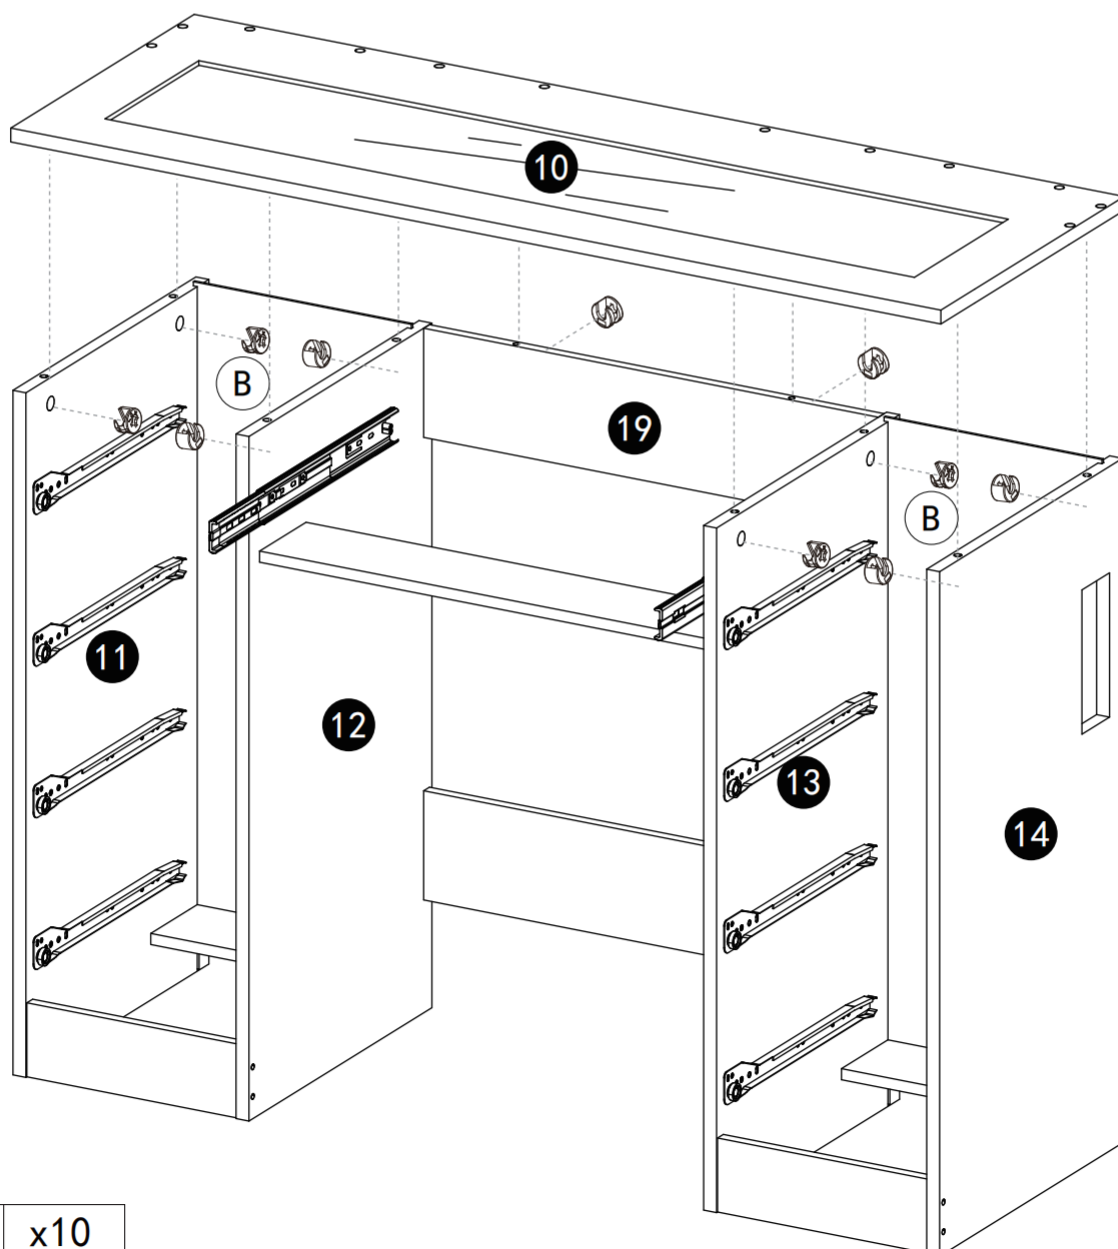
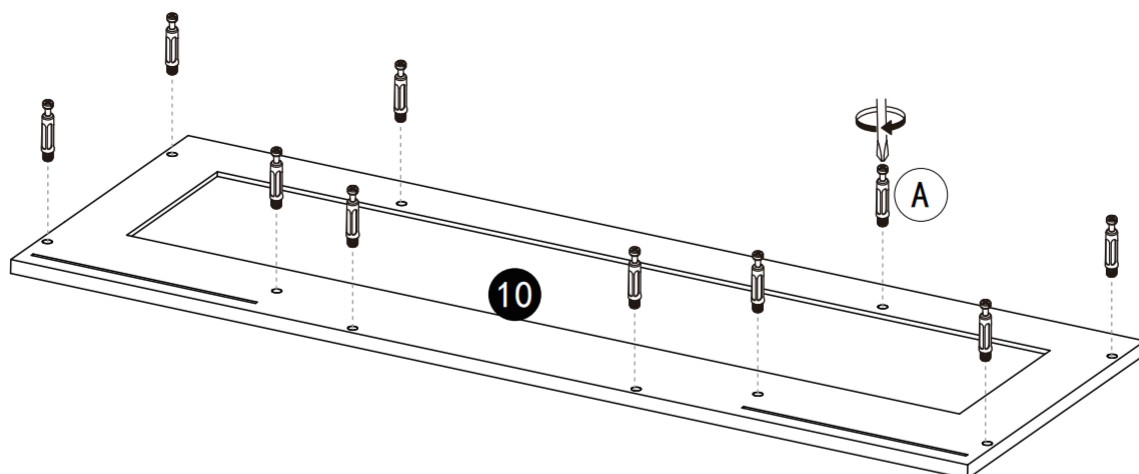


A		x10
B		x10

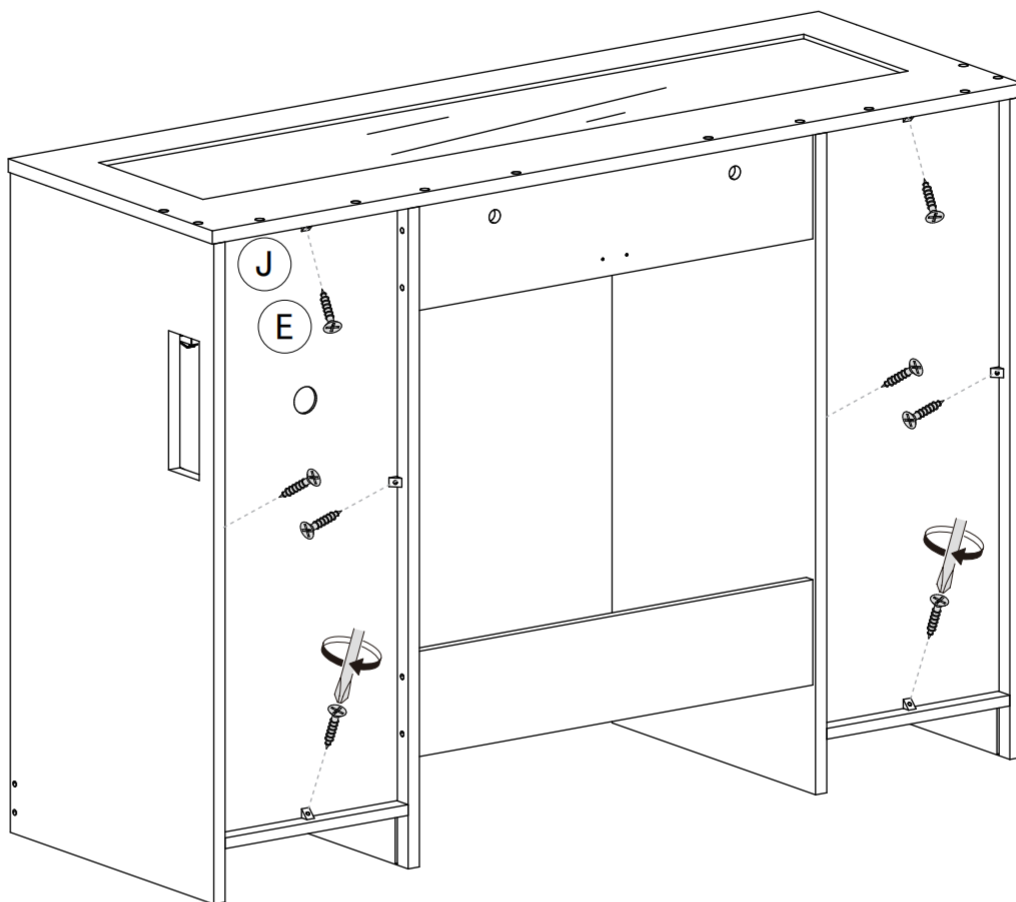




J		x8
E		x8

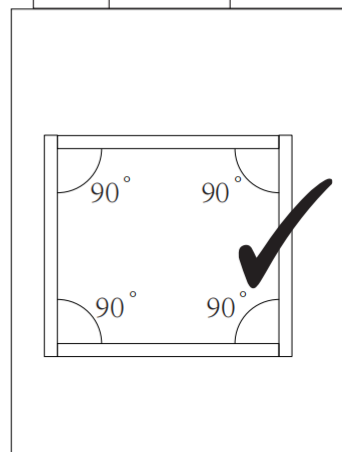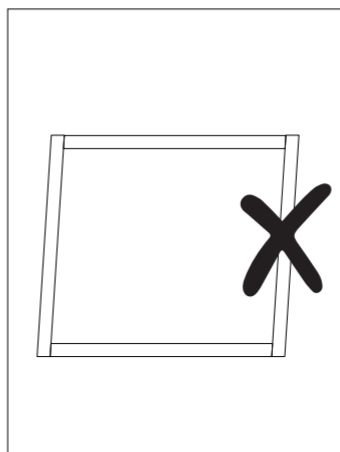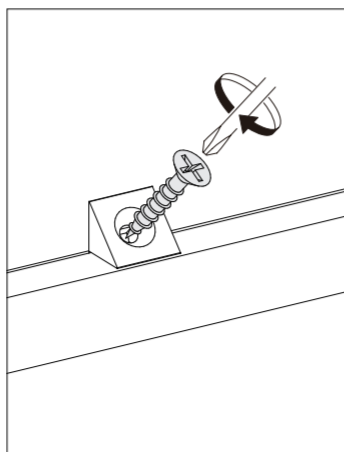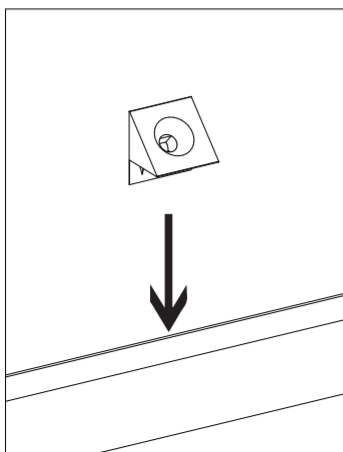

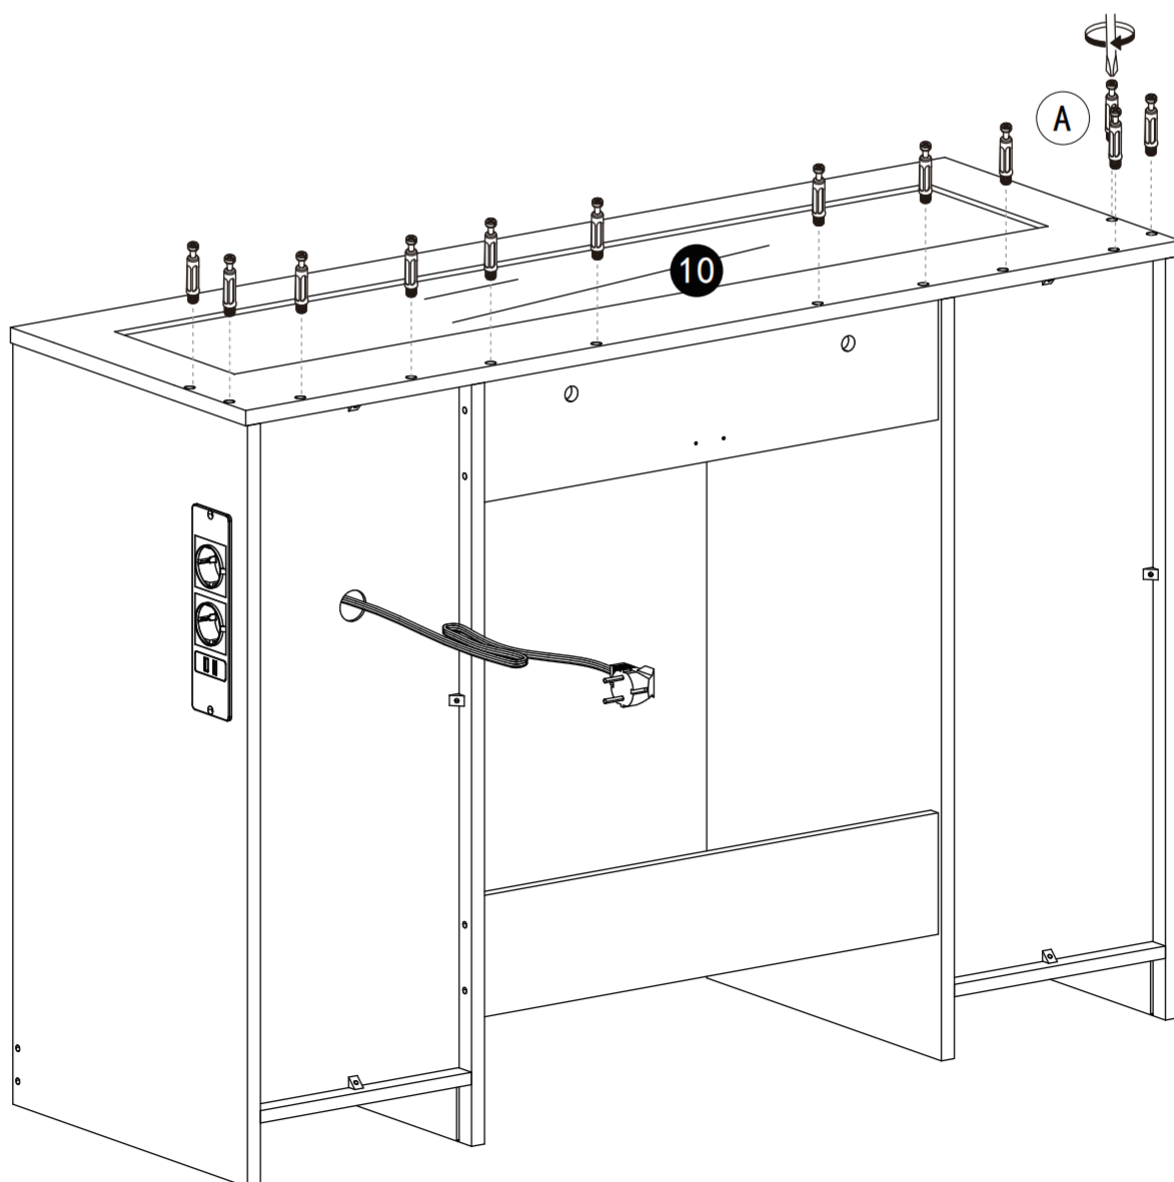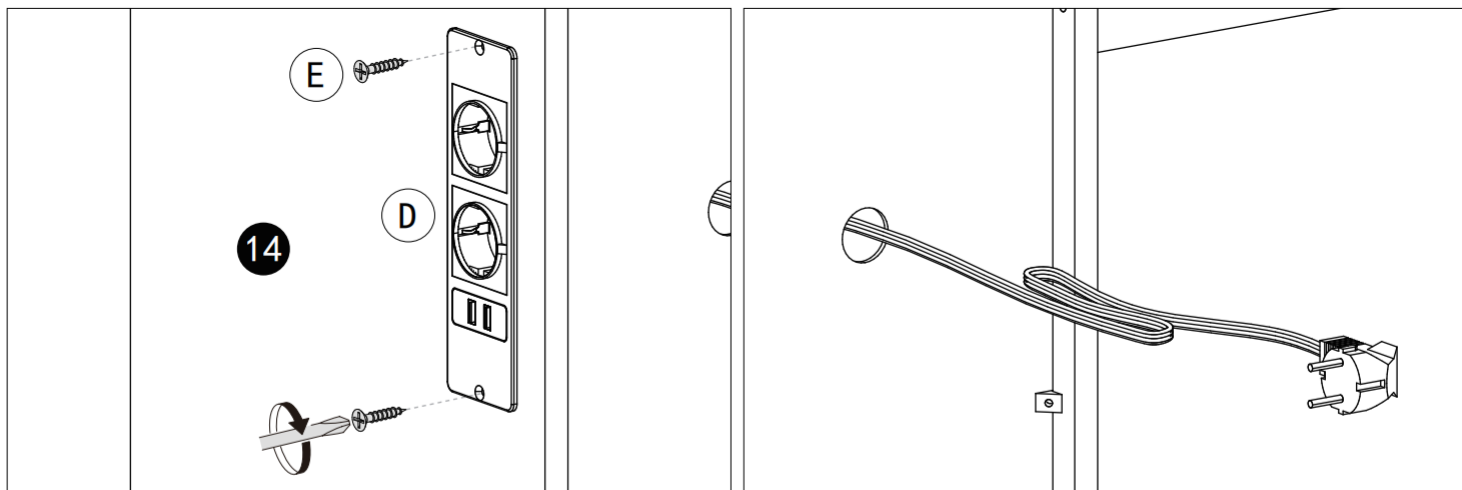


A		x12
E		x2
D		x1

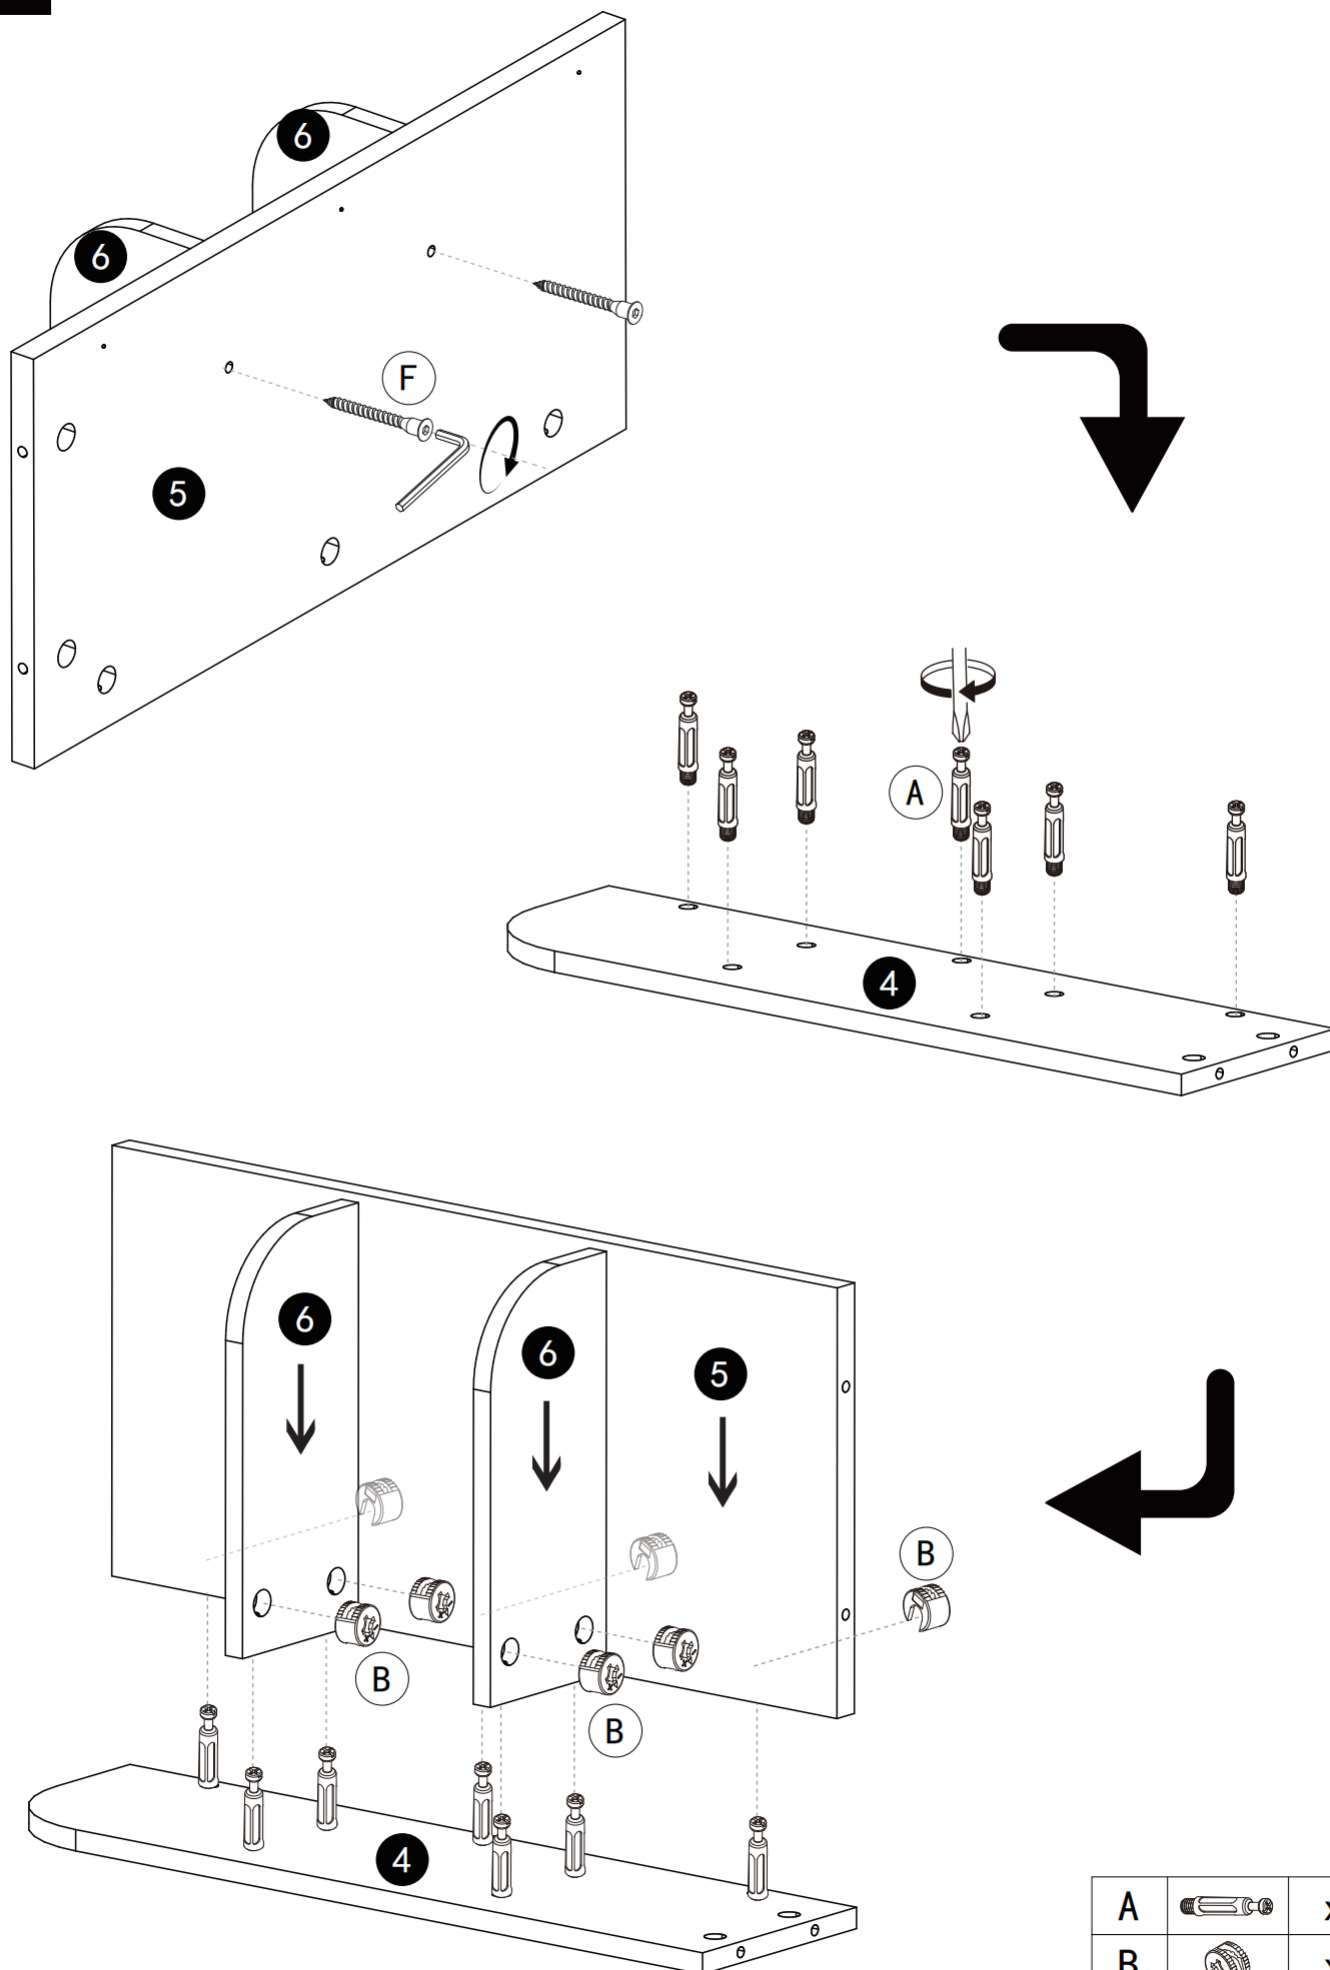

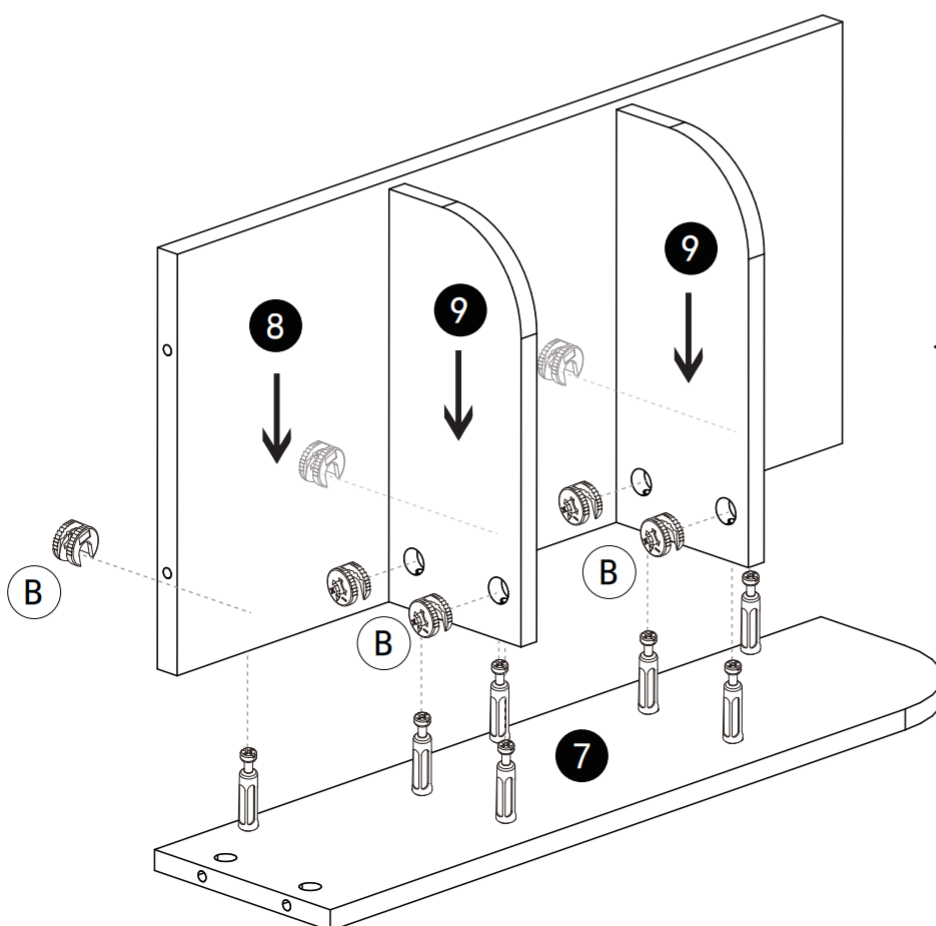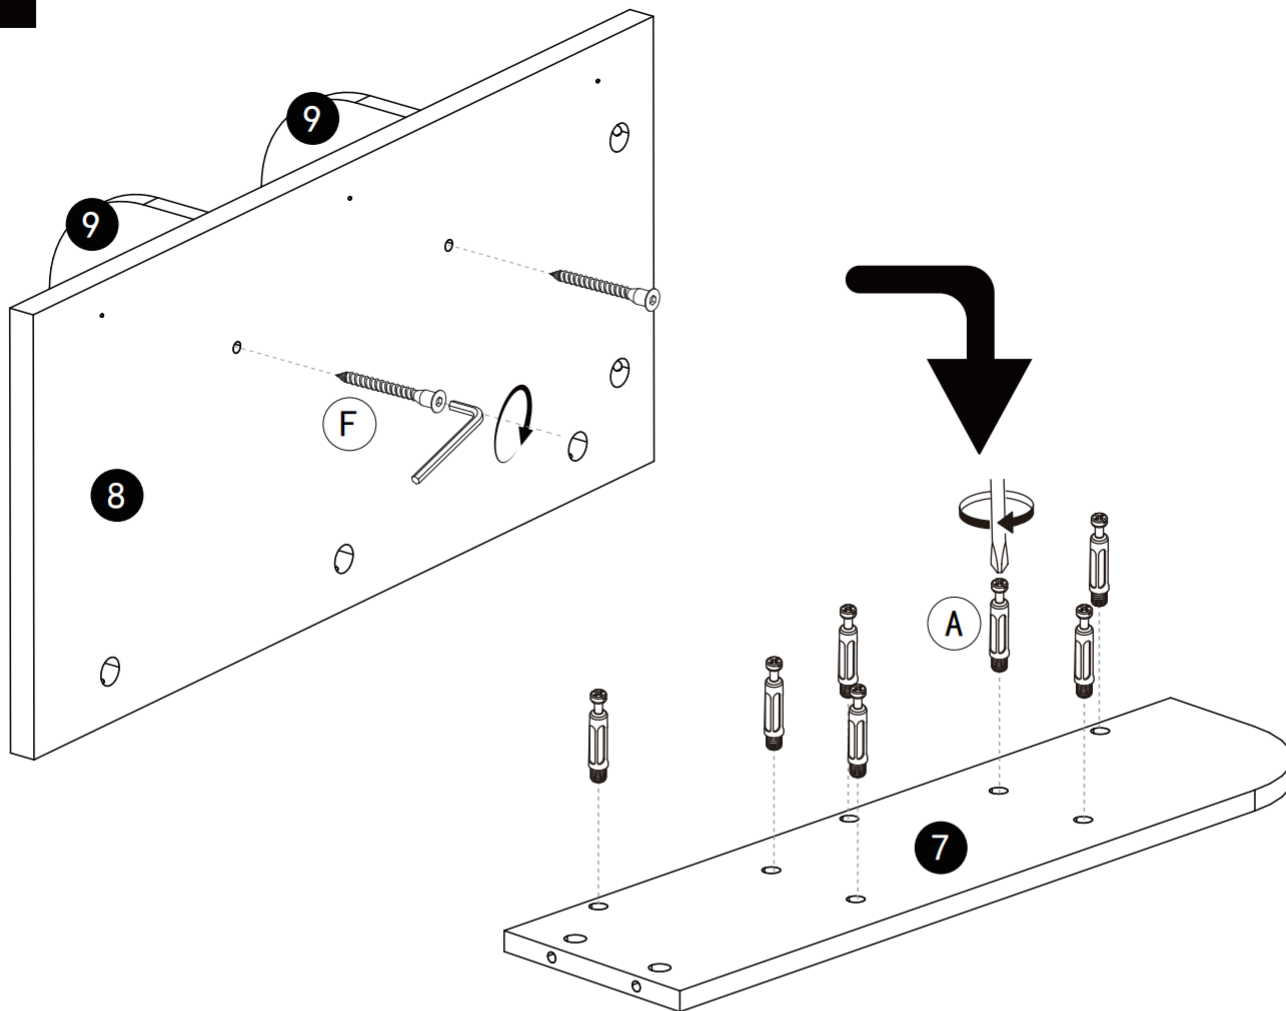


A		x7
B		x7
F		x2

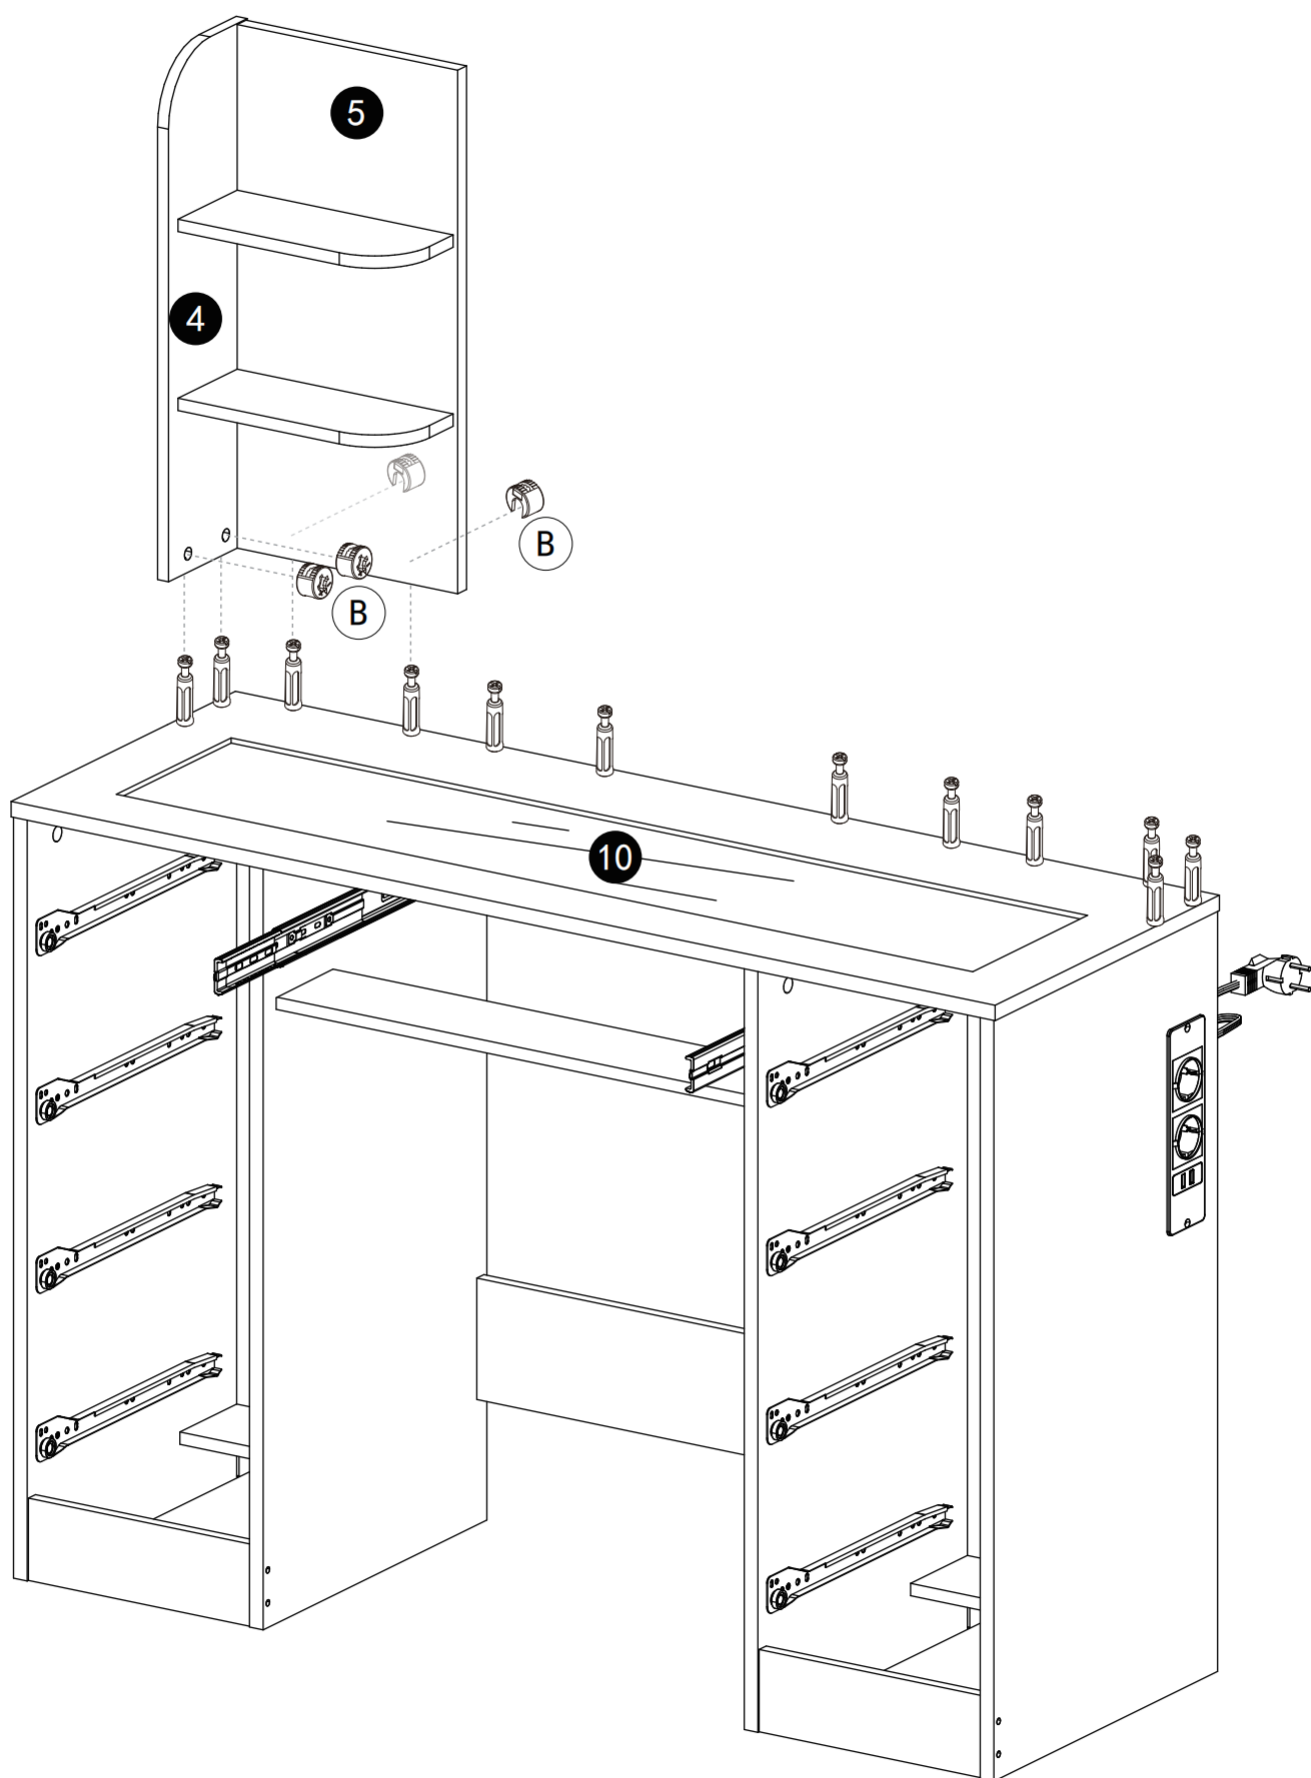

B




x4

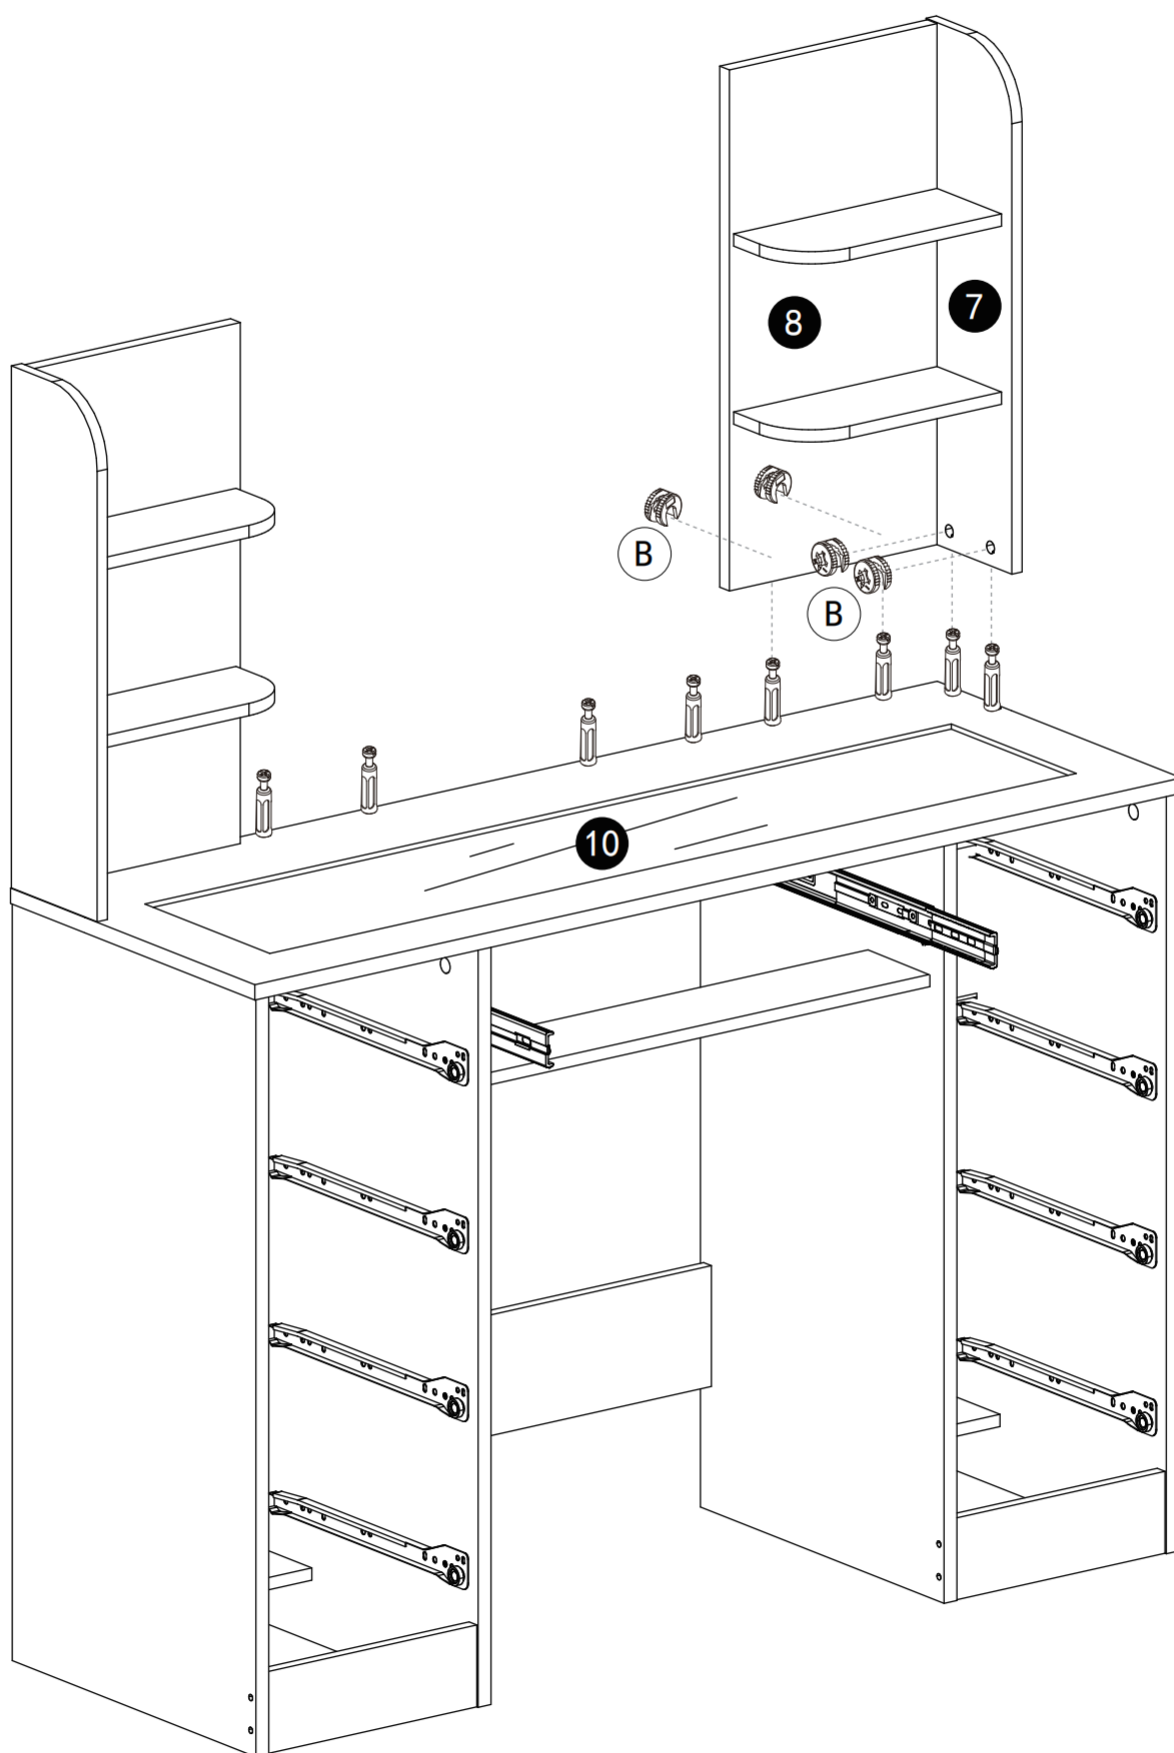

B




x4

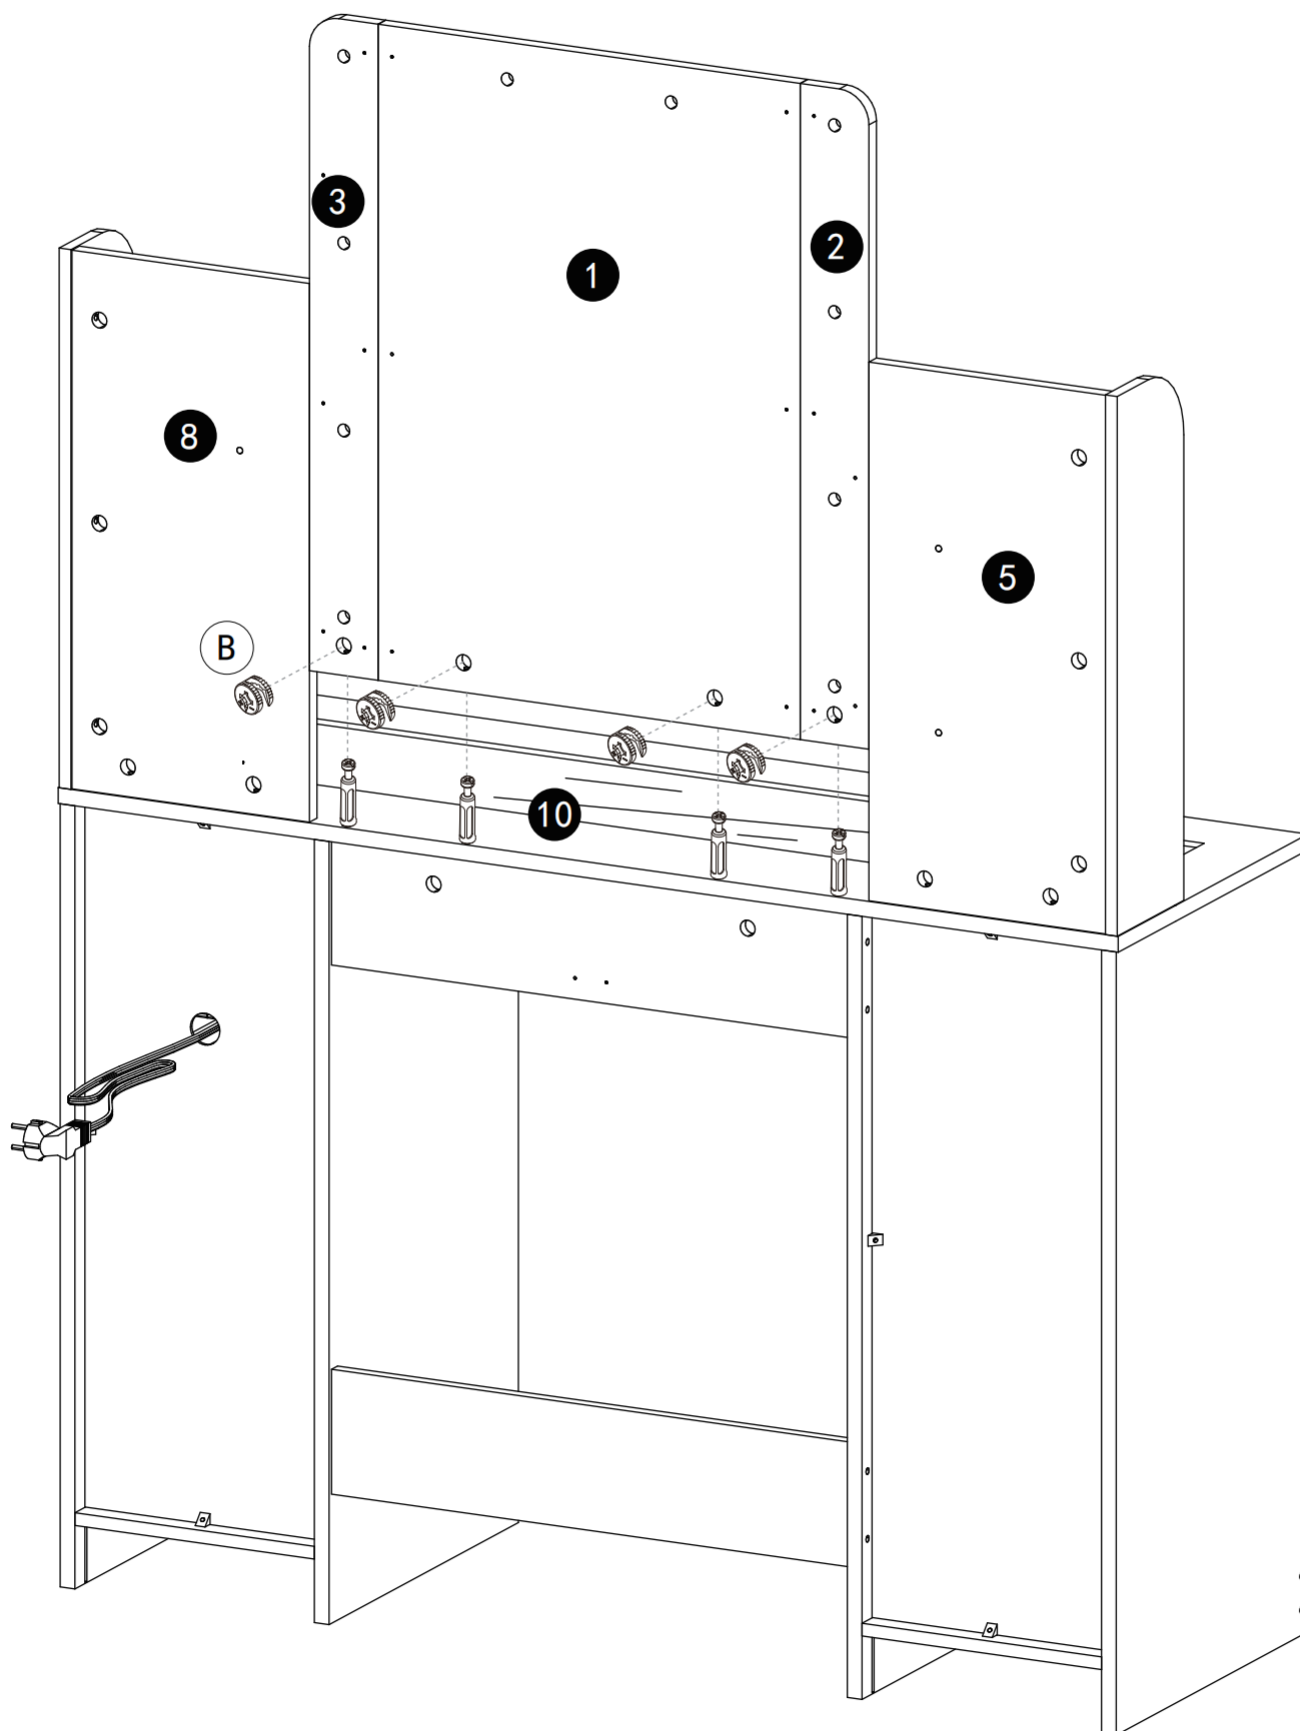



B





x4

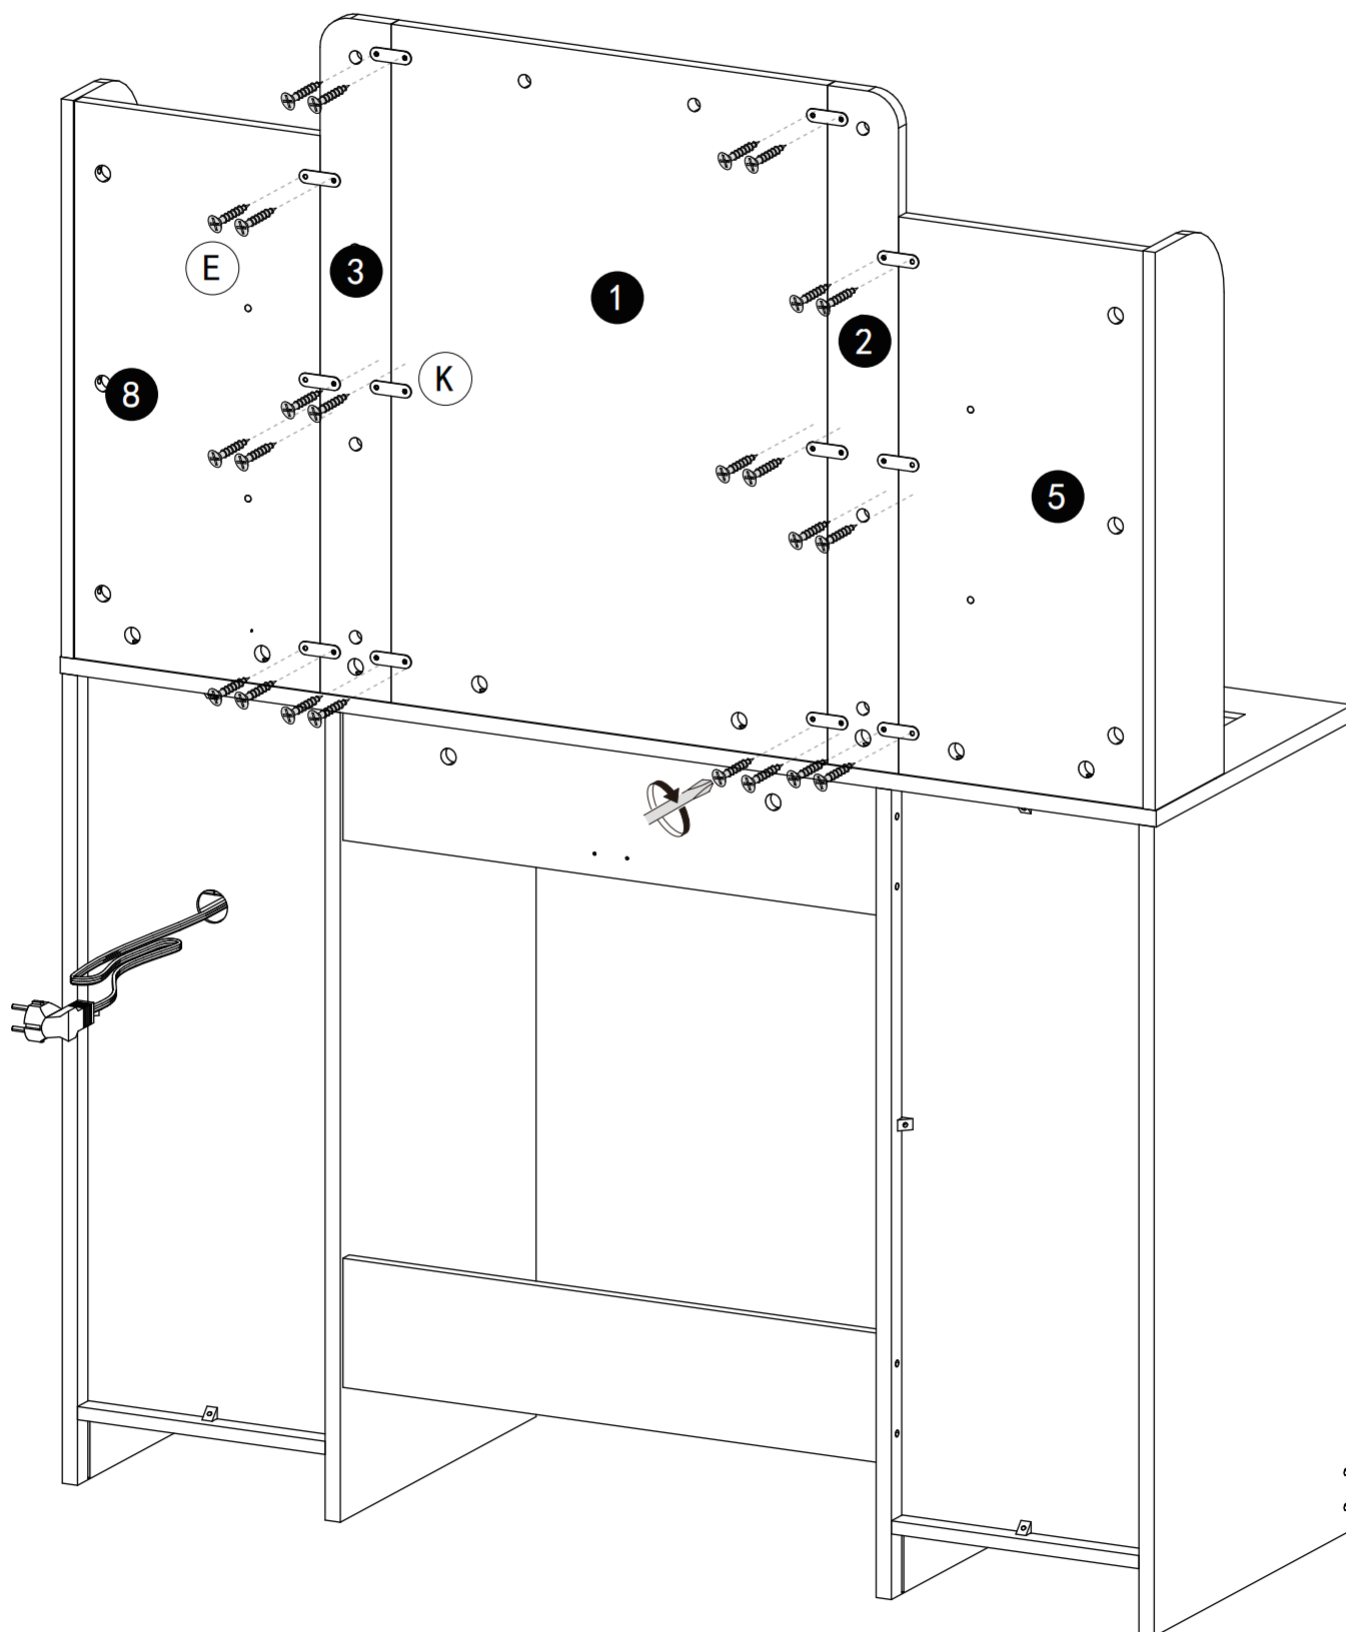


K		x12
E		x24

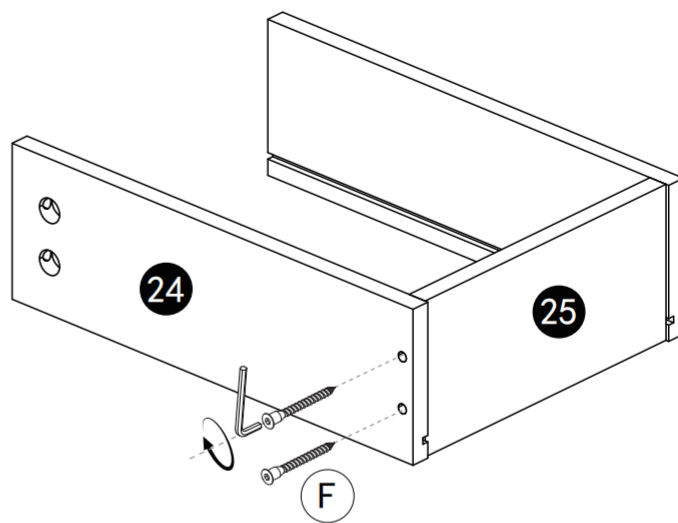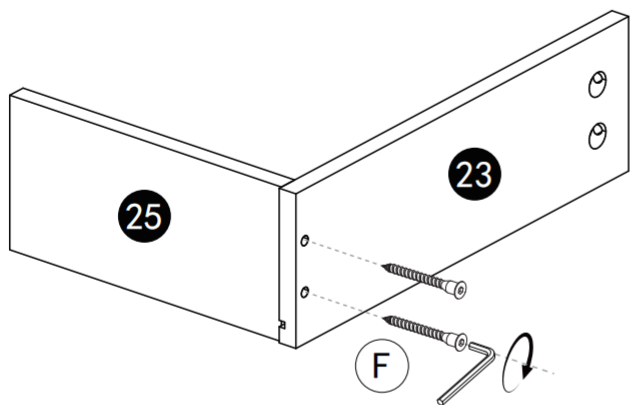

X8


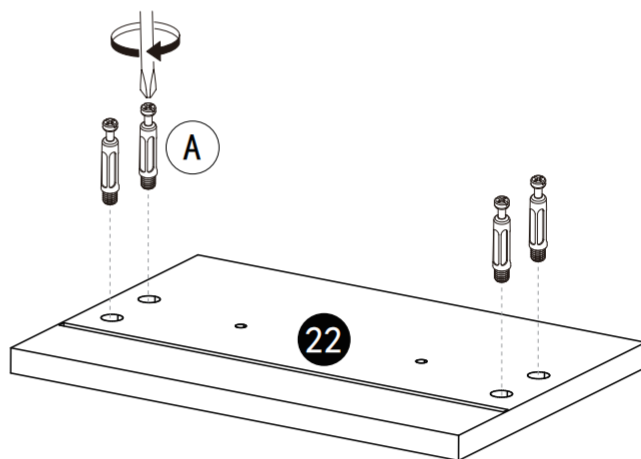
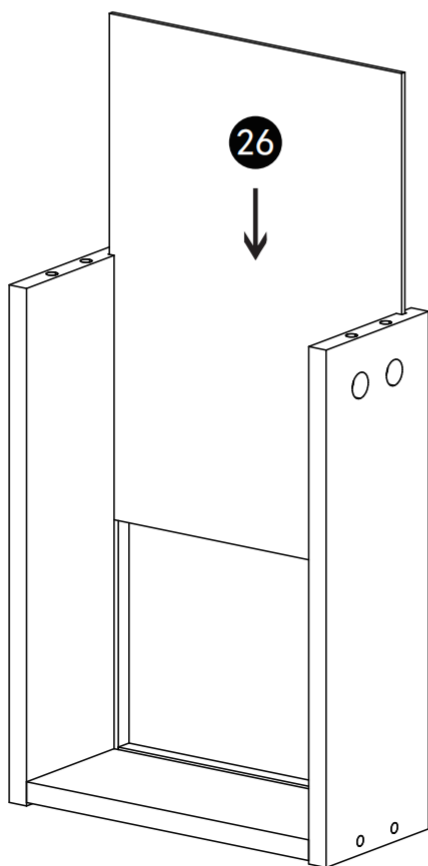


A		x32
F		x32




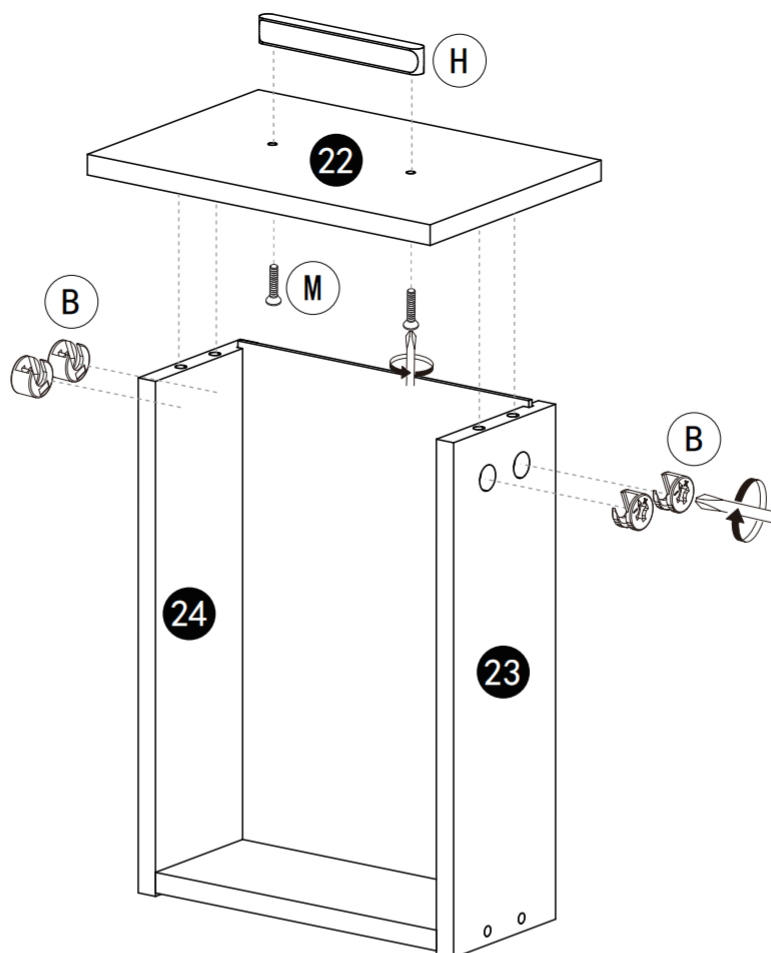


M		x16
B		x32
H		x8


X8

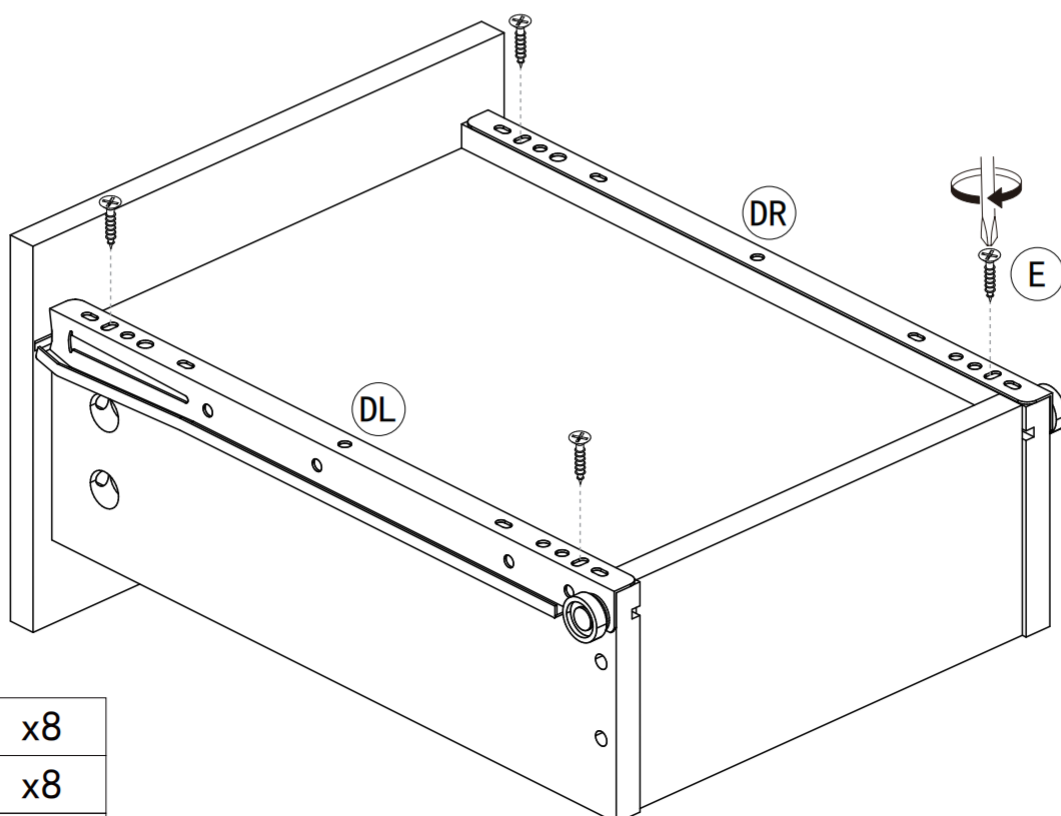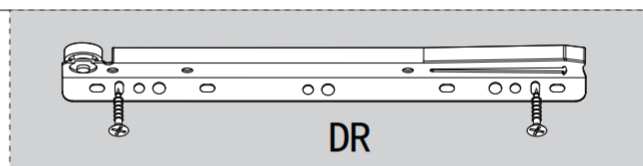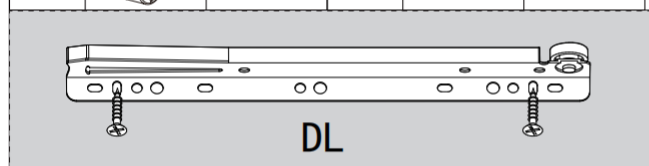



DL		x8
DR		x8
E		x32

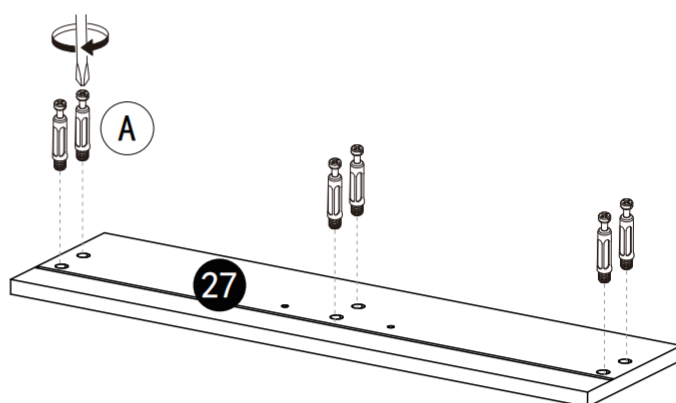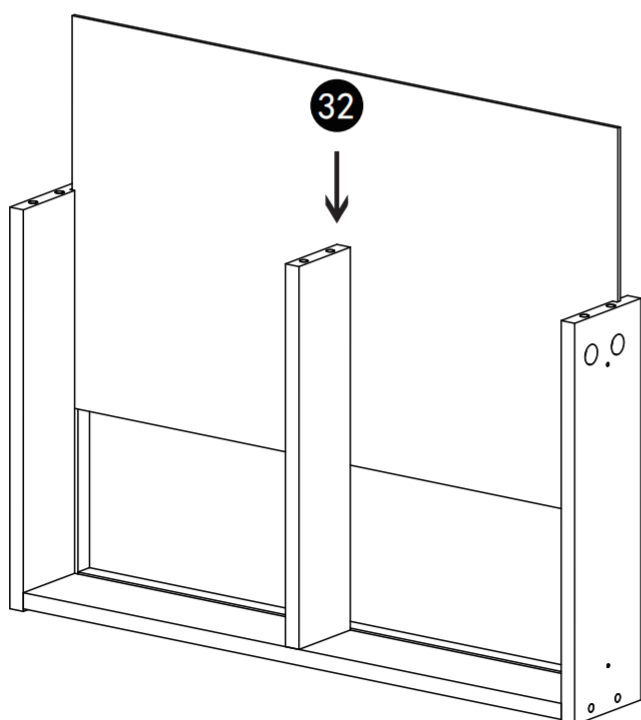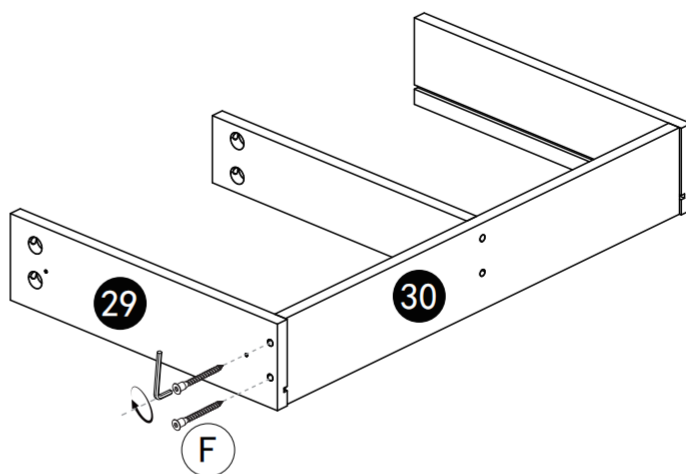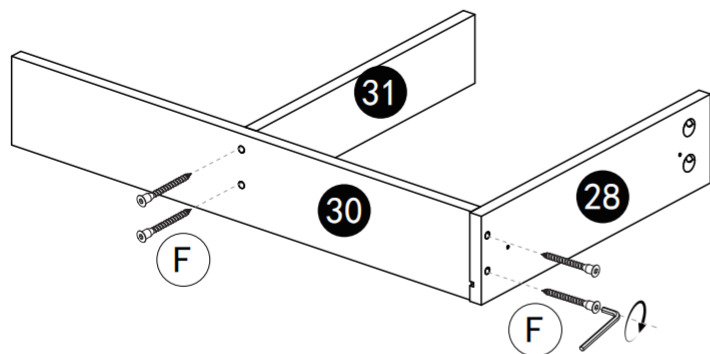



A		x6
F		x6

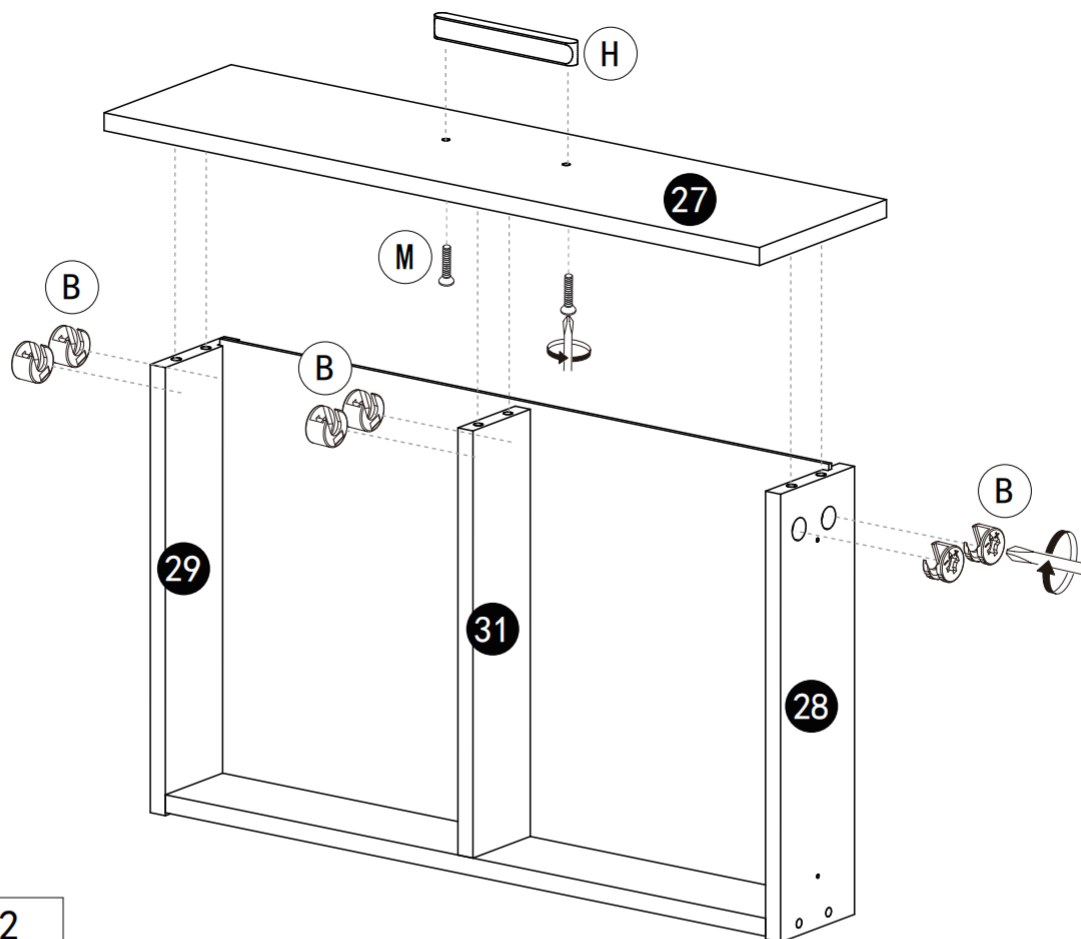

M		x2			
B		x6	H		x1

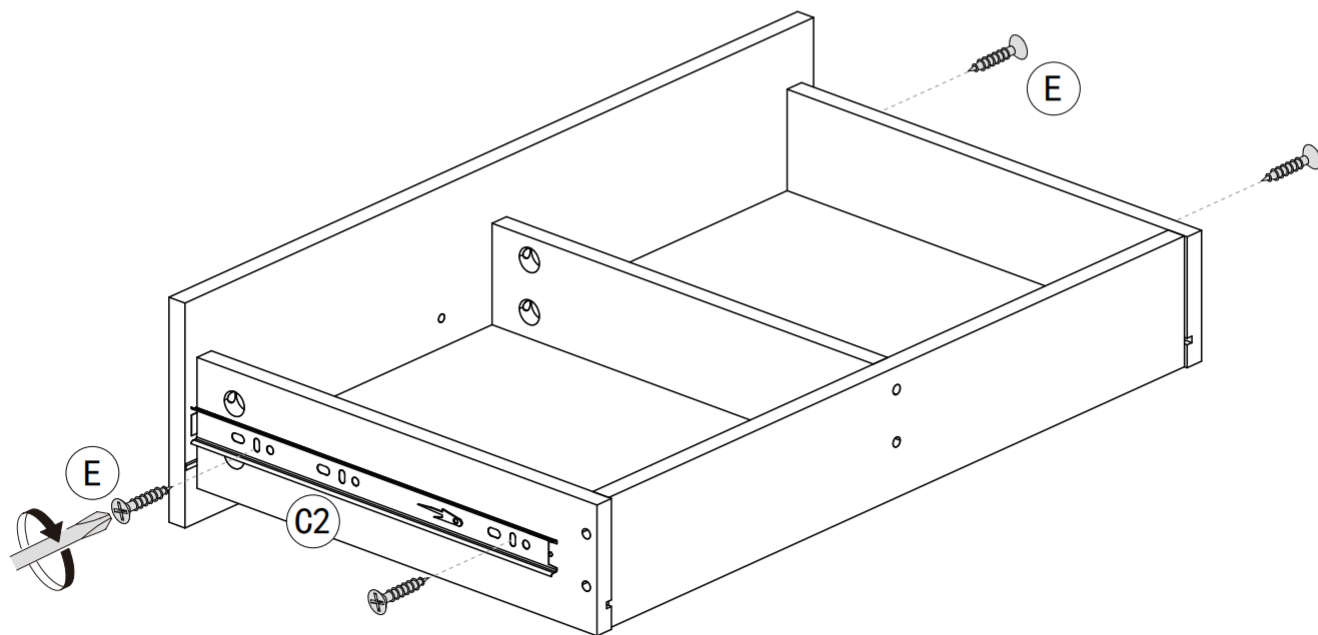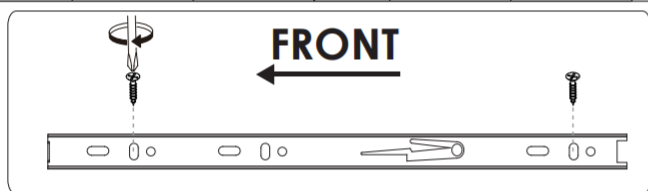


C2		x2
E		x4

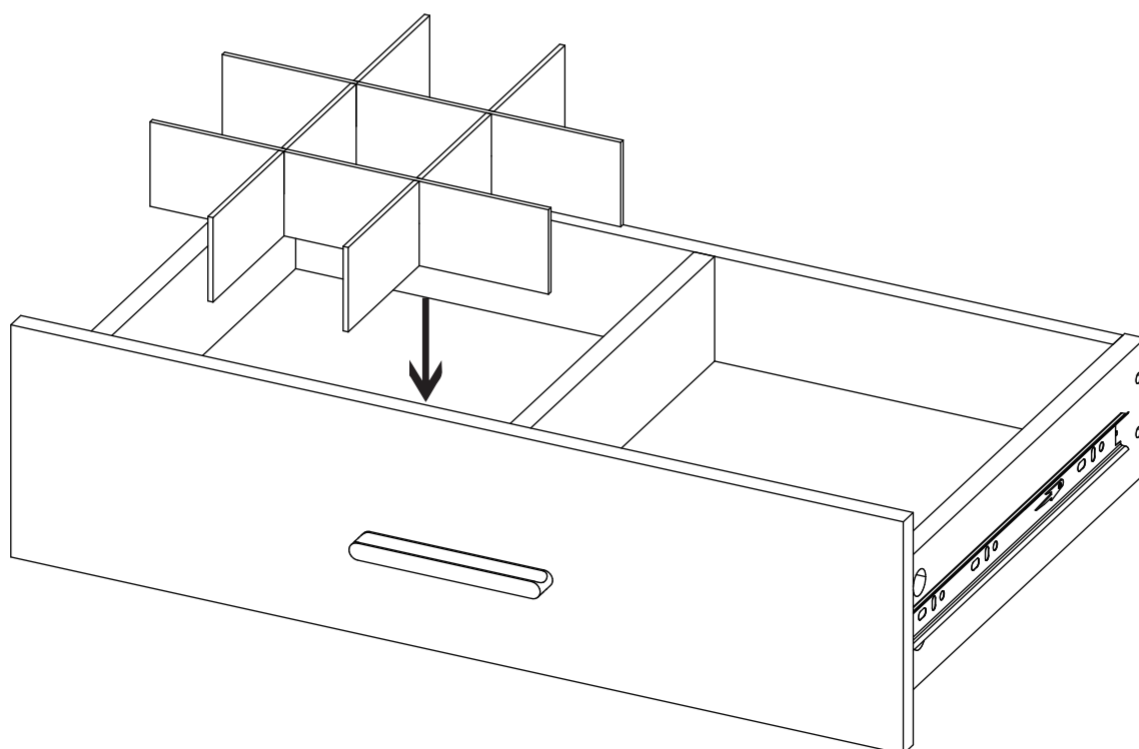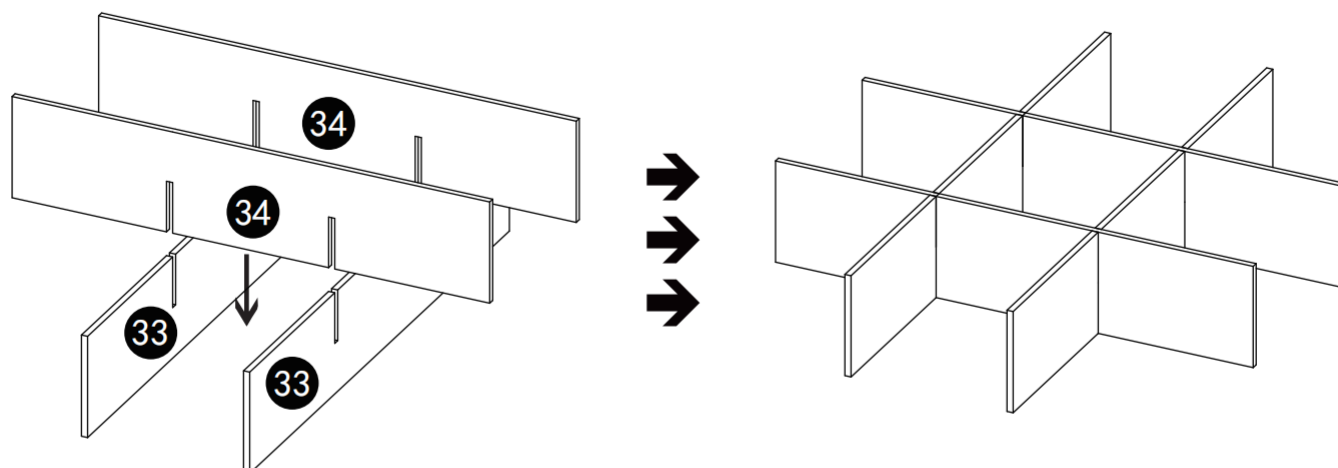


REMARK: Align the slide runners on the drawer with the unit and push it carefully inside until it stops.




★ If the drawer does not go in smoothly please take it out and repeat the step.

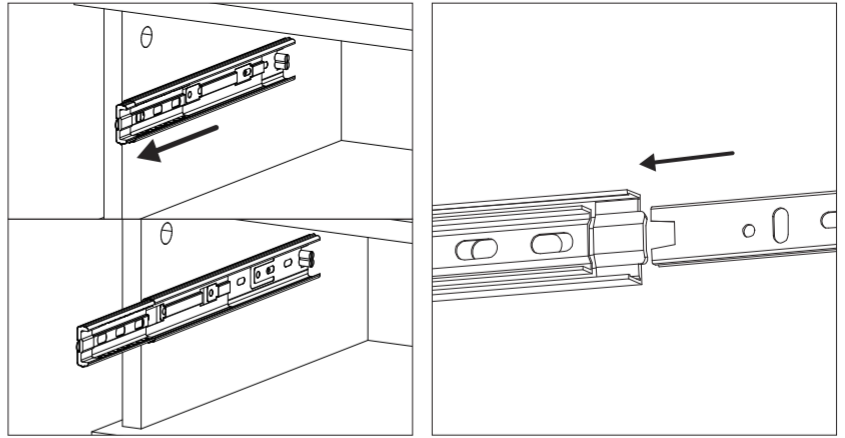


REMARK:

1. First, slide the slide and ball on both sides of the slide to the outside.
2. when installing the drawer, align both sides first, and then push both sides inward at the same time.

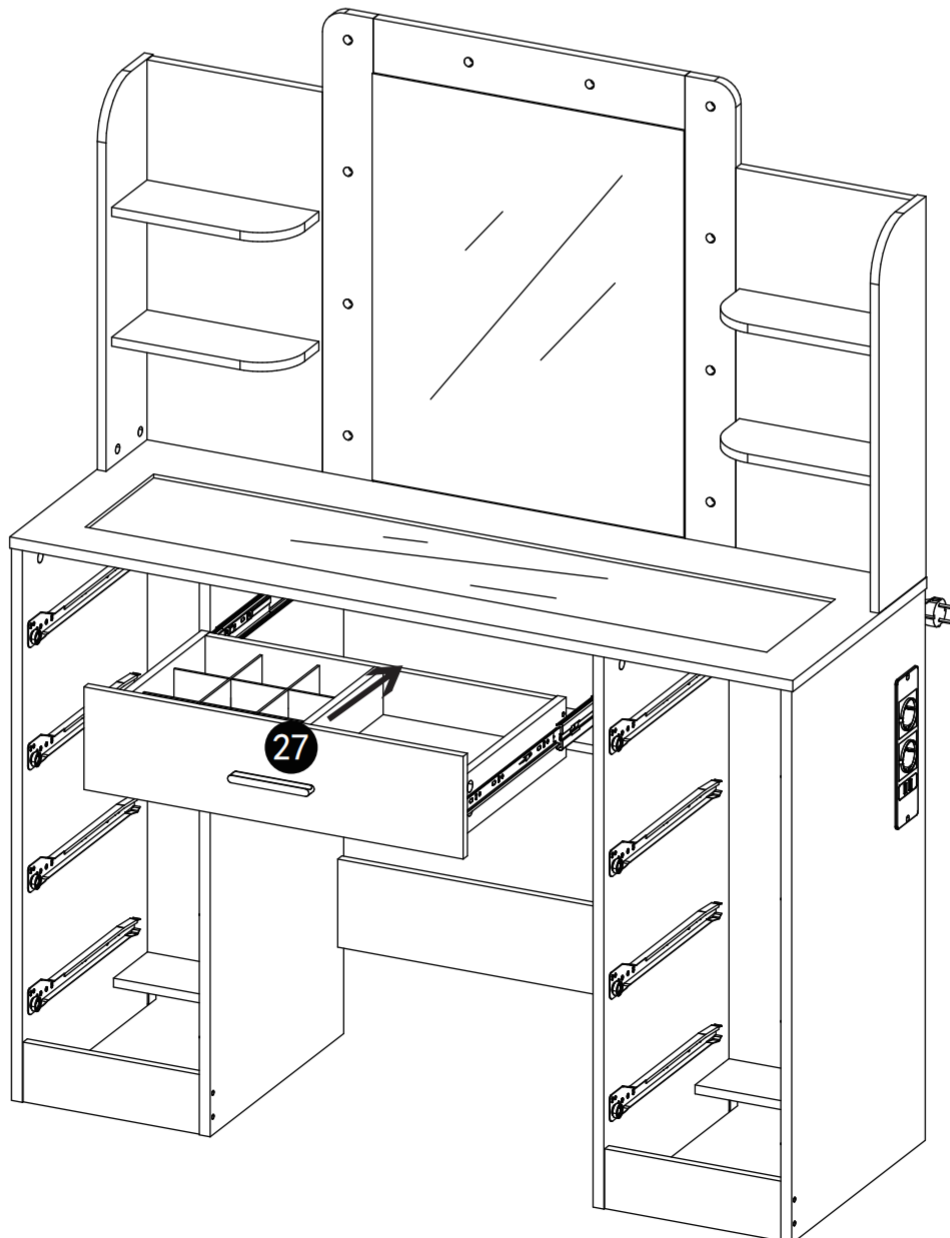

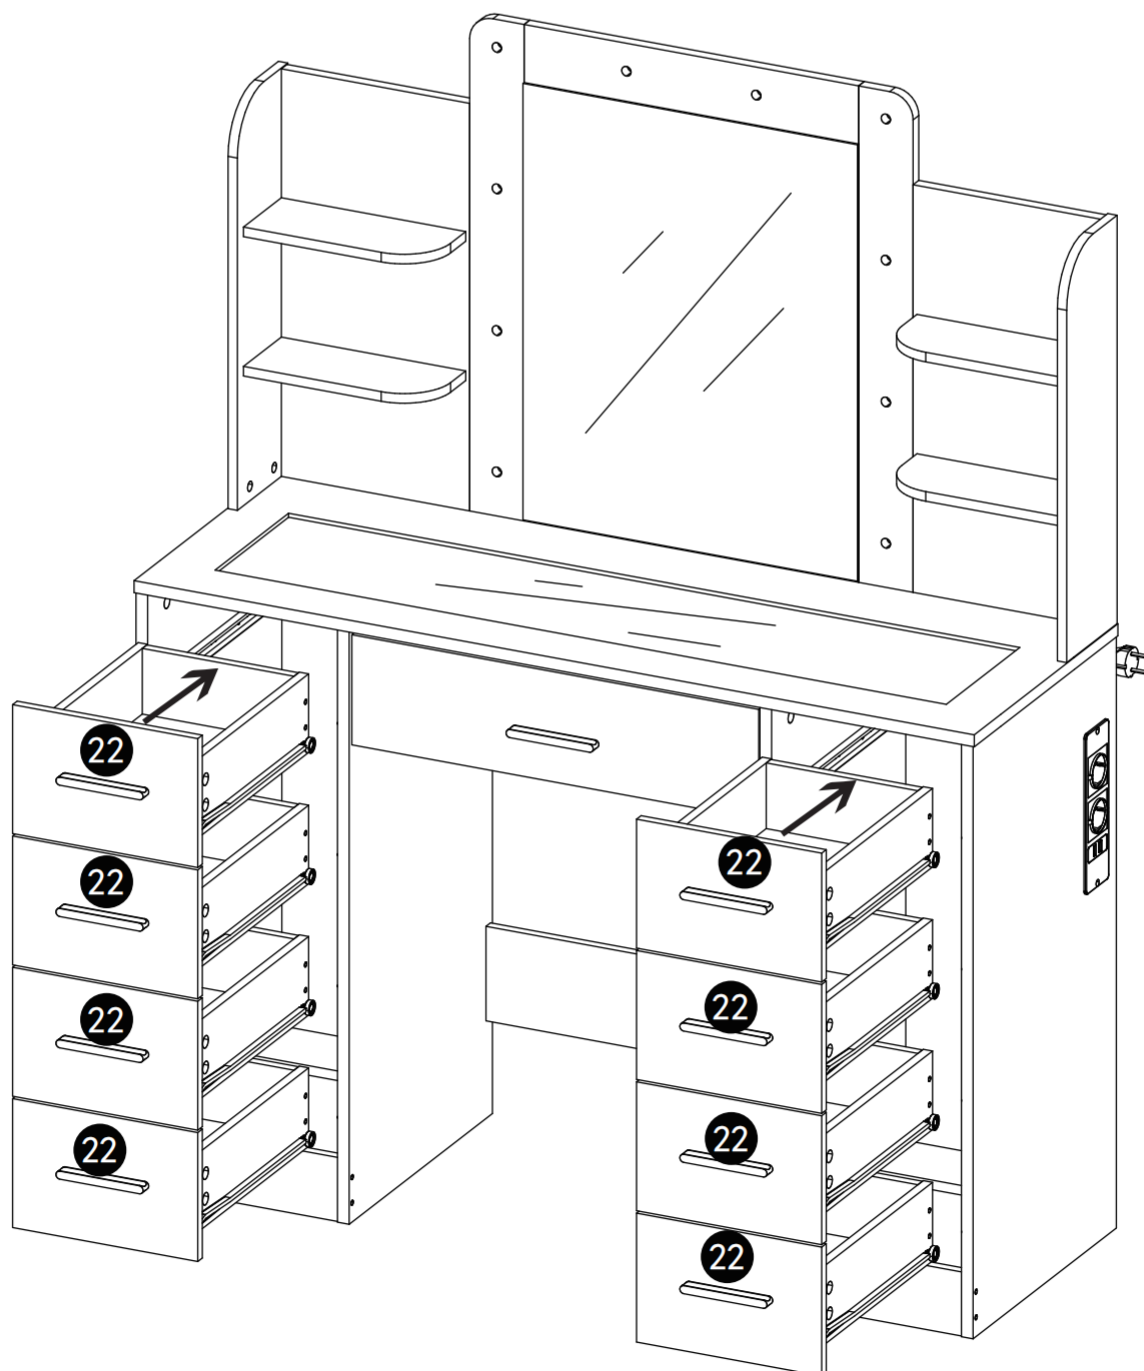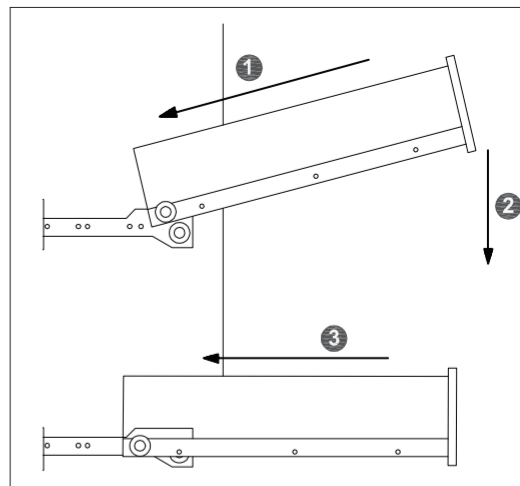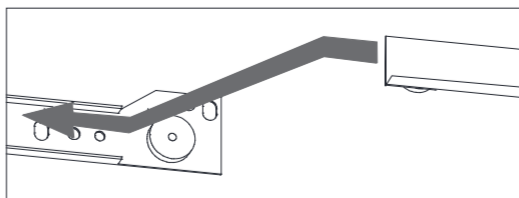




I

**x1 PC**Install the
last bulb




II

**x9 PC**Install the
middle bulbs
(9 pcs)

I

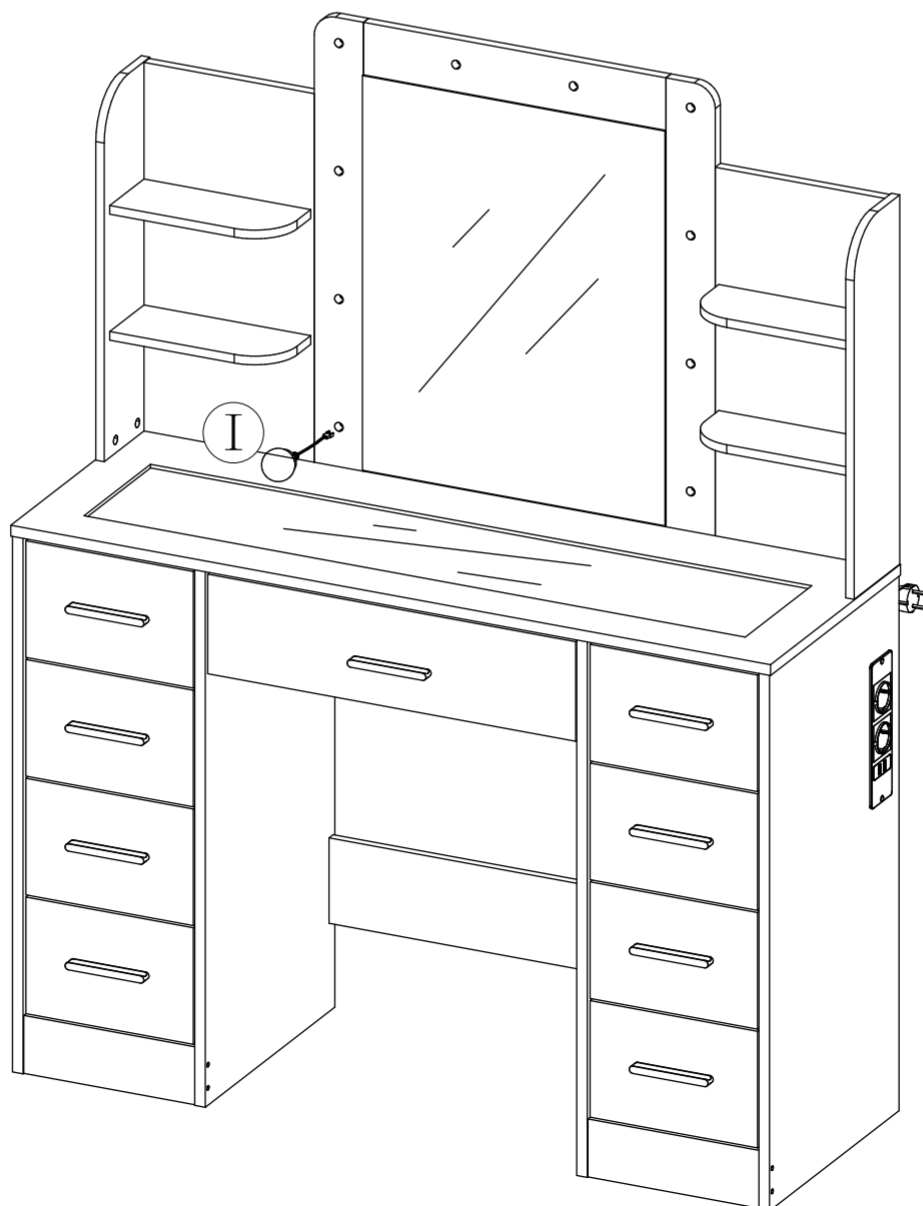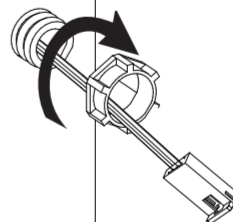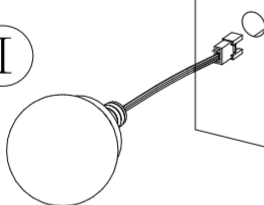




28

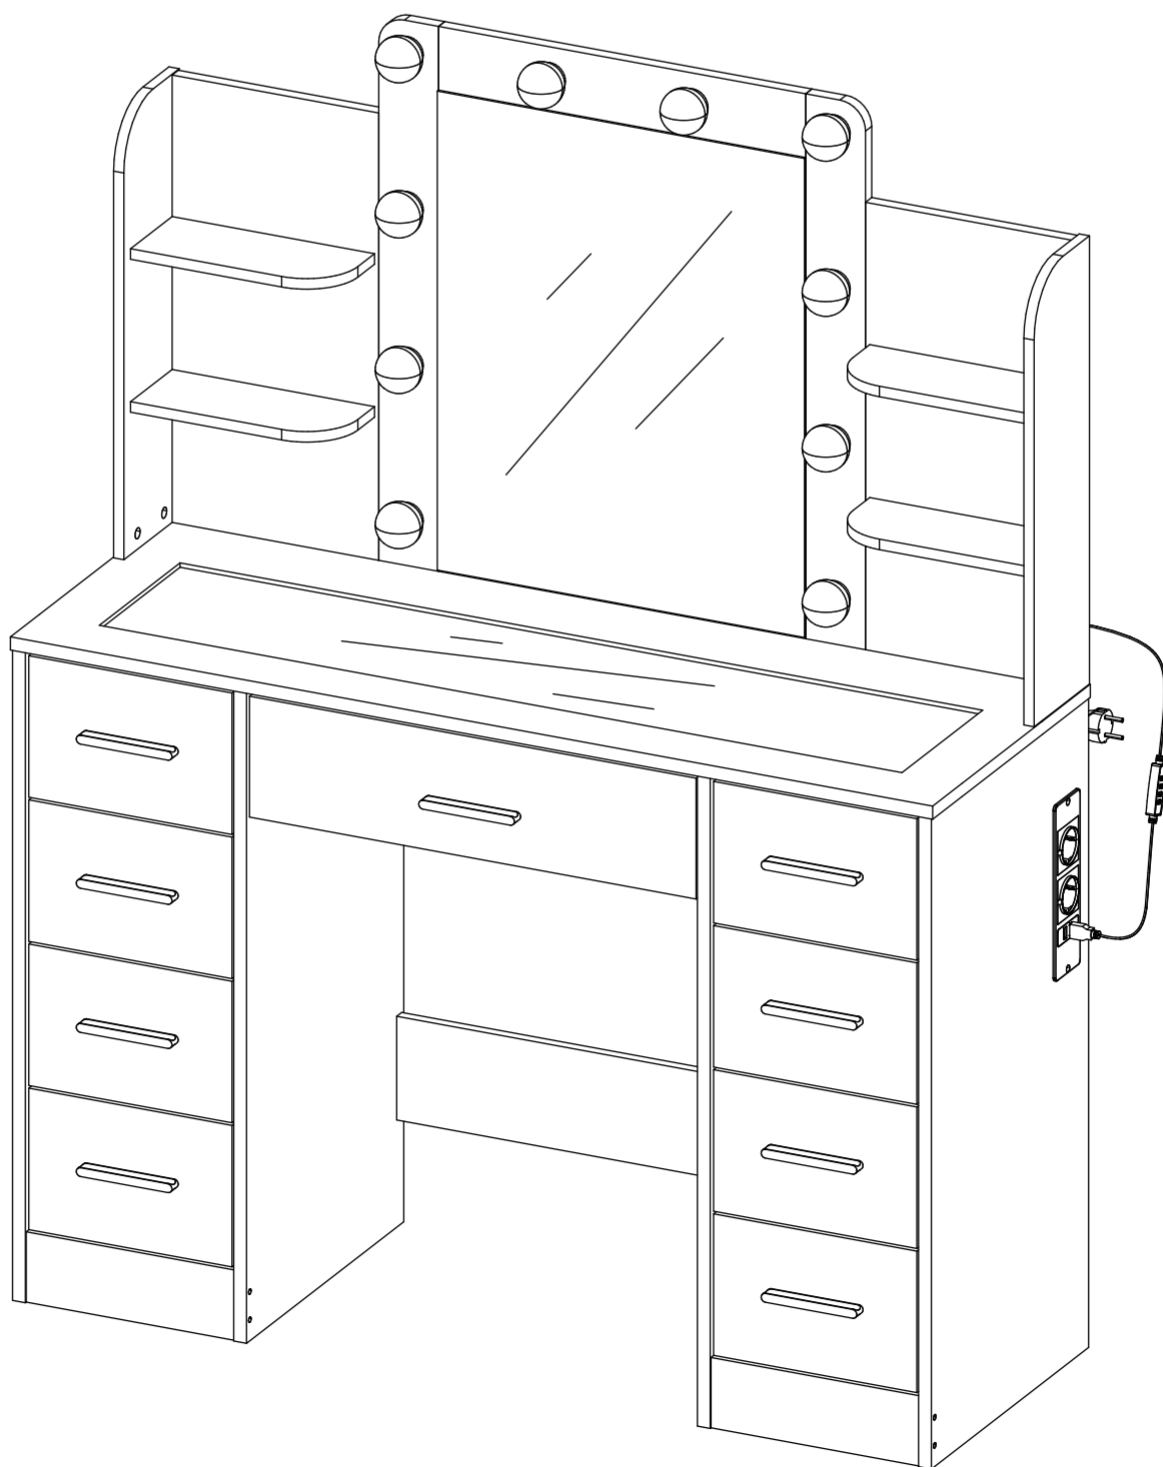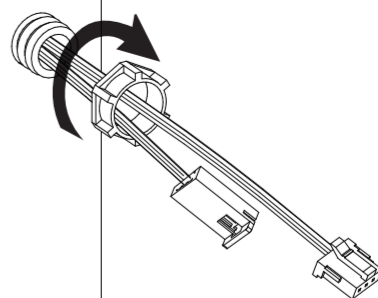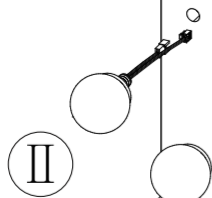

0




x1

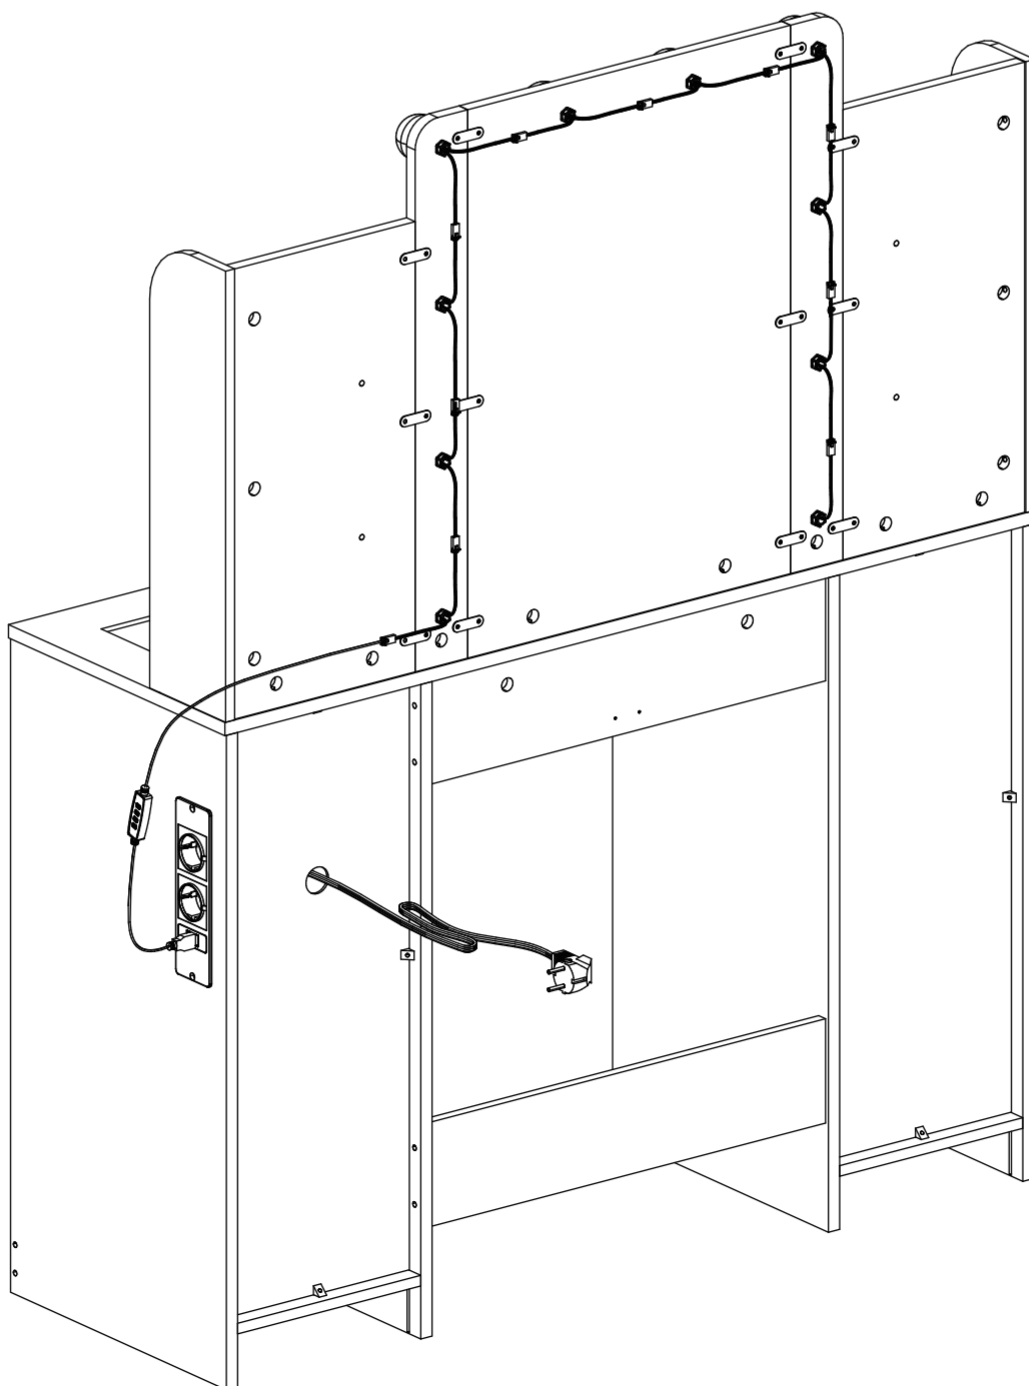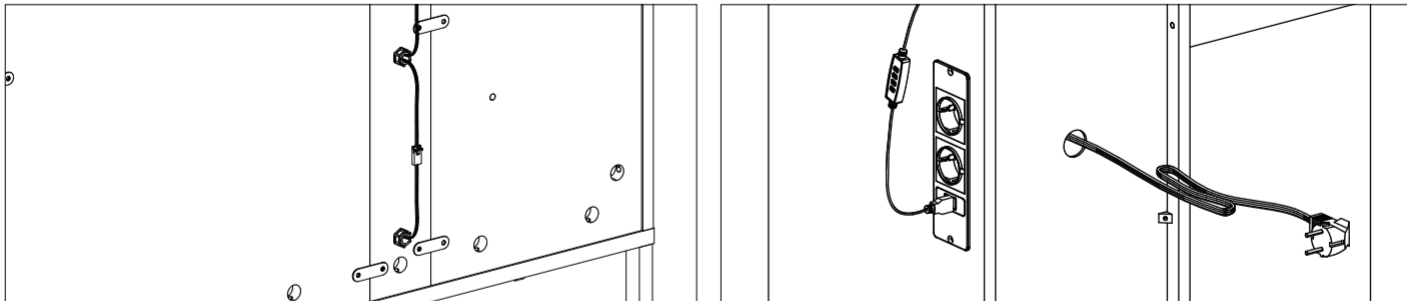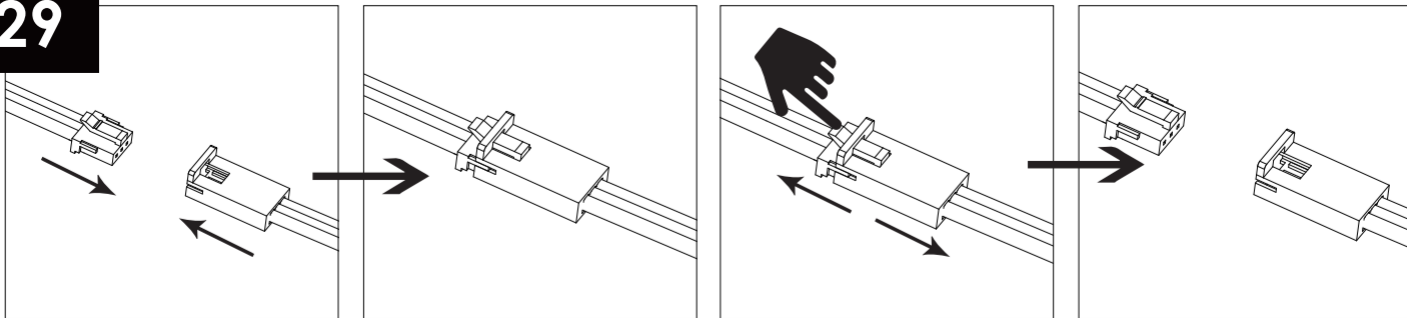


30


1

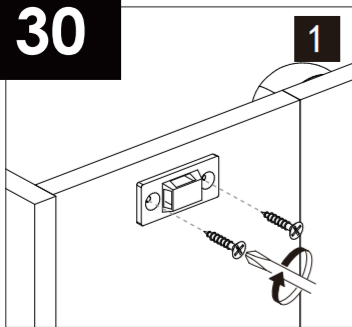







2

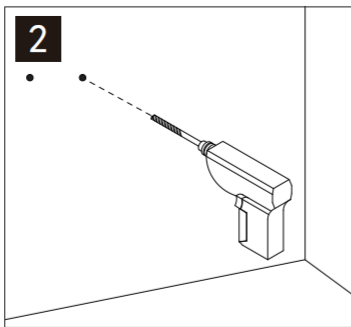

3

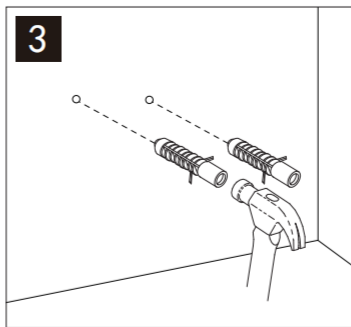

4

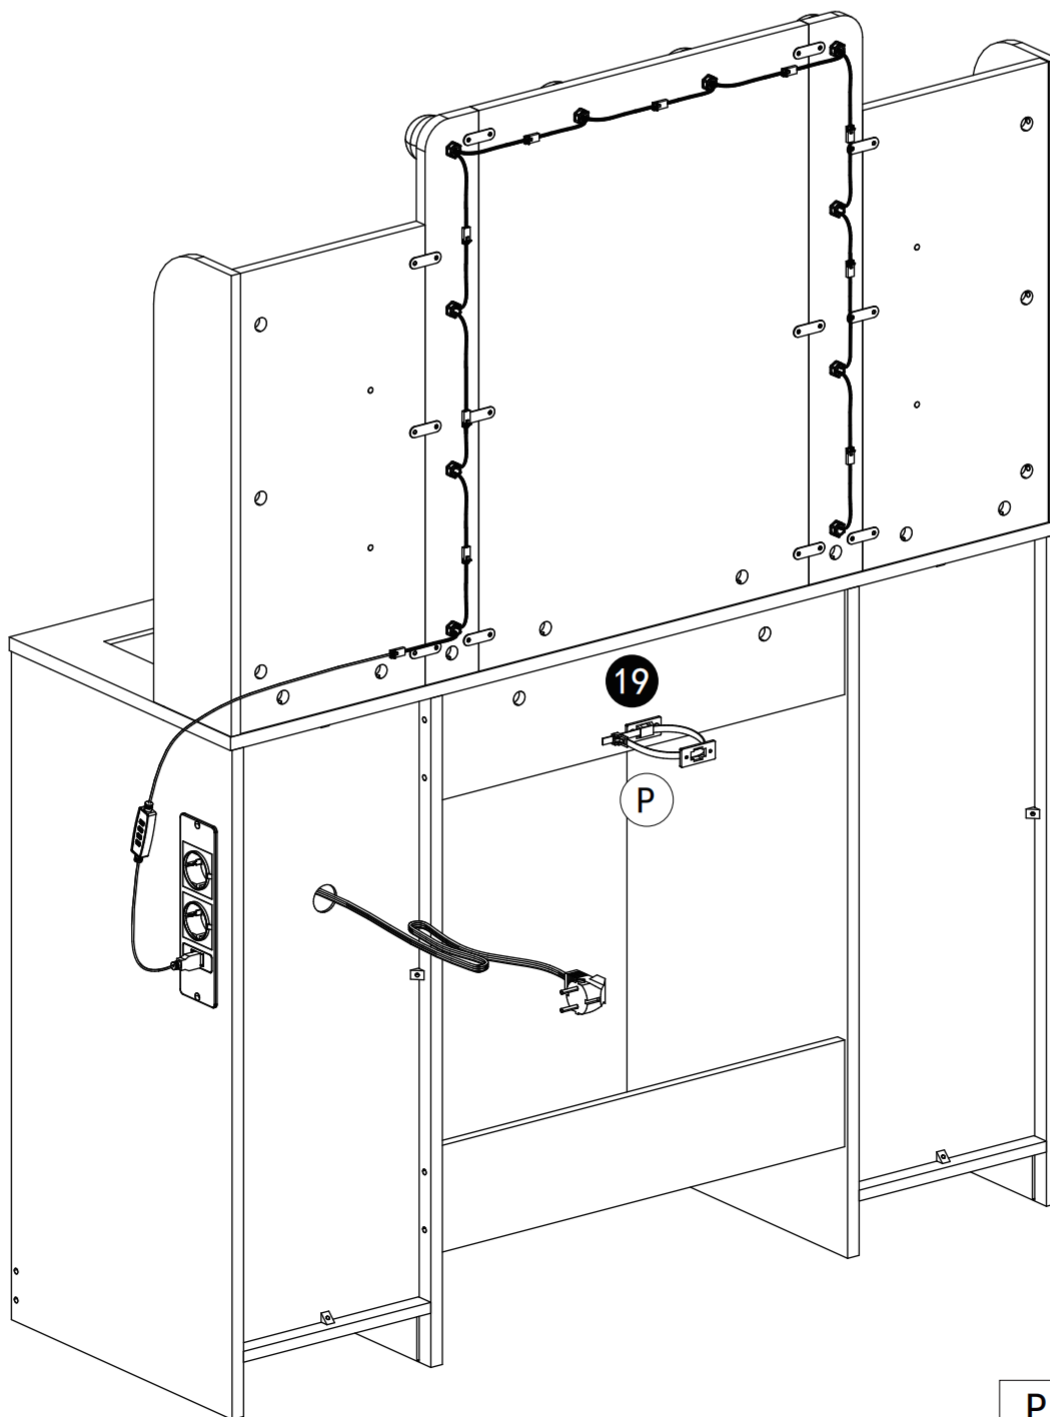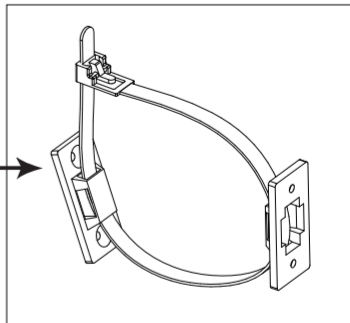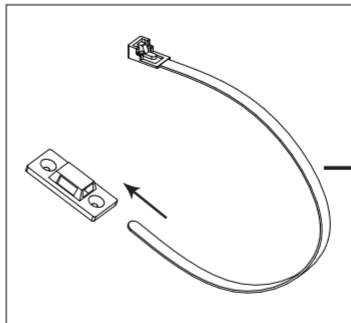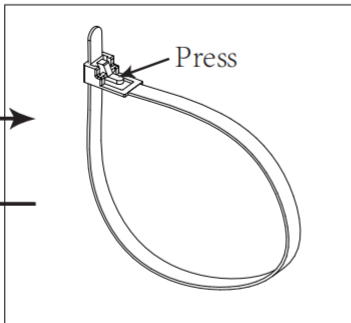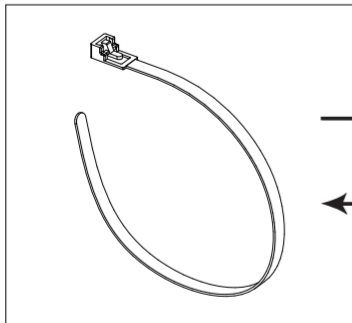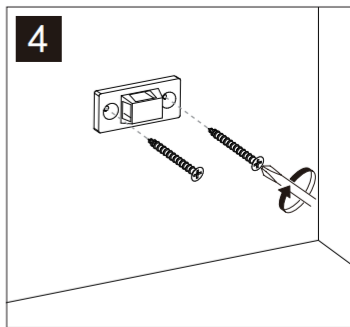

P




x1


31

1

2

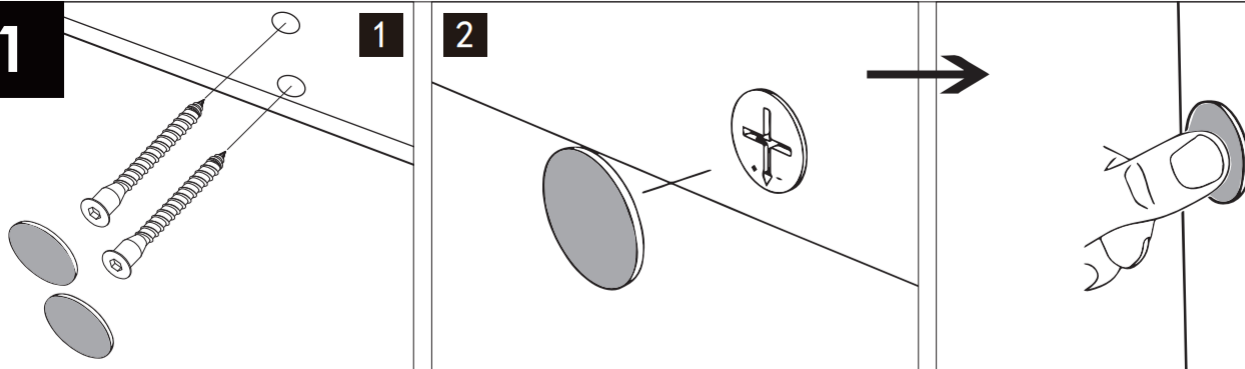

Add L fittings to all exposed holes on the front of the product

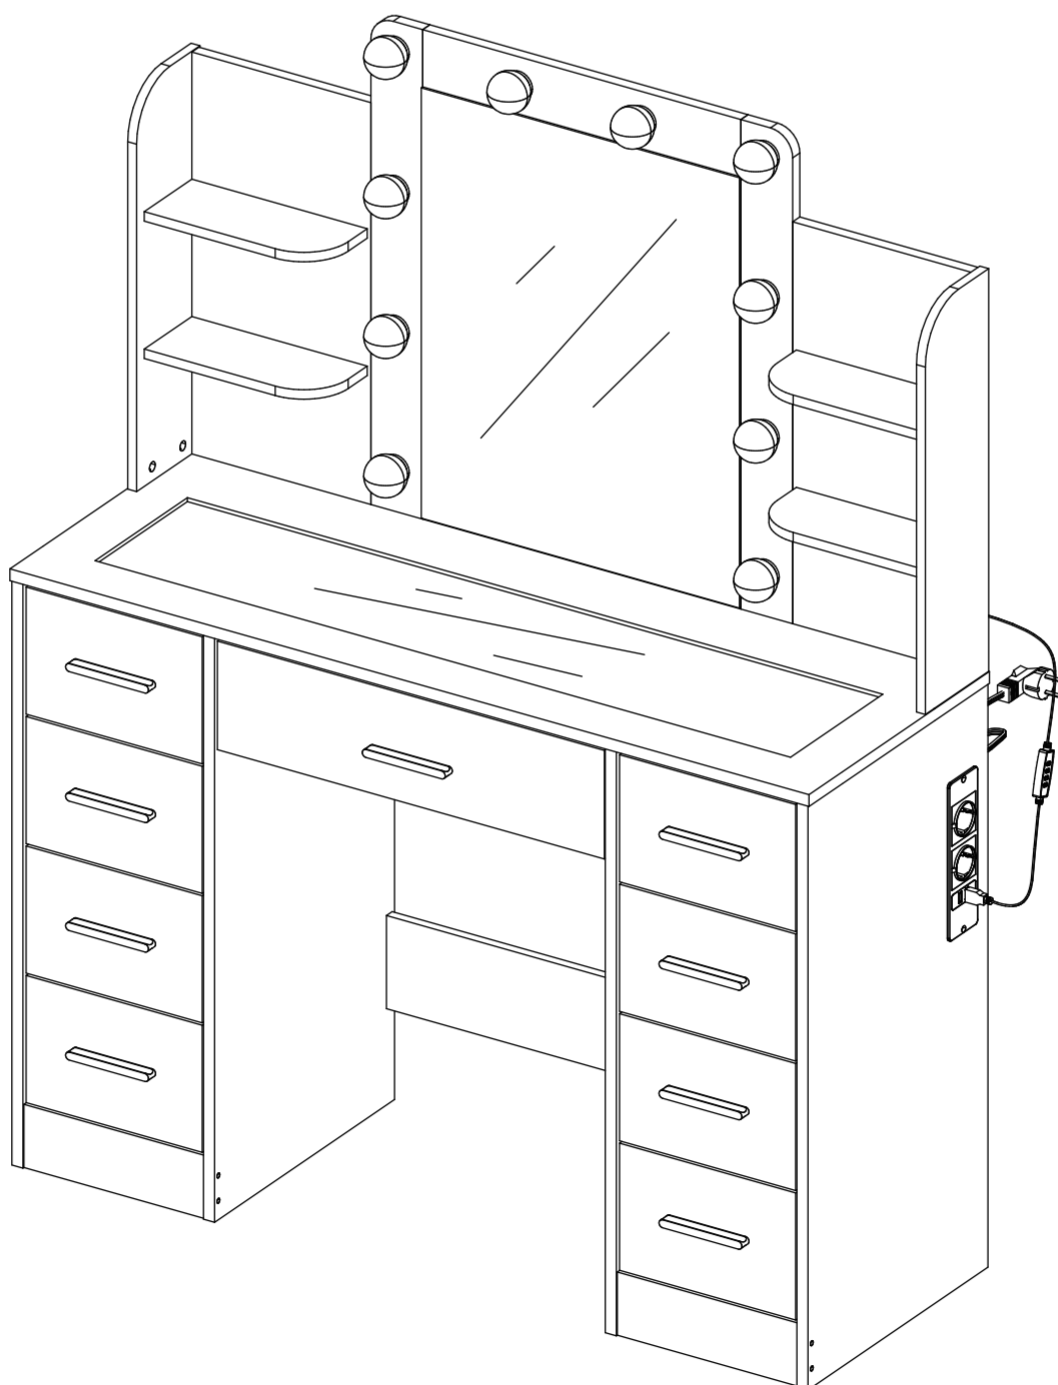

L



x20