











ASSEMBLY INSTRUCTION

(DON'T FULLY TIGHTEN THE SCREWS BEFORE FINISHING ASSEMBLY)


HARDWARE LIST

A 	B  Ø:4x18mm	C  Ø:4x40mm	D  Ø:5X25mm	E  Ø:3X16mm
1pc	4pcs	18pcs	5pcs	16pcs
F 	G 	H 	I 	J 
12pcs	24 pcs	4 pcs	5pcs	2pcs


PART LIST

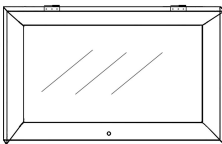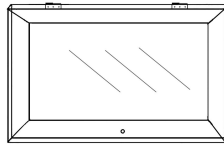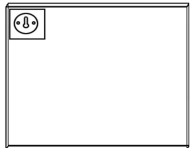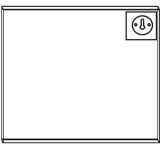K1 	K2 	L1 	L2 	M 
1pc	1pc	2pcs	2pcs	1pc
N 	O 	P 	Q 	R 
1pc	1pc	1pc	1pc	4pcs
S1 	S2 	T 		
1pc	1pc	1pc		

Step 1

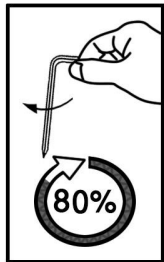


Step2

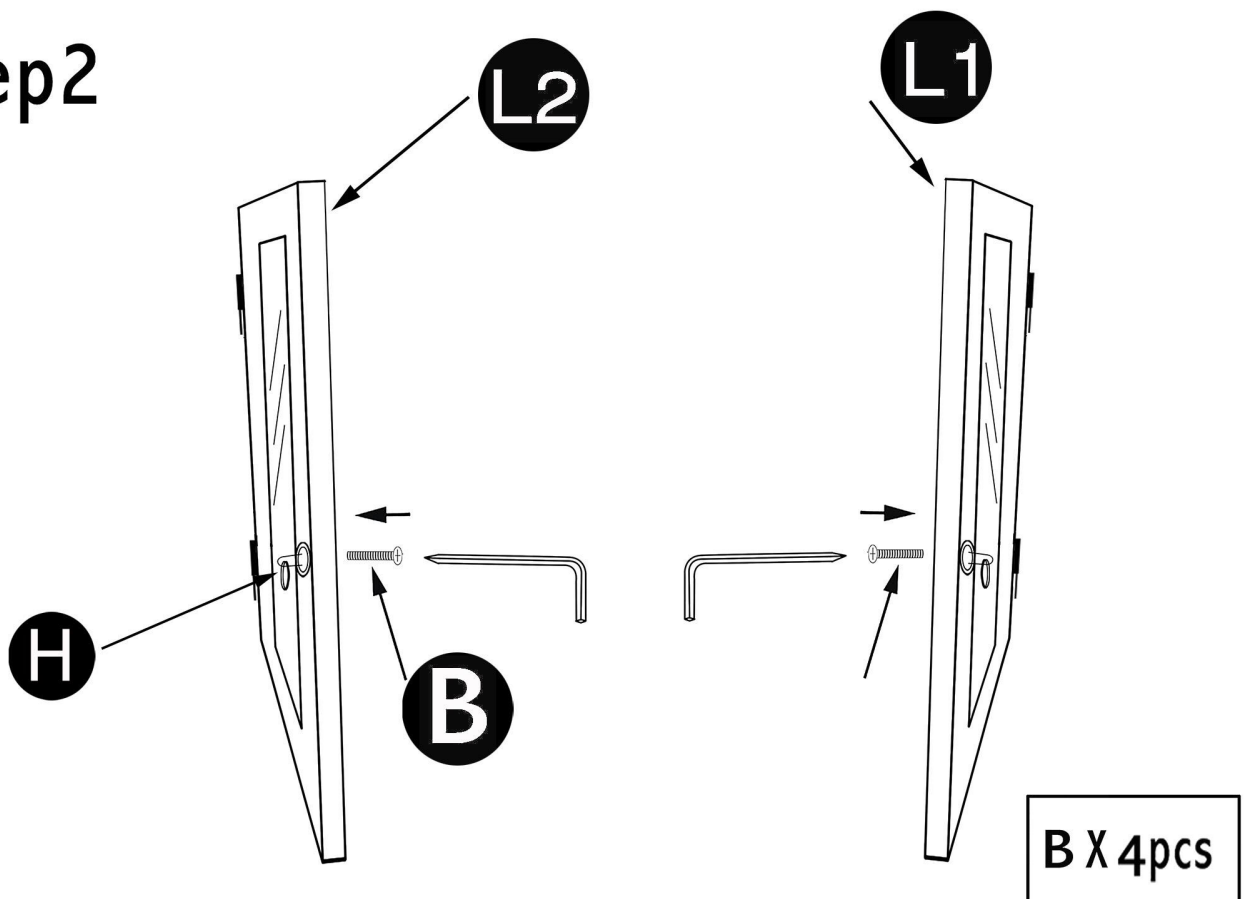


INSTRUCTION STEPS


Step 3

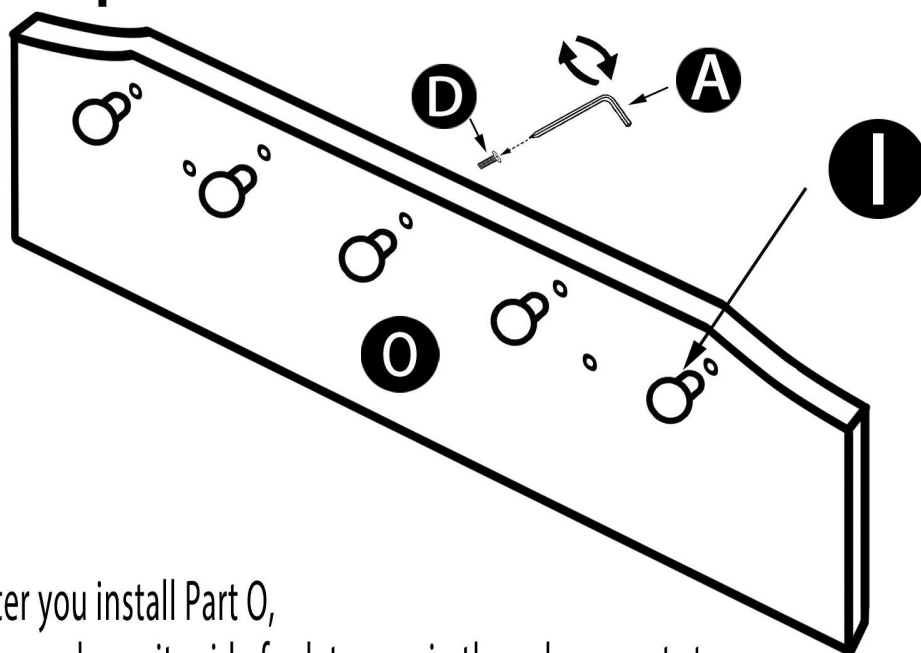


After you install Part O,
you can leave it aside for later use in the subsequent steps.

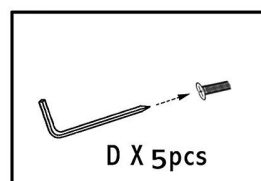

Step 4

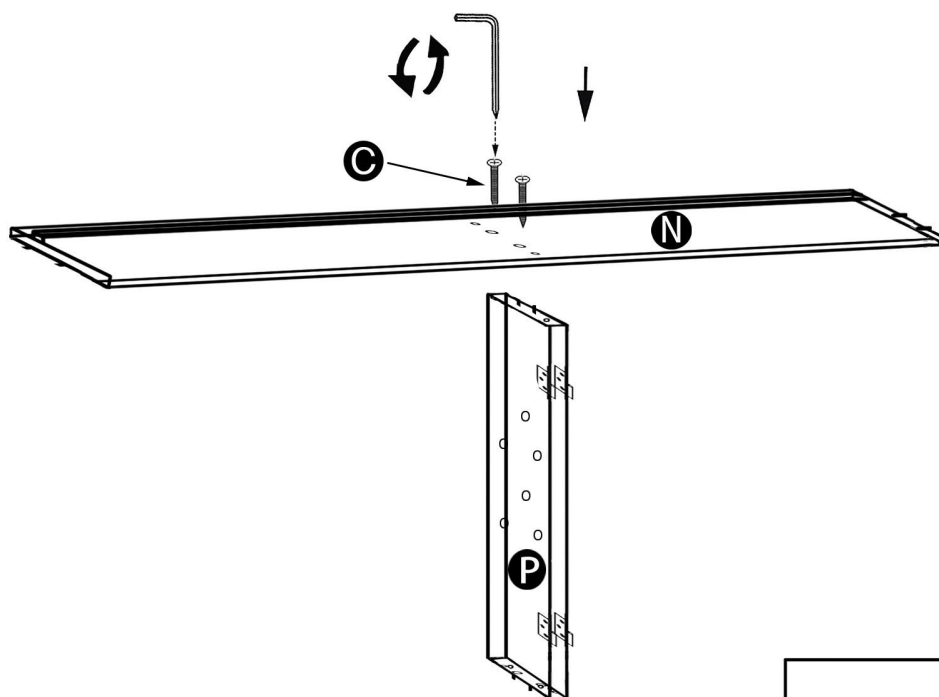


Reminder: The side of the board N with the small wooden strips nailed on it faces upwards,
while the side of the board P with the metal hinge faces outwards.

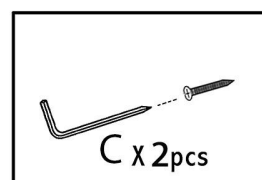


INSTRUCTION STEPS

Step 5

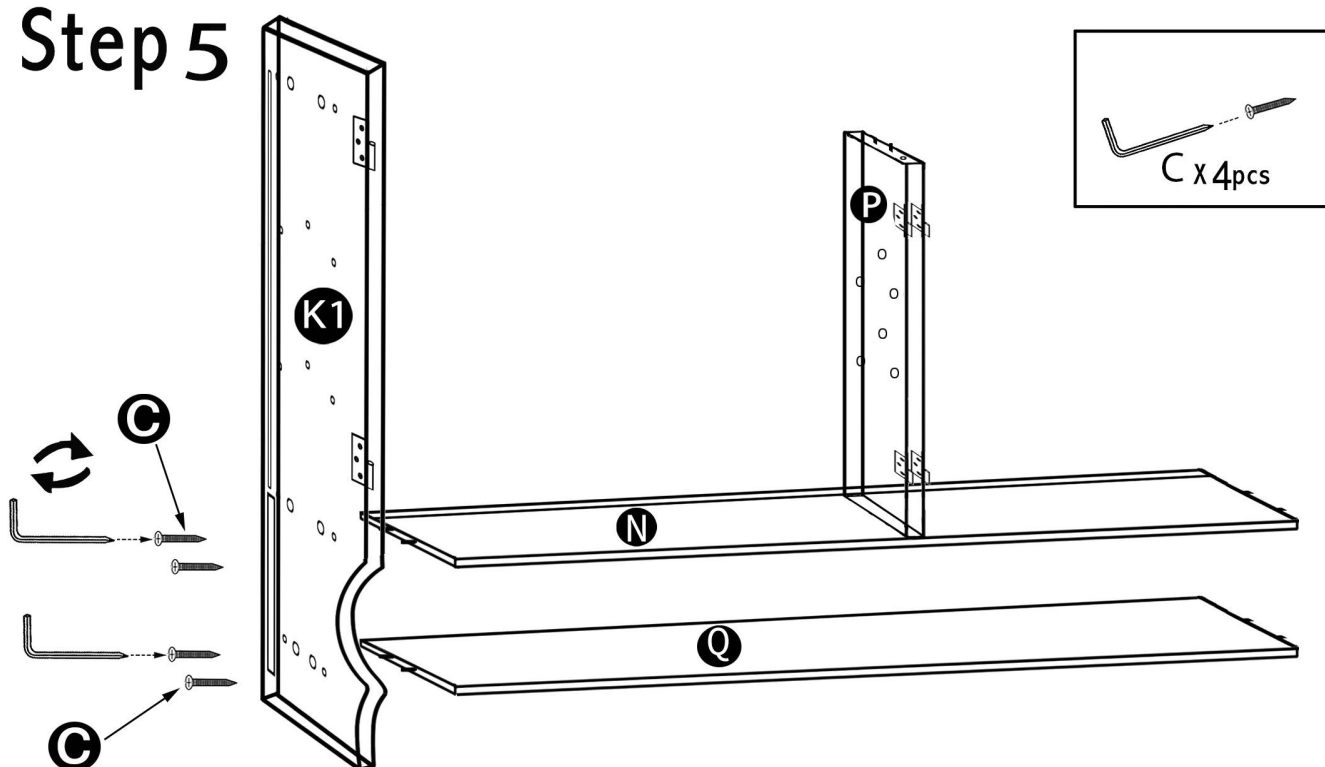


Step 6

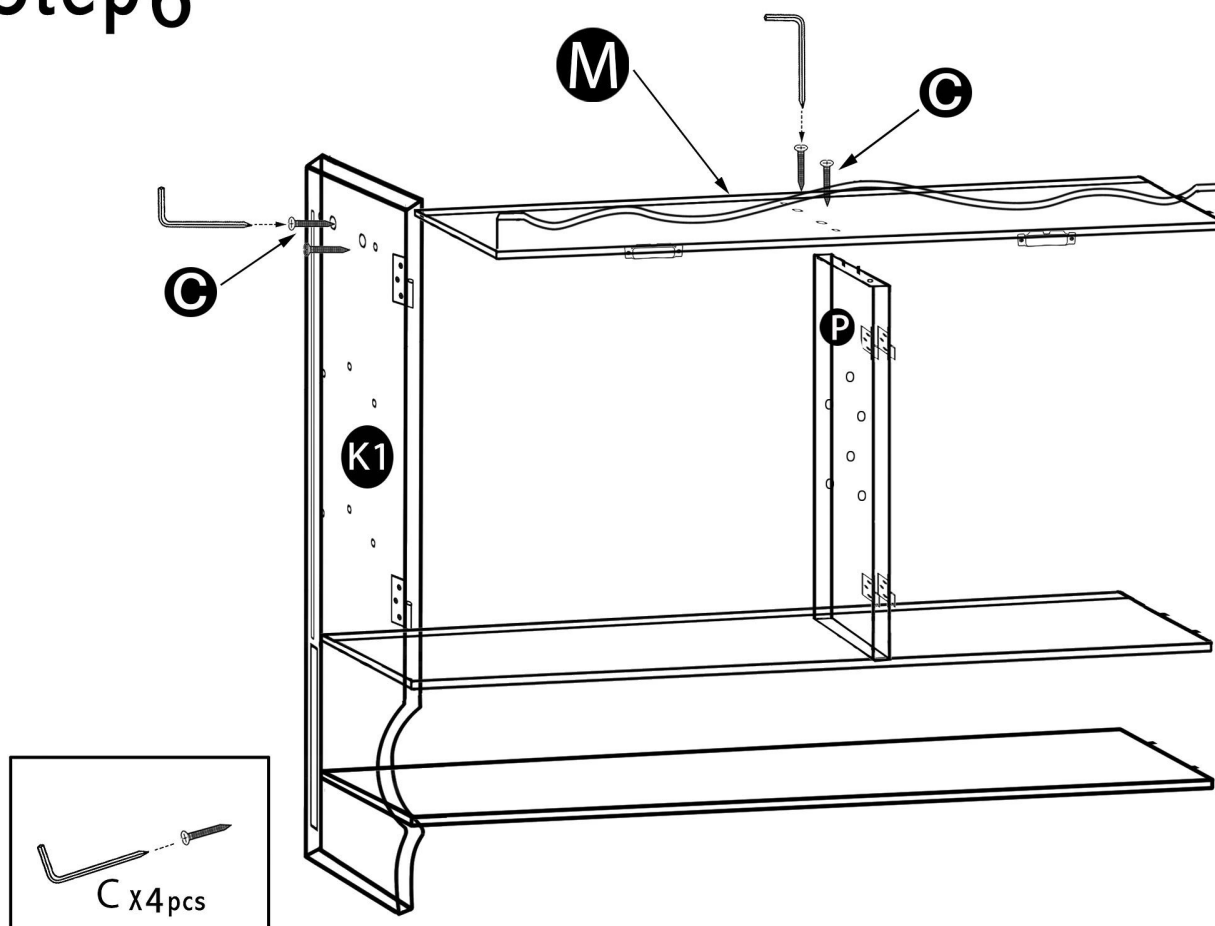


INSTRUCTION STEPS

Step 7

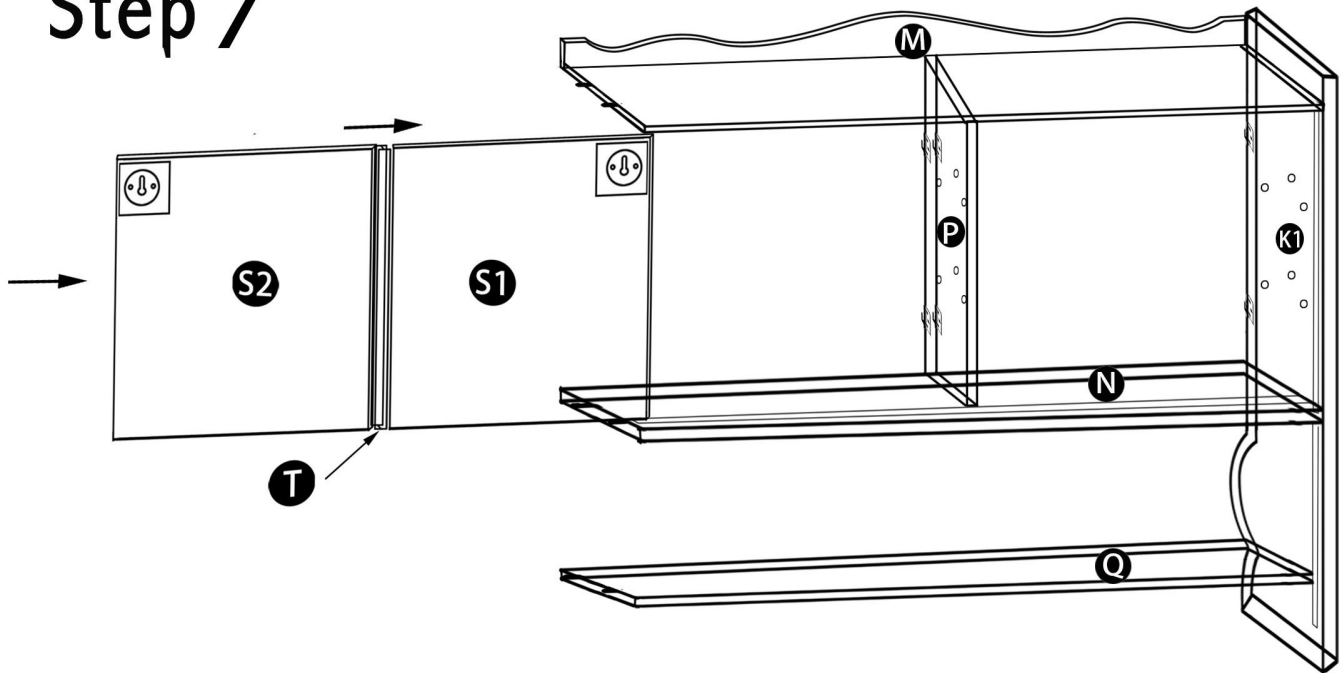

Warm reminder: Push the back plate s1, plastic strip T, and back plate S2 into the slot of K1 N M in sequence.
Reminder: The hook holes of the back panel S1 and S2 should face the wall outside the cabinet.


Step 8

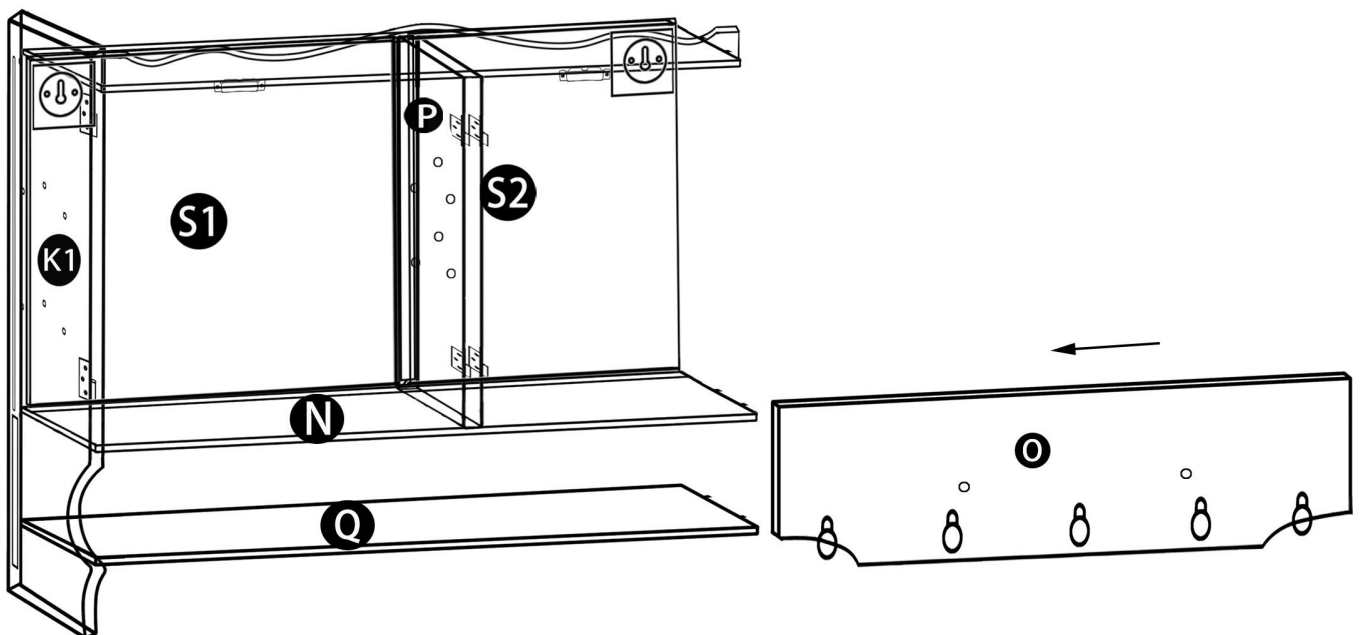


Warm reminder: Push the O-board into the slot of the K1N Q-board.

INSTRUCTION STEPS

Step 9

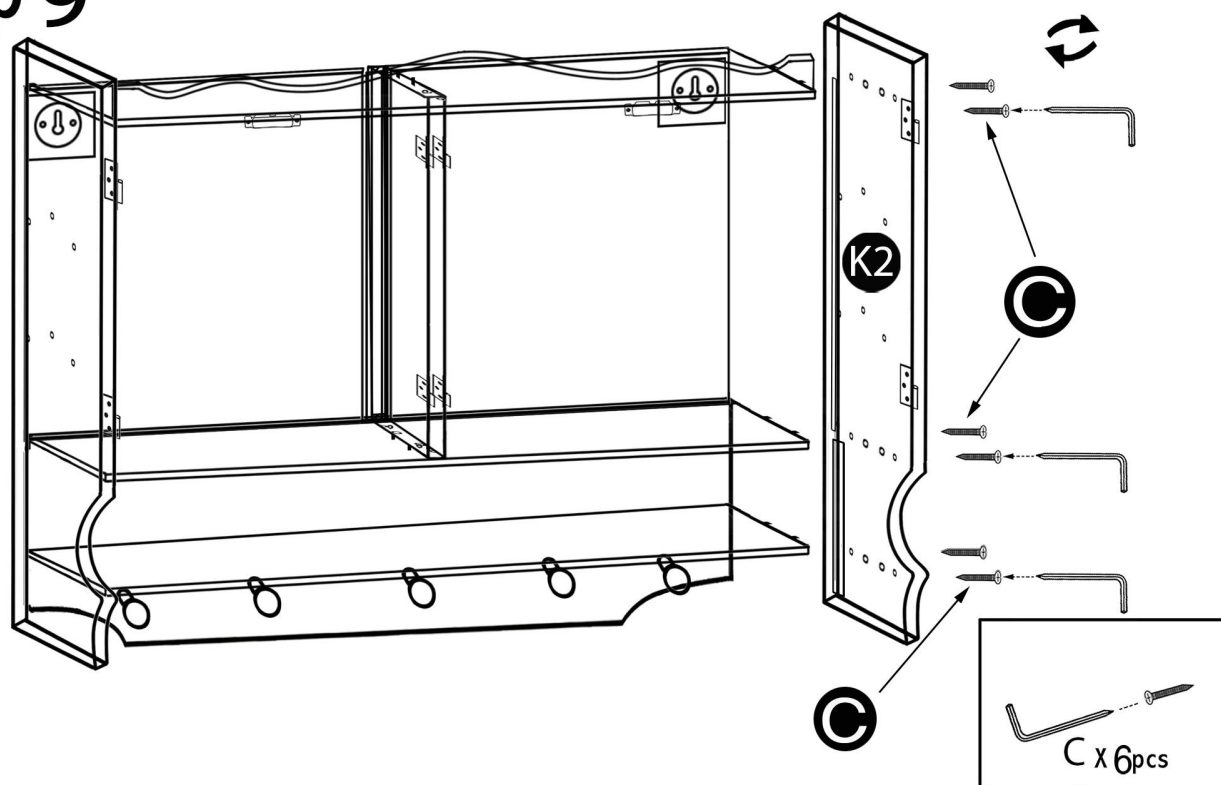


Step 10

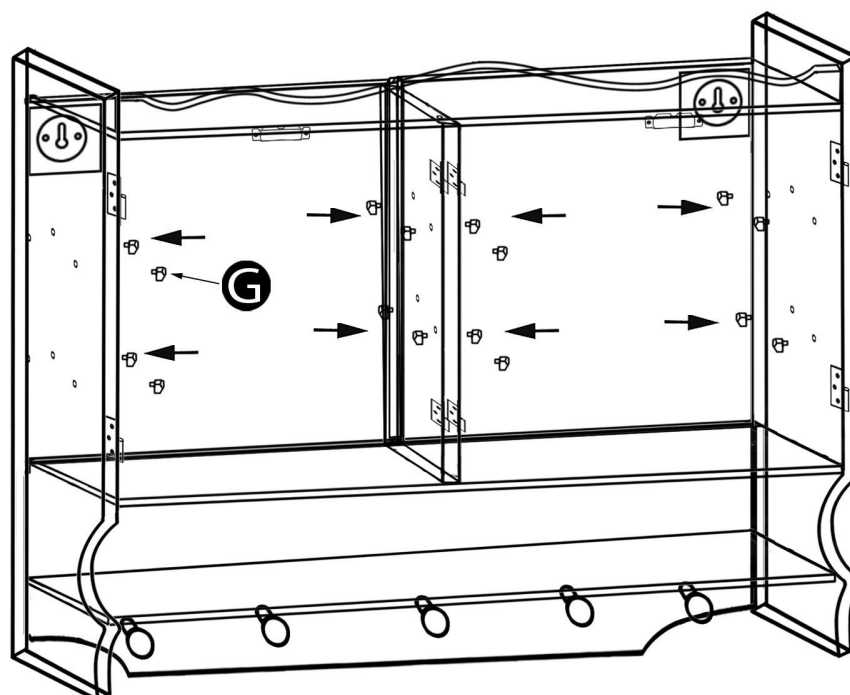


INSTRUCTION STEPS

Step 11

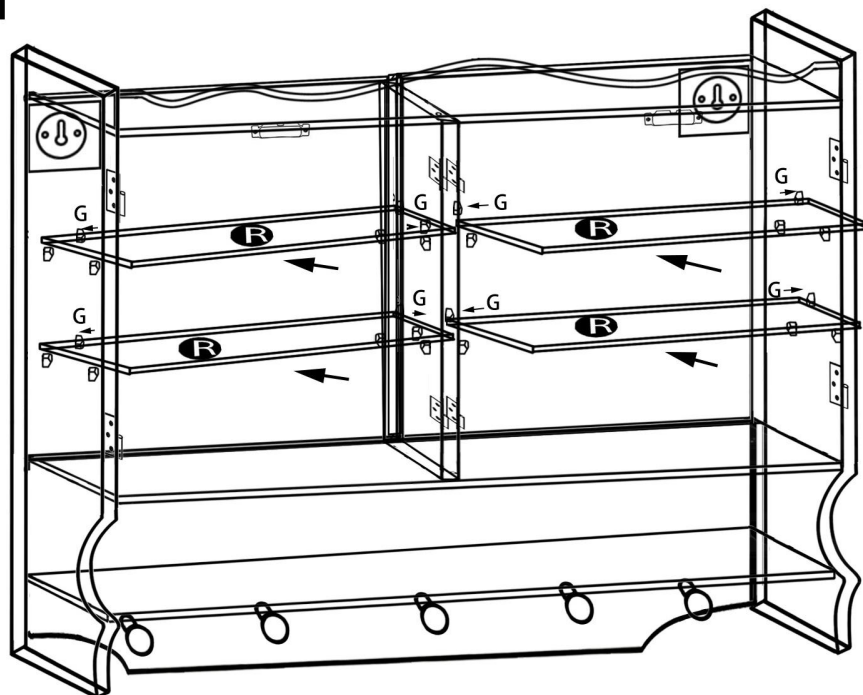


Warm reminder: After pushing the partition R flat onto the plug G, insert the hole on the upper layer of the partition into the plug G.

Step 12



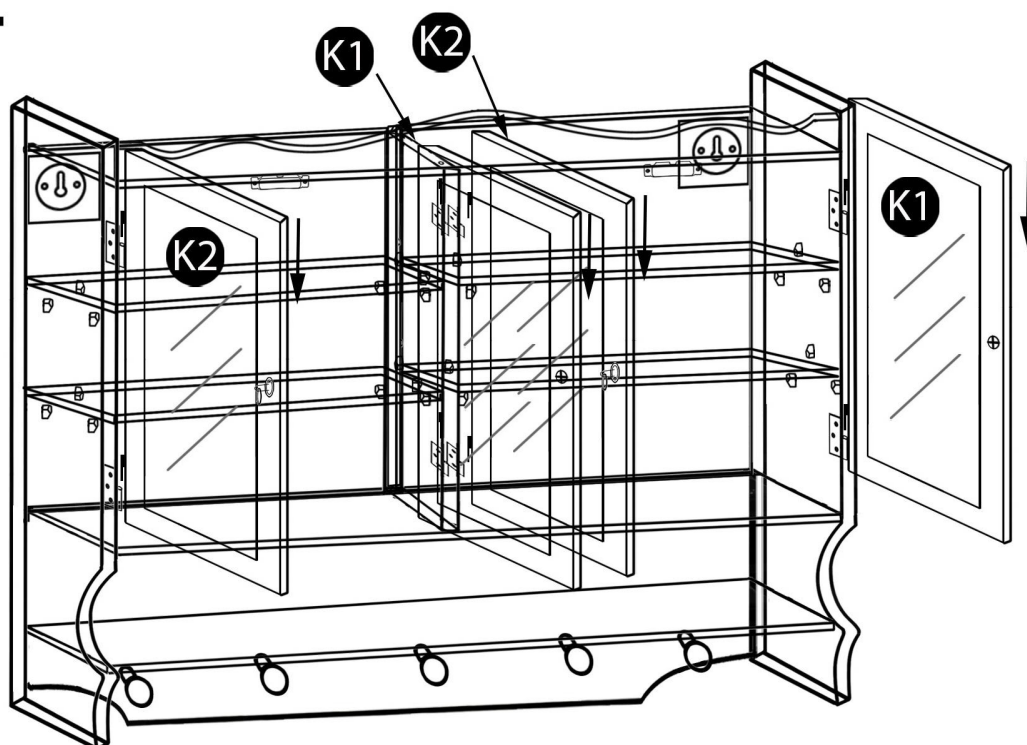


INSTRUCTION STEPS

Step 13

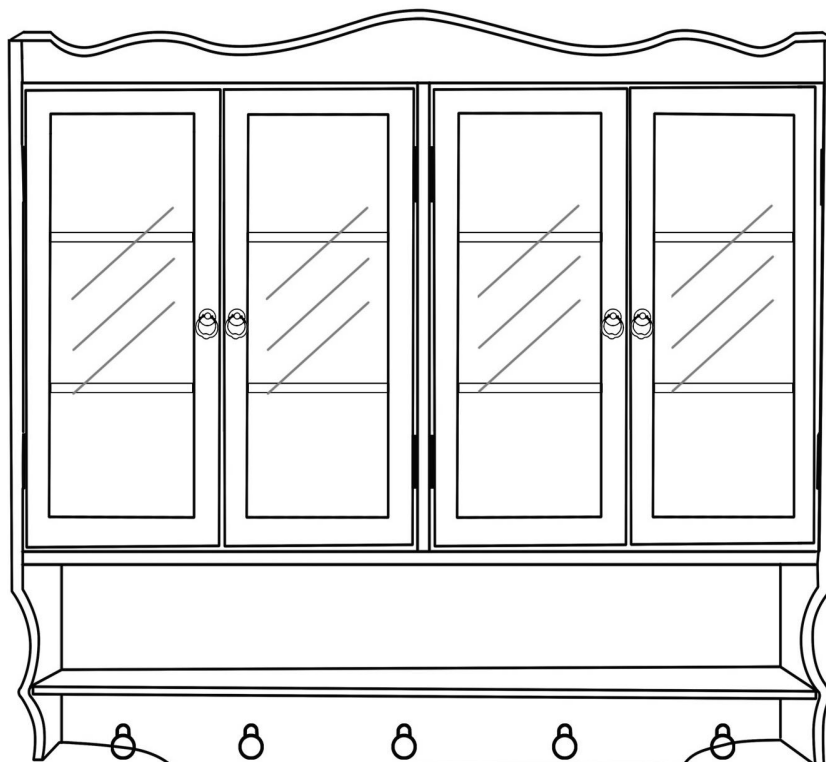


Step 14

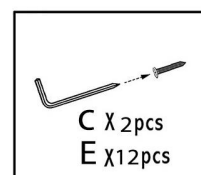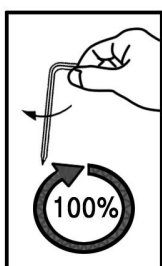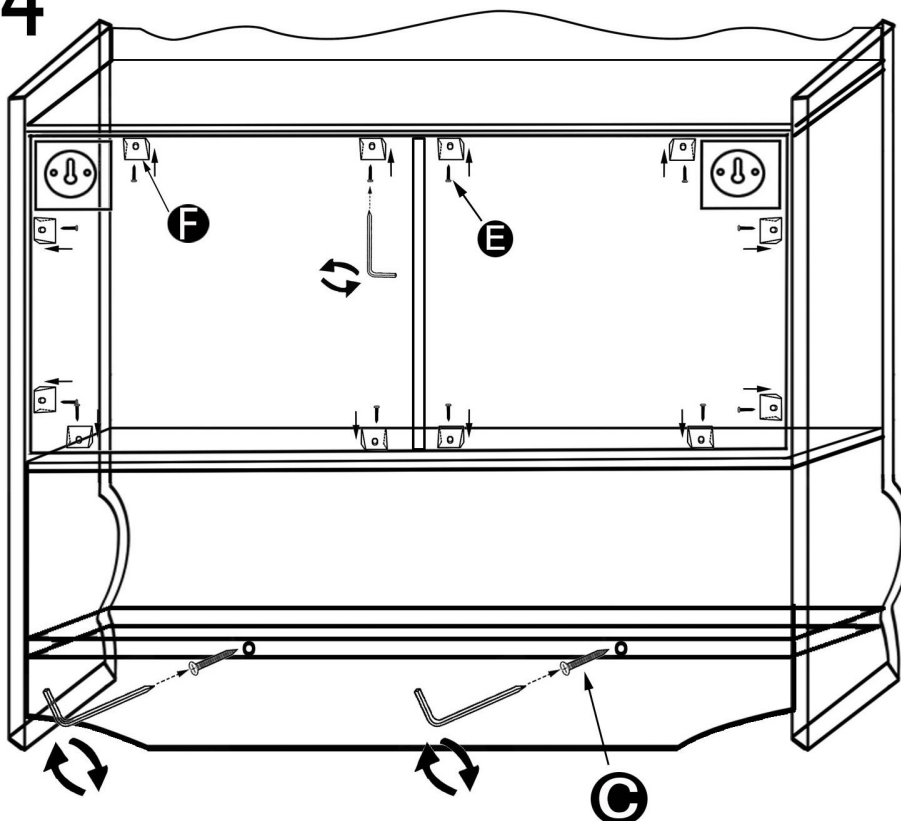

Reminder: After the cabinet is fully assembled, tighten all the assembly screws again to 100% tightness.

INSTRUCTION STEPS

Step15

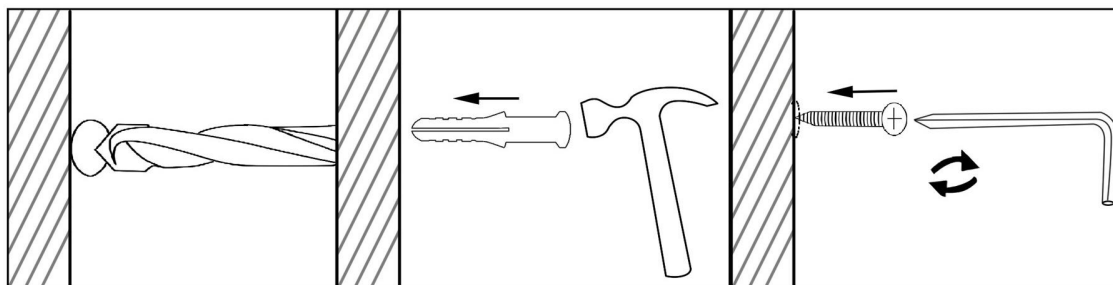

Step 16

