



For The ON-THE-GO Pet™

# INSTRUCTION MANUAL

## EASY STEP IV

PG9740



To see our full line of products, visit us online at: [www.petgearinc.com](http://www.petgearinc.com)





### CUSTOMER SERVICE HELP DESK

[customerservice@petgearinc.com](mailto:customerservice@petgearinc.com)


Toll-Free 877-752-9123 - Eastern Standard Time 8am-3pm, Monday through Friday

# PARTS LIST

Check that you have all the parts shown BEFORE assembling your product.  
If any parts are missing, call Customer Service.

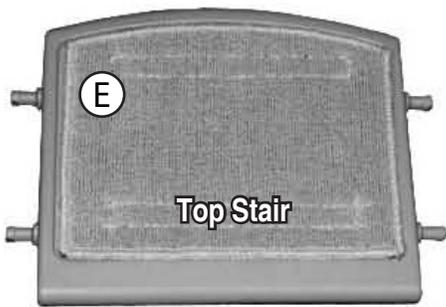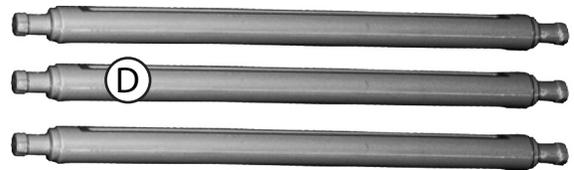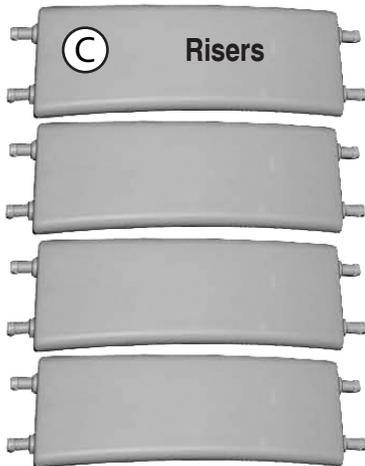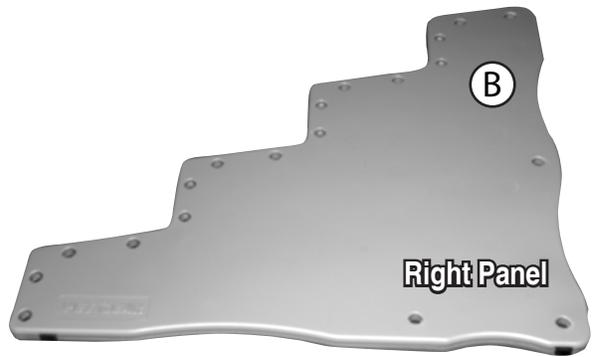


with Straight Edge

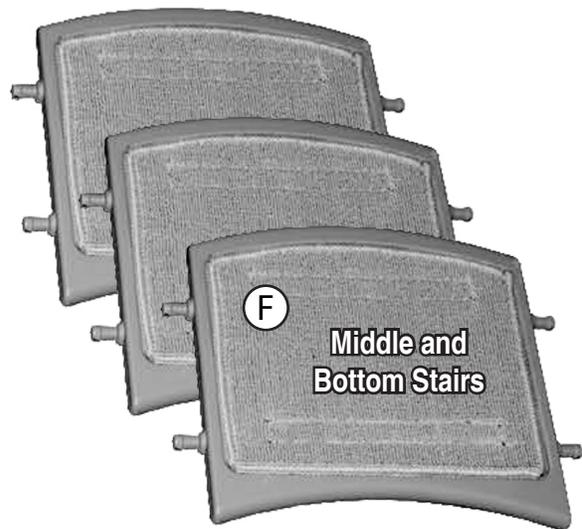

with Curved Side


# ASSEMBLY INSTRUCTIONS

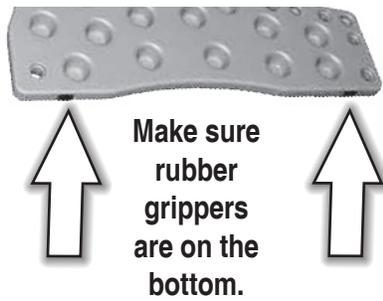

## Step 1

With rubber grippers on the bottom, place right panel, part (B) on floor with **PET GEAR** Logo facing the floor and insert top stair, part (E).

Keep the **STRAIGHT EDGE** toward the back and rug facing the top. Make sure there are no gaps between parts after inserted. (If inserting part is difficult put a little dish soap on doweled end before inserting.)

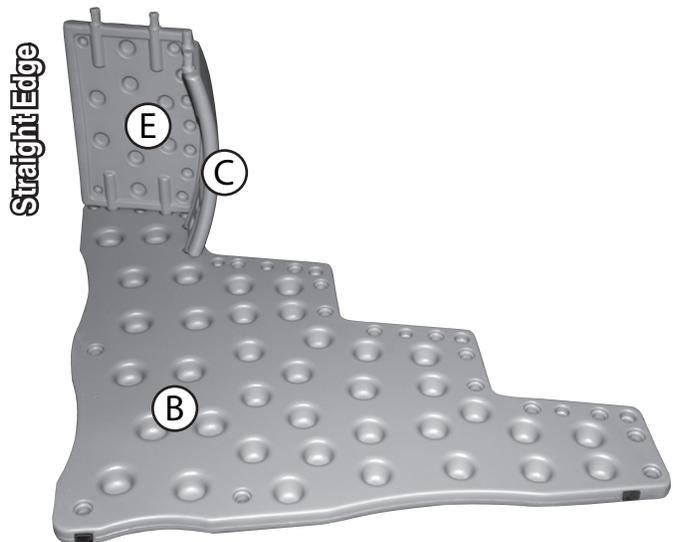


## Step 2

Insert riser, part (C).

Make sure there are no gaps between parts after inserting.

Curved Side

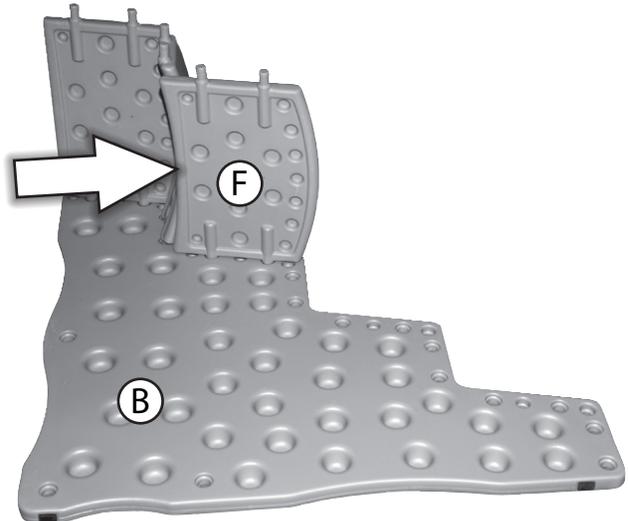


## Step 3

Insert second stair, part (F). Note the **CURVED SIDE** direction. Make sure there are no gaps between parts after inserting.

## Step 4


Insert riser, part (C). Make sure there are no gaps between parts after inserting.

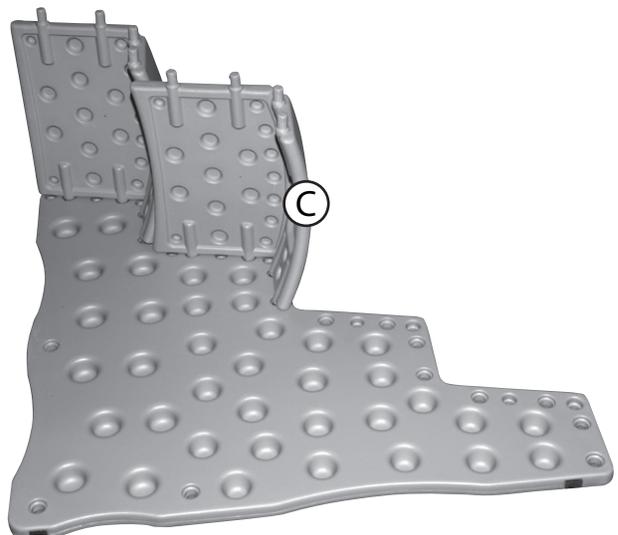

# ASSEMBLY INSTRUCTIONS


## Step 5

Insert third stair, part (F). Note the **CURVED SIDE** direction. Make sure there are no gaps between parts after inserting.

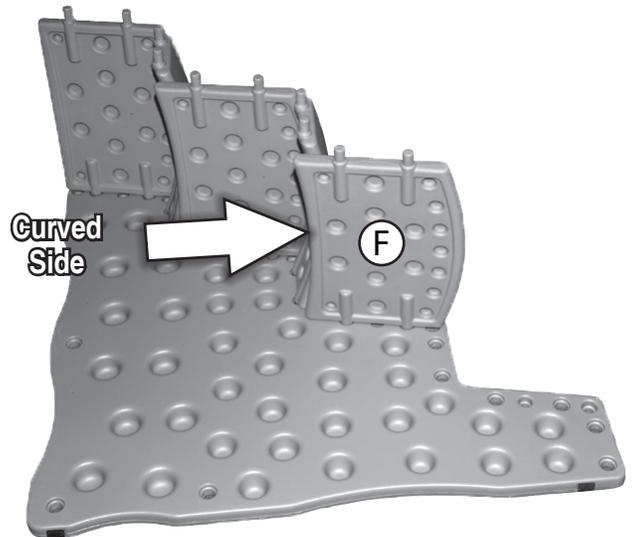


## Step 6

Insert riser, part (C). Make sure there are no gaps between parts after inserting.

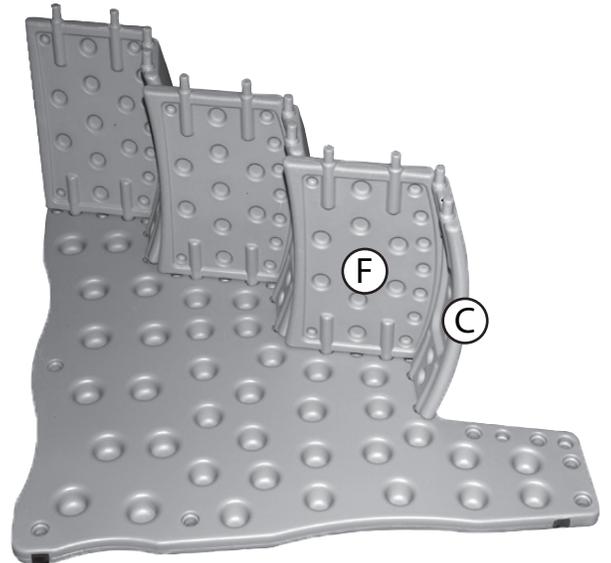

## Step 7


Insert bottom stair, part (F). Note the **CURVED SIDE** direction. Make sure there are no gaps between parts after inserting.

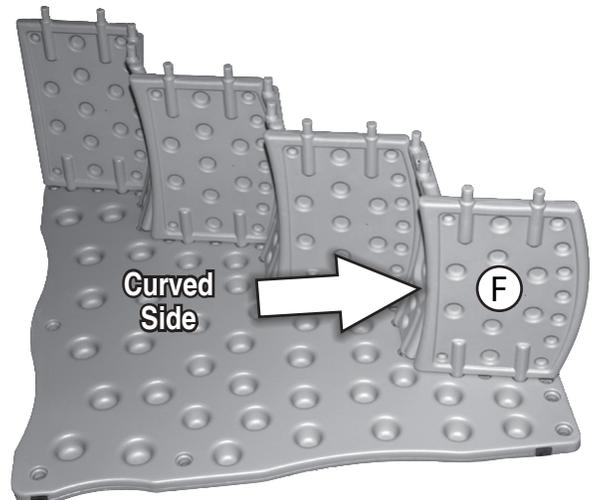

# ASSEMBLY INSTRUCTIONS


## Step 8

Insert the final riser, part (C). Make sure there are no gaps between parts after inserting.

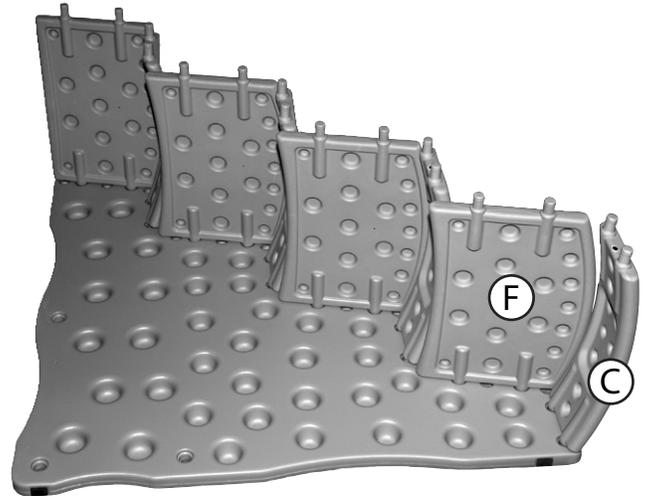



## Step 9

Insert dowels, part (D). Make sure there are no gaps between parts after inserting.

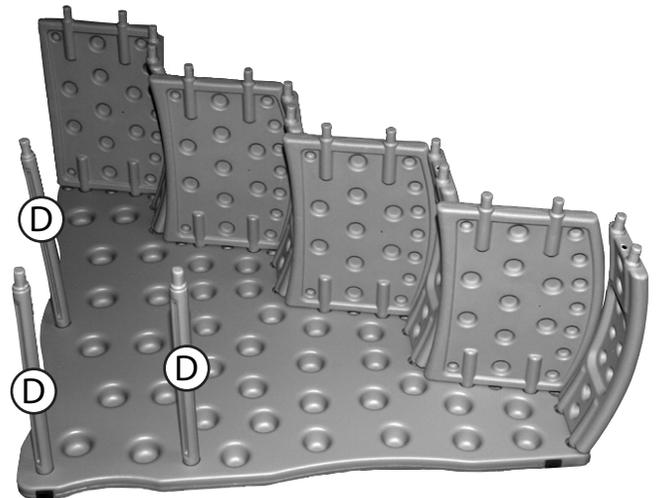

## Step 10

Attach left panel, part (A). Align all holes before pushing panel down. Make sure there are no gaps between parts after inserting.

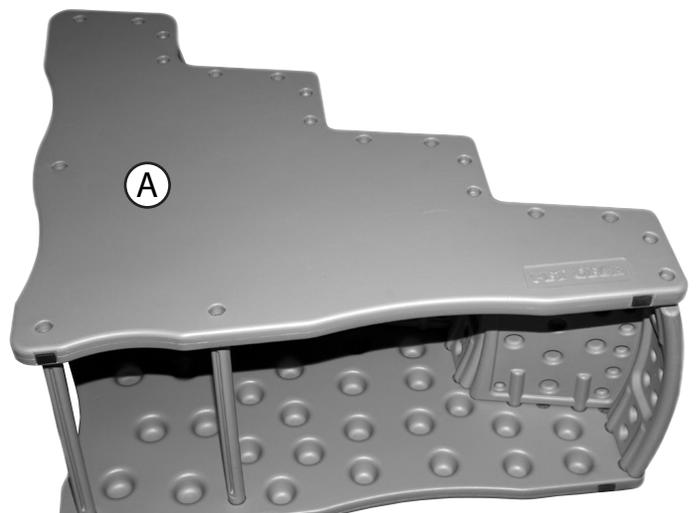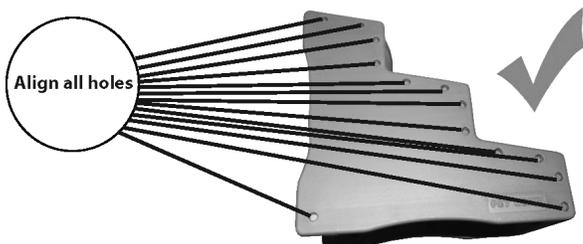

## **WARNING!**

### FOR PETS ONLY.

Not intended to be used as a restraining device for aggressive or dangerous animals that dig, chew or paw aggressively. Do not leave your pet unattended. **PET GEAR** is not liable for any damage caused by aggressive, destructive, immature or untrained animals. Do not use near an open or exposed flame. Failure to follow these warnings and the instructions could result in serious injury or death.

## **REPLACEMENT PARTS**

Use only **PET GEAR** replacement parts.

Please have your model number ready before calling.

You can also request parts: <http://www.petgearinc.com/main.asp?sel=2>



192 Sheldon Avenue • West Rutland, VT 05777 • 877-752-9123 • [www.petgearinc.com](http://www.petgearinc.com)