



12FT X 10FT
GARDEN STORAGE SHED
ASSEMBLY MANUAL

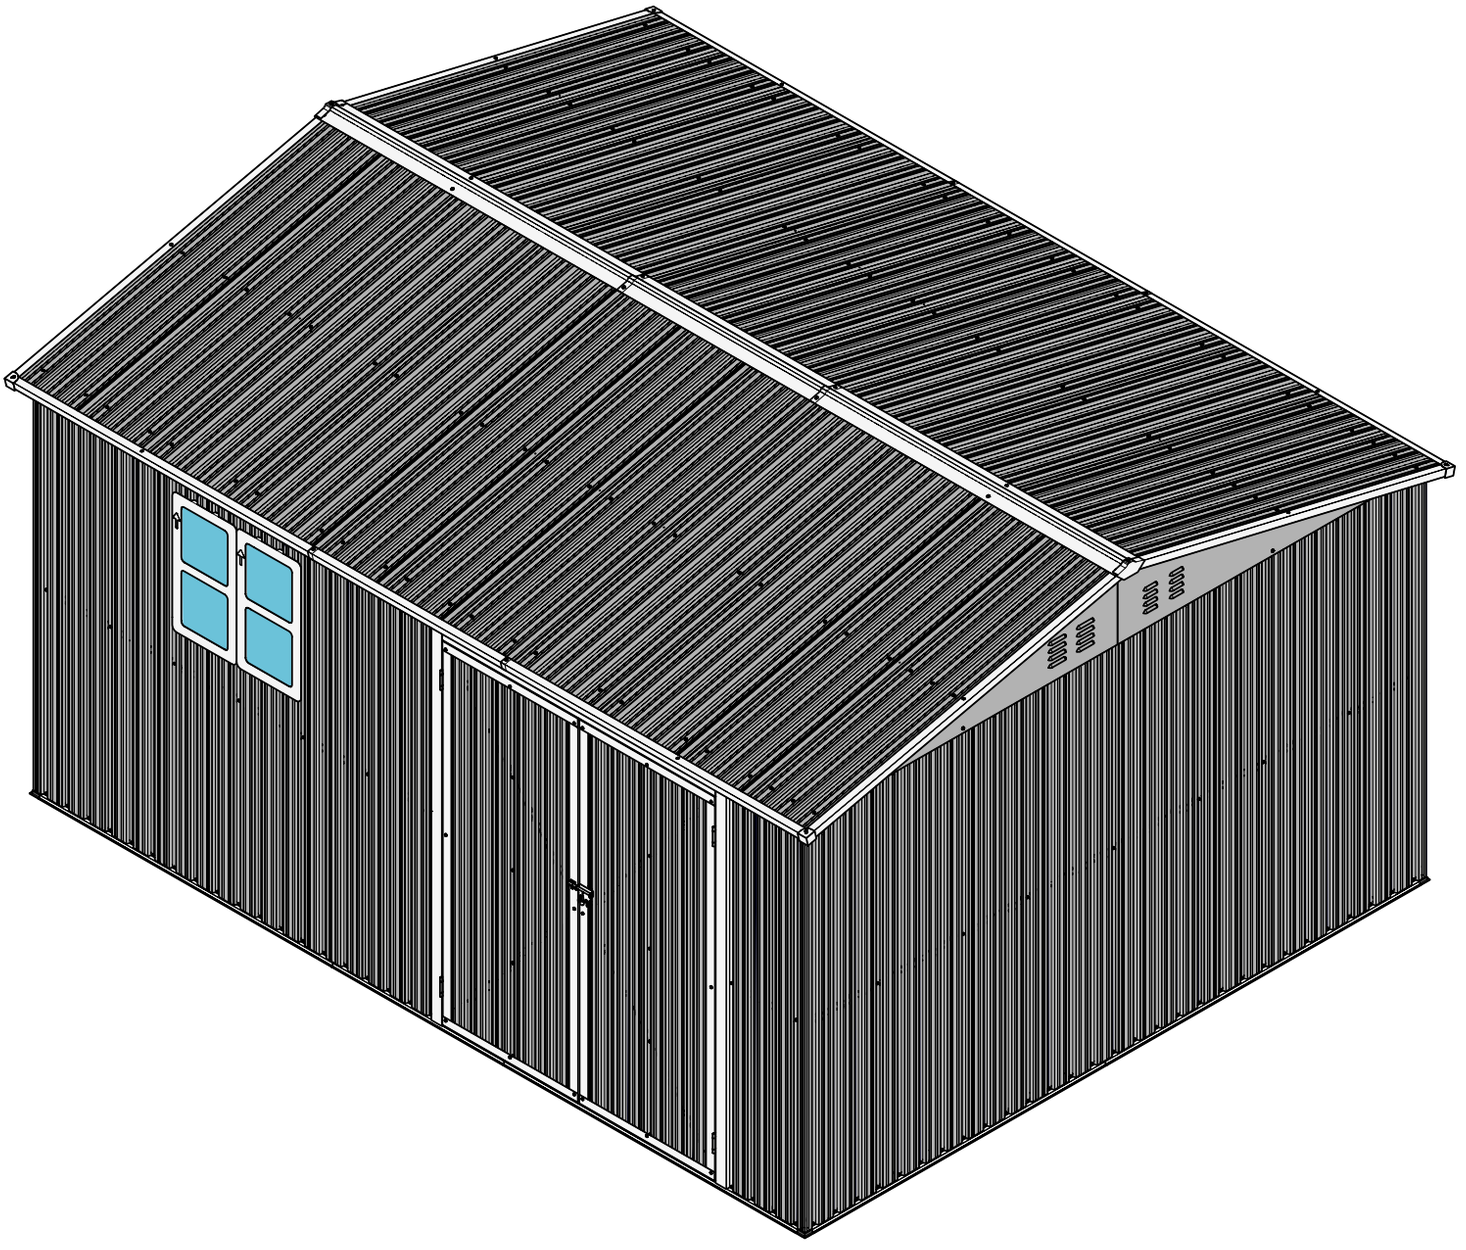

INSIDE CARTON 1

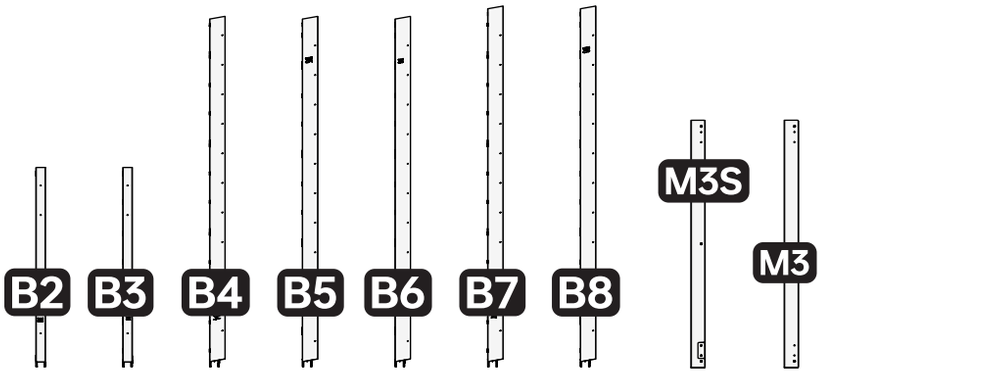

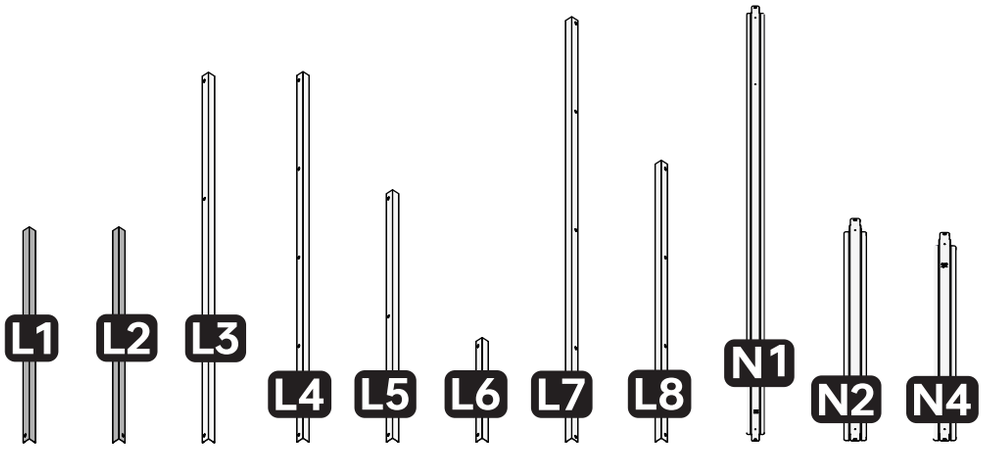


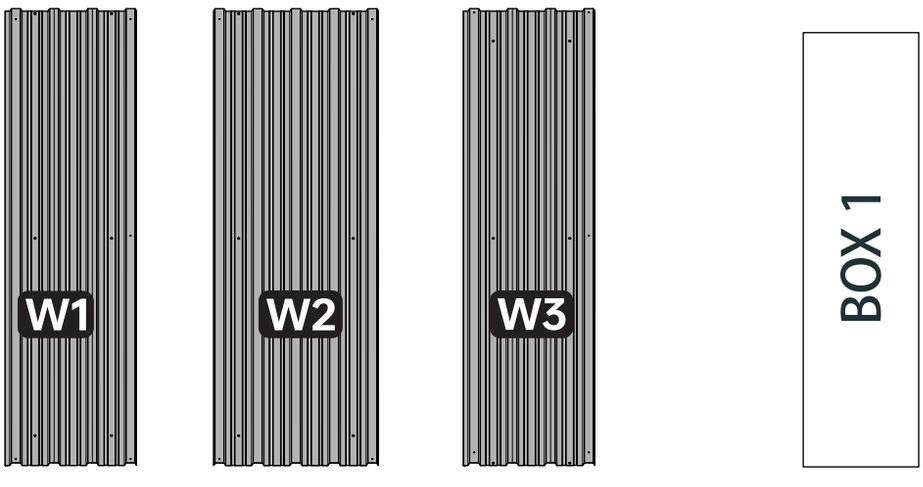


Part	Qty
B2	2
B3	2
B4	2
B5	1
B6	1
B7	1
B8	1
M3S	1
M3	3
L1	2
L2	2
L3	1
L4	1
L5	1
L6	2
L7	2
L8	2
N1	3
N2	6
N4	4
W1	12
W2	8
W3	2
BOX1	


BOX1	
C3	2
C4	2
C5	2
SL	2
SR	2


INSIDE BOX 1

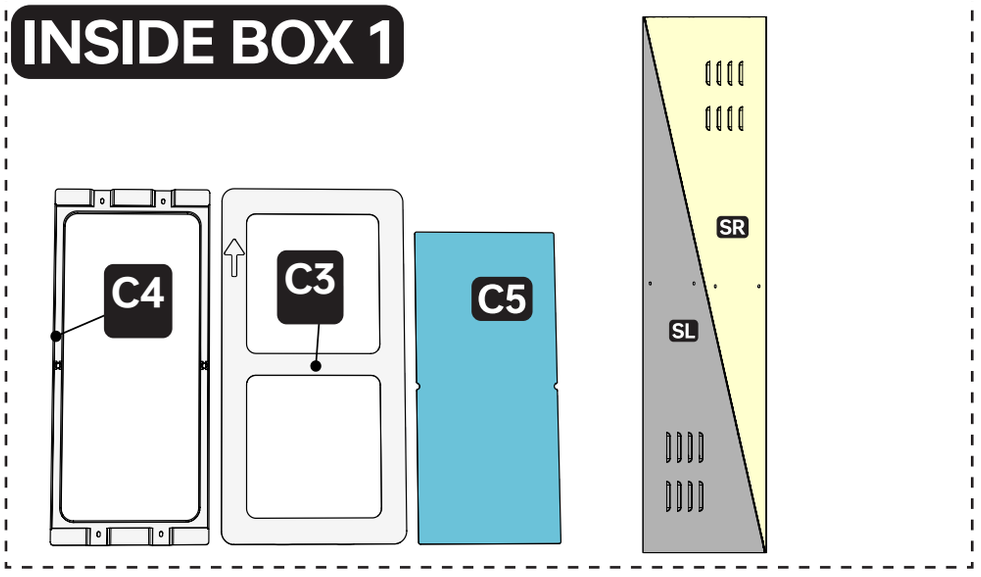

INSIDE CARTON 2

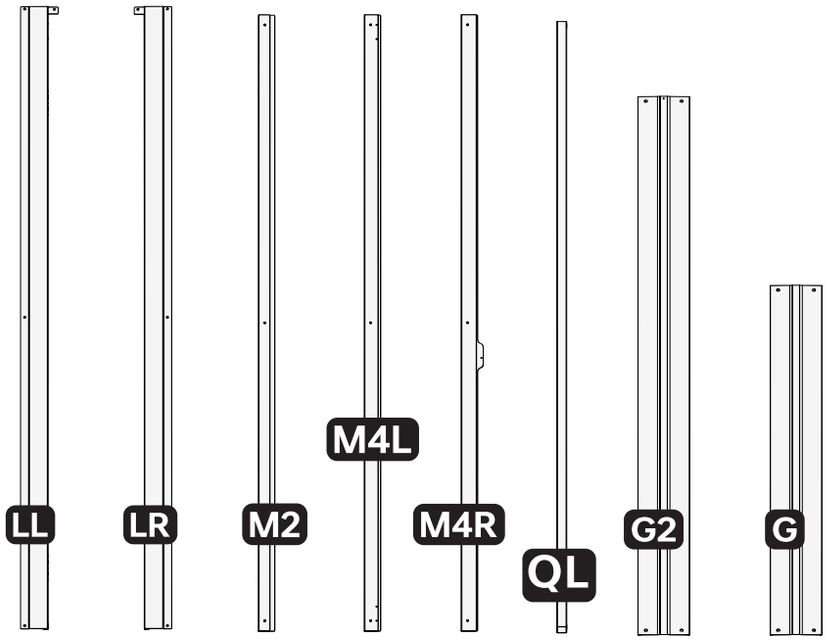

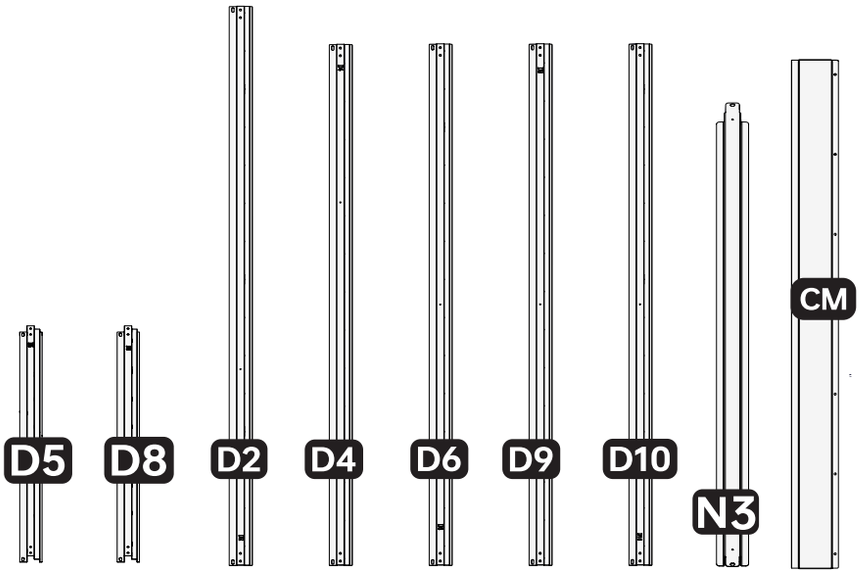


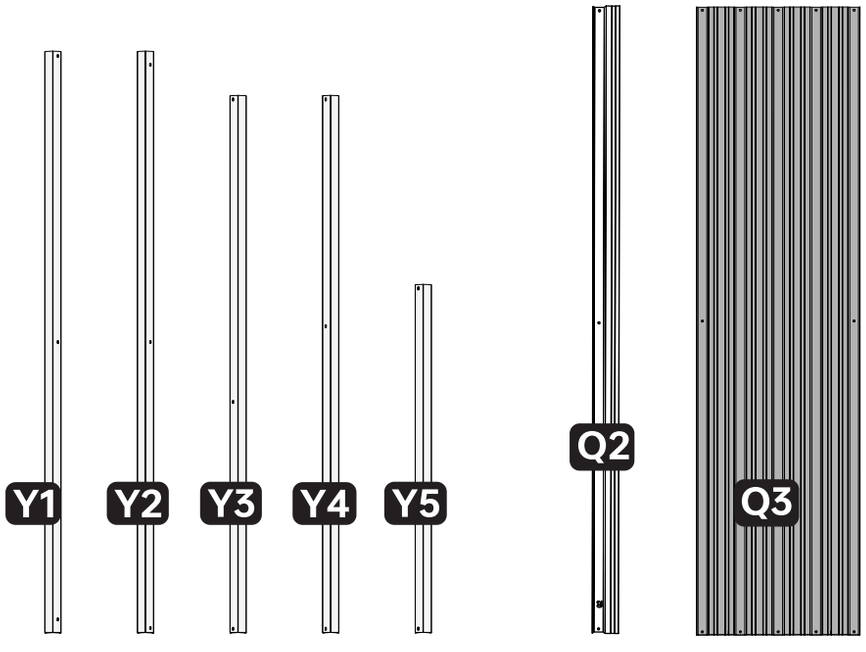


Part	Qty
LL	1
LR	1
M2	2
M4L	1
M4R	1
QL	4
G2	2
G	1
D5	1
D8	1
D2	2
D4	2
D6	1
D9	2
D10	1
N3	4
CM	1
Y1	2
Y2	2
Y3	2
Y4	2
Y5	2
Q2	4
Q3	13


INSIDE CARTON 3

Part	Qty
M1	4
Q5A	1
Q5B	1
Q1	18
H1	4
H2	4
H3	4
HL	8
M	4
B1	2
GLOVE	2
BOX2	

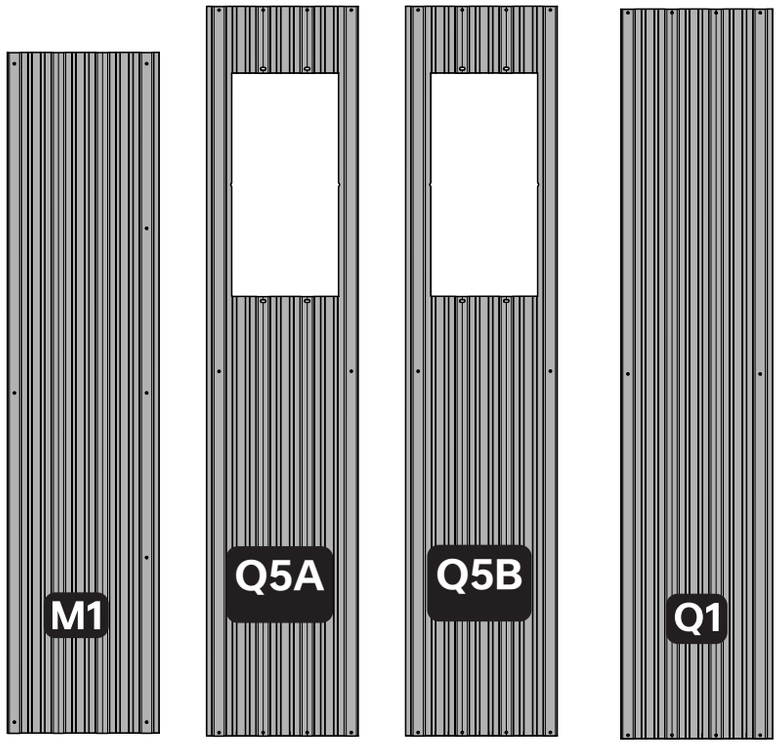

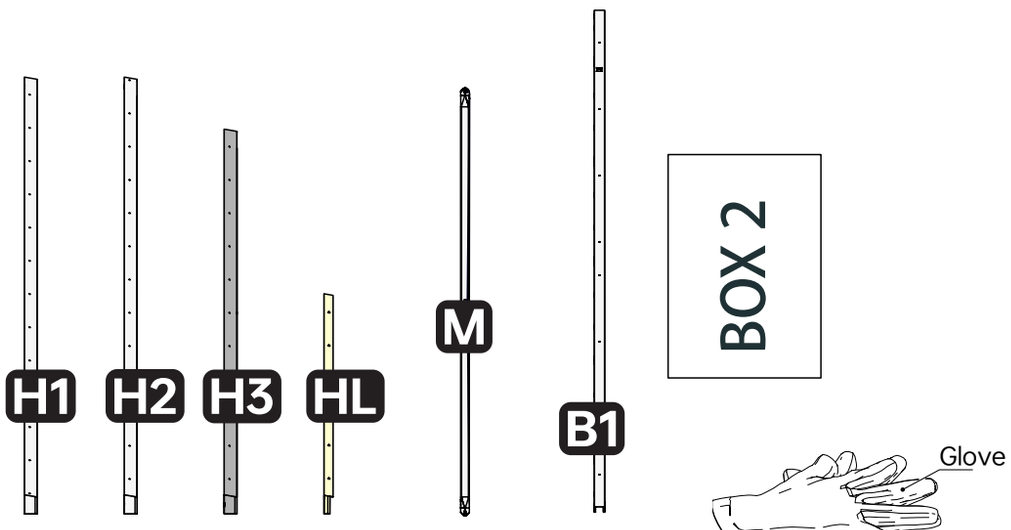

INSIDE BOX 2

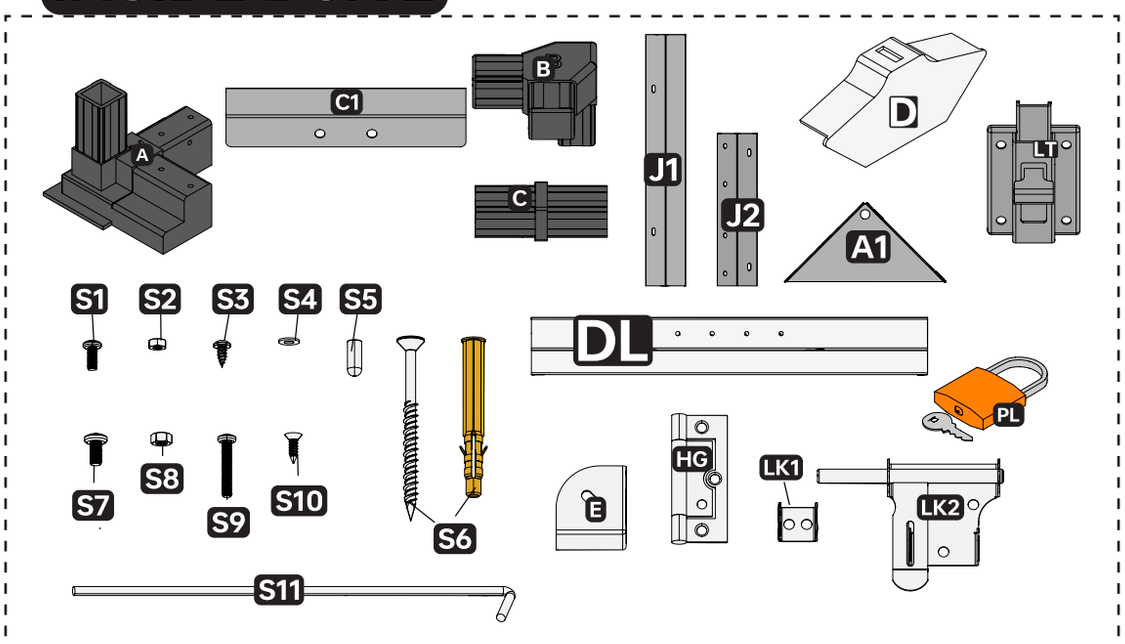

Part	Qty
A	4
A1	4
B	4
C	8
C1	8
D	2
DL	6
E	4
HG	4
J1	4
J2	4
LK1	1
LK2	1
LT	2
S1	52
S2	68
S3	614
S4	478
S5	40
S6	4
S7	60
S8	60
S9	16
S10	4
S11	4
PL	1

01 Getting Started


Thank you for buying our garden Shed. Please read the manual thoroughly before assembling the shed.

General Advice and Safety Guidelines

This product is designed for storing and sheltering items like tools, equipment and vehicles. It is not designed or intended for human or animal habitation.
It takes at least two people three hours to finish the assembly.
Assemble the shed when the weather is on your side. Avoid windy and rainy days.
Do not assemble the shed if you are tired, have taken drugs, or under the influence of alcohol.
Always wear work gloves, shoes, and safety goggles when assembling.
Keep children and pets away from the assembly site.
Watch out for overhead power cables.
Follow the instructions step by step.
Dispose of all plastic bags and protective films.
Do not climb or stand on the roof.
Do not lean against or push the unfinished shed.

Tools

Work Gloves, Safety Goggles, Tape Measure, Level, Carpenters Square, Marker Pen, Rubber Mallet, Philips head screw driver or Power tool, M4/M5 Wrench, Ladder, Plier.
Optional: Concrete Drill with M6 Drill Bit.

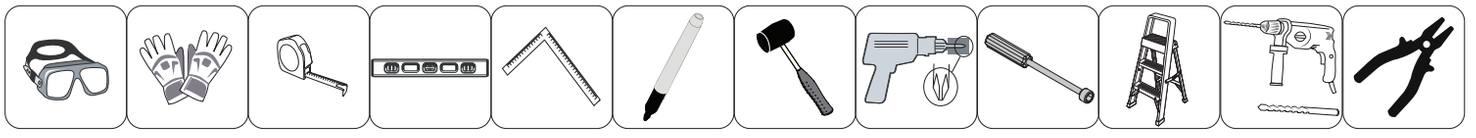

Part Checking

Put parts on a soft and clean surface, such as a blanket. This will prevent the parts from getting scratched or dented by the hard ground.
Compare the part list with the actual parts you received.
If you find any parts missing or damaged, do not assemble the shed. Contact the seller.

ABOUT THE PROTECTIVE FILM

Panels of the shed come with a thin layer of protective film. Remove the film before assembling.

ABOUT STACKED PARTS

There are cases where two parts are stacked firmly and may appear to be a whole part.

Care and Maintenance

Clean the shed once assembly is done.
Use warm water, mild detergent, and a soft sponge or cloth to clean the surface.
Clear snow from the roof top after each snowfall.
Do not store recently used grills, blowtorches, paint, etc in your shed.

02 Assembly Site

LOCATION

This garden shed has a roof footprint of 3.7m (12.1ft) in length and 3m (9.8ft) in width. The roof dimensions are larger than the base frame dimensions. **This footprint represents the minimum ground space required to set up this shed**.

Additionally, ensure a minimum clearance of 0.91m (3ft) is maintained on all sides of the shed from walls, fences, or other structures.

Make sure there are no hidden pipes, cables, or septic tank in the ground.


TWO FOUNDATION OPTIONS

This shed must be anchored to a level and solid foundation to increase its stability.


In the package there are bolts and parts to accommodate the following foundation options:


1. Anchored to a concrete foundation.
2. Anchored into the ground.


Details about the two foundation options will be discussed in later steps.

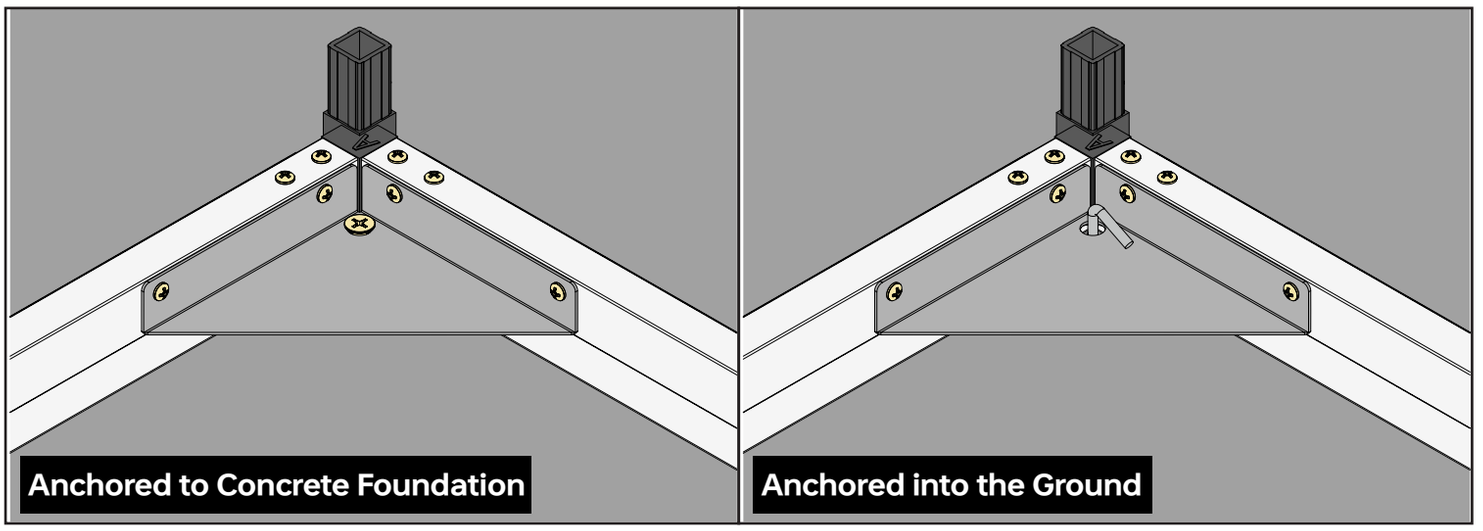

03 Base Frame

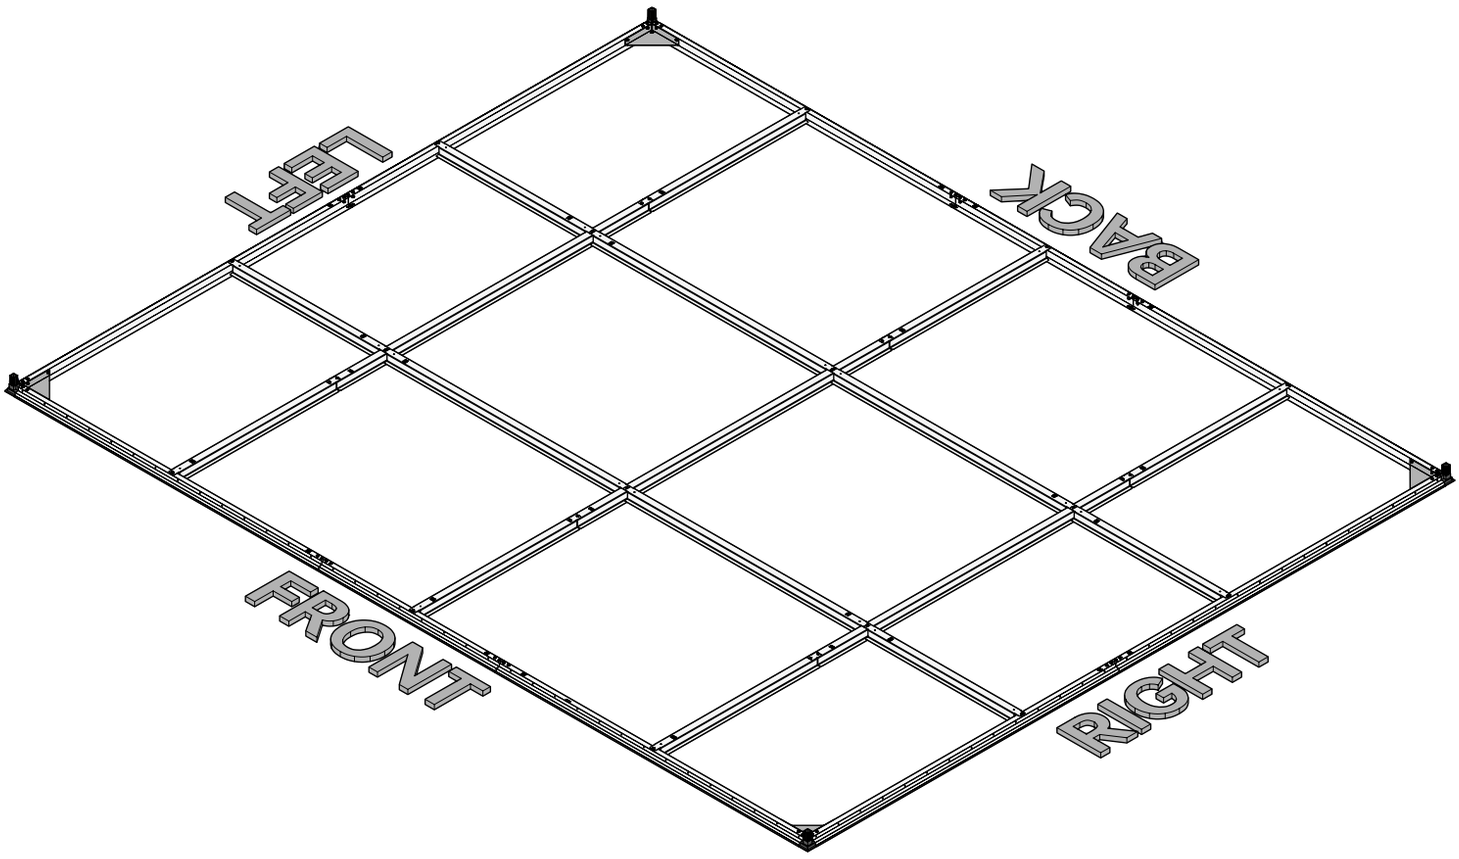

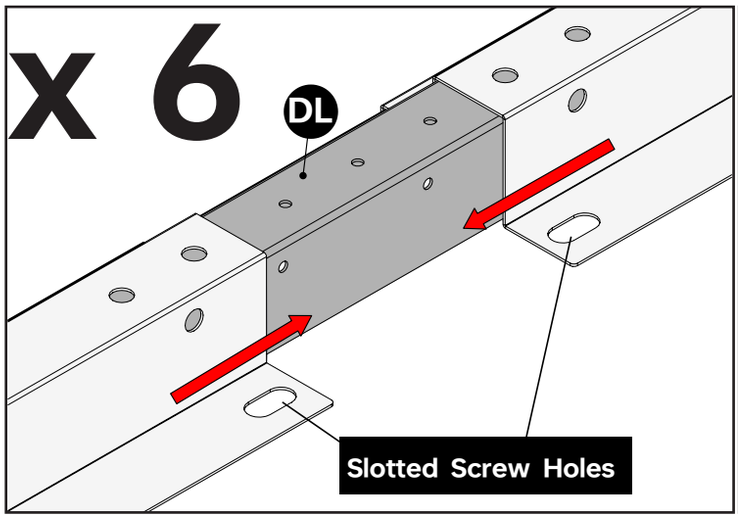


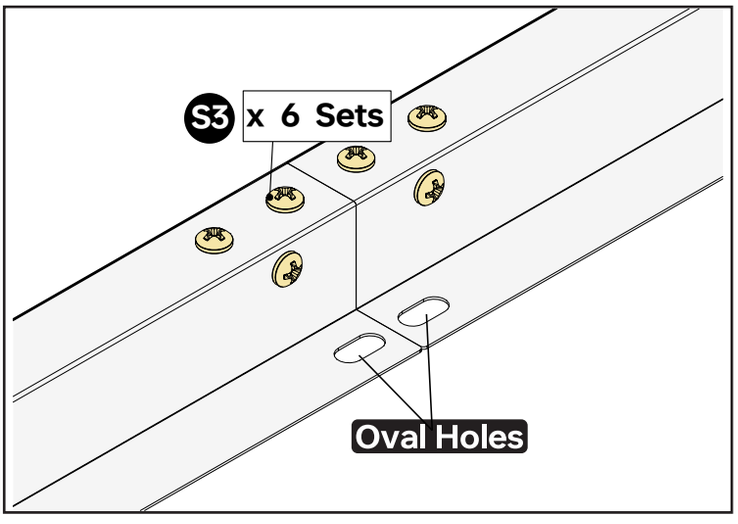



NOTE

This manual uses specific notations to indicate repetition and component quantities. The notation ‘x 6’ following a step means that you must repeat that sub-step six times. A notation like ‘S3 x 6 Sets’ indicates that you will need six sets of the component labeled ‘S3’ for that particular sub-step.

Part	Qty
D2	2
D4	2
D5	1
D6	1
D8	1
D9	2
D10	1
DL	6
S3	36

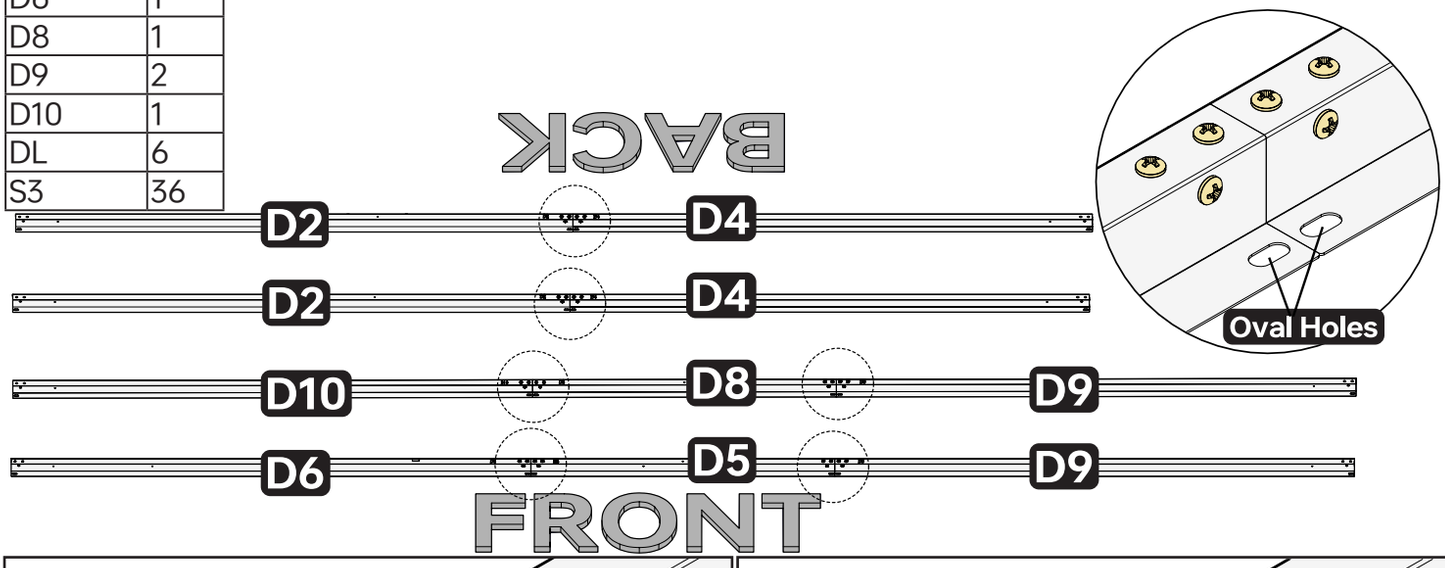

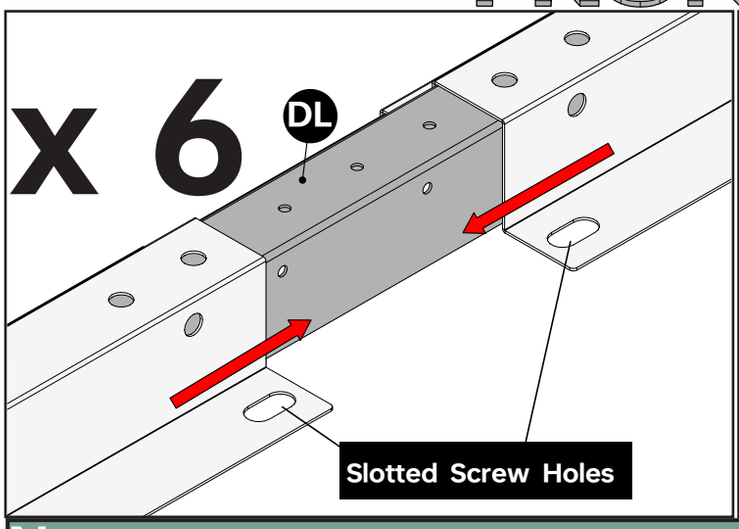

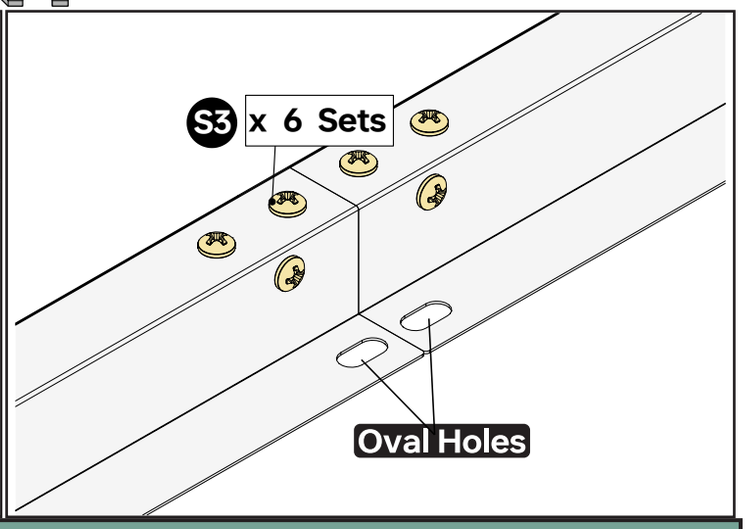


Note


FOR PROPER ASSEMBLY OF THE D2-D10 FRAMES:

a) Align each frame exactly as depicted in the illustration above.

b) Ensure that the two oval holes on each frame are oriented towards the front.


See the images below for examples of incorrect assembly. Note that, the second example shows that even with frame D2 correctly positioned on the left, the assembly is incorrect because the oval holes are not facing forward.

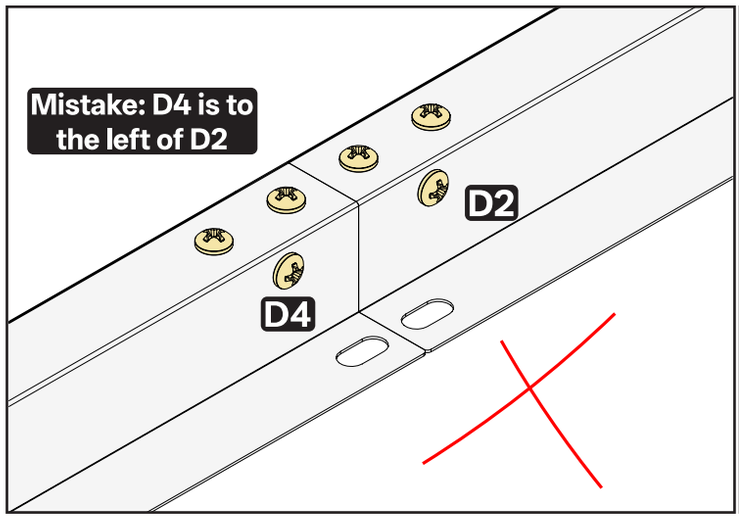


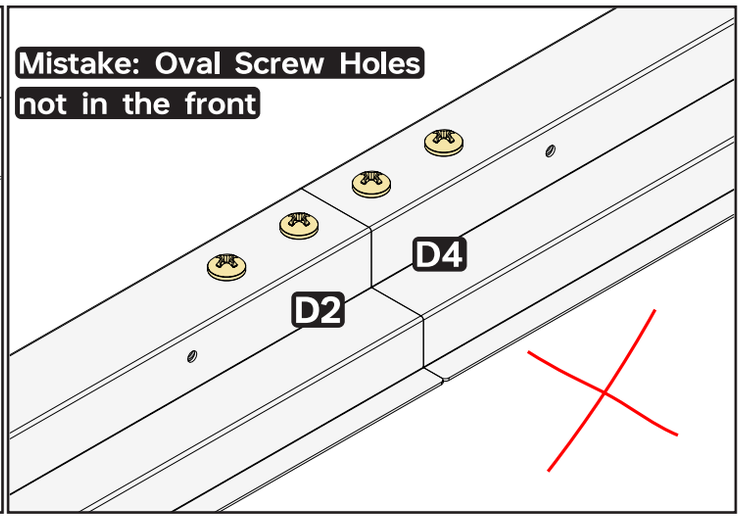



2

Part	Qty
A	4
A1	4
S3	32

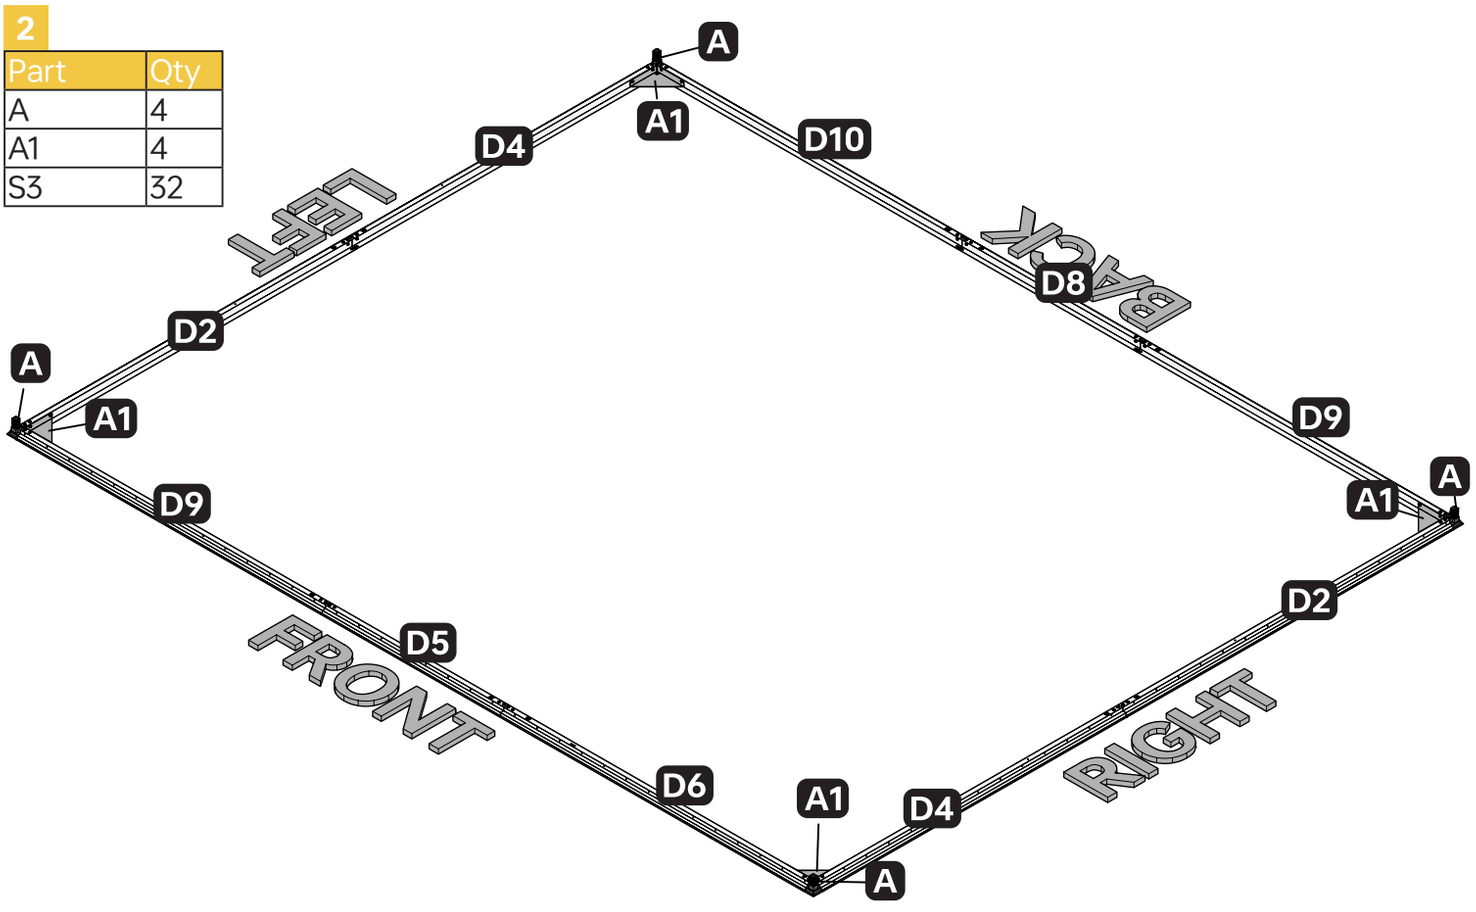

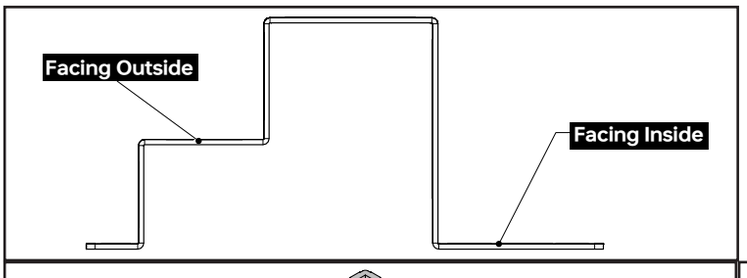

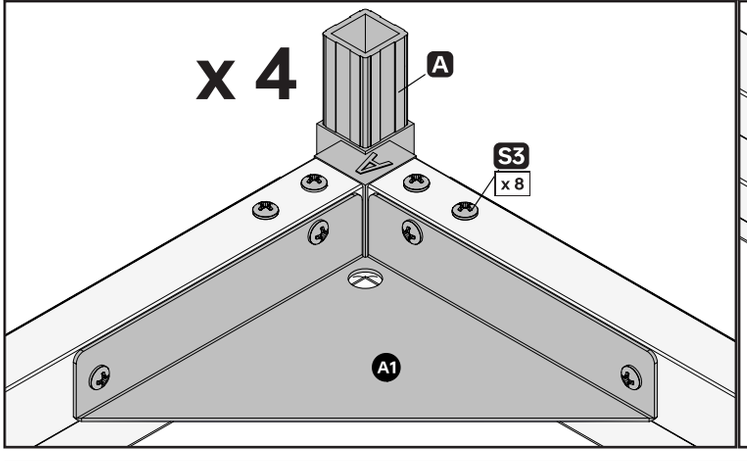

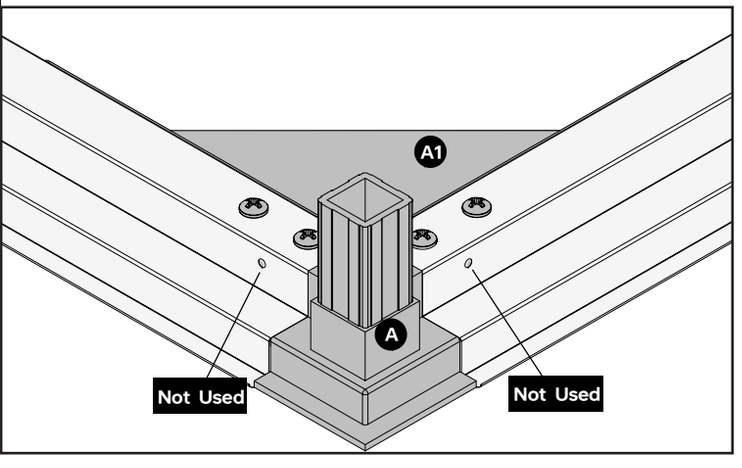


Note


Frames D2-D10 have a designated exterior side that must face outwards when installed. If you are having trouble orienting the frames according to the diagram above, please revisit Step 1 to ensure it was followed correctly.

When securing component S3 to Part A, leave the two exterior-facing screw holes empty. These screw holes will be utilized in a subsequent step of the assembly process.

3

Part	Qty
N1	3
N2	6
S3	18

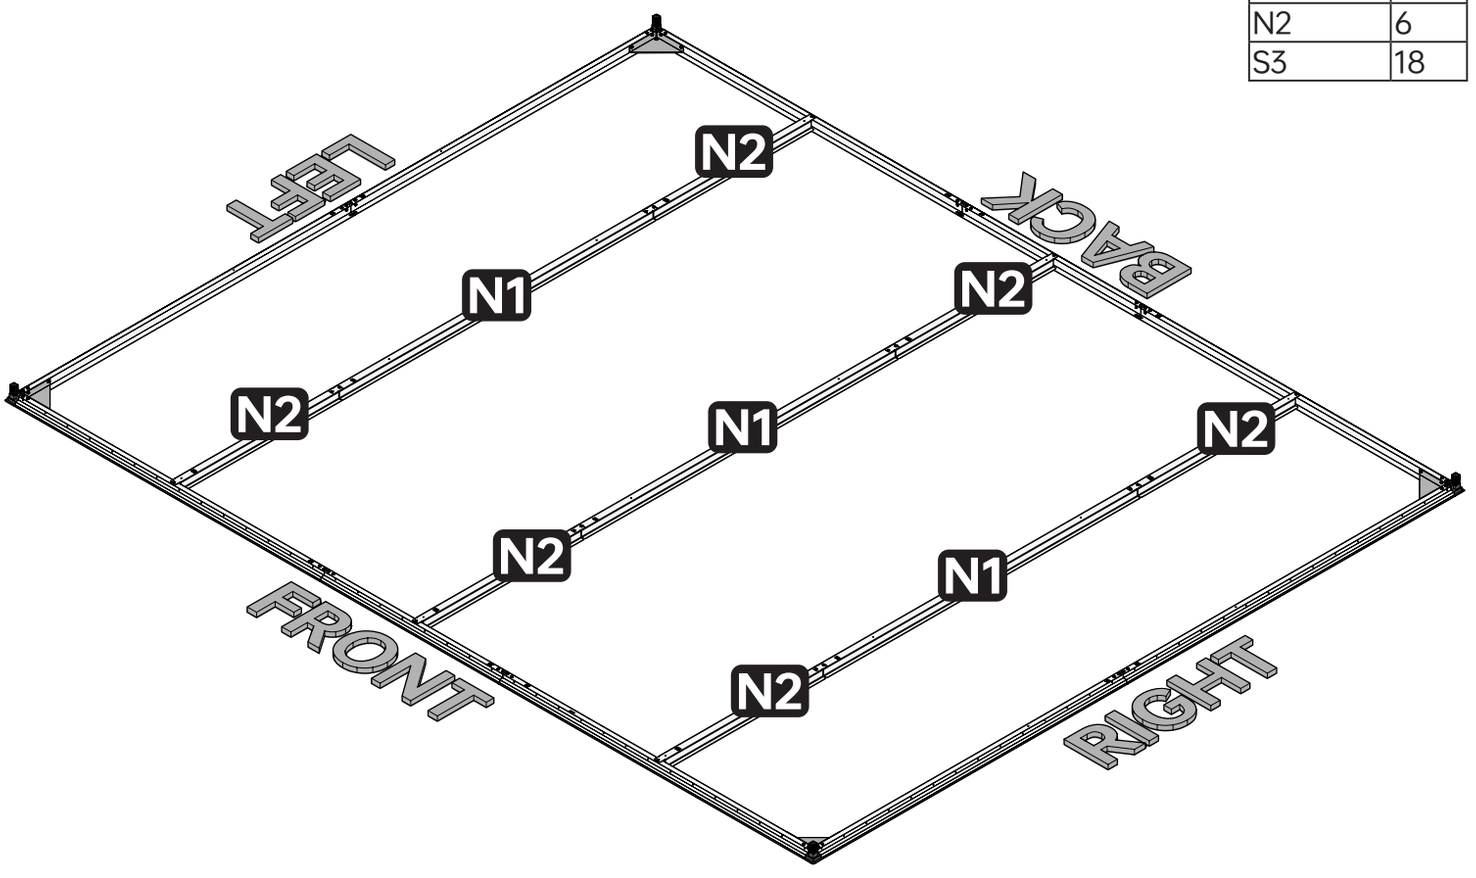

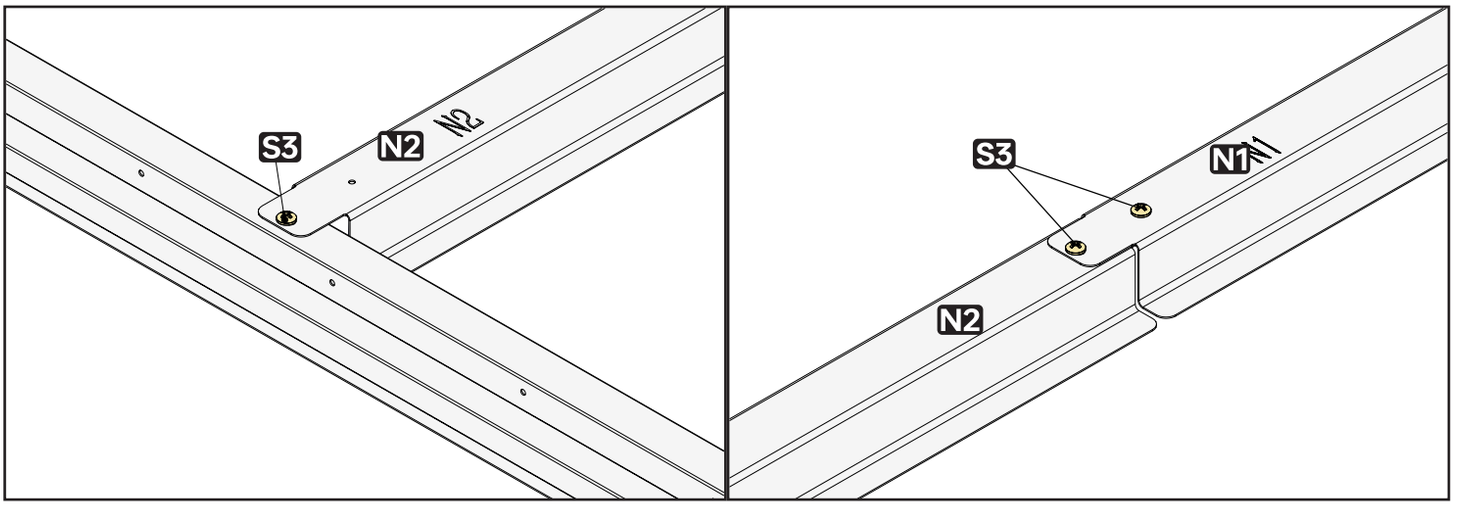



Note


Component N1, N2, N3 and N4 all have a symmetrical design.
Also, when stacking, the order does not matter; either N part can be placed on top.

4

Part	Qty
N3	4
N4	4
S3	10

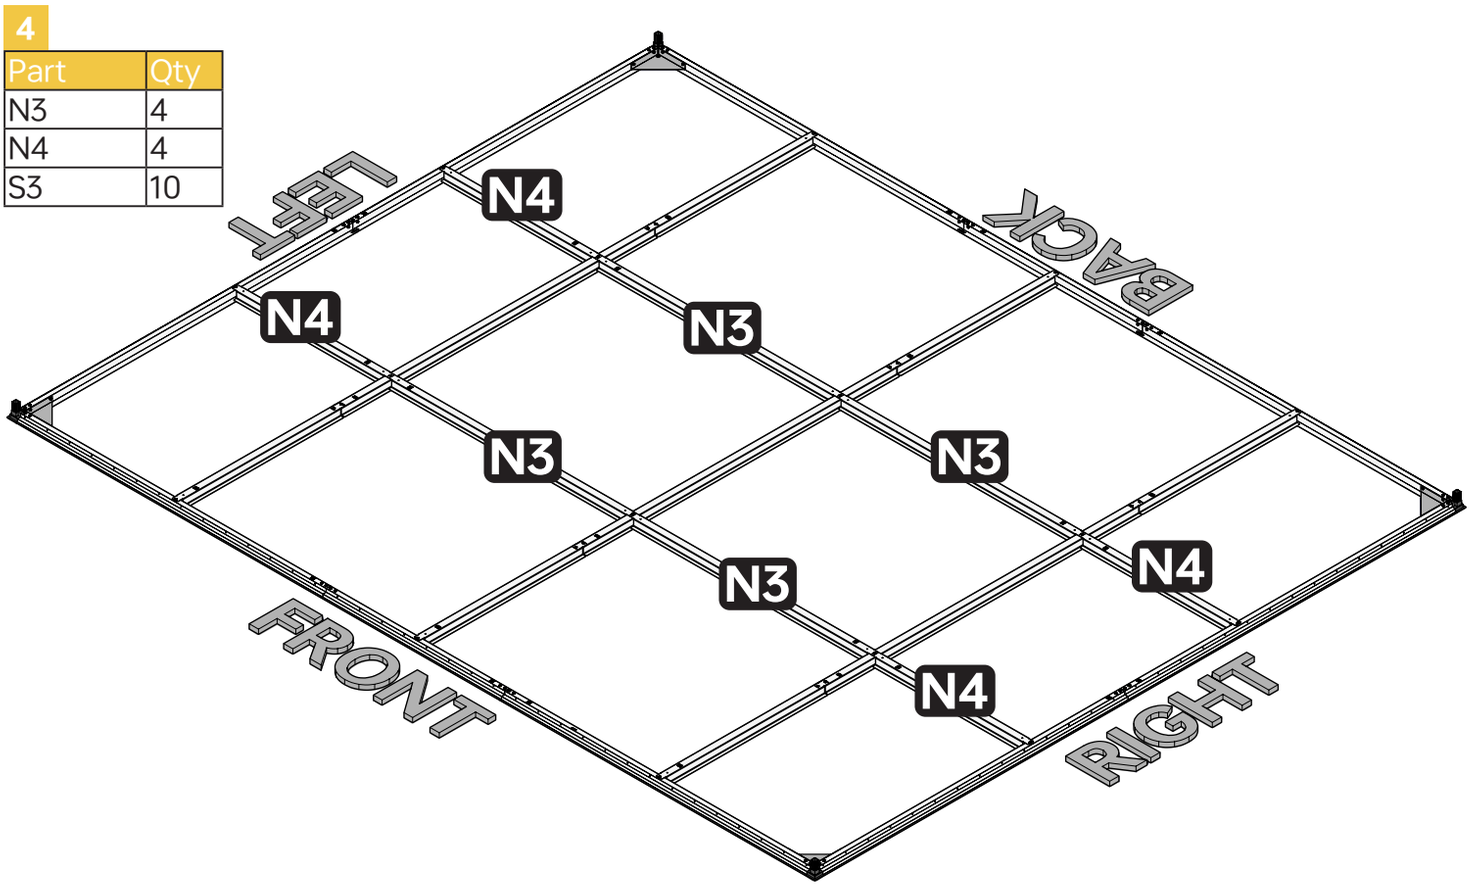

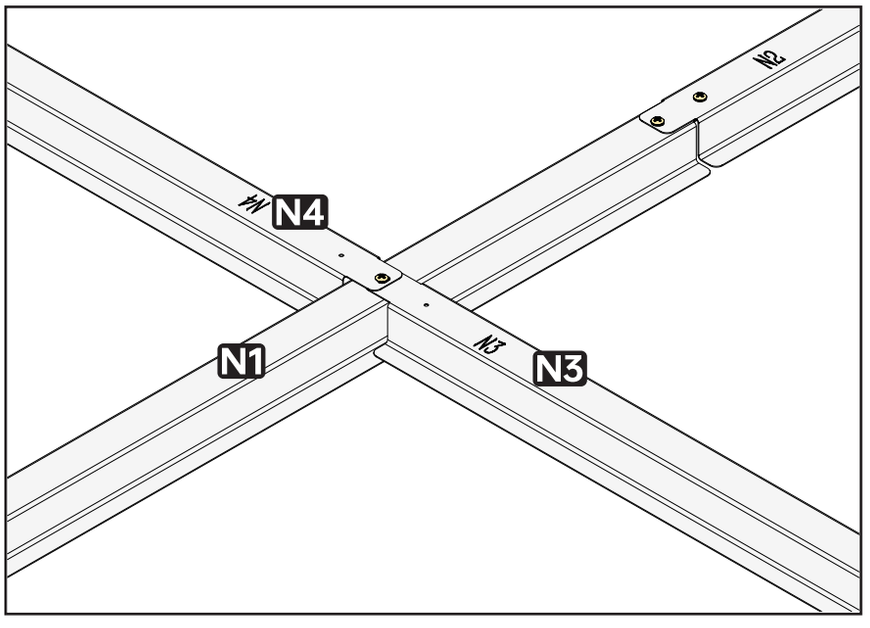

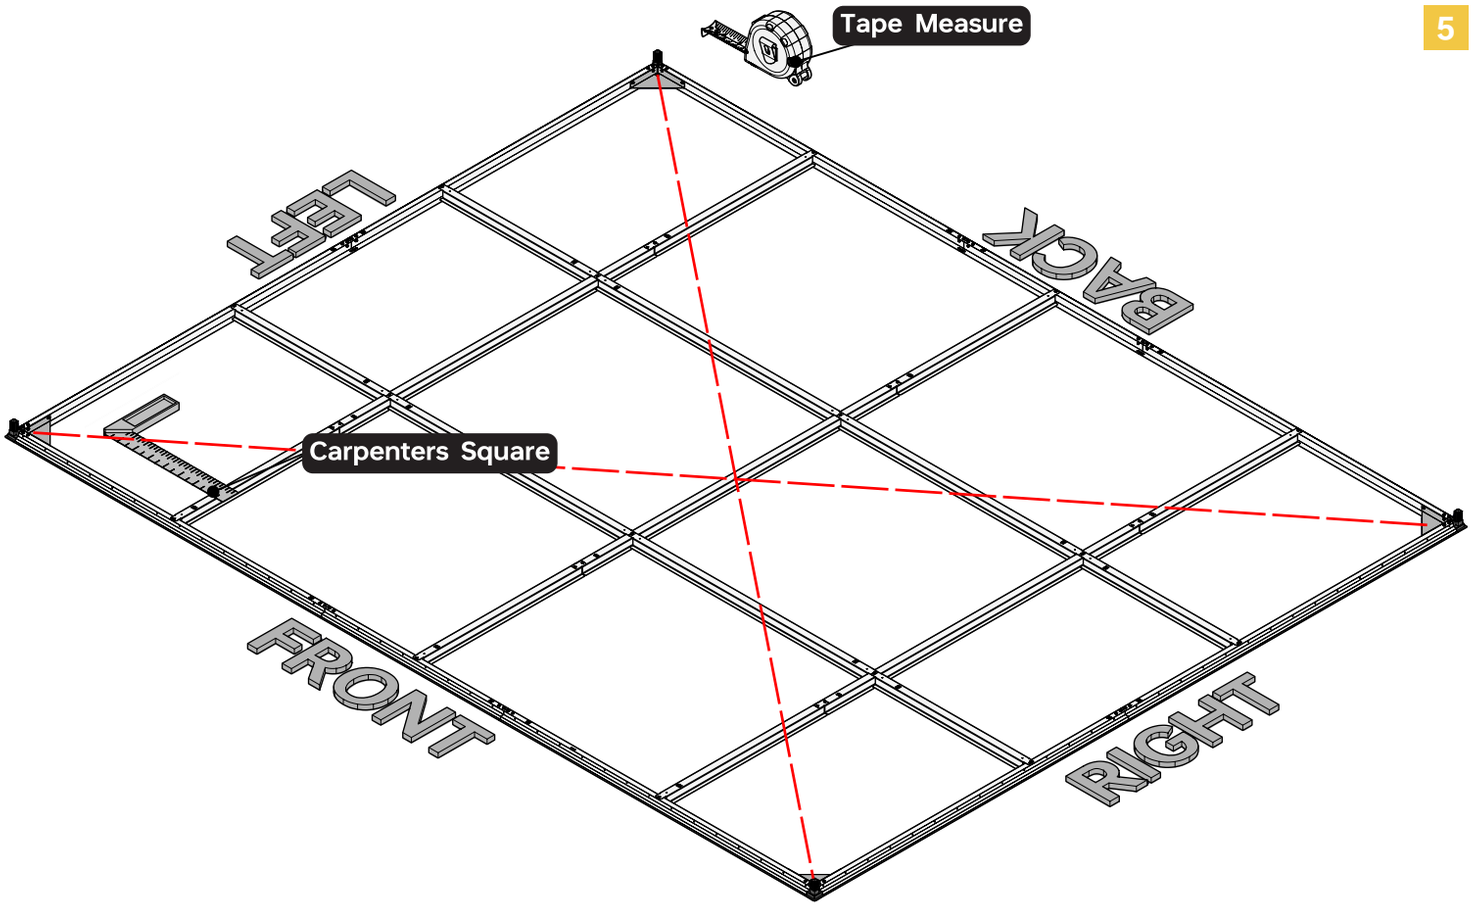

IMPORTANT

AFTER COMPLETING THE ASSEMBLY OF THE BASE FRAMES, PERFORM THE FOLLOWING CHECKS:

Squareness Check: Use a carpenters square to ensure each corner of the frame forms a right angle (90 degrees).

Diagonal Measurement Check: Use a tape measure to verify that the lengths of both diagonal lines across the frame are identical.

If the diagonal measurements differ, adjust the connections between the D1-D8 frames until the lengths are equal.

IMPORTANT

After the base frames are fully assembled, use a carpenter square to check that the four corners are square. Use a tape measure to check that the two diagonal lines of the frames are of the same length.
Adjust the connection between D1~D7 if the two diagonal lines have different length.
After the step is done, you will find some unused screw holes on N1~N4. This is normal.

NOTE

For the following steps, you will secure the base frame either to a concrete foundation or directly into the ground.


RECOMMENDED APPROACH:
We recommend securing the base frame at this stage and then building the rest of the shed. This method ensures stability and ease of assembly.

ALTERNATIVE APPROACH (LIMITED SPACE):
If you have limited space and need to place the shed closely against a wall, you may assemble the entire shed first and then move it to the foundation or ground. In this case, ensure you anchor the shed as the final step.

Choose the approach that best fits your situation, but always prioritize safety and stability during assembly.

6 OPTION 1 ANCHORED TO CONCRETE FOUNDATION


Part	Qty
S6	4

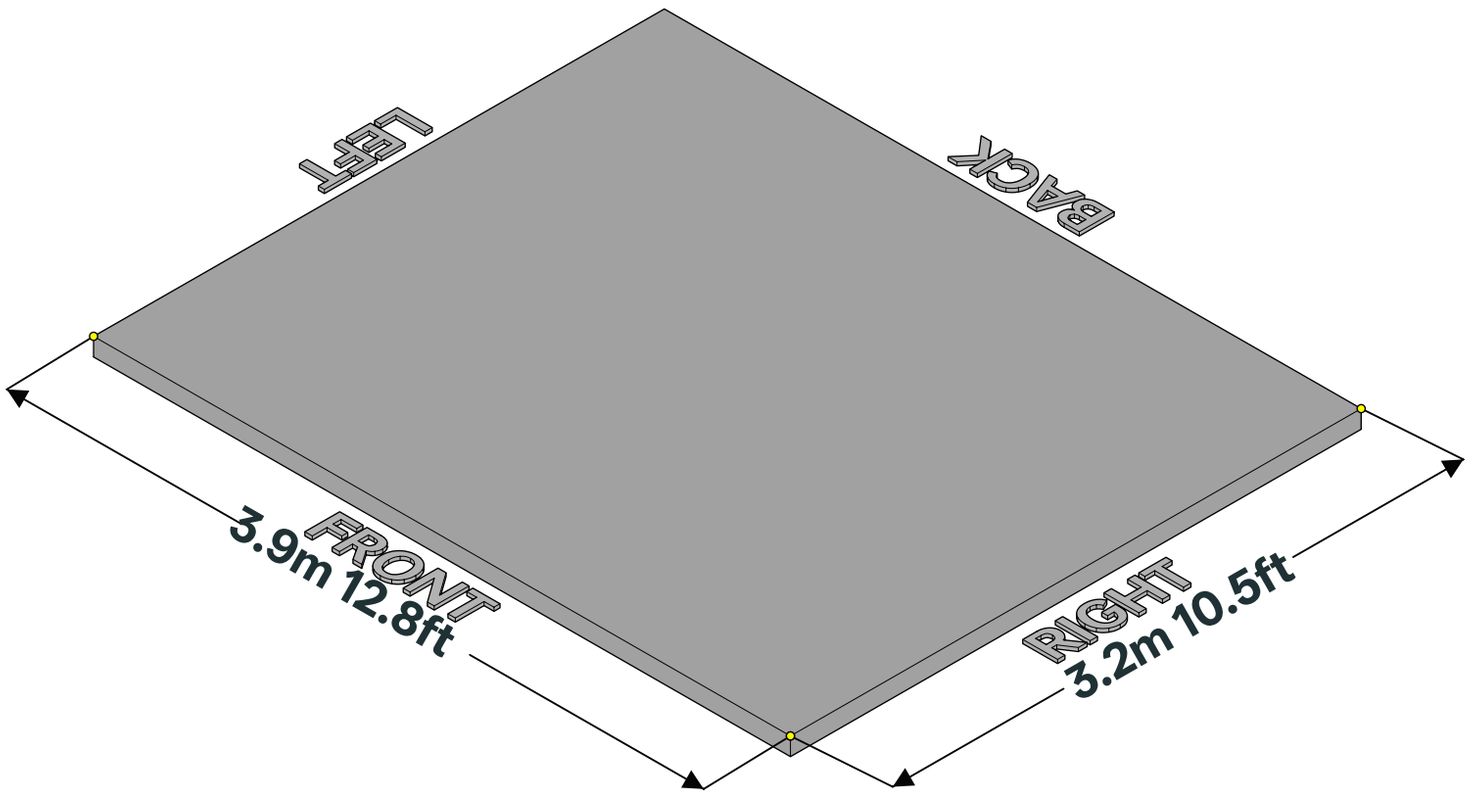

NOTE


Size: The dimensions on the illustrations above represent the recommended minimum size for the concrete surface or pad if one is used.

(Continued on next page)

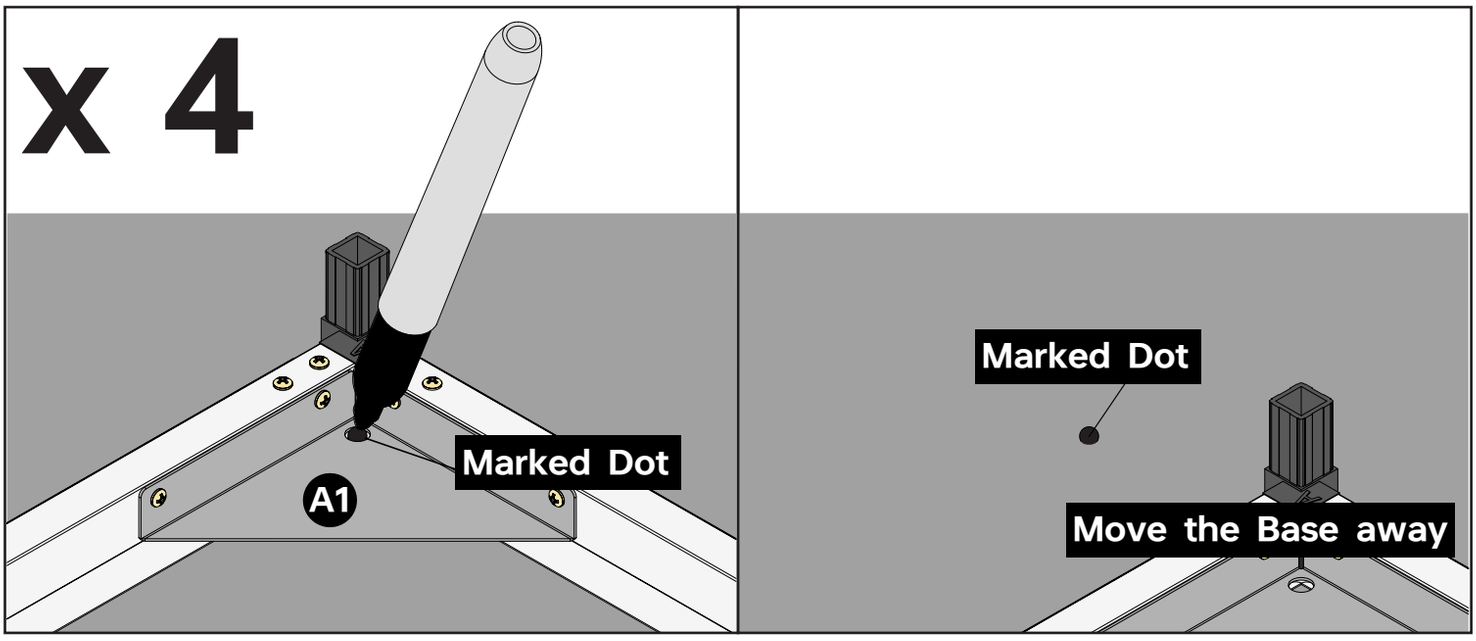

Note


Foundation Marking: In each corner of the base frame, use a marker pen to mark a dot through A1 onto the foundation surface. Then, move the base frame away from the marked foundation.

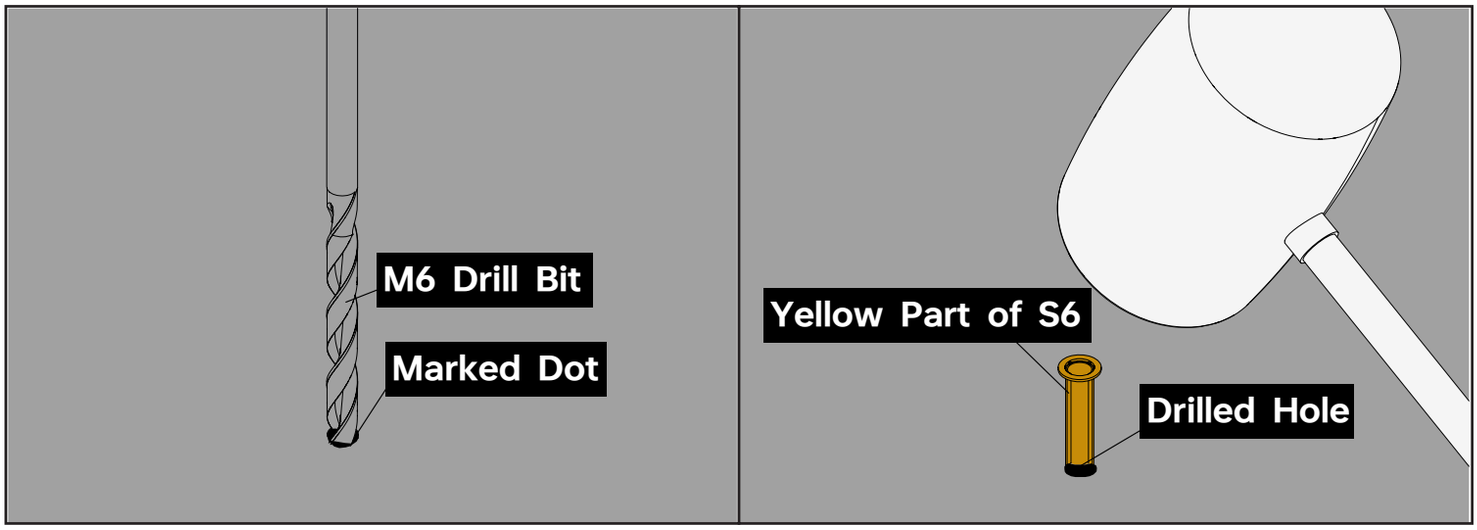



Note

FOUNDATION DRILLING: Using a concrete drill with an M6 drill bit, drill a hole at each of the four marked locations on the foundation. Drill to a depth of 8 cm (3.15 inches).
ANCHOR INSTALLATION: Use a rubber mallet to hammer the yellow plastic anchor component of S6 into each drilled hole.
IMPORTANT: Only use the yellow plastic anchor part of S6 in this step. Do not use the screws of S6 at this time.

(Continued on next page)

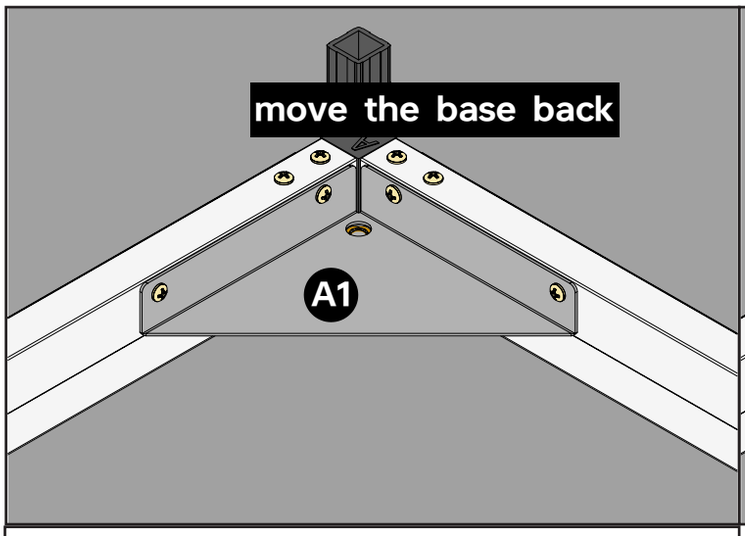

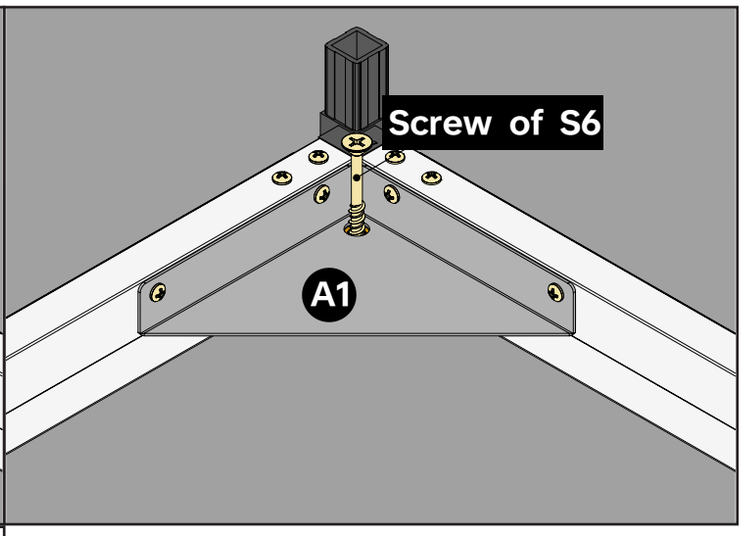

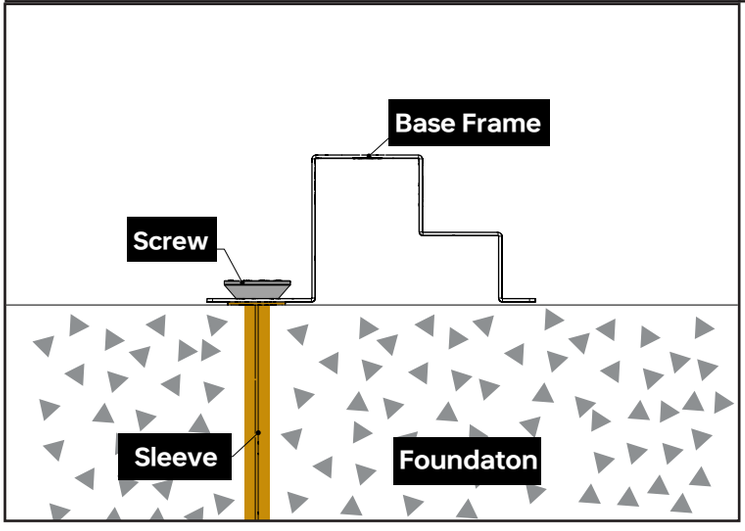


Note


Securing the Base: Carefully reposition the assembled base frame onto the foundation, aligning the frame holes with the installed anchors. Now, use the screw of S6 to securely fasten the frame to the foundation.

This completes Option 1.

6 OPTION 2 ANCHORED INTO GROUND

Part	Qty
S11	4

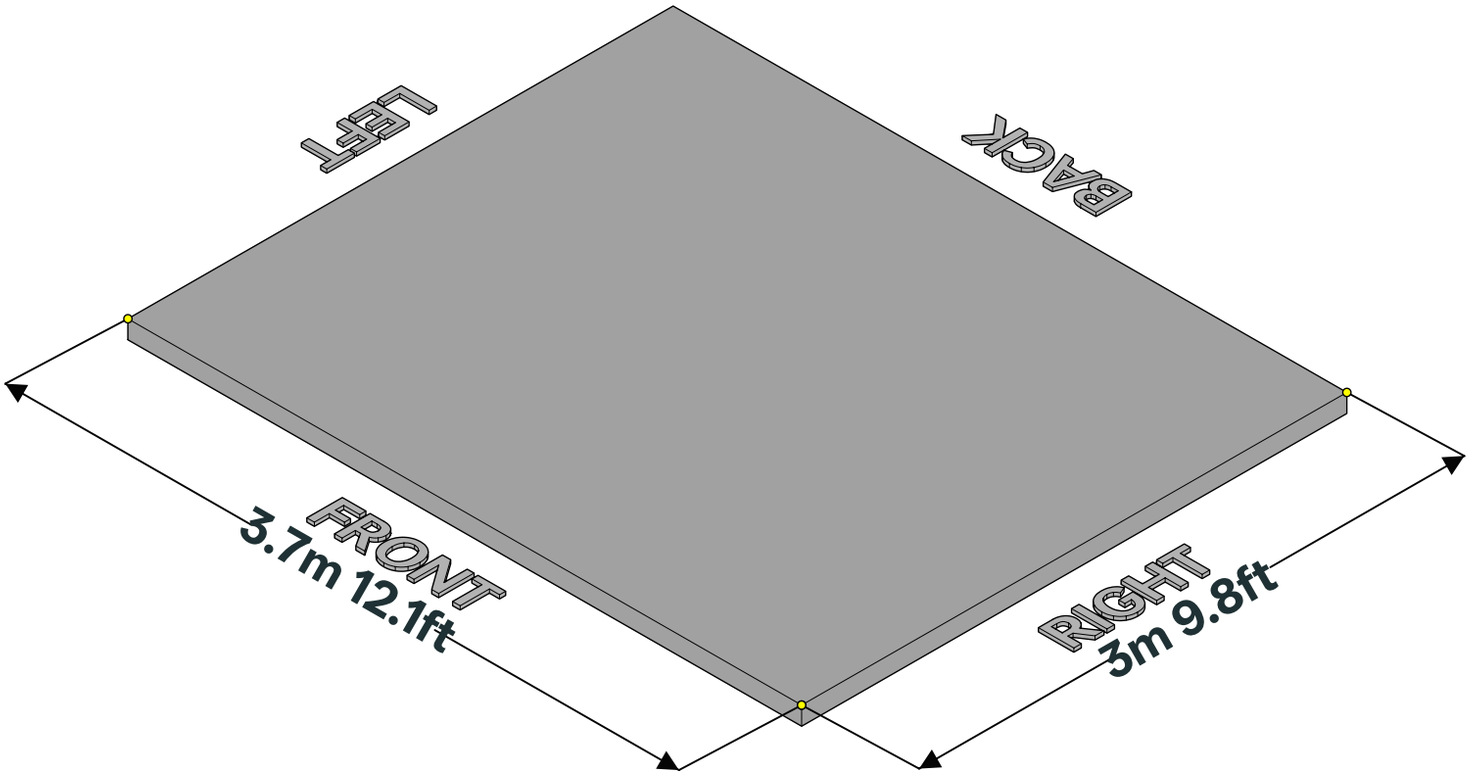

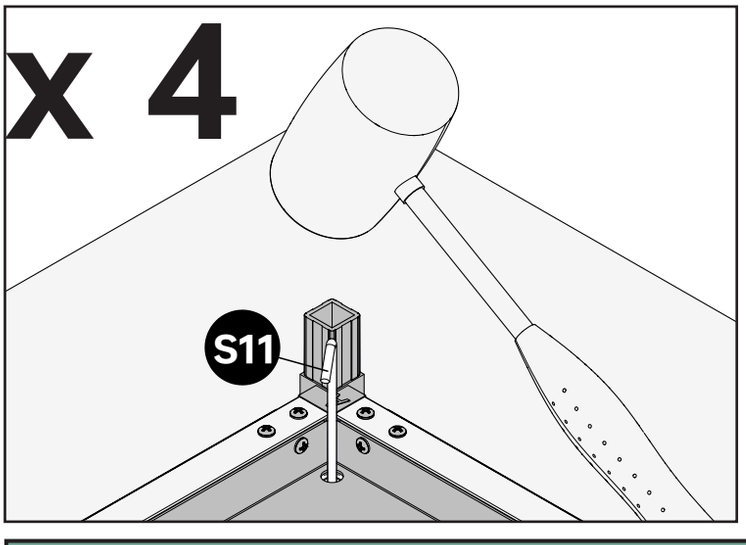


NOTE

Size: The dimensions on the illustrations above represent the minimum ground space required to set up this shed.

For this simplified foundation option, use a mallet to hammer the S11 anchors directly into the ground.


This concludes the Base Assembly chapter. In the following chapters, we will demonstrate the assembly of the remaining shed components, without showing the foundation for clarity.


04 Wall

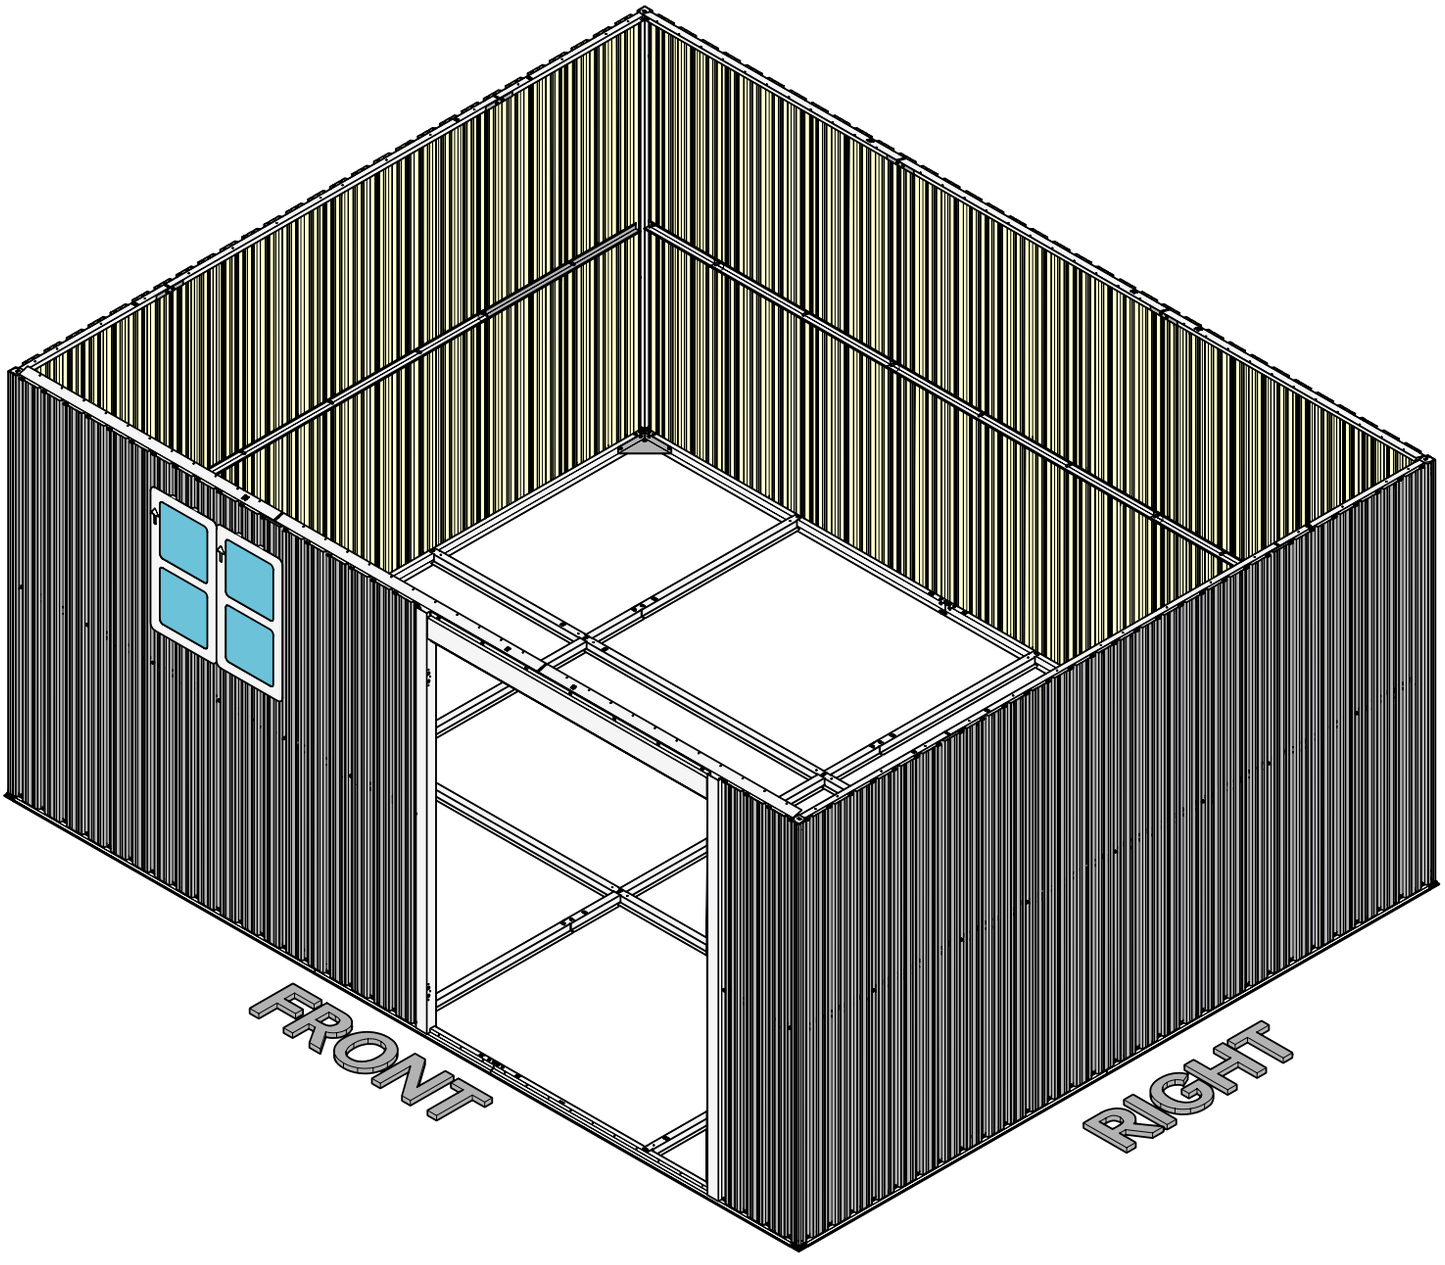

1

Part	Qty
QL	4

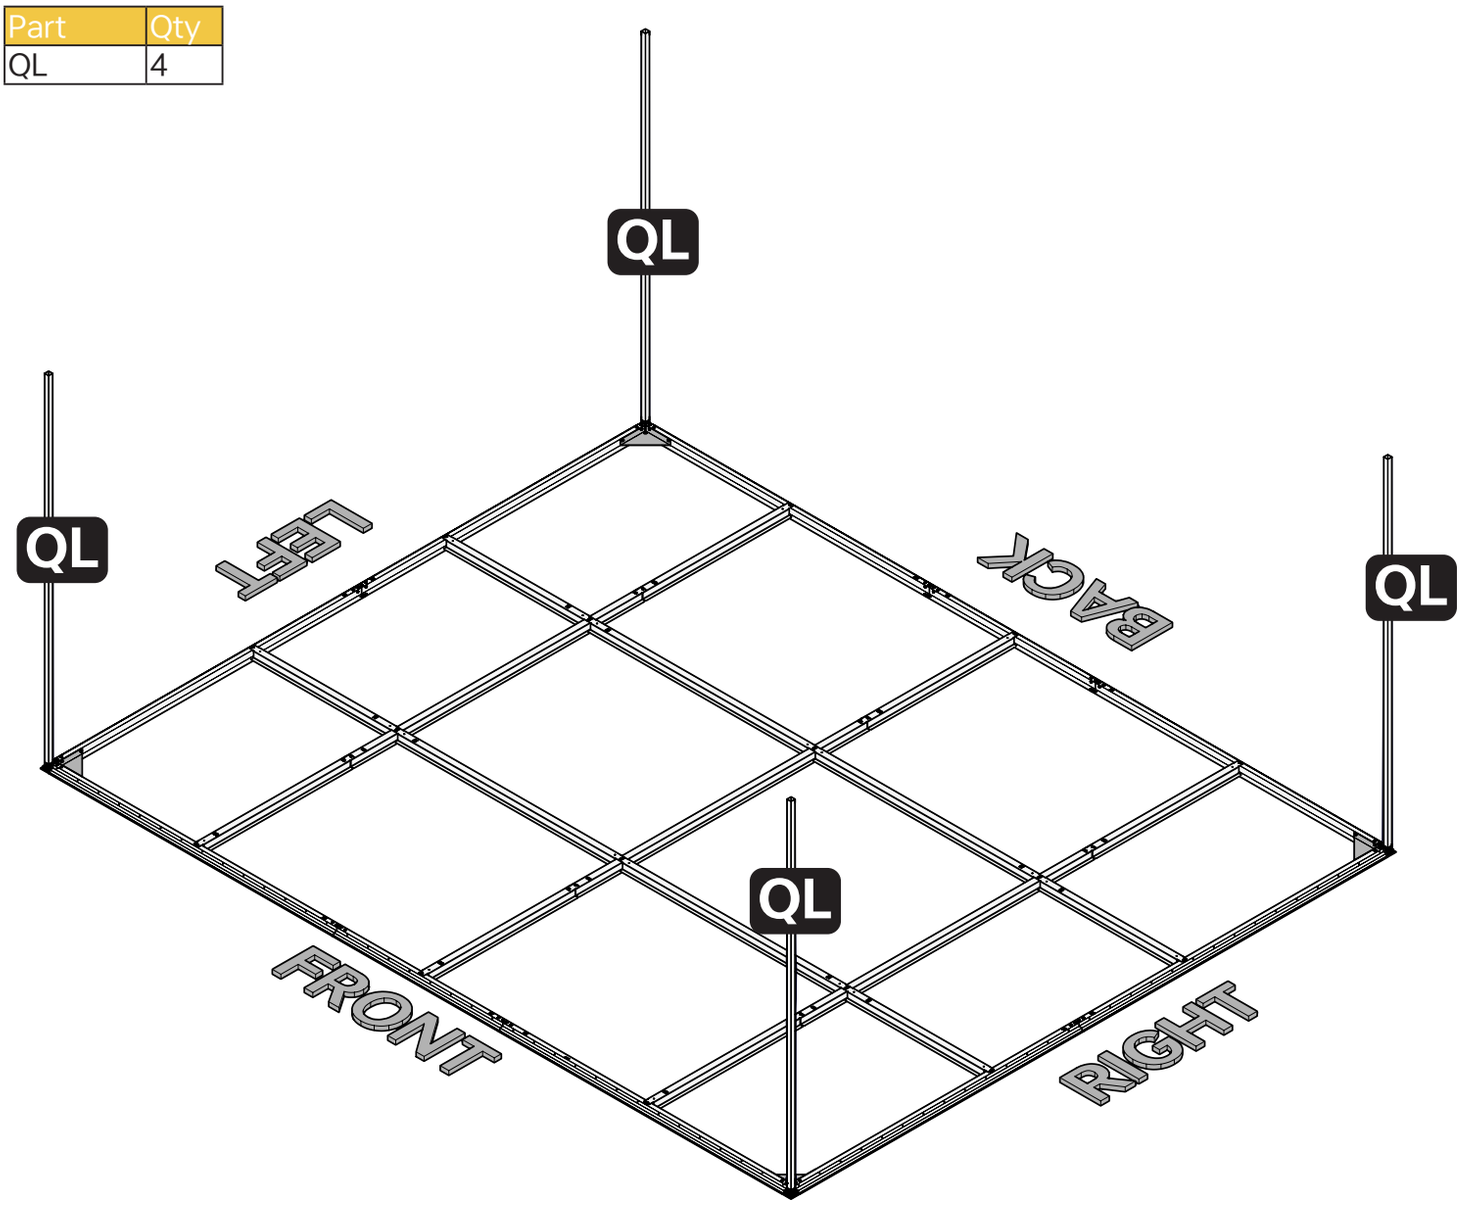

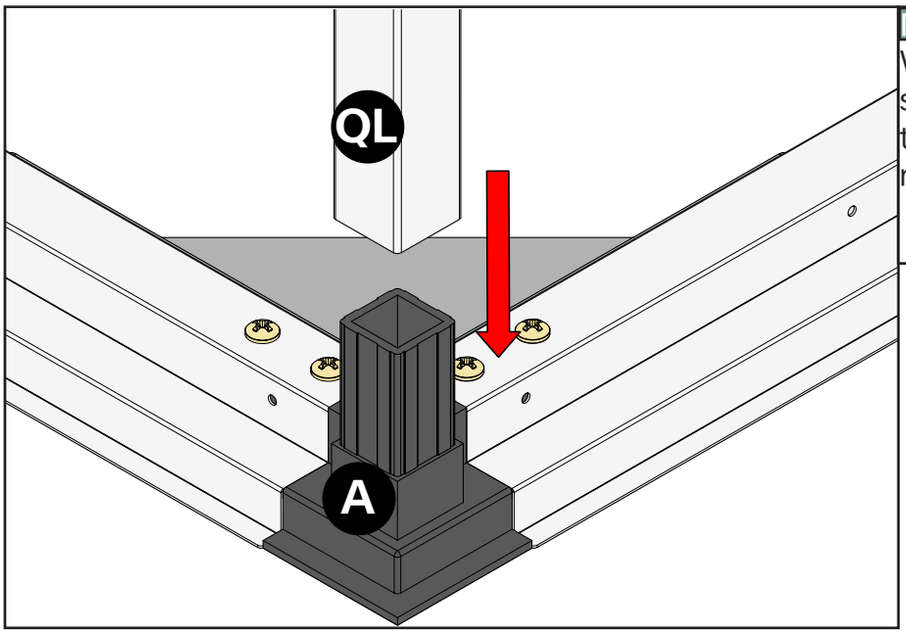



Note

When assembling QL to Part A, no screws are needed. QL can be attached to Part A in either orientation; it does not matter which end is connected.

2


Part	Qty
B1	2
B2	2
B3	2
B4	2
B5	1
B6	1
B7	1
B8	1
C1	8
C	8
S3	16

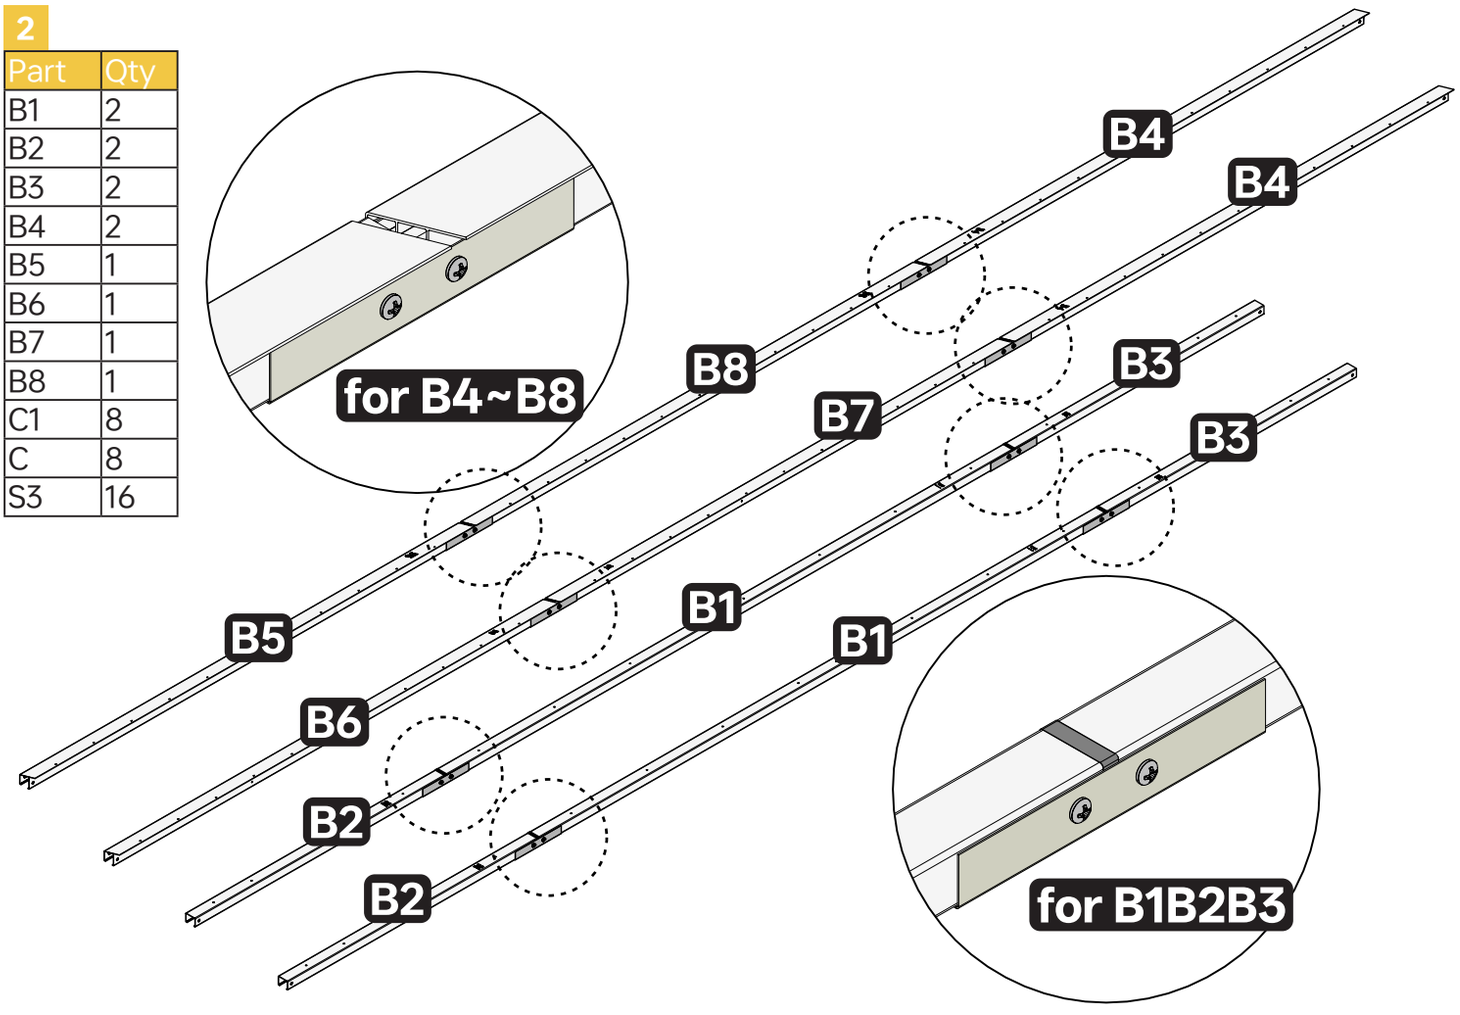

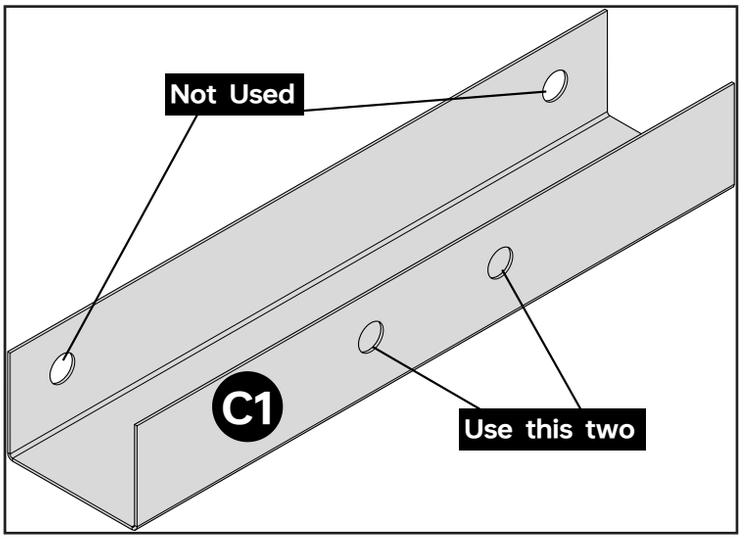

NOTE

(Continued on next page)

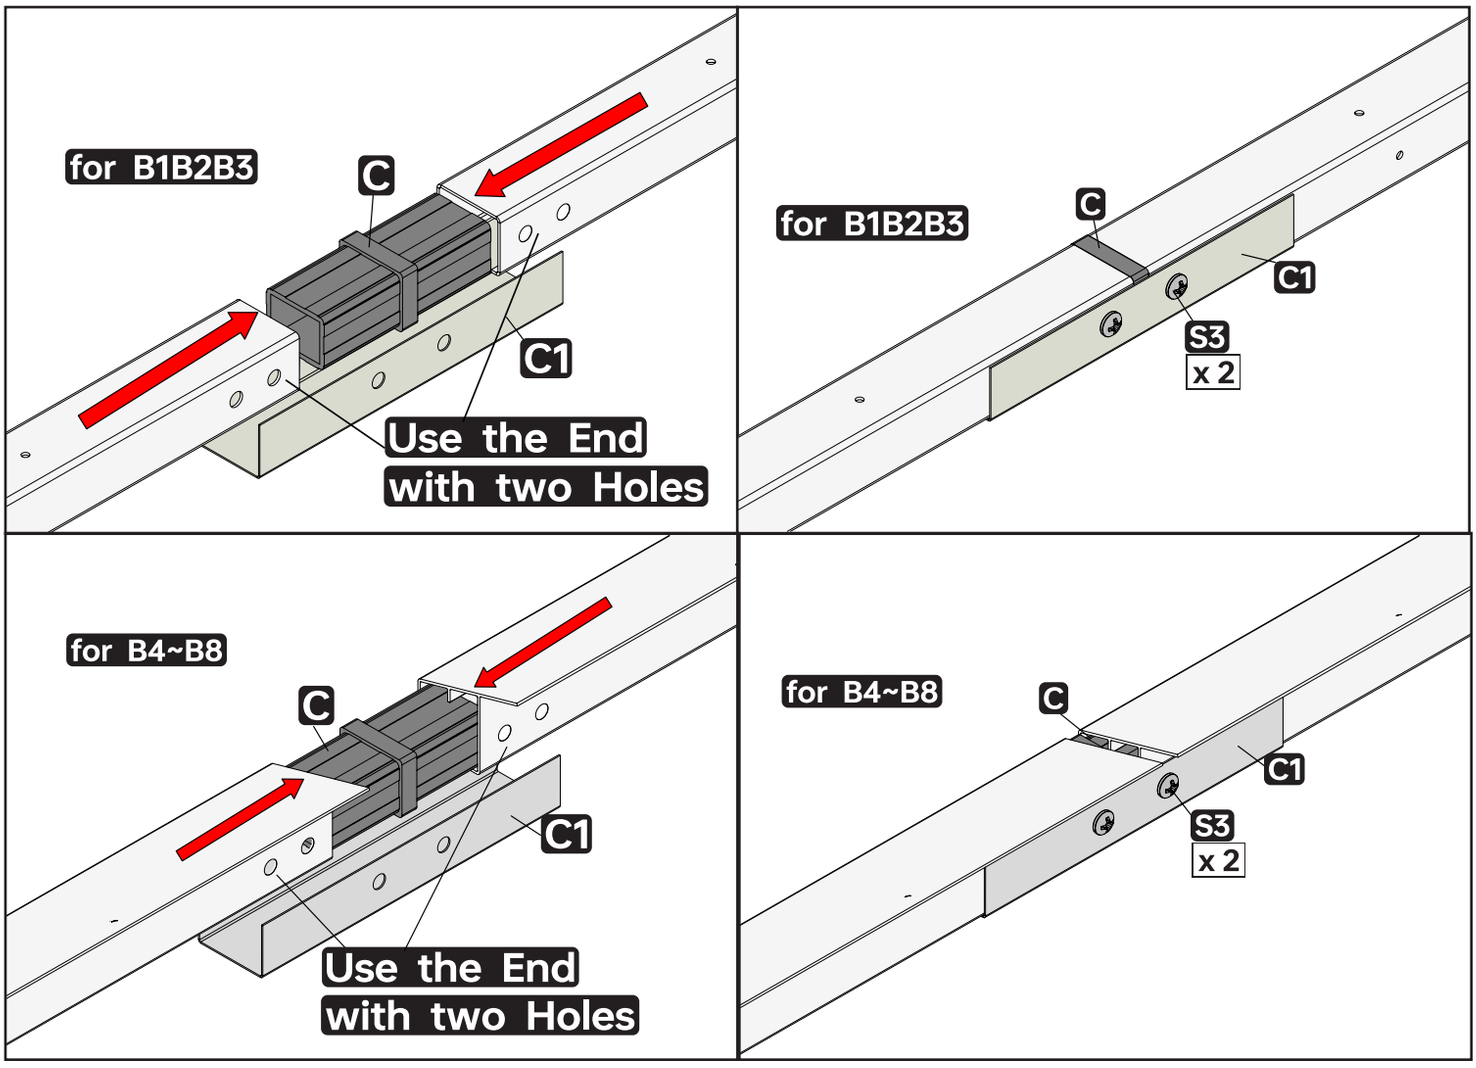

Note


The orientation shown in the diagram above is critical for the correct assembly of components B1~B8, similar to the procedure outlined in Step 1 of the Base Assembly chapter.


When joining these components, always use the end of each B1-B8 piece that features **two screw holes**.


When attaching C1, only insert screws into the two holes on one side of the component at this time. The remaining two screw holes on the opposite side are reserved for a subsequent assembly step.


3


Part	Qty
B	4
S3	8

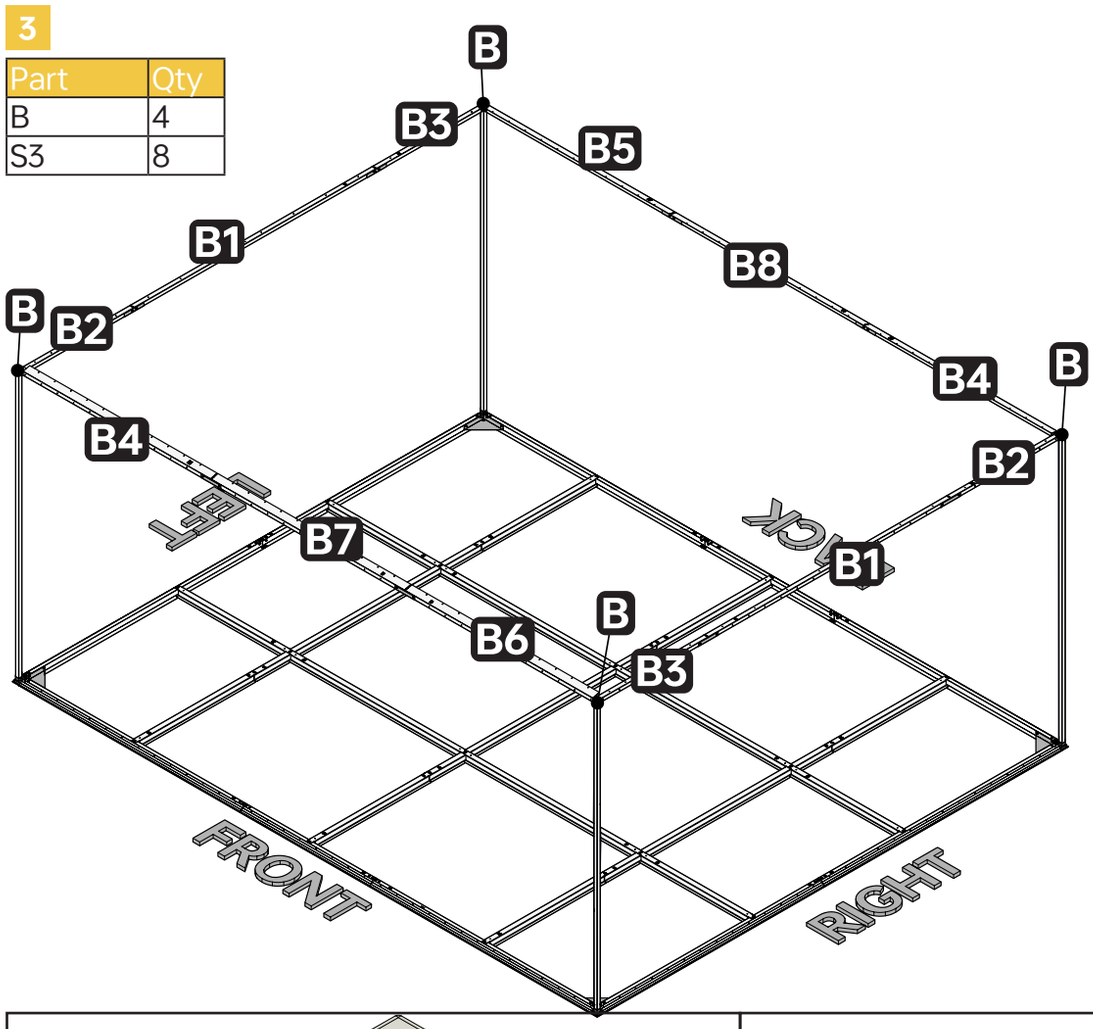


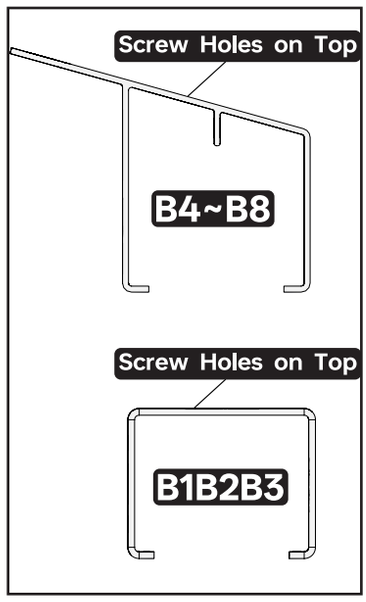

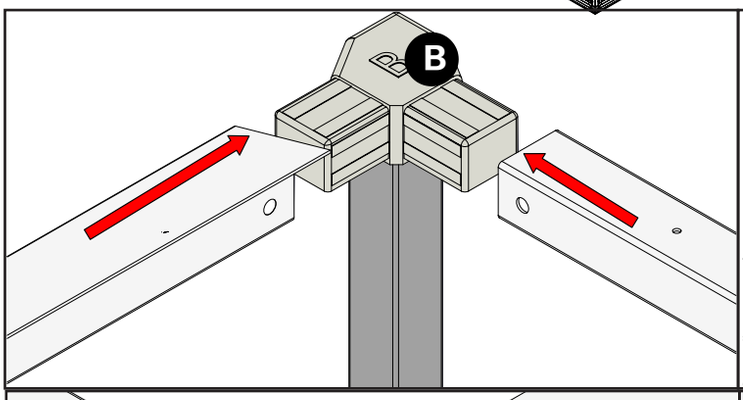

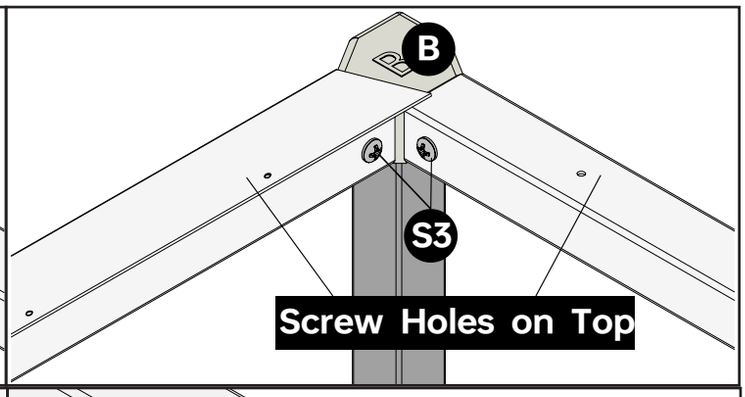

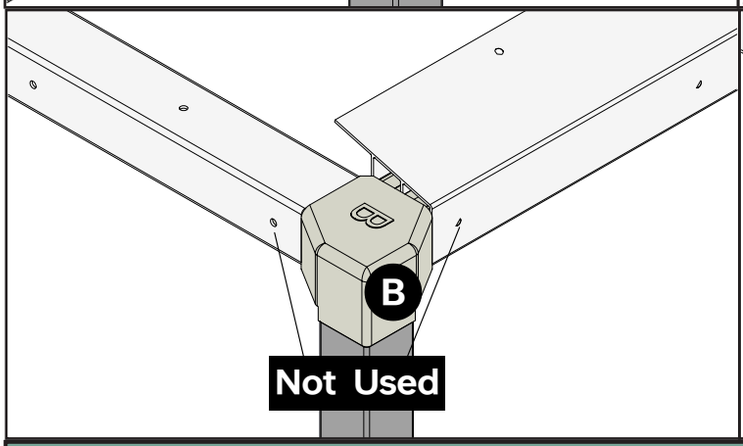

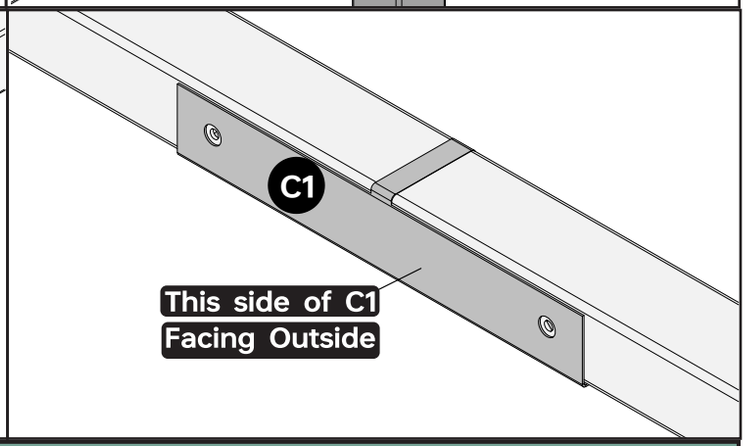


NOTE


Components B1 through B8 have three sides. The side opposite the largest opening is designated as the top side. When positioning B1-B8, ensure this top side is facing upwards. Additionally, for component C1, the side without screws should face outwards.


When securing Part B, do not use the two exterior-facing screw holes; these will be used in a later step.


4


Part	Qty
Q2	4
Q1	4
S3	24
S4	24

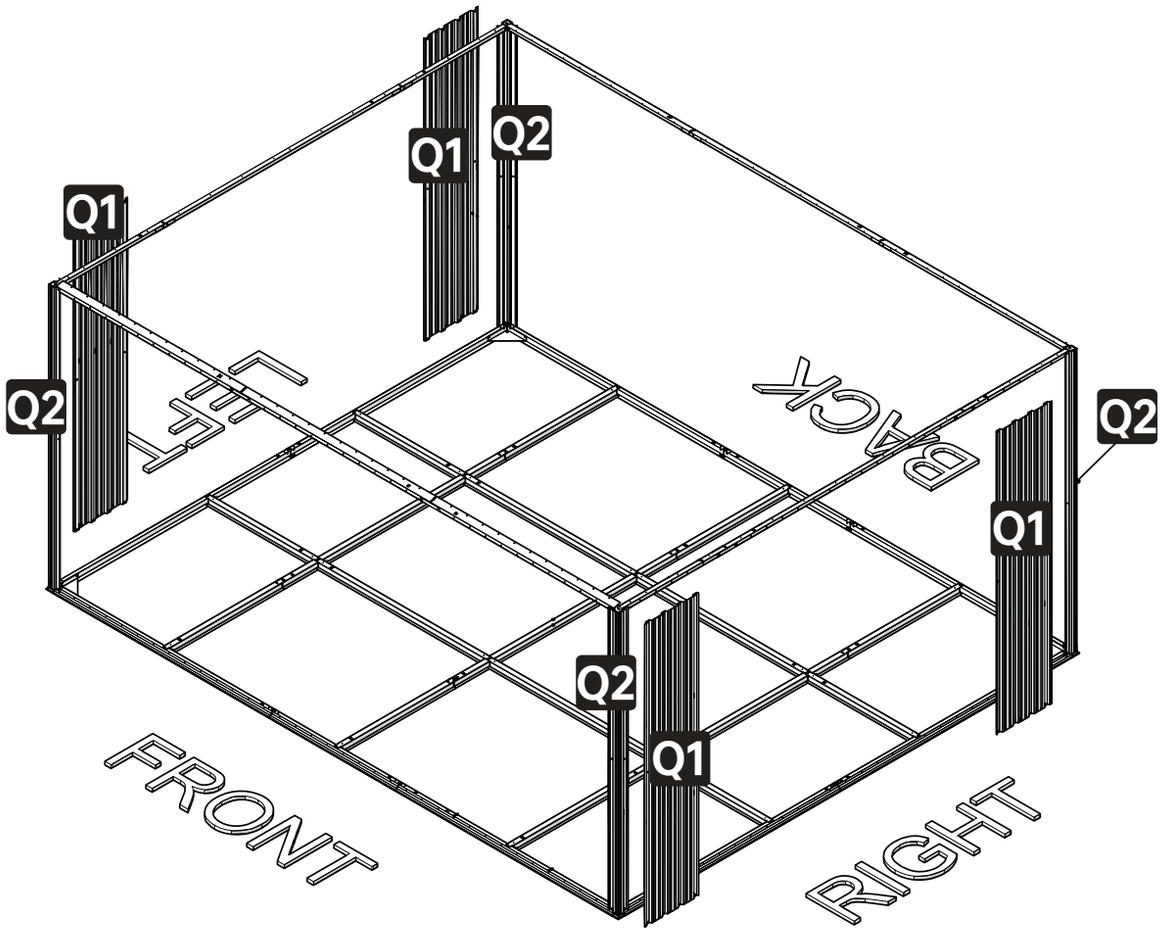

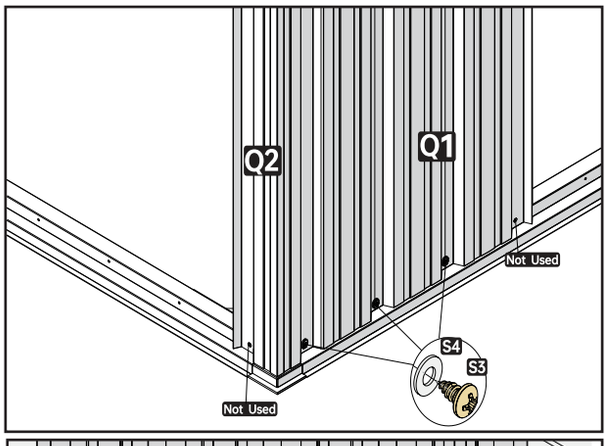

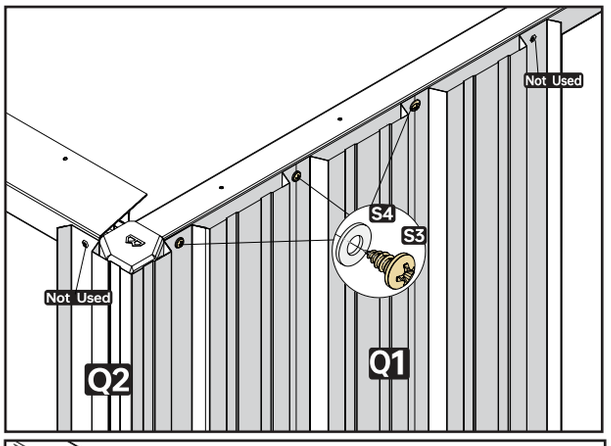

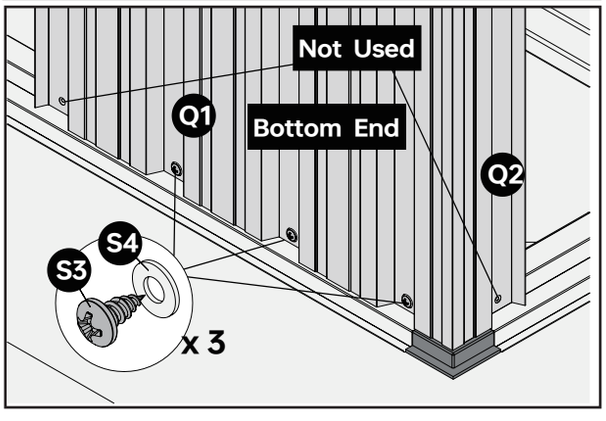

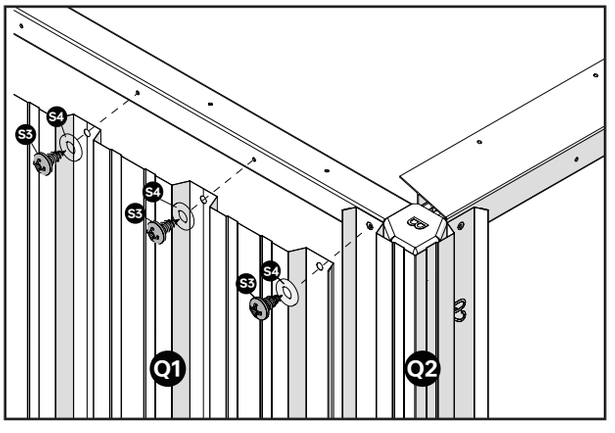

NOTE


In this step, the four screw holes near the edge of each Q1+Q2 are not used temporarily.


ABOUT THE PLASTIC WASHER S4

Use S4 with S3 to protect panels and rainproof the shed.

5

Part	Qty
Q1	5
Q3	5
S3	72
S4	72

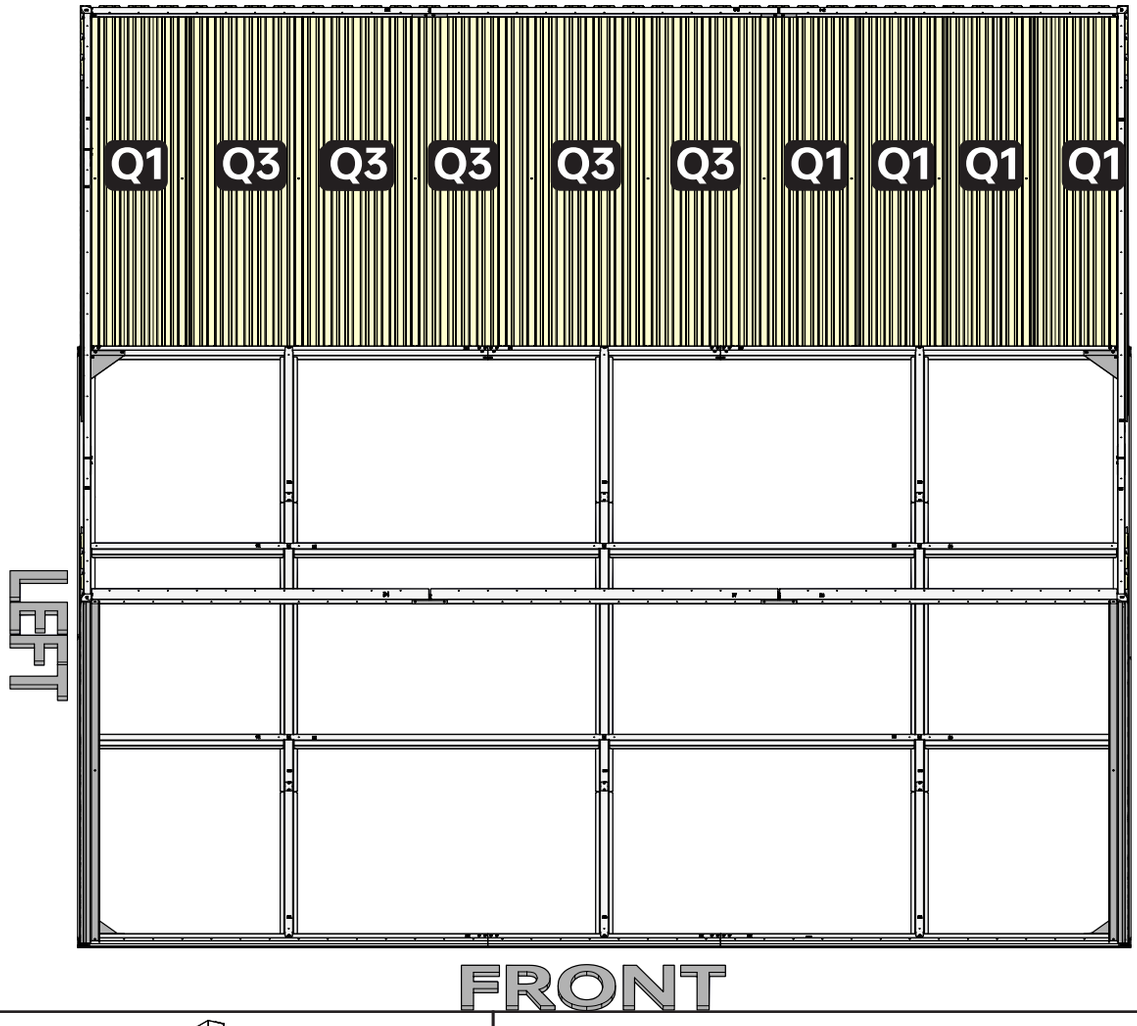

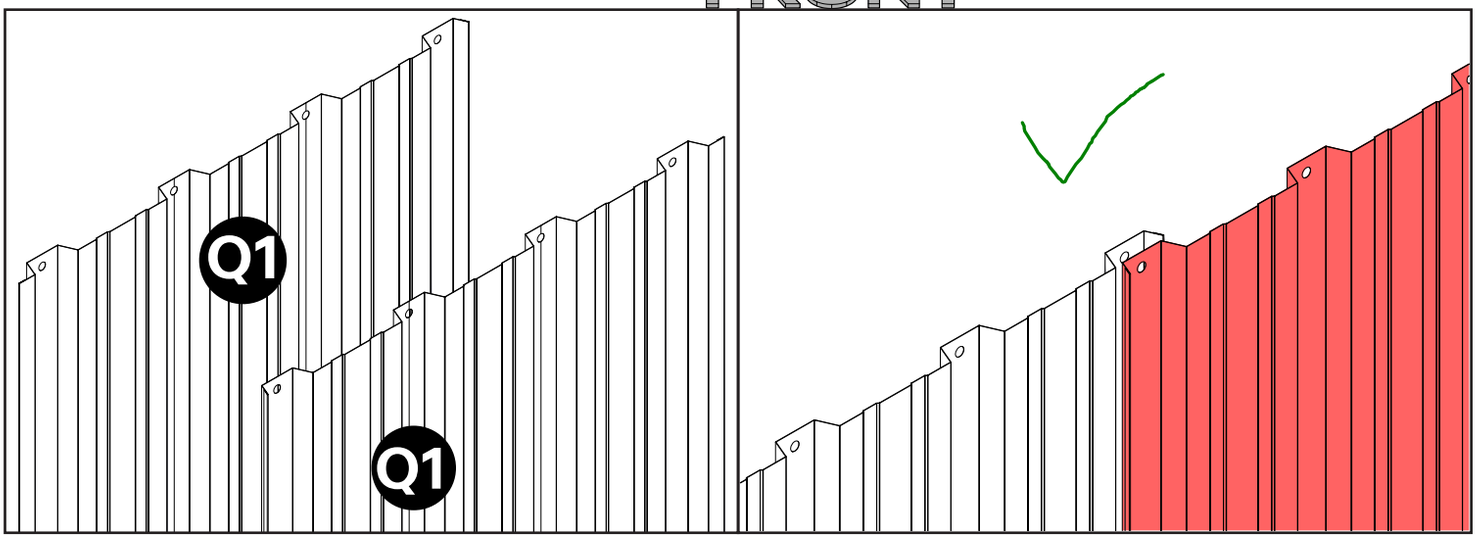

NOTE

IDENTIFYING THE INTERIOR AND EXTERIOR SIDE OF PANELS

Each panel of your shed comes with two distinct sides:

Interior Side: This side is always light gray, providing a uniform look inside your shed, regardless of the exterior color you choose.

Exterior Side: This is the side that showcases the color you selected for your shed, facing outward.


WALL PANEL ASSEMBLY: Q1 AND Q3


For wall panel Q1, refer to the illustration above for two valid setup options. Don't worry about which end is up—Q1 works either way. Panel Q3 is symmetrical, so top and bottom ends are interchangeable as well.

Note that, when stacking wall panels, it does not matter which panel is layered on top.

6

Part	Qty
L3	1
L4	1
L5	1
L6	1
S1	11
S2	11
S4	11
S5	11

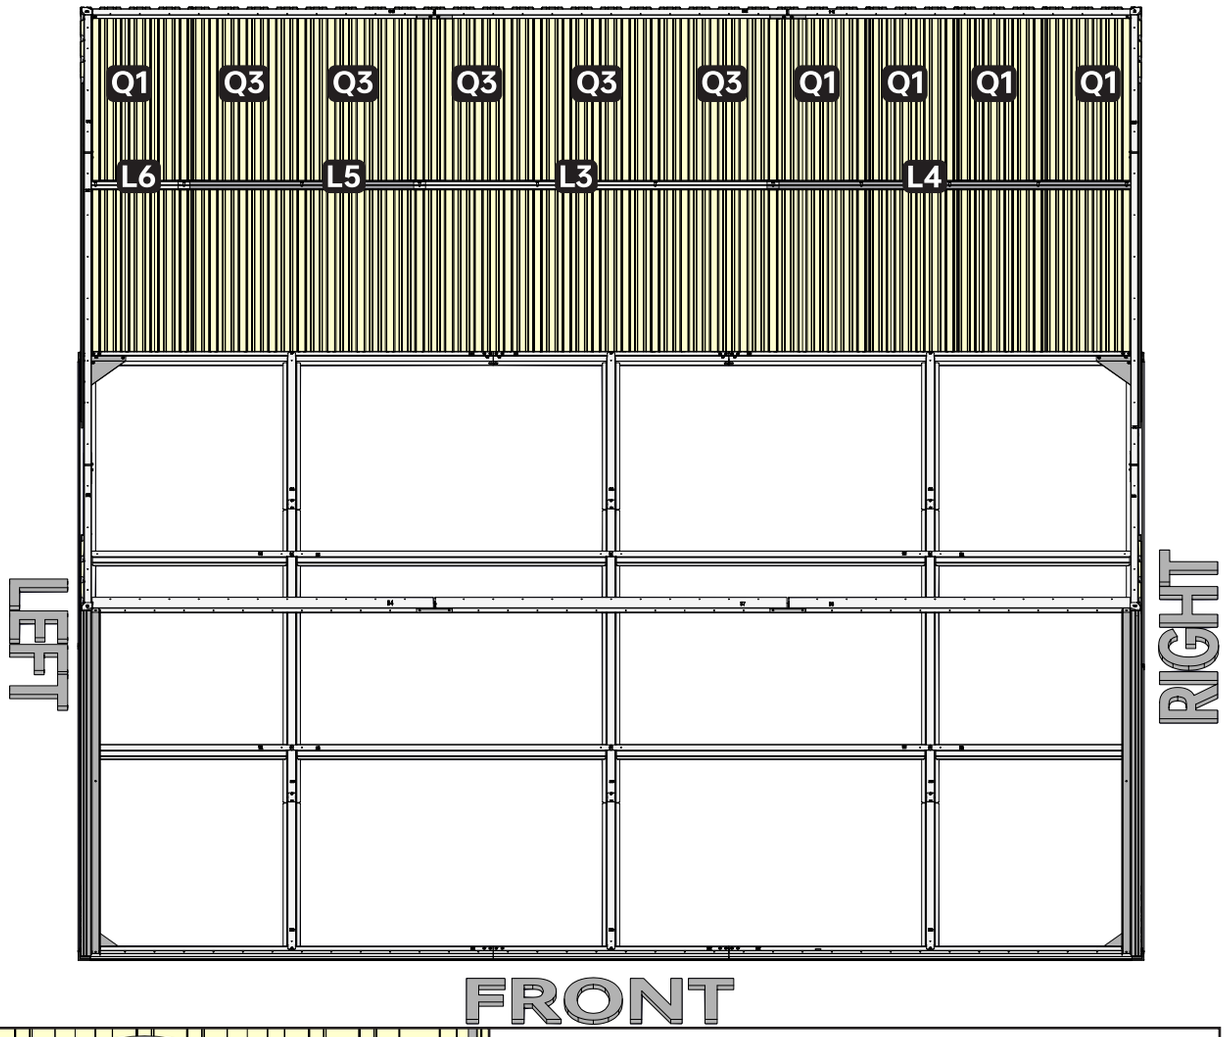

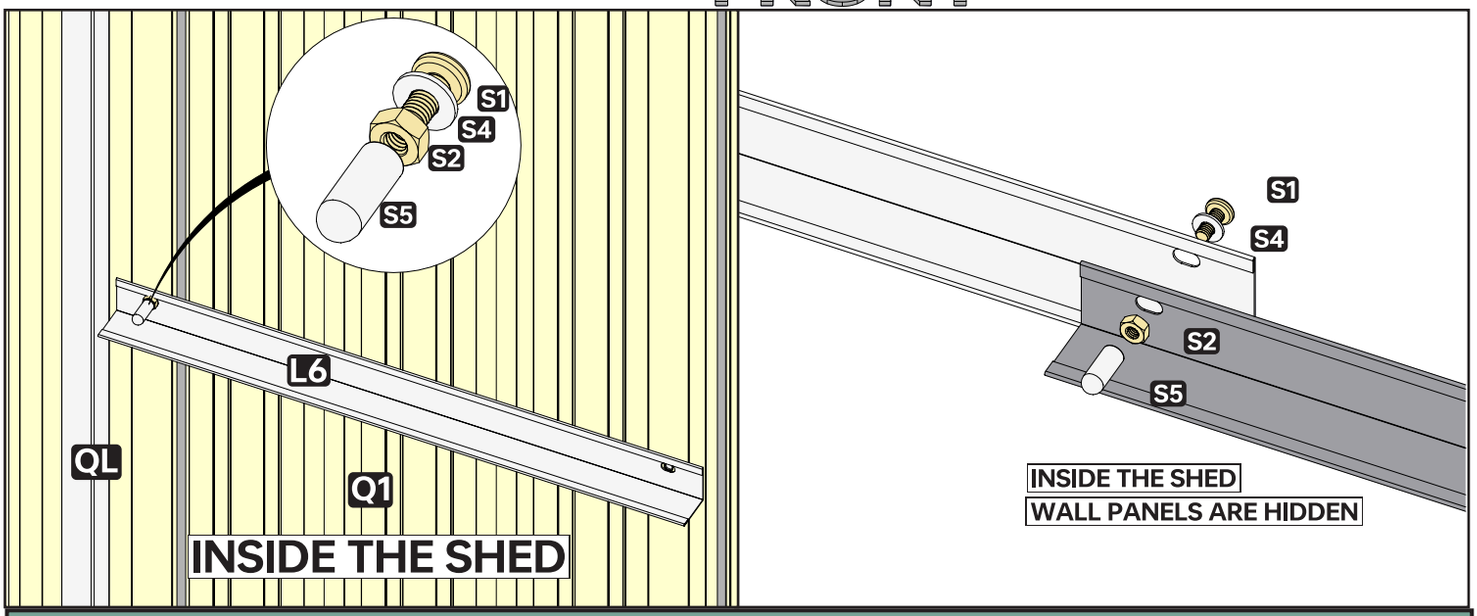

Note


ATTACHING L-BRACKETS (L PARTS):


Aligning L-Brackets: The screw holes on each L-bracket (L part) are designed to align perfectly with the screw holes located in the middle sections of the wall panels.


Securing the Brackets: Use Screw Set (S1 + S2 + S4 + S5) to firmly secure each L-bracket to the wall panels.

Crucial: L-Bracket Orientation: Pay close attention to how the L-bracket is oriented in Diagram. Ensuring it faces the correct way is key for proper assembly and stability.

(Continued on next page)

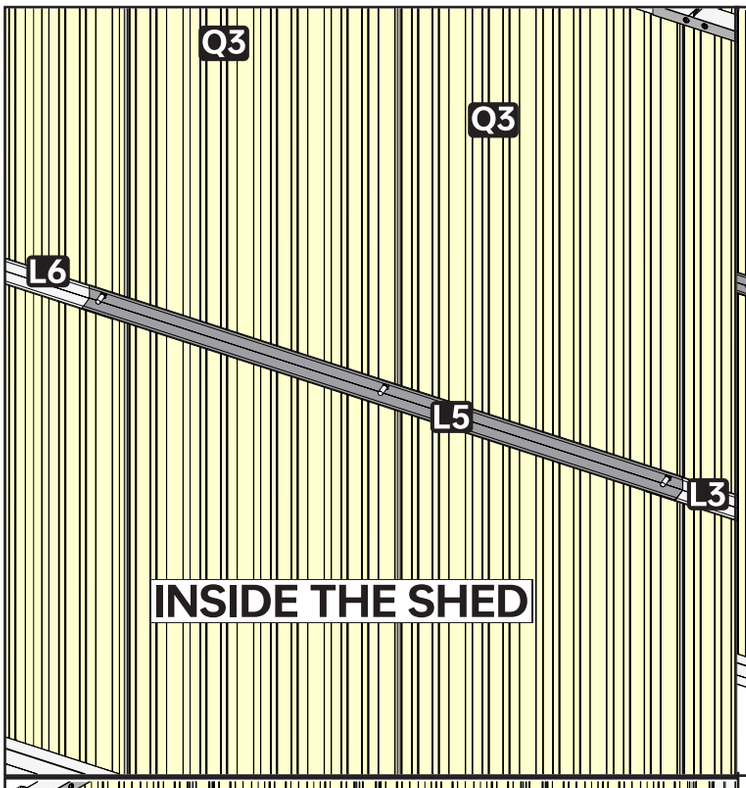

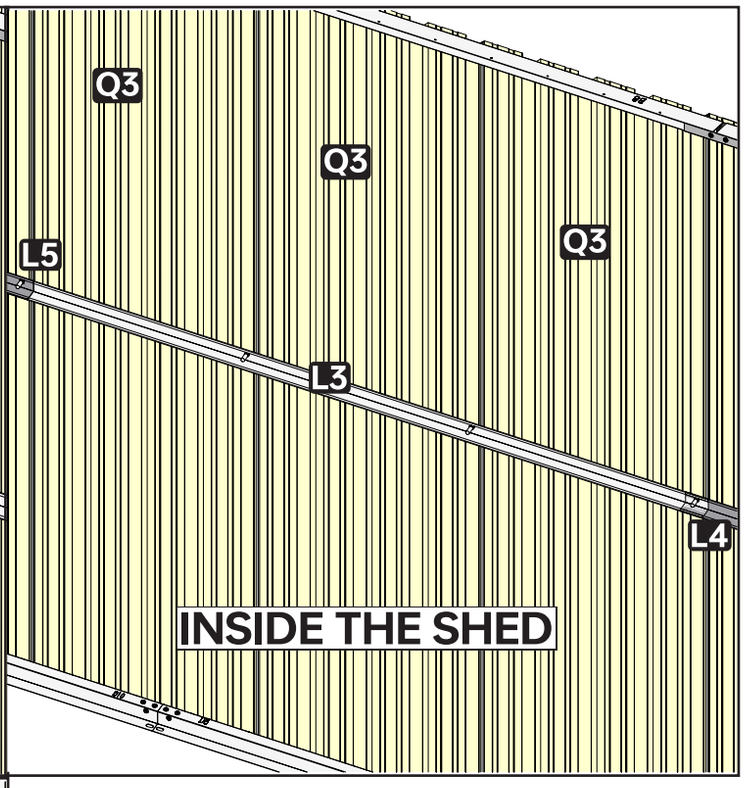

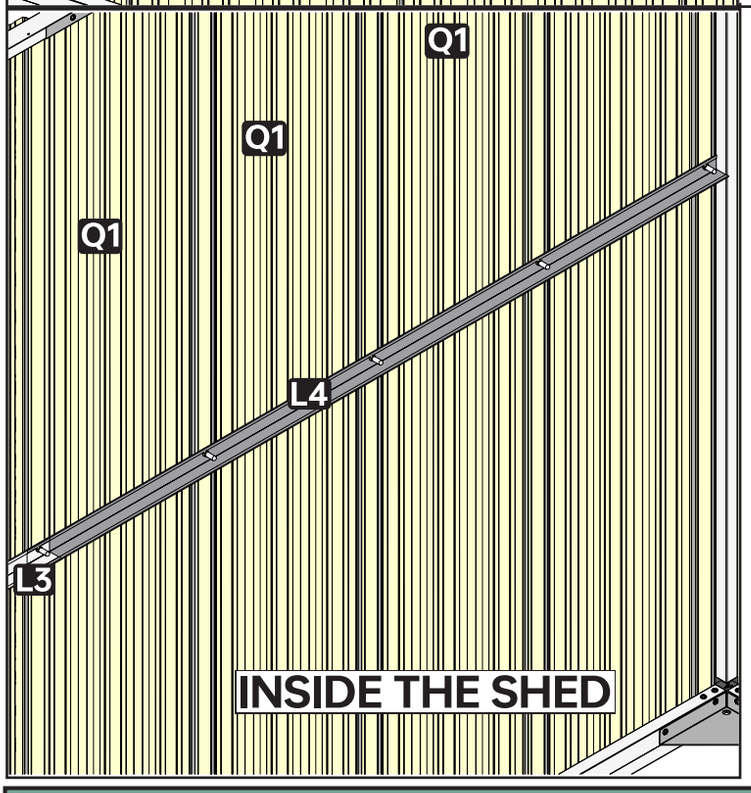

Note

ASSEMBLING L-BRACKETS (L PARTS):

The illustration on previous page demonstrates how the L-brackets (L parts) are correctly stacked and assembled.


For clarity: Please note that the wall panels have been hidden in this specific diagram to give you a clearer view of the L-bracket assembly.

PLASTIC CAPS (S5):

Plastic Caps (S5) are designed to cover the pointy ends of some screws (specifically S1 and S3) once they are fastened. This provides a neat finish and protects against sharp points.


In this manual, we will highlight the key areas where we recommend using S5.

Your package contains more S5 caps than are explicitly outlined in these instructions, giving you extra for other areas if you choose.

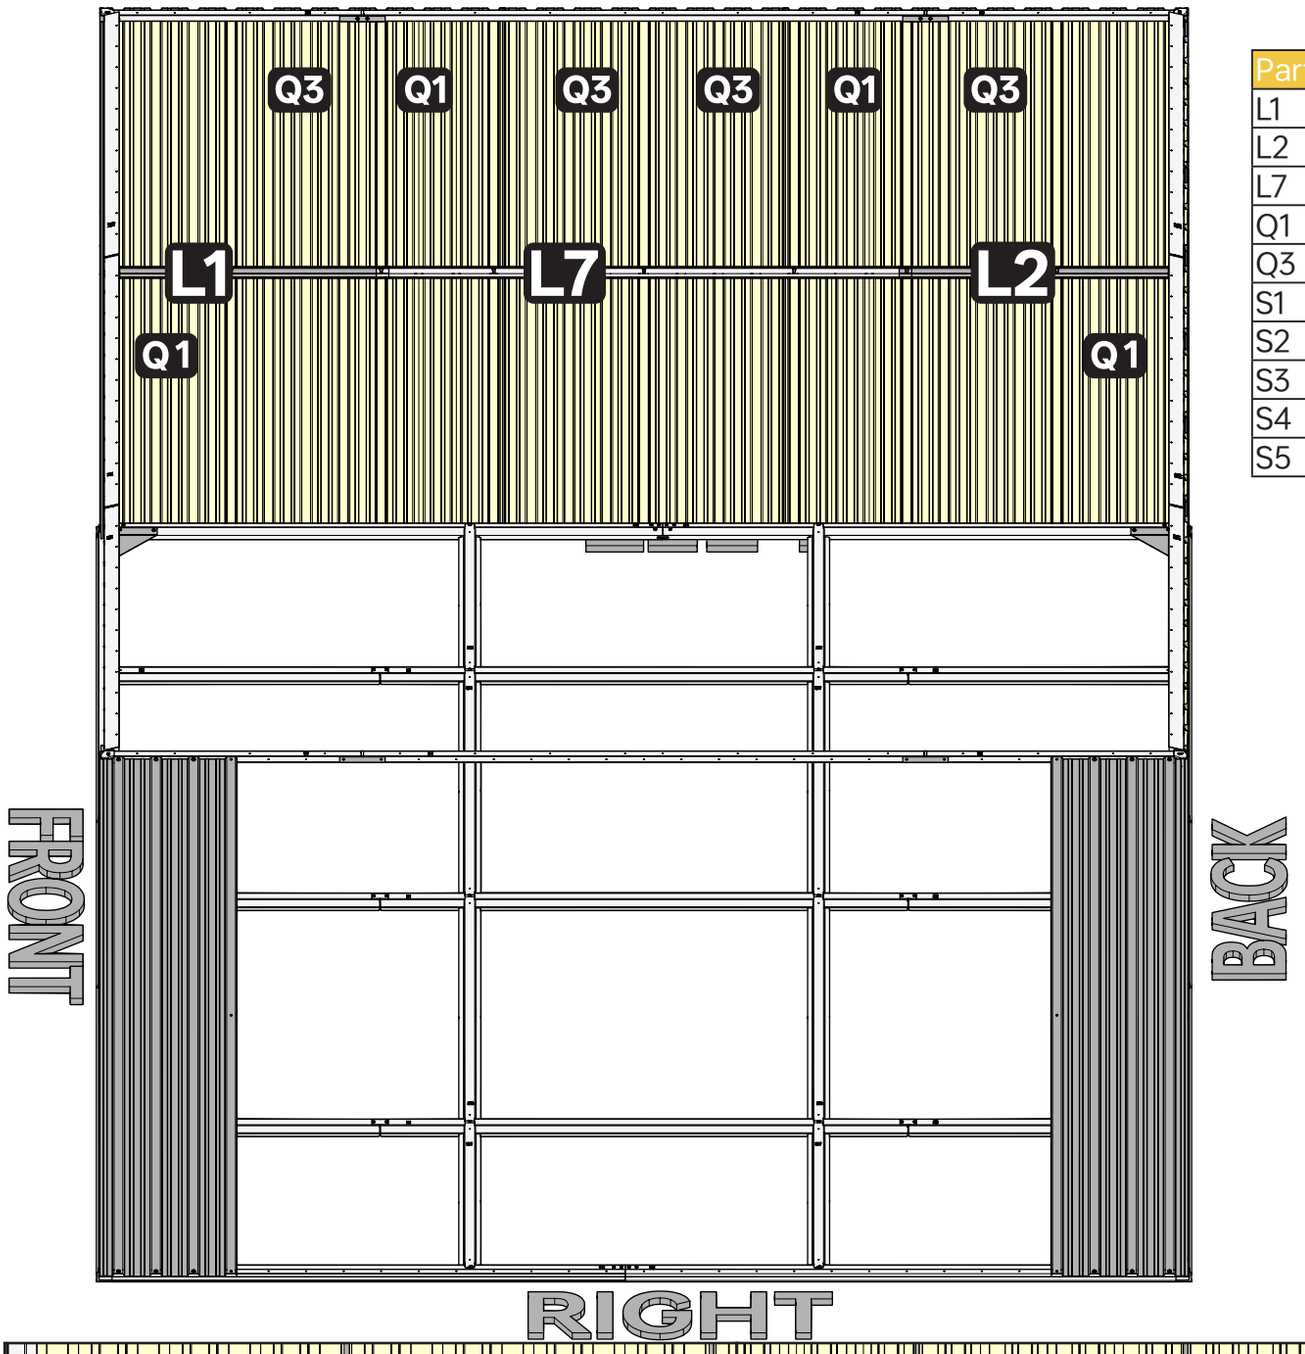

7

Part	Qty
L1	1
L2	1
L7	1
Q1	2
Q3	4
S1	7
S2	7
S3	46
S4	53
S5	7

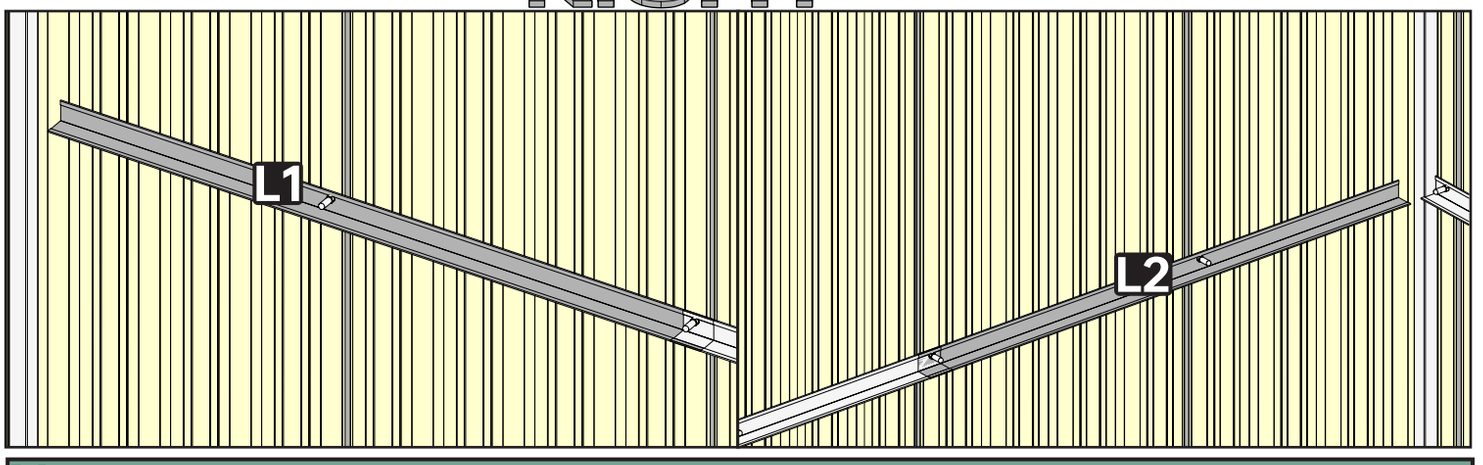


Note

NOTE ON L-BRACKET DESIGN (L1 AND L2):

As mentioned, the screw holes on the L-brackets are specifically designed to align with the holes in your wall panels.

Because of this design, you will notice that some L-brackets, such as L1 and L2 (which you are using in this step), will have a longer end that does not contain any screw holes. This is intentional and correct!

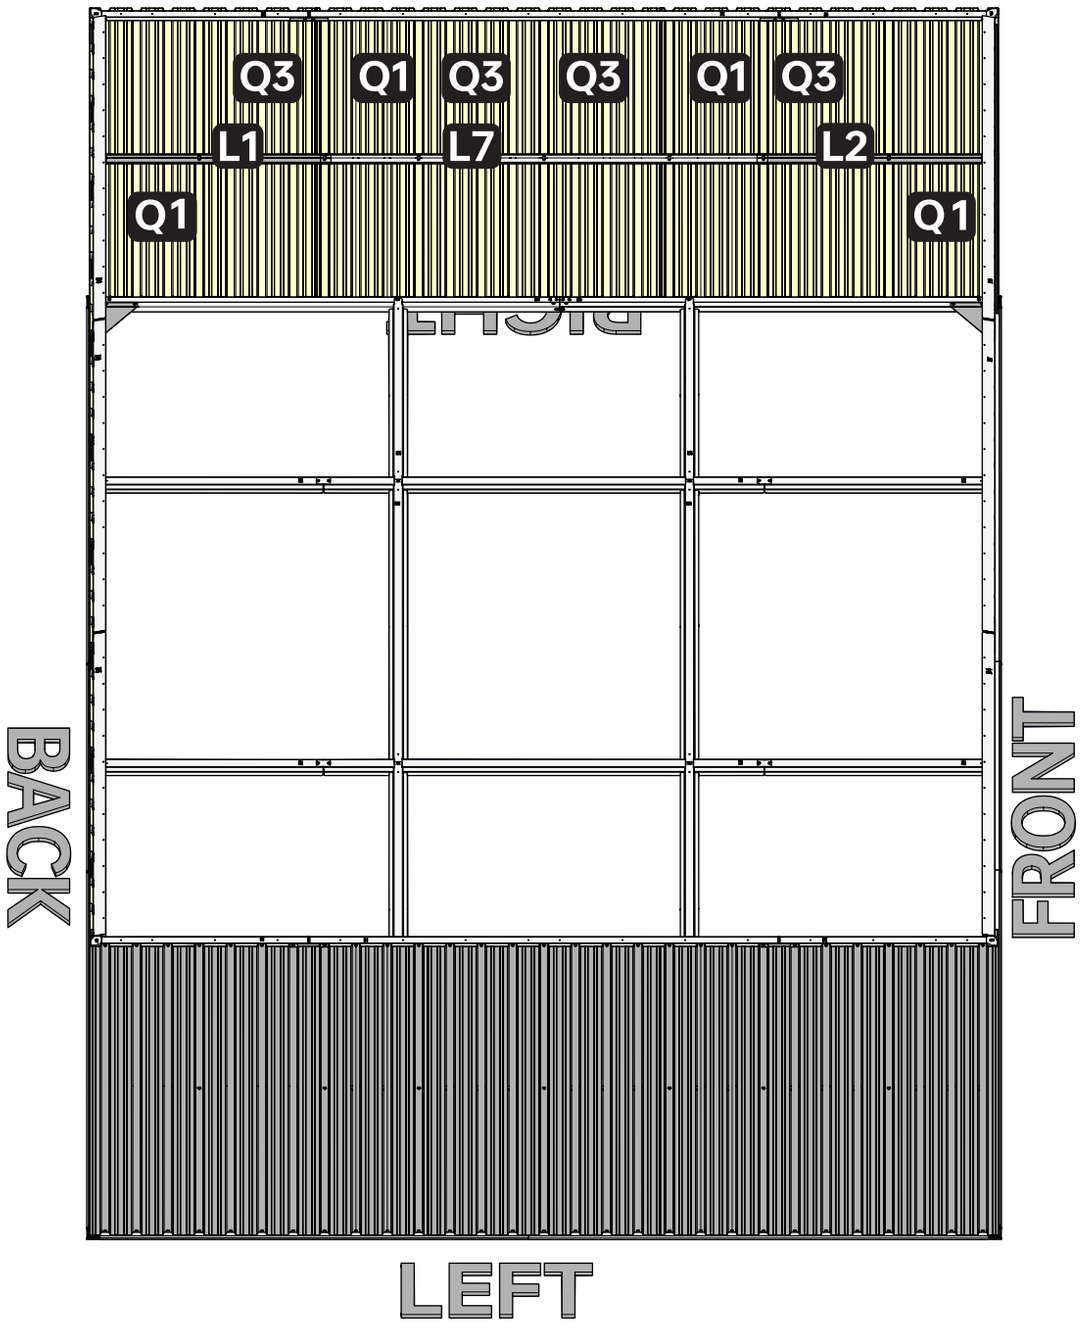


8

Part	Qty
L1	1
L2	1
L7	1
Q1	2
Q3	4
S1	7
S2	7
S3	46
S4	53
S5	7

9

Part	Qty
C3	2
C4	2
C5	2
Q5A	1
Q5B	1
S3	24

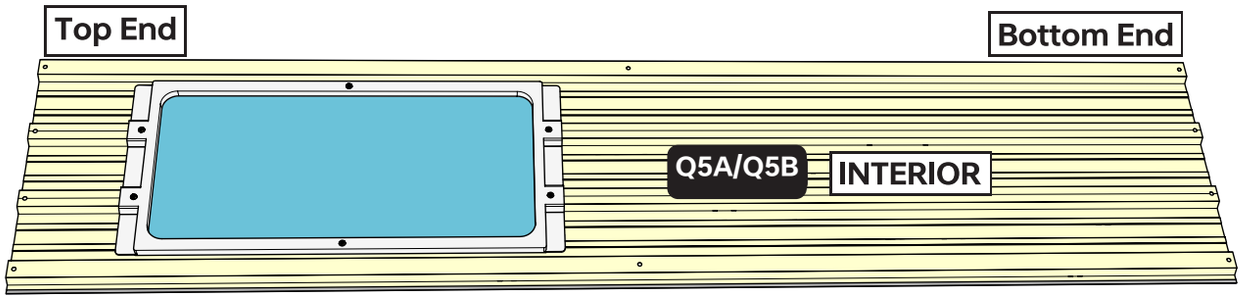


NOTE


IDENTIFYING THE INTERIOR AND EXTERIOR SIDE OF PANELS


Each panel of your shed comes with two distinct sides:


Interior Side: This side is always light gray, providing a uniform look inside your shed, regardless of the exterior color you choose.

Exterior Side: This is the side that showcases the color you selected for your shed, facing outward.

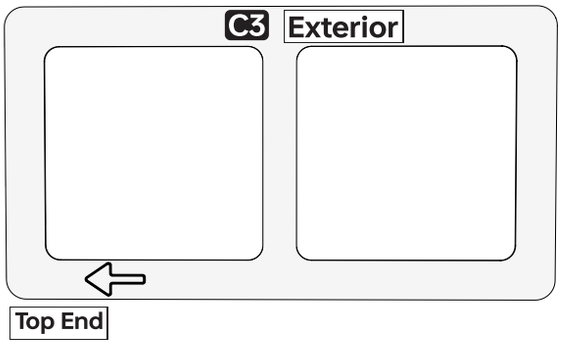

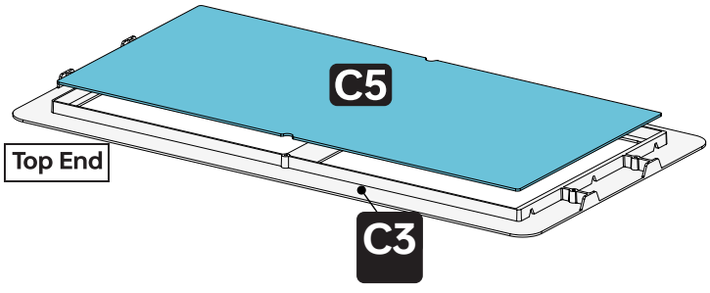

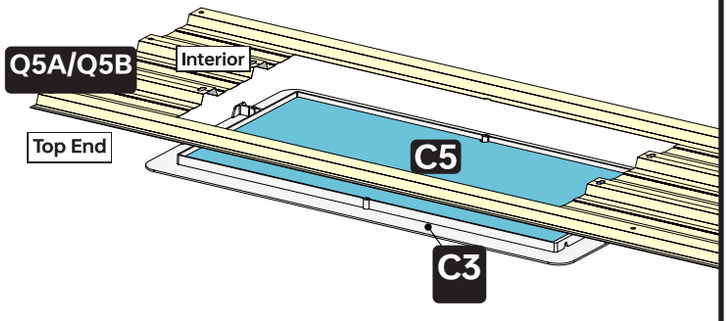

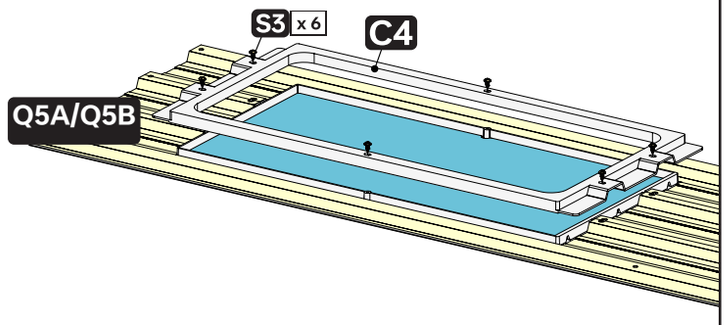

NOTE

WINDOW PANE PREPARATION:

Remove the protective film from window pane C5.

WALL COMPONENT C4 ORIENTATION:

When positioning wall component C3, locate the arrow imprint on its exterior side.
Ensure this arrow is pointing upwards.
Align the top end of C3 flush with the top end of wall panel Q5A/Q5B.

COMPONENTS C3 AND C5:


Components C4 and window pane C5 are symmetrical. Either end of these components can be oriented upwards.
Window pane C5 is designed for universal fitting. Either side can face the exterior of the shed.


REPEAT ASSEMBLY:

Repeat the above steps to assemble four sets of this structure.

10

Part	Qty
L6	1
L8	2
Q1	5
S1	7
S2	7
S3	42
S4	49
S5	7

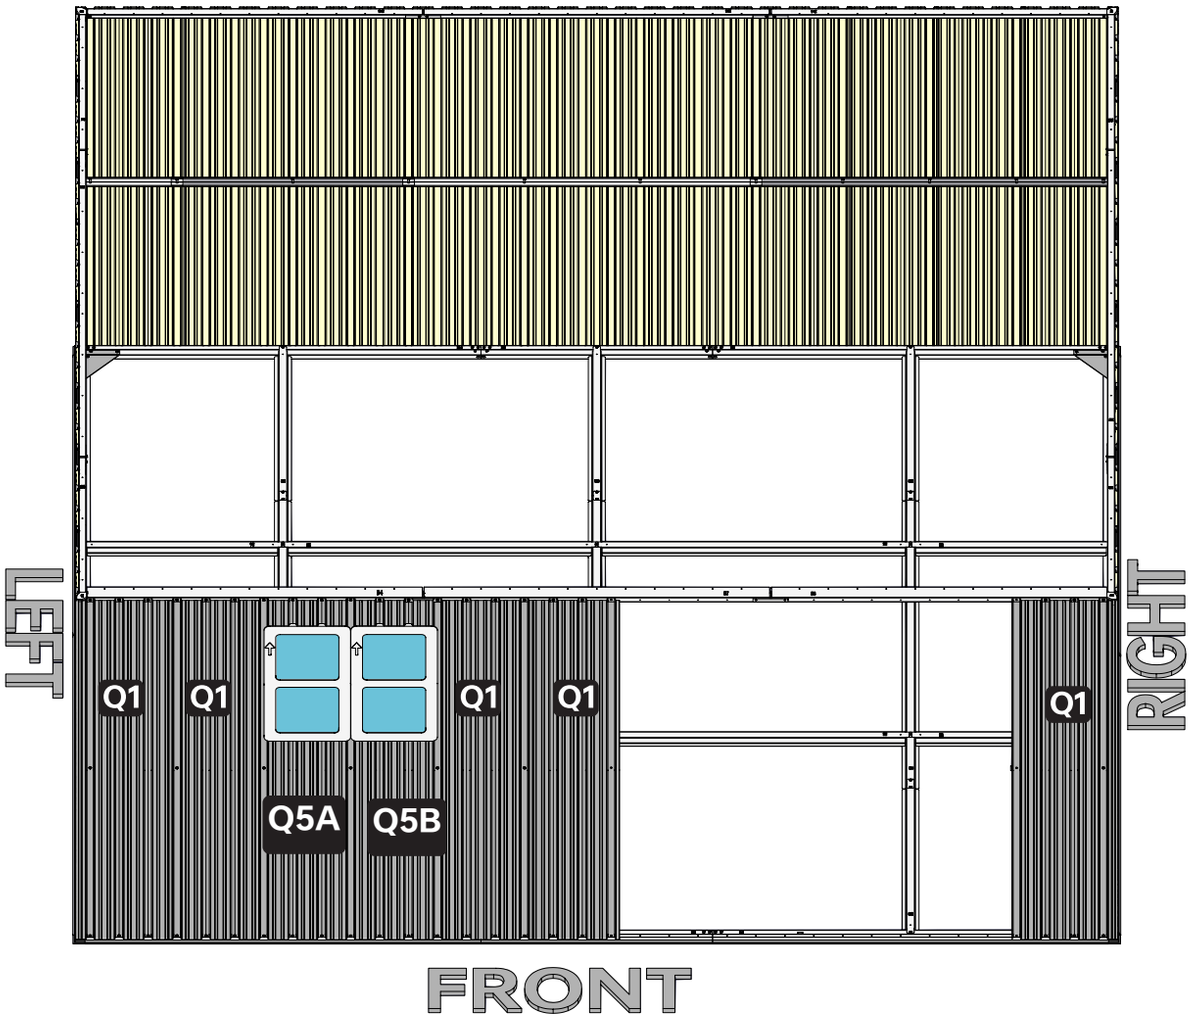

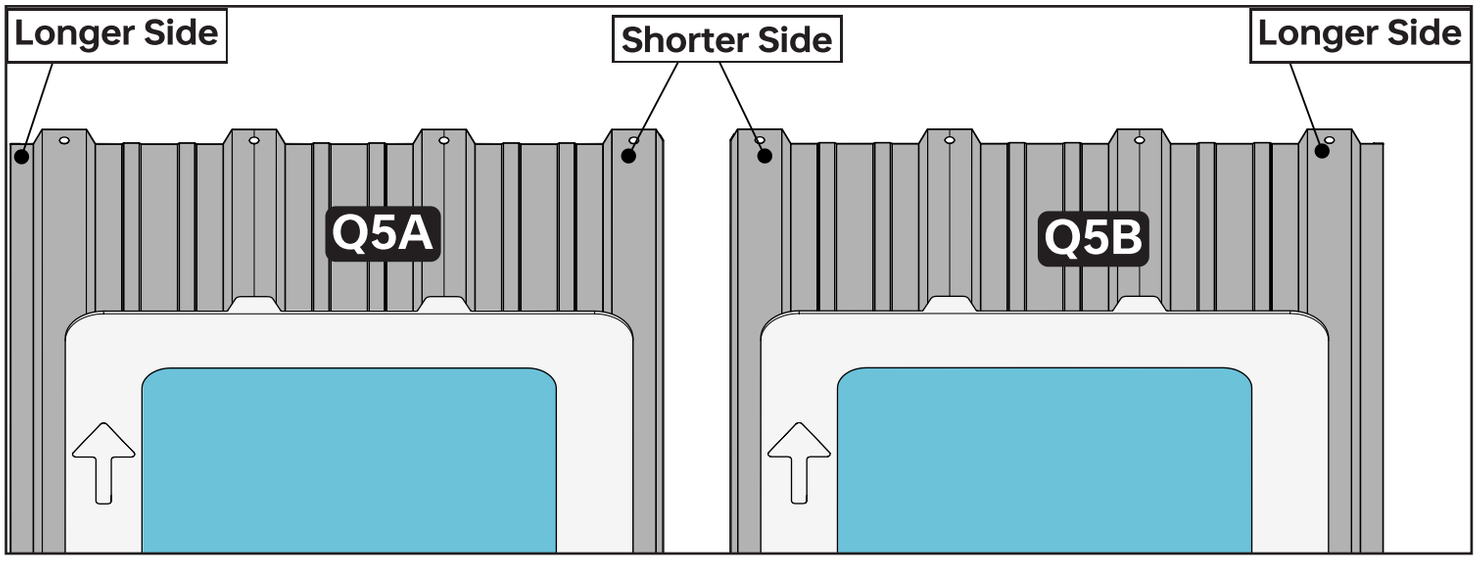

NOTE

Before you begin assembling the front side of the shed, it's important to identify the longer side and the shorter side of the Q1 and Q5 panels.
Carefully examine the Q1 and Q5 panels: Notice that the left and right edges of panels are not symmetrical. One edge has a longer section, while the other has a shorter section.

IDENTIFYING AND ORIENTING Q5 PANELS (Q5A AND Q5B)
Since the window must always be at the top, therefore, there are two versions of the Q5 panel: Q5A and Q5B.
(Continued on next page)

Note


Identifying Q5A and Q5B: The panels are only labeled “Q5,” so you’ll need to differentiate them yourself:

Q5A: Has the “longer side” on the left when the window is at the top.

Q5B: Has the “longer side” on the right when the window is at the top.

Panel Order: When assembling the four Q5 panels, follow the order shown on previous page to ensure correct placement. Make sure the “longer side” of each Q5 panel is oriented correctly.

Tip: Separate the Q5 panels into Q5A and Q5B before you begin assembly to make the process easier.

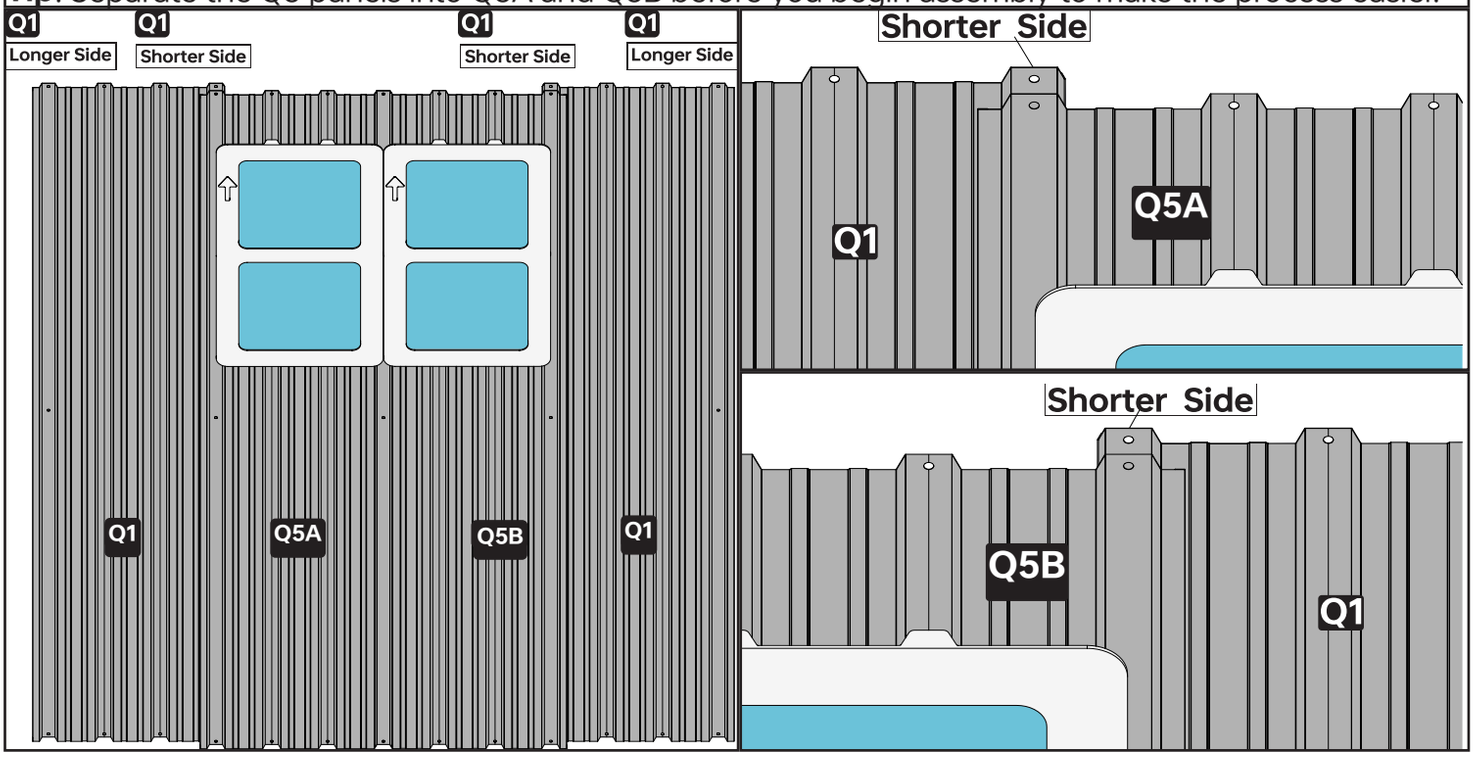


Note

Q1 ORIENTATION


For this step, position two Q1 panels **NEXT TO** Q5A and Q5B as shown above. Ensure the longer and shorter sides are oriented as indicated in the diagram. This is important for proper alignment.


Note that this rule only applies to the two Q1 panels next to Q5A and Q5B. for the Q1 panels used elsewhere, you can ignore the long side and short side rule.

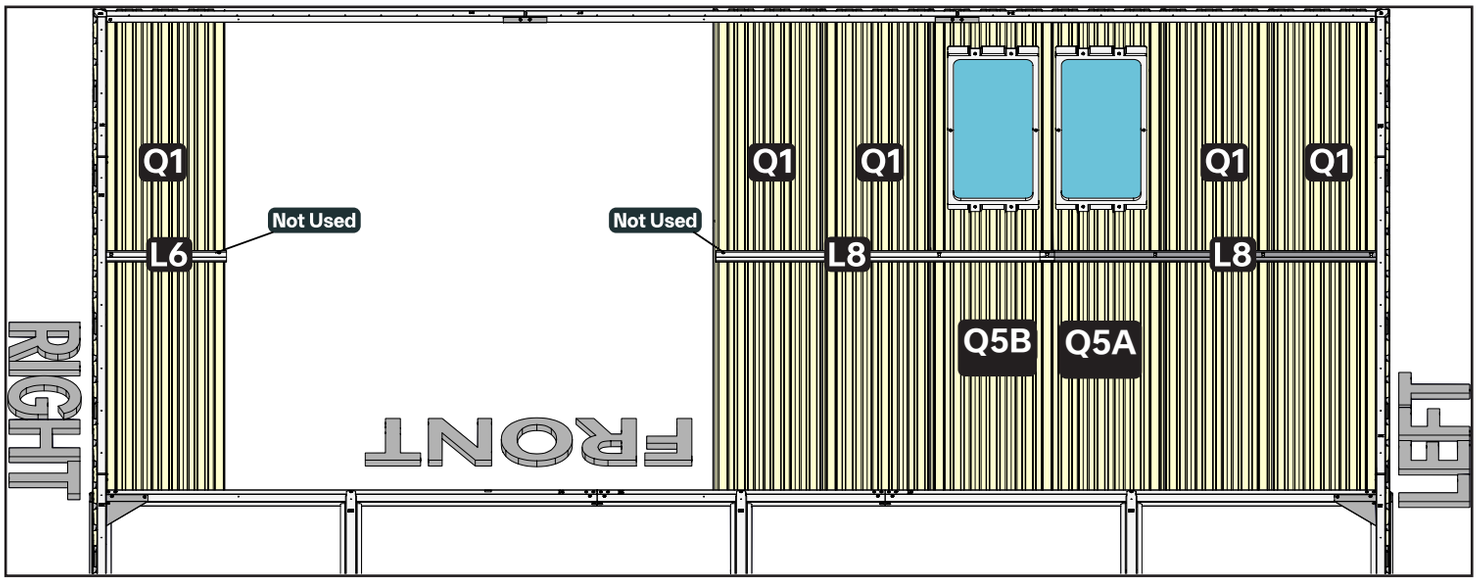

11

Part	Qty
CM	1
LL	1
LR	1
S1	2
S2	2
S3	21
S4	13
S5	2

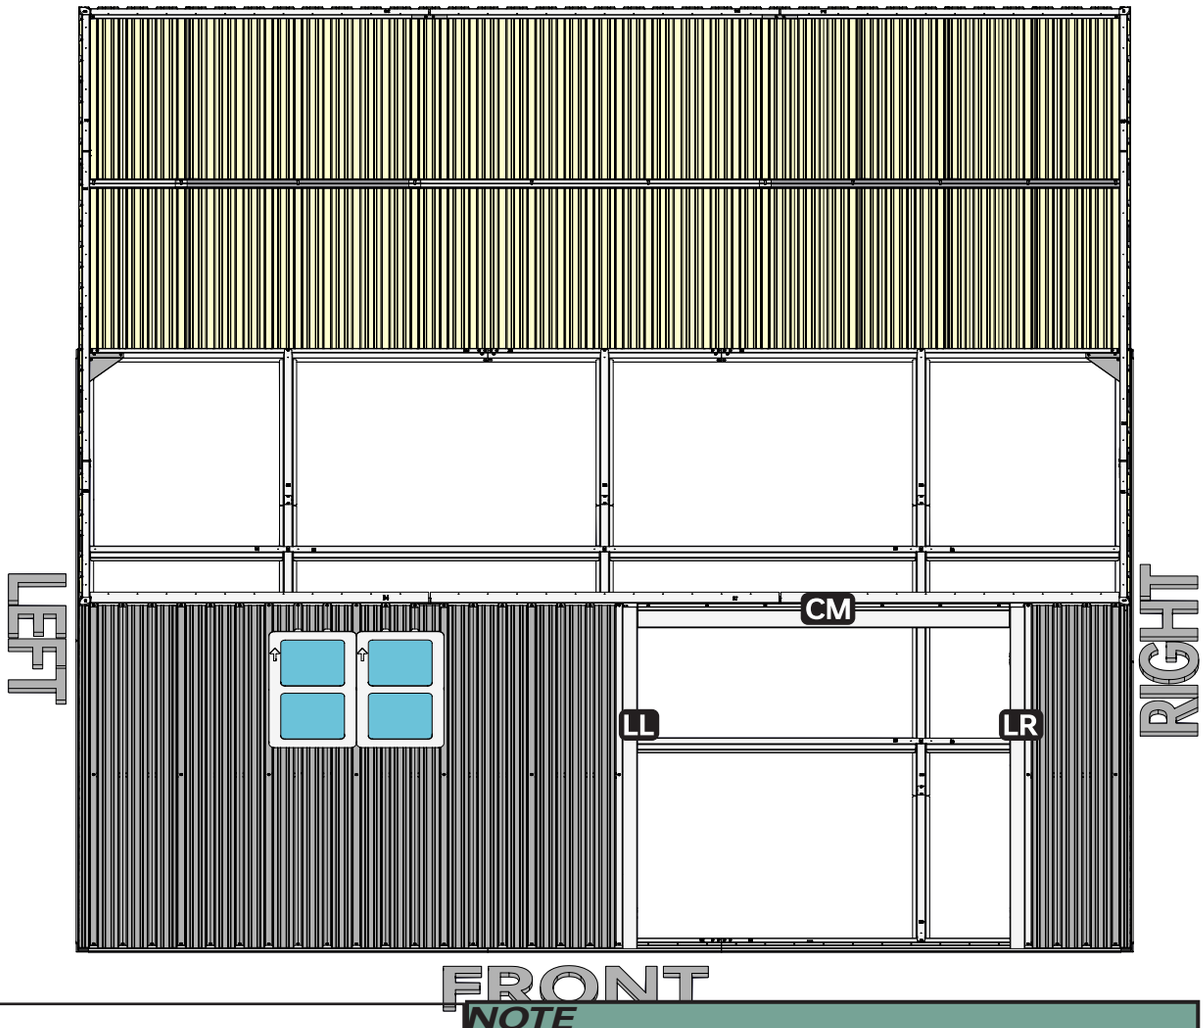

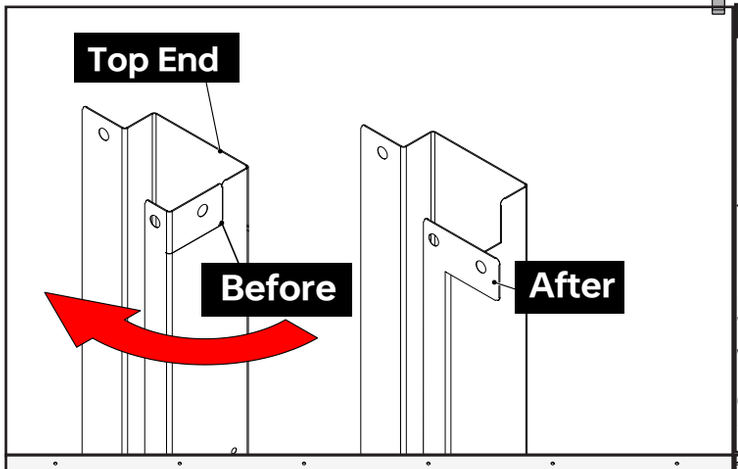

NOTE

PREPARING LL AND LR:


Ensure you can clearly distinguish the top and bottom ends of both LL and LR.


Using pliers (or protected hands), carefully bend the top end of both parts.

EXTERIOR AND INTERIOR MARKINGS


During the attachment of LL and LR, you will be working inside the shed.


We will use “exterior” and “interior” markings to distinguish between steps performed outside and inside the shed respectively.

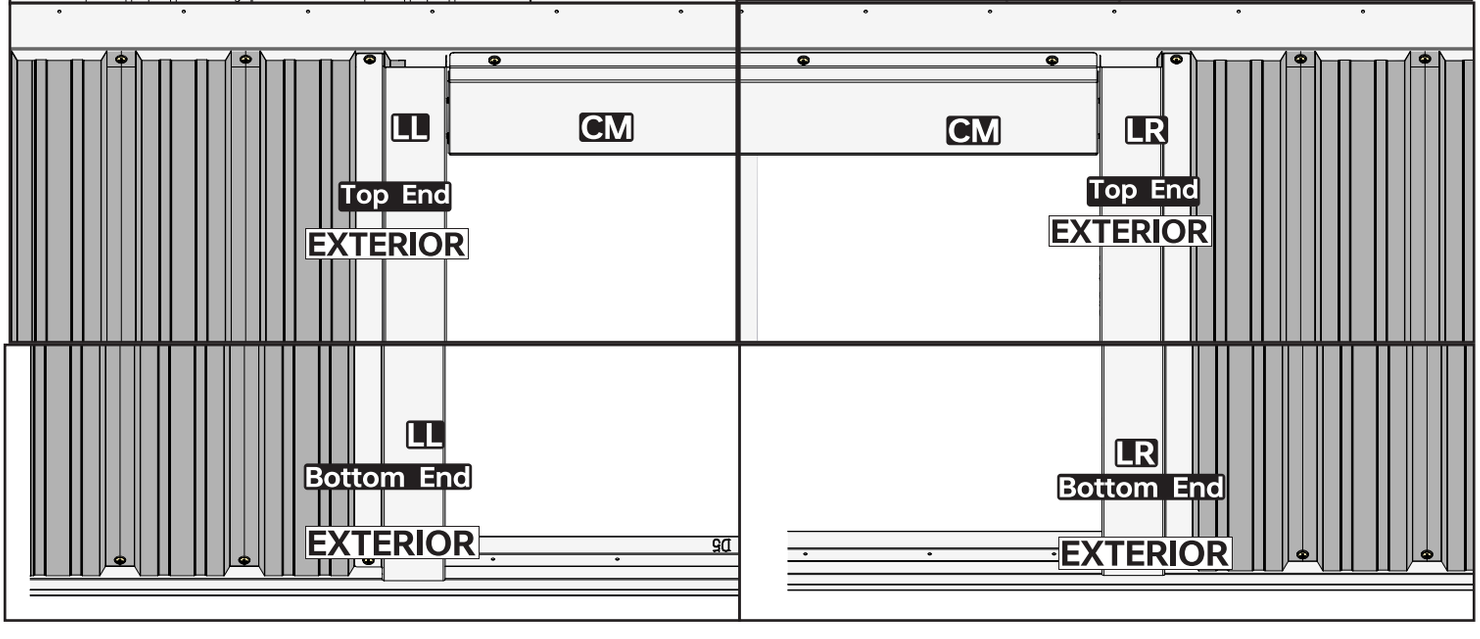

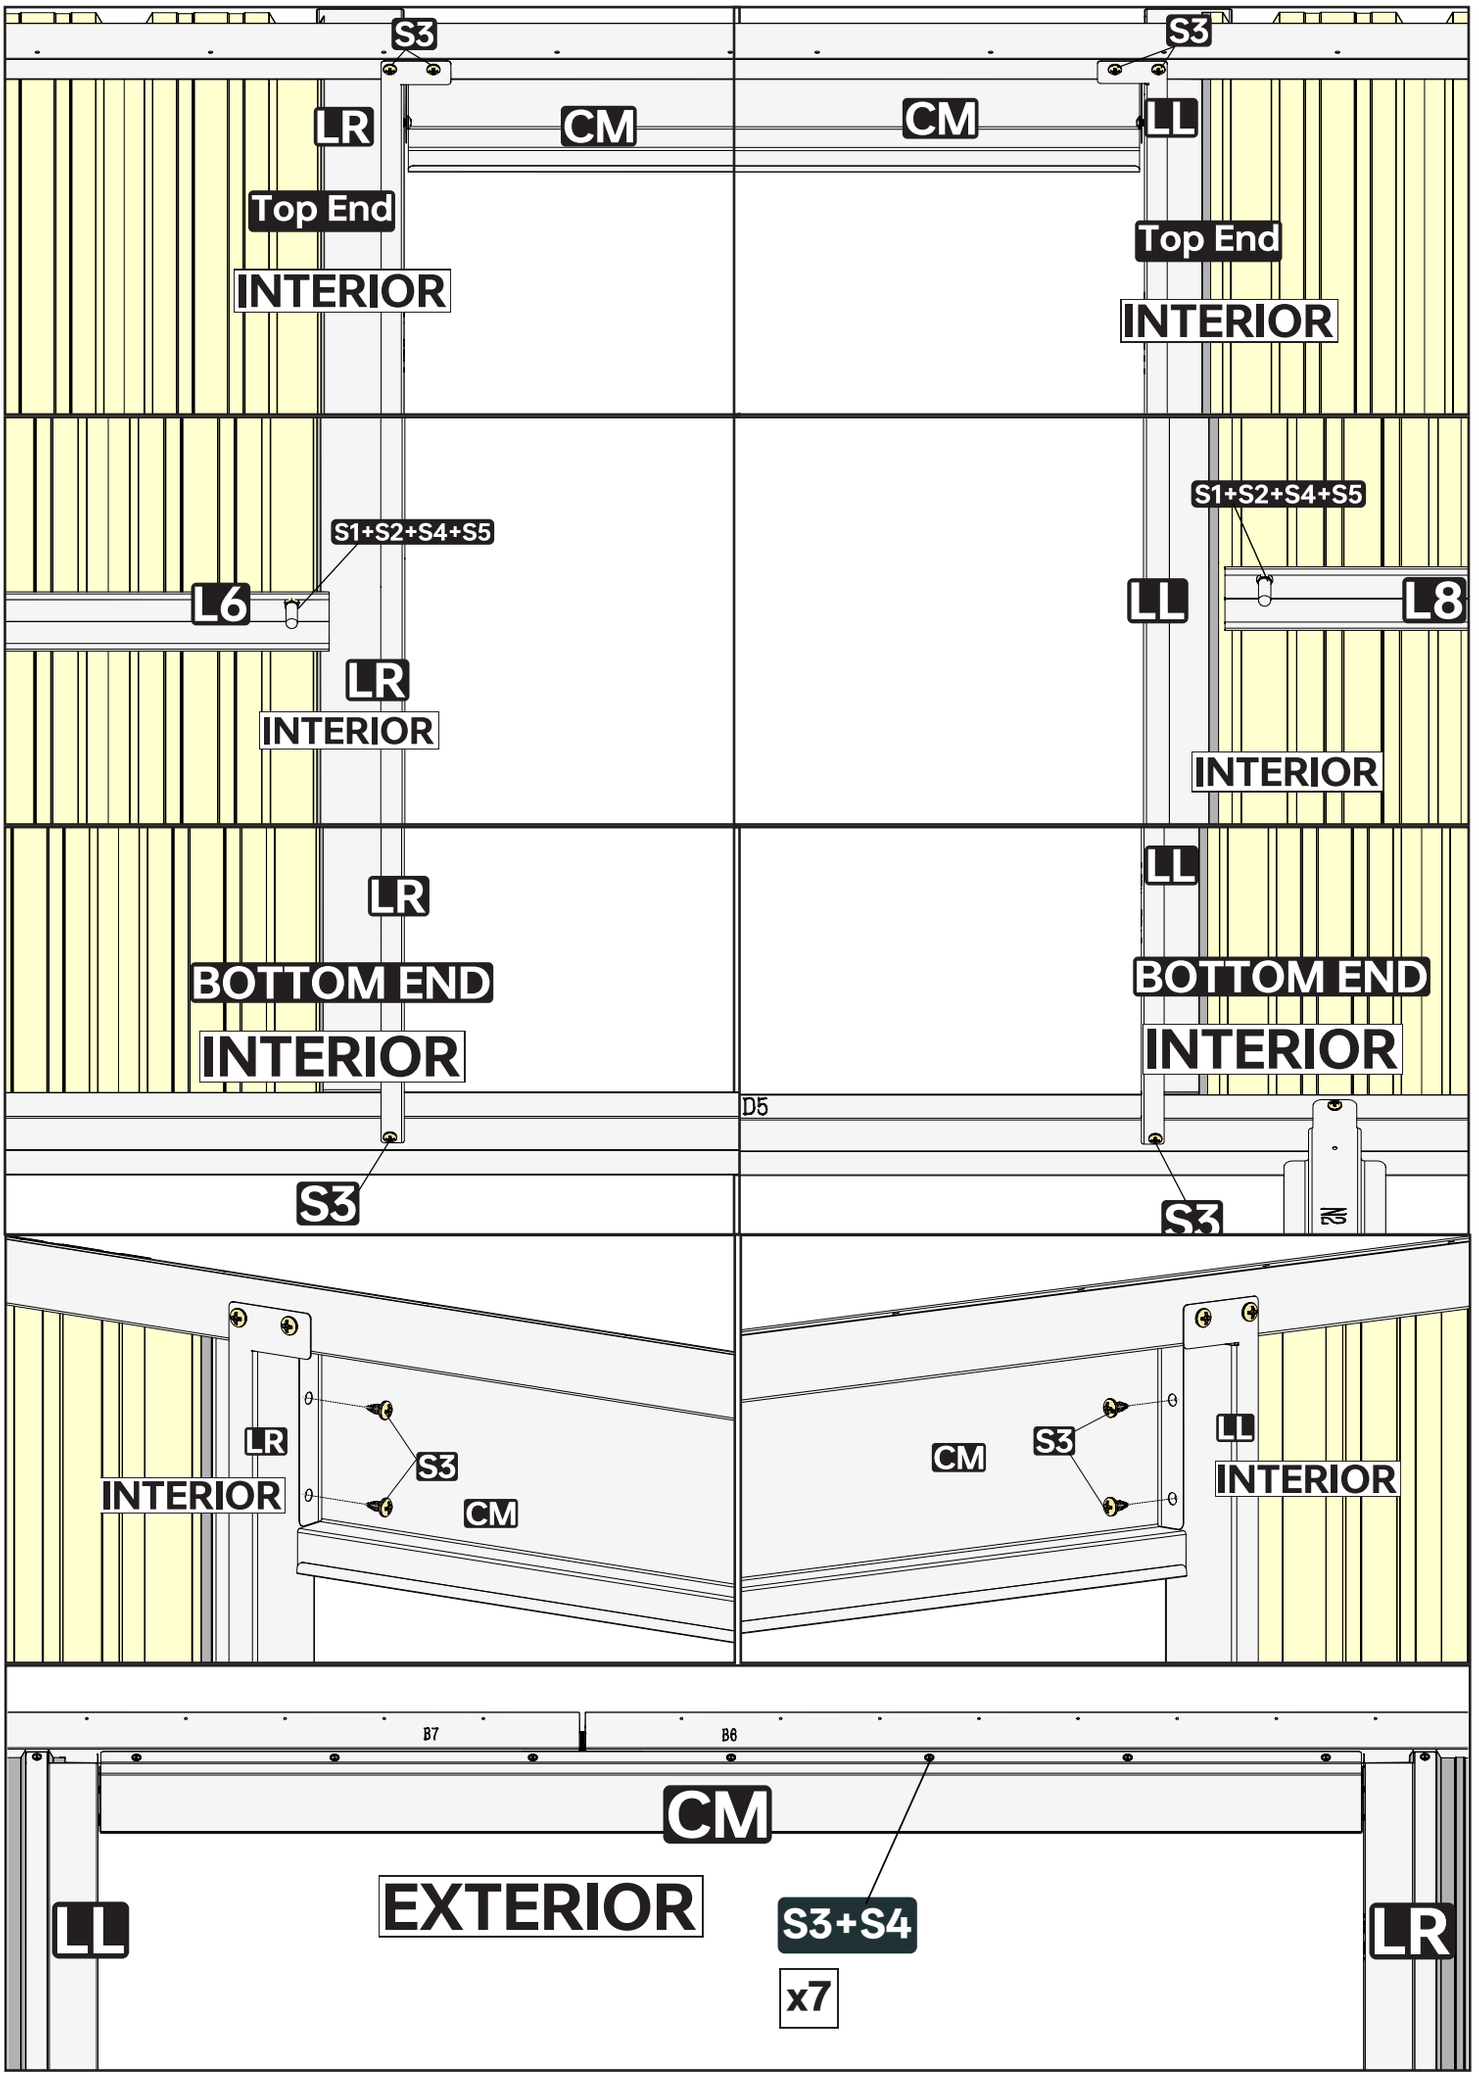
S3
S3
LR
CM
CM
LL
Top End
INTERIOR
Top End
INTERIOR
S1+S2+S4+S5
S1+S2+S4+S5
L6
LL
L8
LR
INTERIOR
INTERIOR
LR
LL
BOTTOM END
INTERIOR
BOTTOM END
INTERIOR
D5
S3
S3
LR
INTERIOR
S3
CM
CM
S3
LL
INTERIOR
B7
B6
CM
EXTERIOR
S3+S4
LL
LR
x7


05 Roof

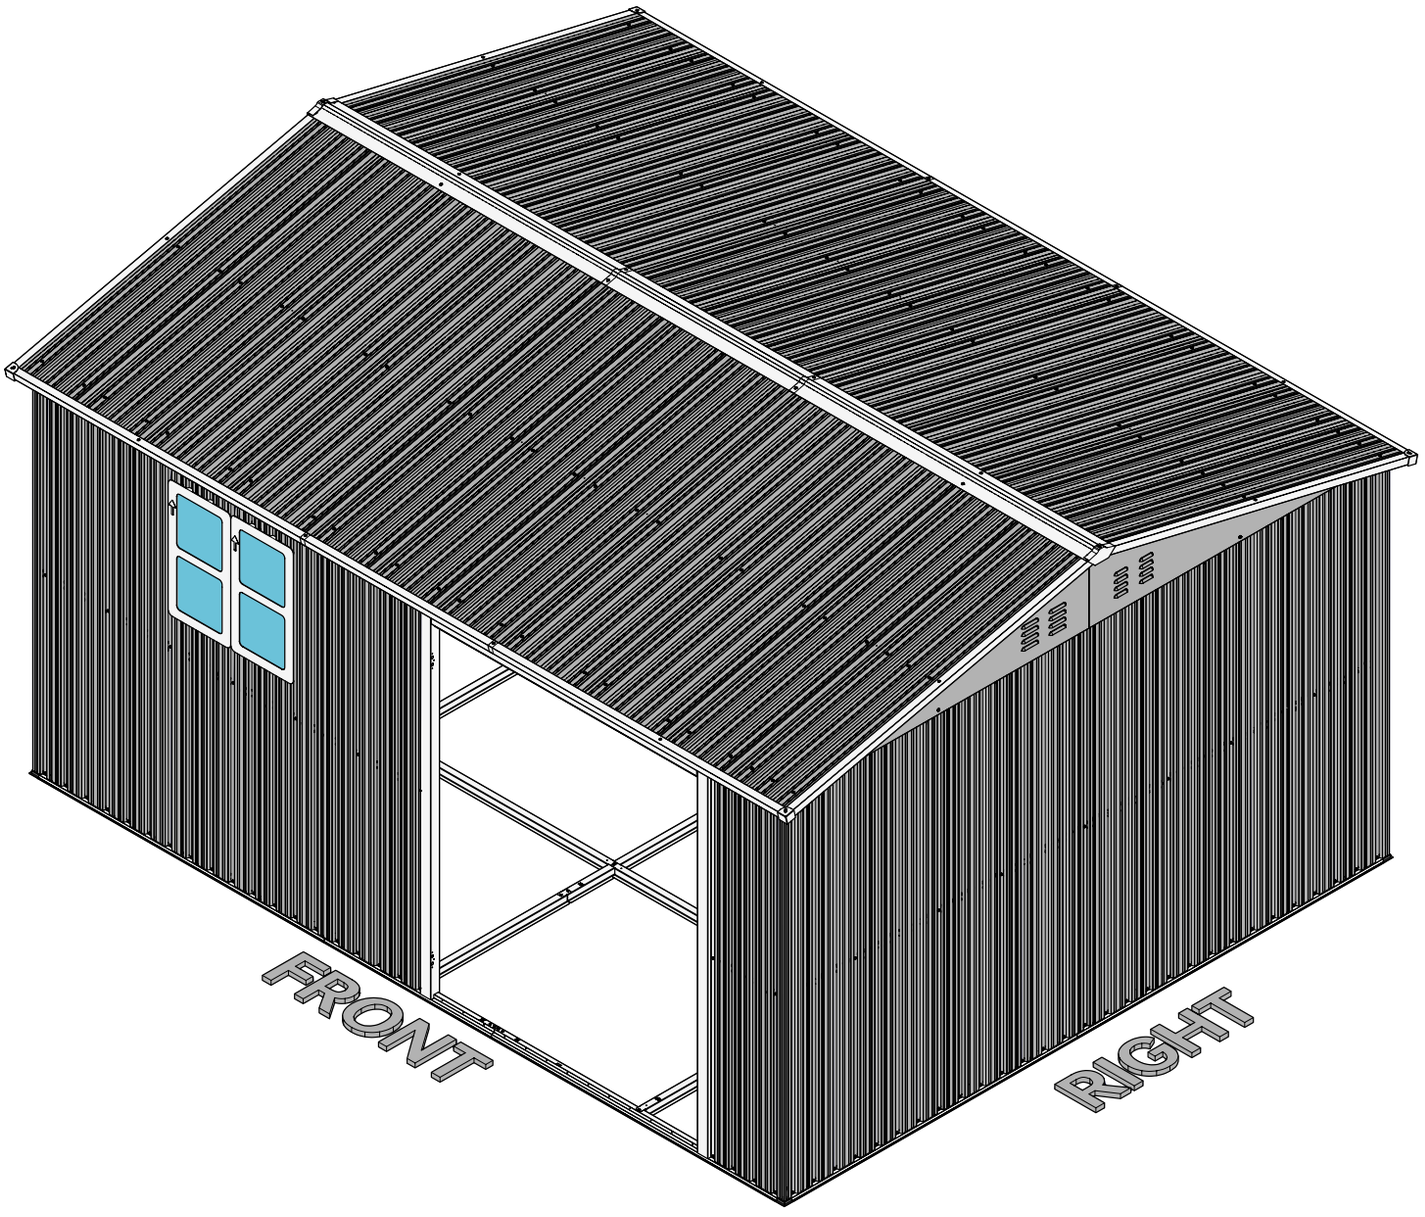


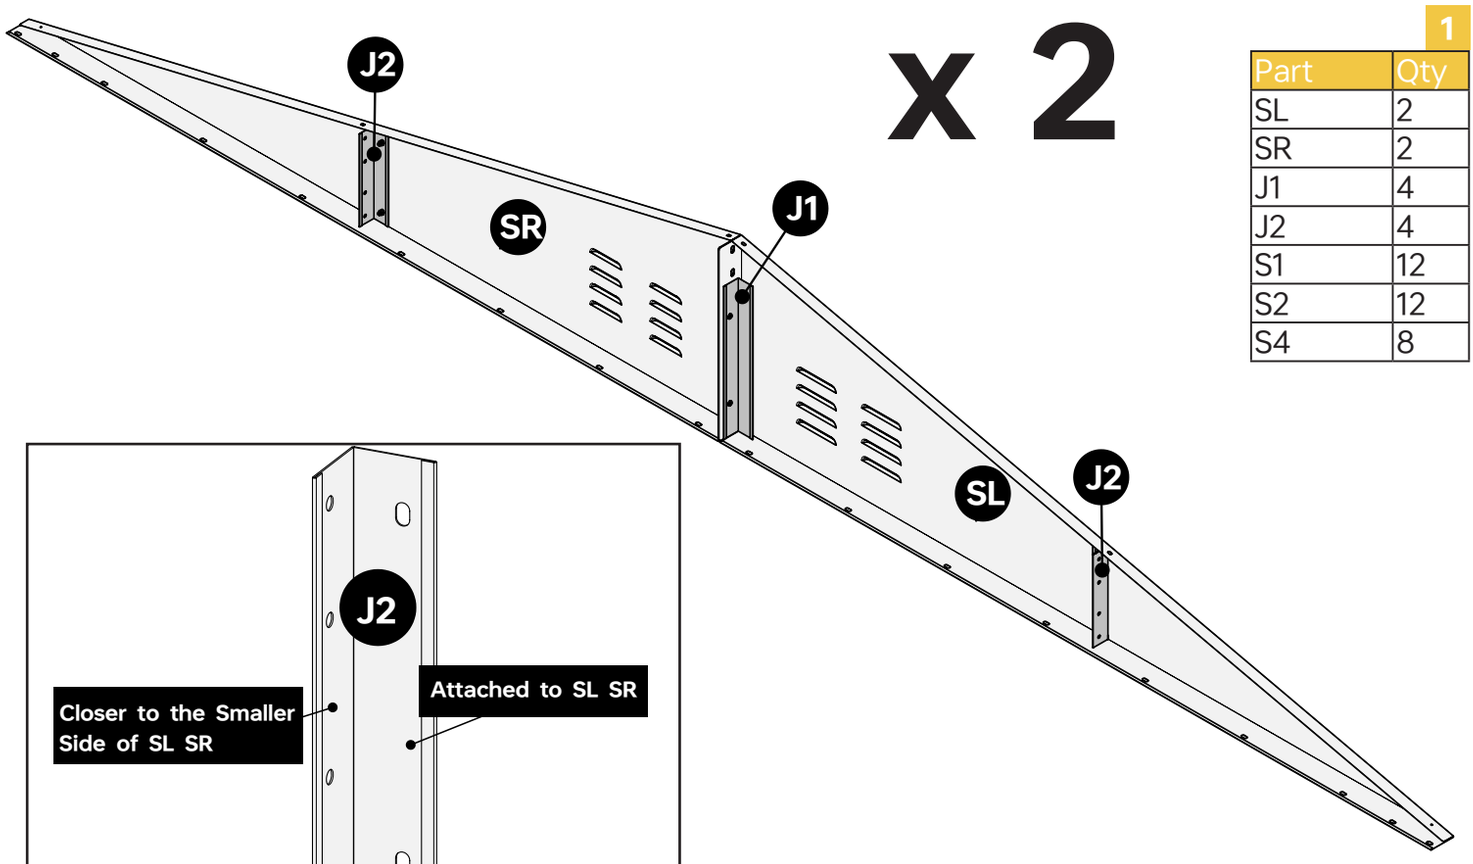


1

Part	Qty
SL	2
SR	2
J1	4
J2	4
S1	12
S2	12
S4	8

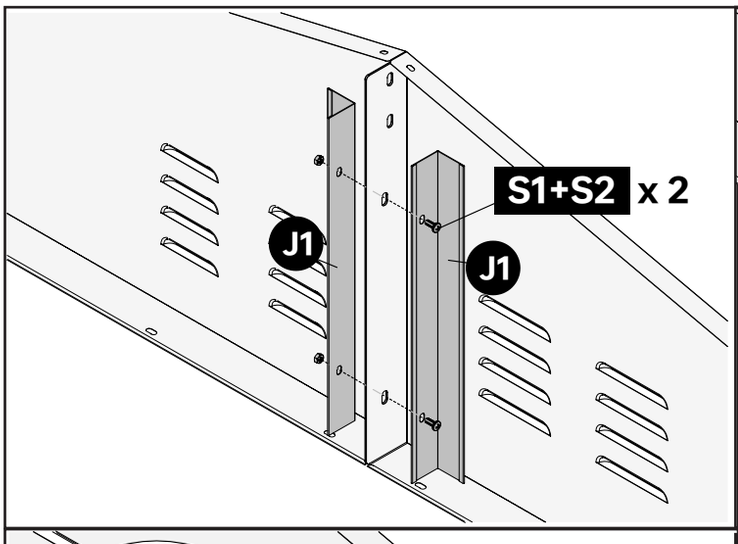

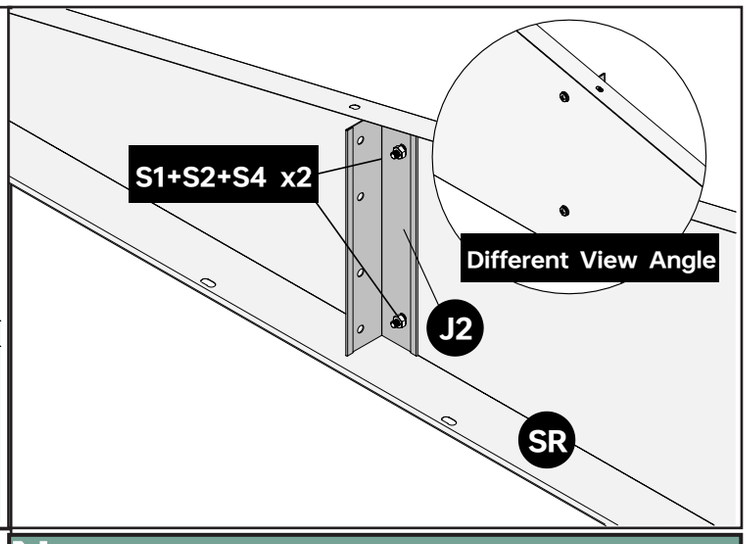

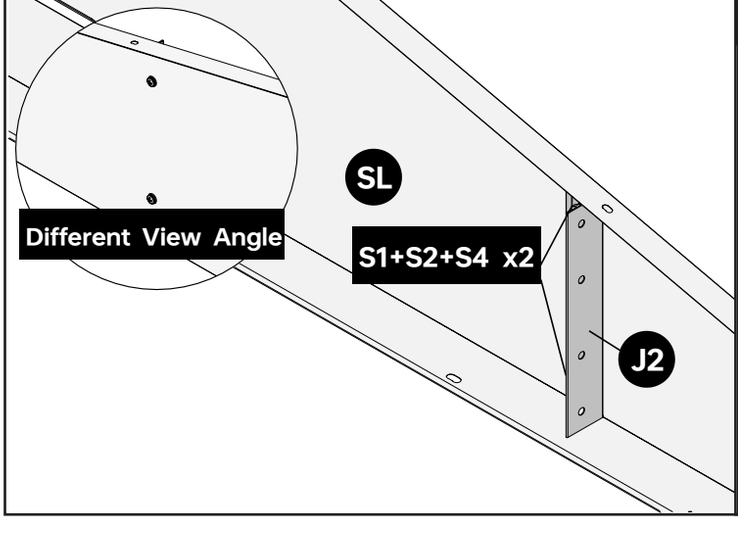

Note


Bracket J2 Orientation:
J2 has two distinct sides. Position J2 so the side with four smaller screw holes is closer to the smaller end of SR/SL, as shown in the diagram.


Attaching J1 to SL/SR:
When attaching J1 to SL/SR, use the lower two screw holes on SL/SR. Leave the top two unused.

Repeat:
Repeat this process to create two complete sets of SL+SR assemblies.

2

Part	Qty
H1	2
H2	2
H3	2
HL	4
S7	32
S8	32

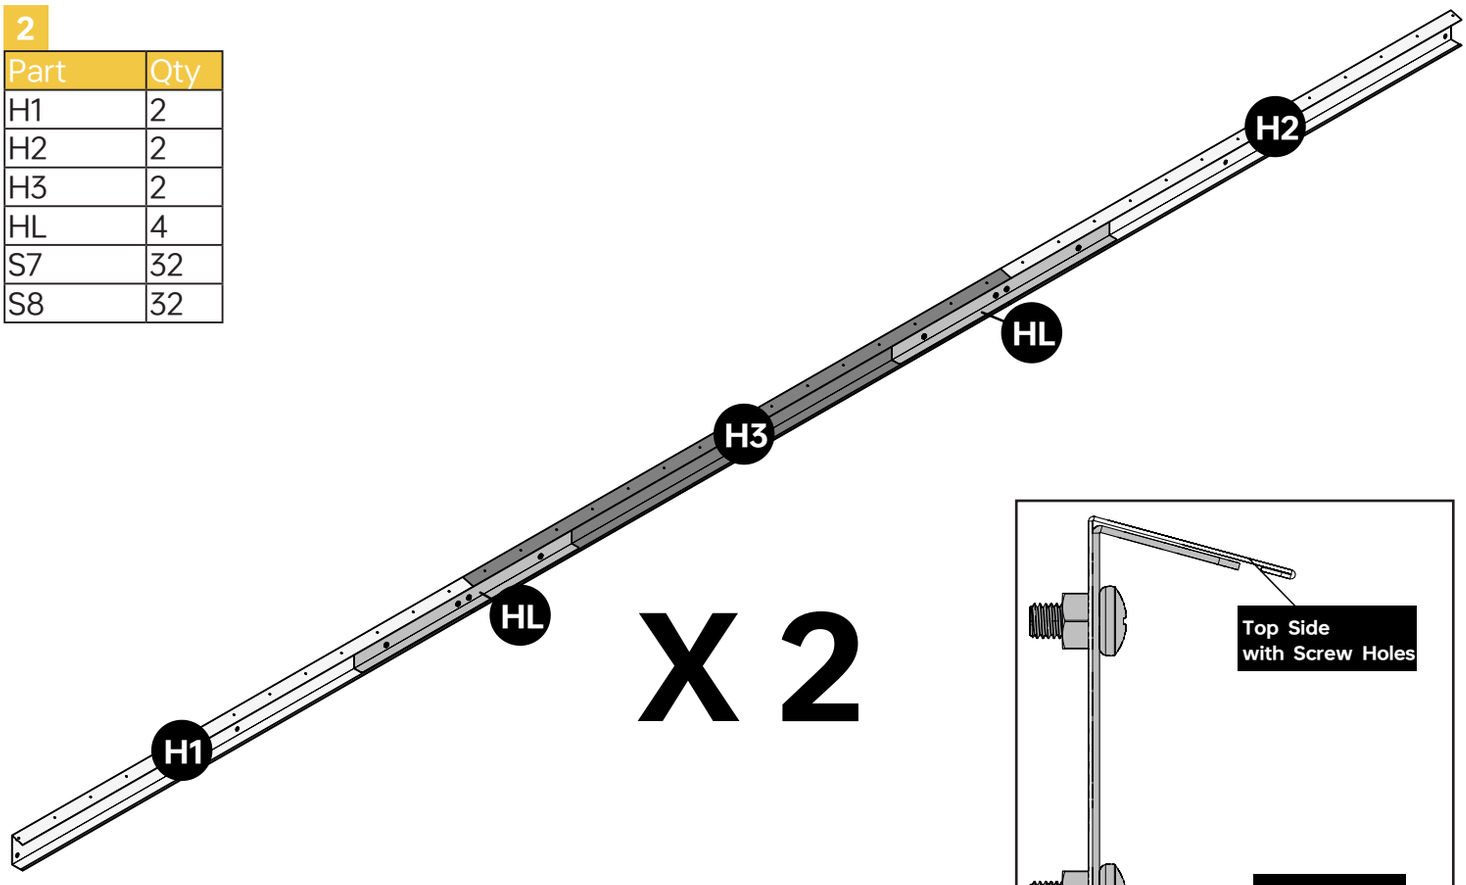

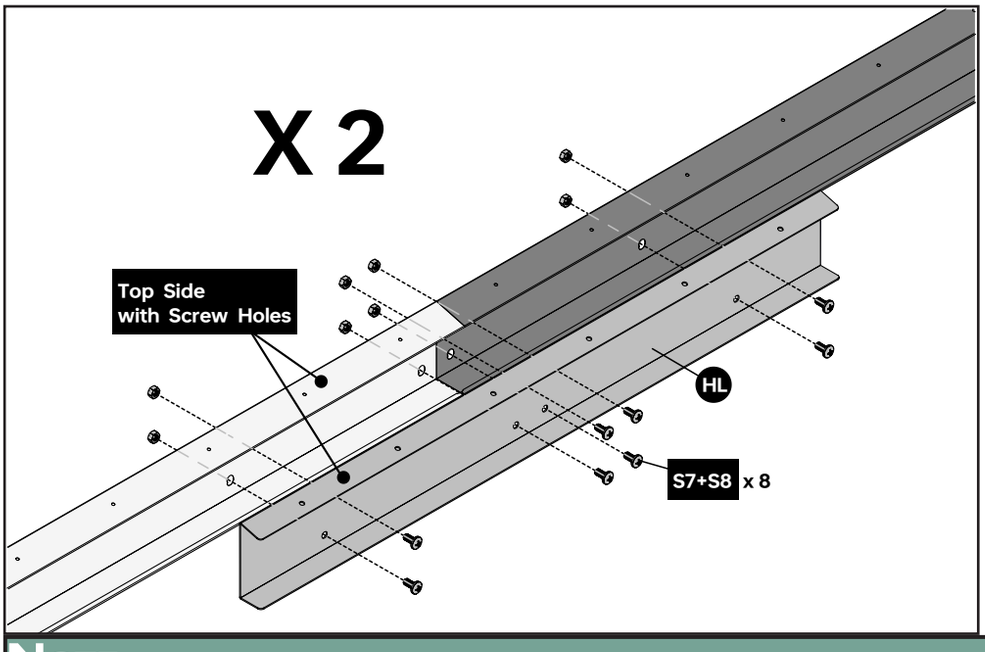


NOTE


Identifying Top & Bottom Sides of H-Parts:
Parts H1, H2, H3, and HL each have two distinct sides.
The side with the slanted edge and screw holes is the top side.
The opposite side is the bottom side. Please ensure these are oriented correctly as shown in the diagram.

Connecting H1~H3 and HL:
Crucial Layout: The arrangement of H1, H2, H3, and HL shown in Diagram above is the only correct layout. Follow it precisely.
Use Screw (S7) and Nut (S8) to securely connect H1, H2, H3, and HL together according to the diagram.
Repeat for Second Set:
Once you have completed the assembly for the first set, repeat this entire step to create a second, identical set of connected H1+H2+H3 parts. You will need two of these assemblies for your shed.

3

Part	Qty
H1	2
H2	2
H3	2
HL	4
S7	16
S8	16

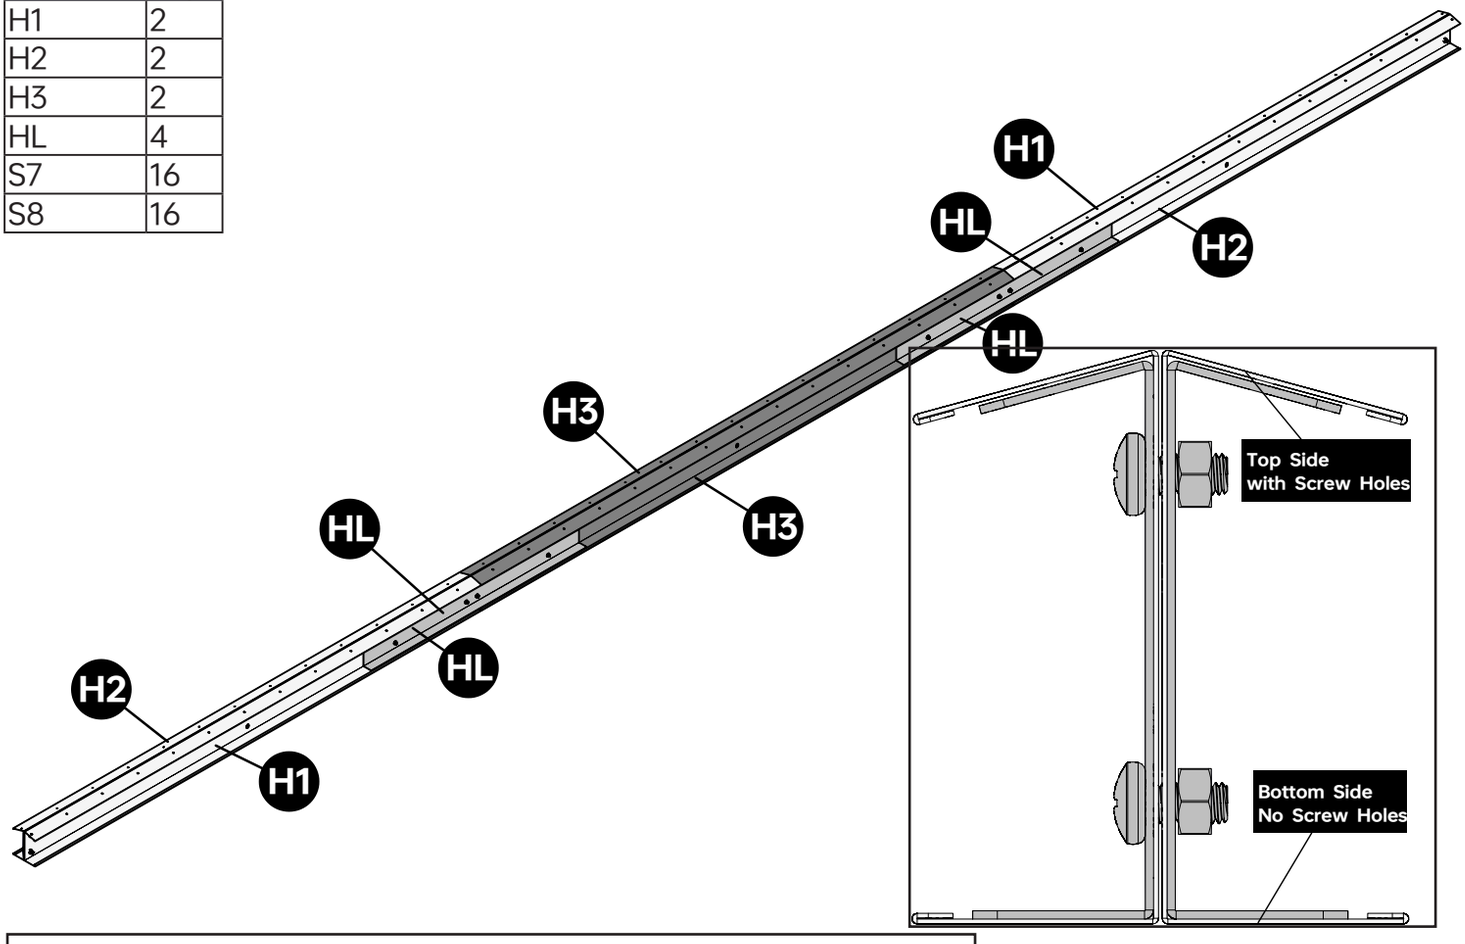

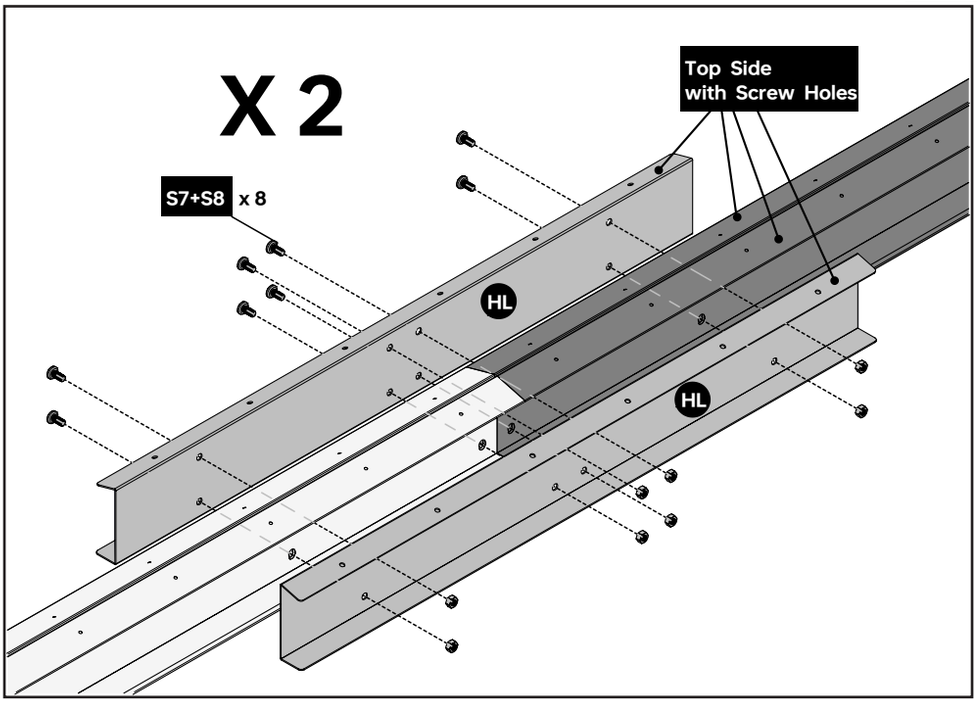

NOTE


ASSEMBLING REMAINING H1~H3 PARTS:


Important Clarification: This step uses the separate H1, H2, and H3 parts that were NOT used in the previous “Roof Support Beams” assembly.

No Disassembly Needed: You do not need to dismantle or alter the H1+H2+H3 structures you completed in the last step. Those are ready for later.

4

Part	Qty
S3	36

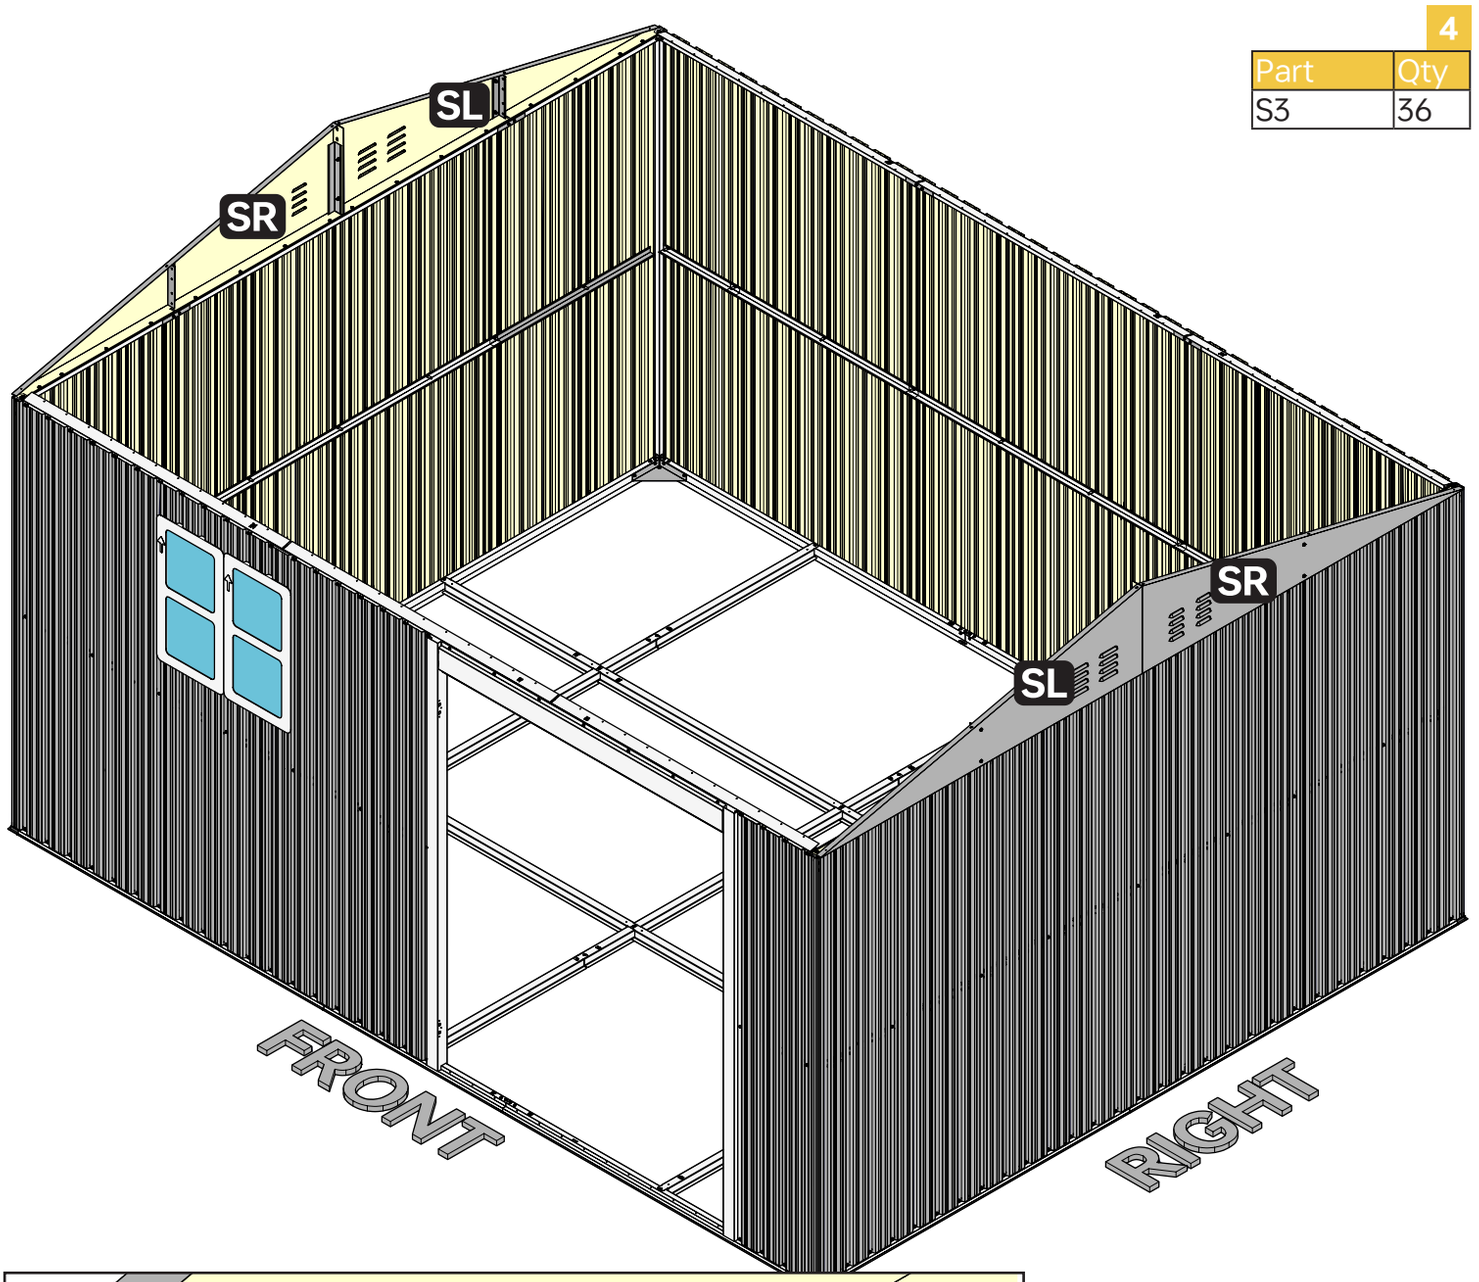

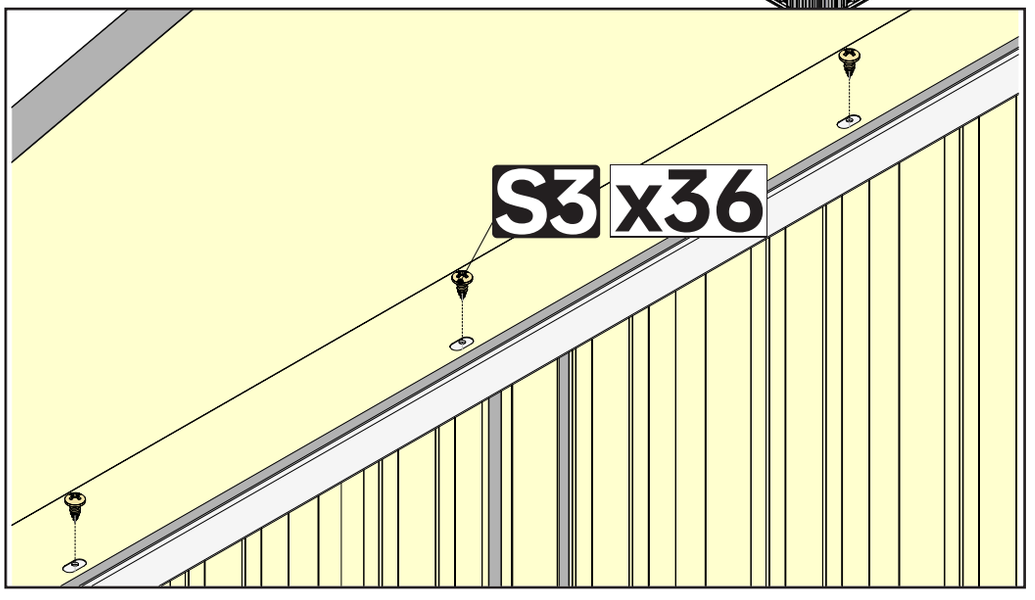



NOTE

Use 36 x S3 to secure one set of SL+SR to the fames. No S4 is needed.

5


Part	Qty
S7	12
S8	12

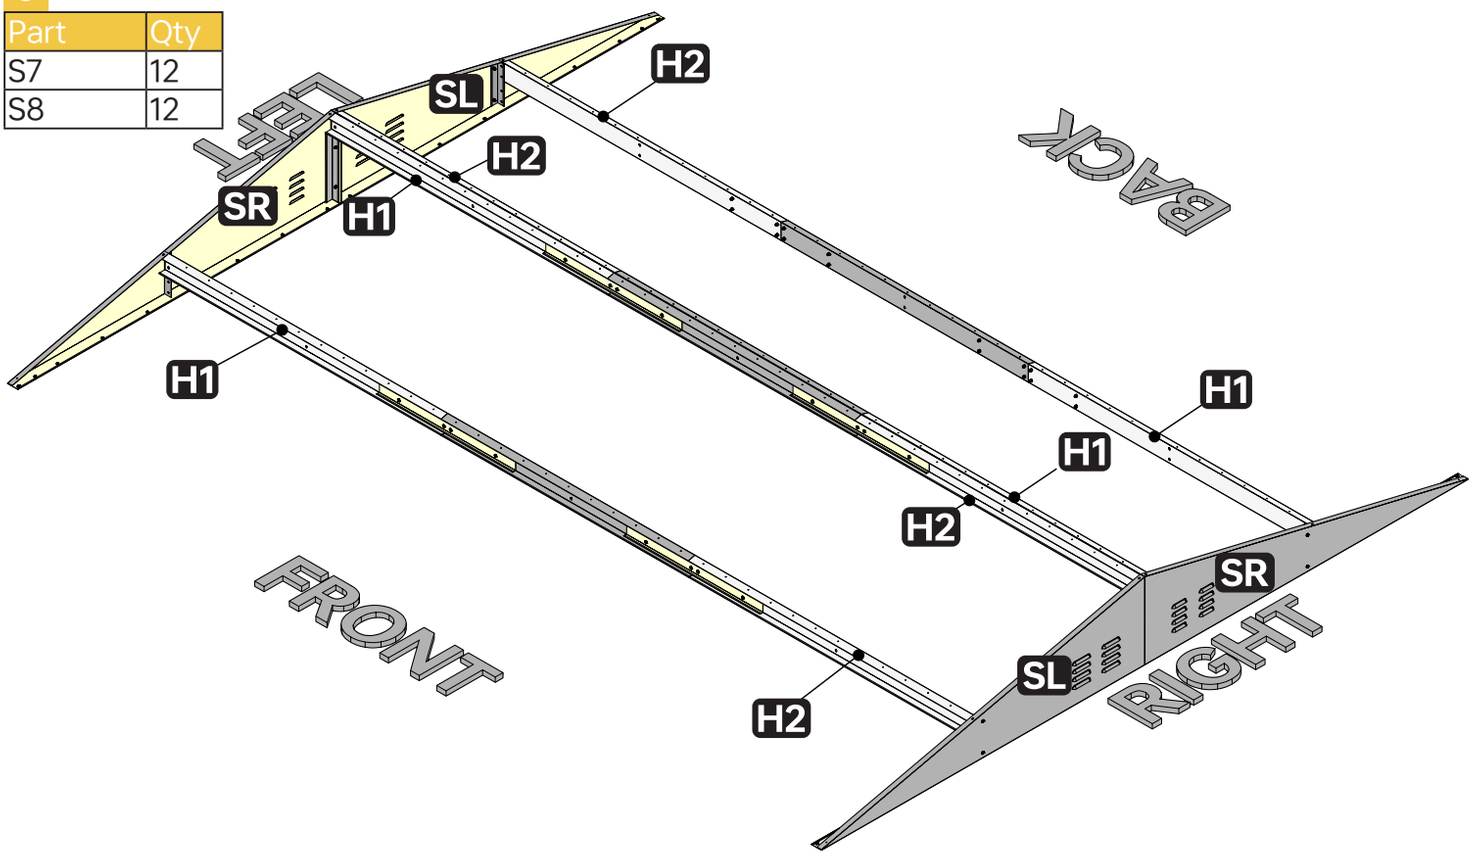


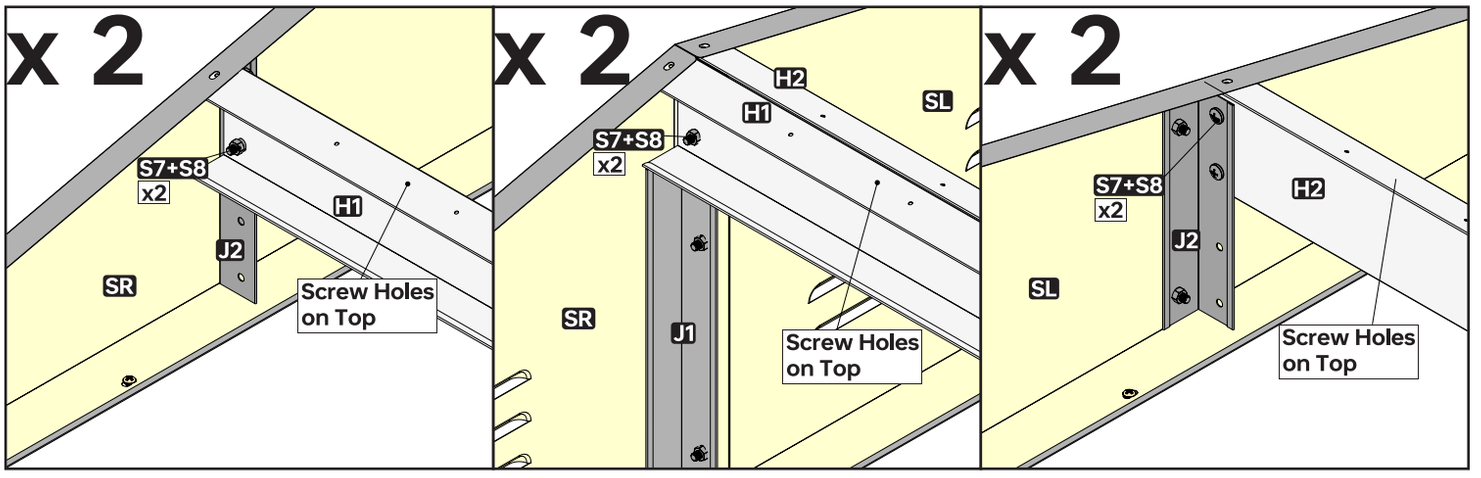


NOTE

Follow these guidelines for a streamlined assembly in this step:
Component Alignment: Always connect component H1 to component SR, and component H2 to component SL.
Orientation: Make certain that the top side of the assembled H1+H2+H3 unit are facing upwards.
Fastening: Secure the H1+H2+H3 assembly to brackets J1 and J2 using screws S7 and S8.
Visibility Adjustment: To improve clarity and focus on the roof panel installation, illustrations from this point onward will not depict the shed walls or base structure.

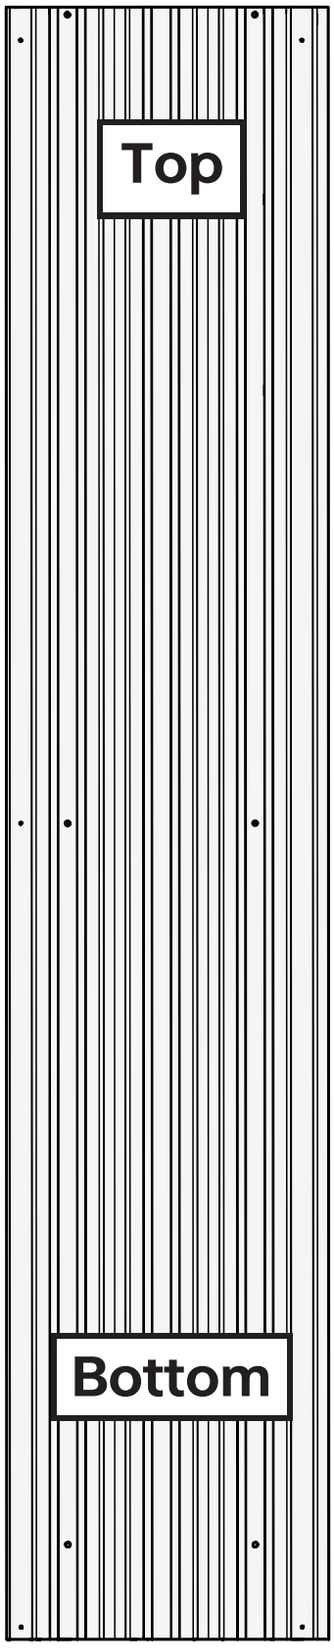

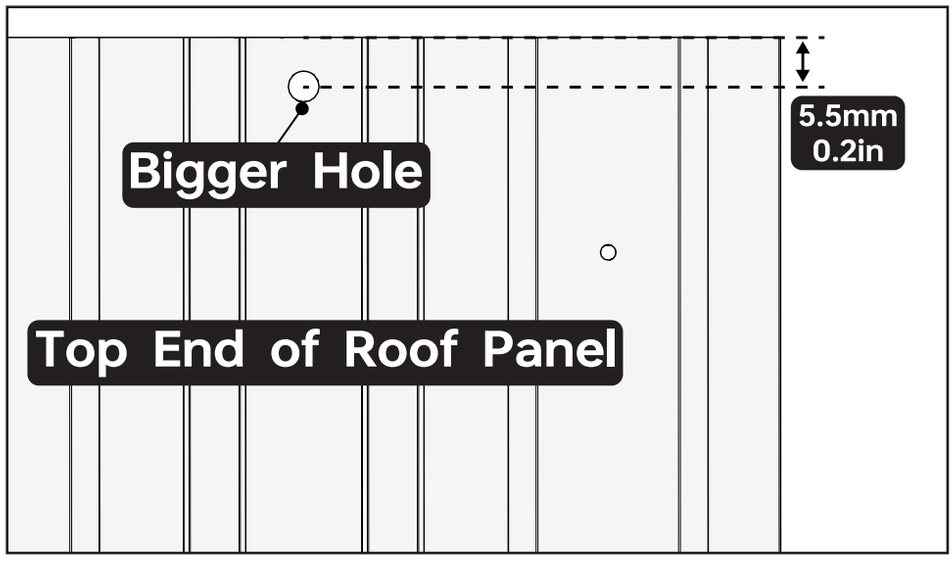

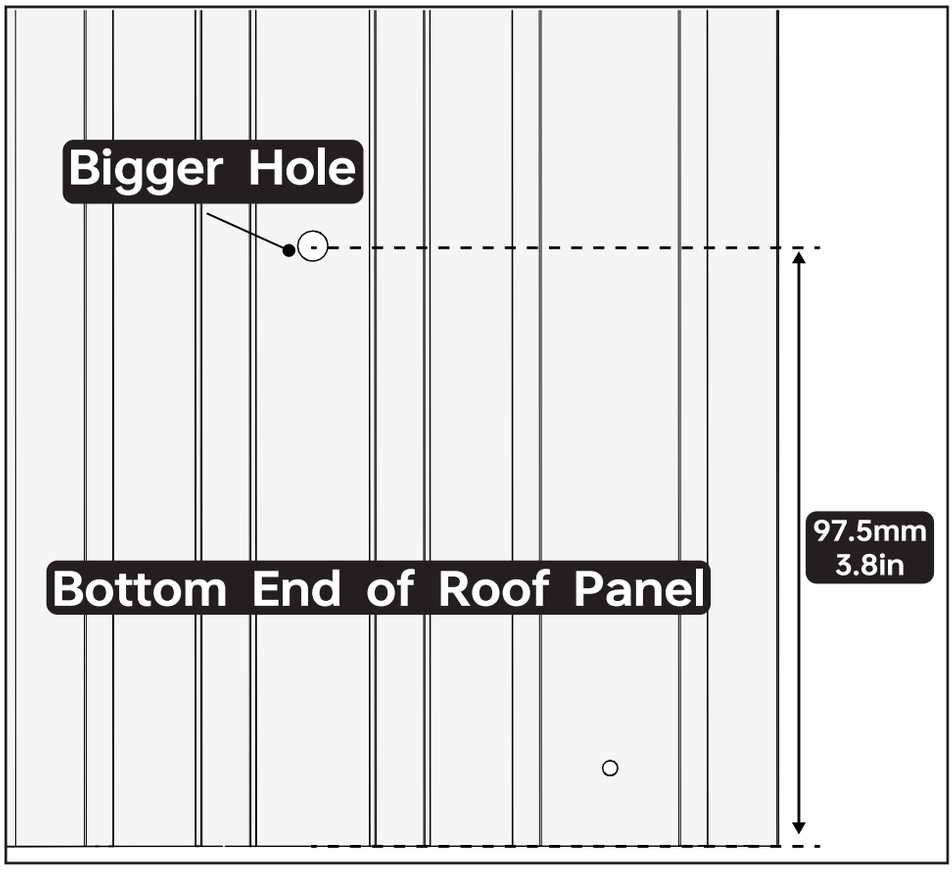

NOTE

IDENTIFYING TOP AND BOTTOM ENDS OF ROOF PANELS W1, W2, AND W3


Roof panels W1, W2, and W3 each have a distinct top and bottom end. Proper orientation is essential for correct assembly:


Top End: The top end of each panel is identified by the larger diameter screw holes being positioned closer from the edge of the panel.


Bottom End: The bottom end of each panel is identified by the larger diameter screw holes being positioned further to the edge of the panel.

7

Part	Qty
W3	1
S3	6
S4	6

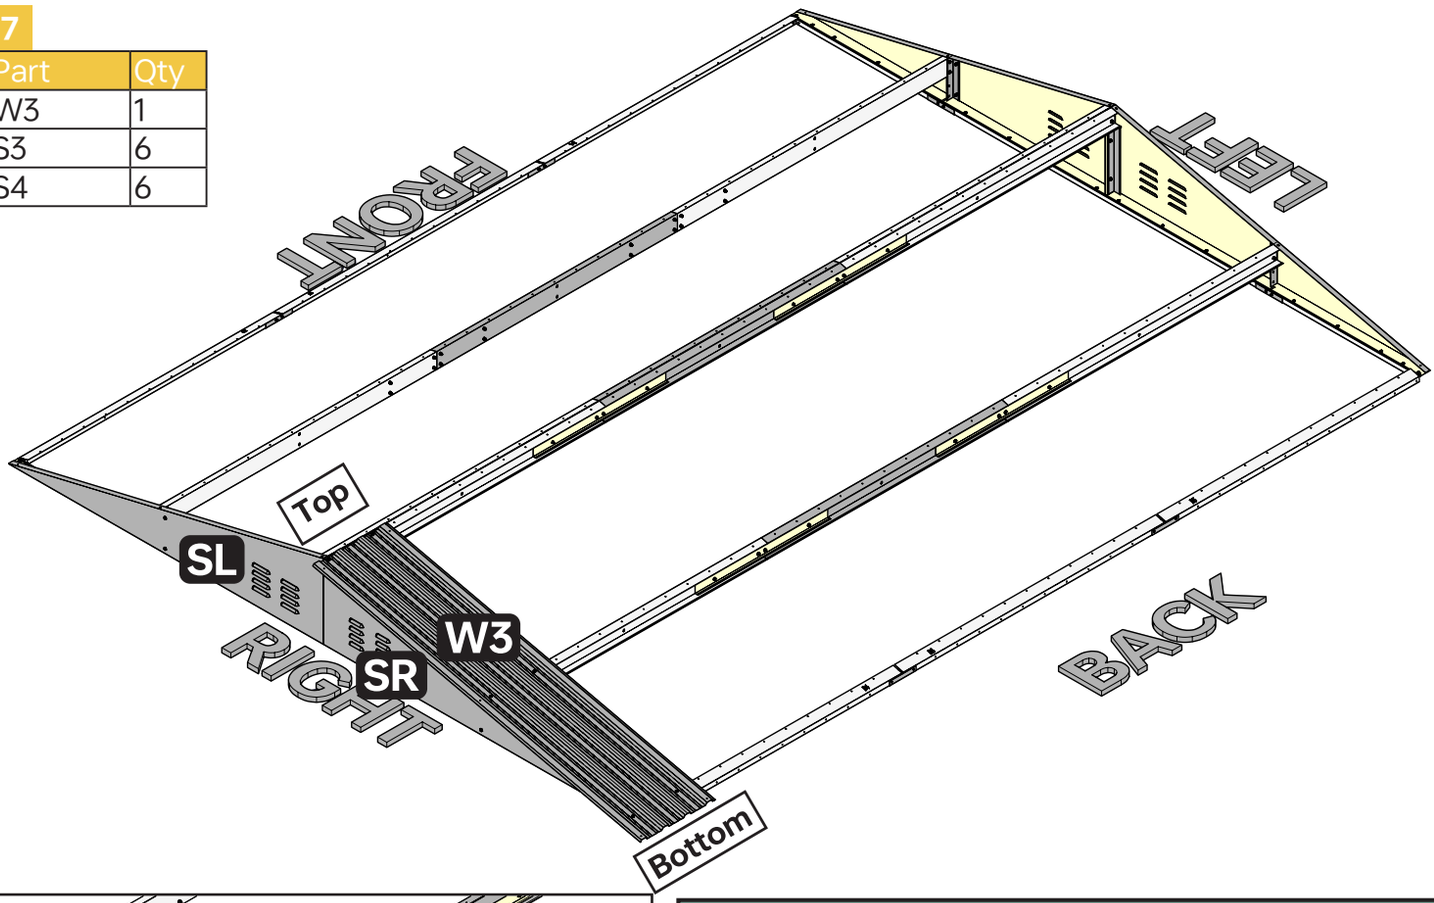

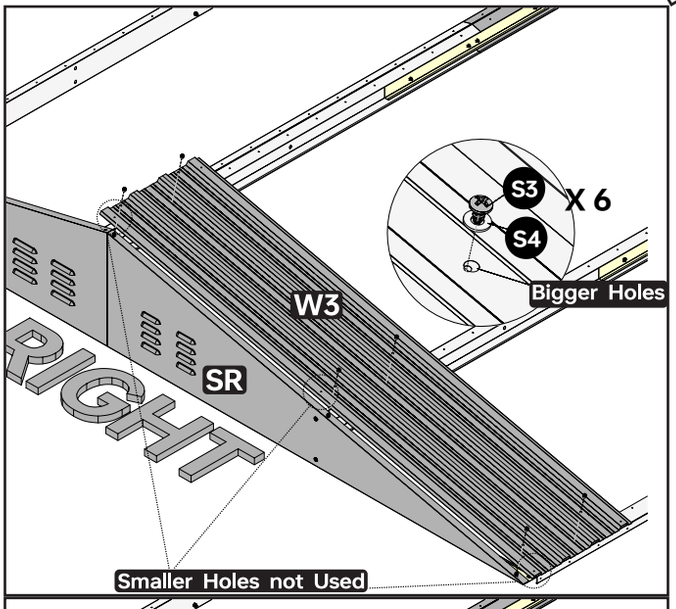

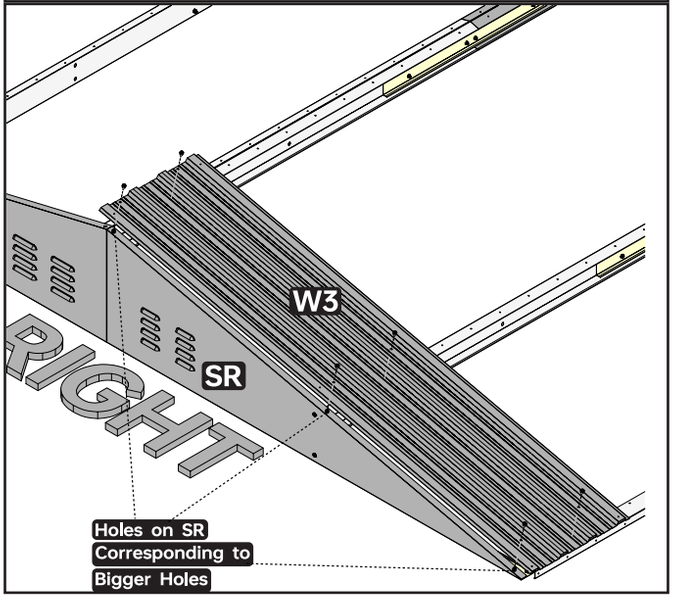

Note

ASSEMBLING THE ROOF PANELS - STARTING FROM THE BACK RIGHT

Starting Point: We will begin assembling the roof panels from the back of your shed, working from right to left.


ATTACHING ROOF PANEL W3:
When attaching Roof Panel W3 to the shed structure, use the six larger screw holes on Panel W3. Do not use the smaller holes.
You will use three sets of screws (S3 + S4) to connect Panel W3 securely to SR.

Note: SR has three corresponding screw holes designed to align perfectly with the larger screw holes on W3.

A NOTE ON SCREW QUANTITY IN FUTURE STEPS:
After this step, the illustrations will no longer visually show the exact number of (S3 + S4) screw sets (or other screw sets) used for roof panels.
However, the precise quantity required will always be clearly listed in the accompanying parts/quantity table for each step. This change helps keep our diagrams clean and easy to understand.

8

Part	Qty
S3	60
S4	60
W1	5
W2	4

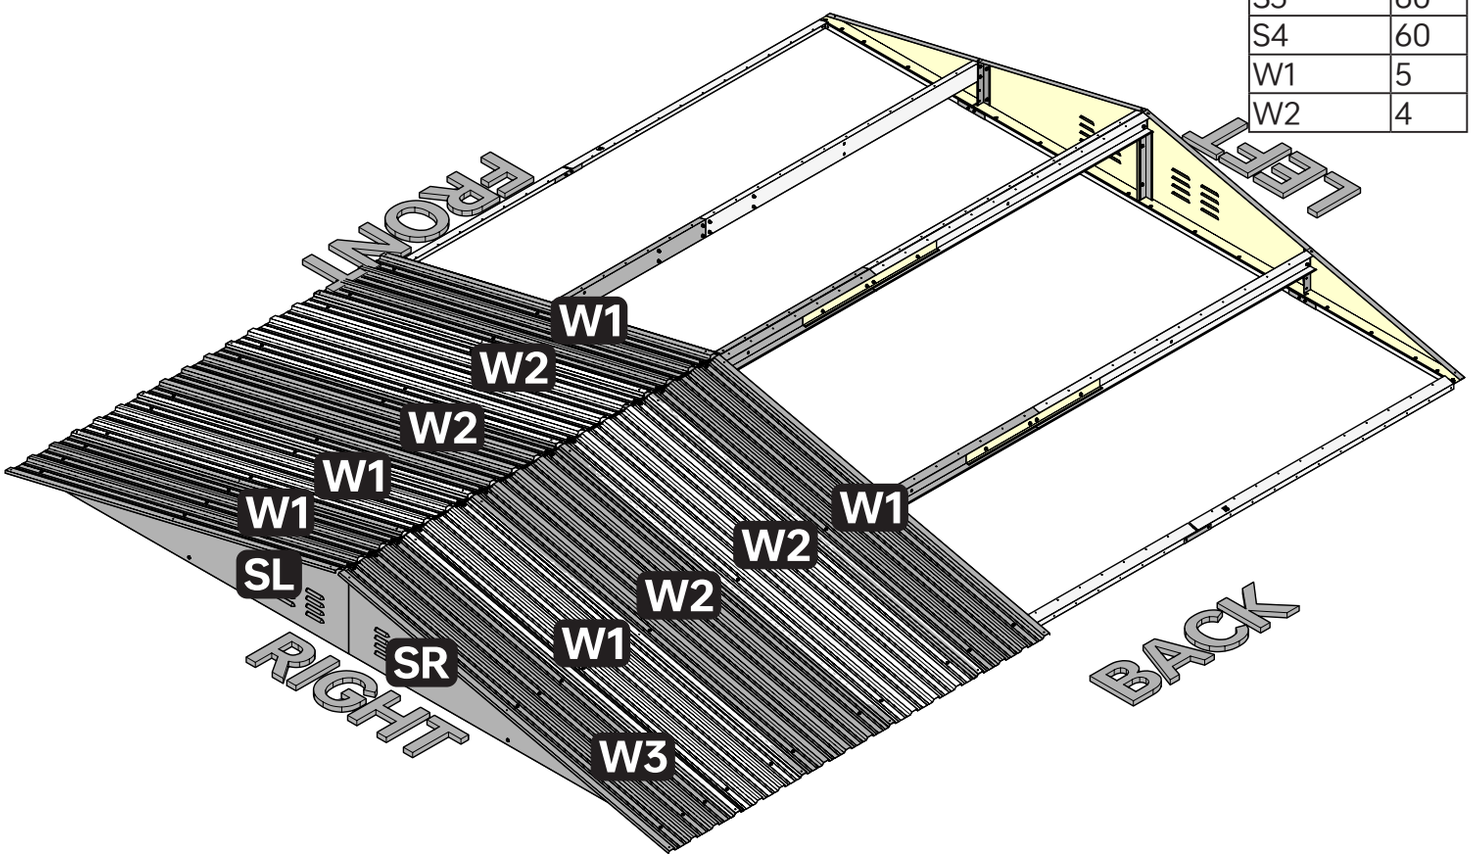


NOTE


In the illustration above, roof panels W1 and W2 are depicted in different colors to enhance visibility.

Use only the larger screw holes on W1 and W2 for this step. The smaller holes will be used in a later assembly stage.


The process of stacking roof panels is similar to that of stacking wall panels. The order in which the panels are layered does not affect the assembly.


9

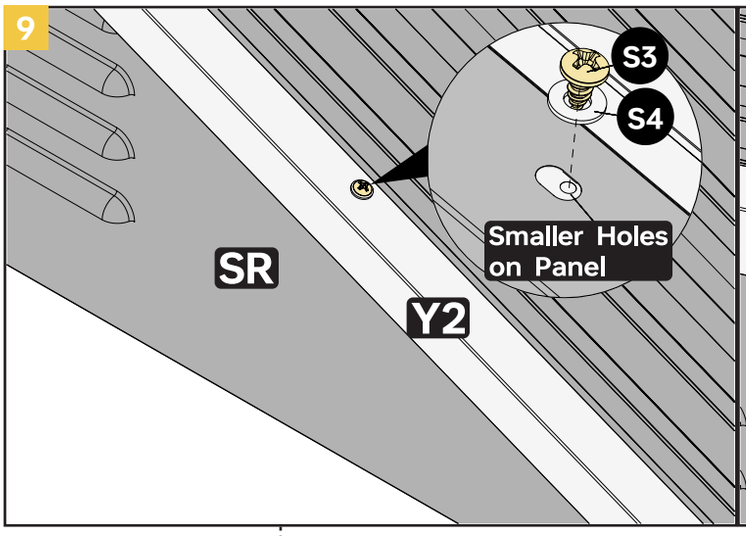


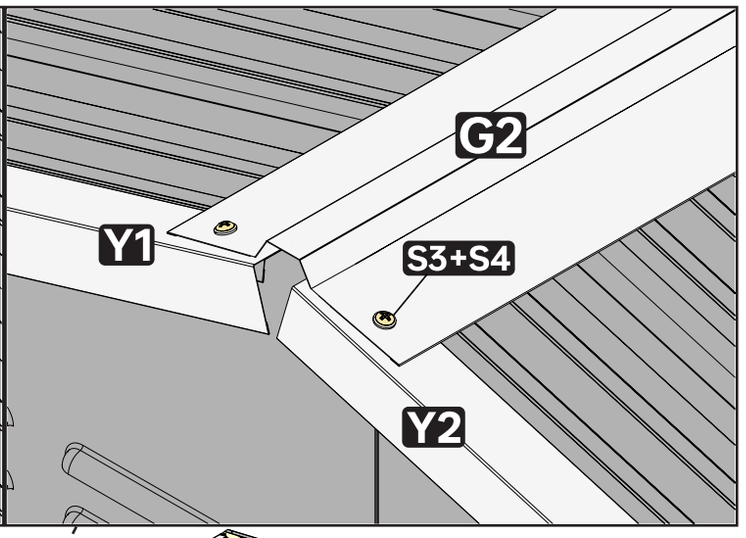

Part	Qty
G2	1
G	1
S3	8
S4	8
Y1	1
Y2	1

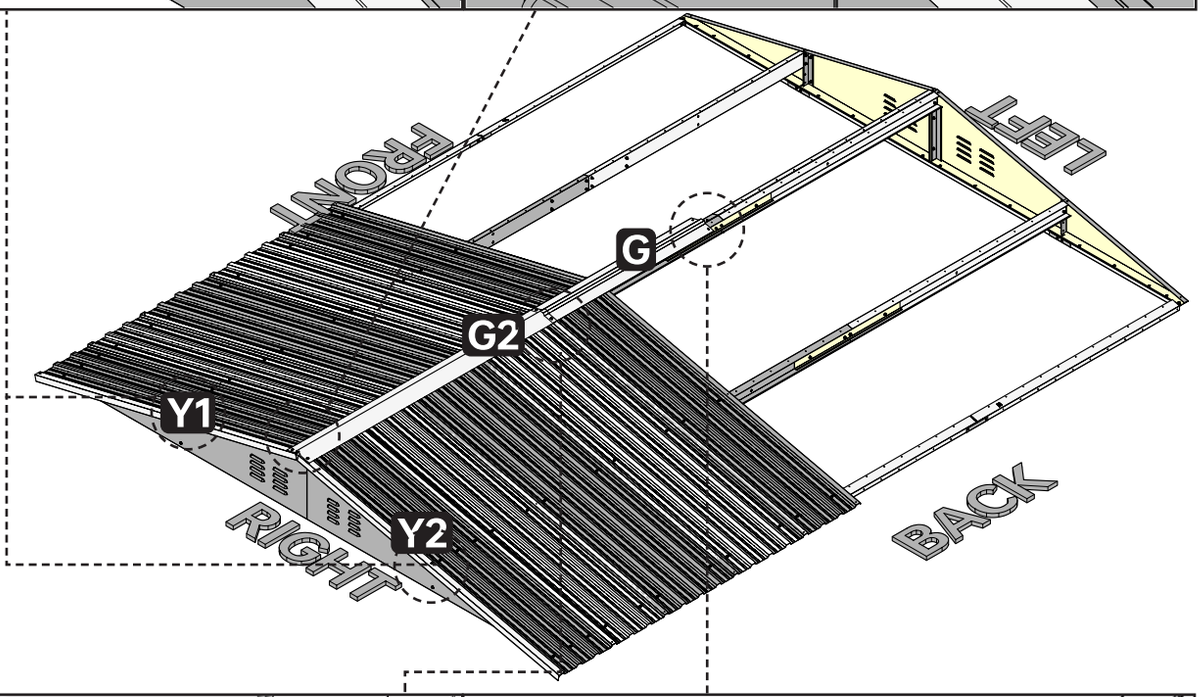

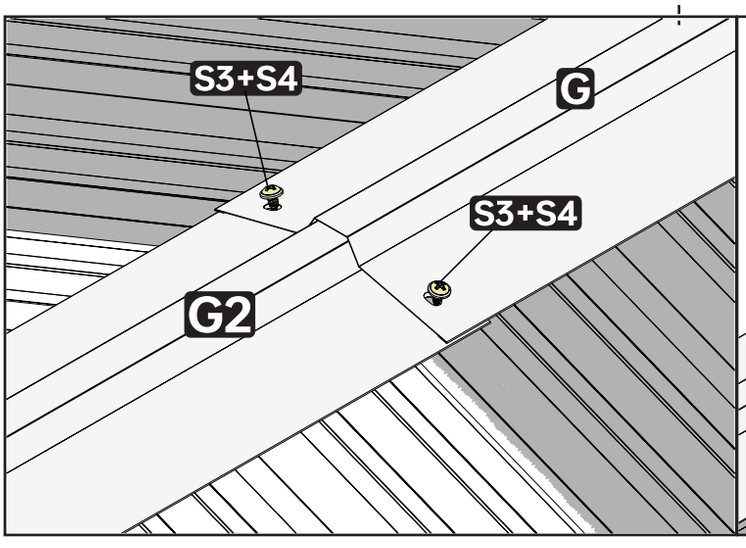

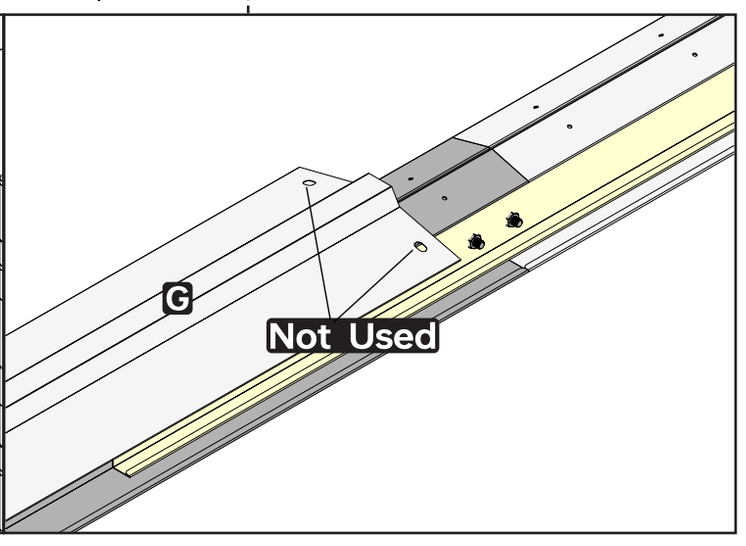


Note

Components Y1 and Y2 each have three screw holes. For this step, use only the middle and top screw holes. The middle screw hole aligns with the smaller hole on the wall panels.

Identifying G2 Ends: Take a moment to examine Component G2. You'll notice it has two distinct ends: One end features three screw holes. The other end has two screw holes.
Correct Orientation: When assembling G2, it's crucial to ensure that the end with the three screw holes is positioned at the back of your shed.

10

Part	Qty
W1	4
W2	2
S3	36
S4	36

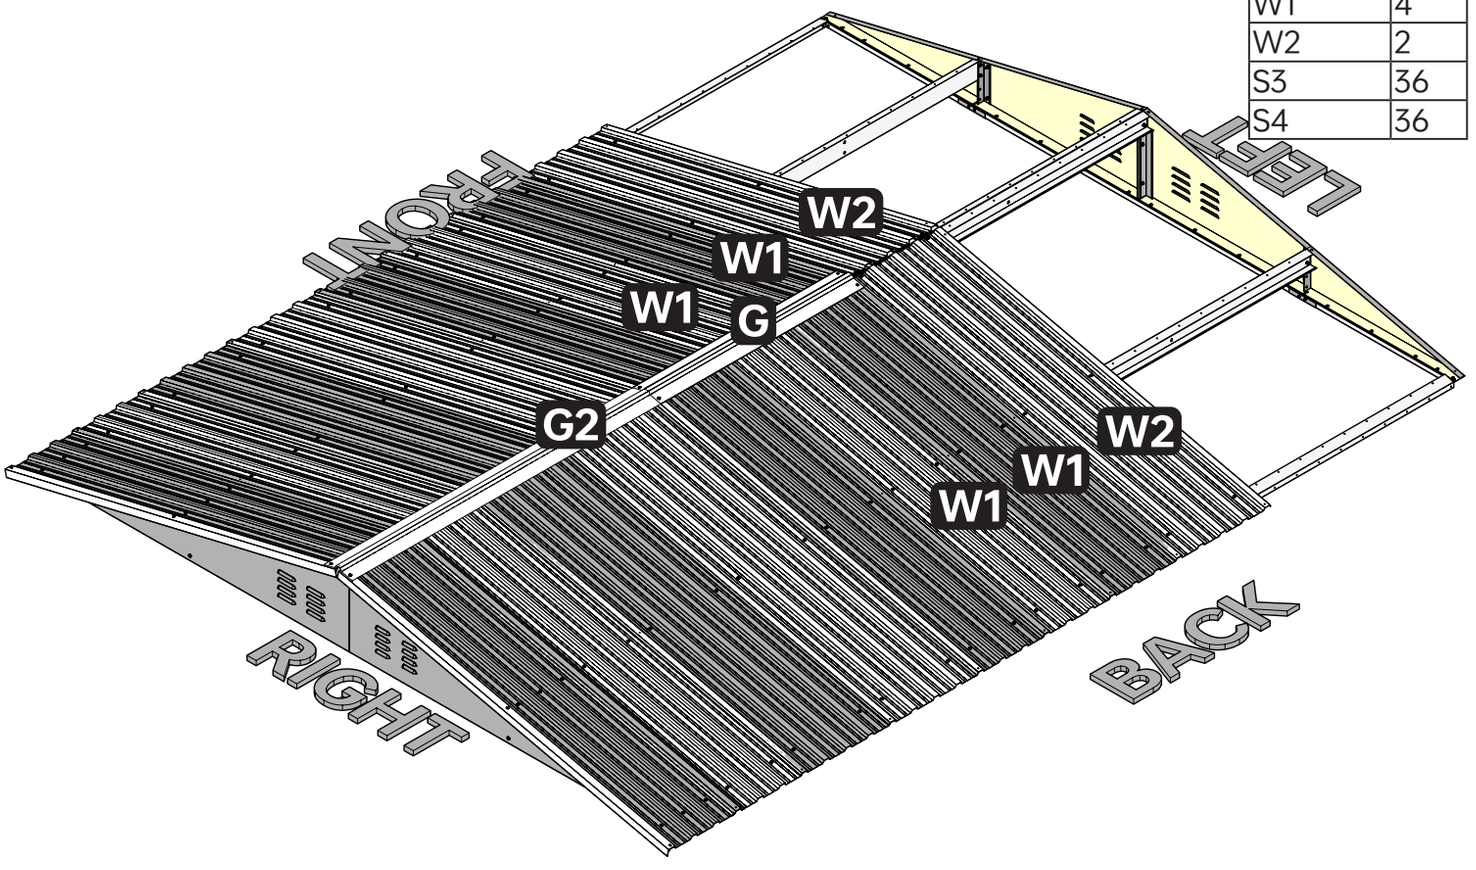


Note


You may wonder why Ridge Cap G was installed in the previous step rather than this or next step. This method is necessary because G must be connected to G2 before the roof is fully assembled. Otherwise, it would be necessary to lean precariously onto the partially completed roof to attach the ridge caps, which is unsafe and impractical.

While this method makes placing the roof panels under G slightly more challenging, it significantly improves safety and overall ease of assembly.

11


Part	Qty
G2	1
S3	2
S4	2

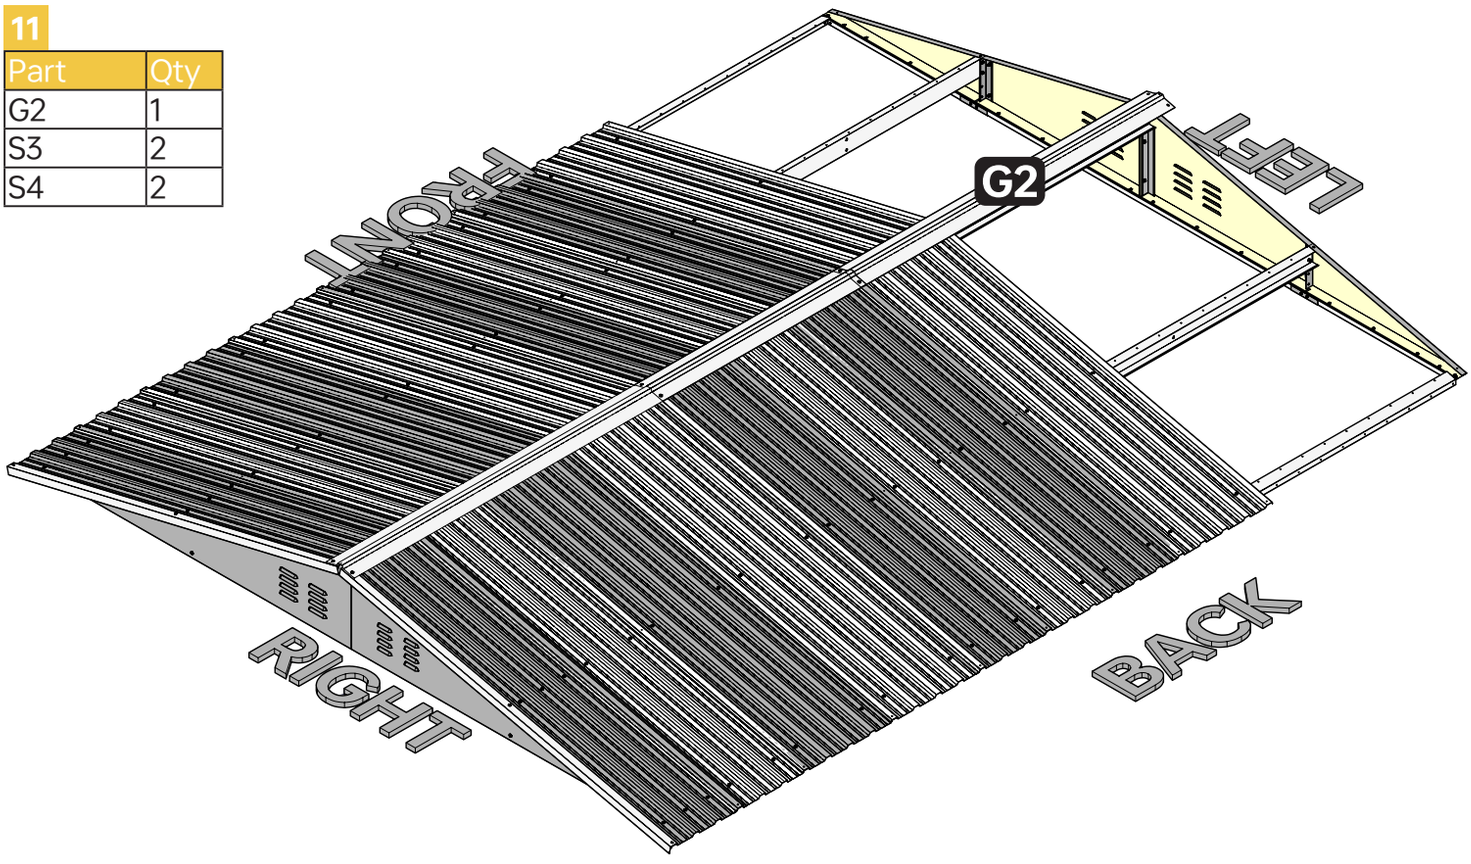

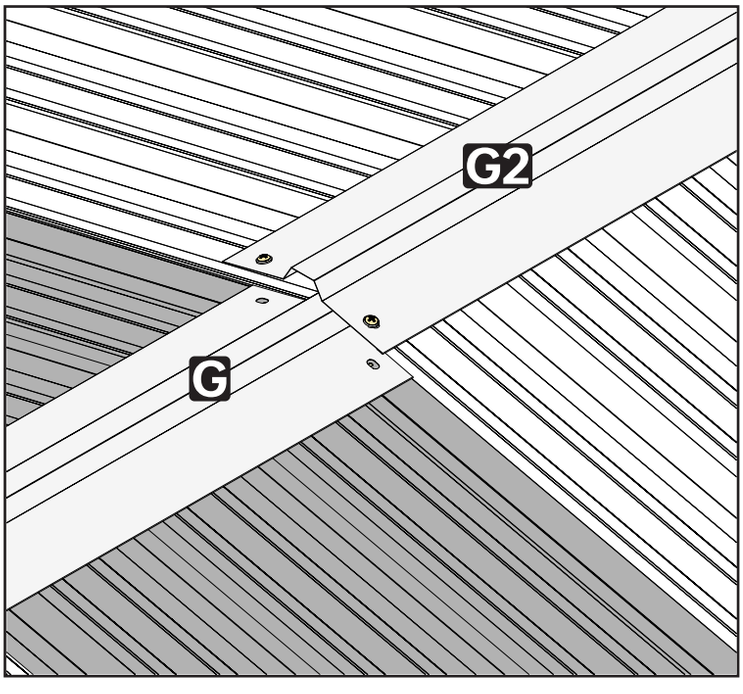


NOTE

Assembling with Component G2 - Critical Orientation:
As a reminder from the previous step, Component G2 has two distinct ends: one with three screw holes and one with two screw holes.
For this current assembly step, it is essential that the end of Component G2 with the three screw holes is positioned towards the back of your shed.
Double-checking this now will prevent alignment issues later!

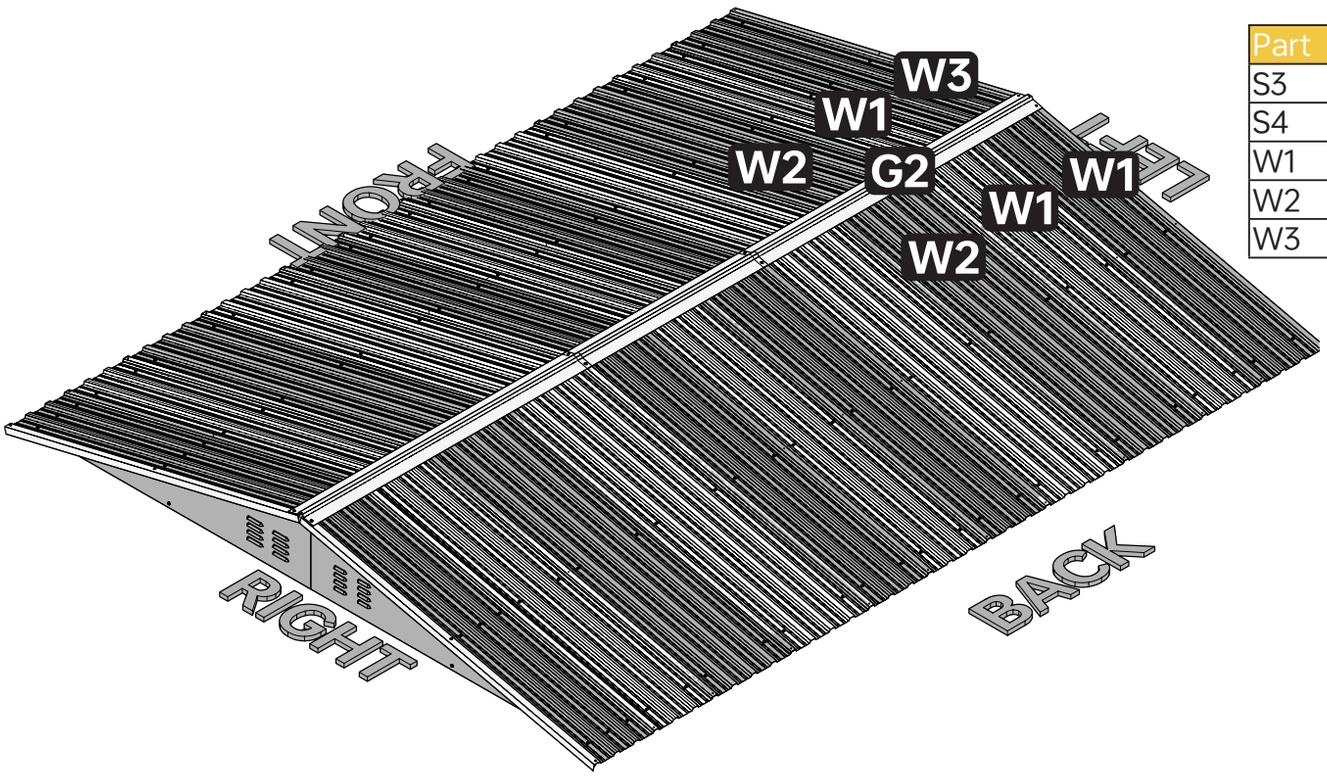


12

Part	Qty
S3	36
S4	36
W1	3
W2	2
W3	1

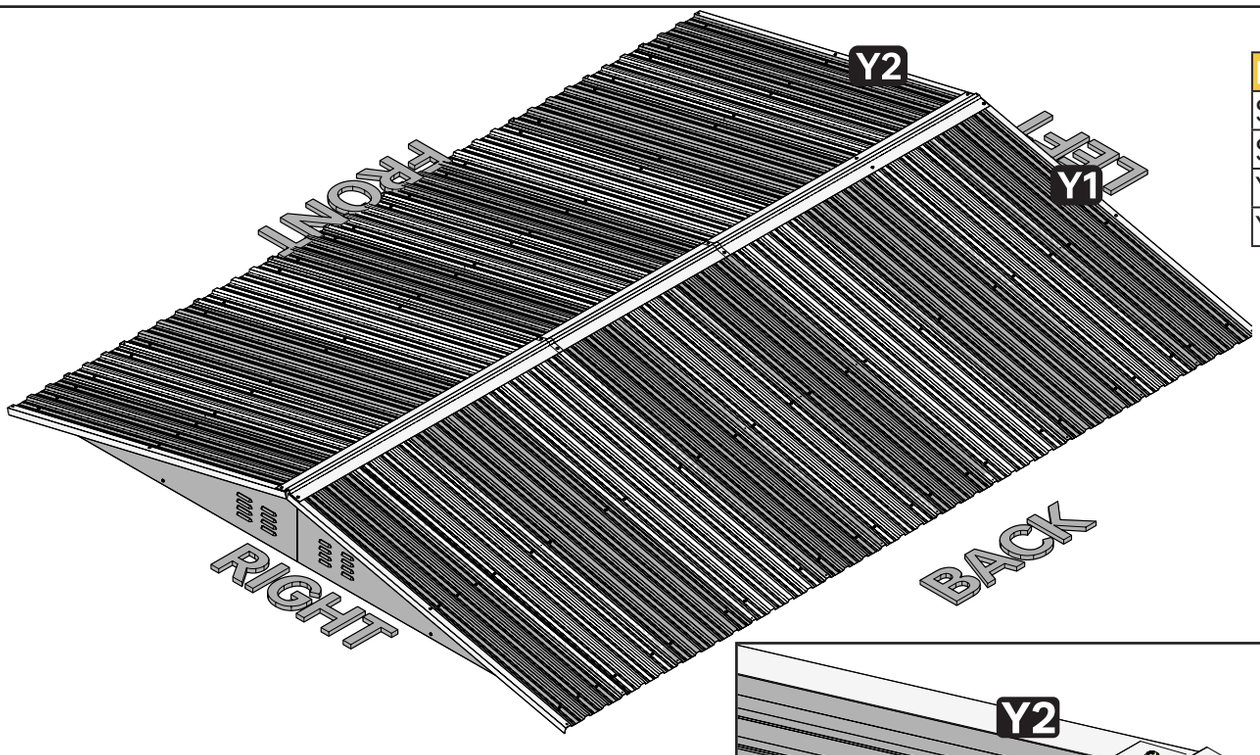


13


Part	Qty
S3	6
S4	6
Y1	1
Y2	1

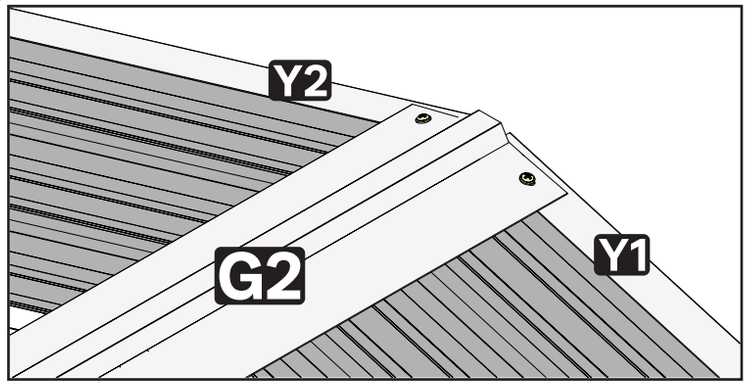

14

Part	Qty
D	2
E	4
S3	14
S4	14
Y3	2
Y4	2
Y5	2

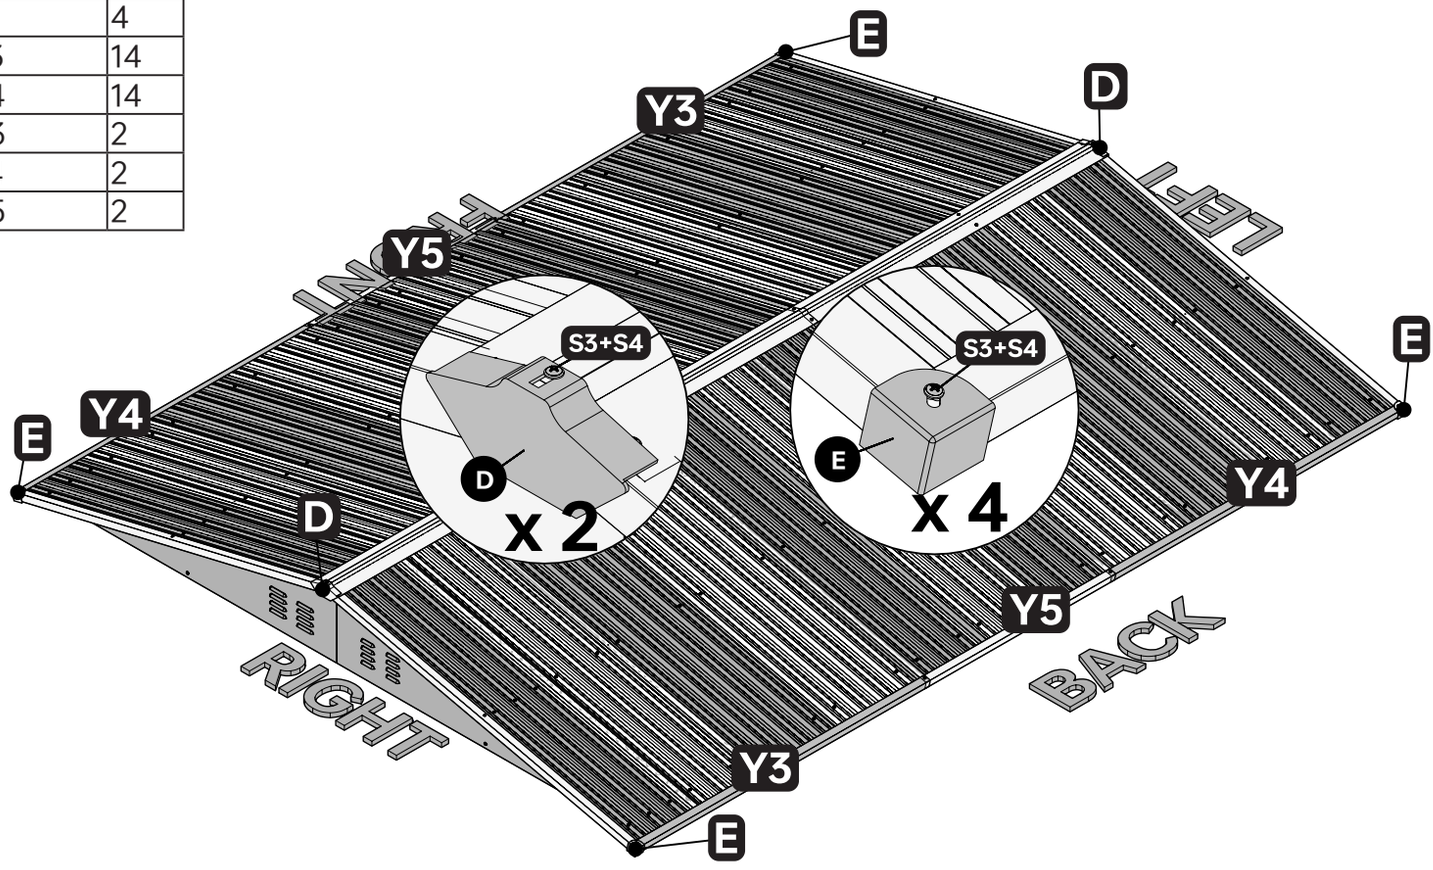

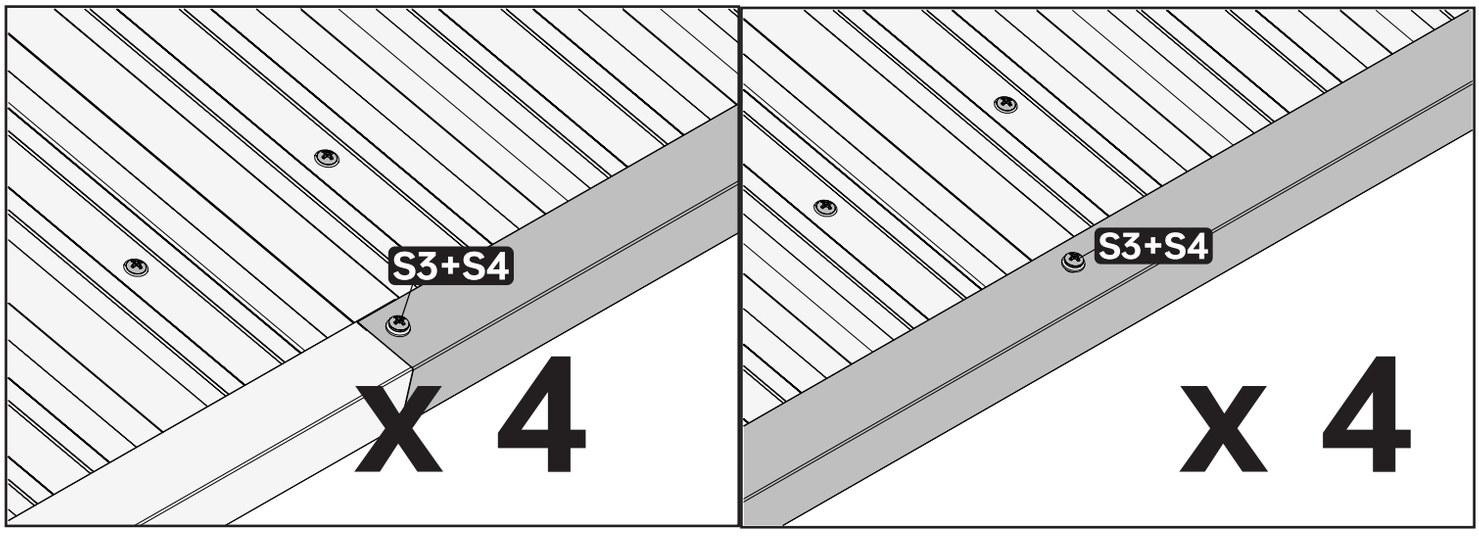


Note

Screw Hole Usage: This step utilizes the smaller diameter screw holes located on the roof panels, which were intentionally left unused during prior assembly steps.


Component Placement: The order of placement for components Y parts is not critical. You can stack these components in any order without affecting the final assembly.


06 Doors

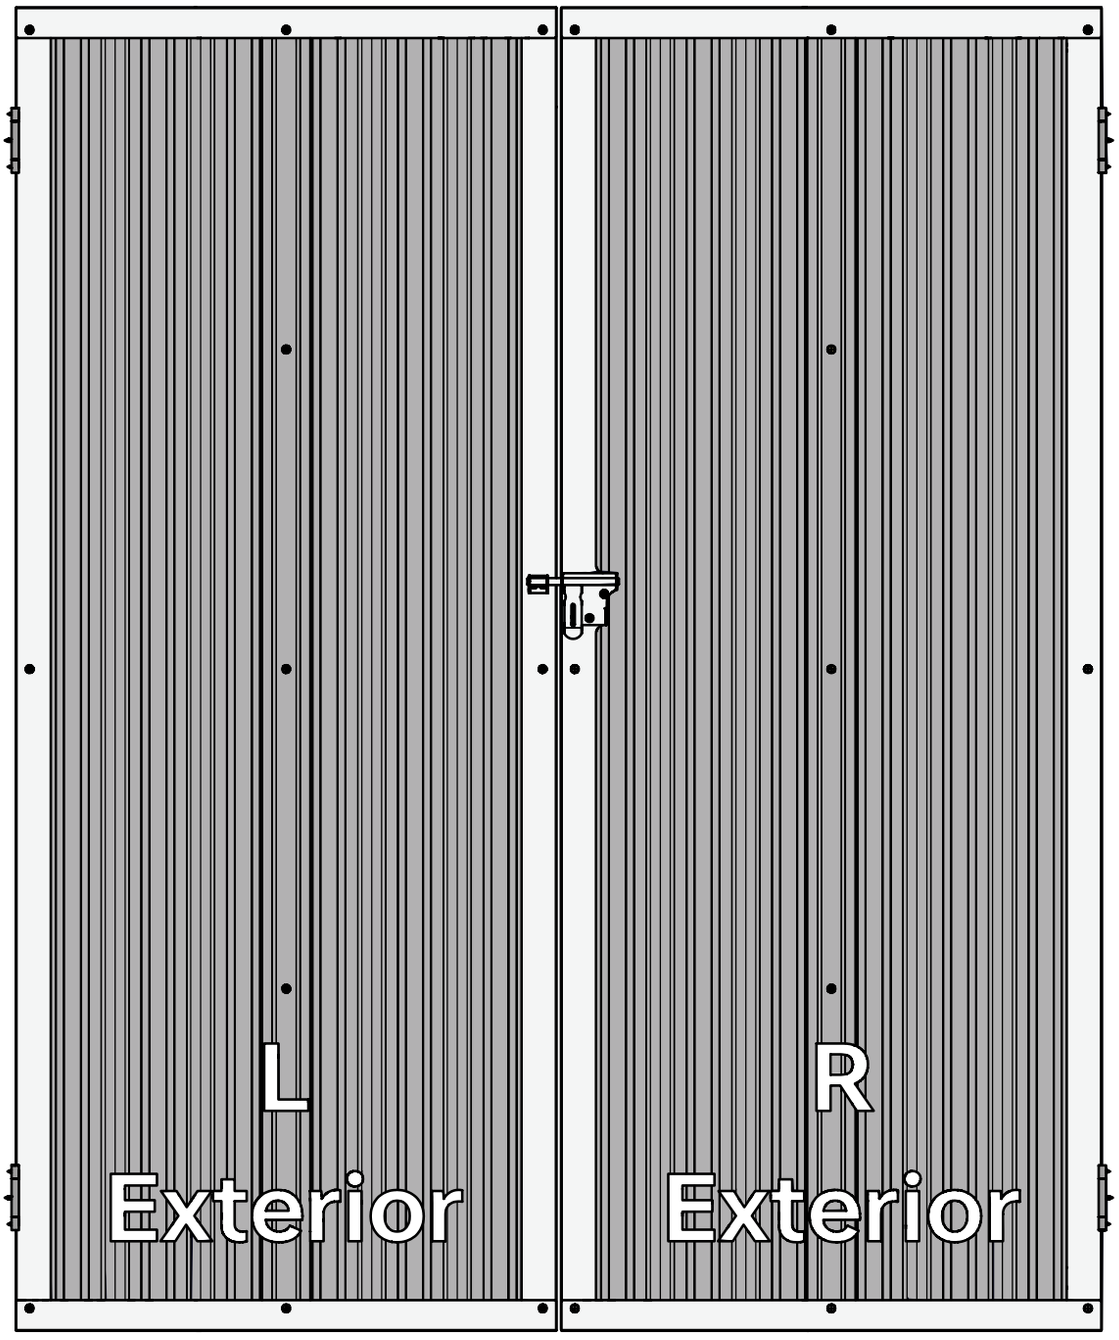

1

Part	Qty
M1	2
S1	1
S2	1
S4	1
S5	1

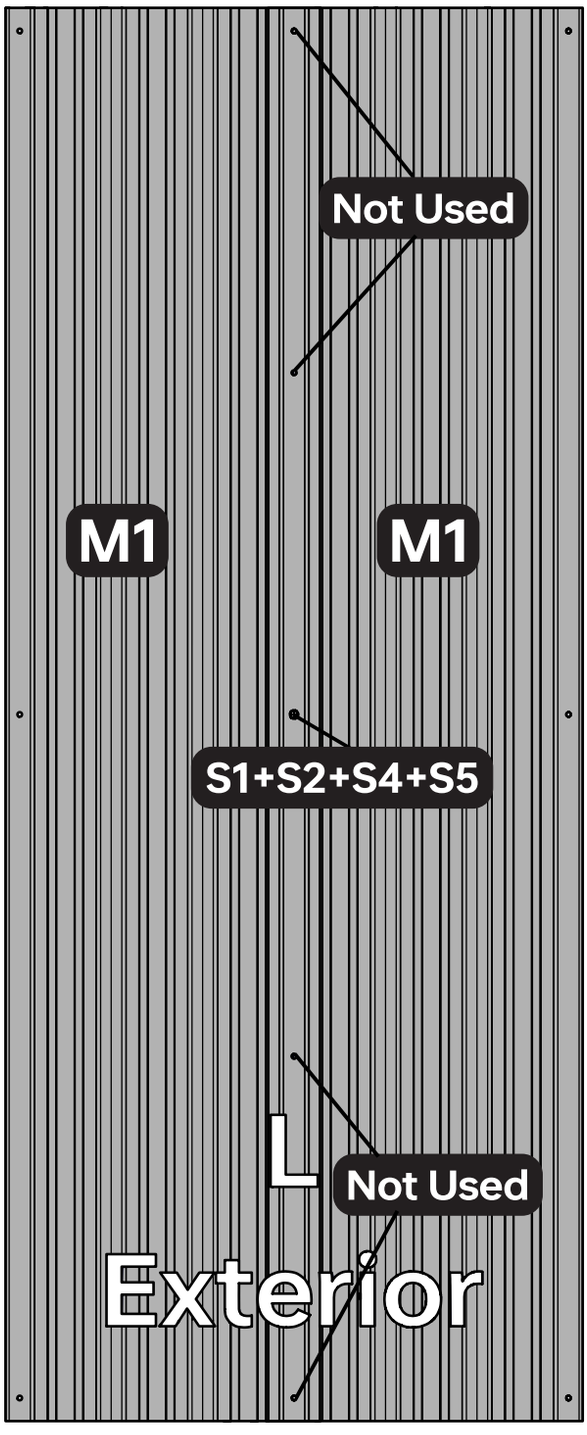

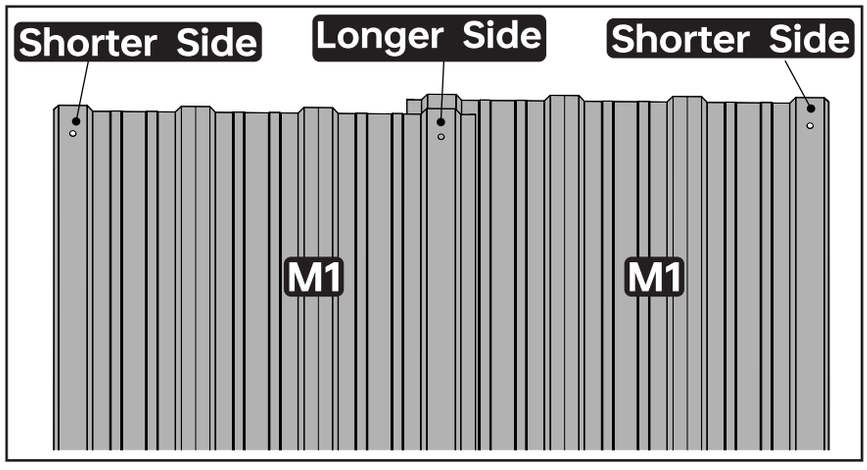



Note


DOOR PANEL M1 ASSEMBLY


Door panel M1 has an asymmetrical design. When examining the cross-section of M1, you will notice a longer side and a shorter side. When stacking two M1 panels together, ensure that the longer sides are aligned with each other.

When two M1 panels are stacked, five screw holes will overlap. In this step, use S1+S2+S4+S5 to fasten the two M1 panels together at the middle screw hole. The remaining screw holes will be used in a later step.

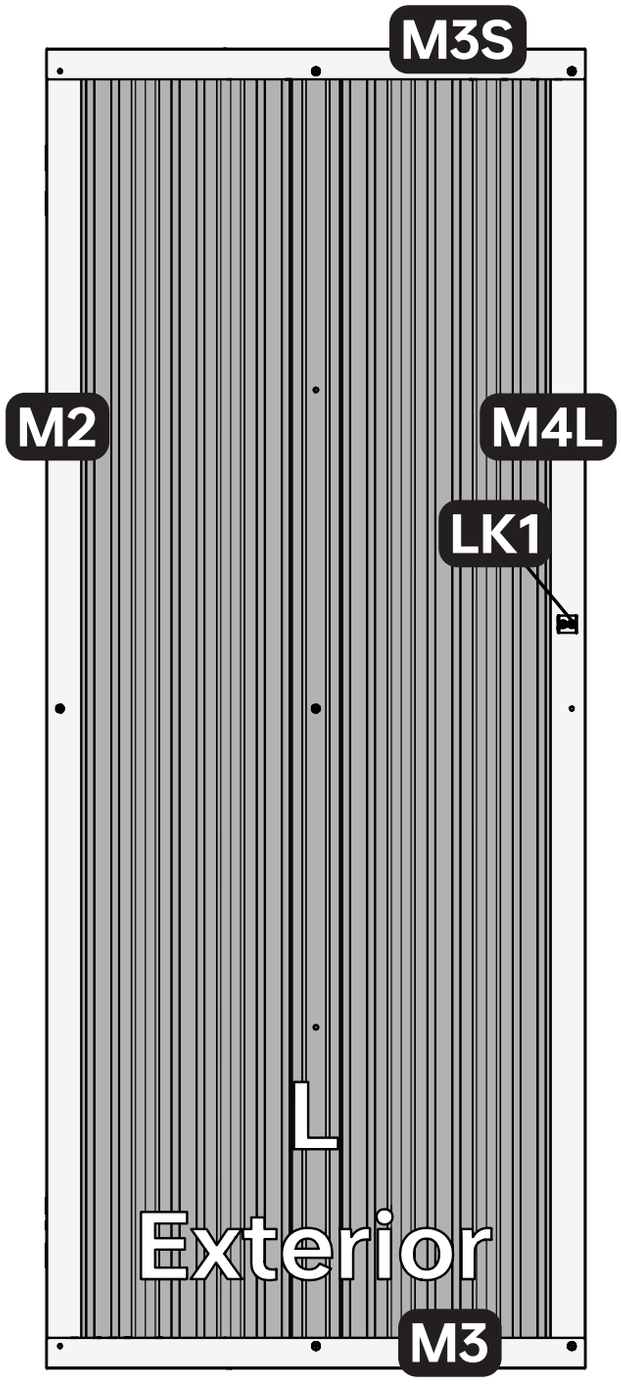

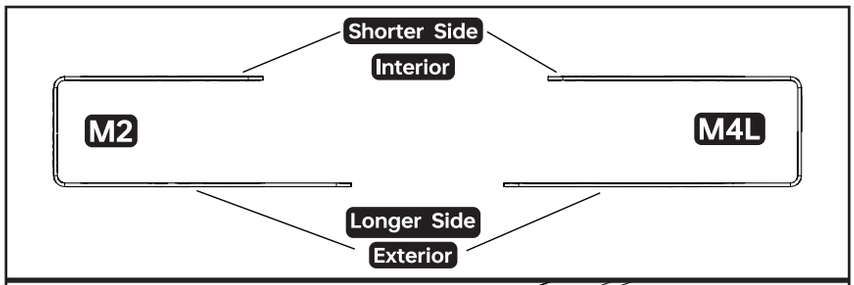

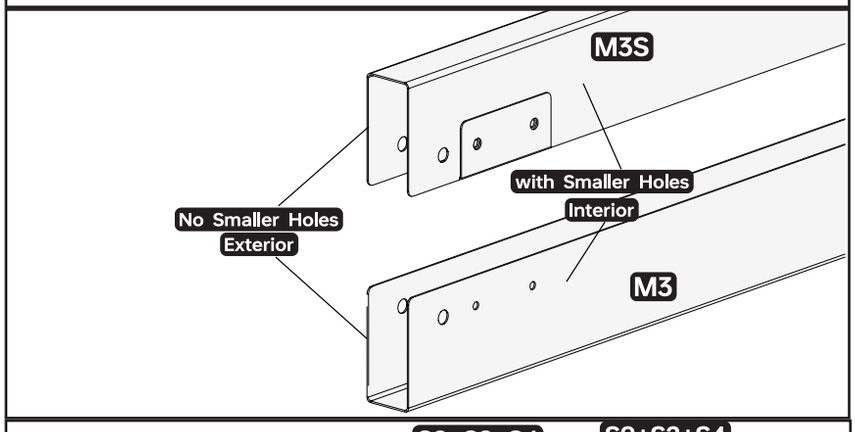

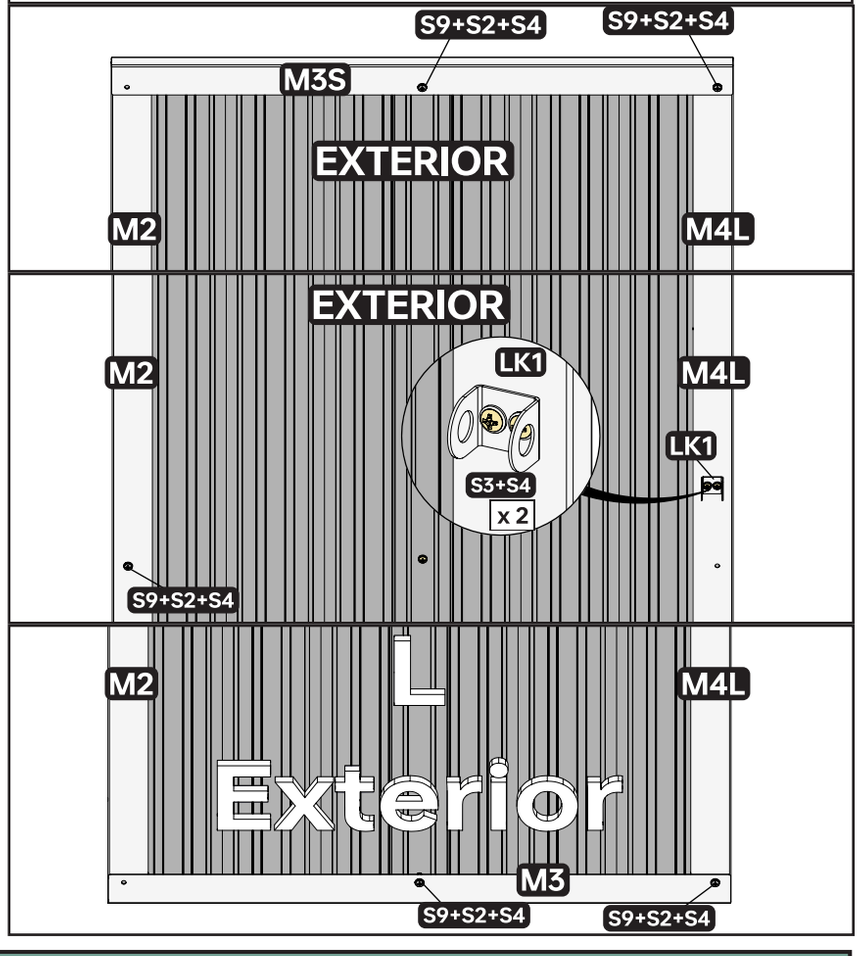


Part	Qty
LK1	1
M2	1
M3	1
M3S	1
M4L	1
S2	5
S3	2
S4	7
S9	5


Note


ASSEMBLING THE FRONT DOORS


Use screw set S9, S2, and S4 to connect the door panels to M2, M3, M3S, and M4L.
Only five sets of these screws are required for this step.
Before attaching the door panels, ensure you are using the correct exterior and interior sides of M2 through M4L.

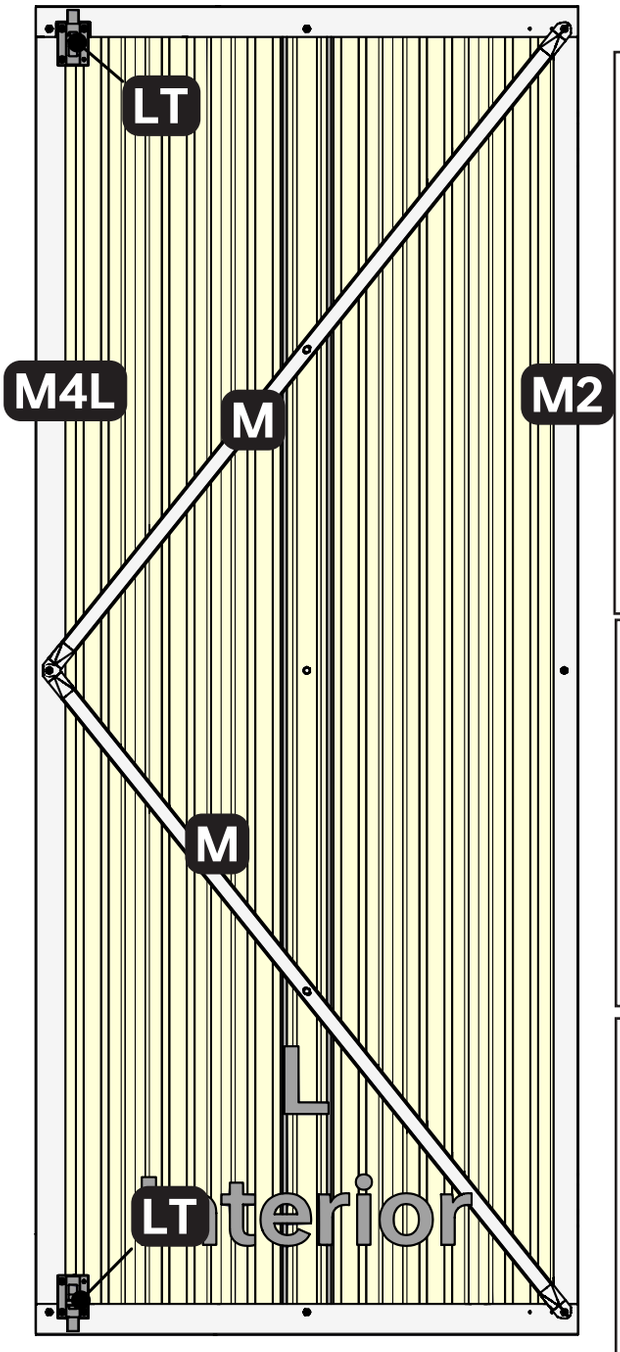


3

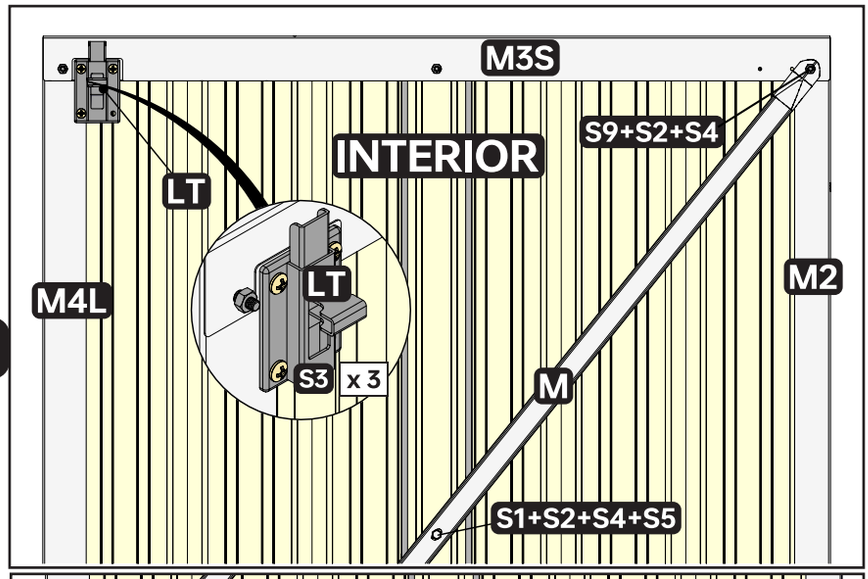


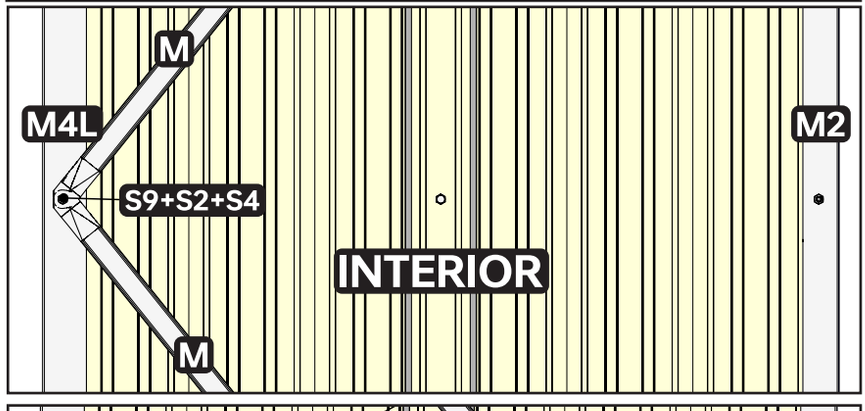

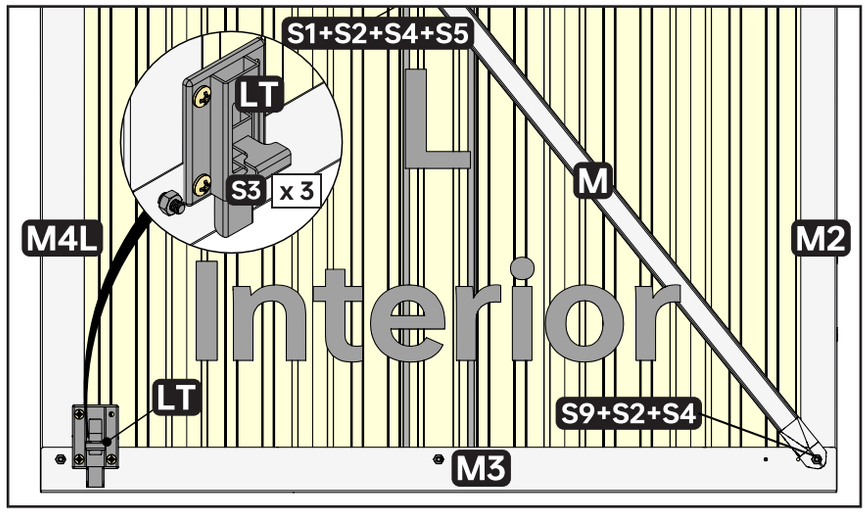

Part	Qty
LT	2
M	2
S1	2
S2	5
S3	6
S4	5
S5	2
S9	3

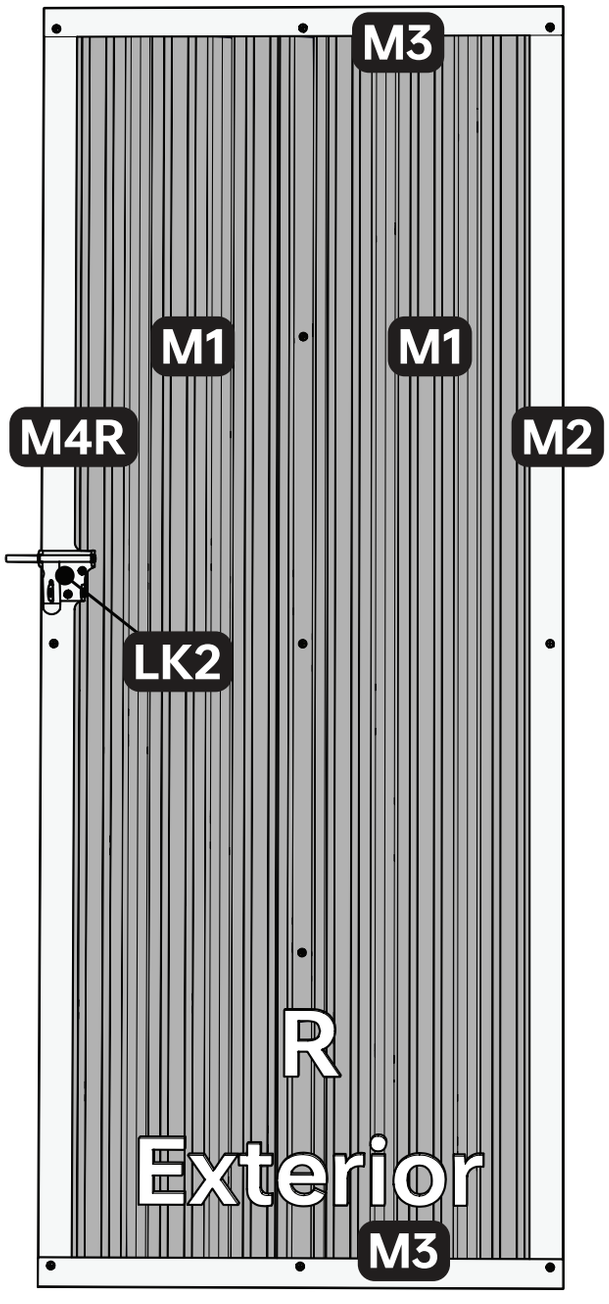

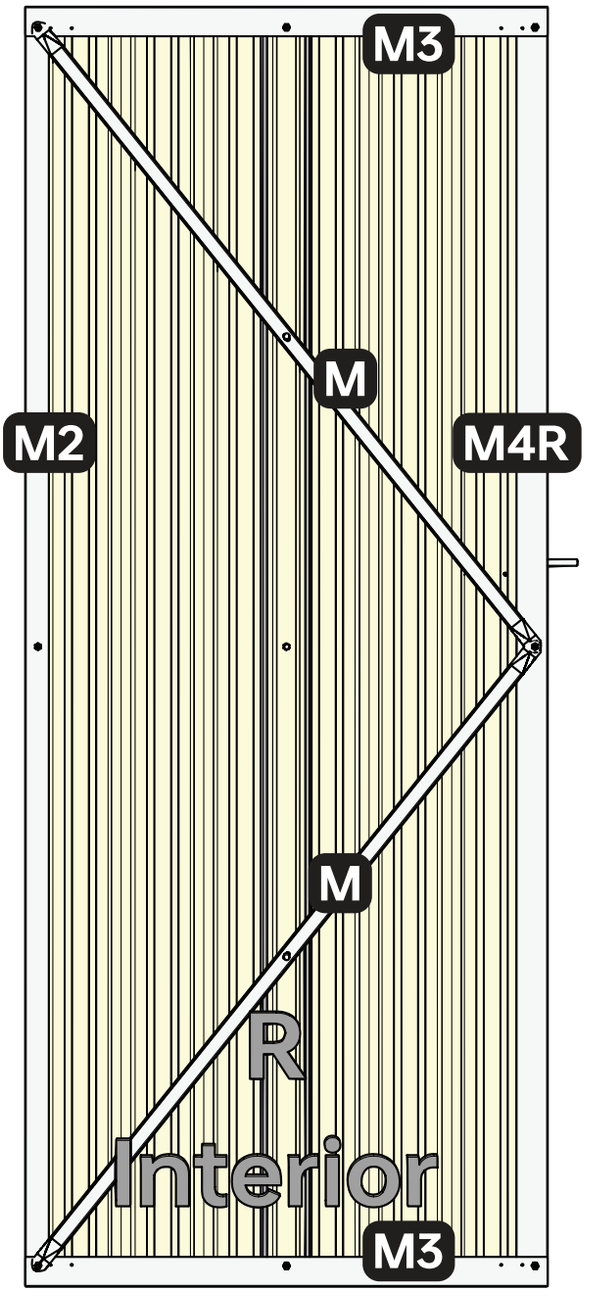

4


Part	Qty
LK2	1
M	2
M2	1
M3	2
M4R	1
M1	2
S1	3
S2	11
S3	3
S4	14
S5	3
S9	8


NOTE


To streamline the manual, this step combines the actions described in previous steps this chapter.


Similar to M4L, the longer side of M4R is its exterior side.
Ensure the exterior side faces outward when installing M4R.

5

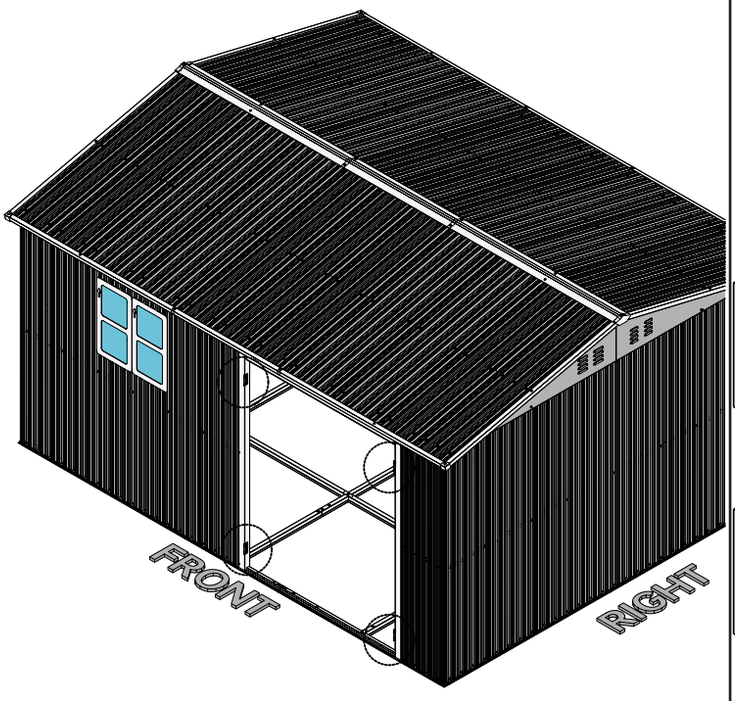

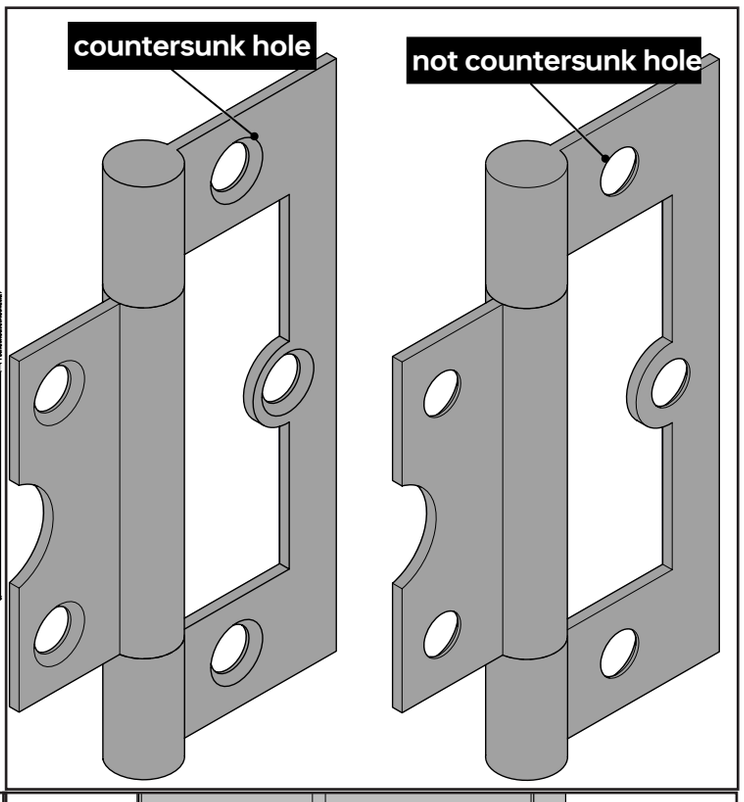

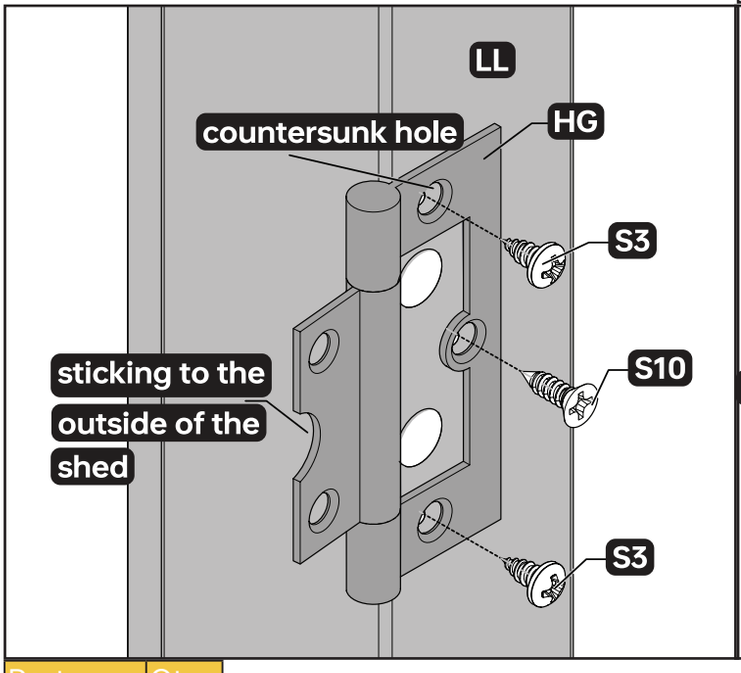

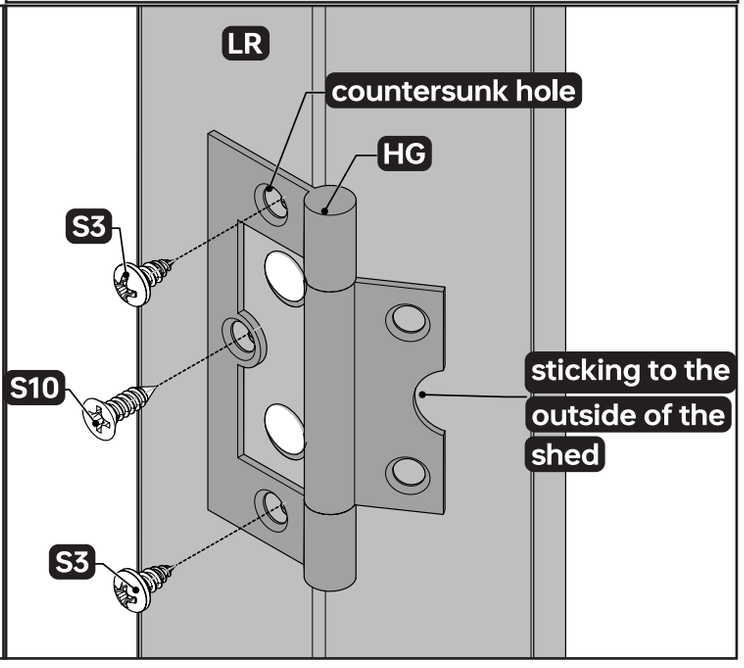

Part	Qty
HG	4
S3	8
S10	4


Note


Hinge Installation: Use two S3 screws and one S10 screw to attach each hinge (HG) to components LL and LR. Hinges have a side with countersunk holes and a side without. Ensure the screws are inserted through the side of the hinge with the countersunk holes when attaching it to LL or LR. Position the hinges so that the semicircular opening on each hinge faces the exterior of the shed after installation.

Note on Illustrations: This shed utilizes four sets of hinges in total. To enhance the clarity of the illustrations, only the upper sets of hinges on LL and LR are shown in this step and the next.

6

Part	Qty
S3	8

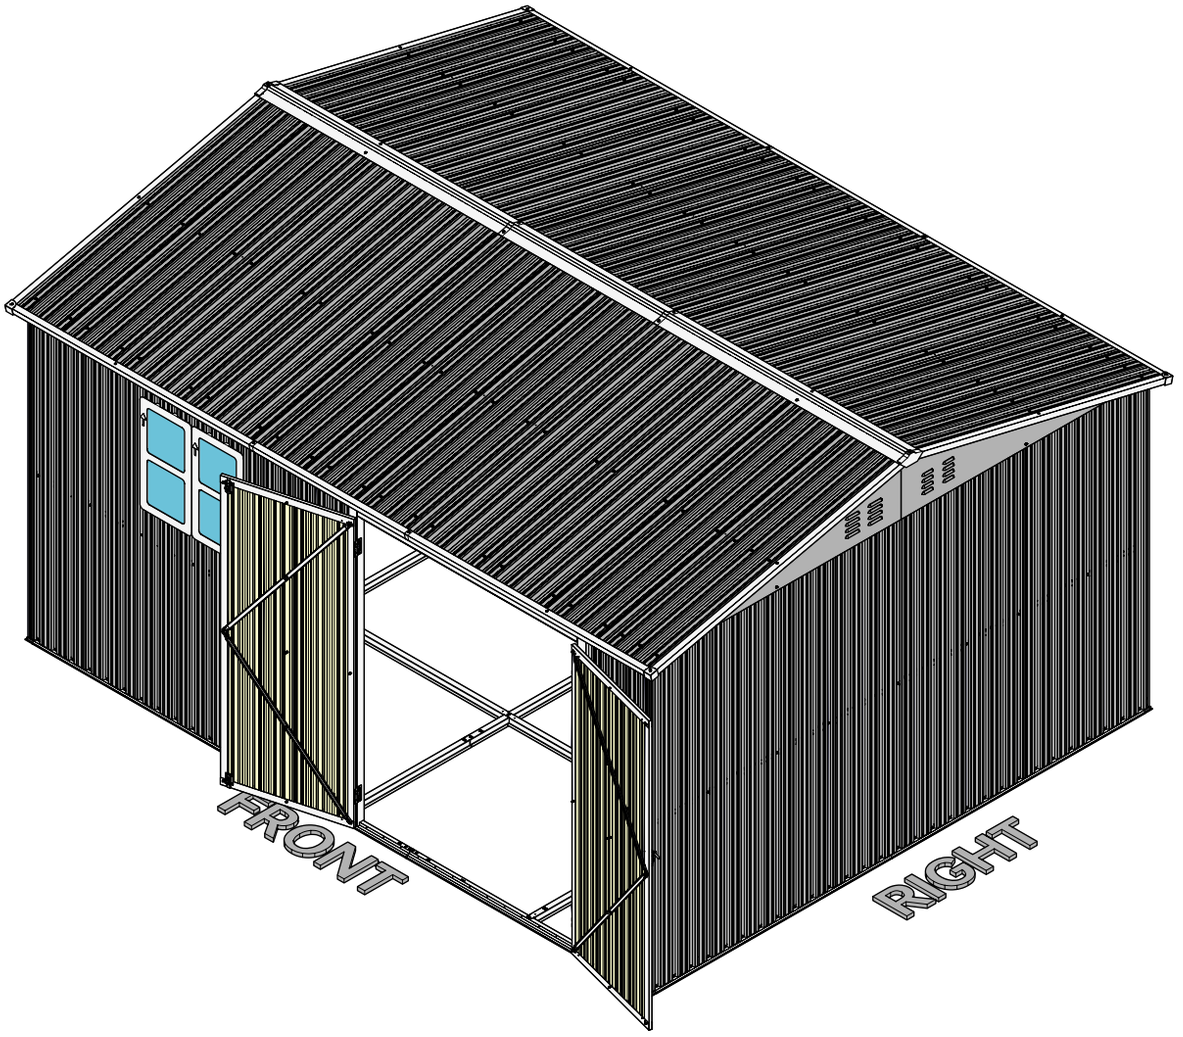

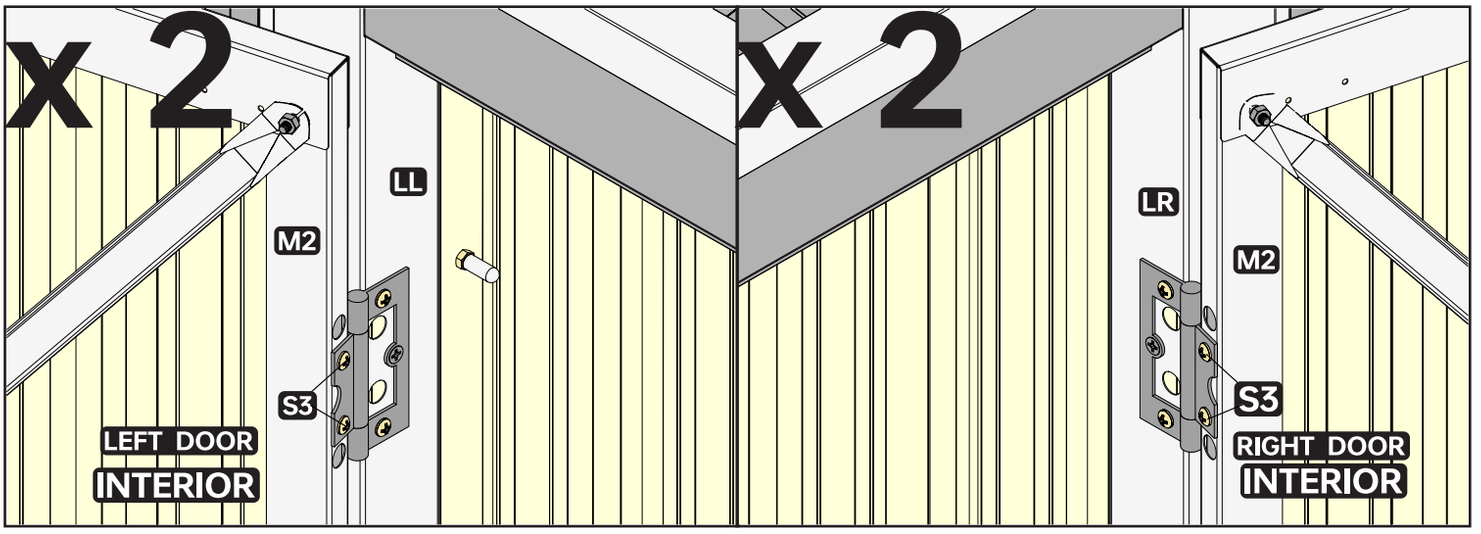

Note

FINAL ASSEMBLY AND FINISHING:

This is the final step of the assembly process. After attaching the doors to the shed, inspect all exposed screw heads. Cover any remaining exposed screw heads with the provided S5 caps for a safe and finished appearance.

Congratulations! You have completed the assembly of your garden shed.