


• Instructions


✖ NOTICE

Please use the allen key included instead of an electric drill.

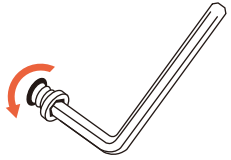


TIPS!

We recommend two people for the assembly process.

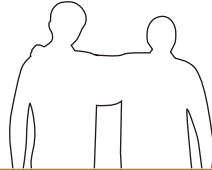


✖ Please make sure all the parts are included.

Ax1



Bx1

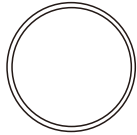

Cx1



(a) *12
M6x16mm

(b) *4
M6x30mm

(c) *4
M6x40mm

(d)


Dx4




Ex4




Fx1




Read the instructions carefully.

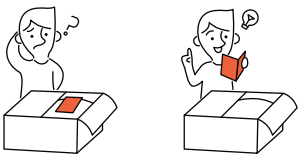

Follow the assembly steps.

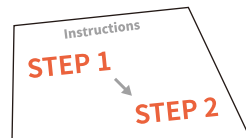


STEP 1

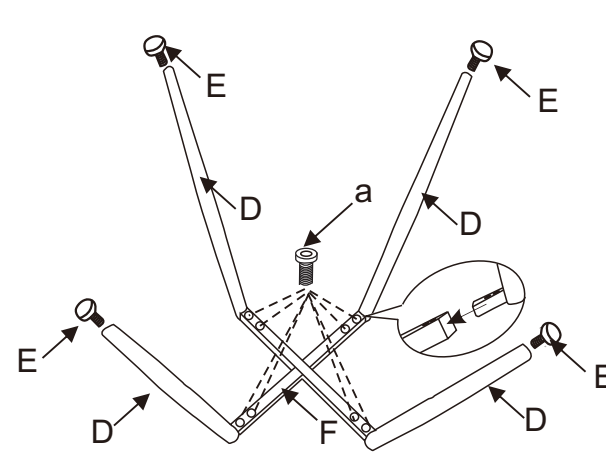


STEP 2

For better assembly in the following steps, please only screw all the screws to 80% of the position when assembling this step.

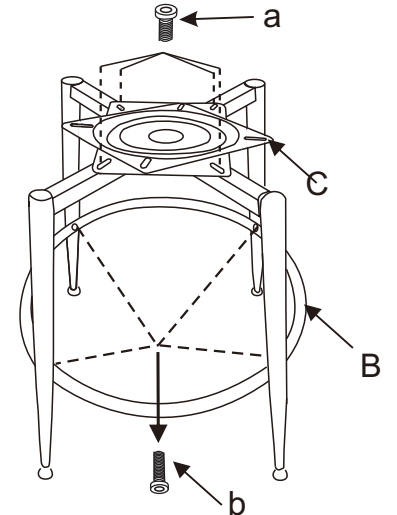

STEP 3

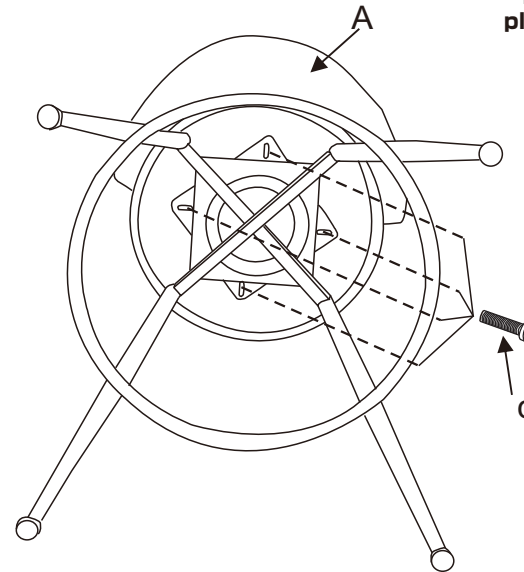

STEP 4

