

COAT RACK INSTALLATION INSTRUCTIONS

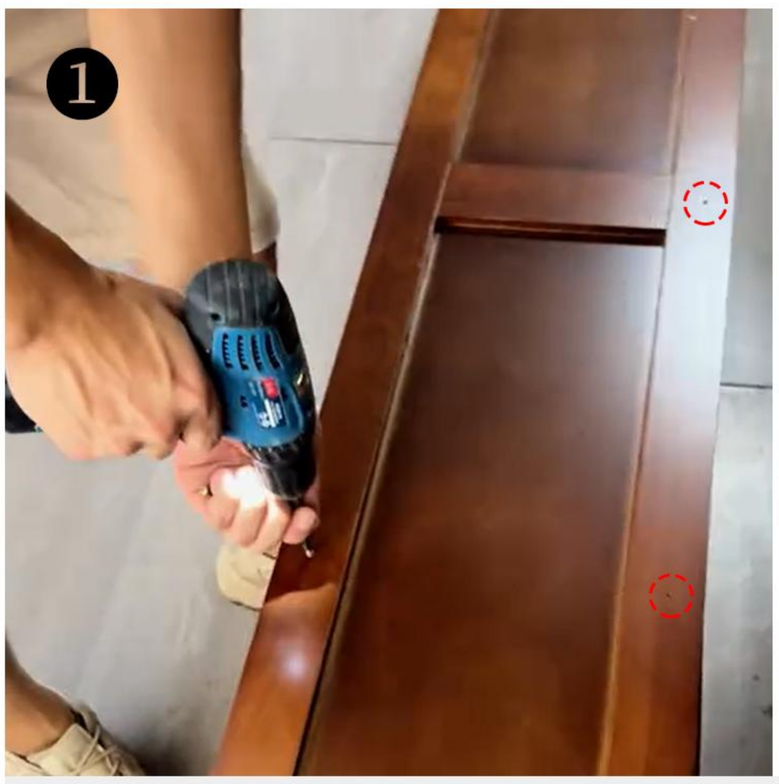

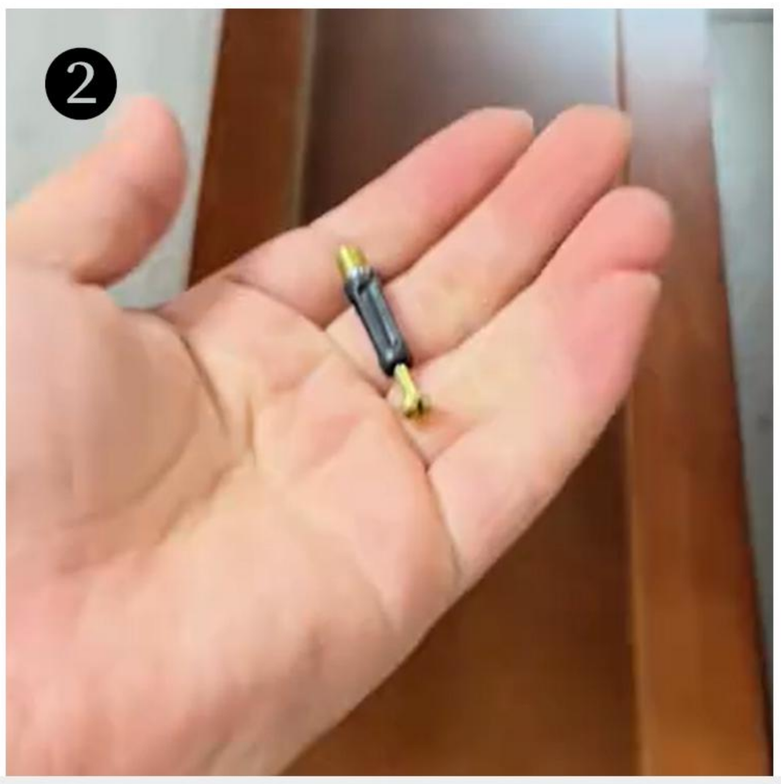







Step 1: Find the mirror. There are 6 holes on the back of the mirror. Install the black screws shown in Figure 2, then take the panels shown in Figure 3 and fit them in. Note: The holes on all three panels must face the same downward direction. Then use the locks shown in Figure 4 to install and tighten them onto the holes.




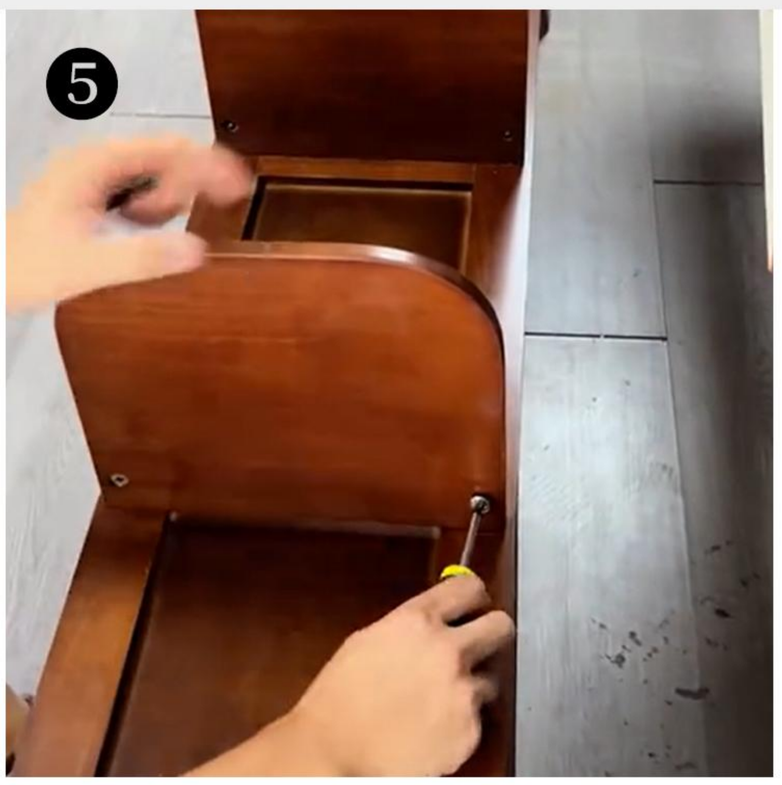


Next, find this wooden strip (note that the holes on both ends are different in size — the larger holes should face upward), and install the silver screws shown in Figure 7 into all 3 holes.

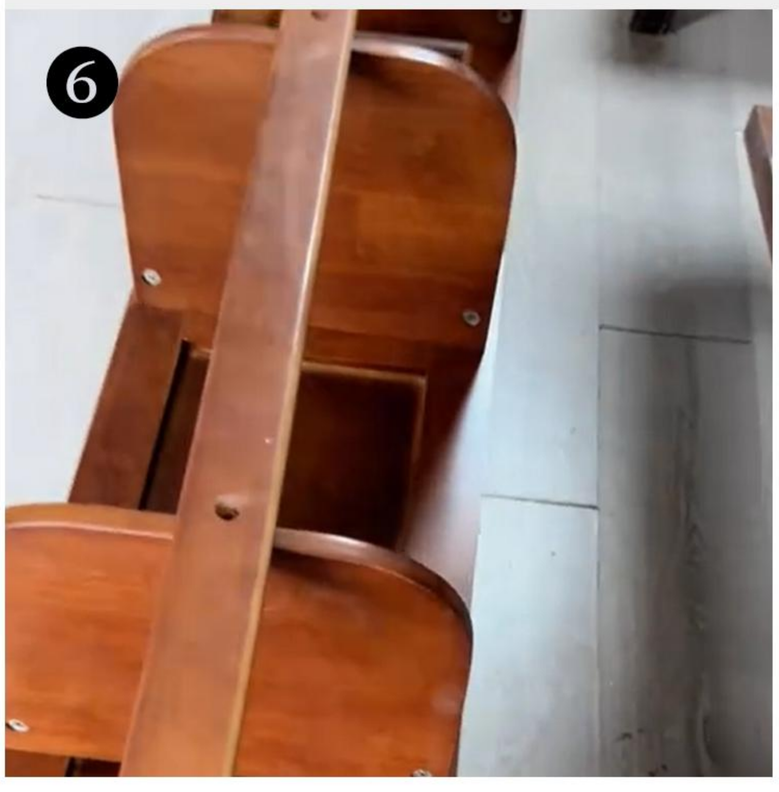




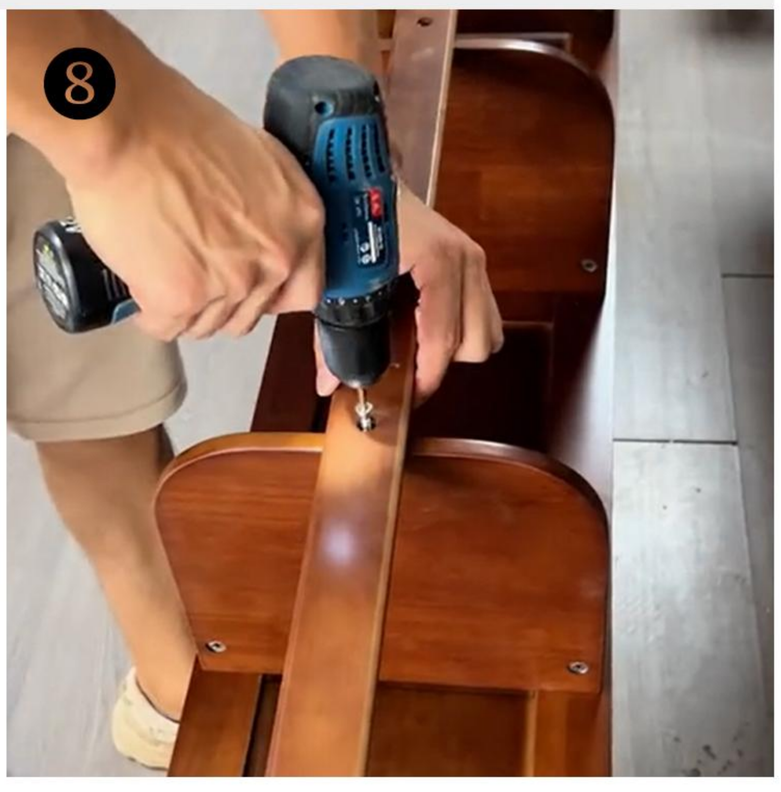

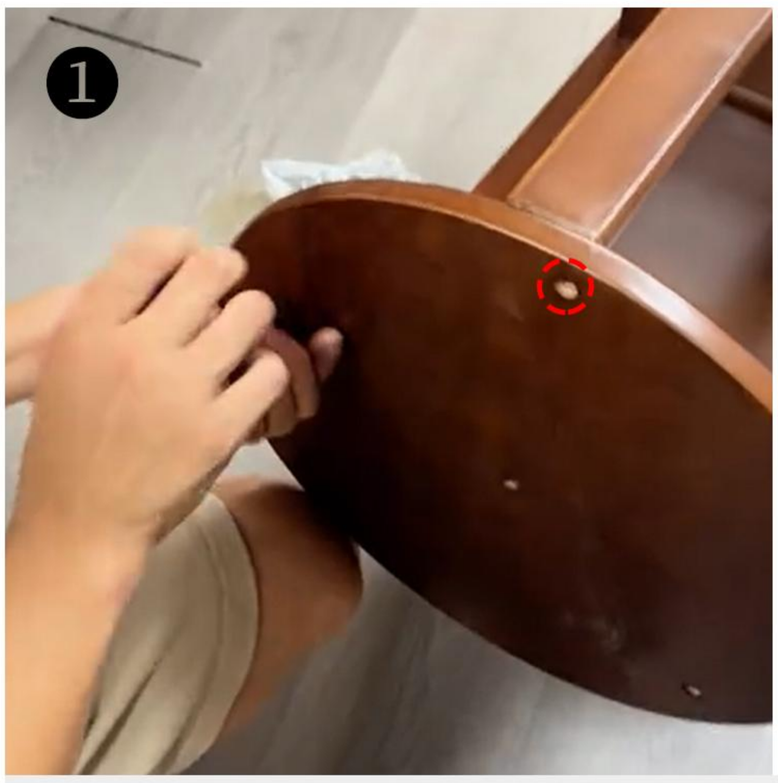





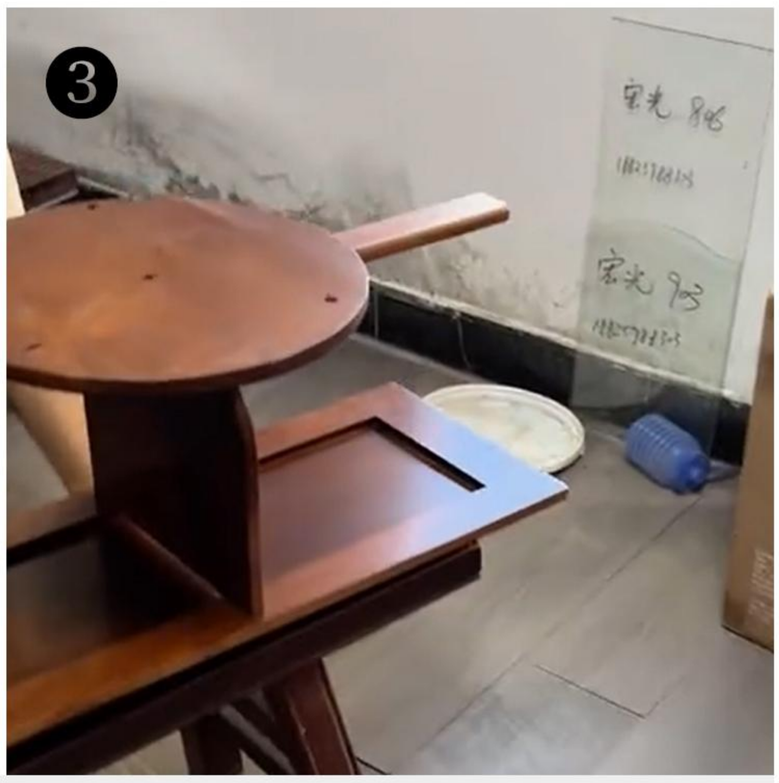

Next, find the two round panels. Install them on the top and bottom ends (note that the larger holes should face outward). Use the screws shown in Figure 2 to install them into the 3 holes. The installation method is the same for both ends — the larger holes face outward and the smaller holes face inward.




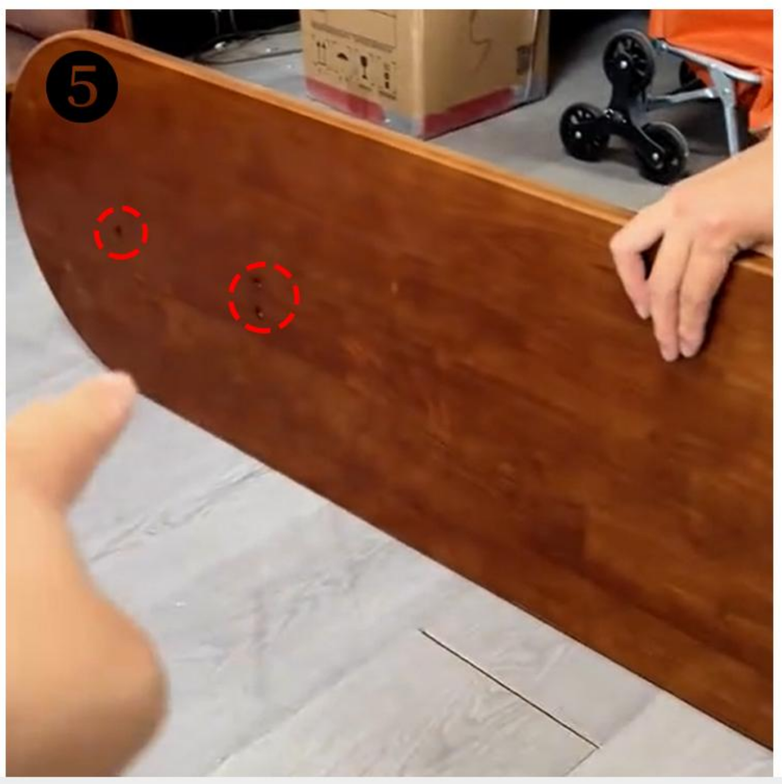

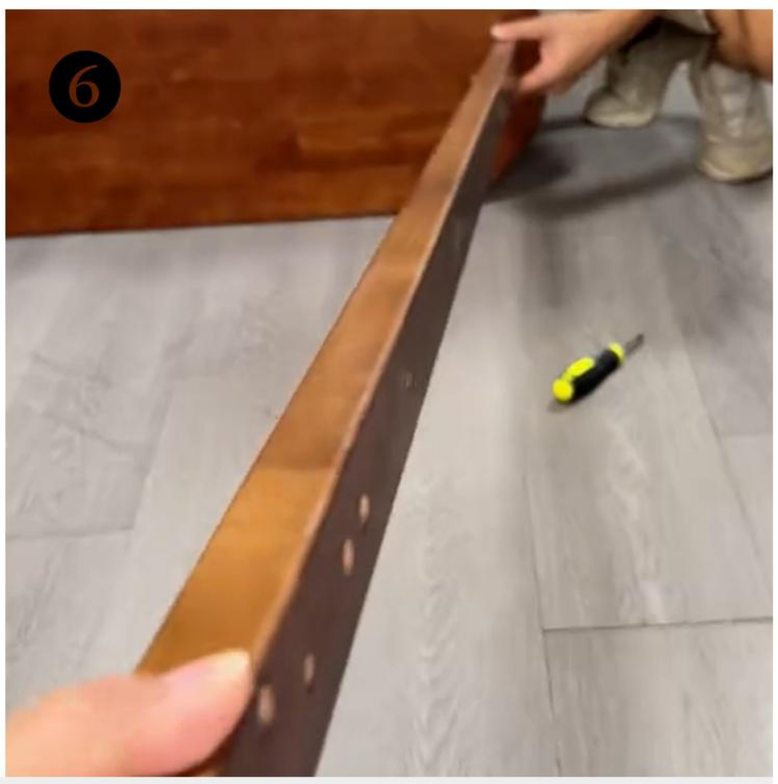



Step 2: Now find the base panel. One side of the base panel has two holes, and the other side has three holes. First, install the long rod on the side with two holes (as shown in Figure 6, the side with more holes should face outward). Use the slightly shorter screws shown in Figure 7 to install. After placing the screws, insert the nuts into the positions shown in Figure 9 (two screws and two nuts in total).




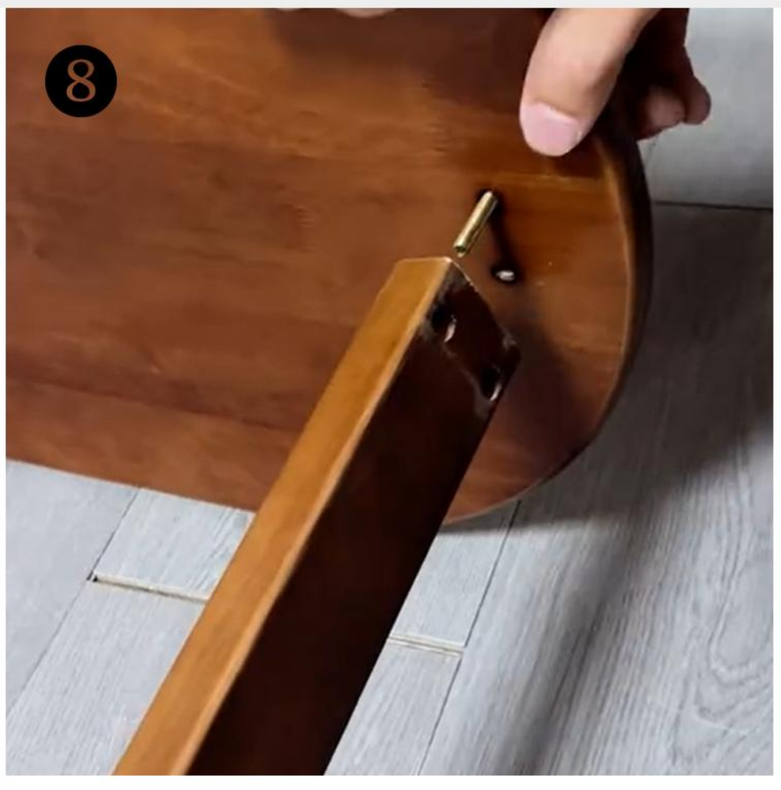




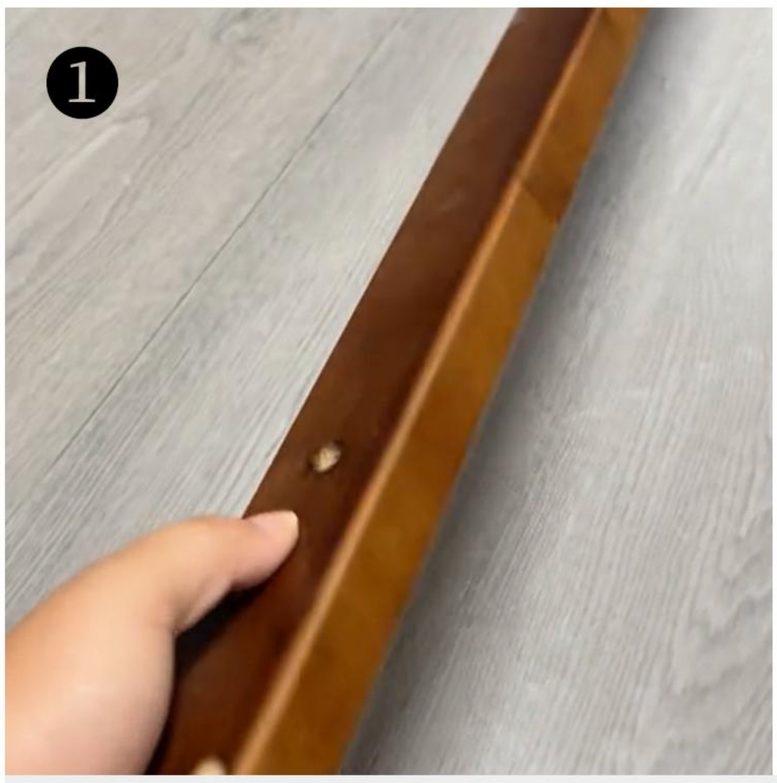


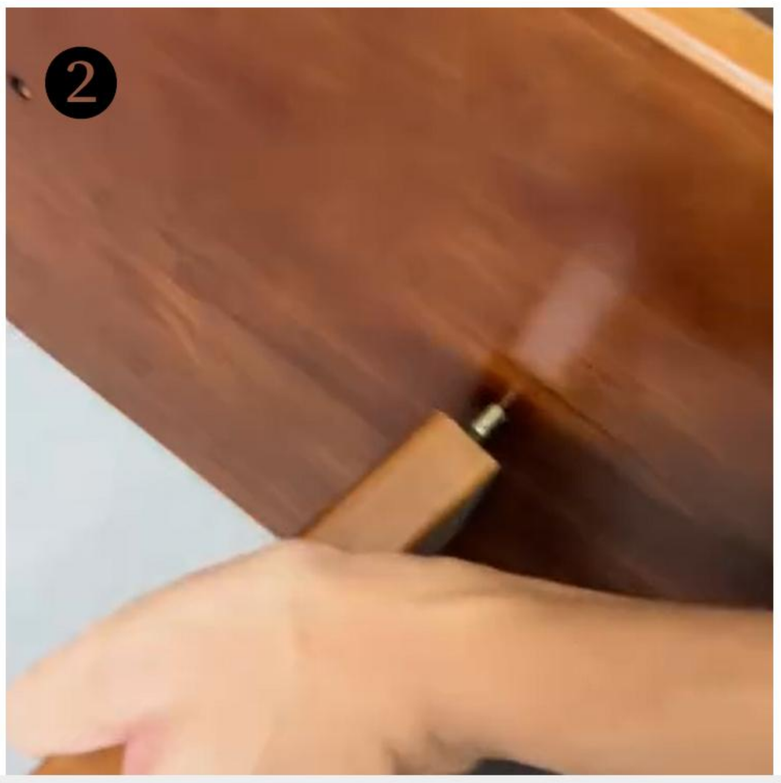


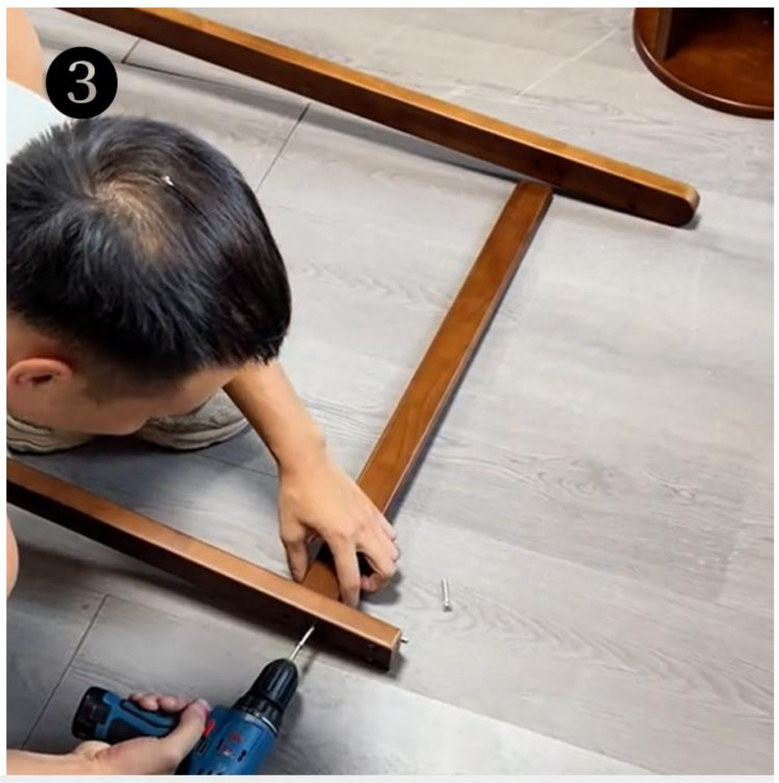


Now install the long rod that corresponds to the middle hole of the base panel (the larger hole should face outward). Follow the same method as before — insert the two screws and nuts into the corresponding holes and tighten them. Next, find the clothes-drying rod and use the silver screws to install and secure it between the two long rods.

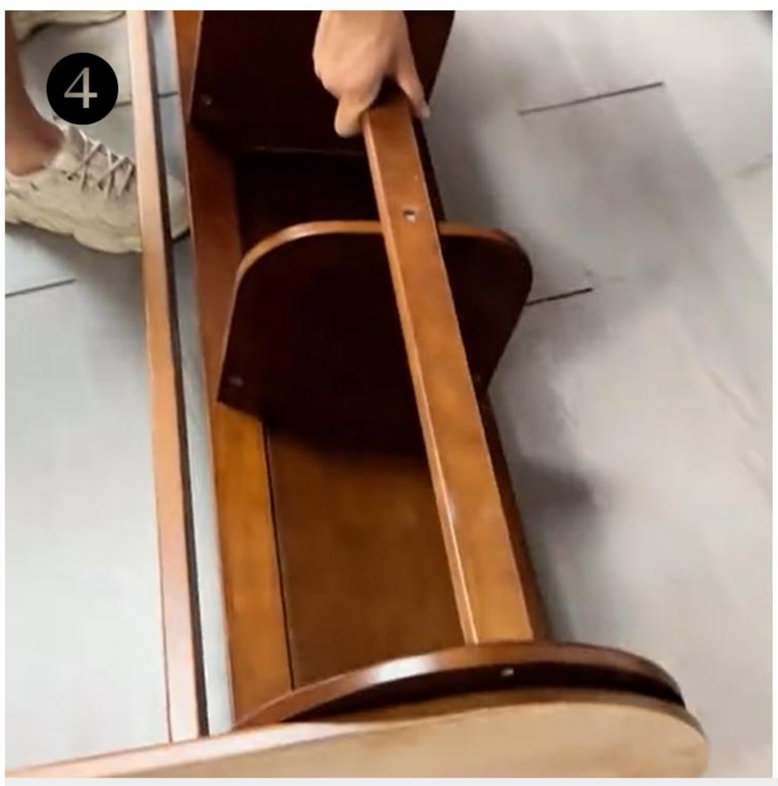


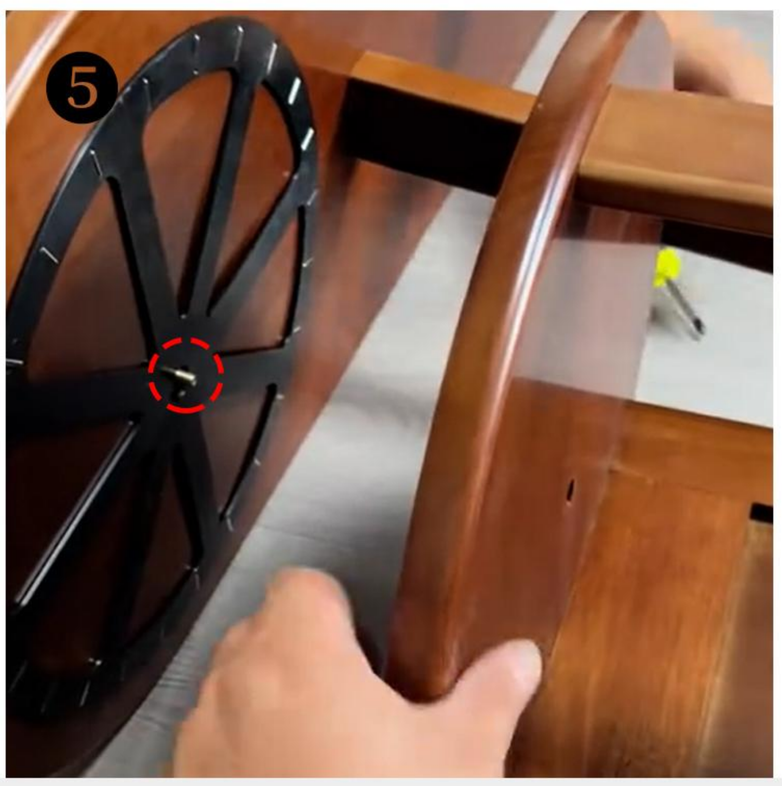

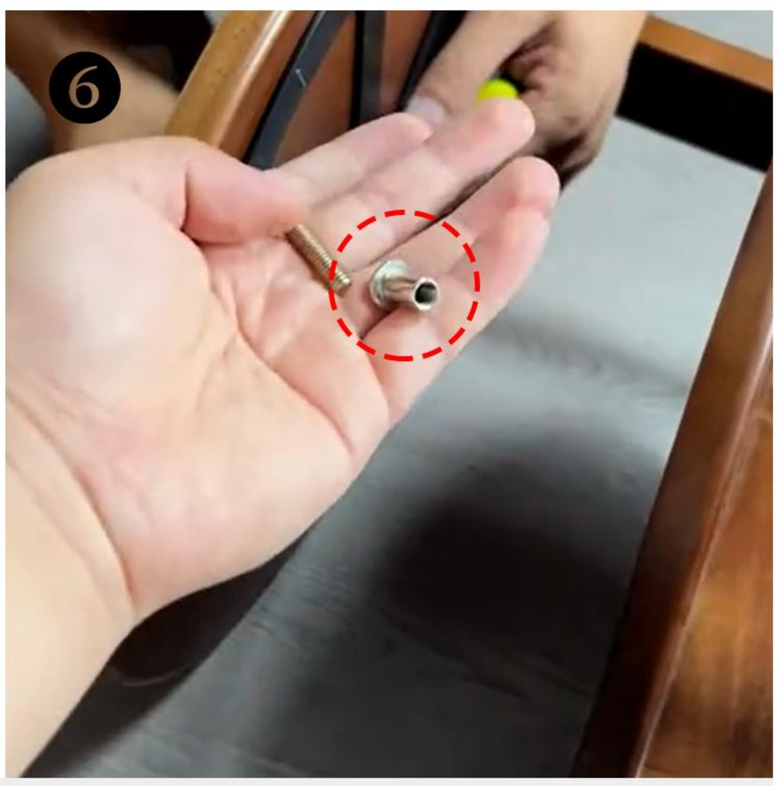



Step 3: Install the mirror. First, safely lay the mirror down flat. Place a turntable between the mirror and the base. Take a short screw and pass it through the middle hole, then align the mirror with the base. Take the screw shown in Figure 6 and tighten it onto the short screw you just installed.

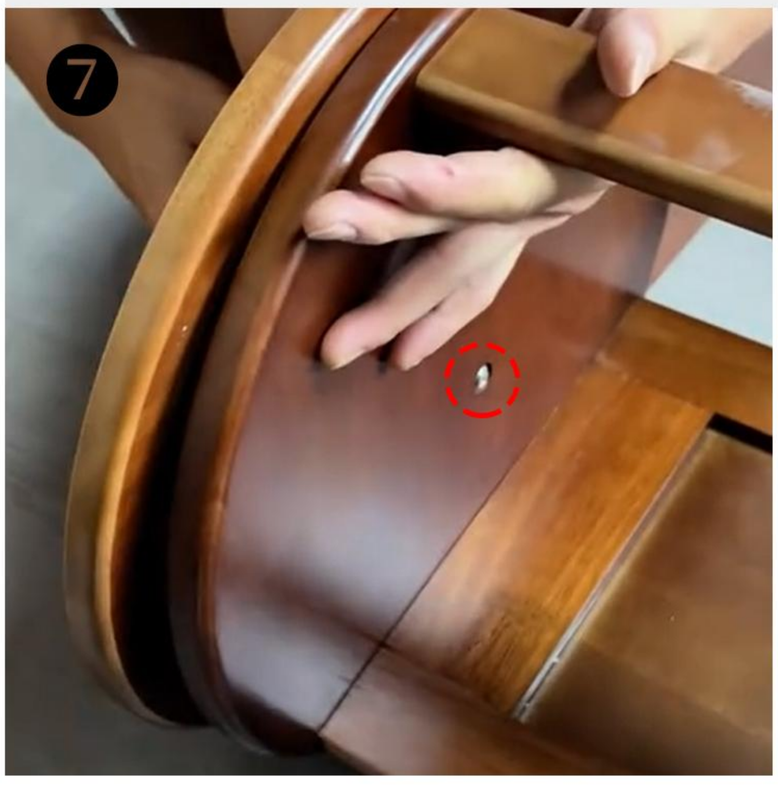

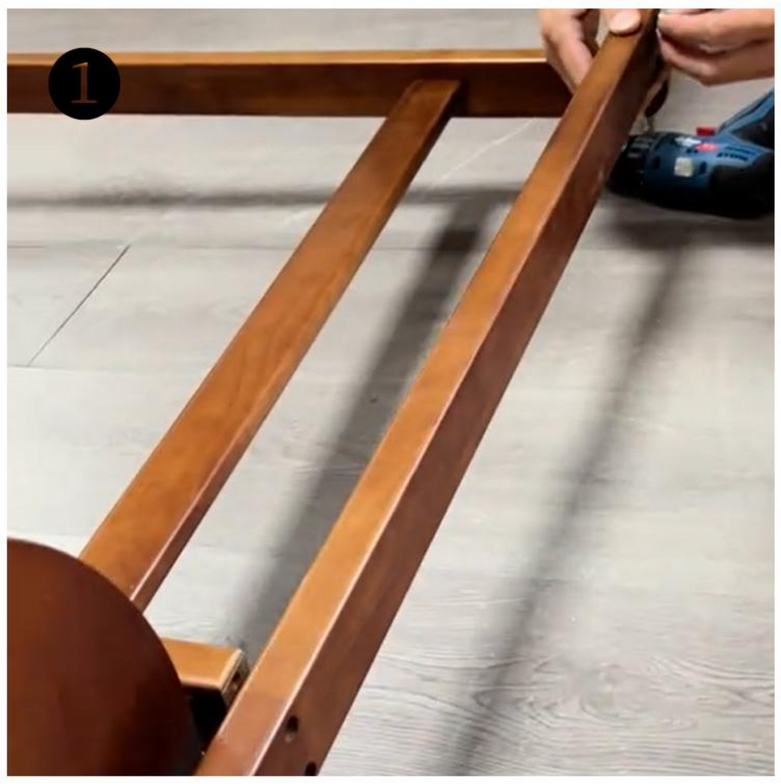




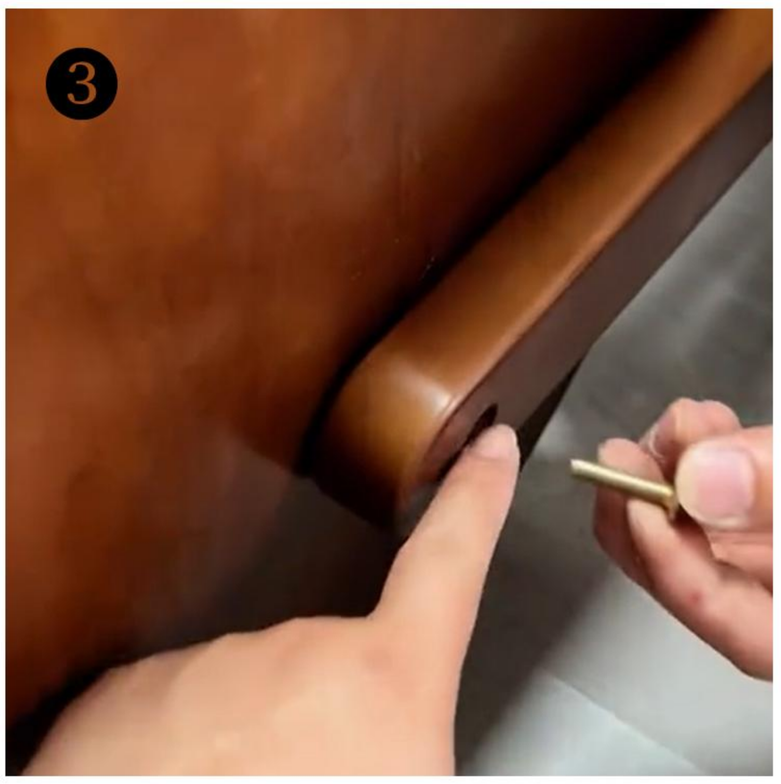


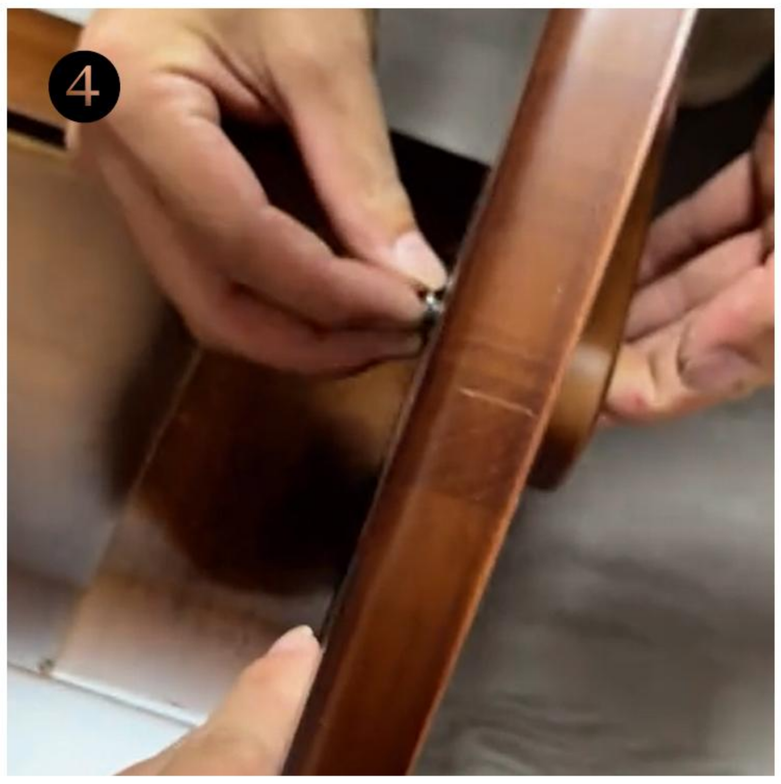


Next, install the top clothes-drying rod, with the larger hole facing outward. Use the screws shown in Figure 2 to install it, and in the same way as before, tighten it with the other screw.

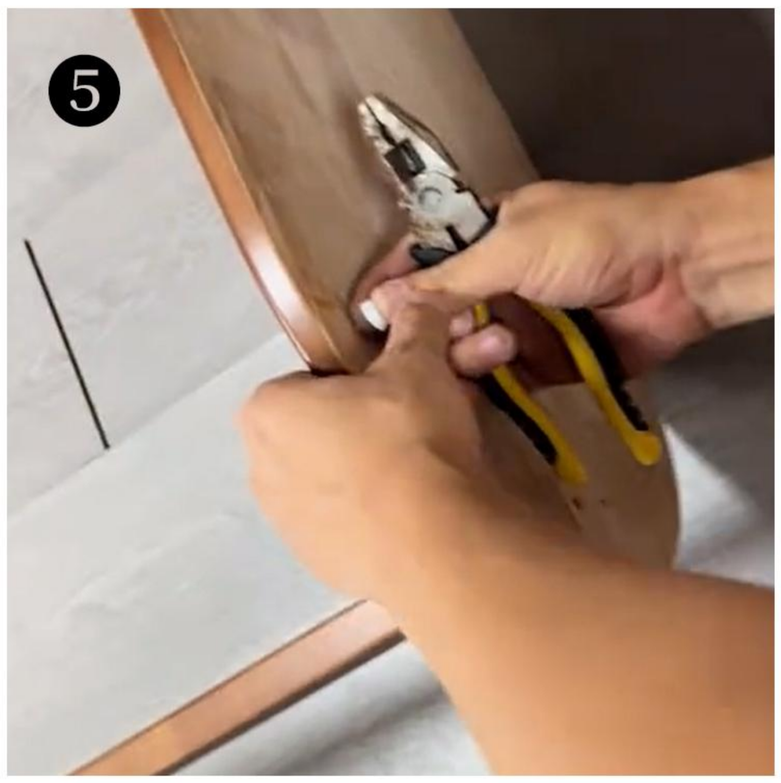



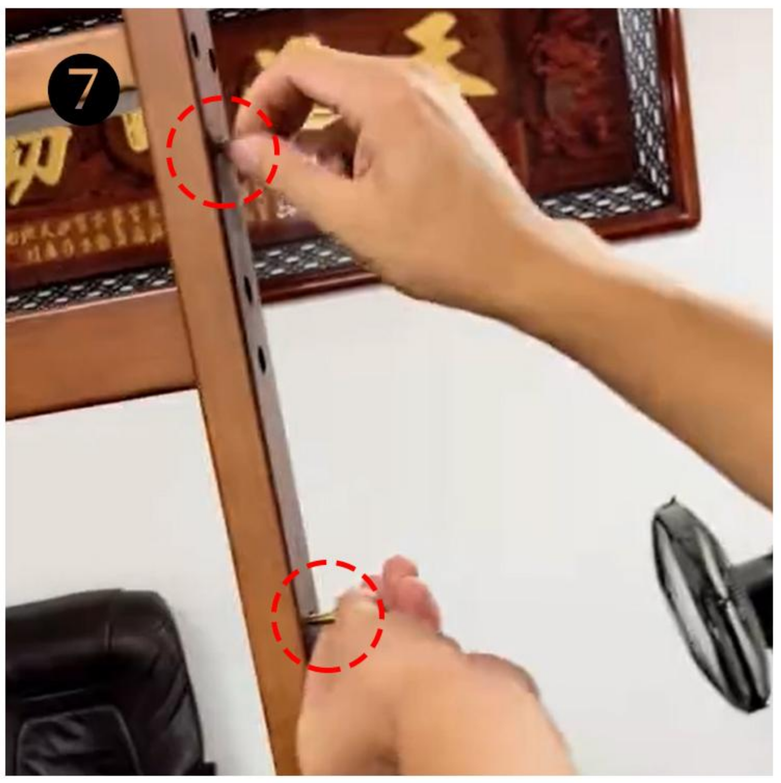

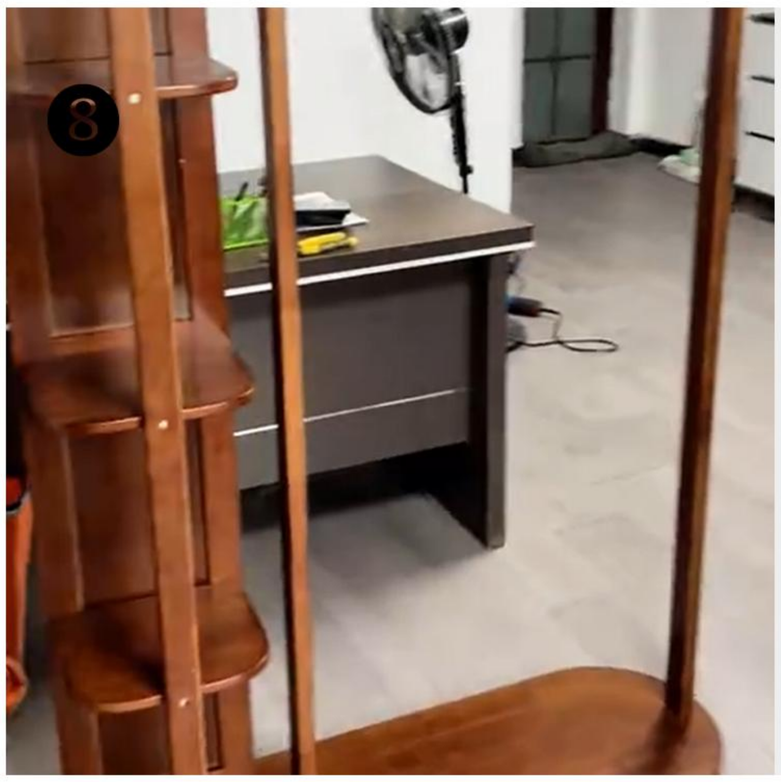

Step 4: Install the white foot pads onto the four corners underneath the base according to the corresponding holes. Install the screws and hooks on the sides. And that completes the installation!