

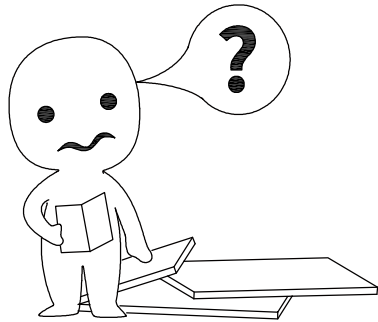


**NOTE:** Please contact us in time. If you find any accessories missing or damaged in the package, we will send you the corresponding accessories for free.

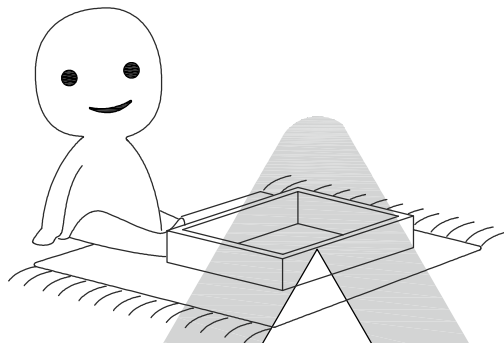



**IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

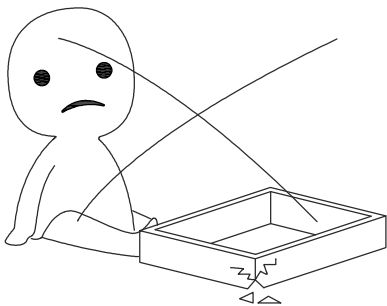





**AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

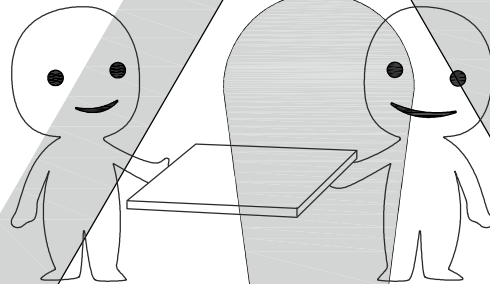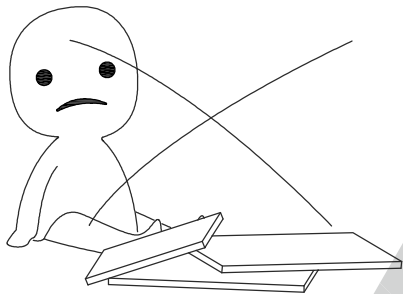

**IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

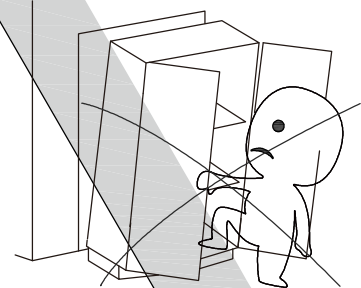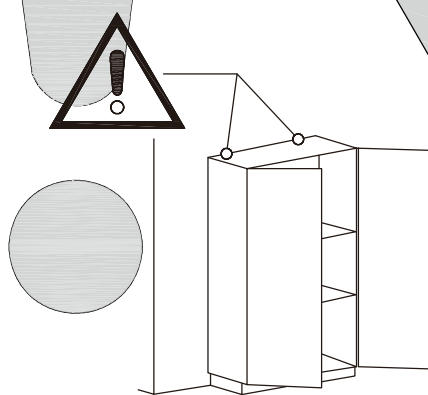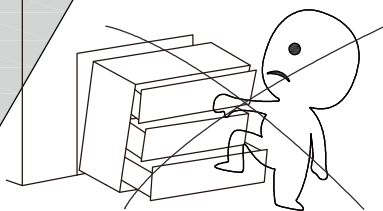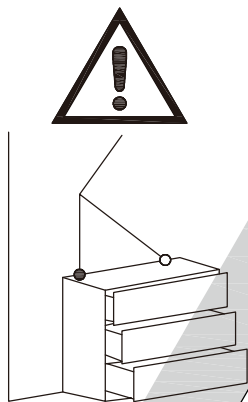

**ANTI-TOPPLE WARNING !**


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


**IMPORTANT !**

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

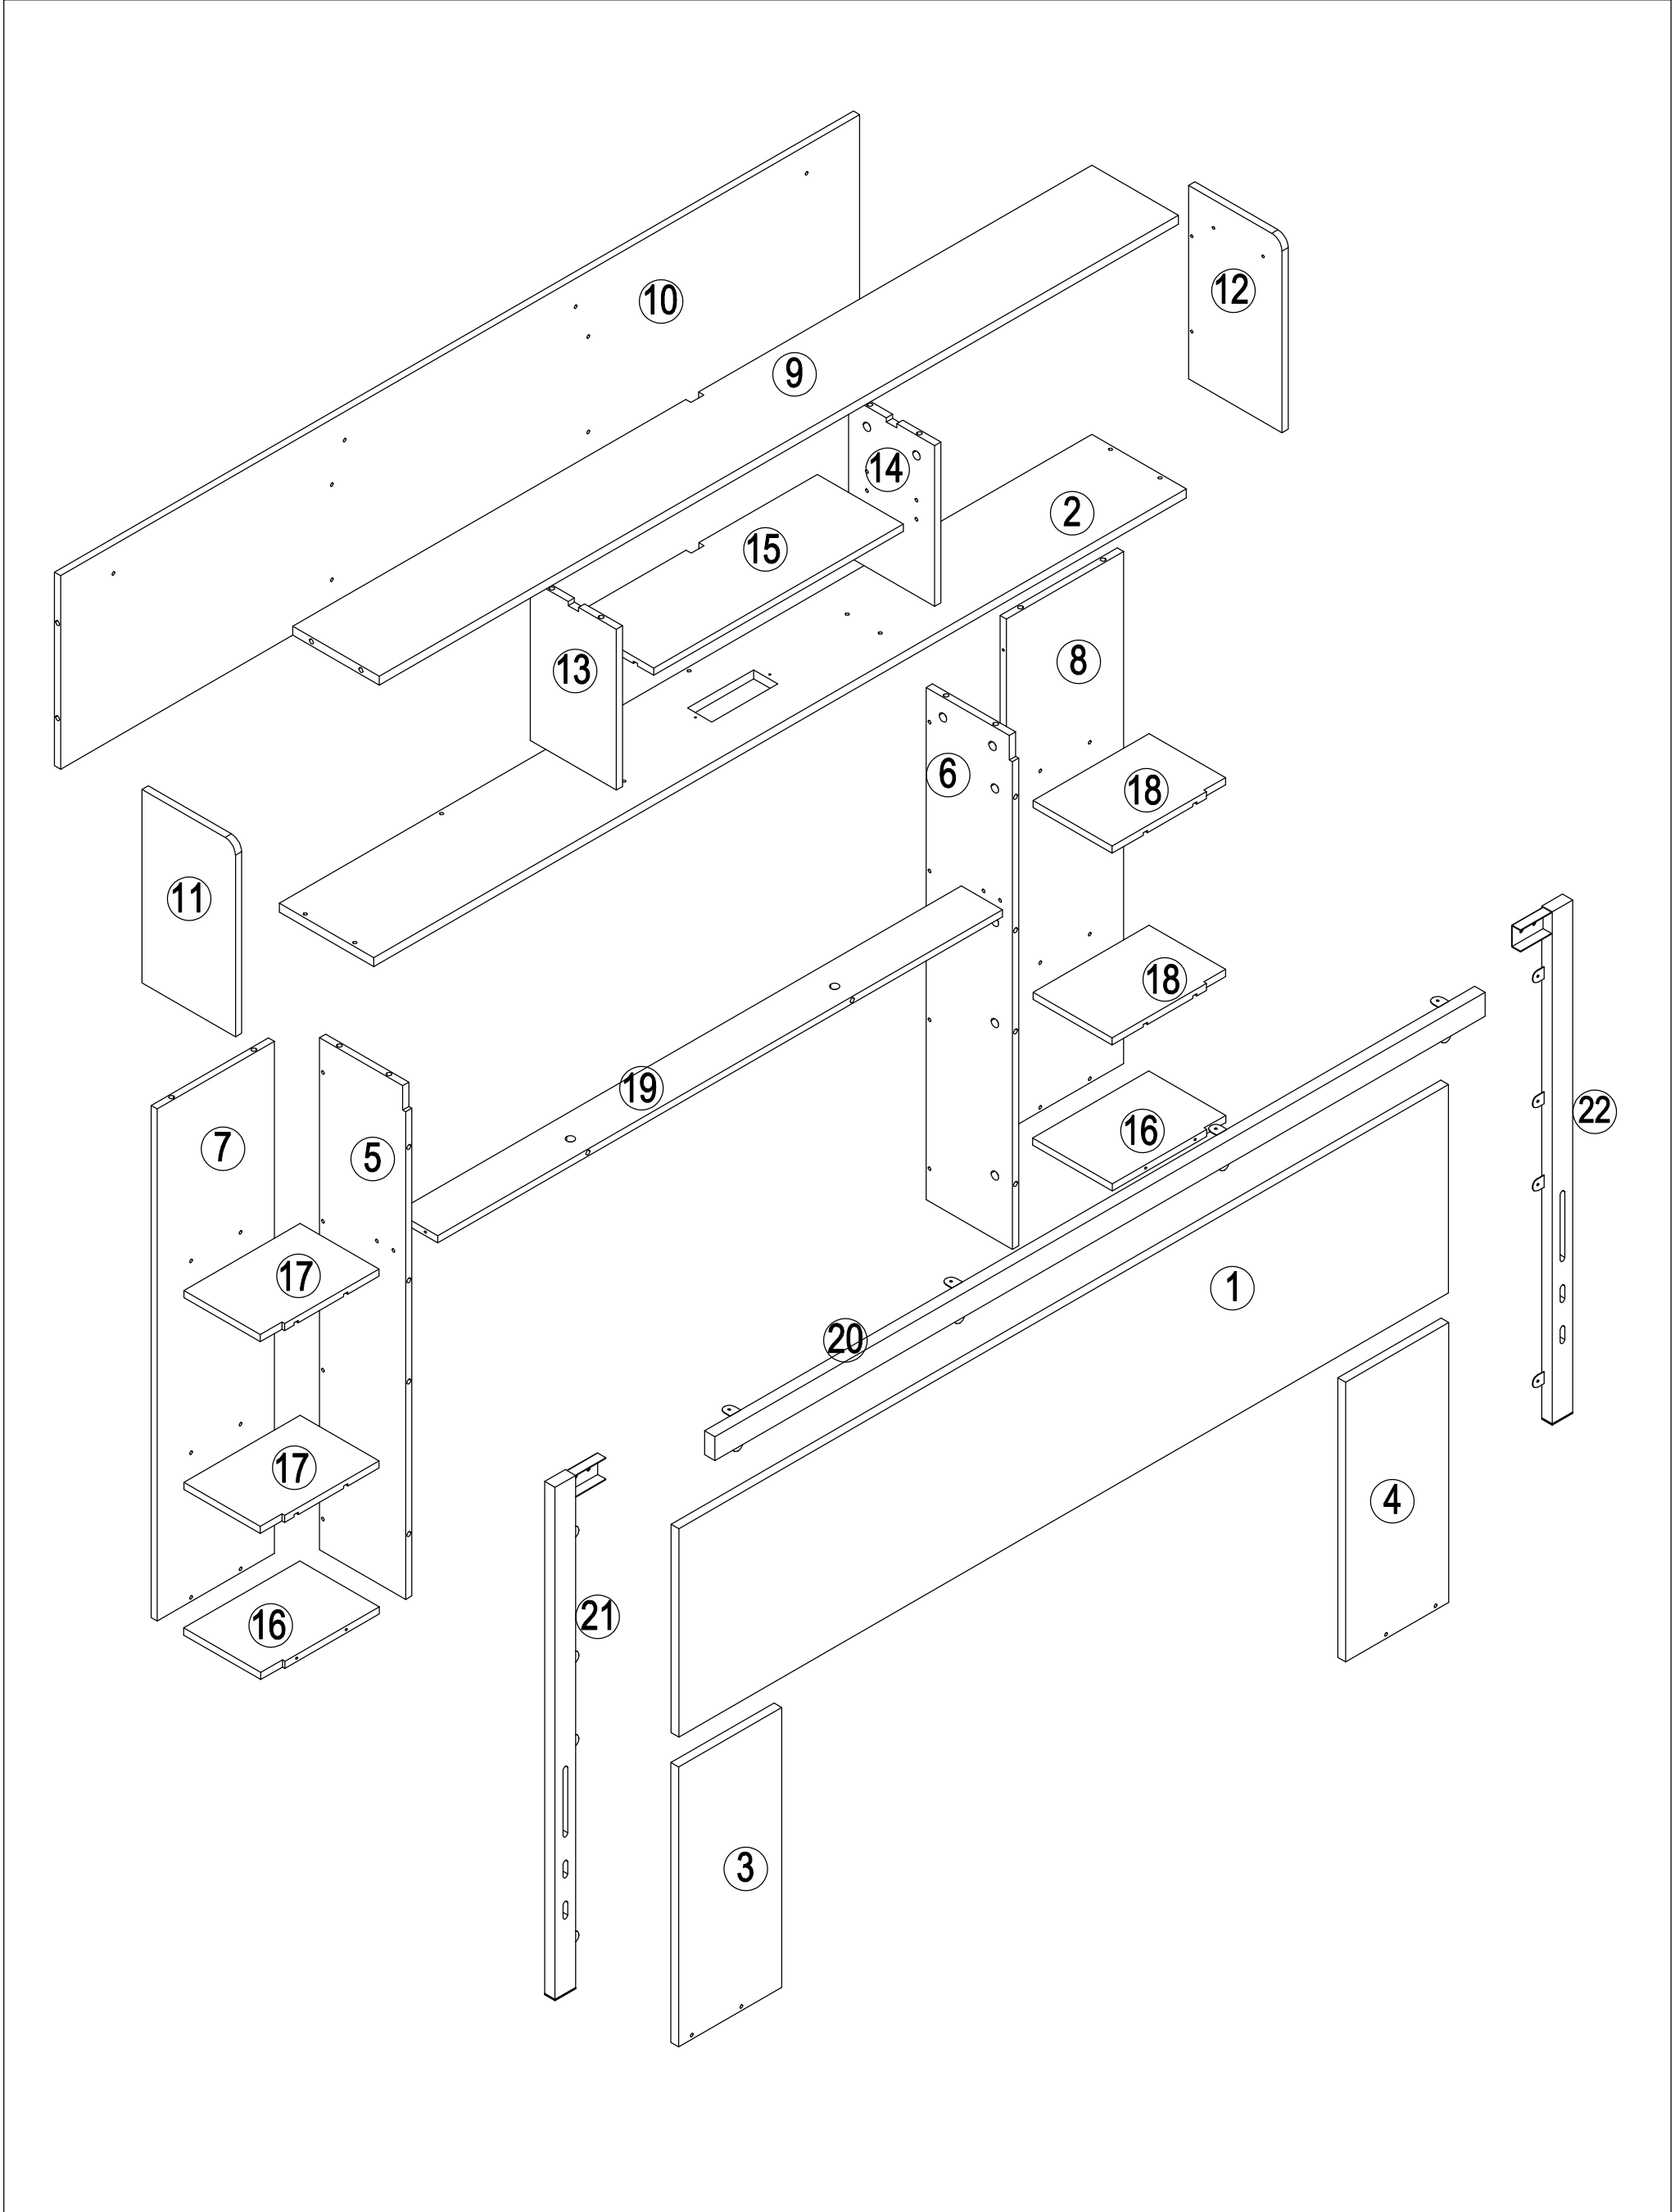


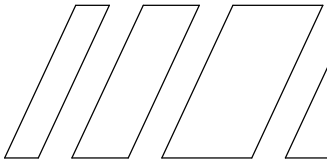


1

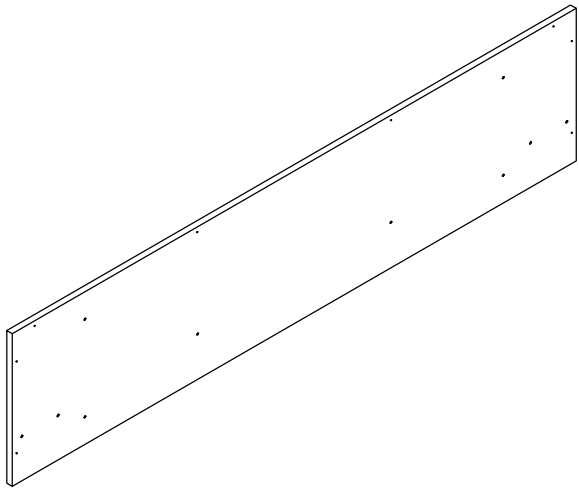


2

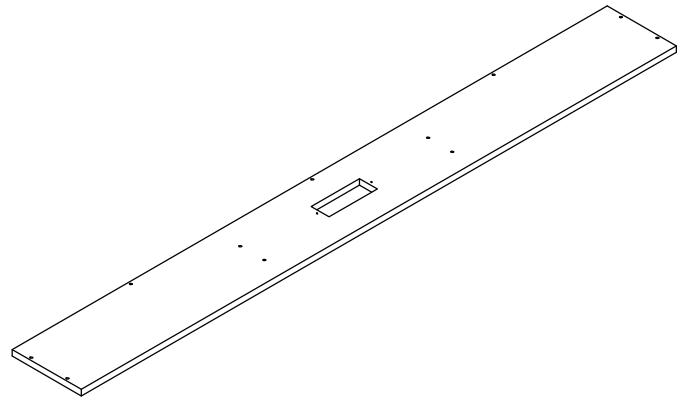


3

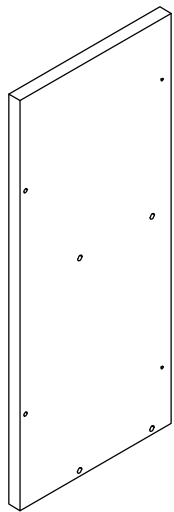


4

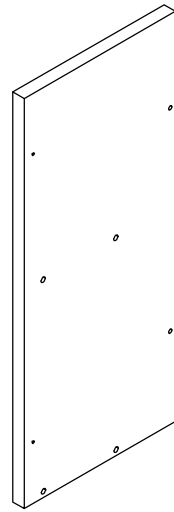


5

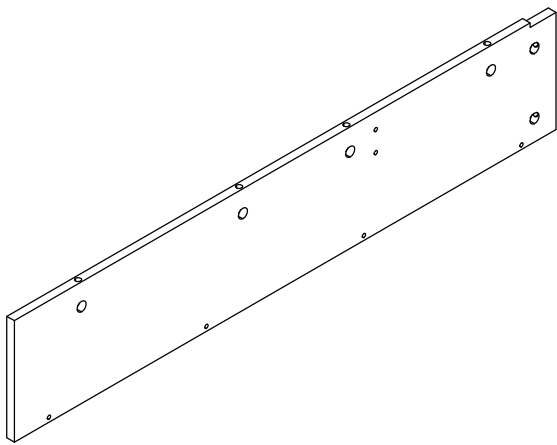


6

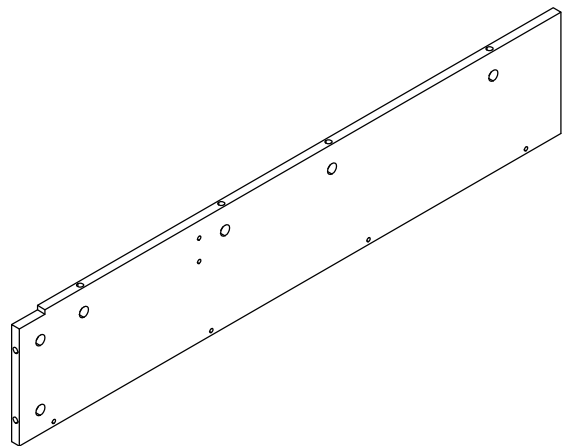


7

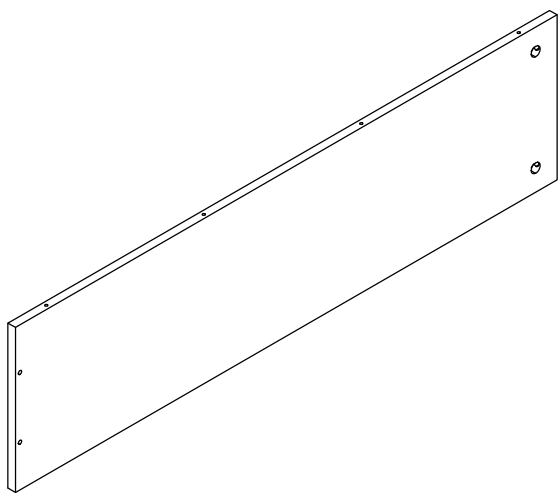


8

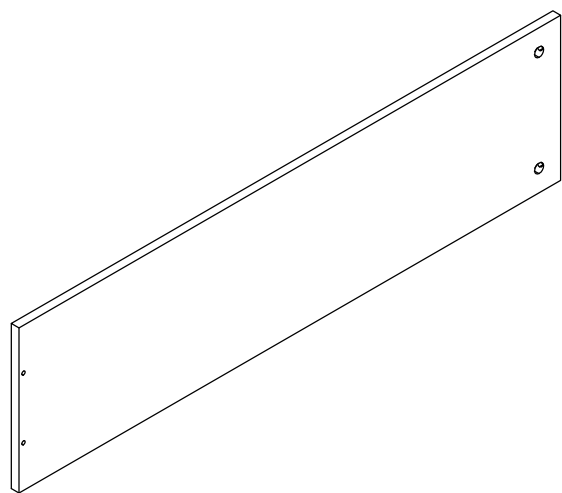


9

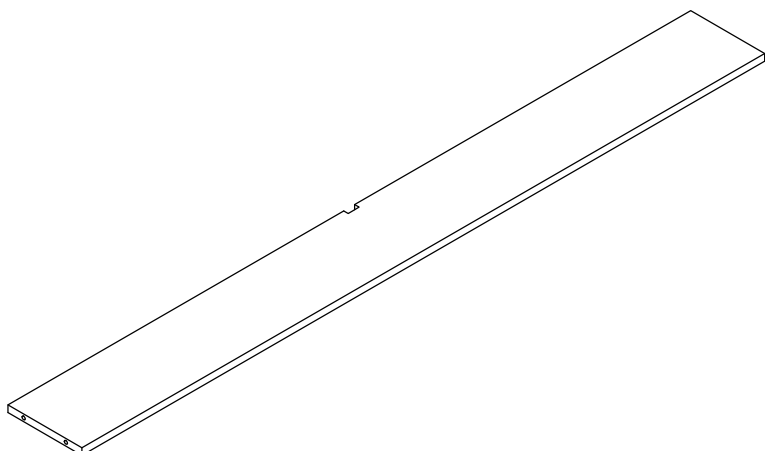


10

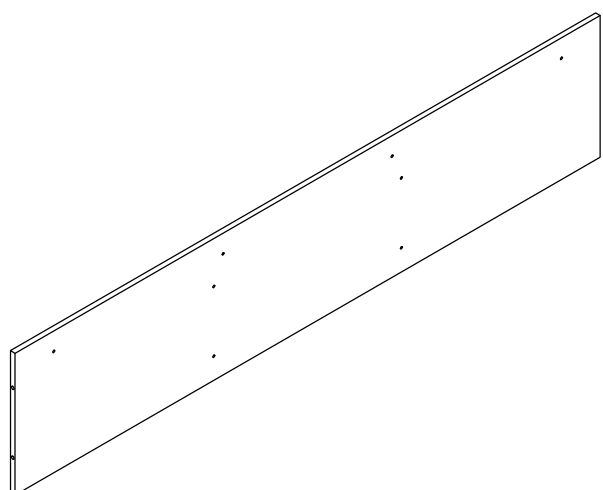


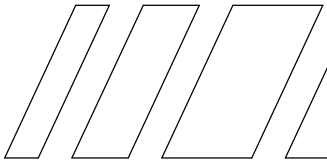


11

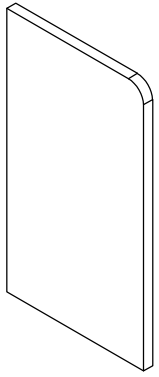


12

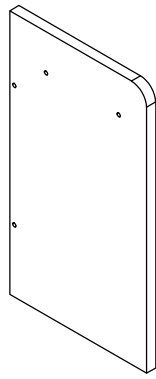


13

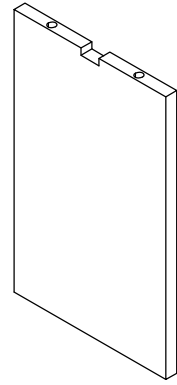


14

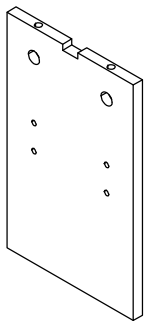

15

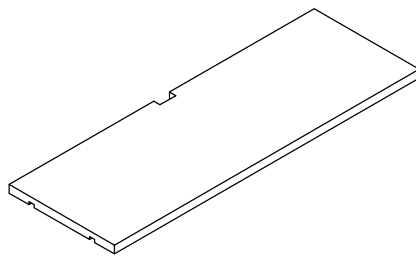


16

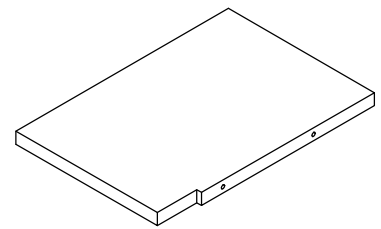


X2

17

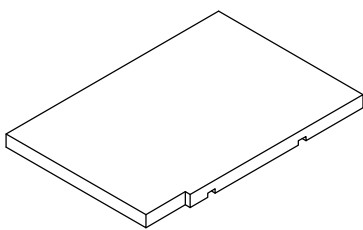


X2

18

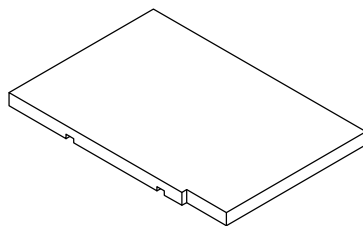


X2


19

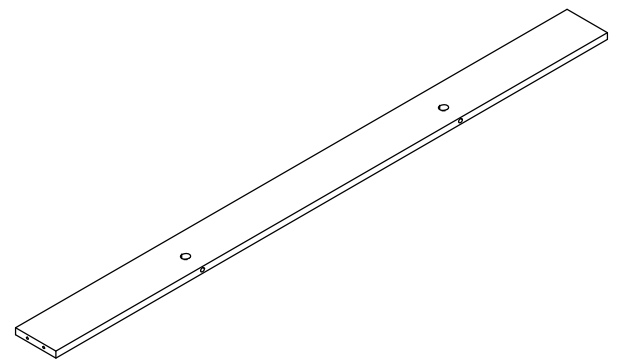


20

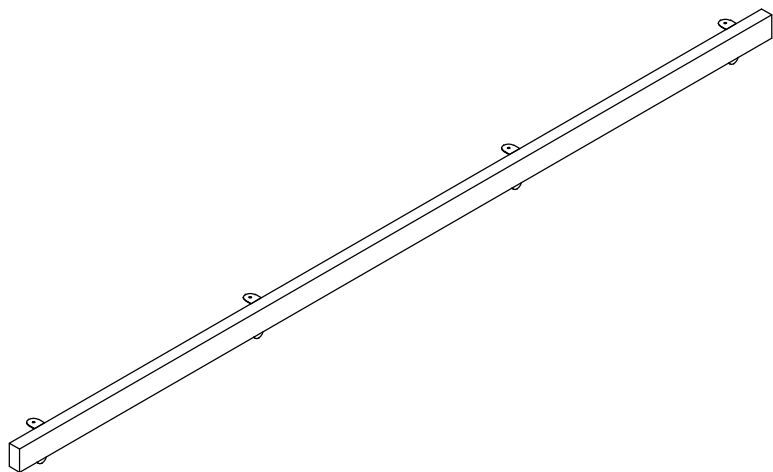


21












22

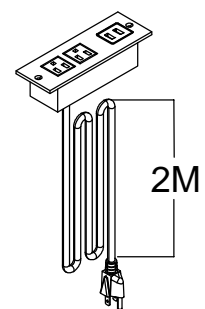

23




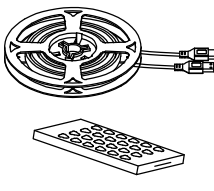
<p>A M6x12</p>  <p>4 PCS</p>	<p>B Ø3.5x14</p>  <p>26 PCS</p>	<p>C M5x42</p>  <p>30 PCS</p>	<p>D M5x40</p>  <p>39 PCS</p>	<p>E Ø15x10</p>  <p>30 PCS</p>	<p>F</p>  <p>1 SETS</p>	<p>G</p>  <p>8 PCS</p>	<p>H Ø5</p>  <p>20 PCS</p>
---	--	--	--	---	--	---	---

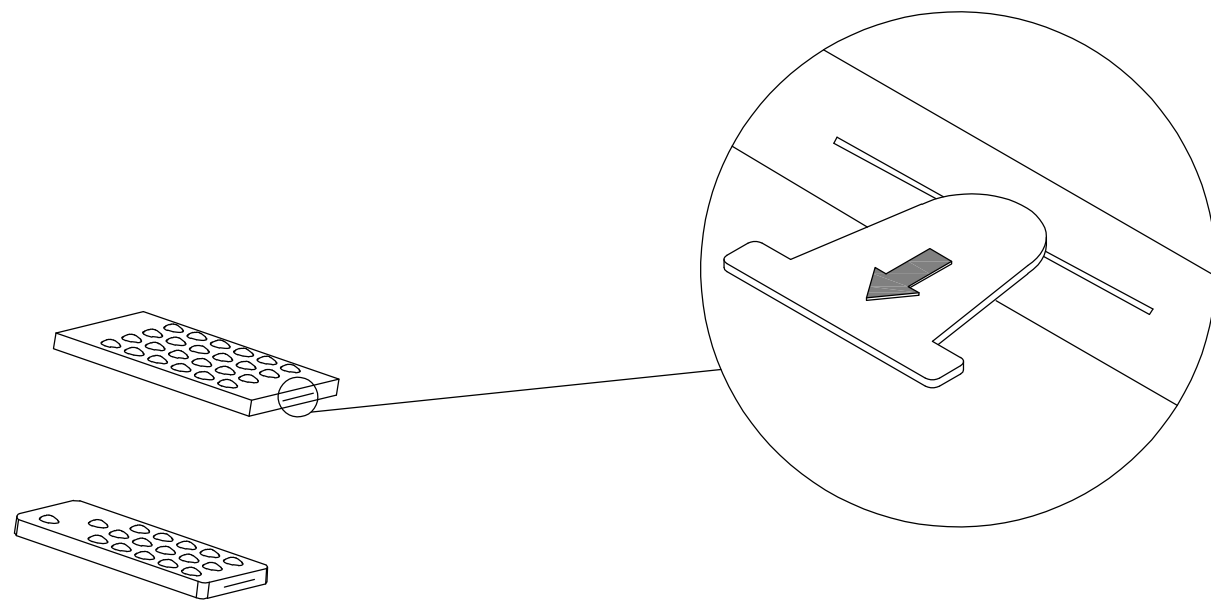




Remove the plastic piece before using the remote .  
Read the manual for the remote control .

### Cam Lock Fastening System

This Cam Lock Fastening System will be used throughout the assembly process

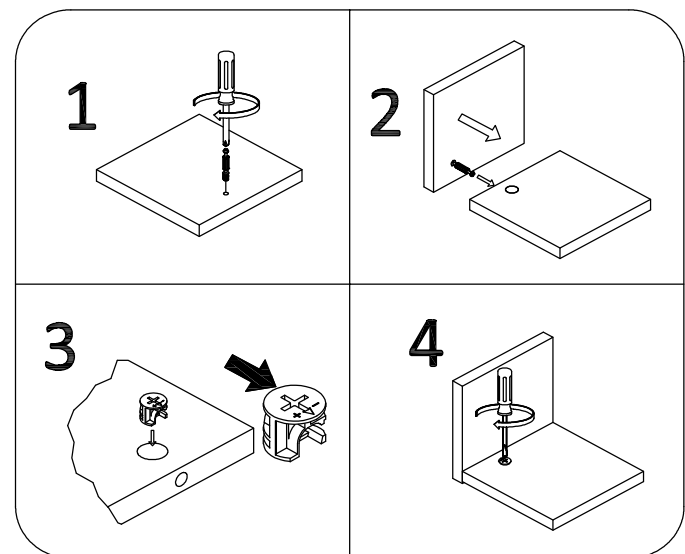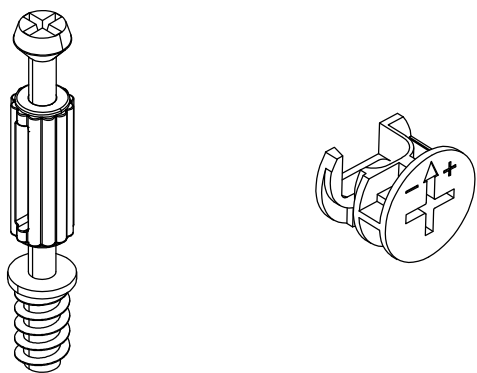



1

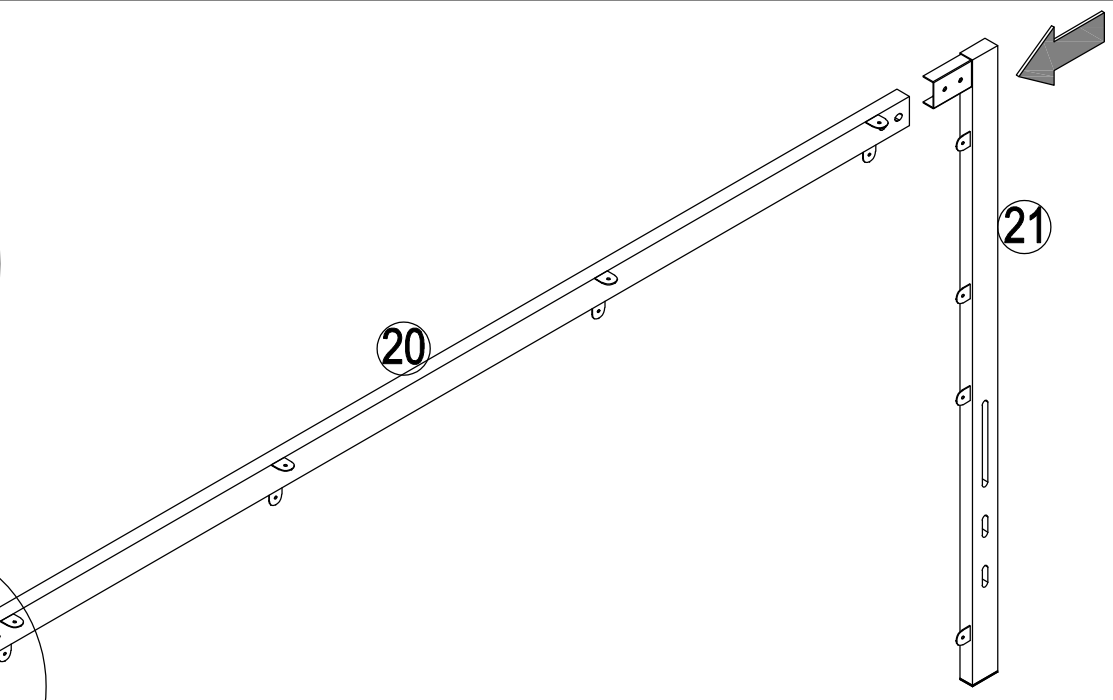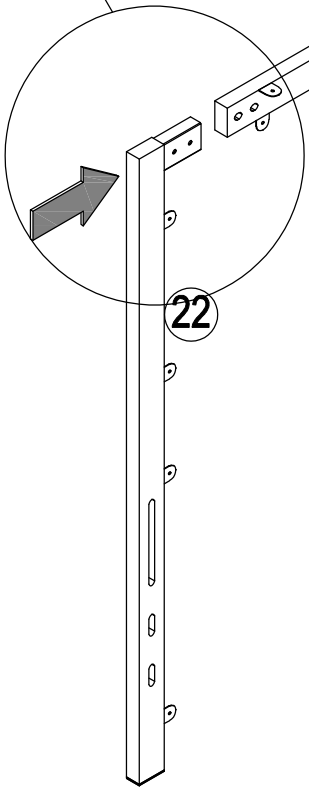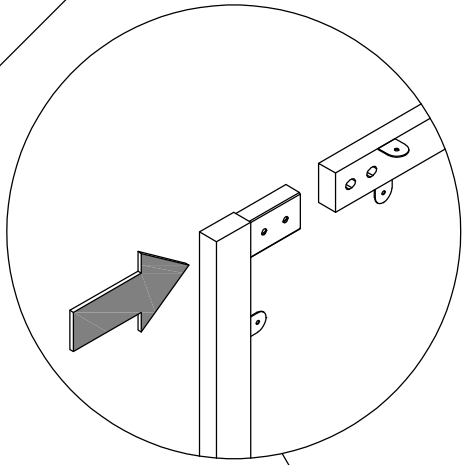

A M6x12



4 PCS

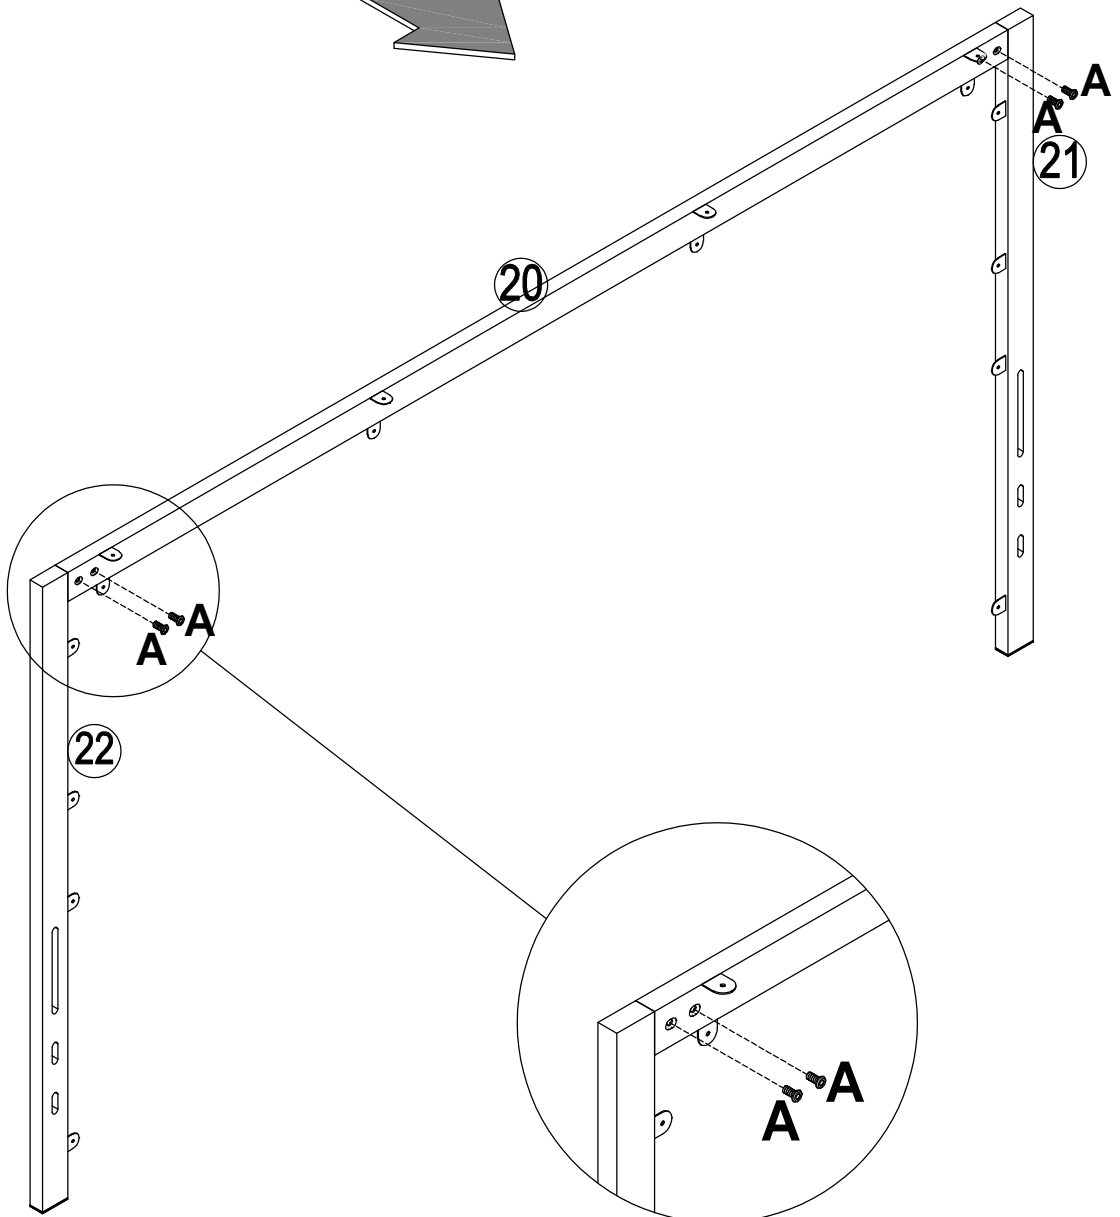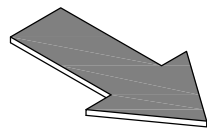



2

B Ø3.5x14




12 PCS

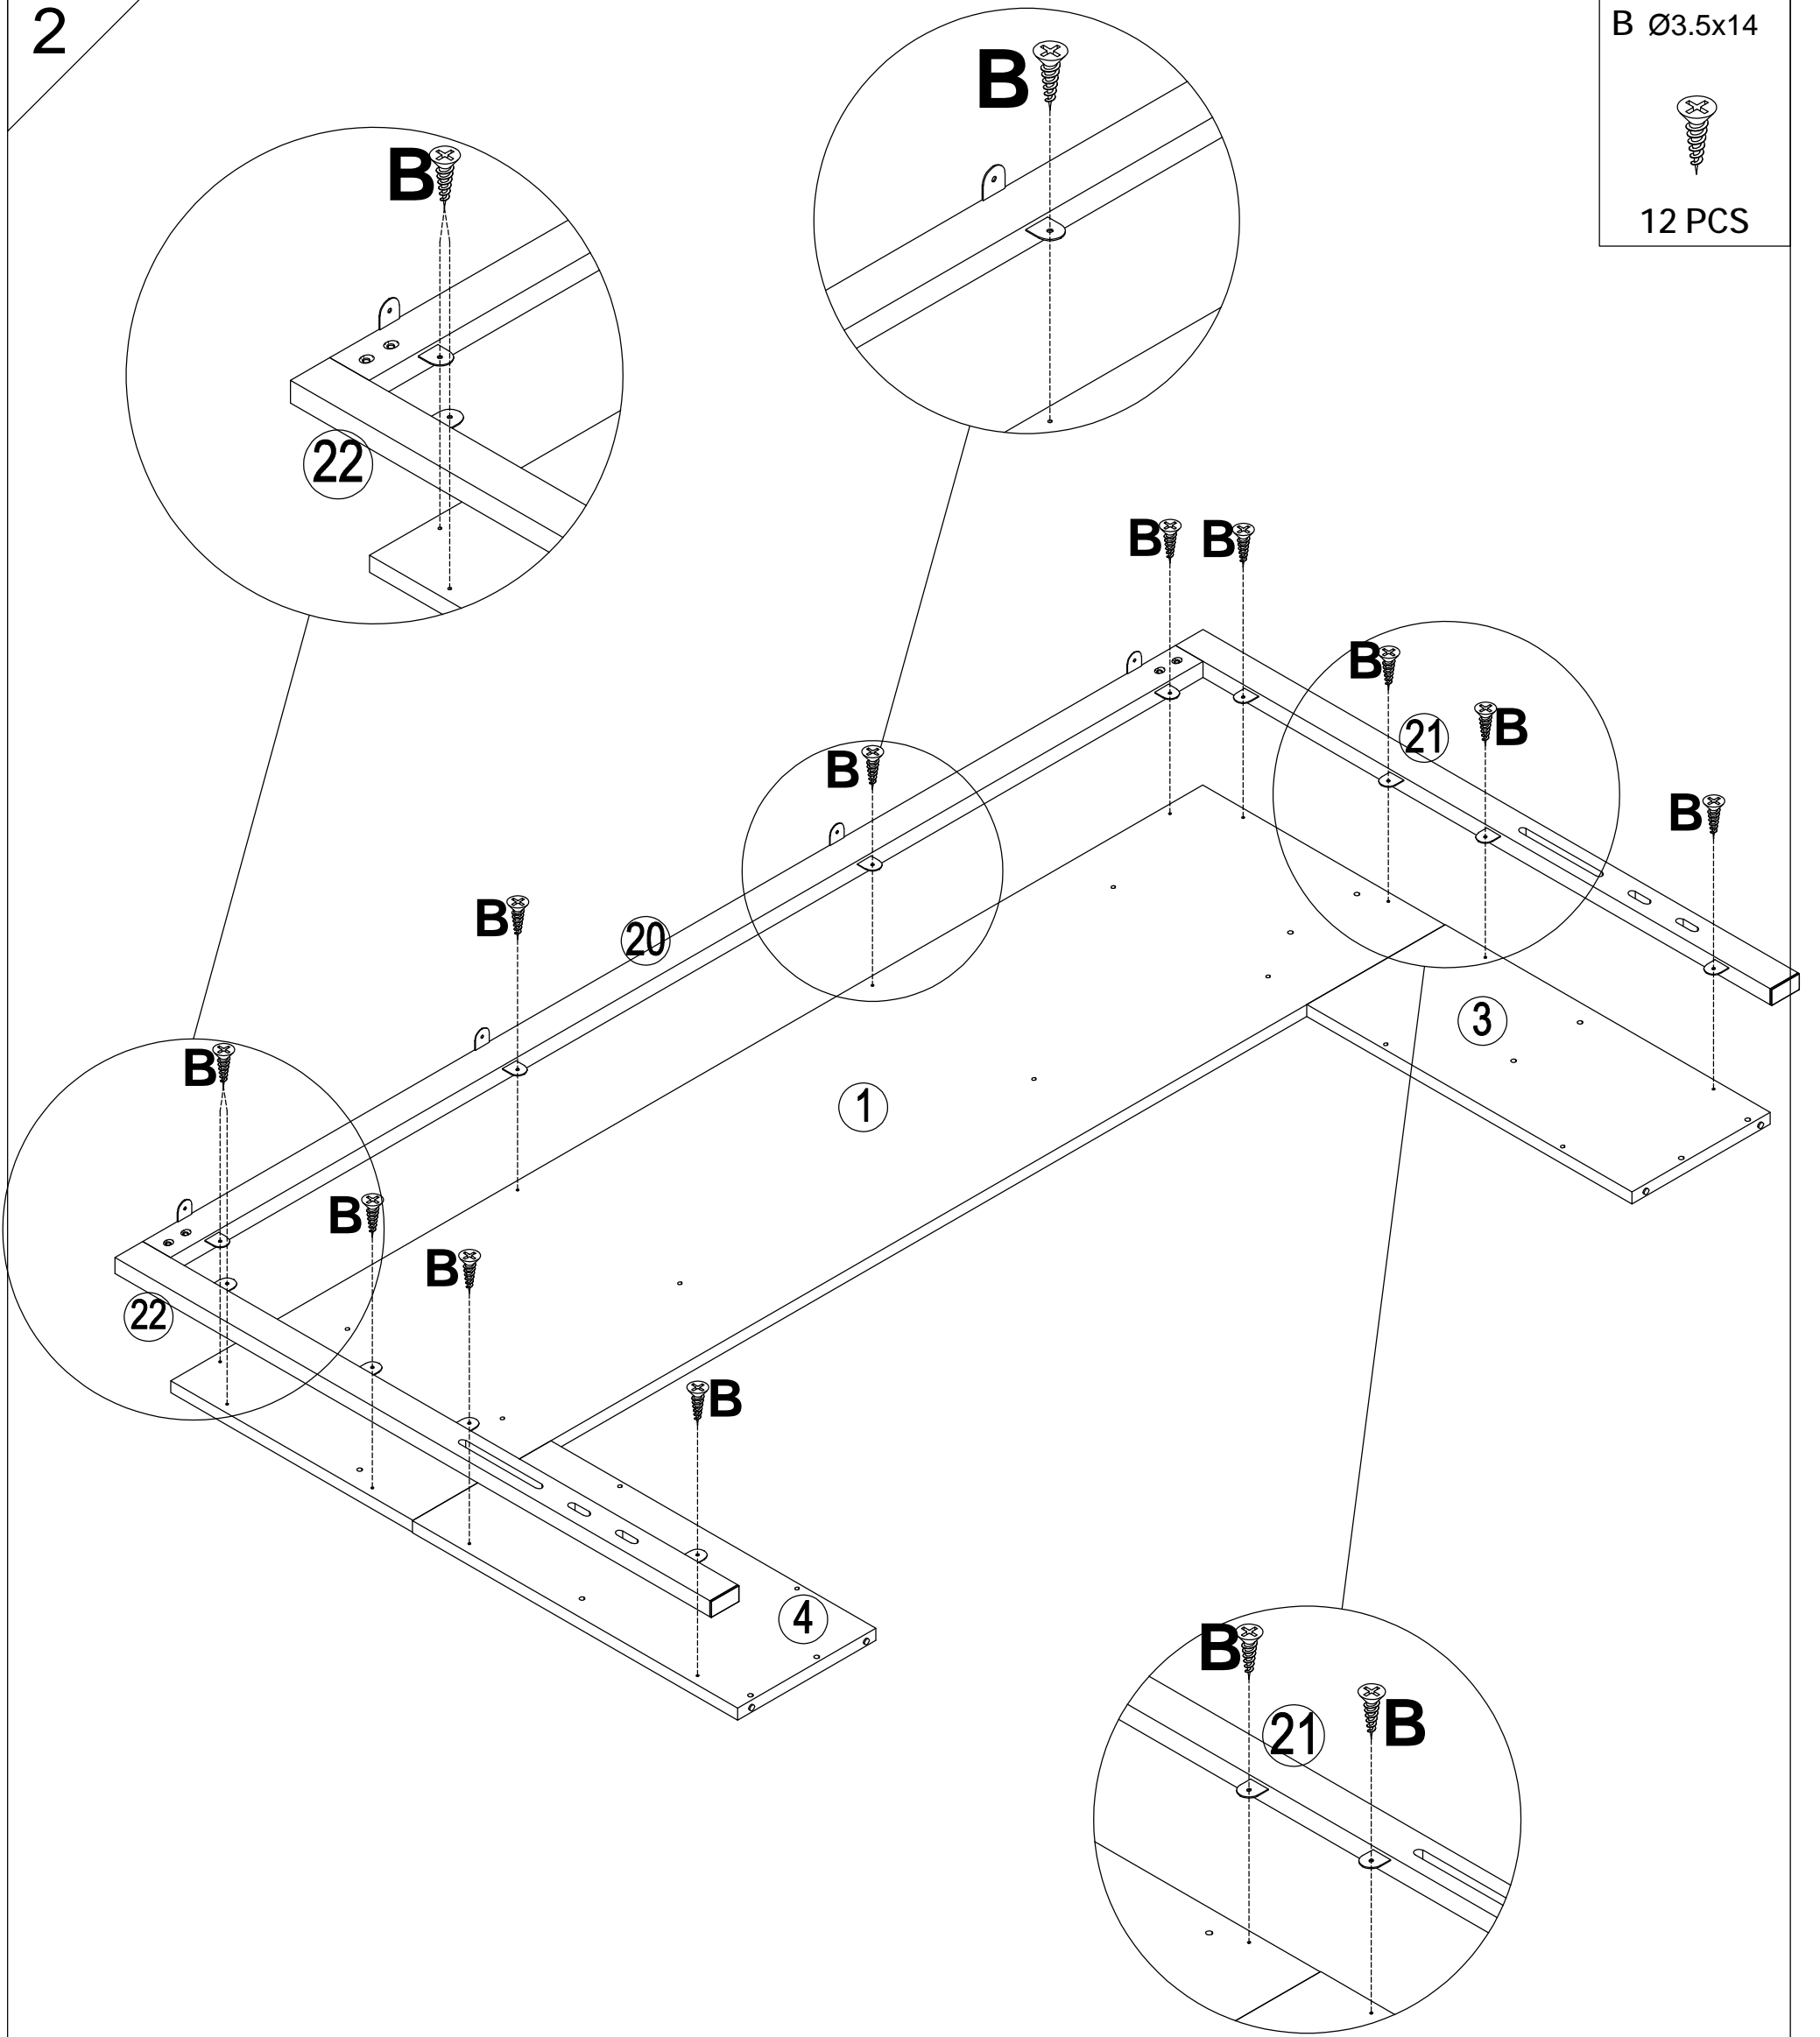

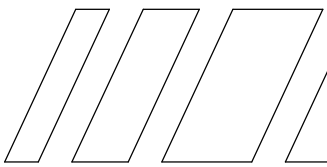



3

C M5x42



10 PCS

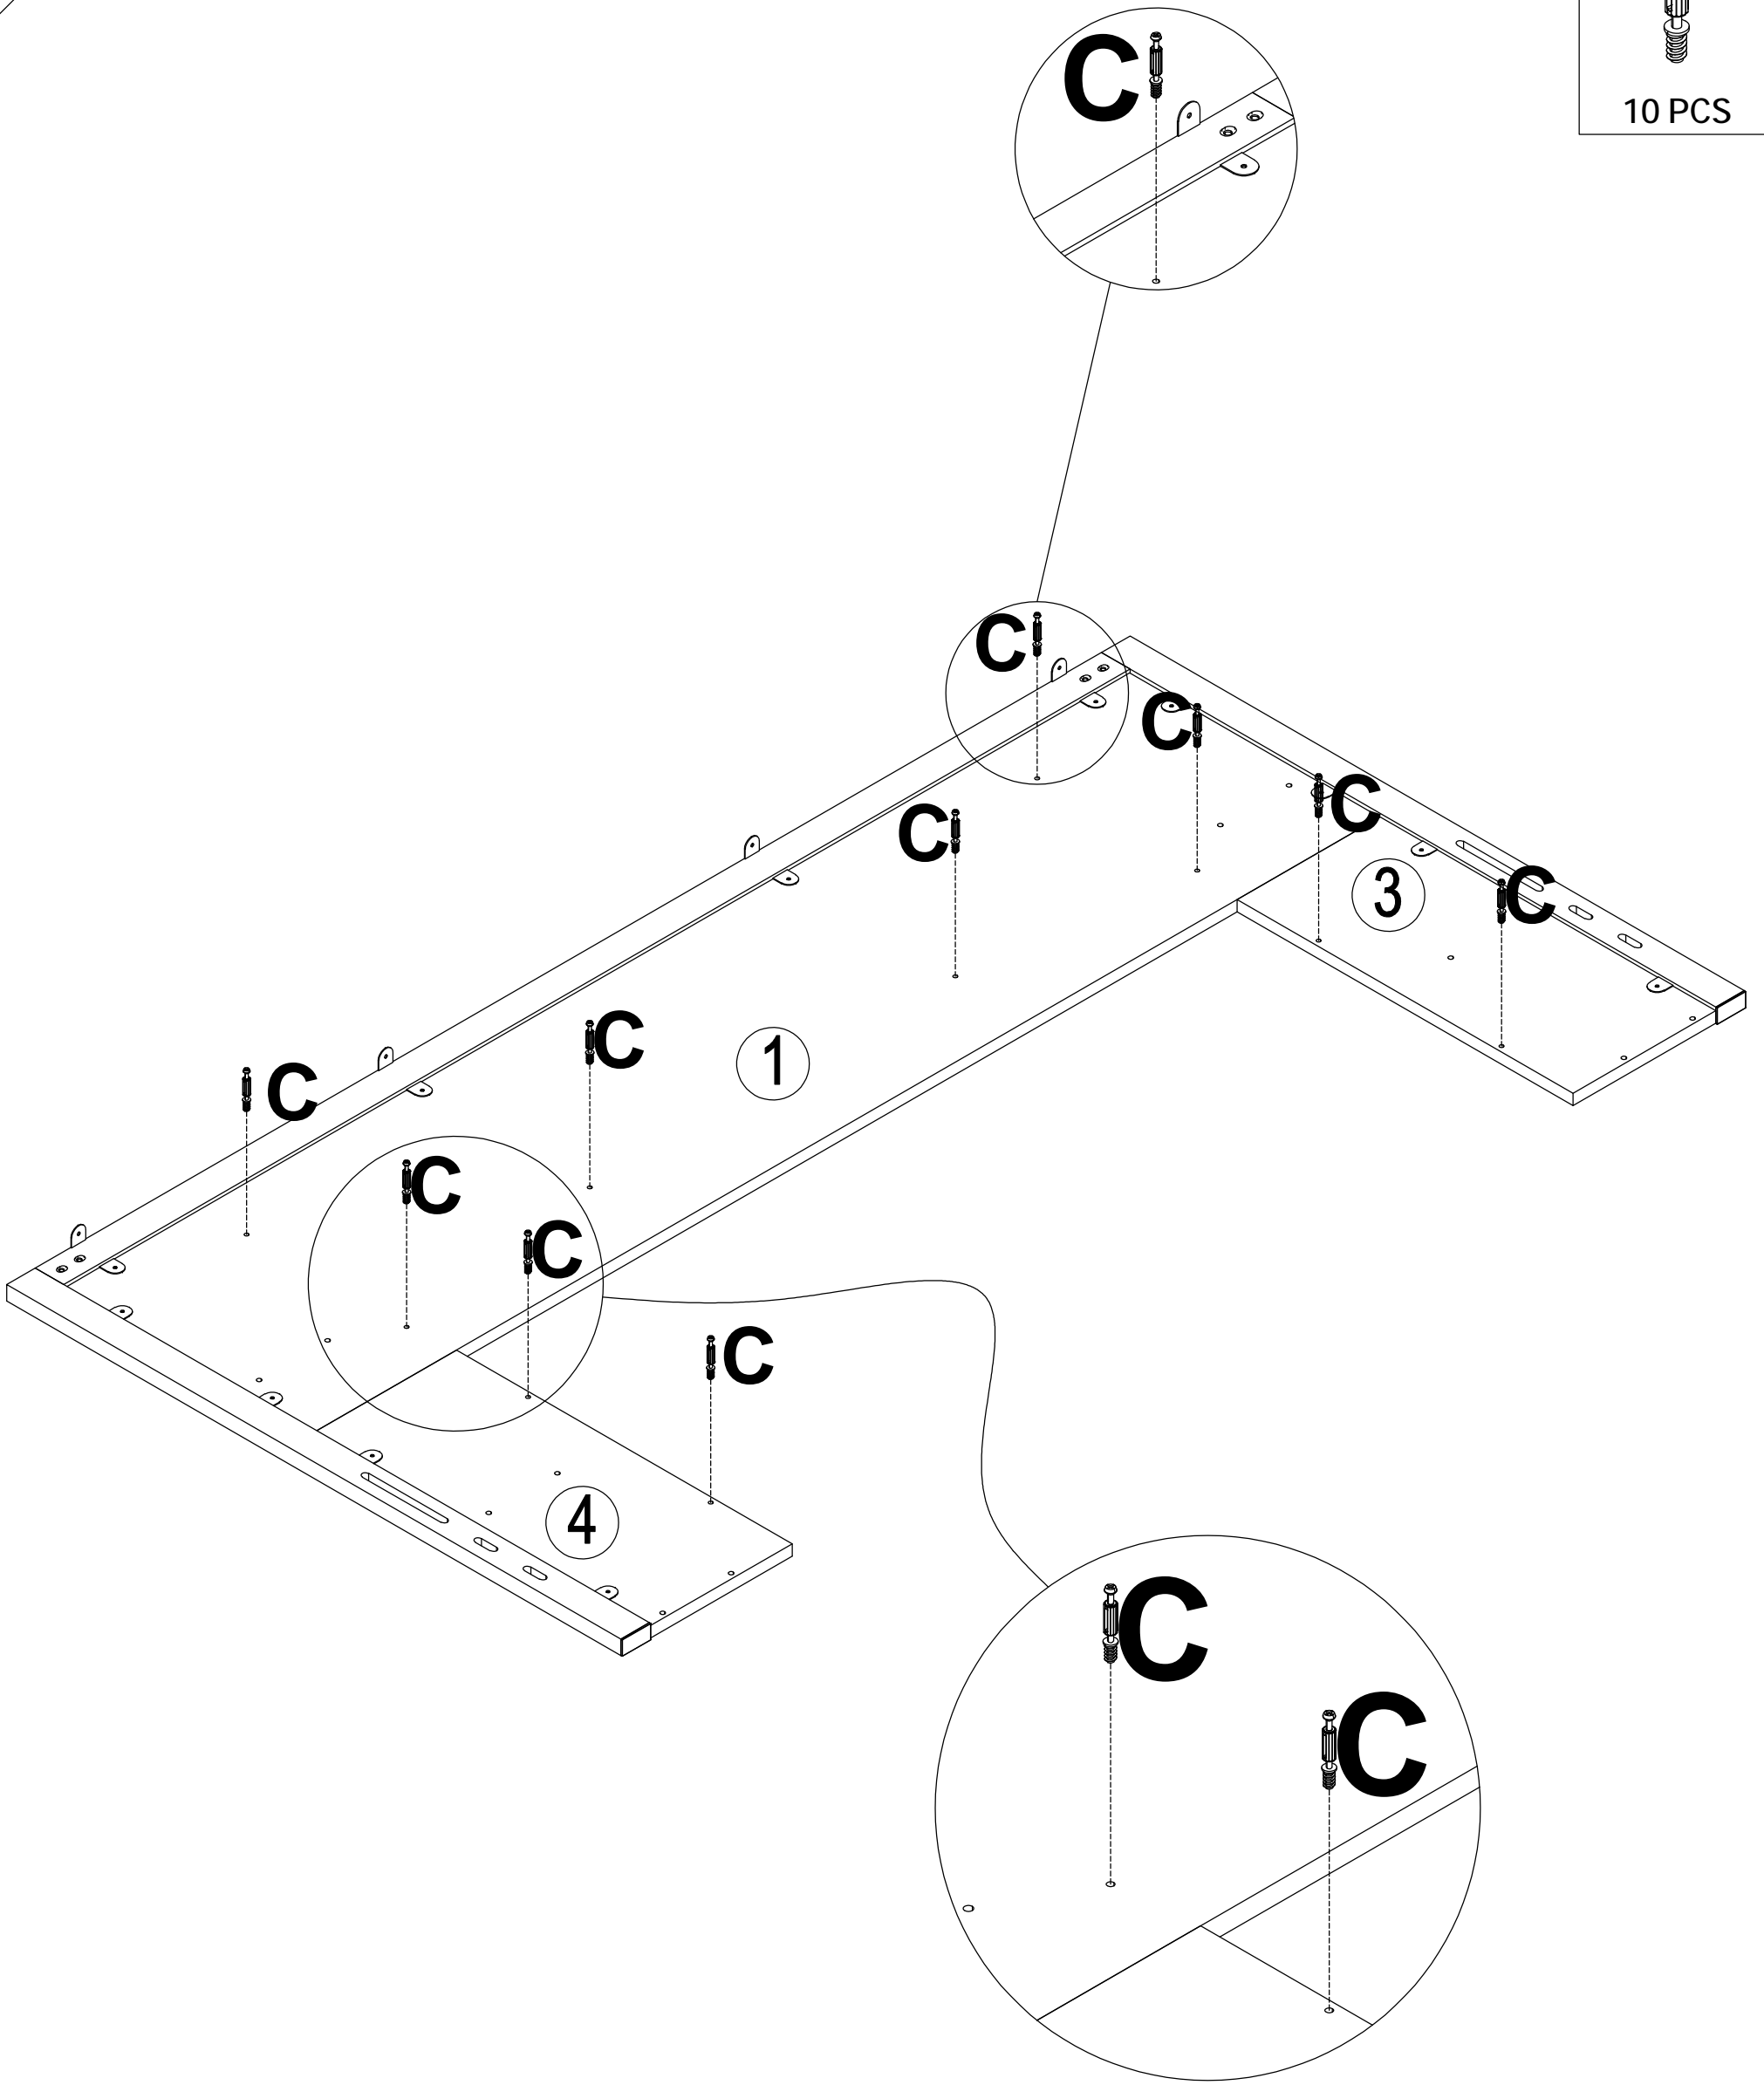

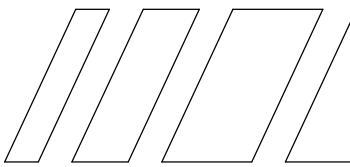


4

D M5x40



4 PCS

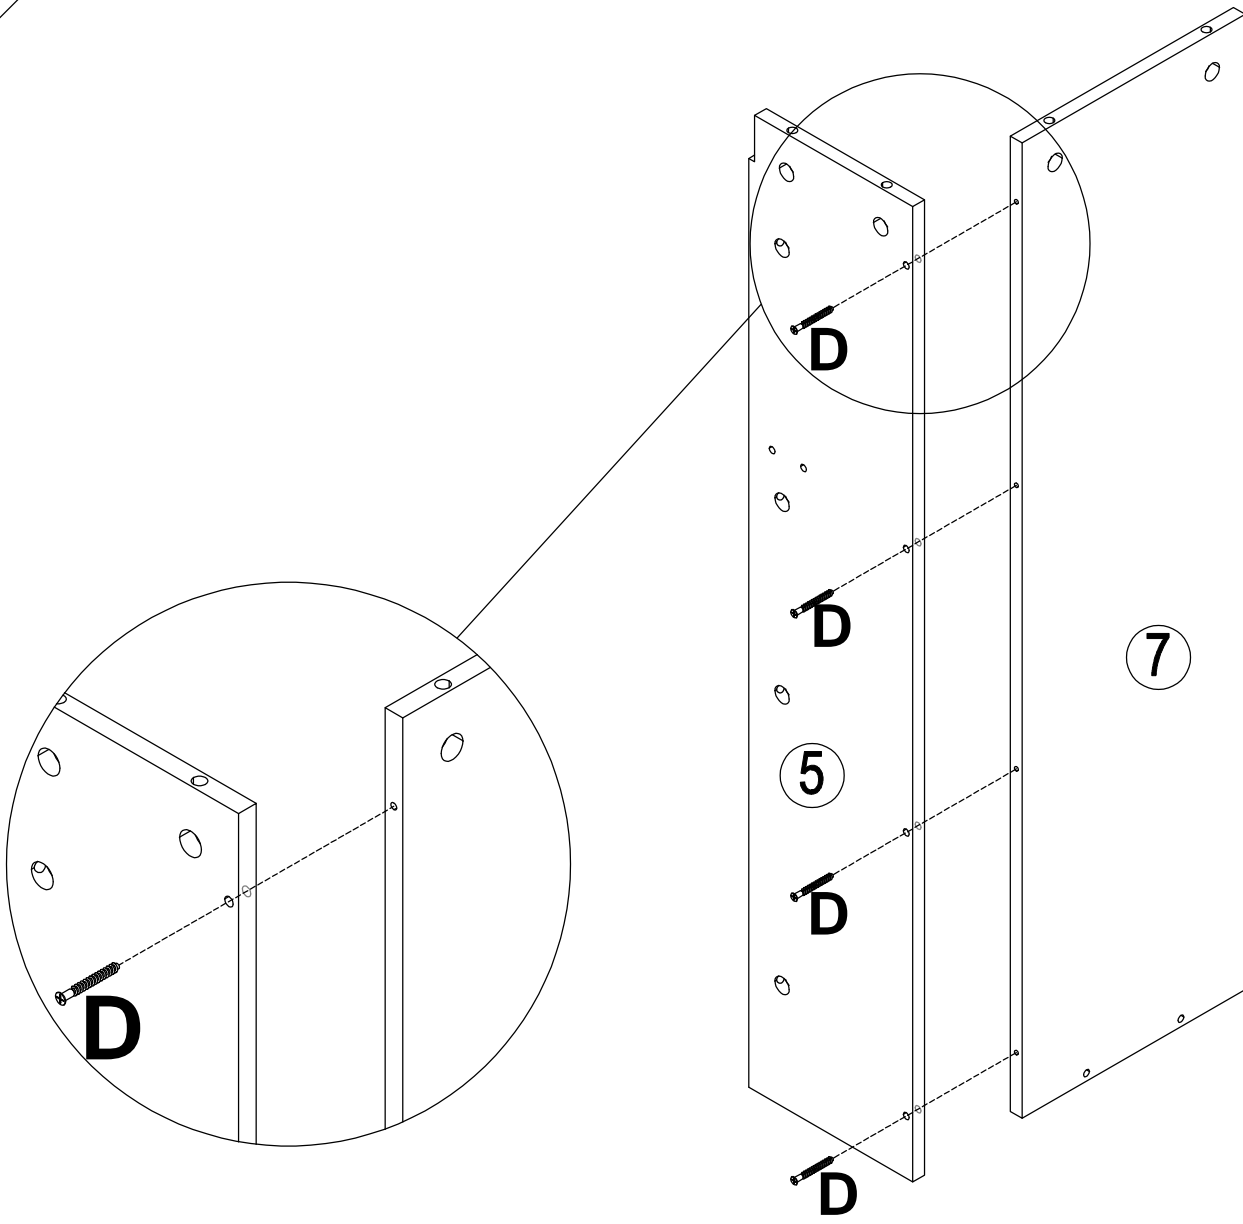


5


D M5x40



2 PCS

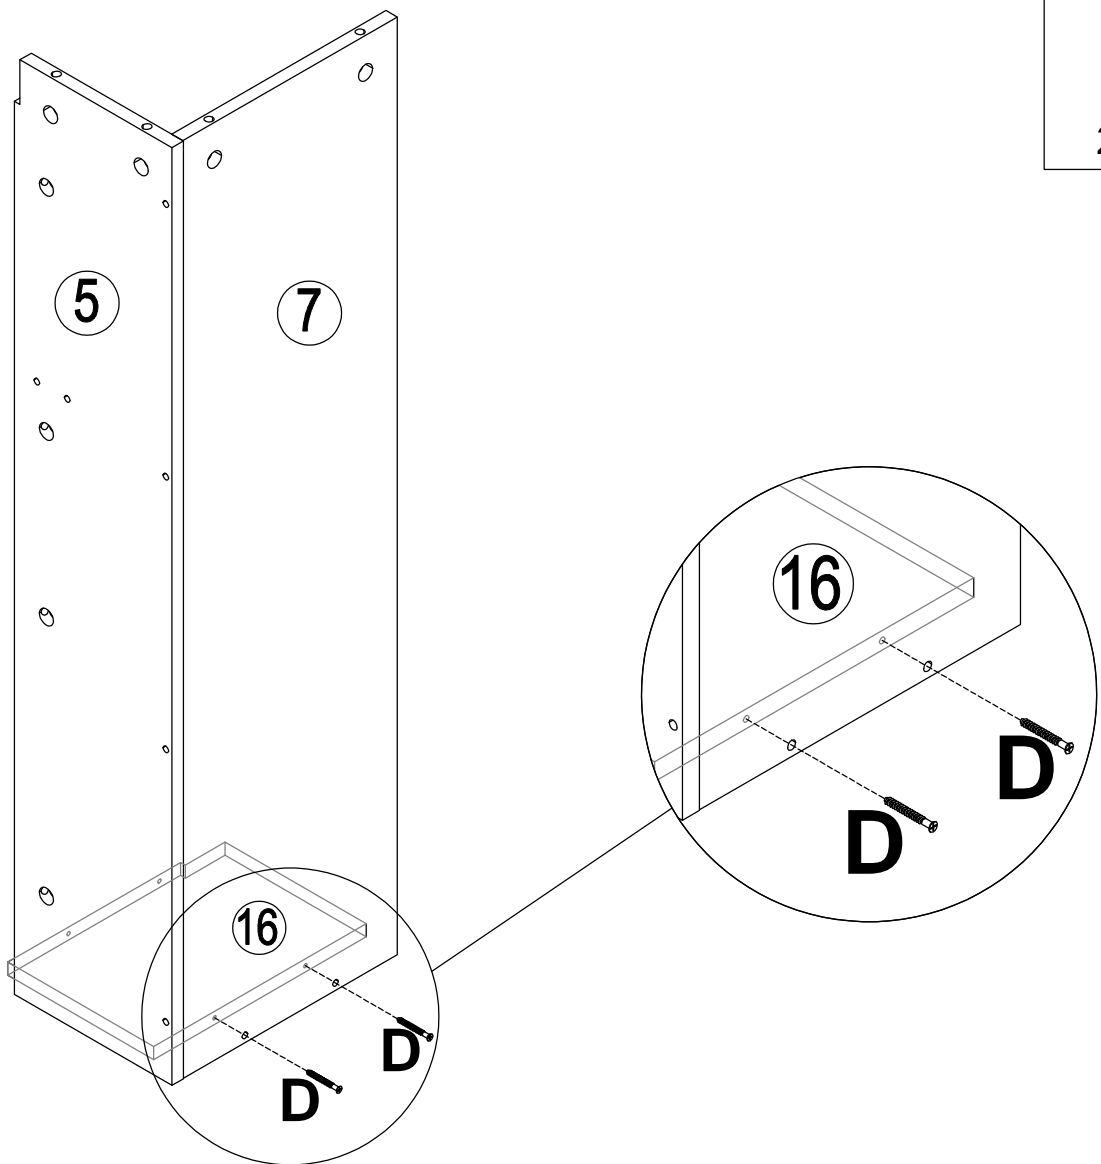

6

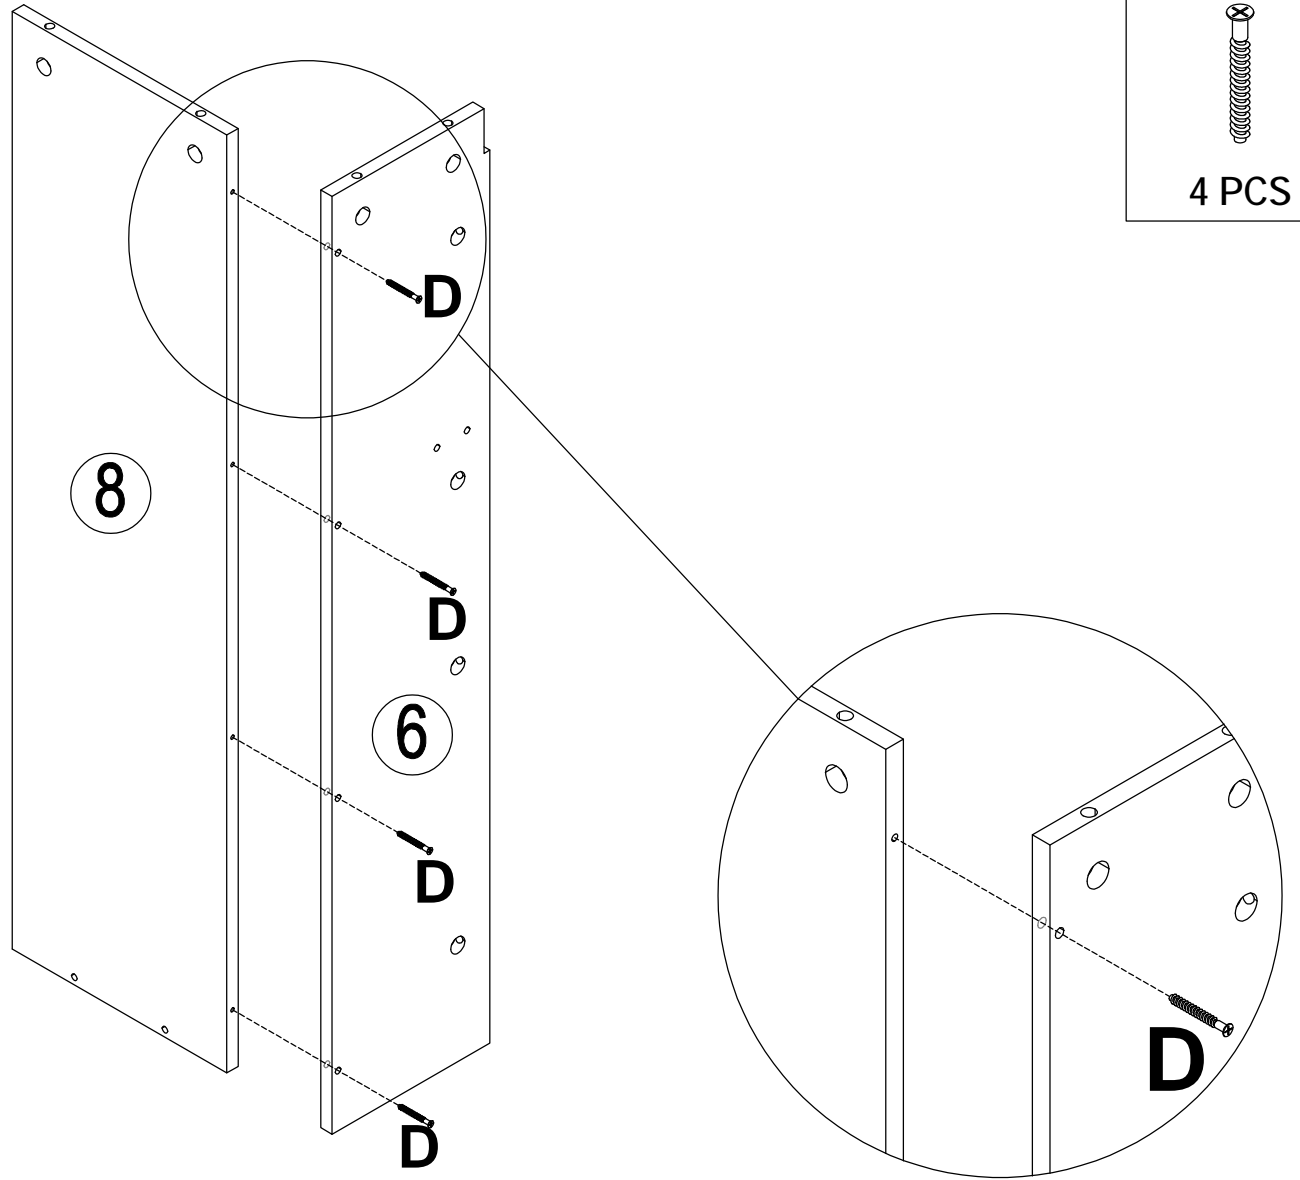


D M5x40



4 PCS

7

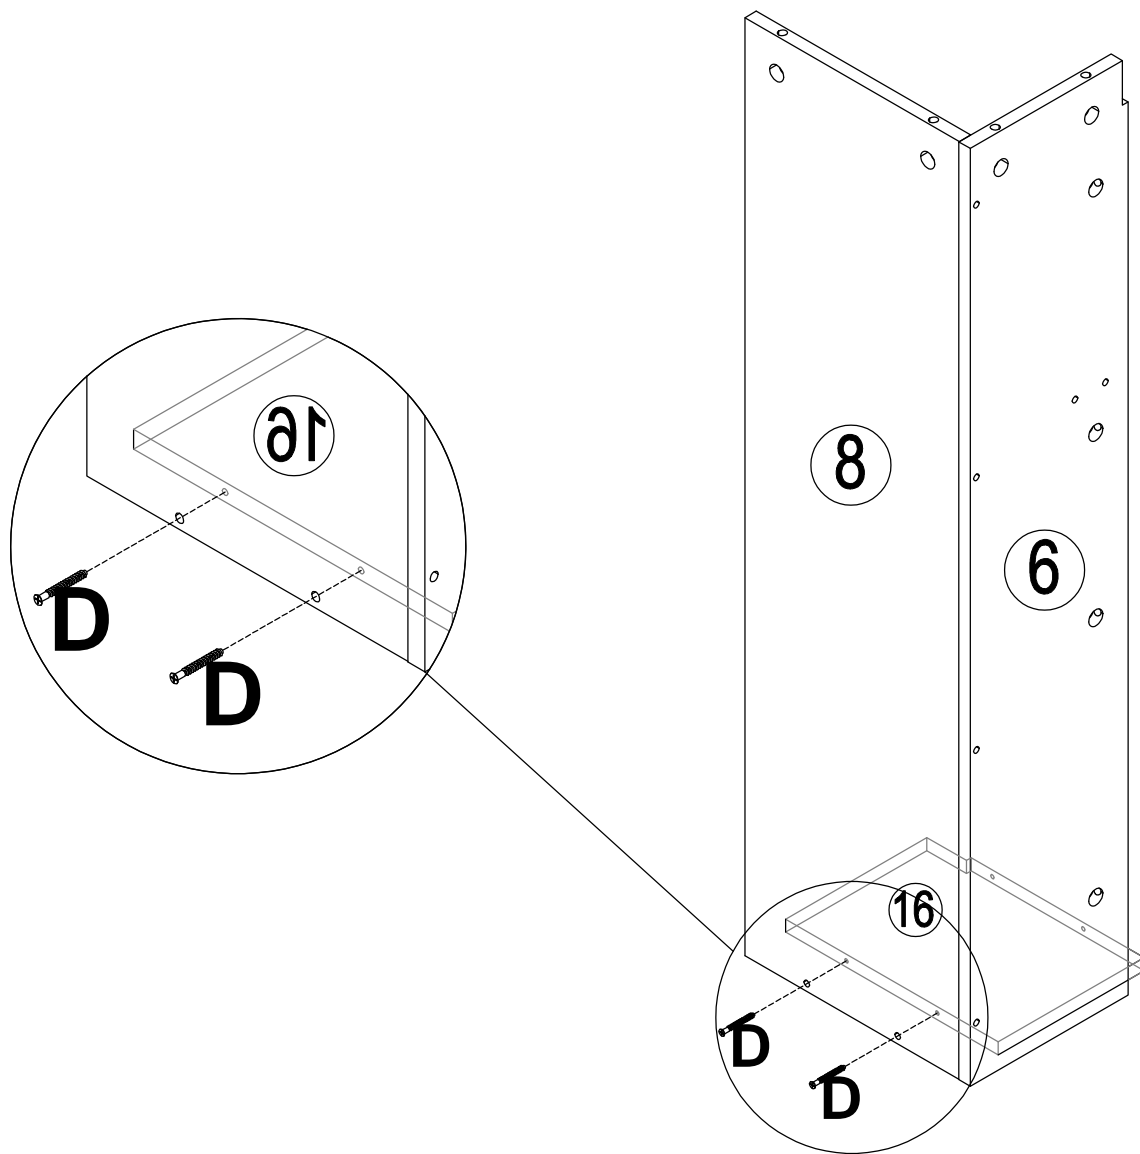

D M5x40




2 PCS

8

E Ø15x10



4 PCS

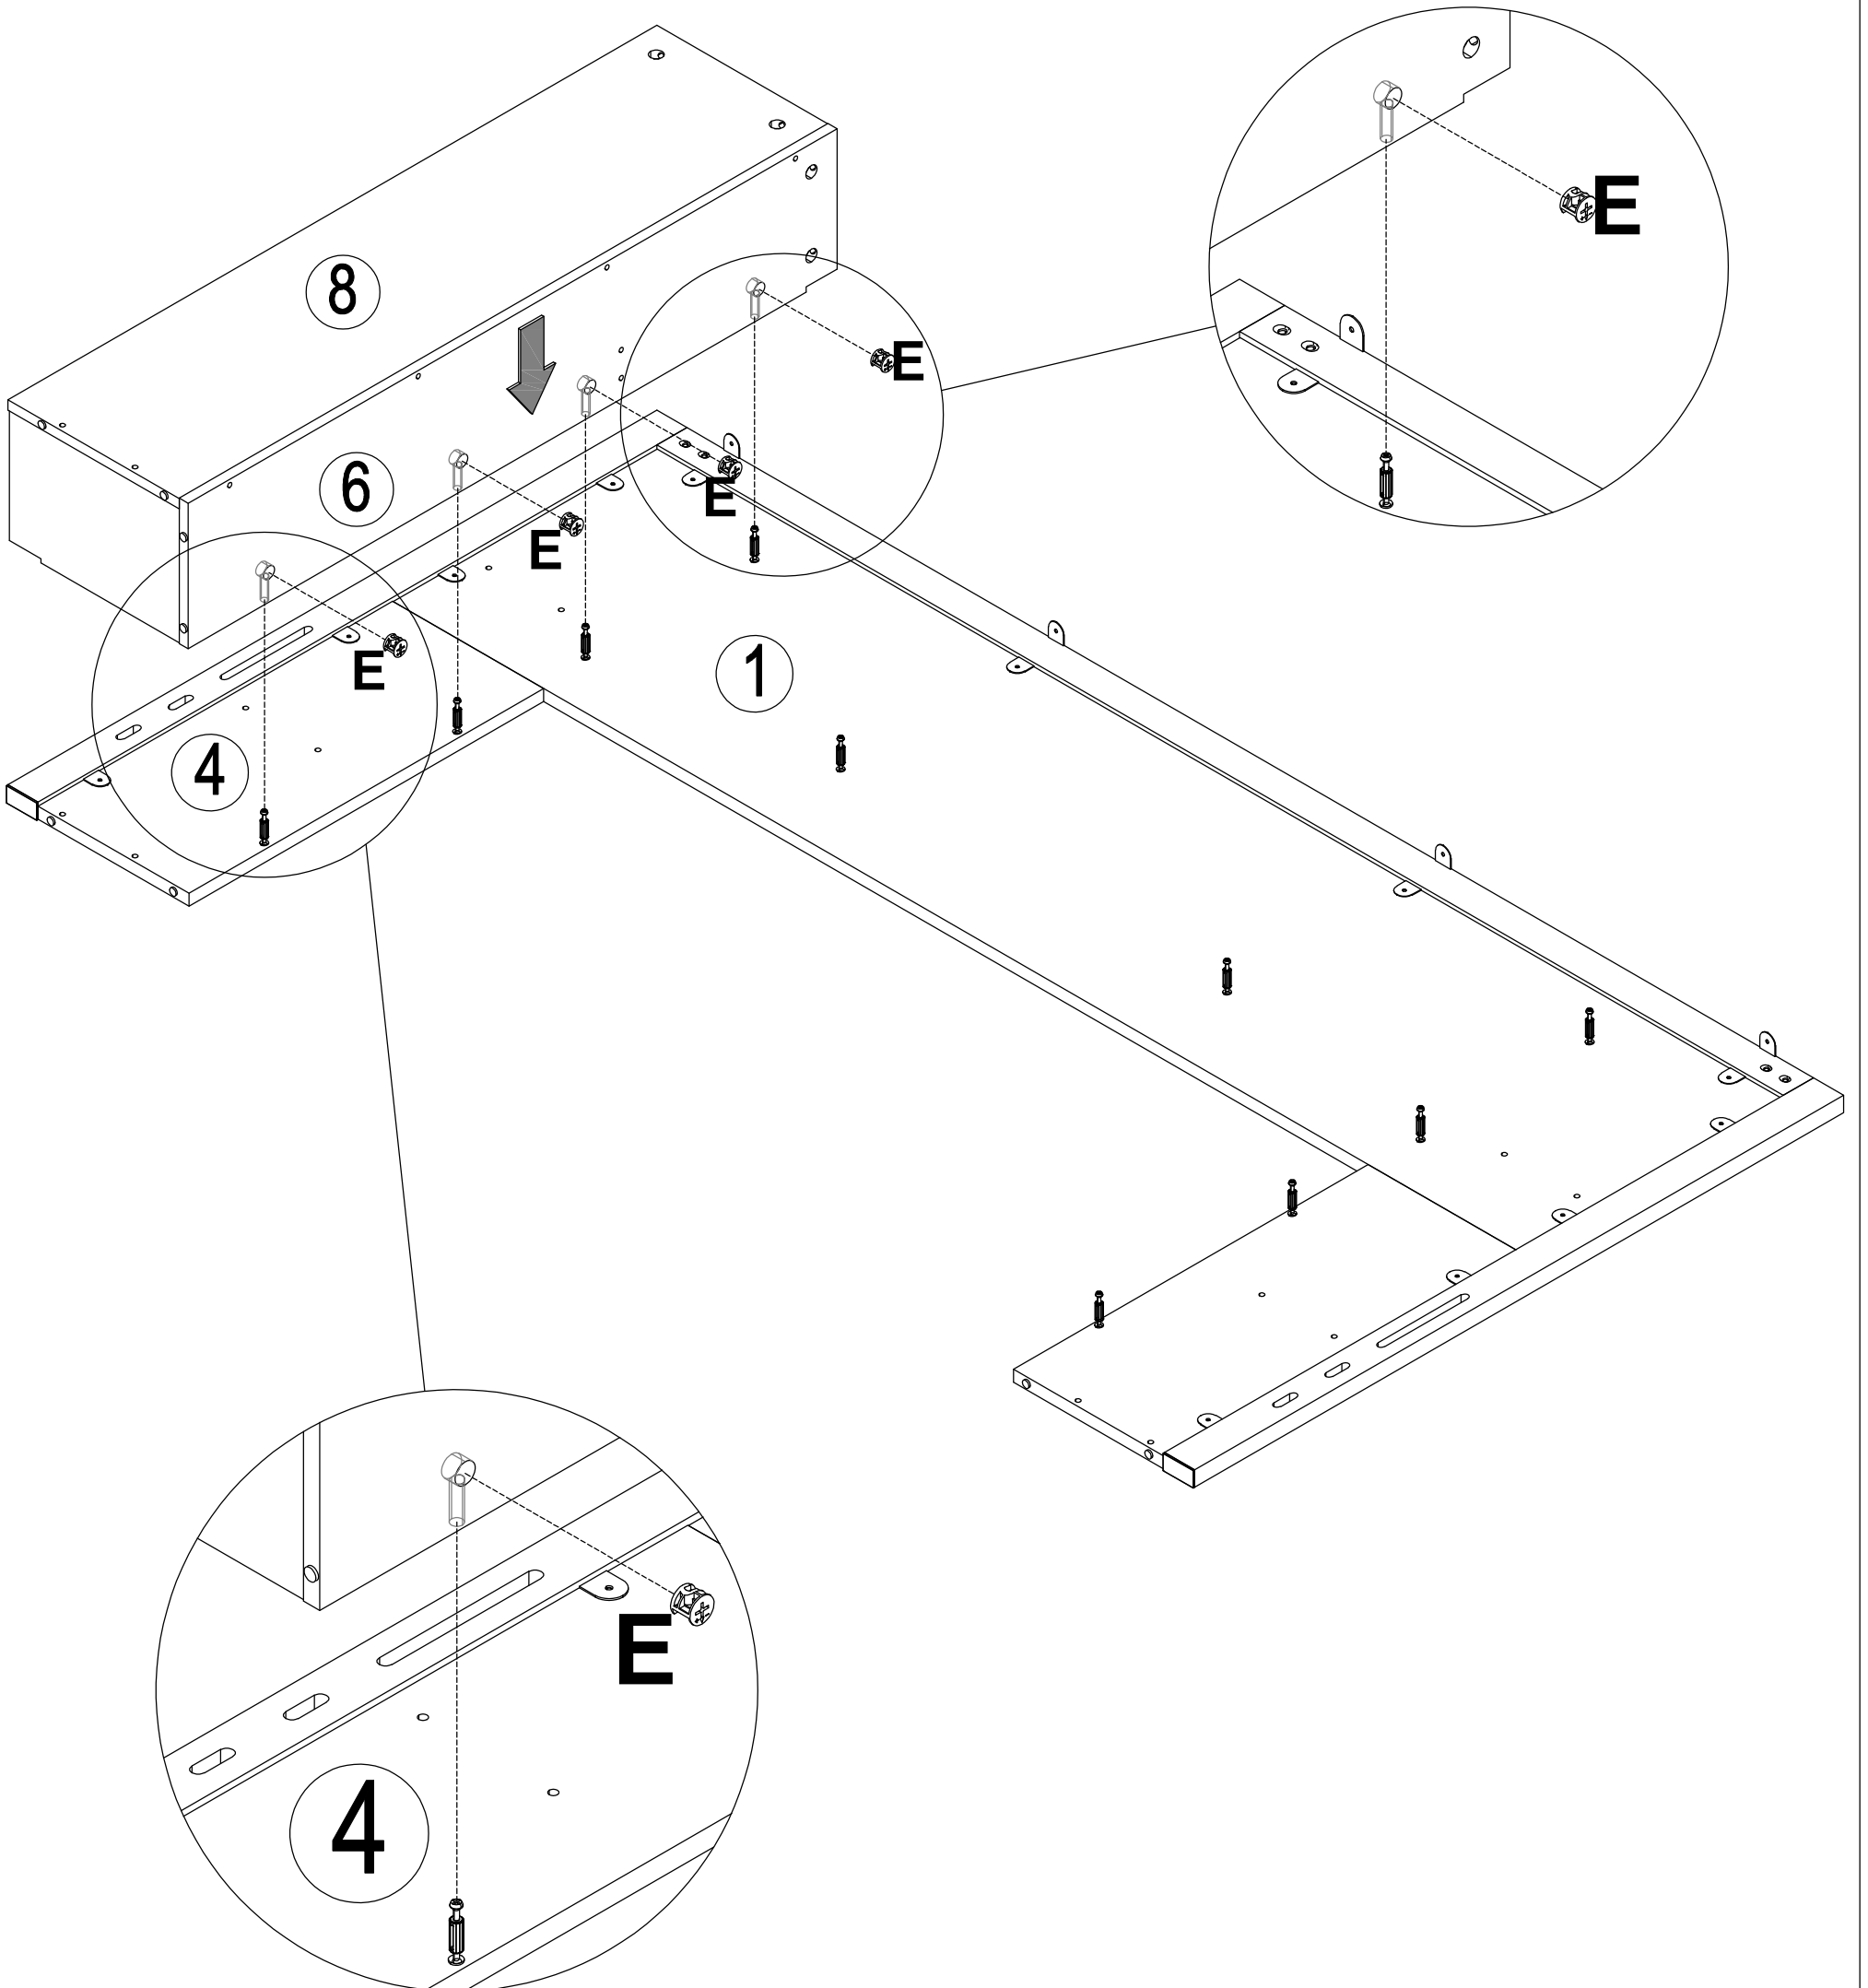



9

E Ø15x10



4 PCS

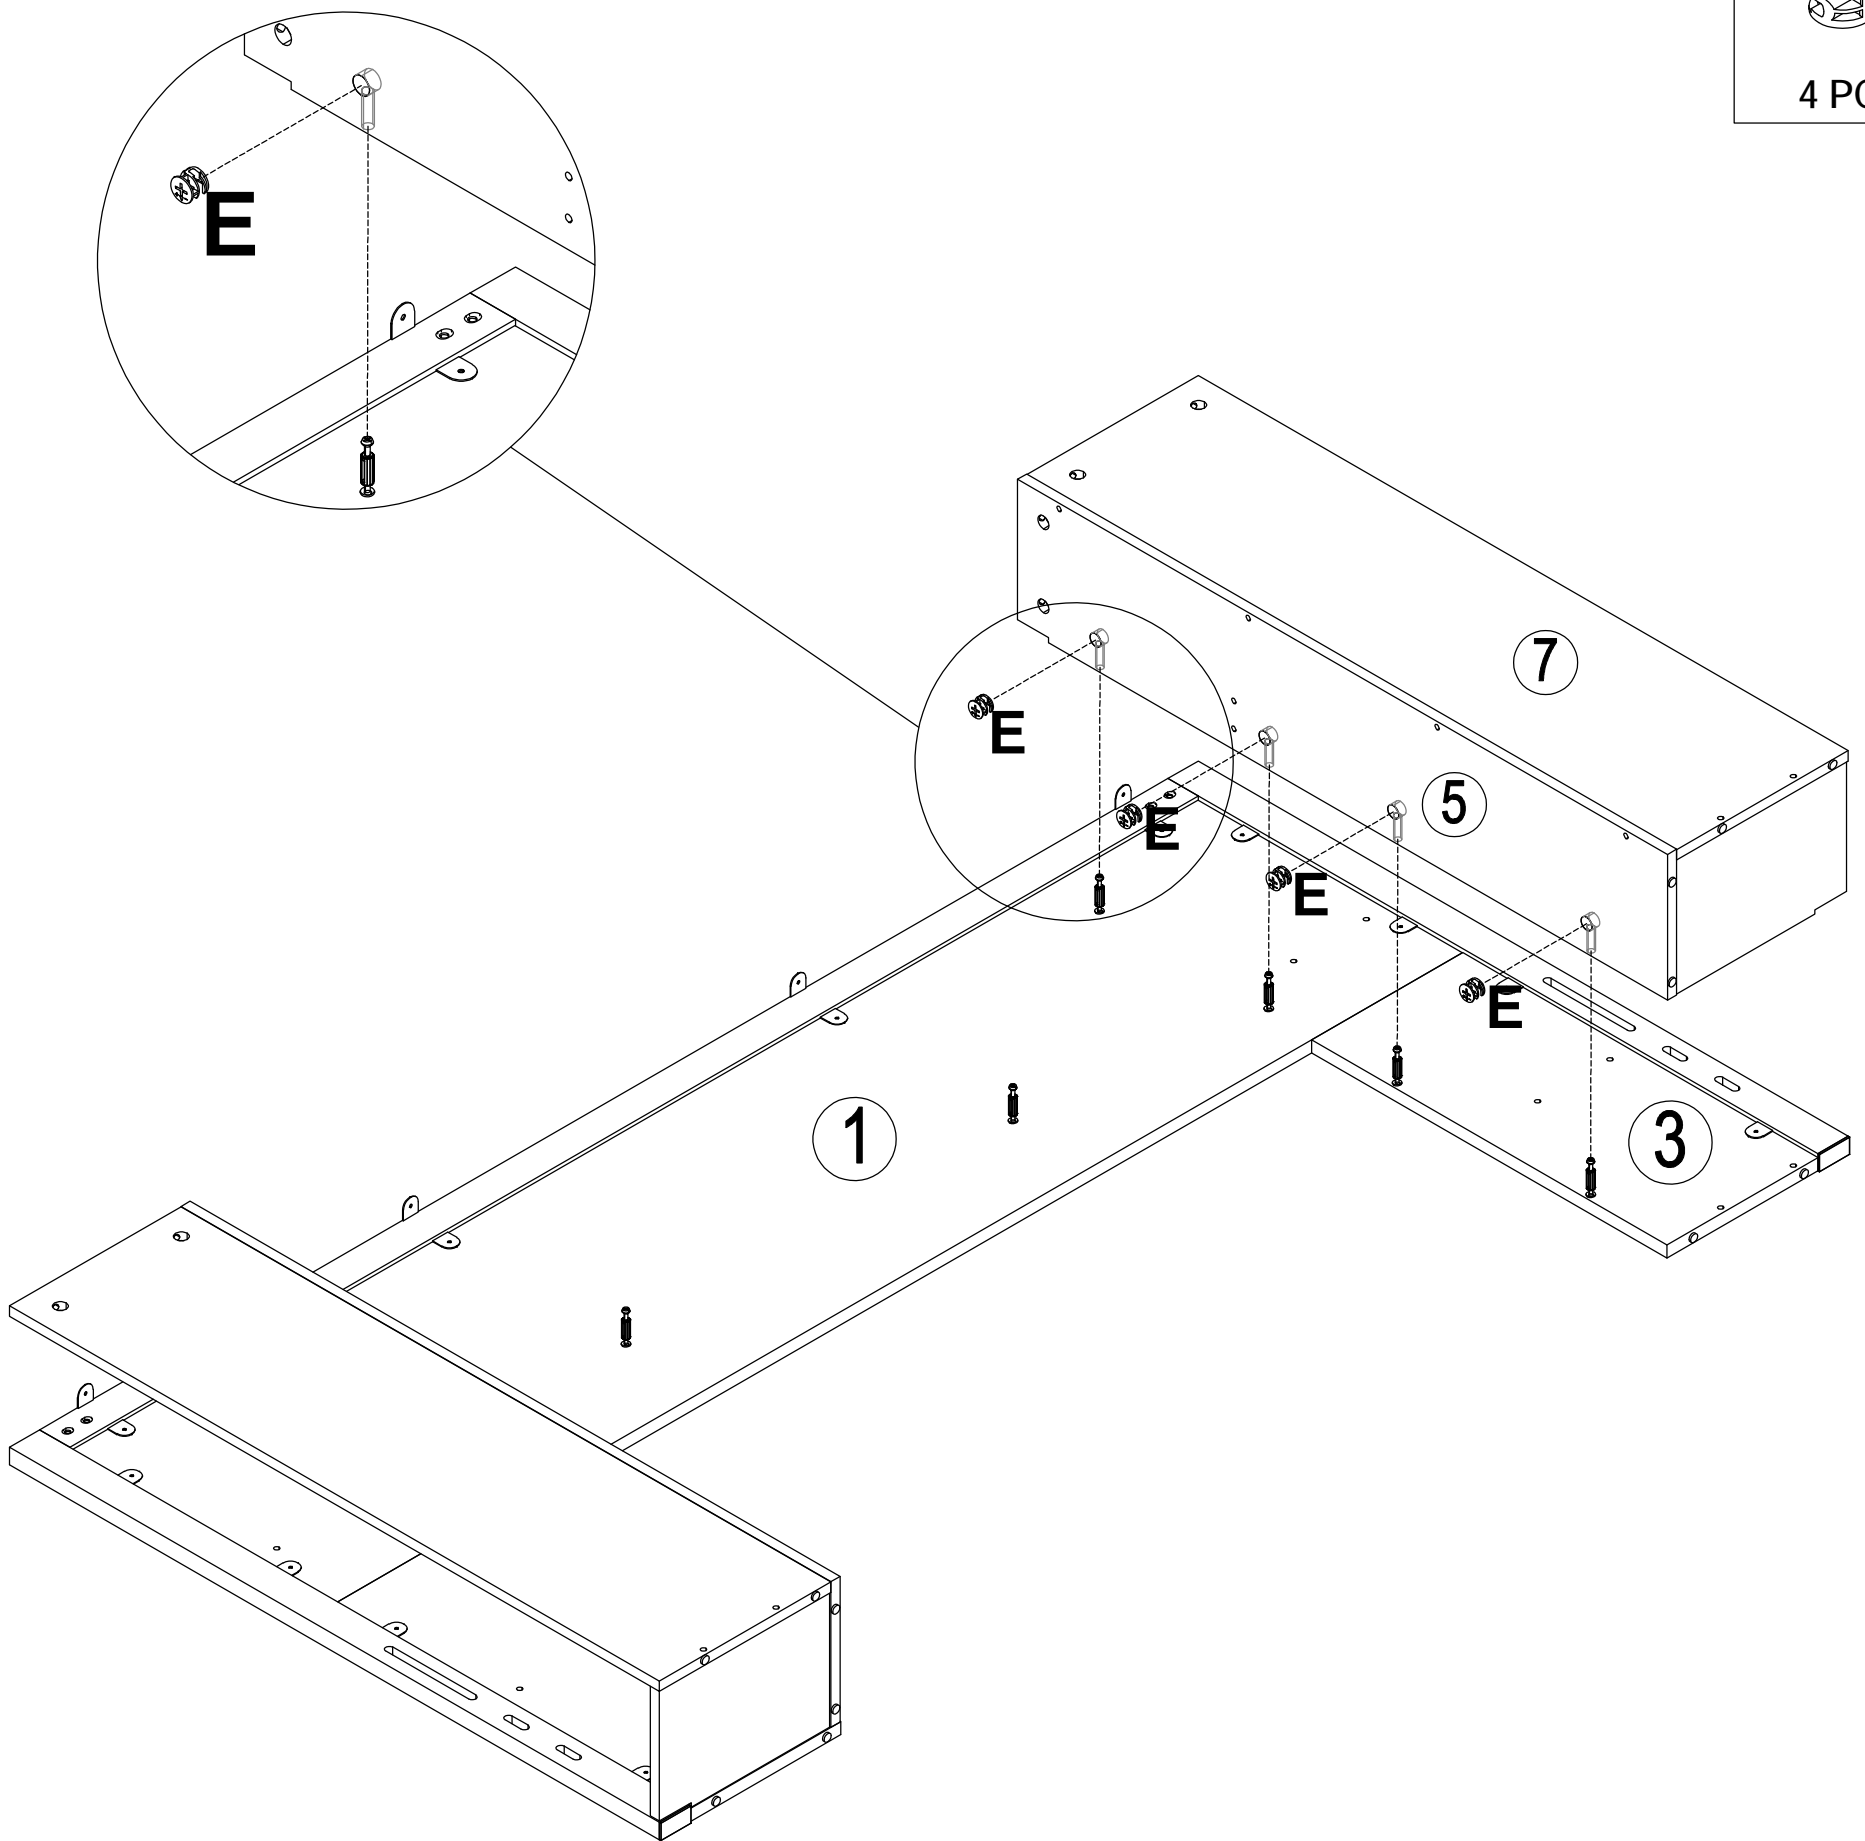

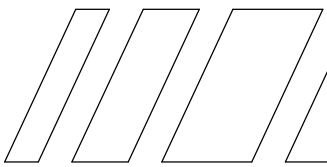


10

E Ø15x10



2 PCS

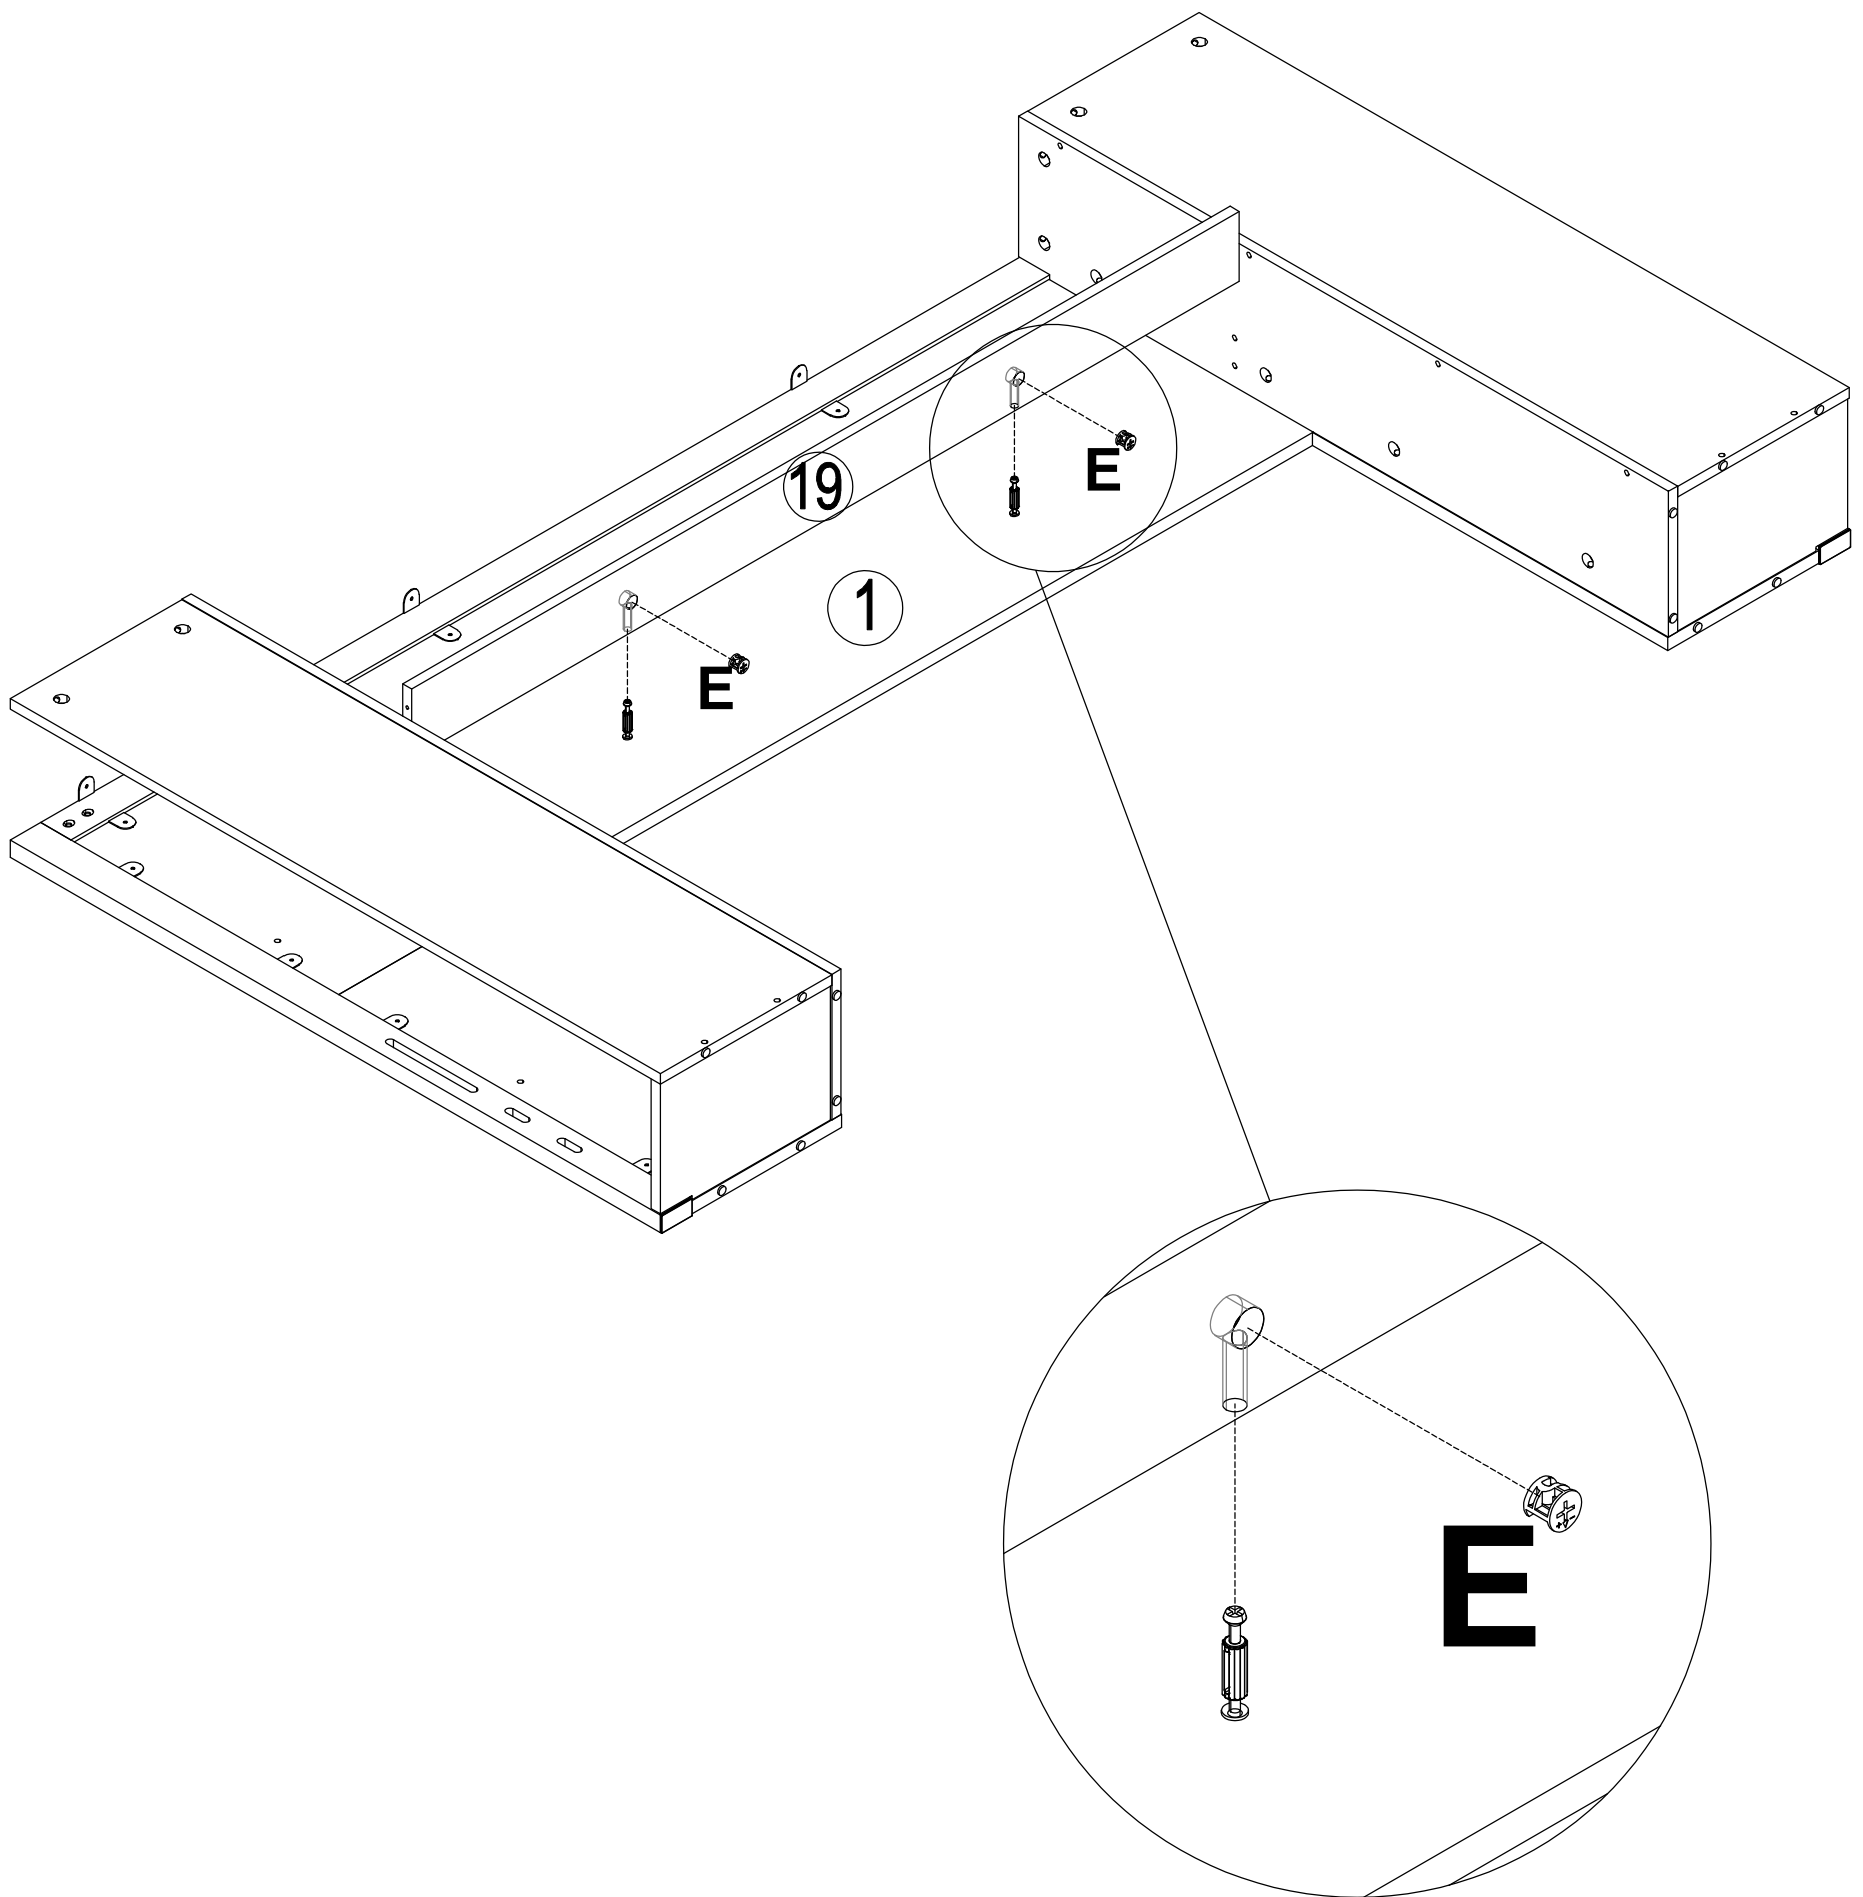


11

D M5x40



4 PCS

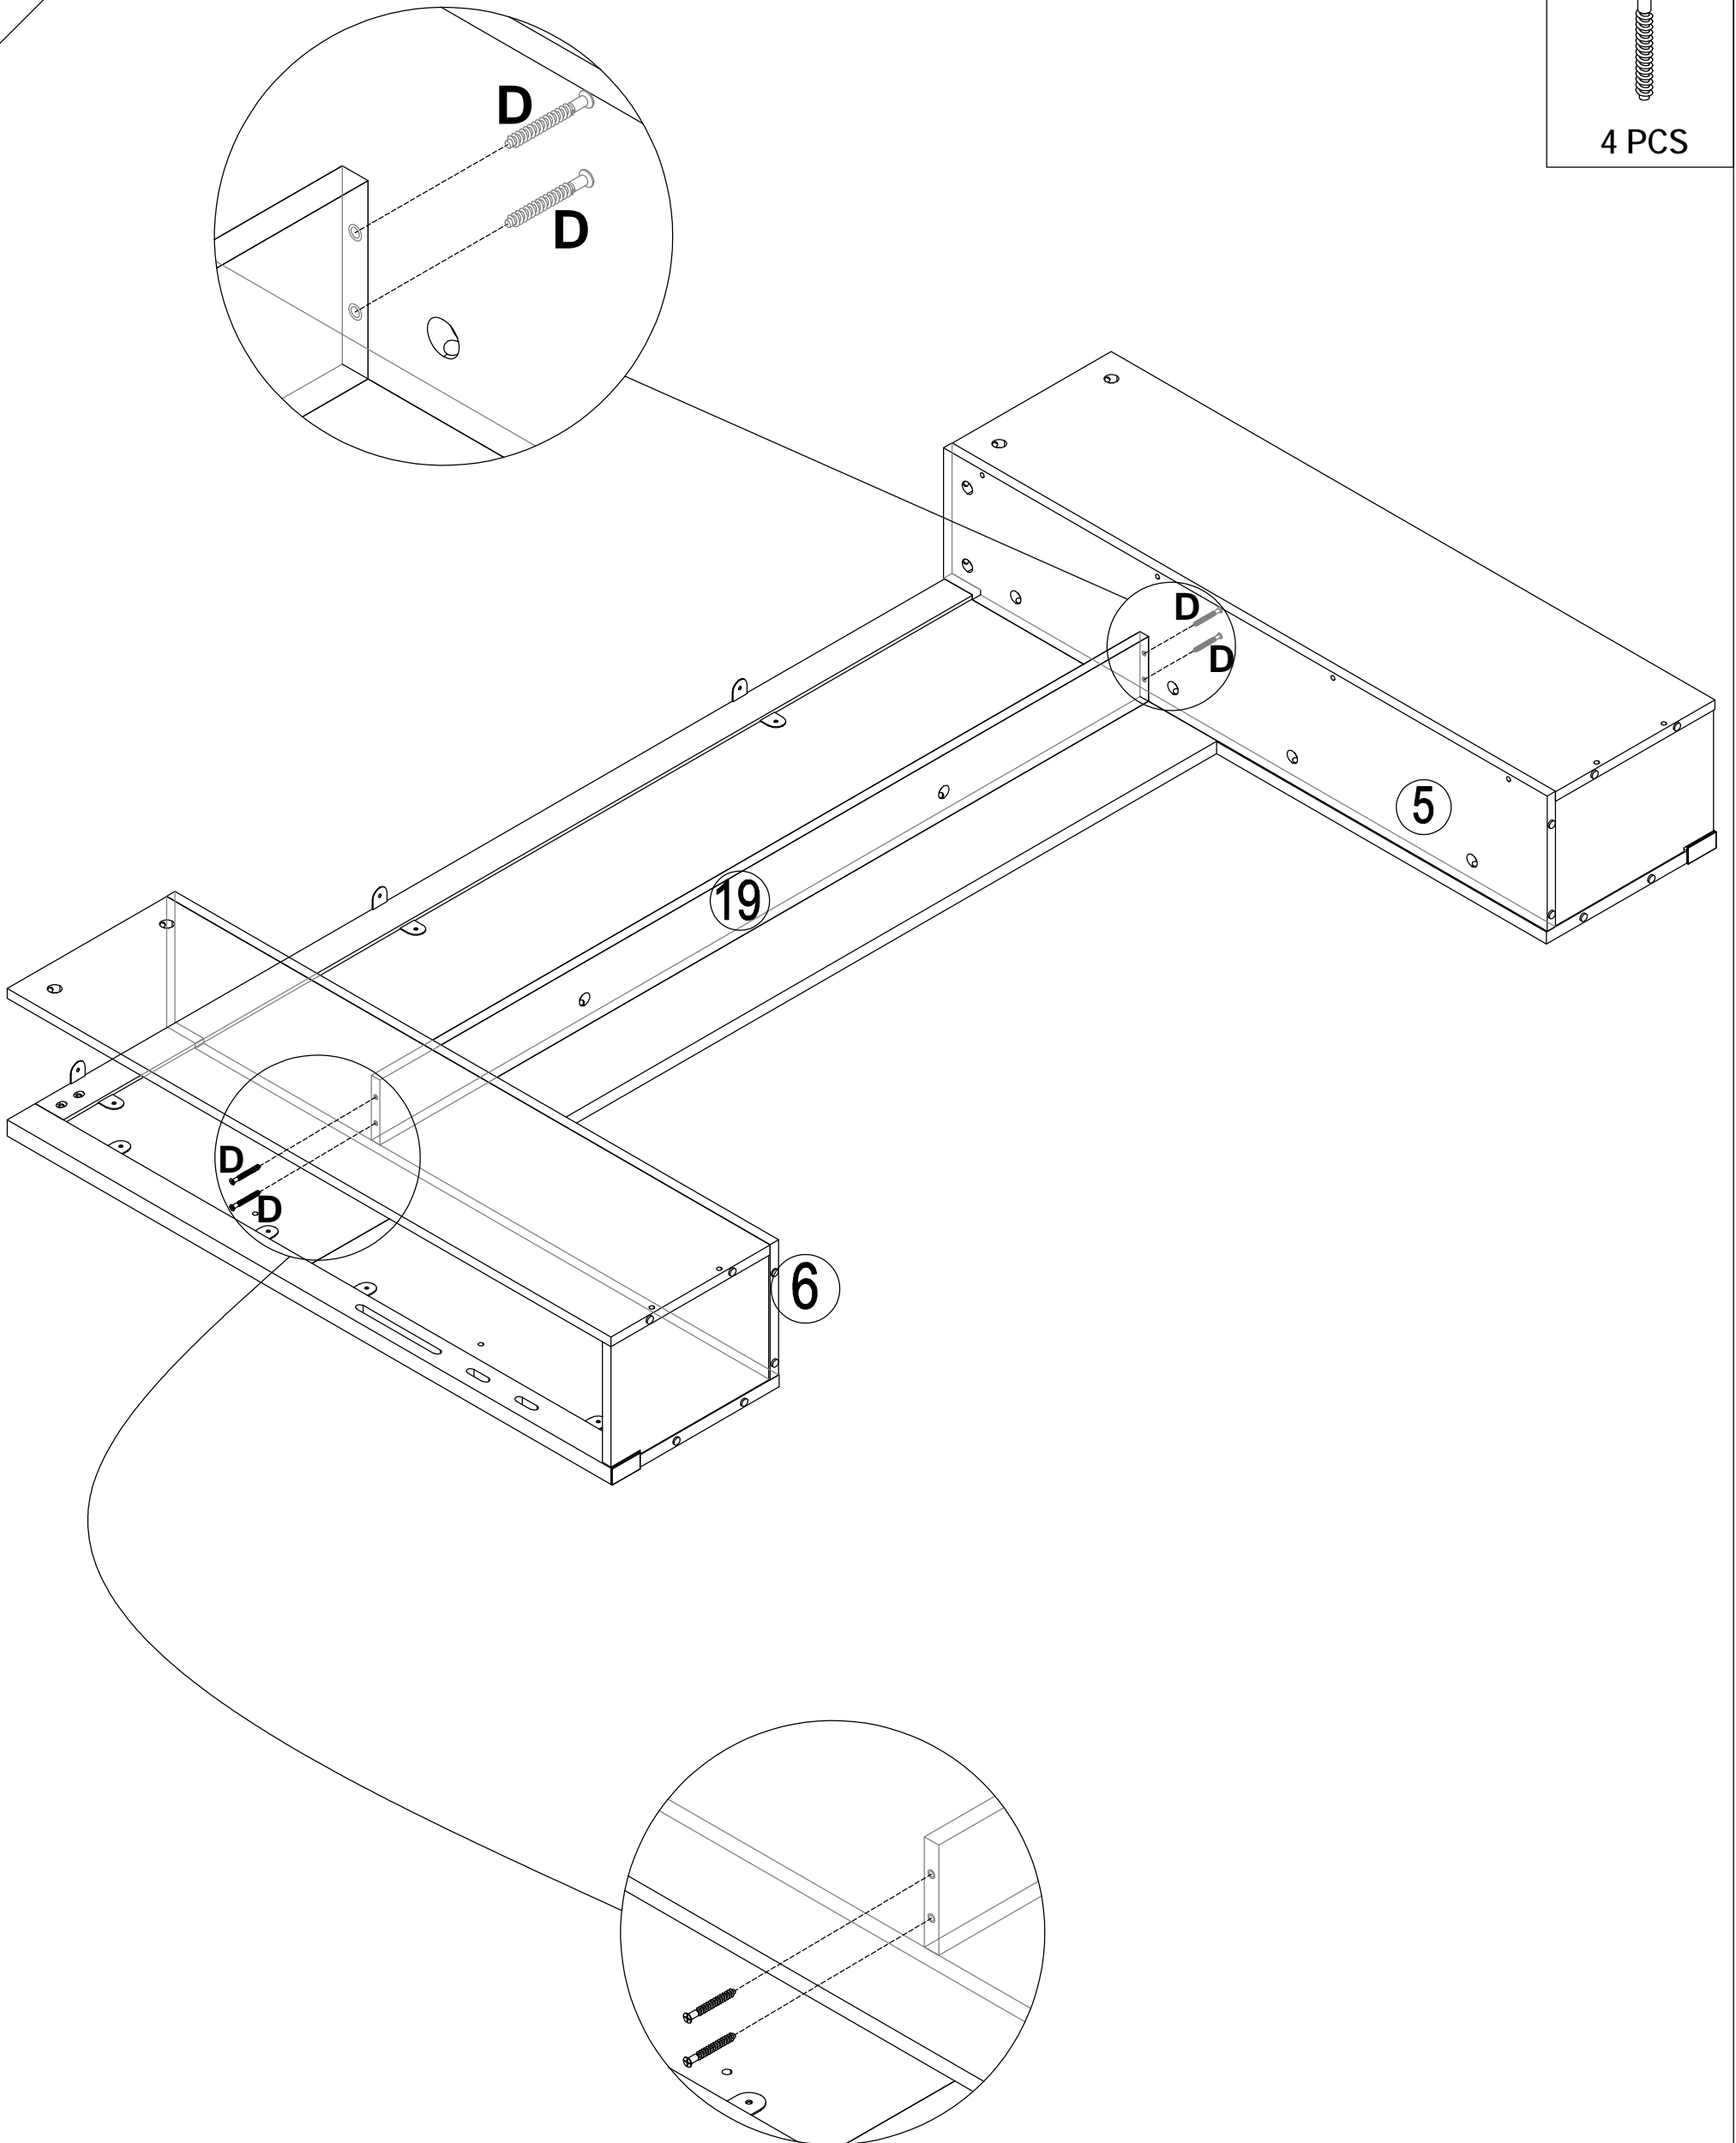


12


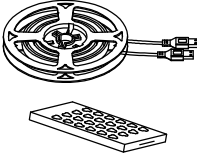

D M5x40




4 PCS

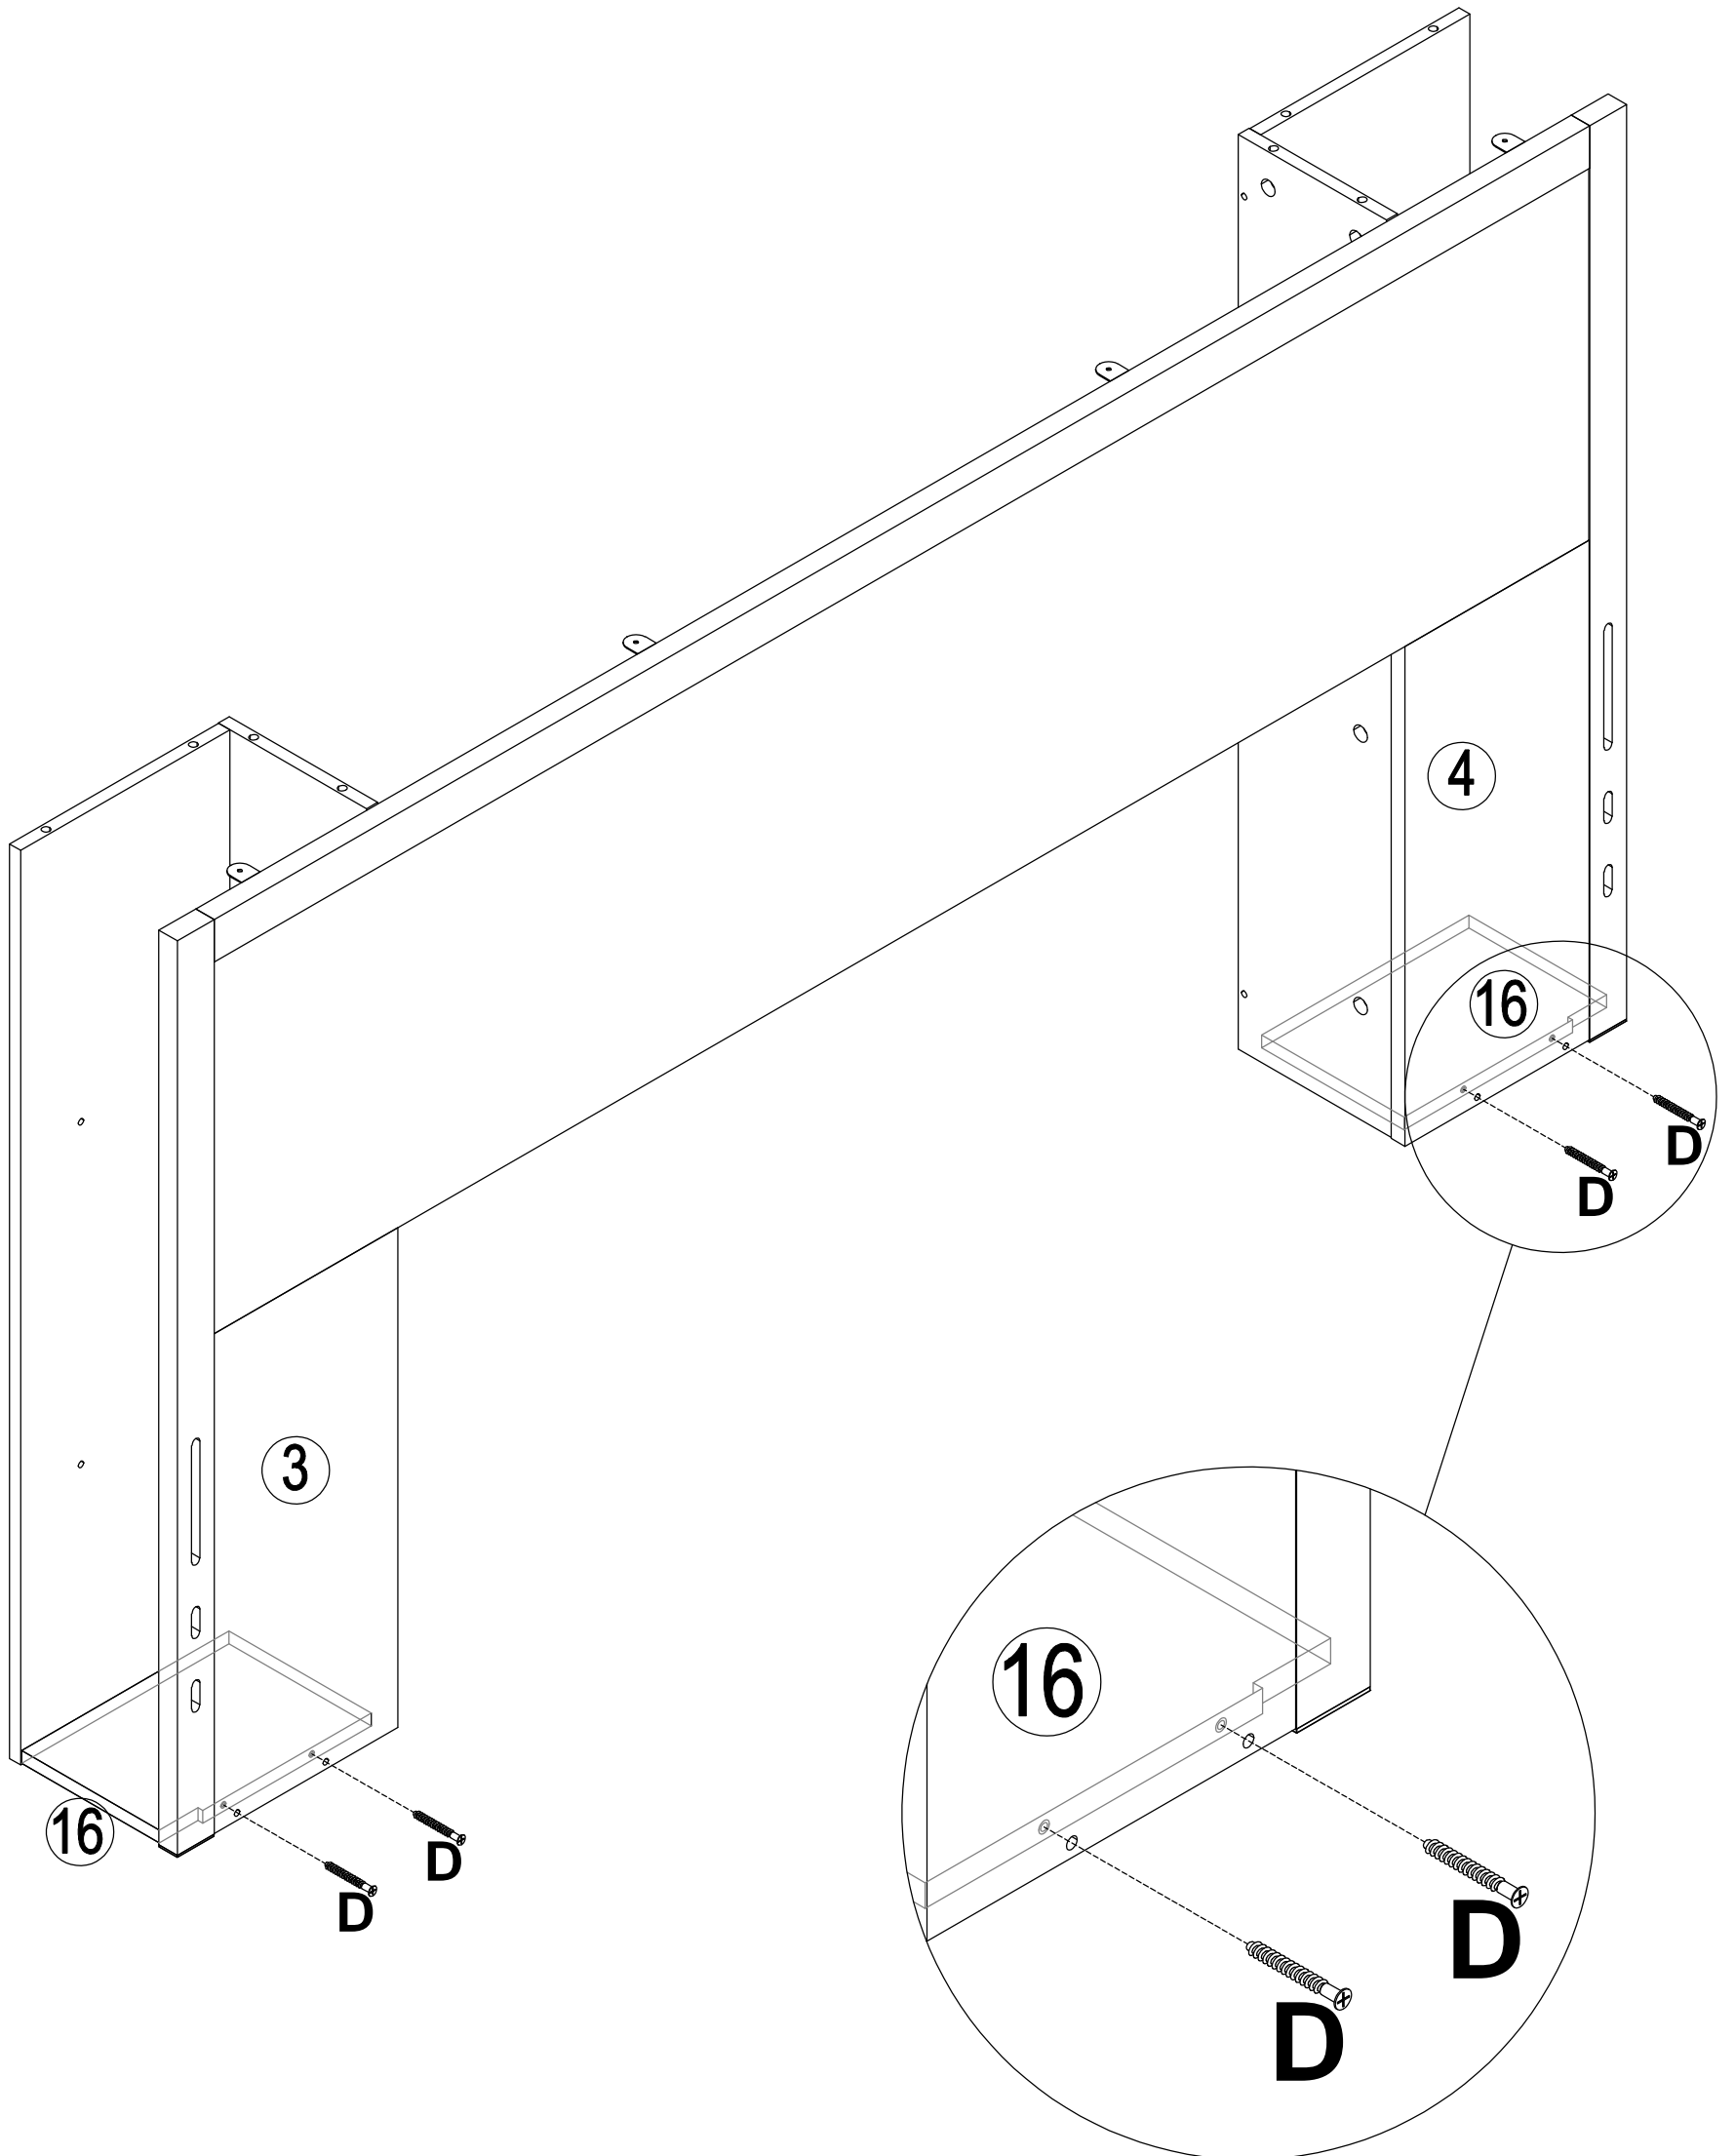


13

<p>B Ø3.5x14</p>  <p>8 PCS</p>	<p>F</p>  <p>1 SETS</p>	<p>G</p>  <p>8 PCS</p>
---	--	---

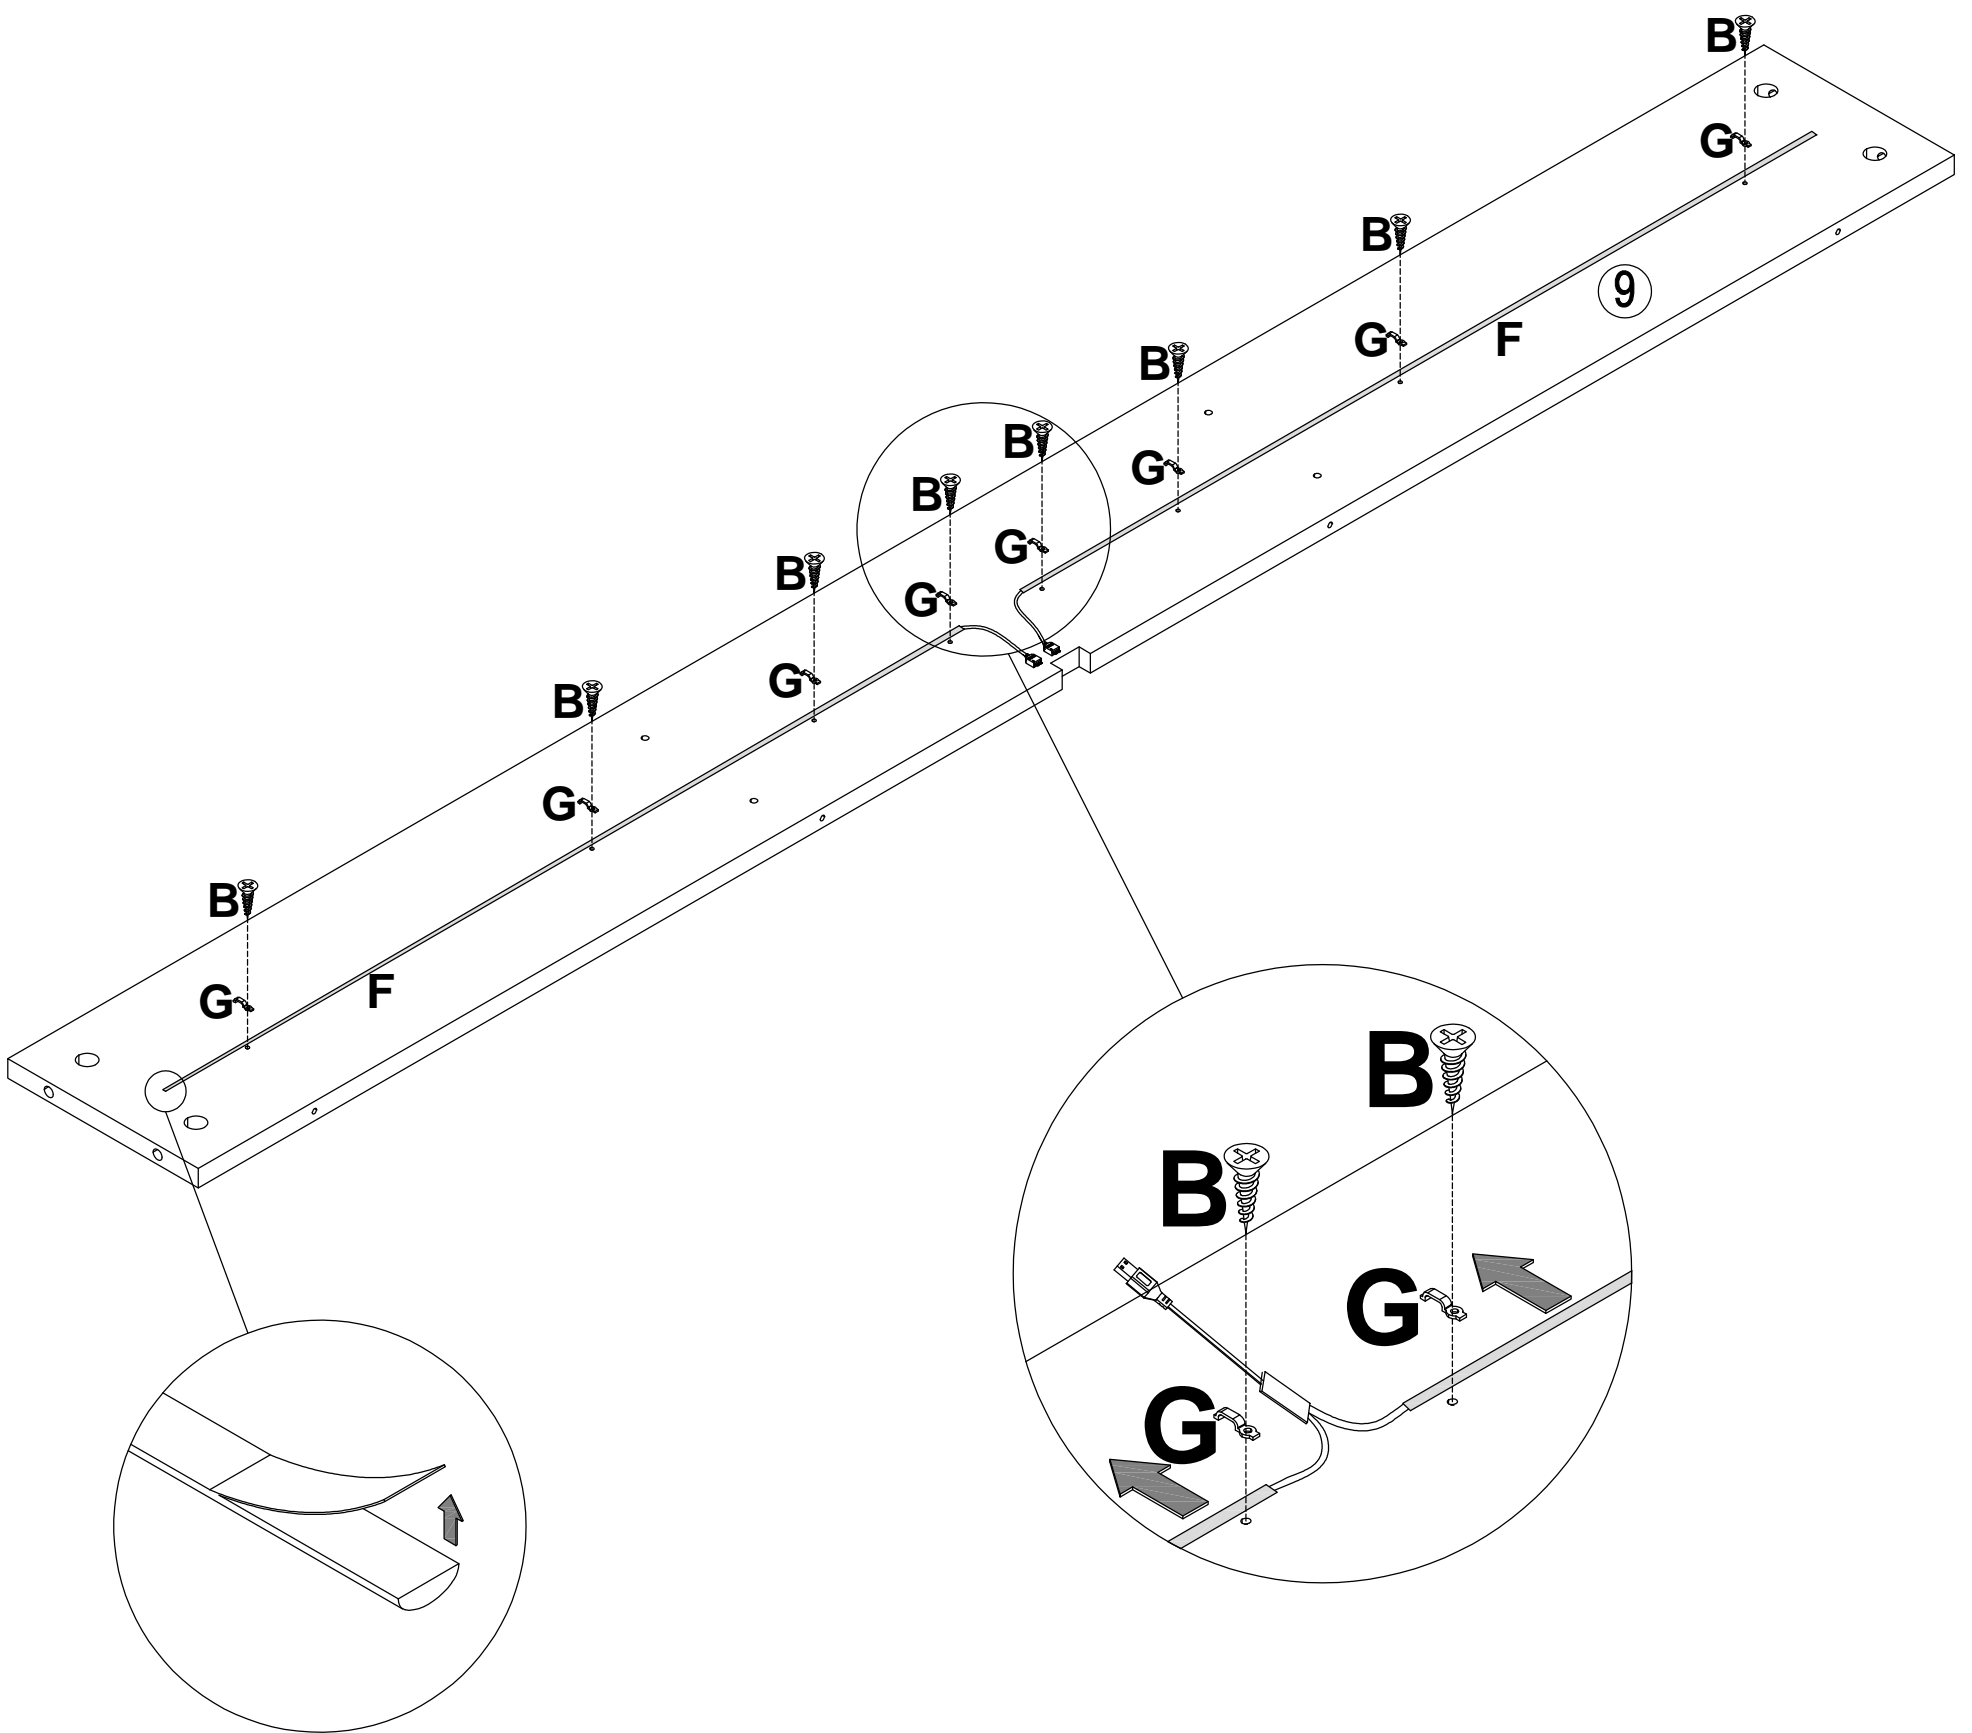


Tear off the tape and apply it to the plate, Then press it firmly with your hand

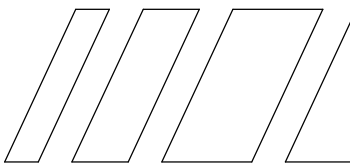



14

C M5x42



4 PCS

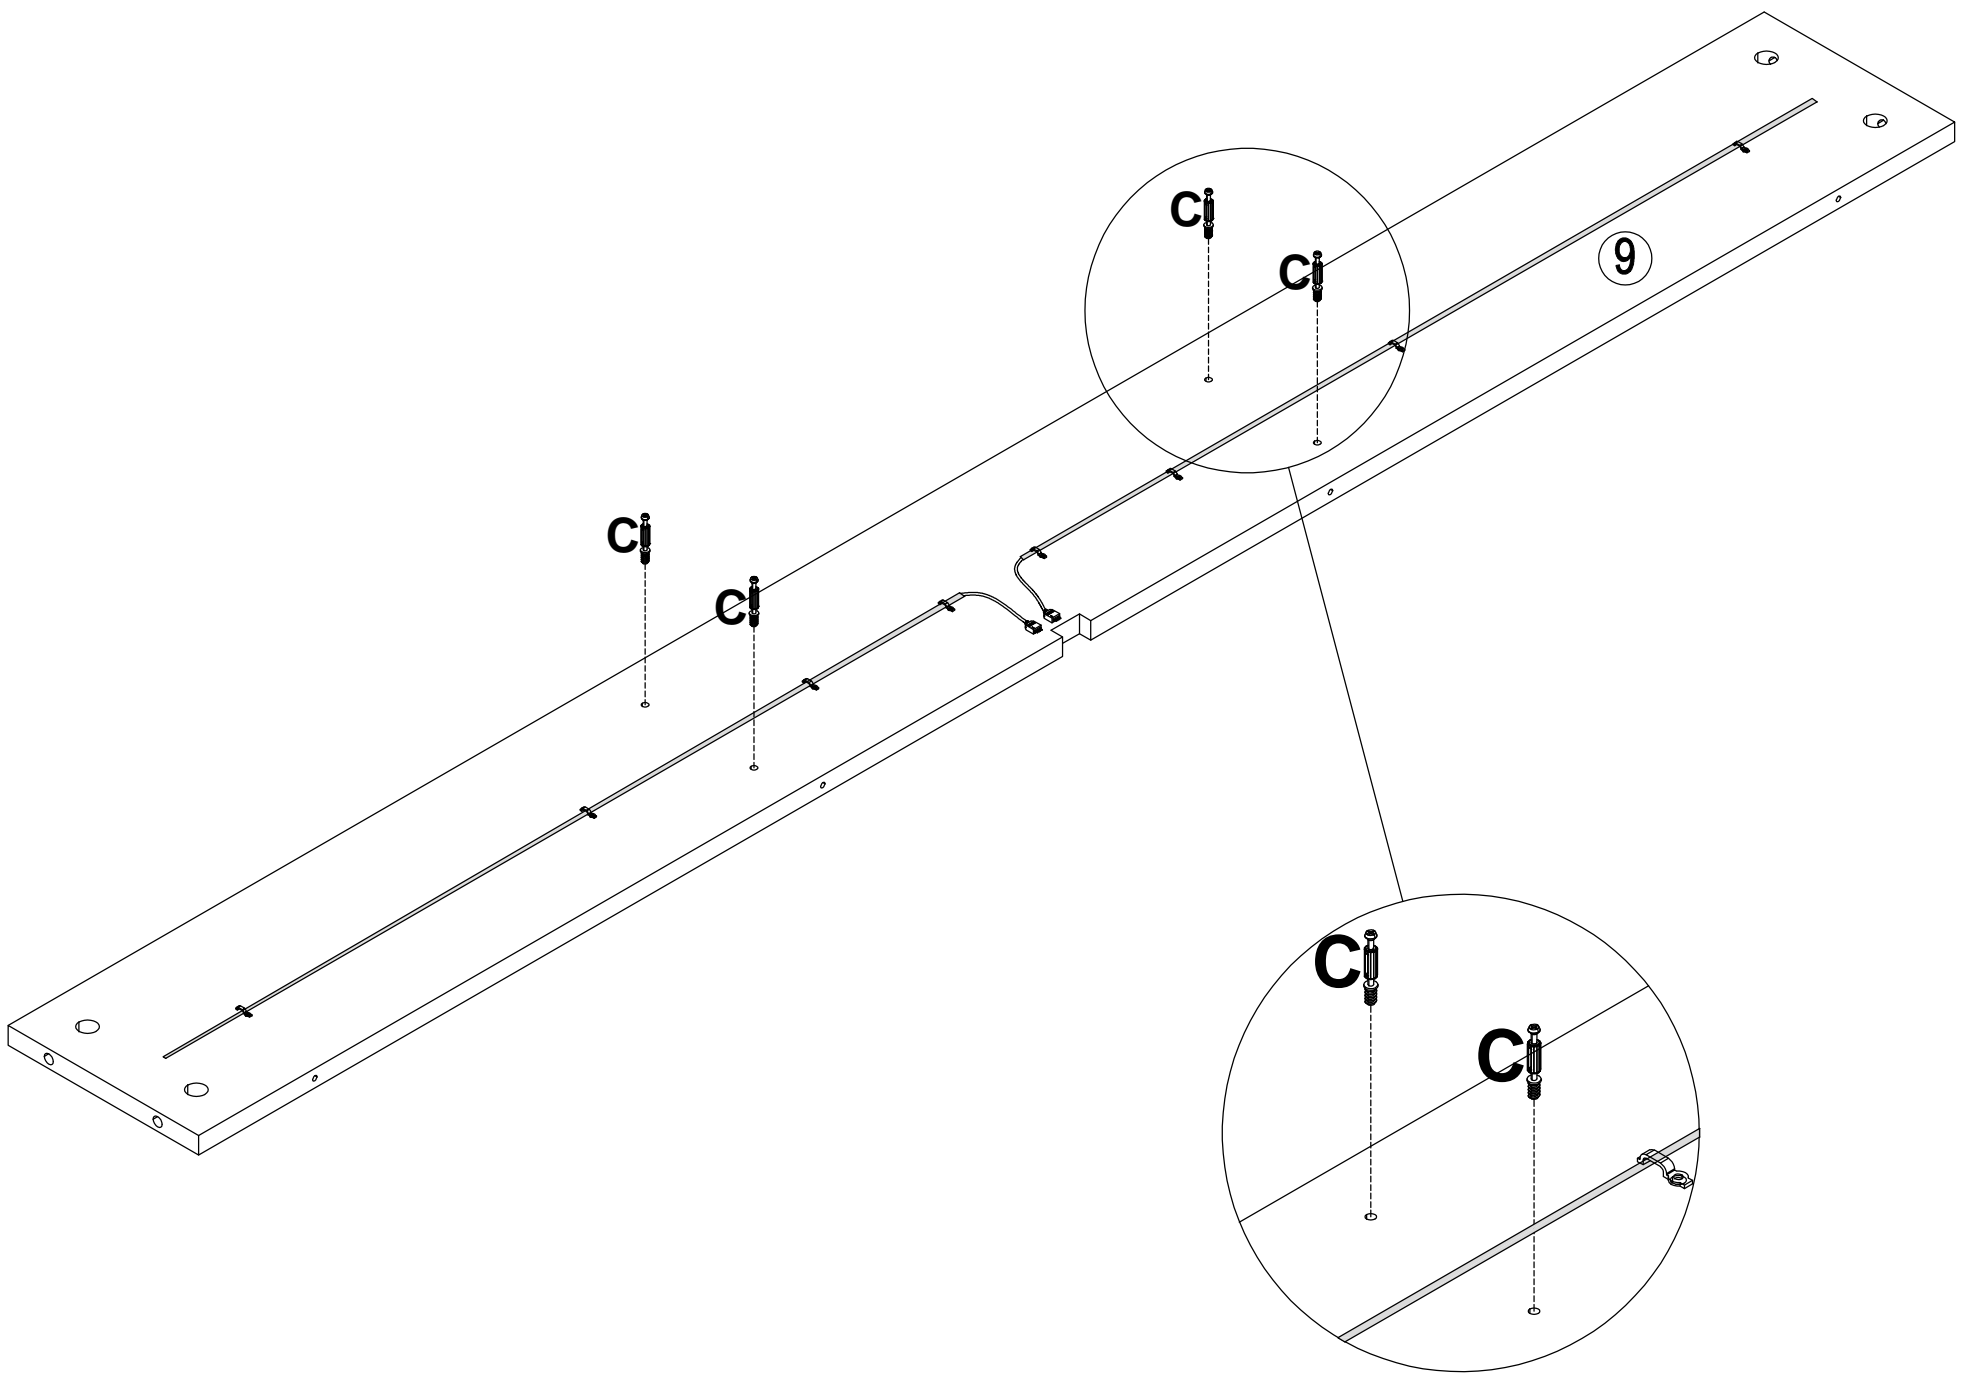

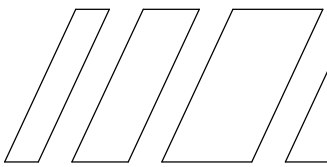


15

E Ø15x10



4 PCS

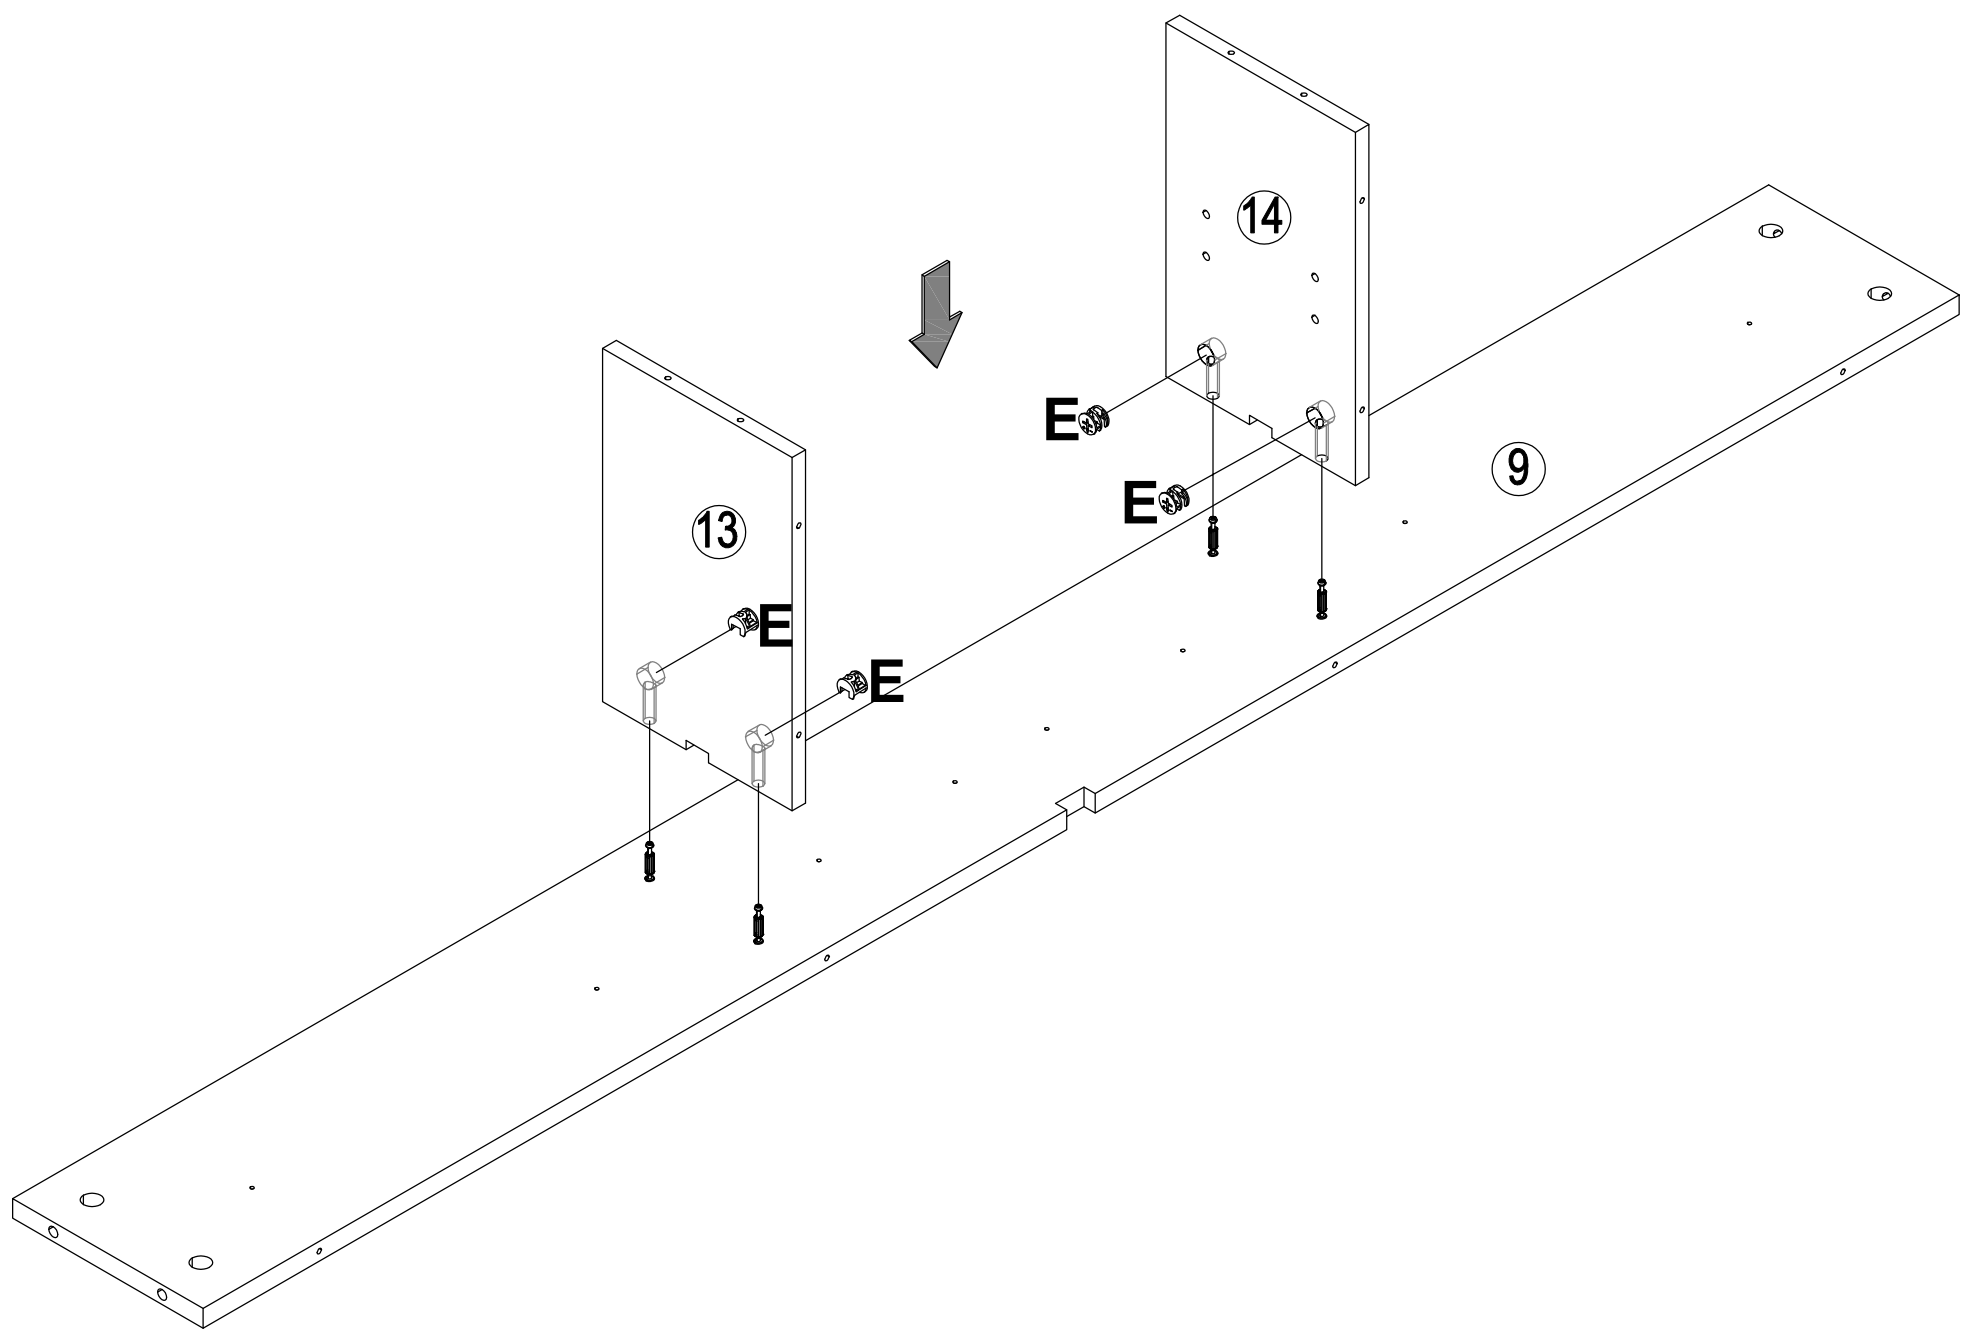


16

D M5x40




8 PCS

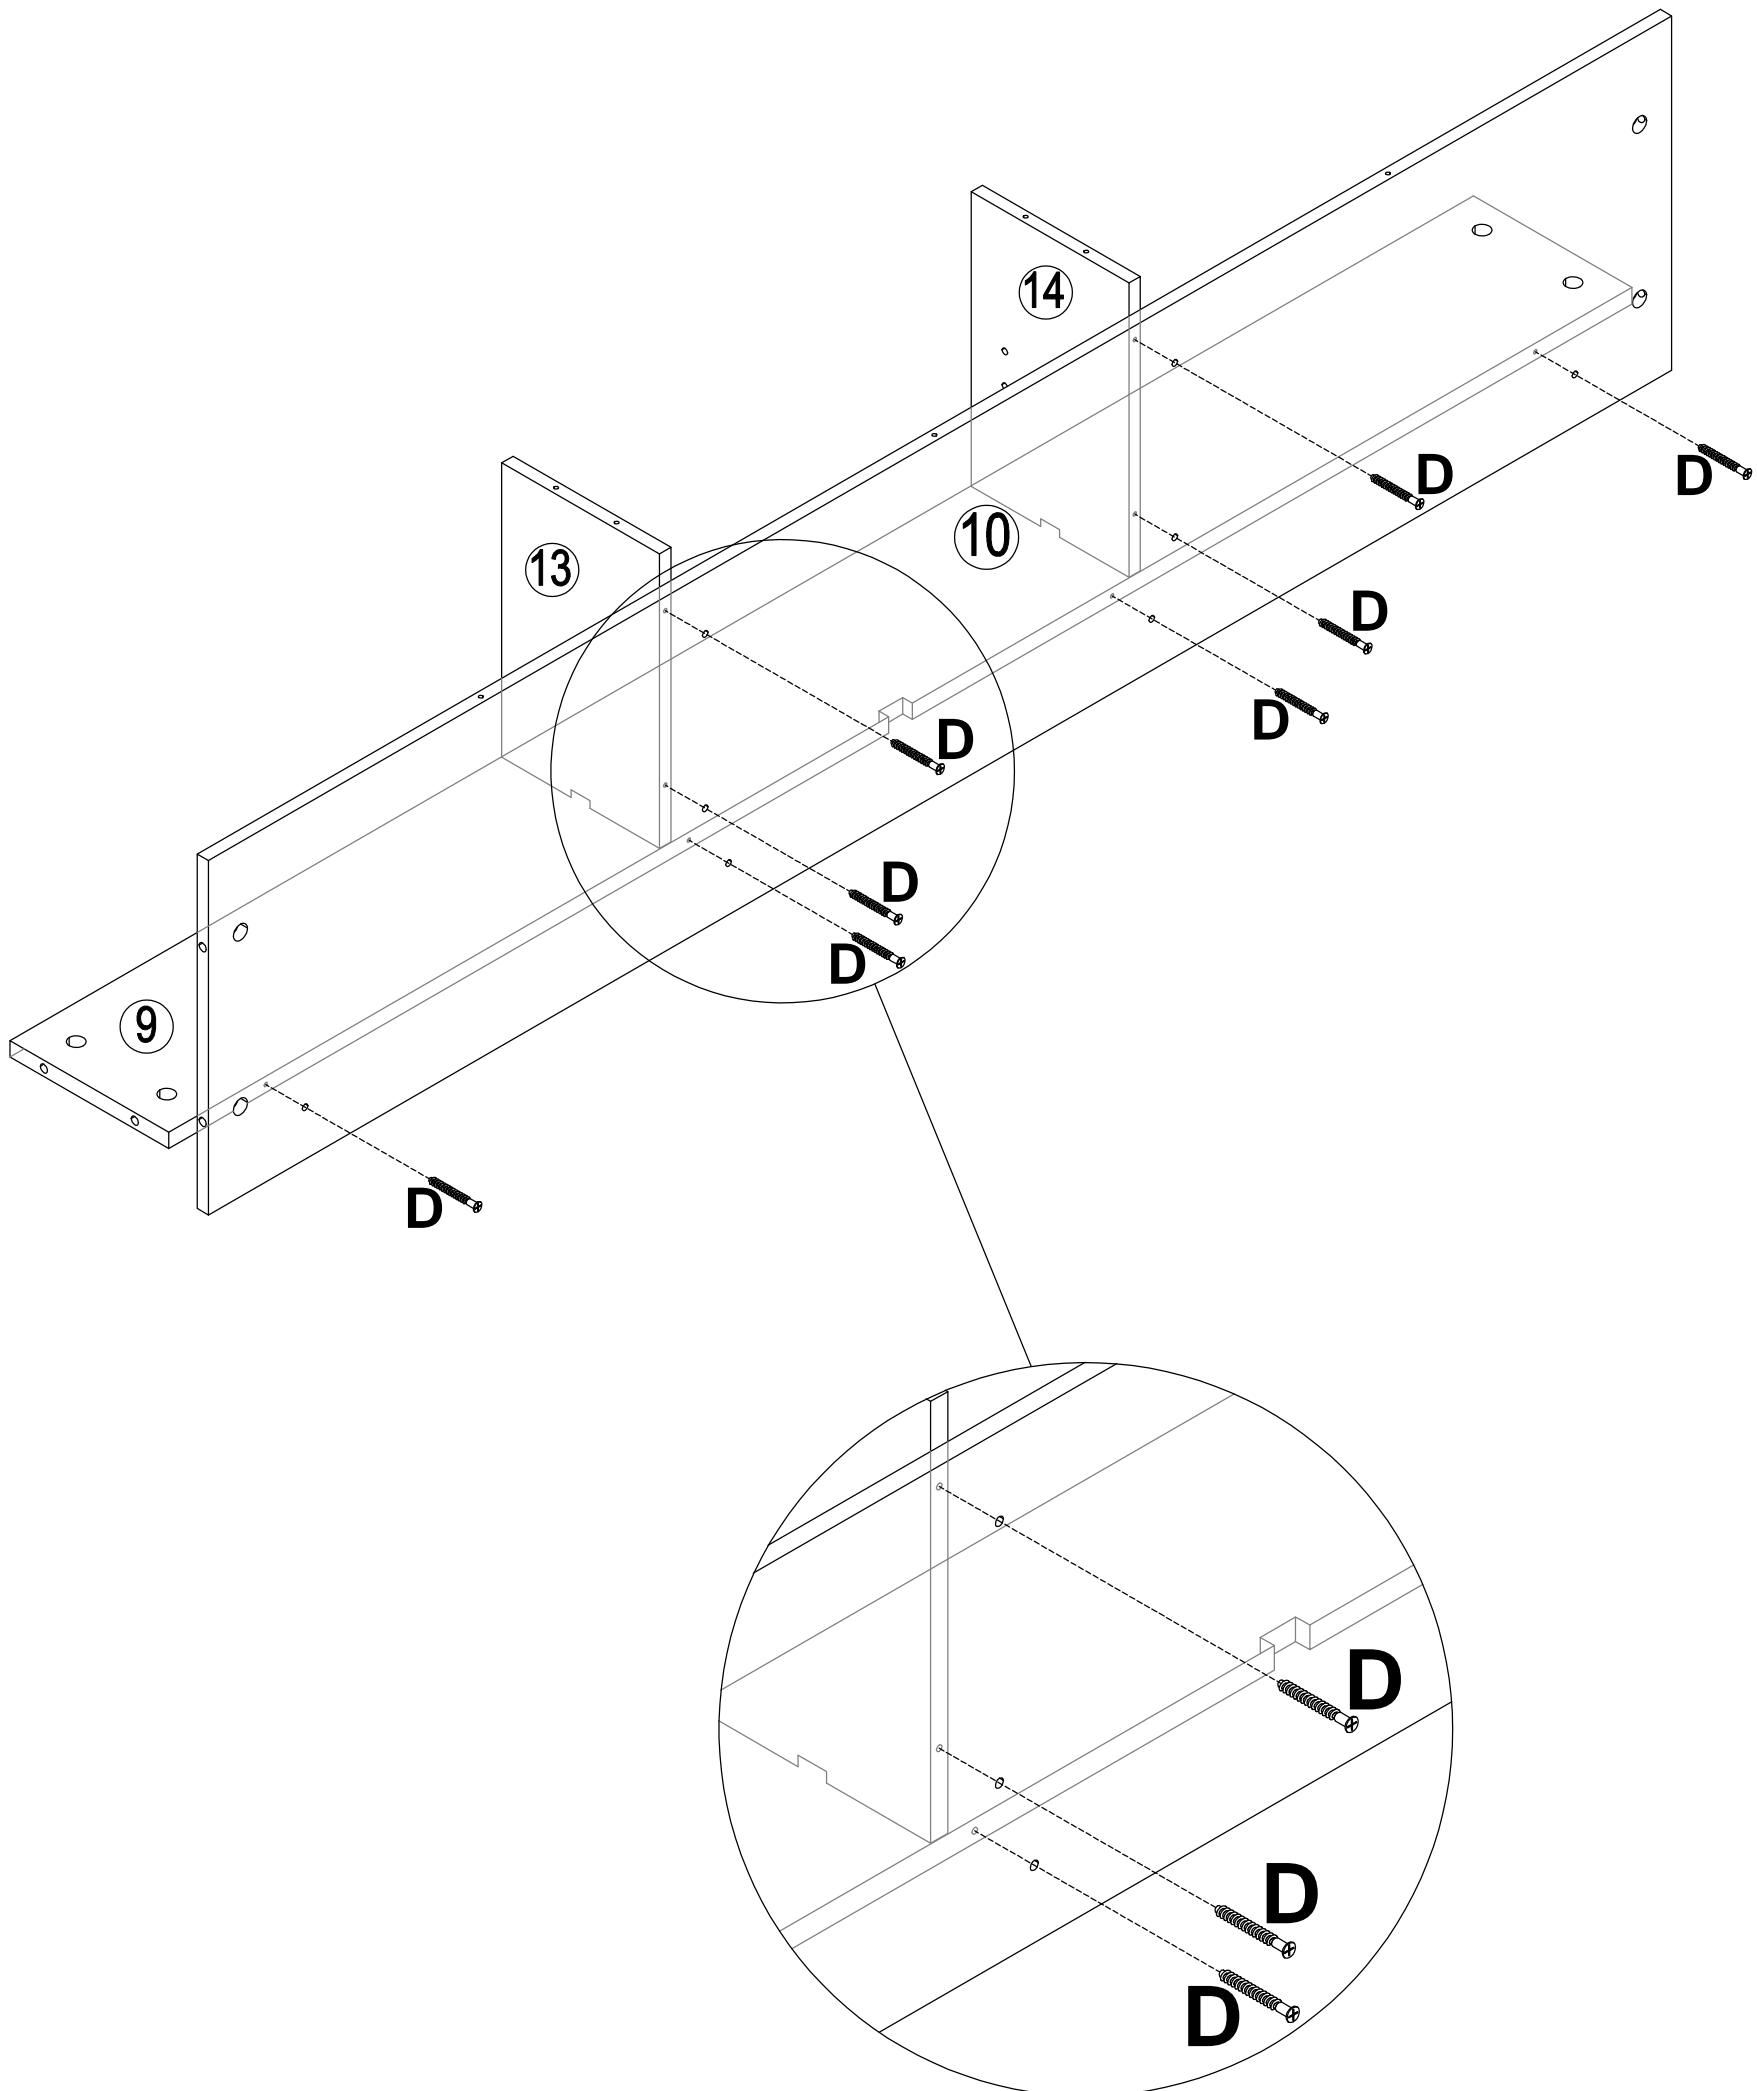


17

C M5x42




4 PCS

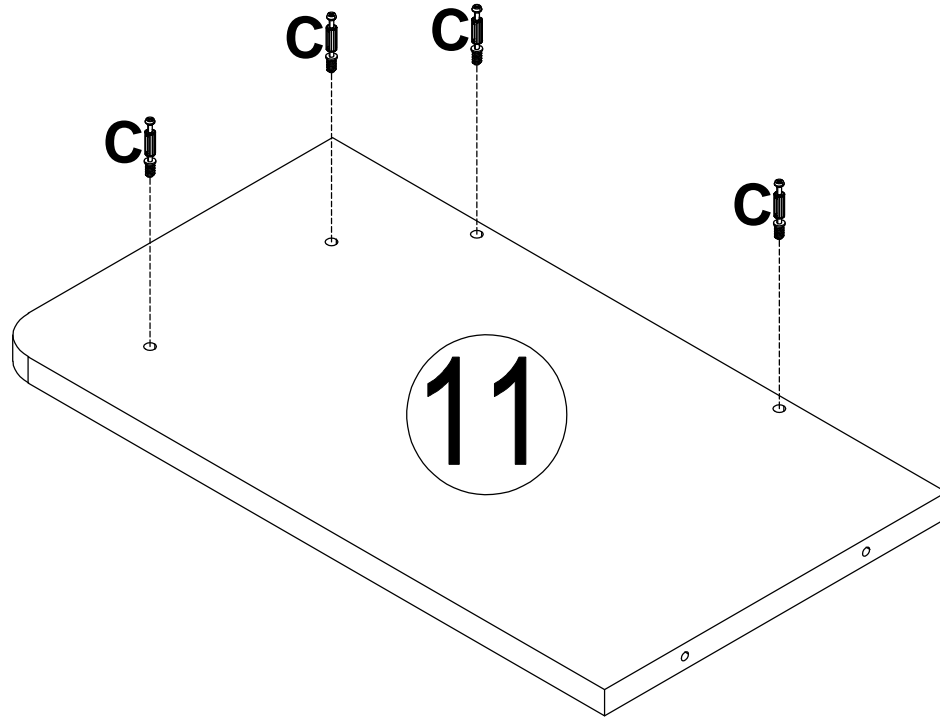


18

C M5x42



4 PCS

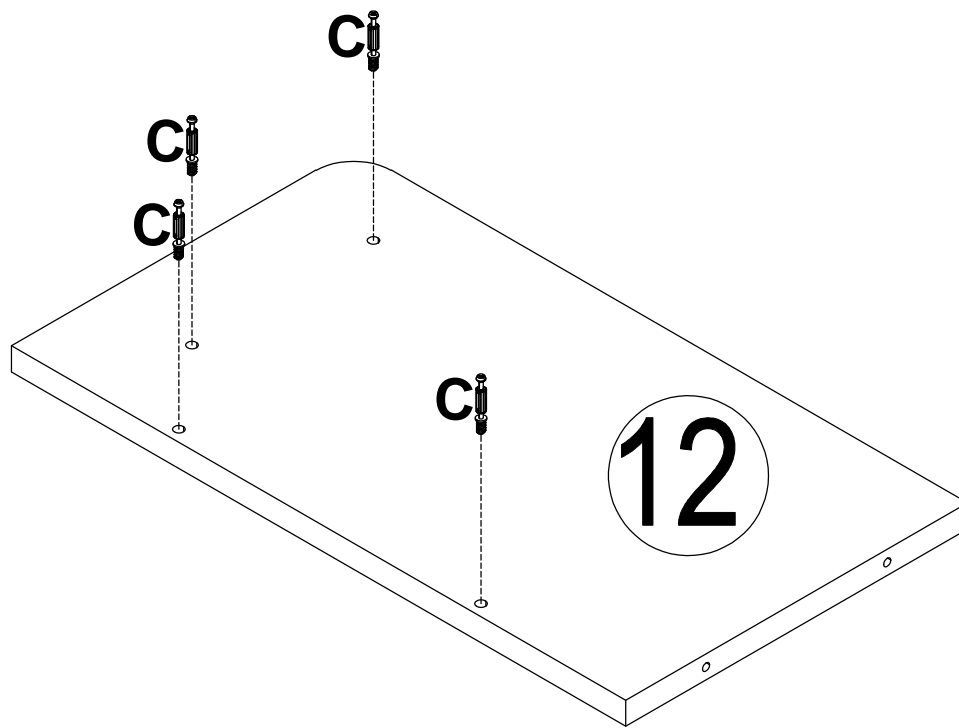


19

E Ø15x10



8 PCS

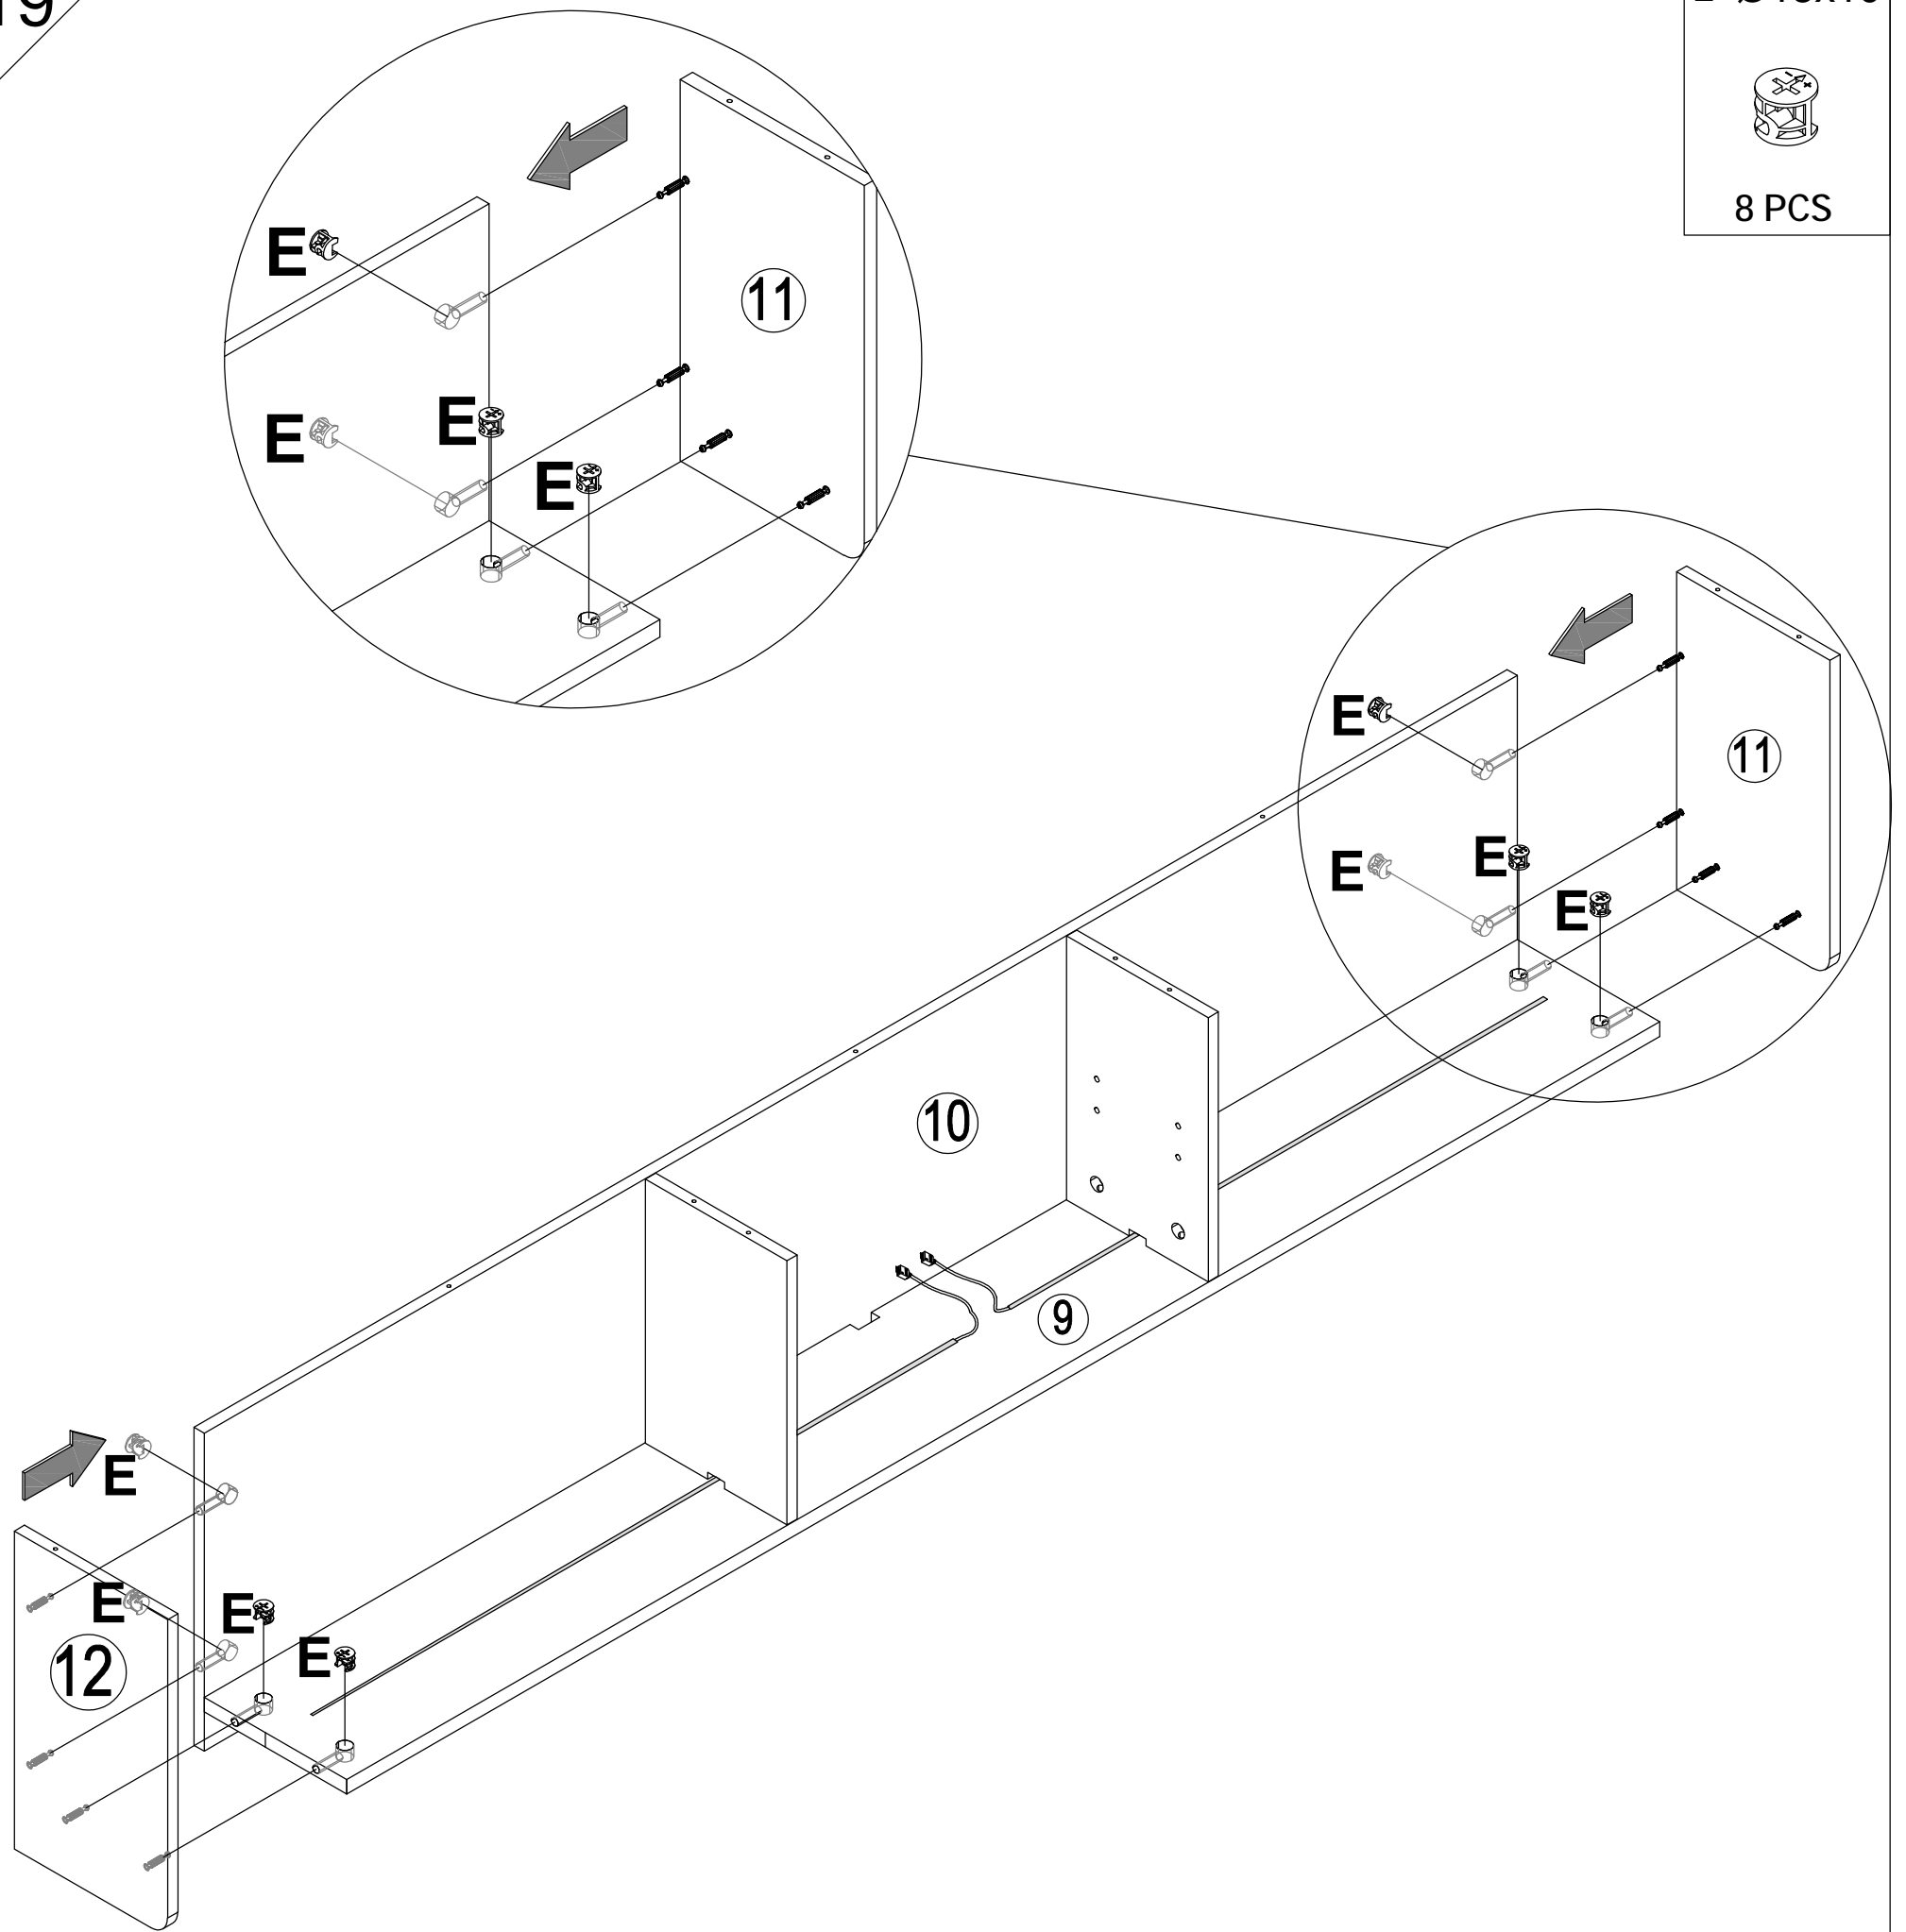


20

D M5x40




11 PCS

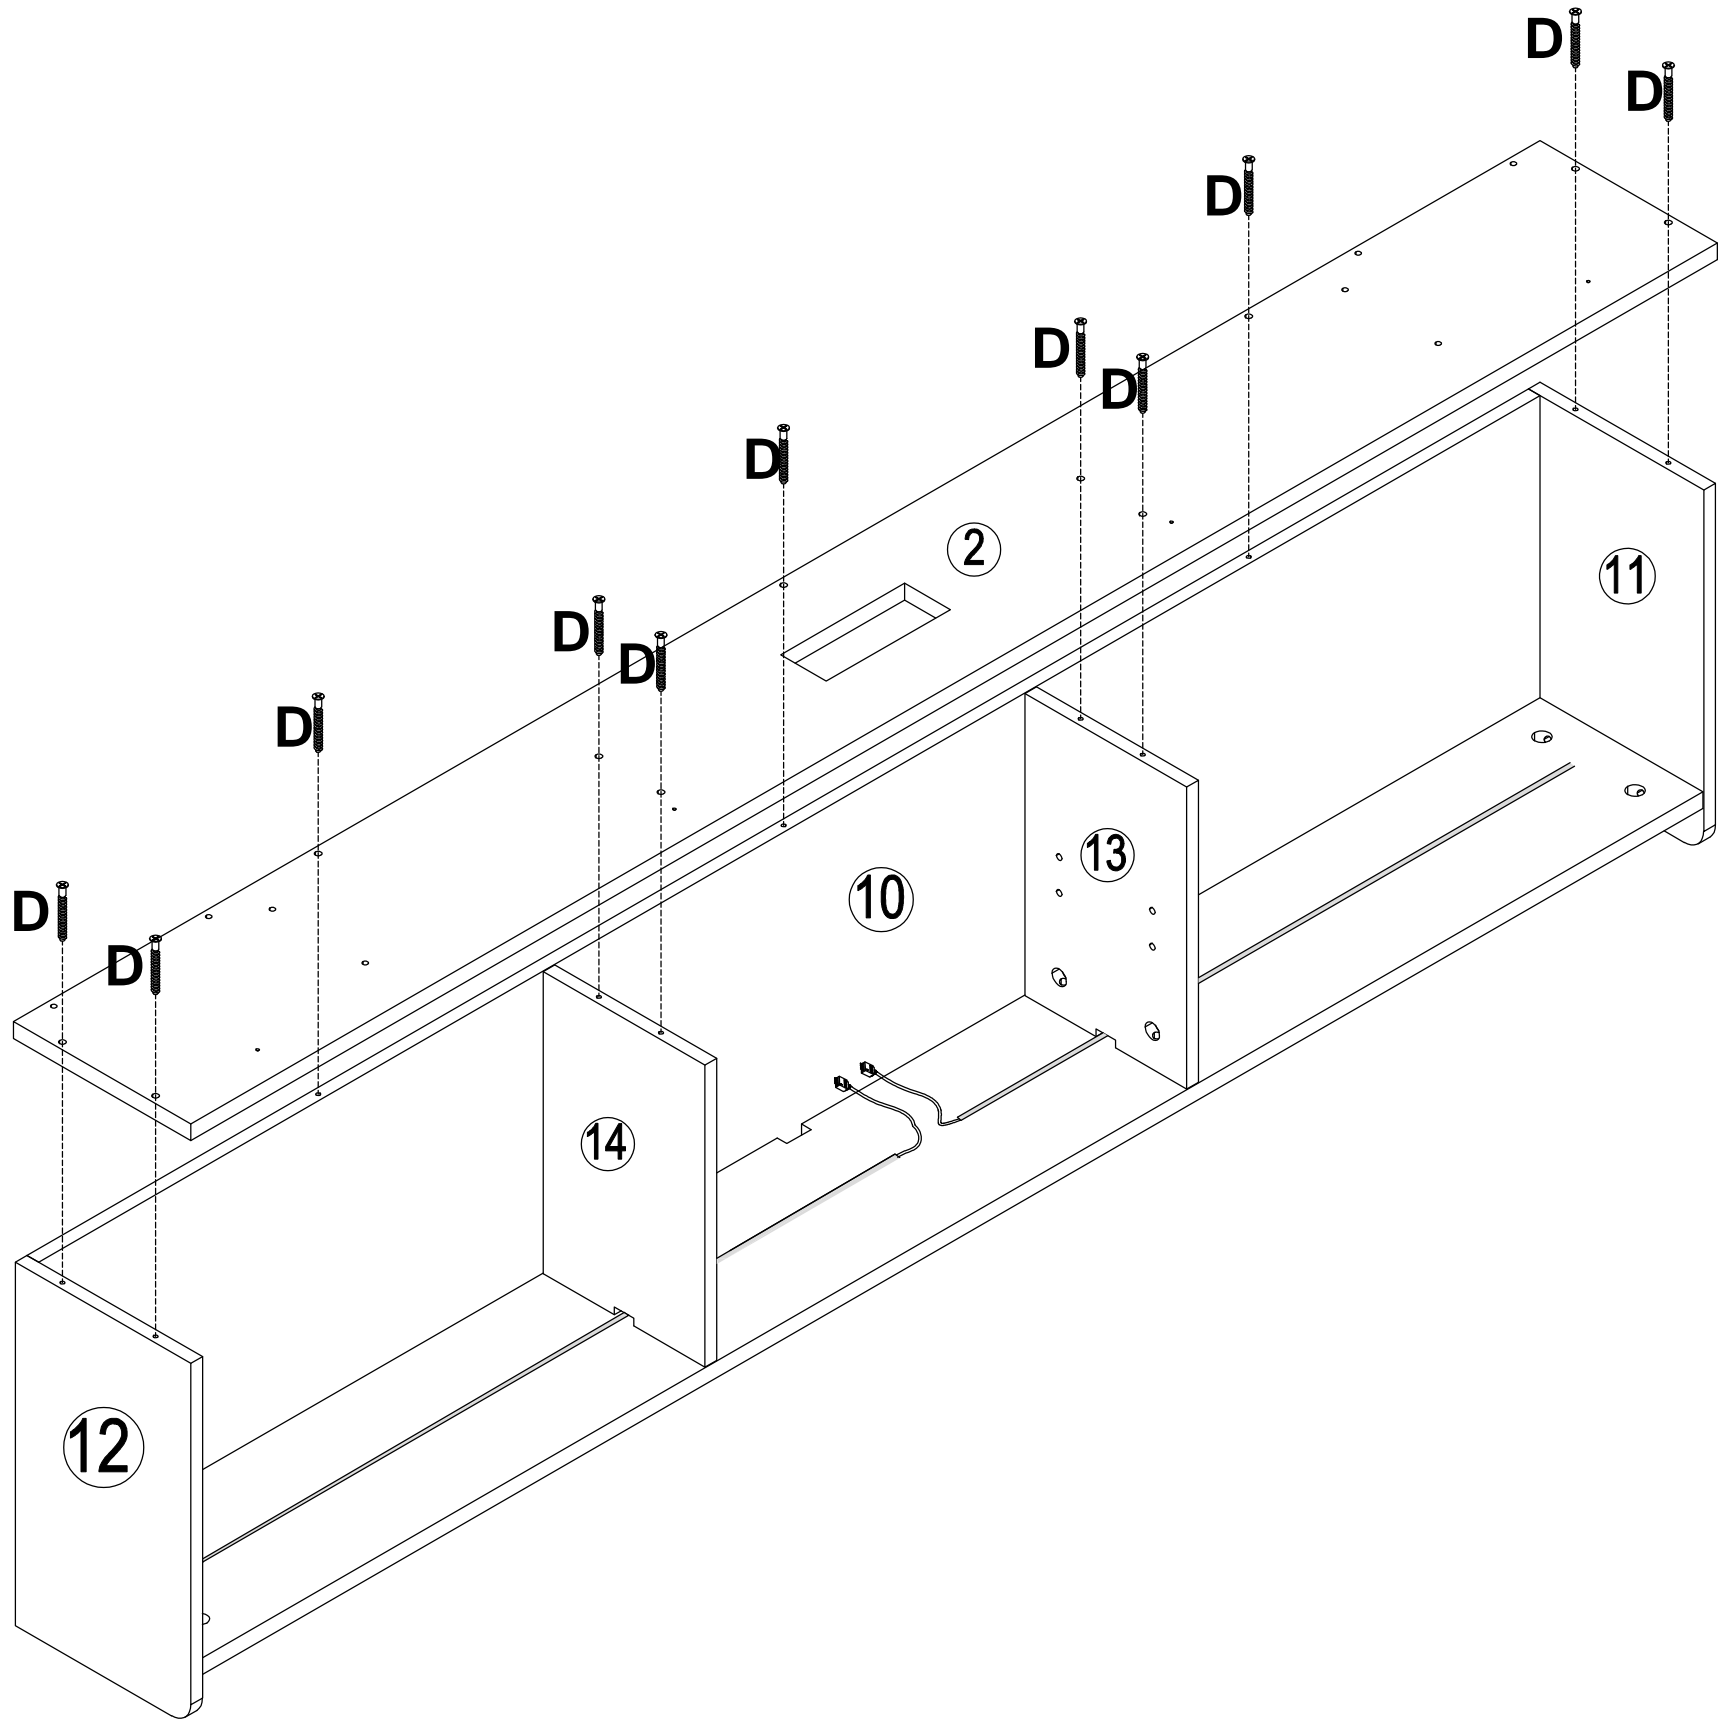


21

C M5x42



8 PCS

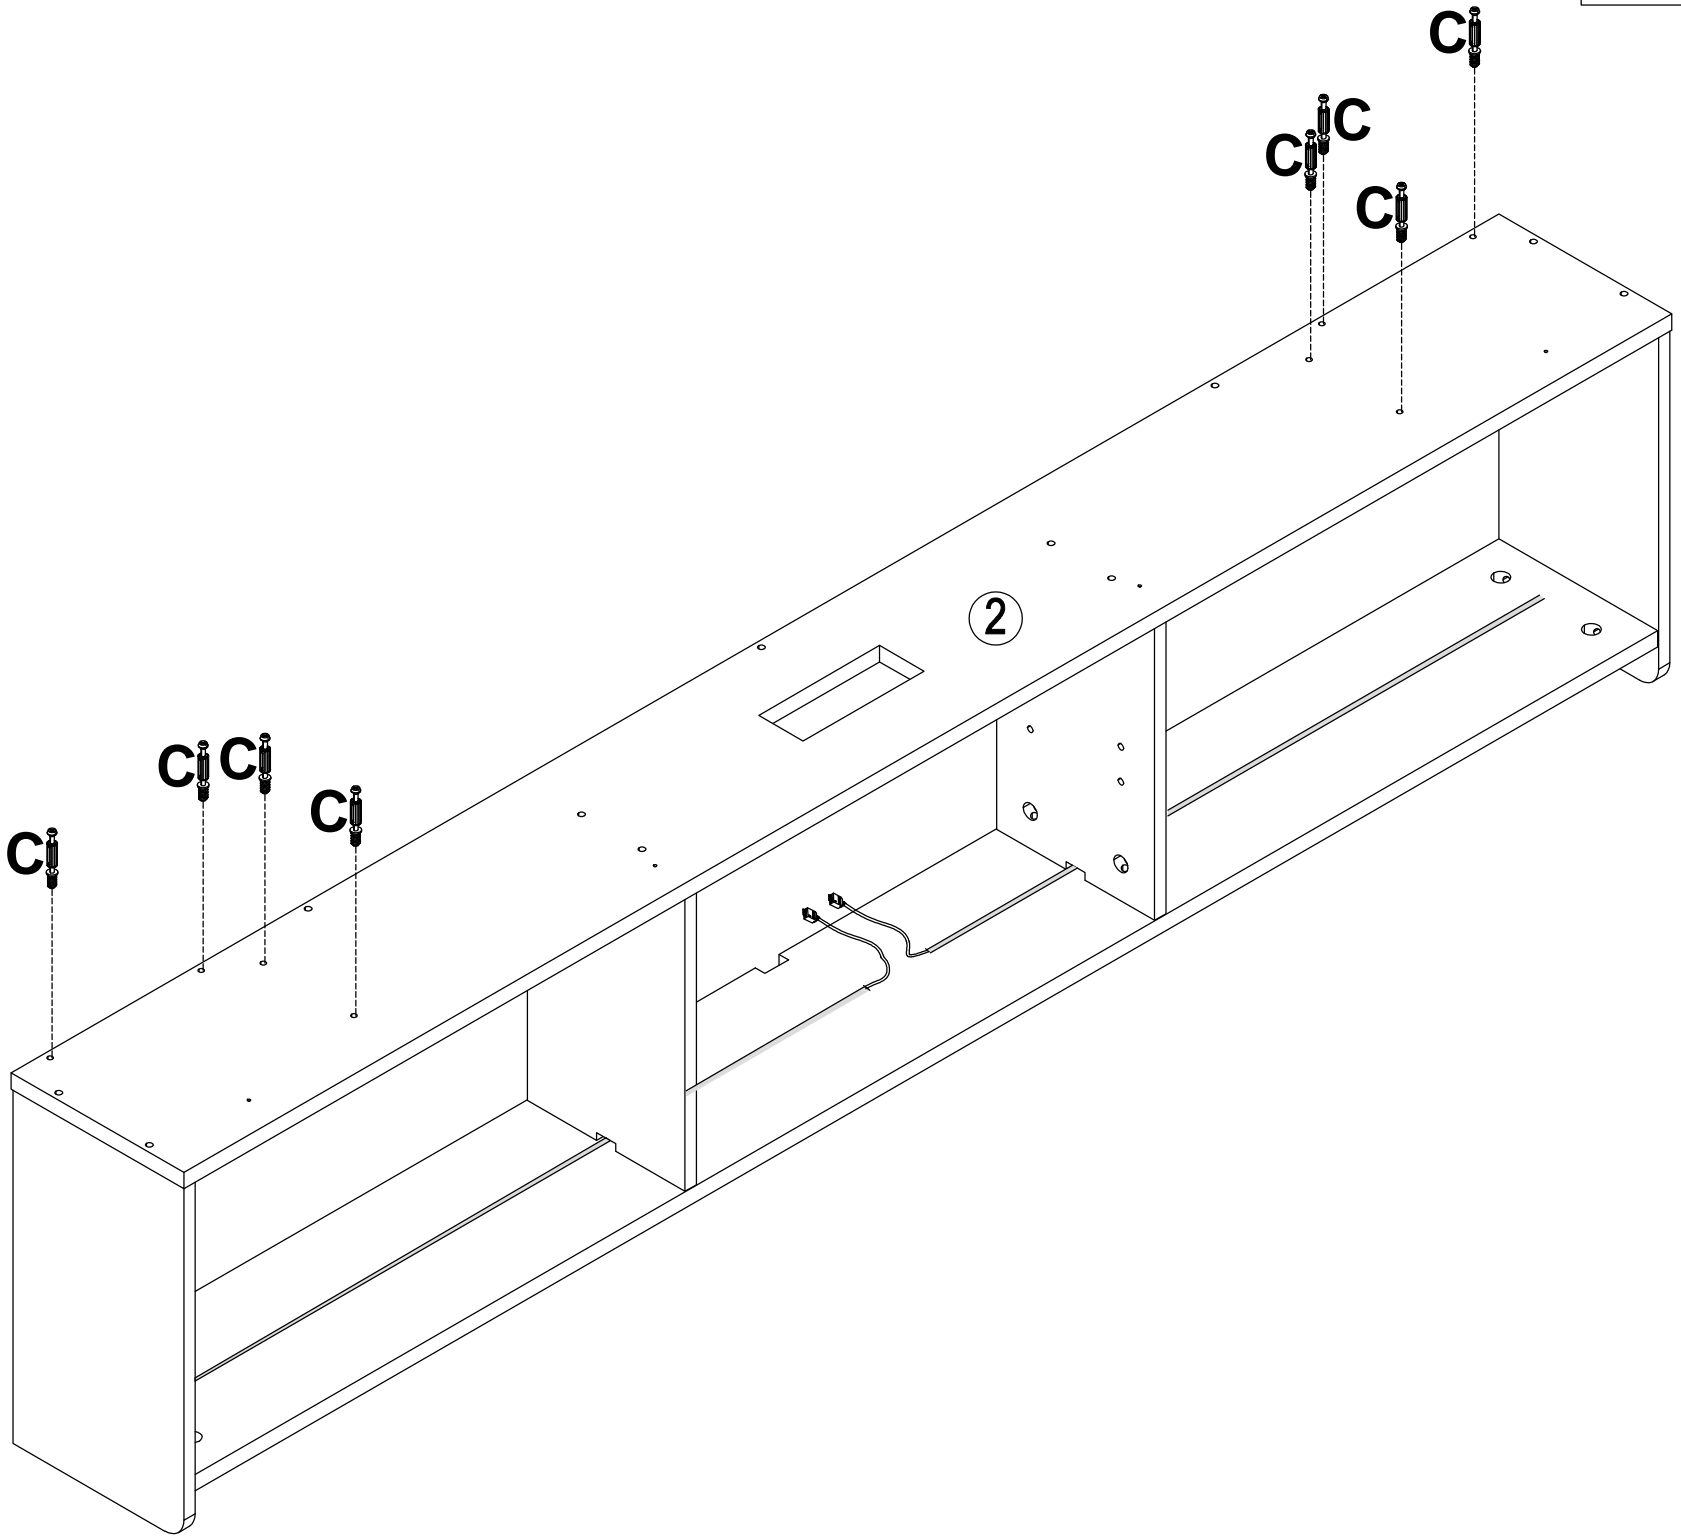

22

B Ø3.5x14


E Ø15x10



4 PCS




8 PCS


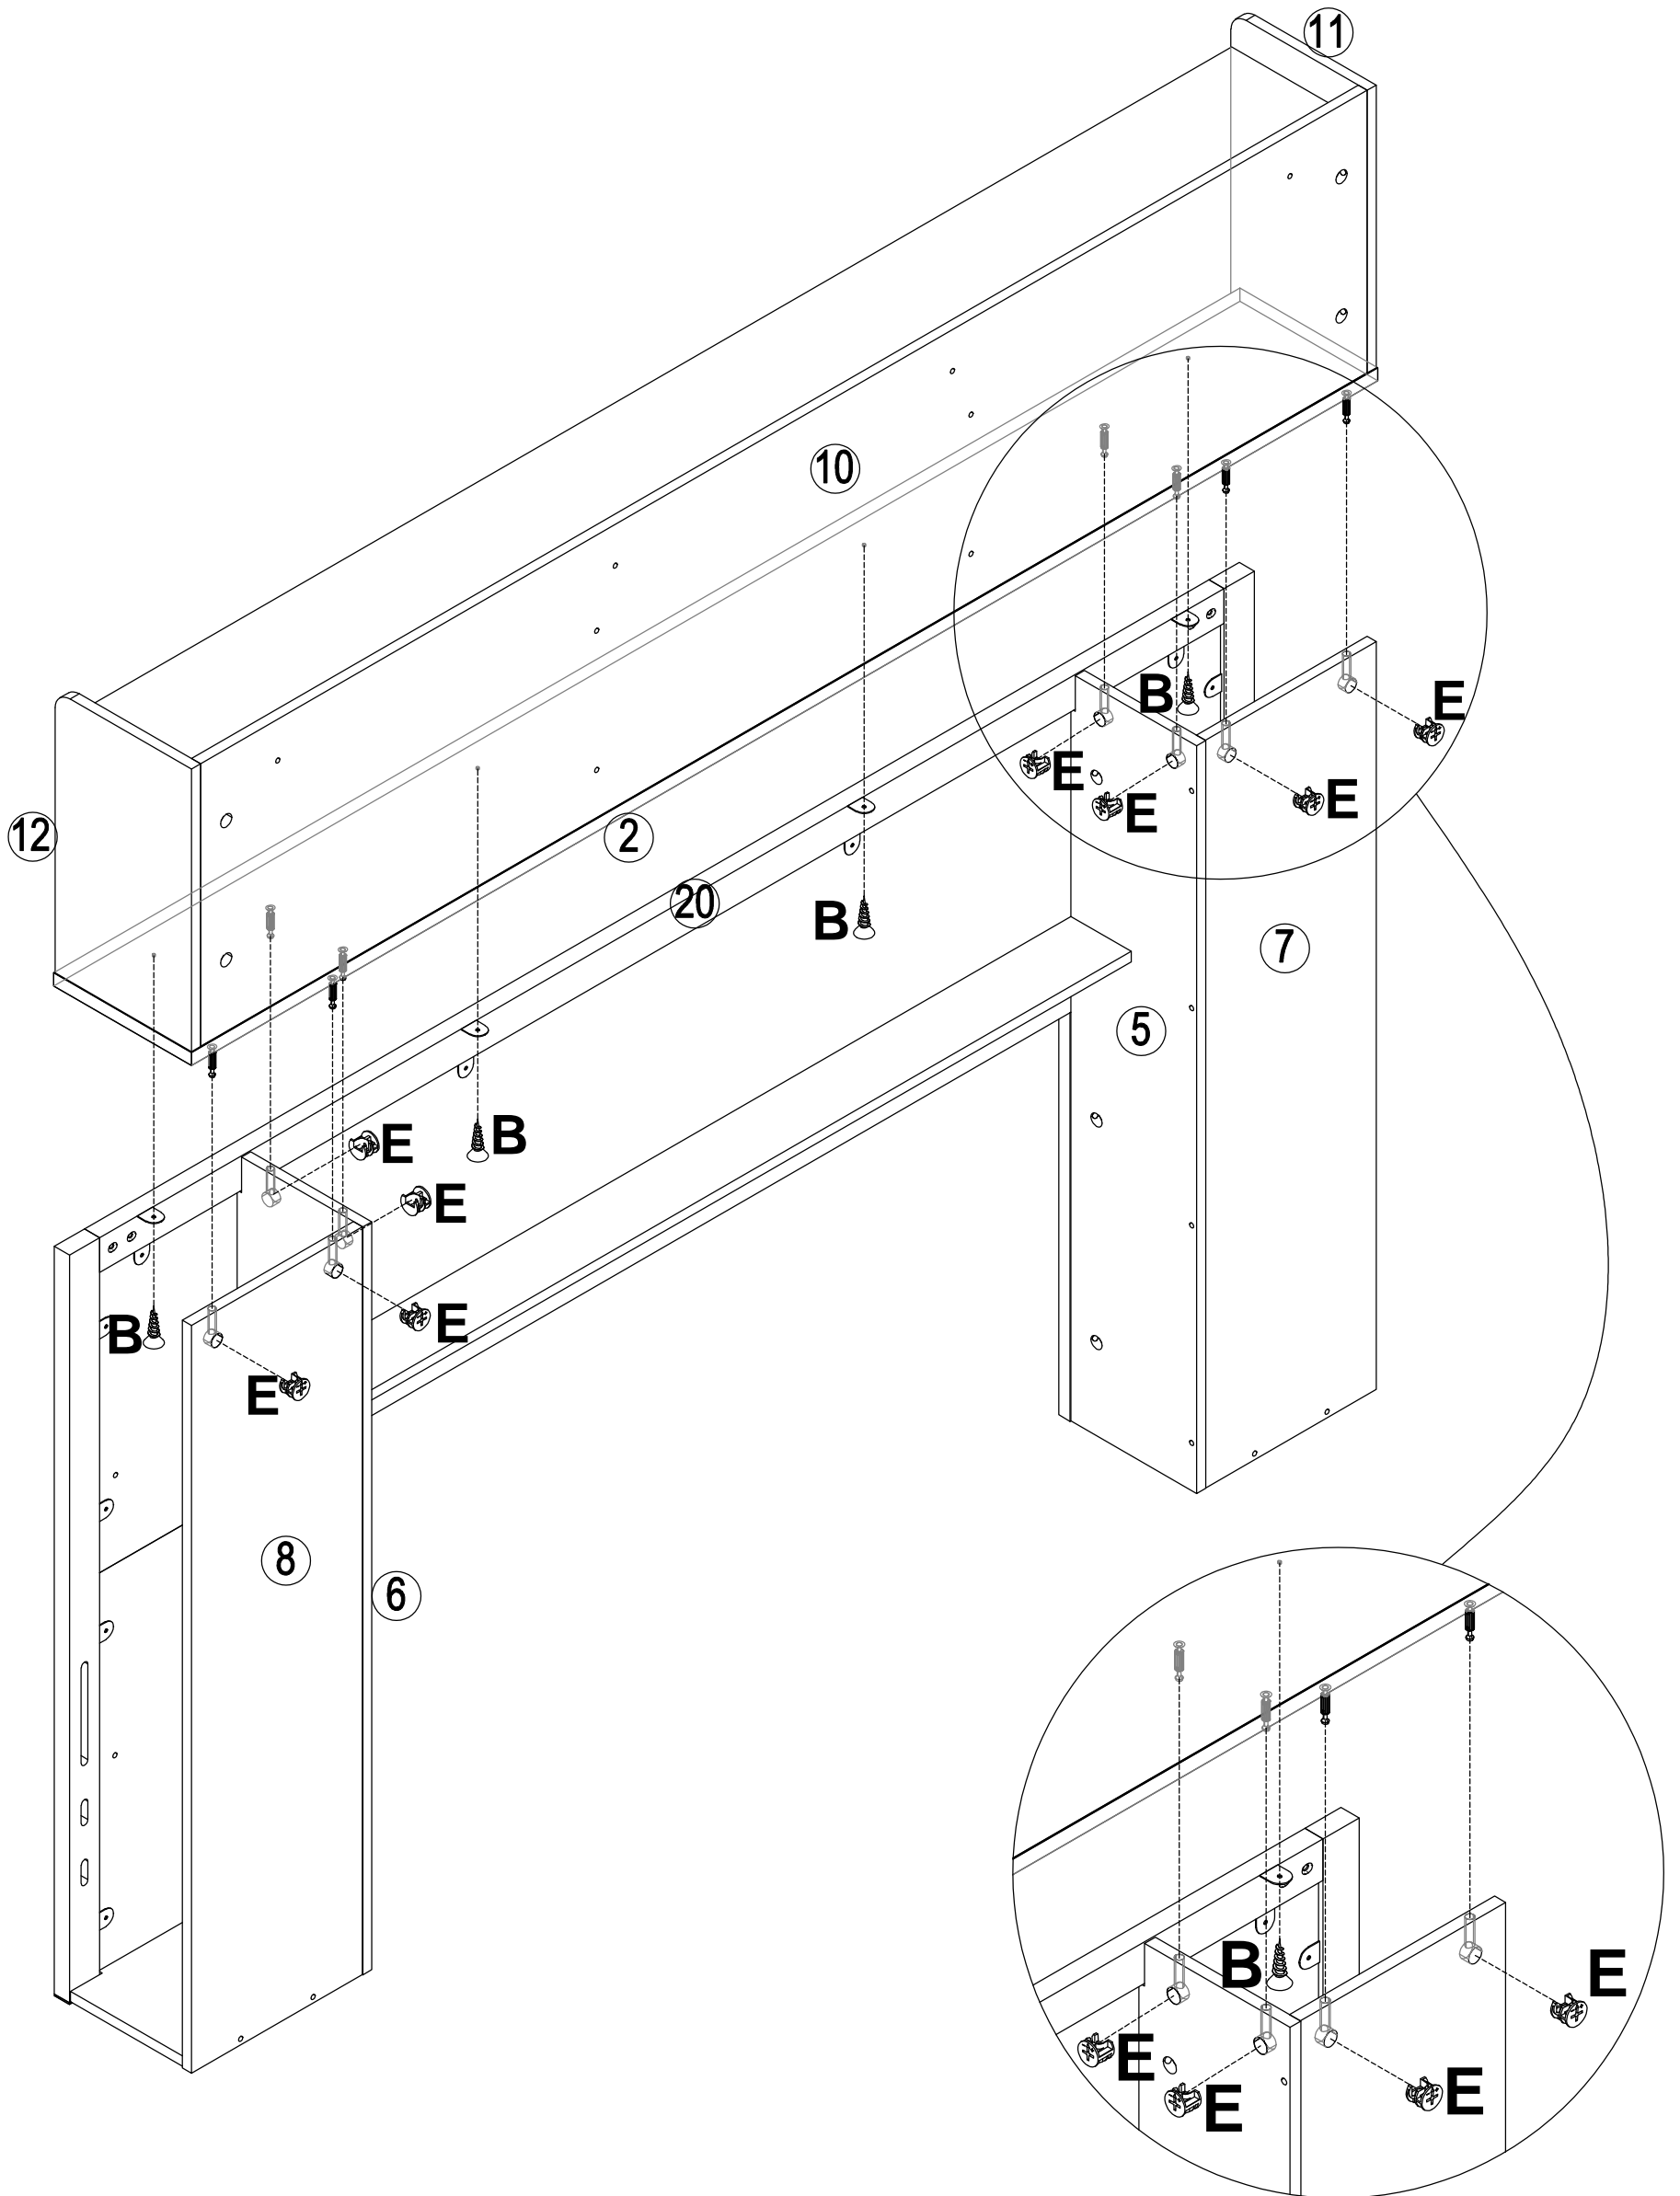


23


H Ø5





8 PCS

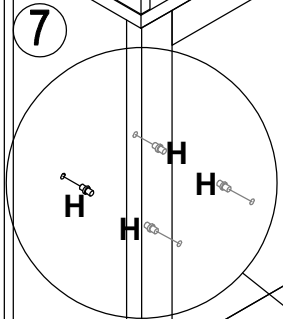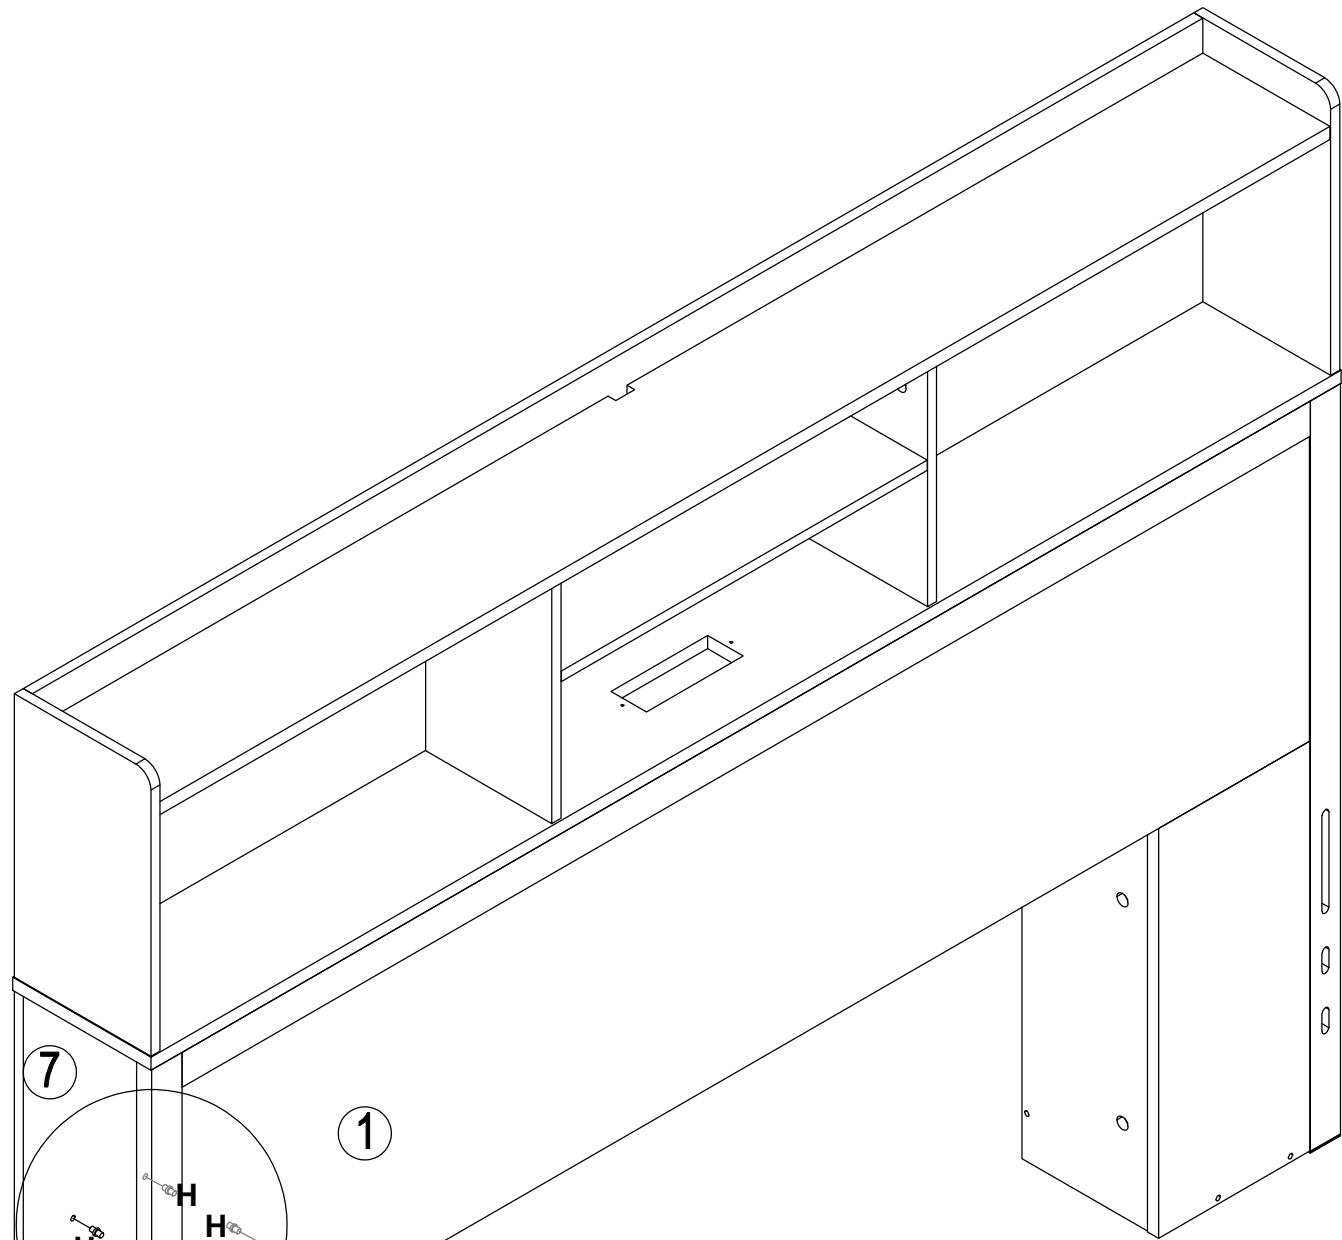



1

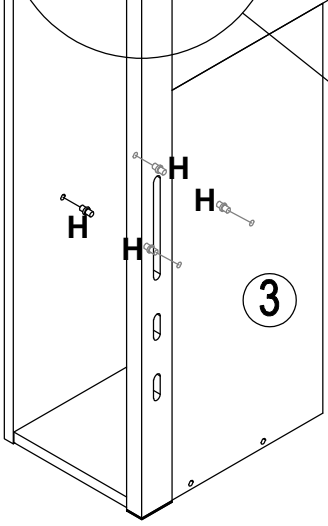

3

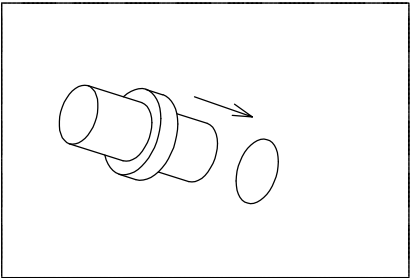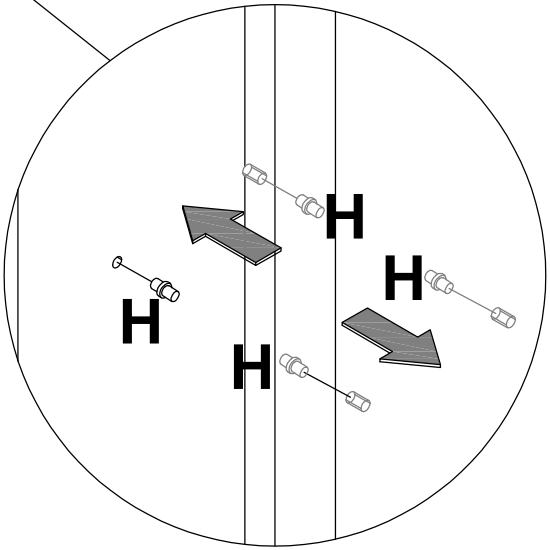


24


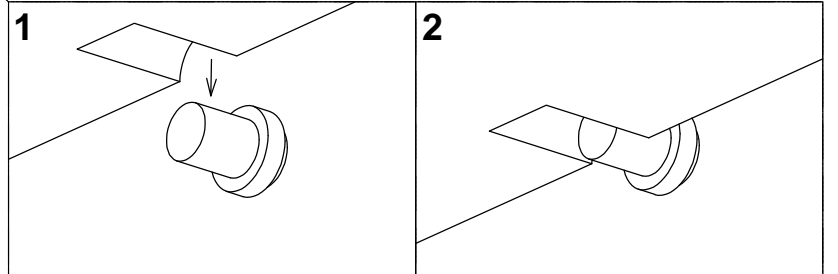
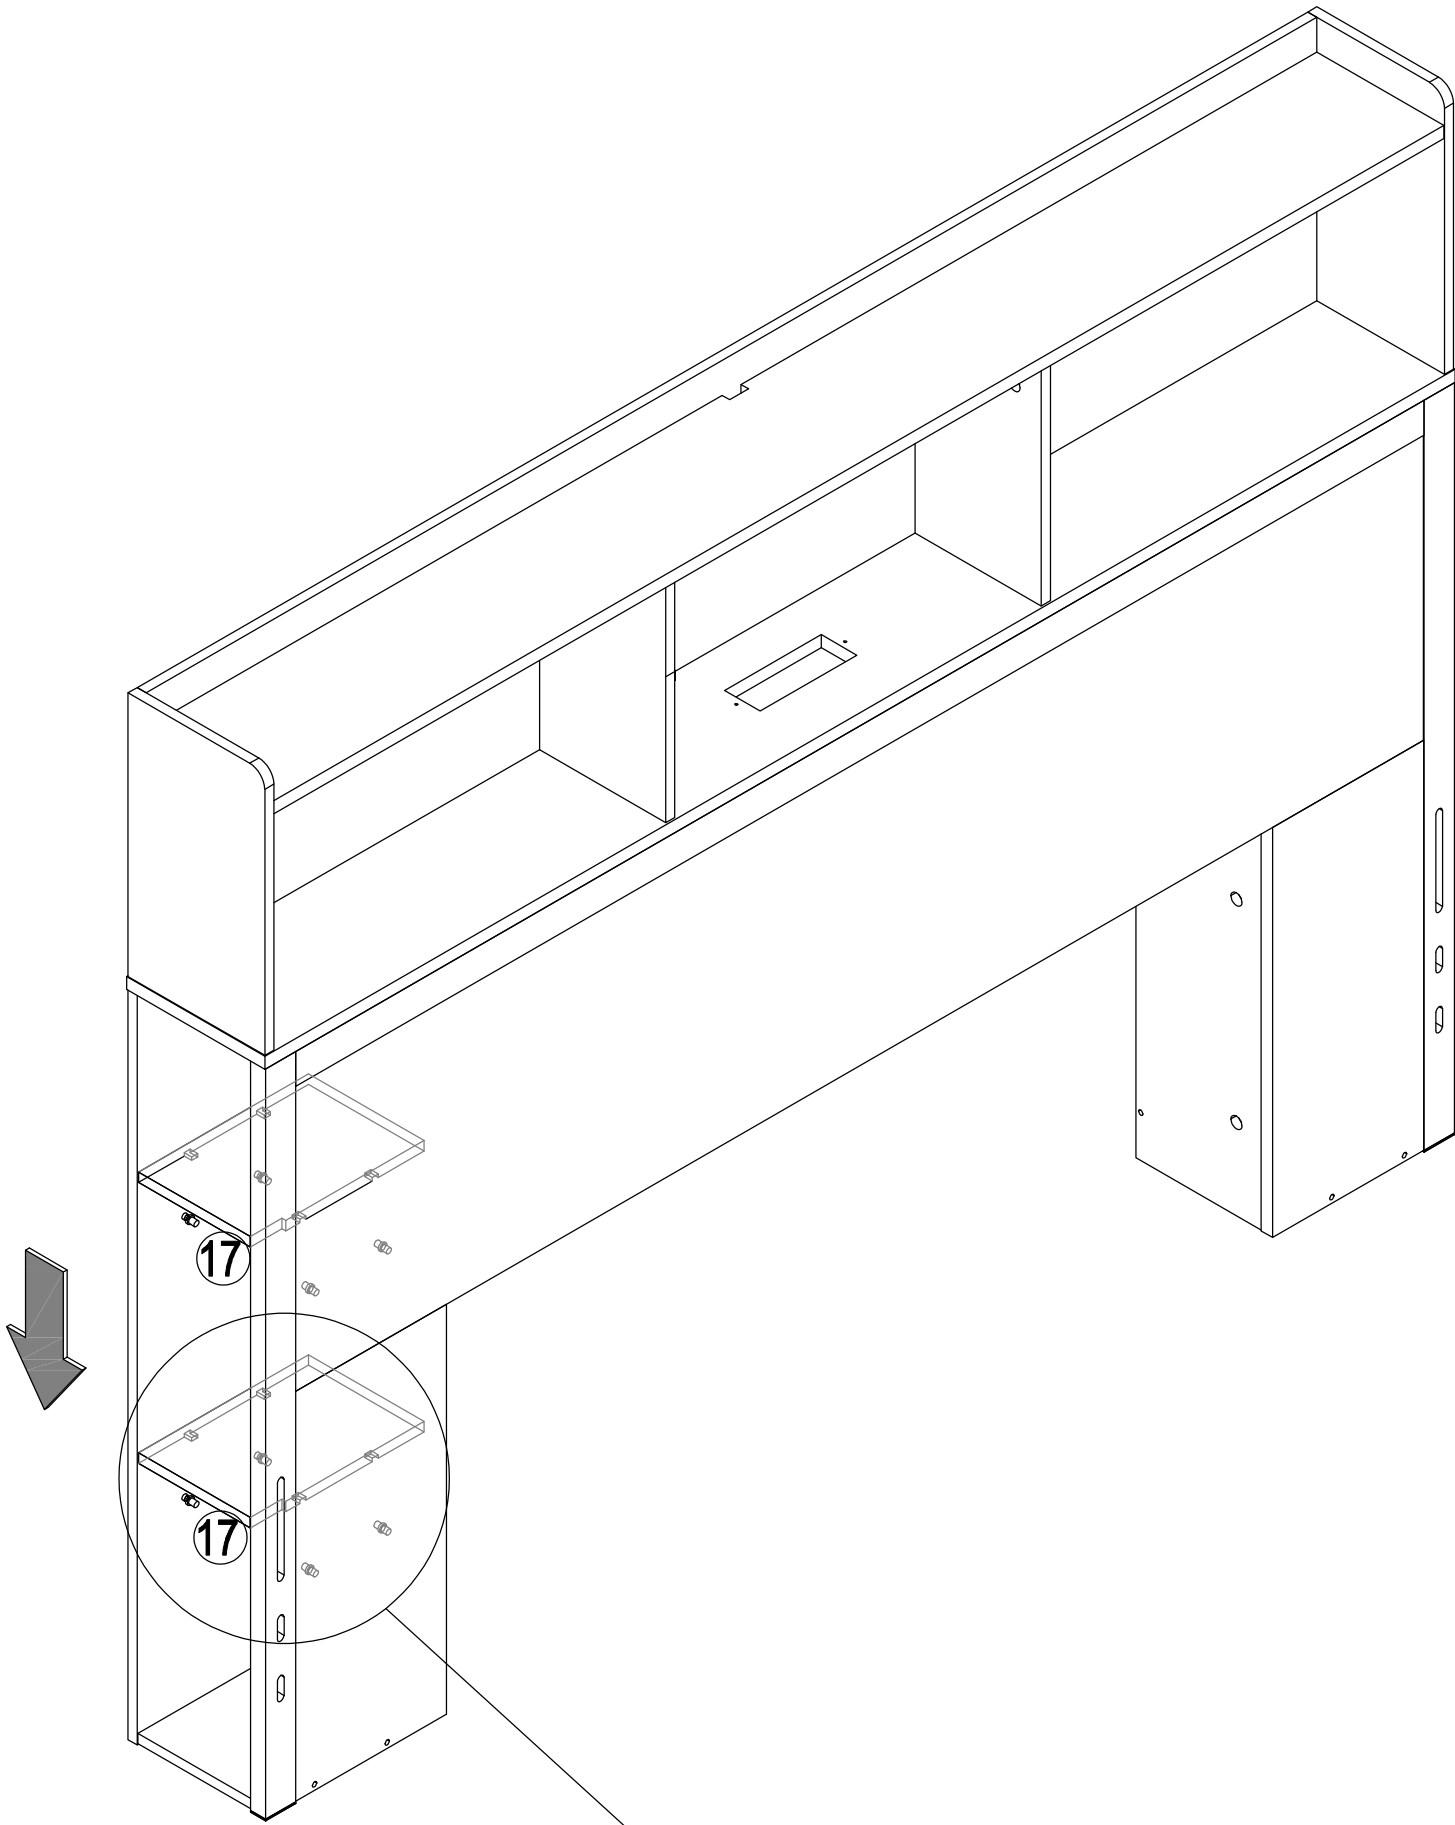


25



H Ø5



8 PCS

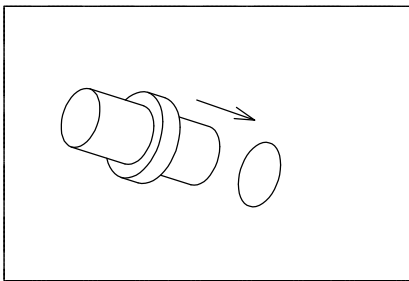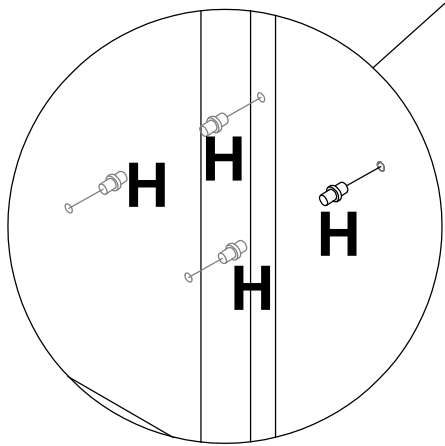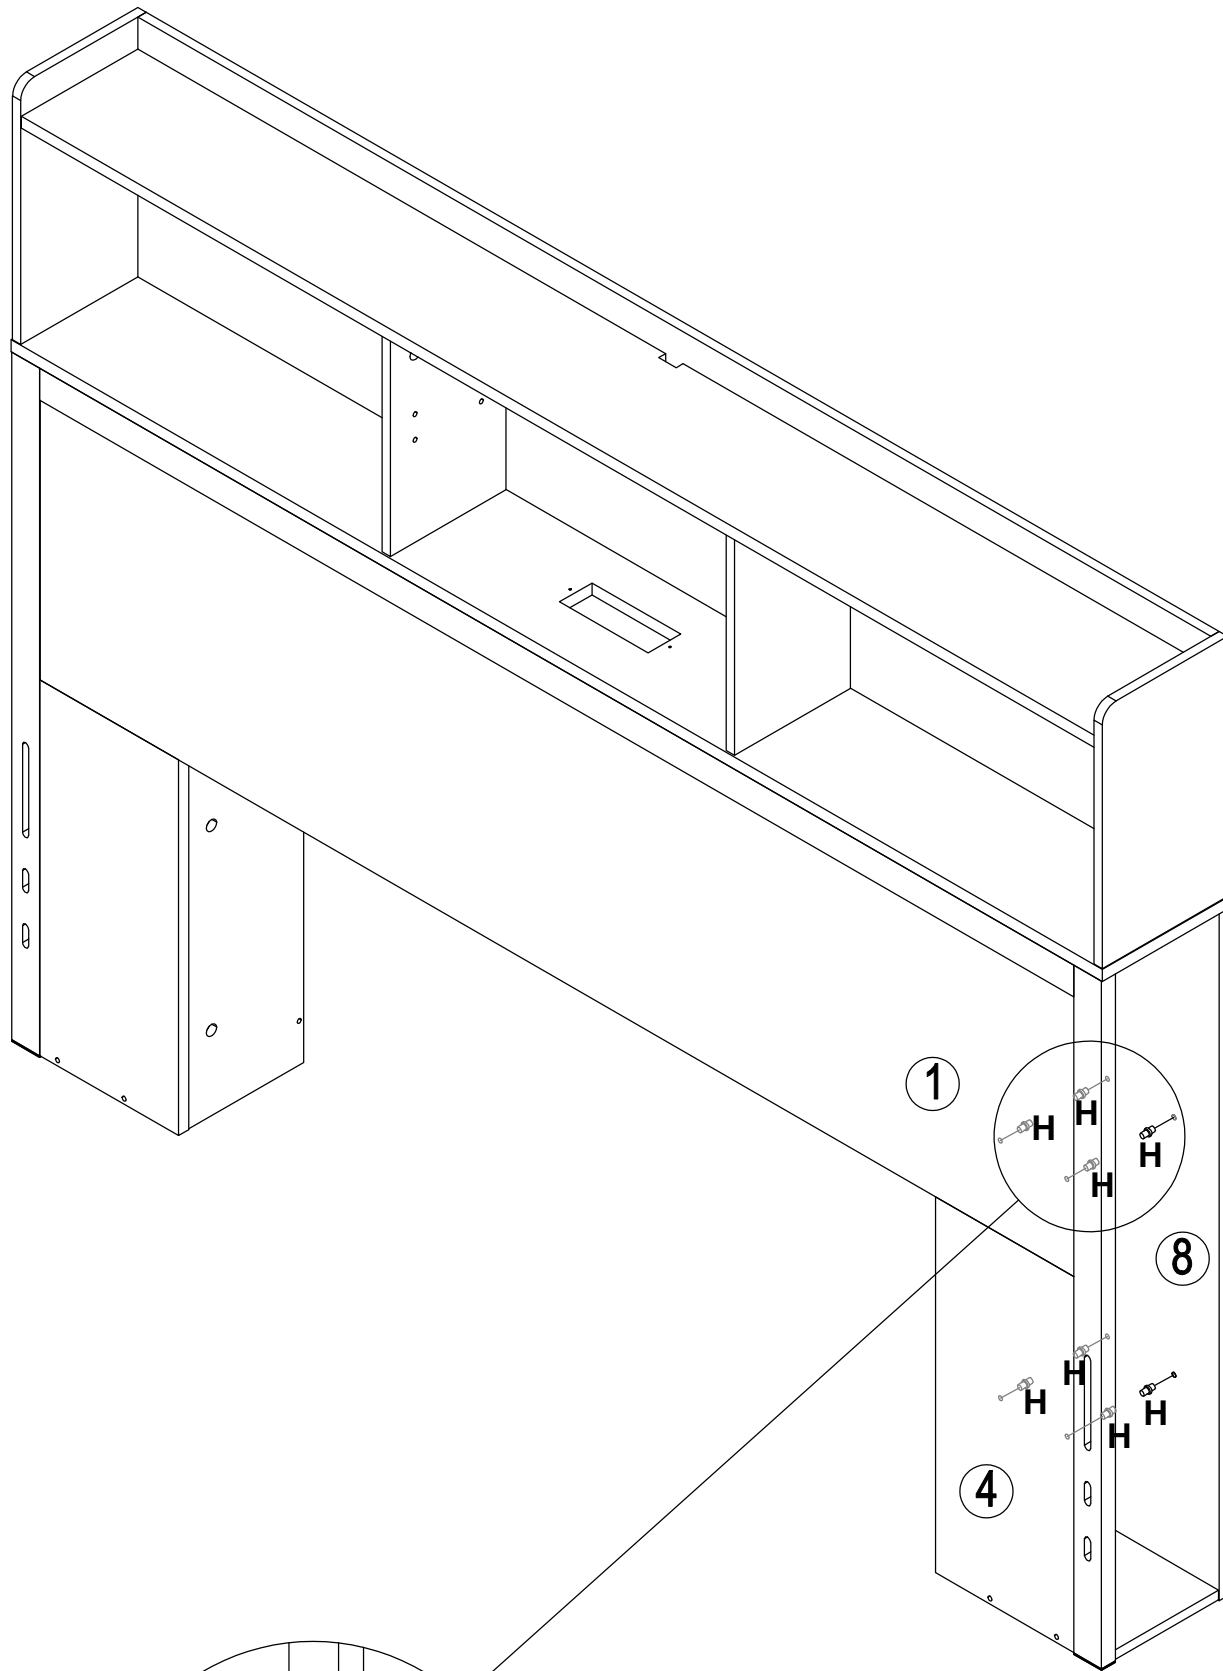

26

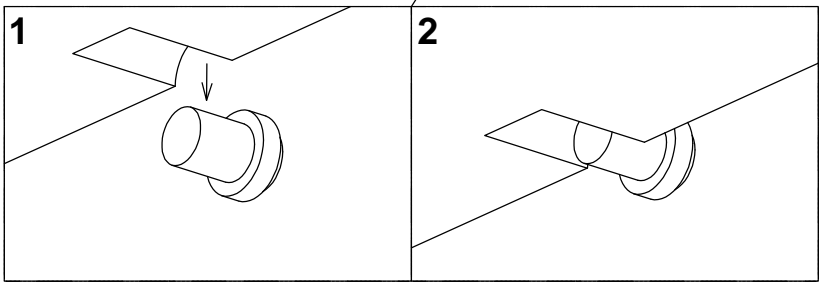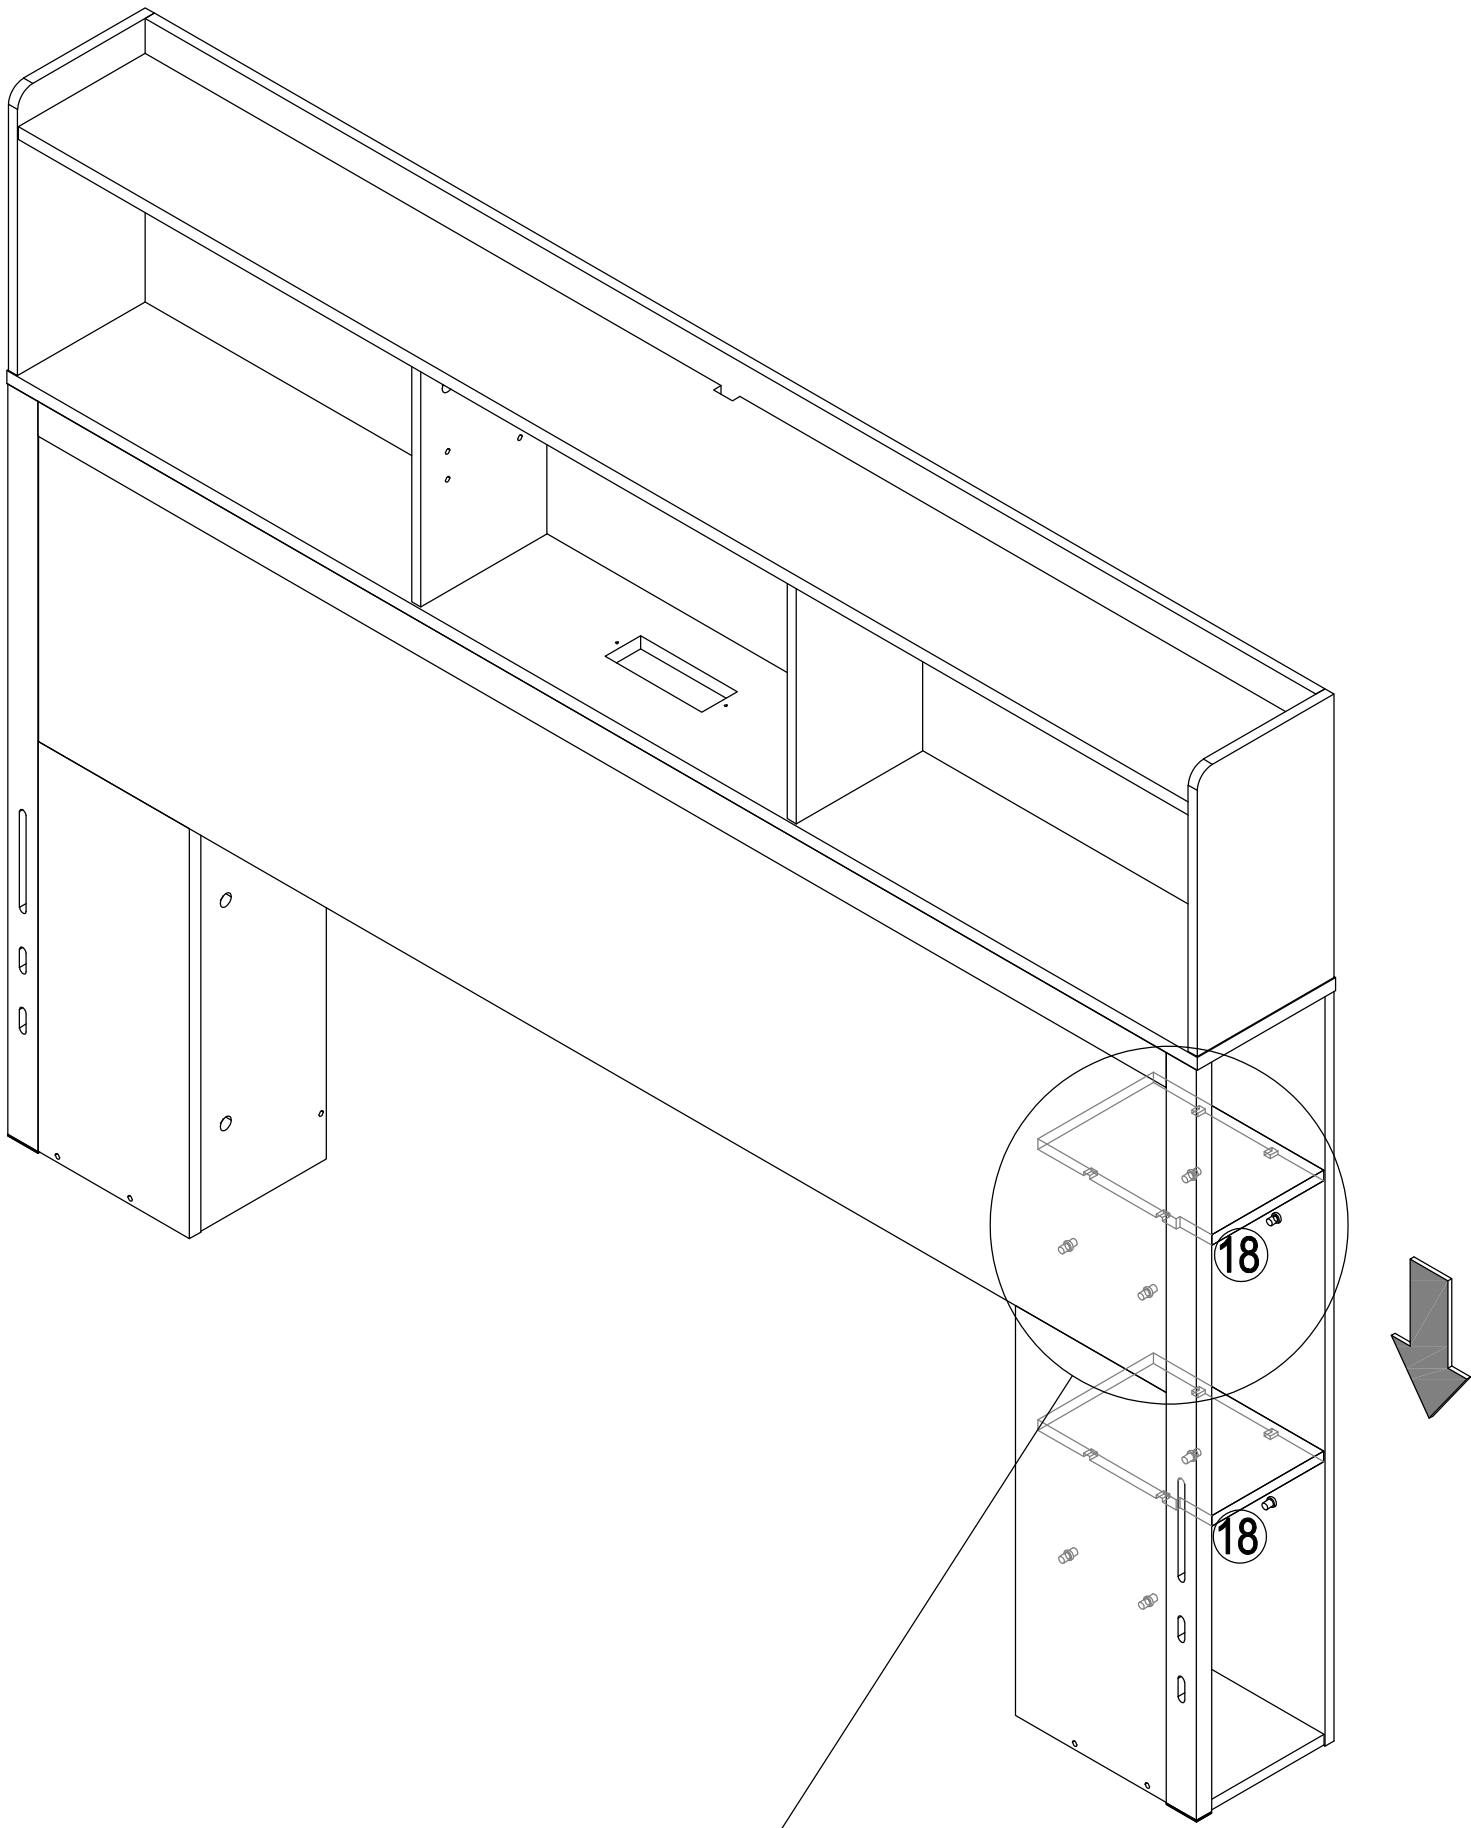



27

B Ø3.5x14




2 PCS

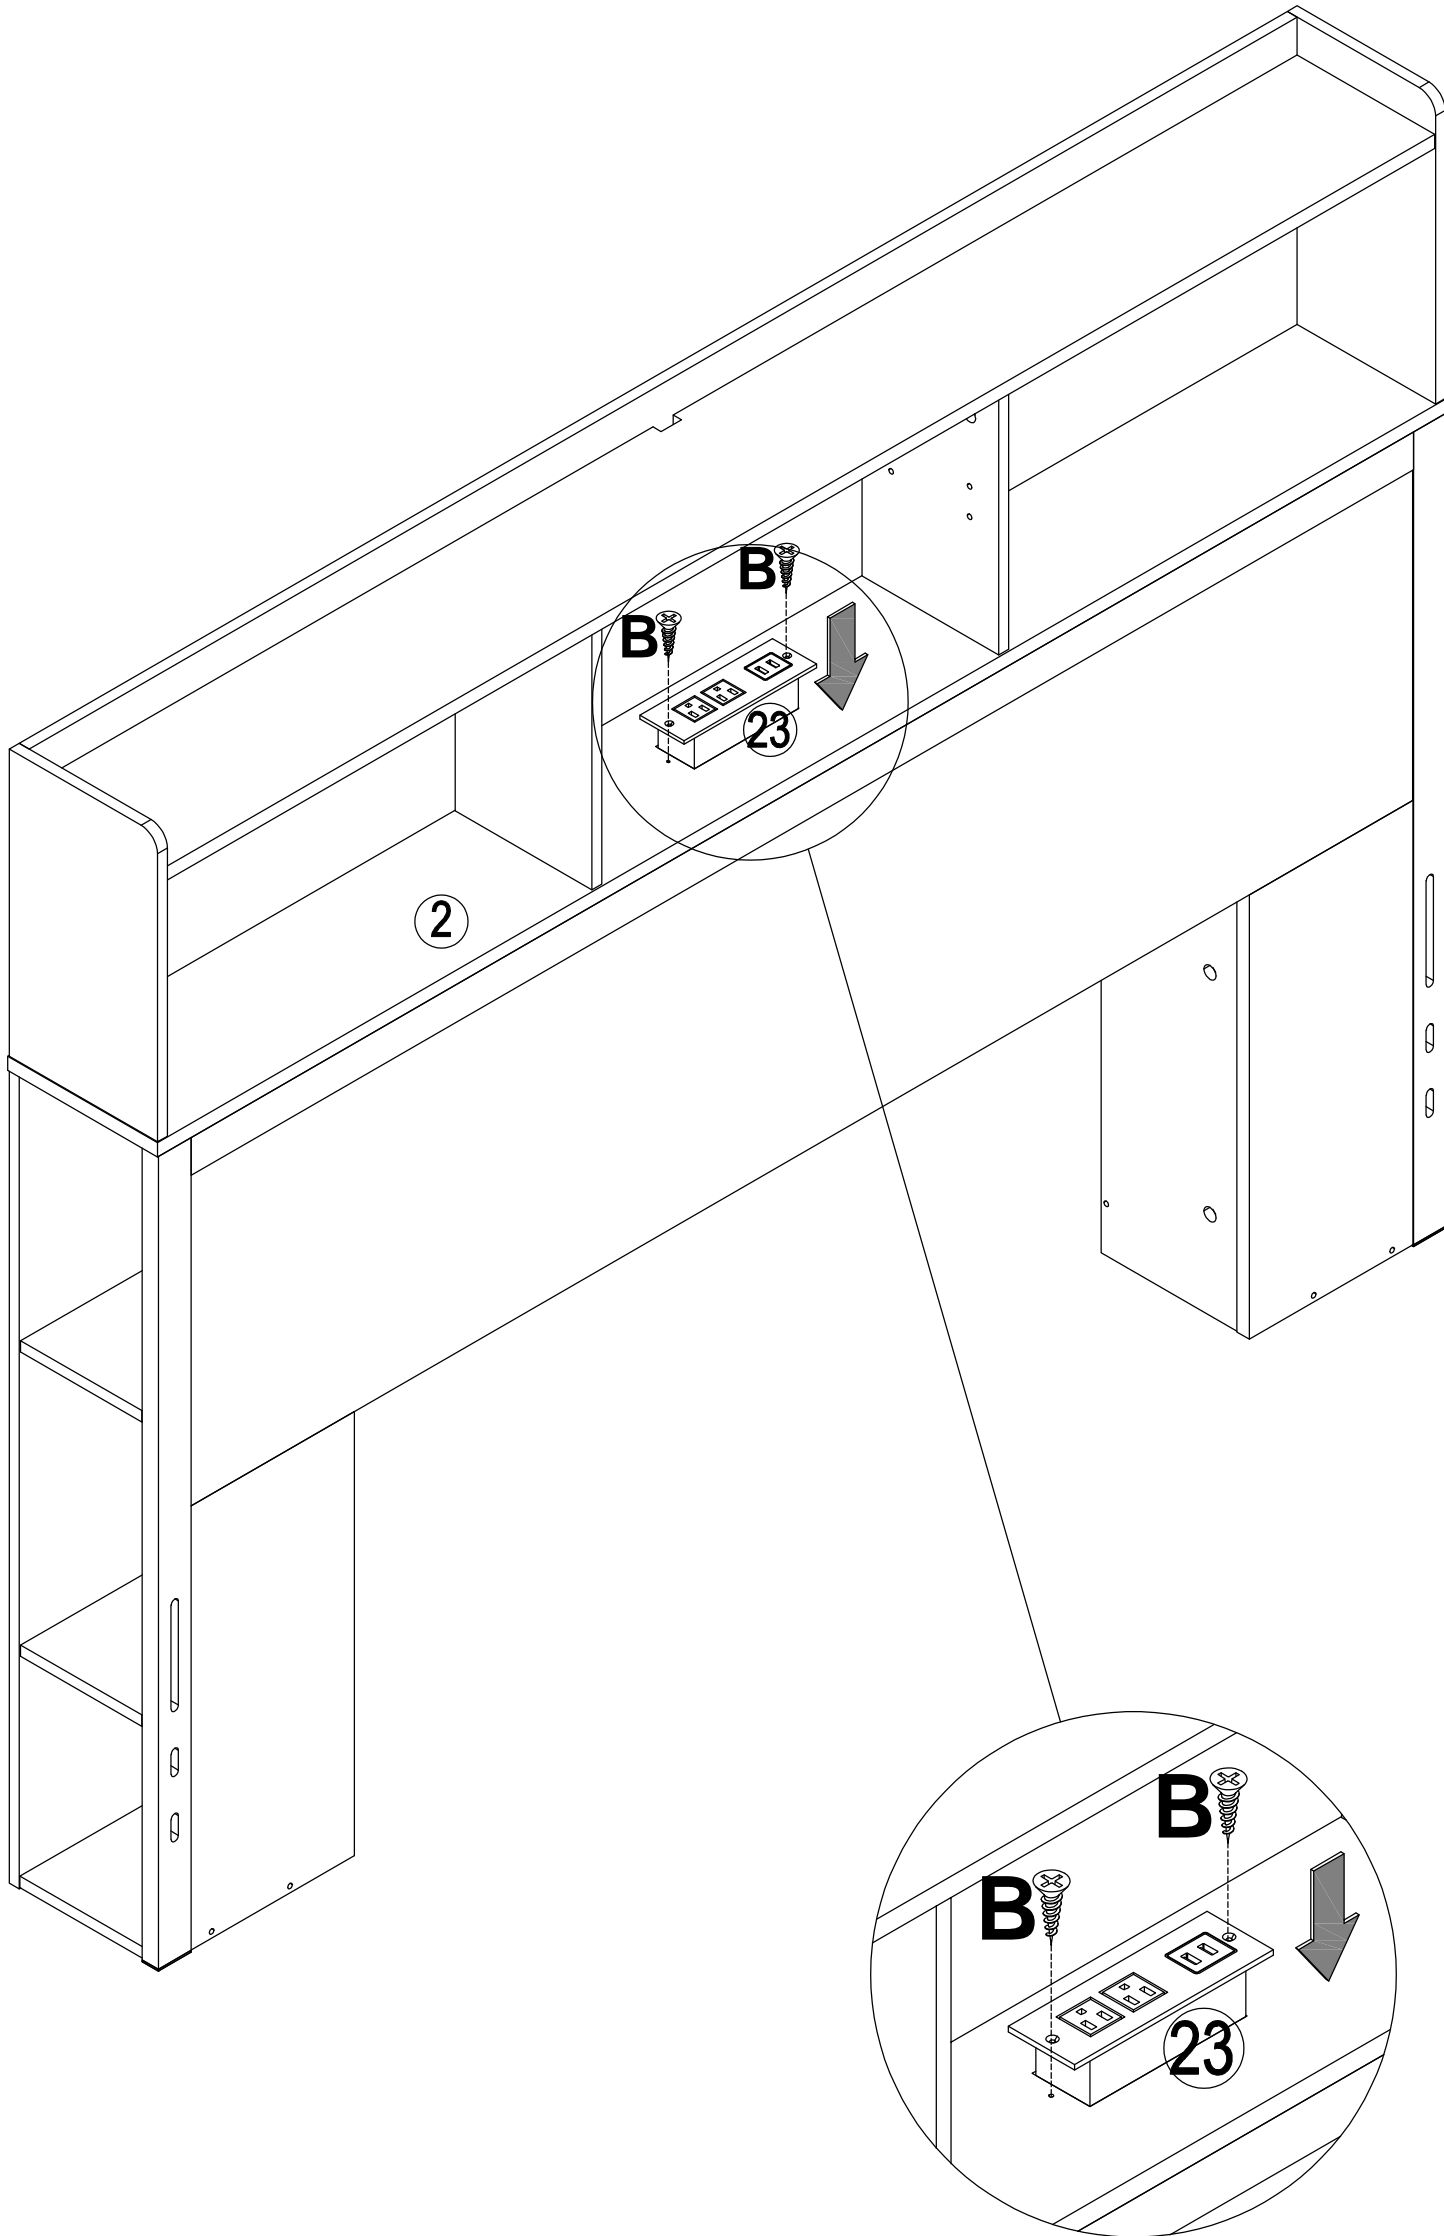

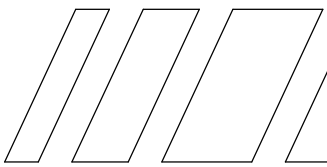



28

H Ø5





4 PCS

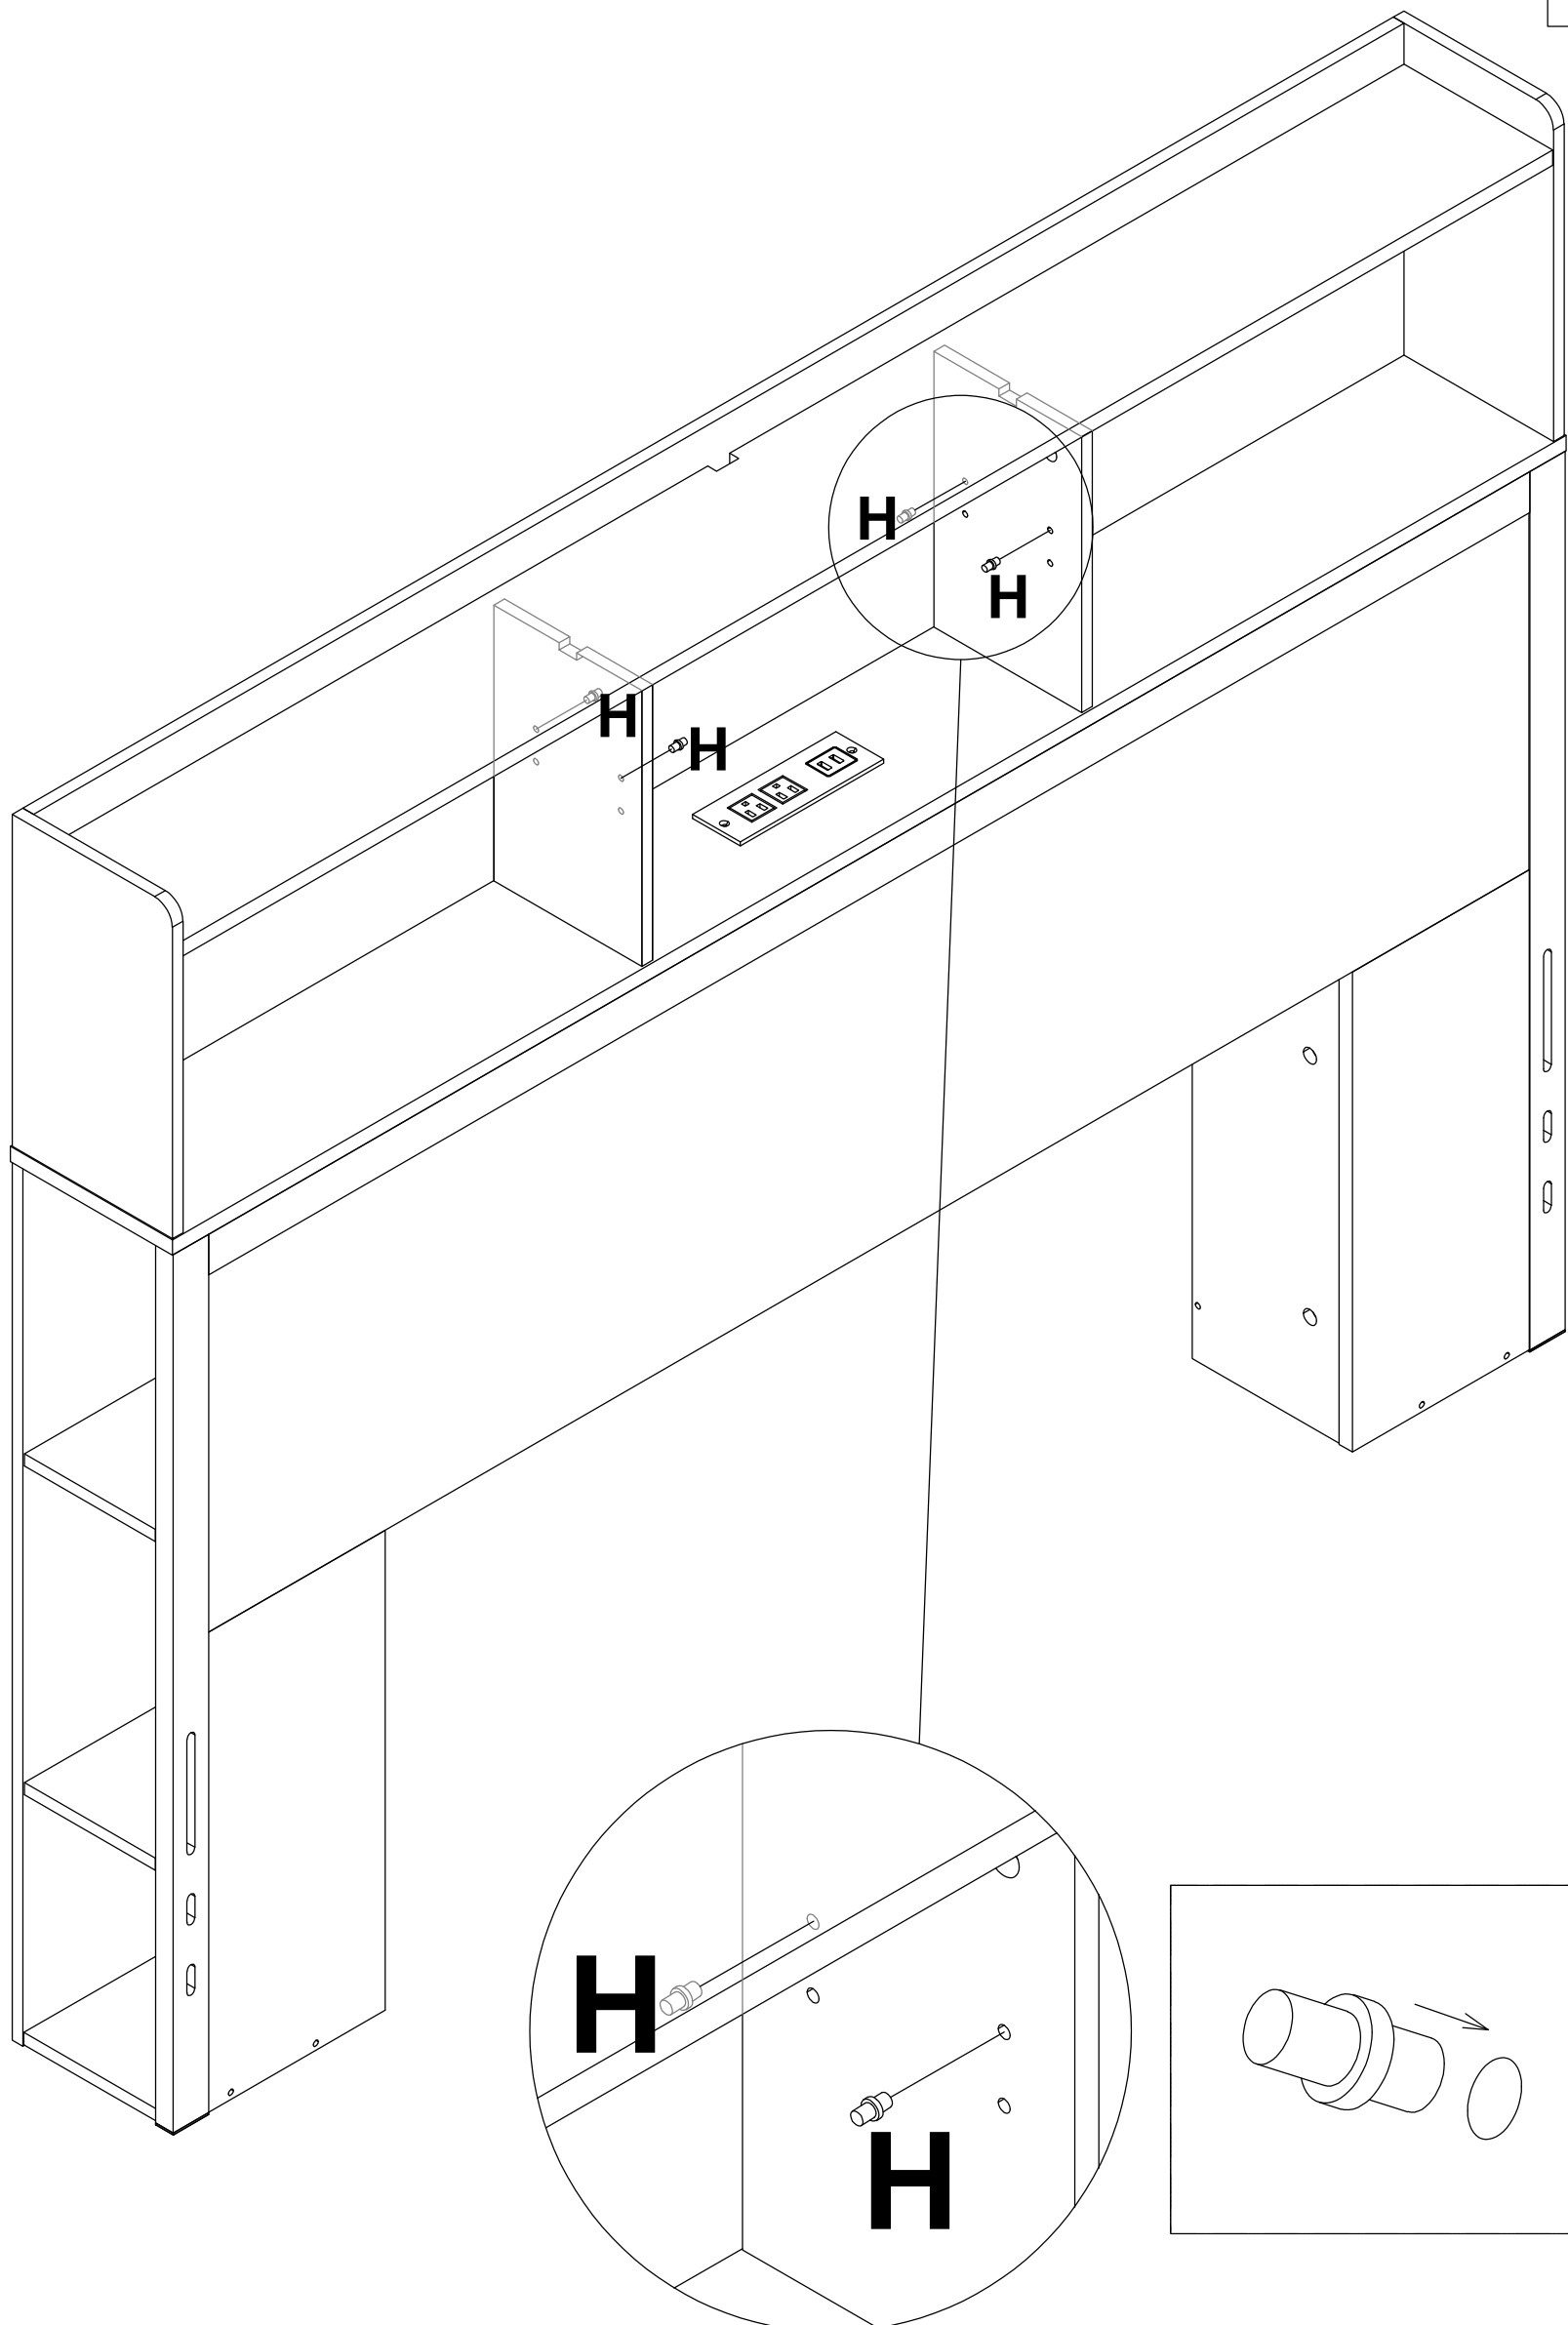

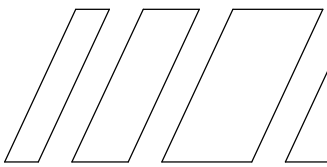

29

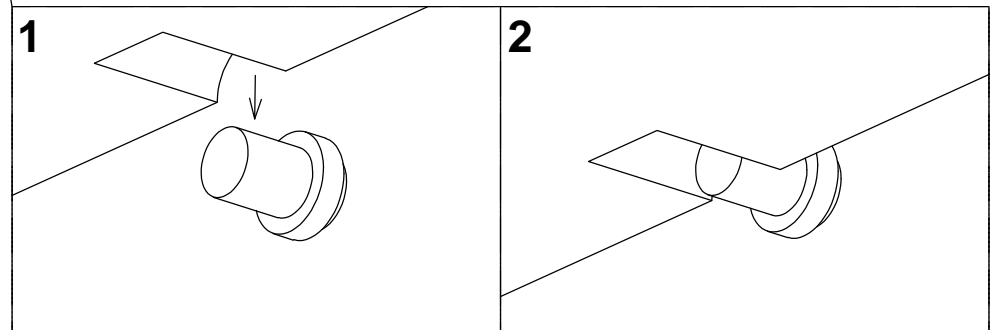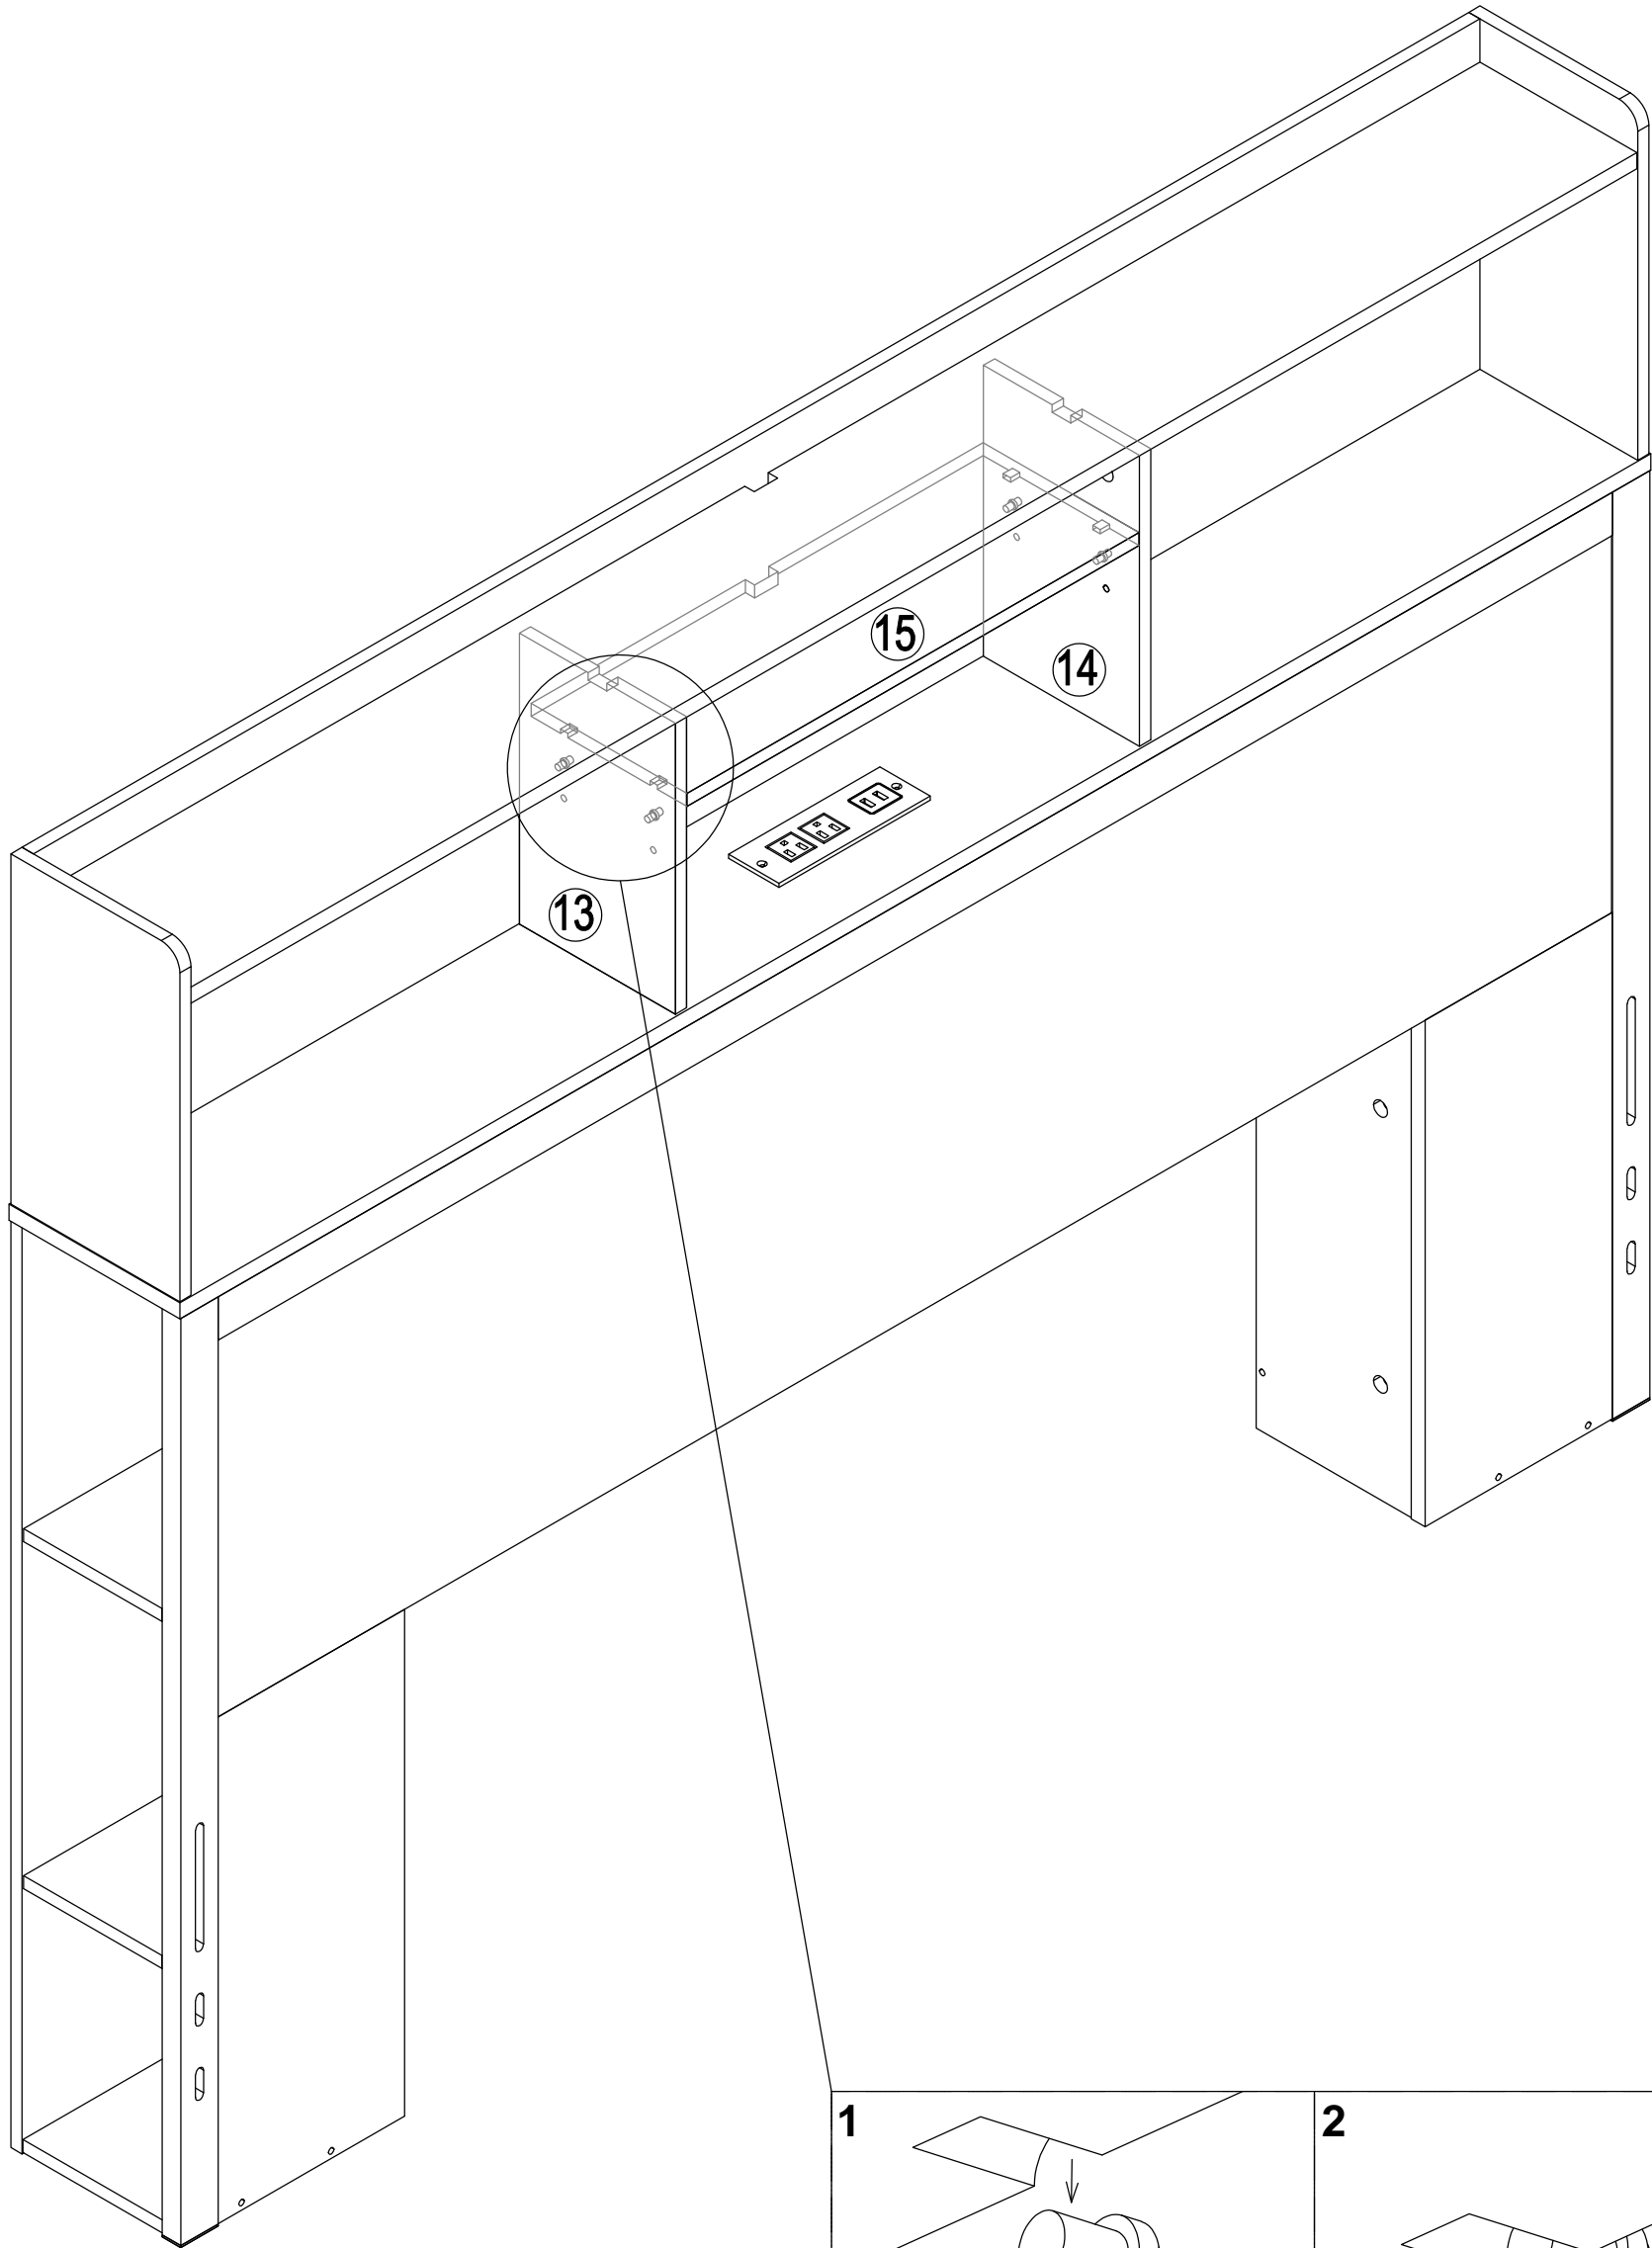

30

