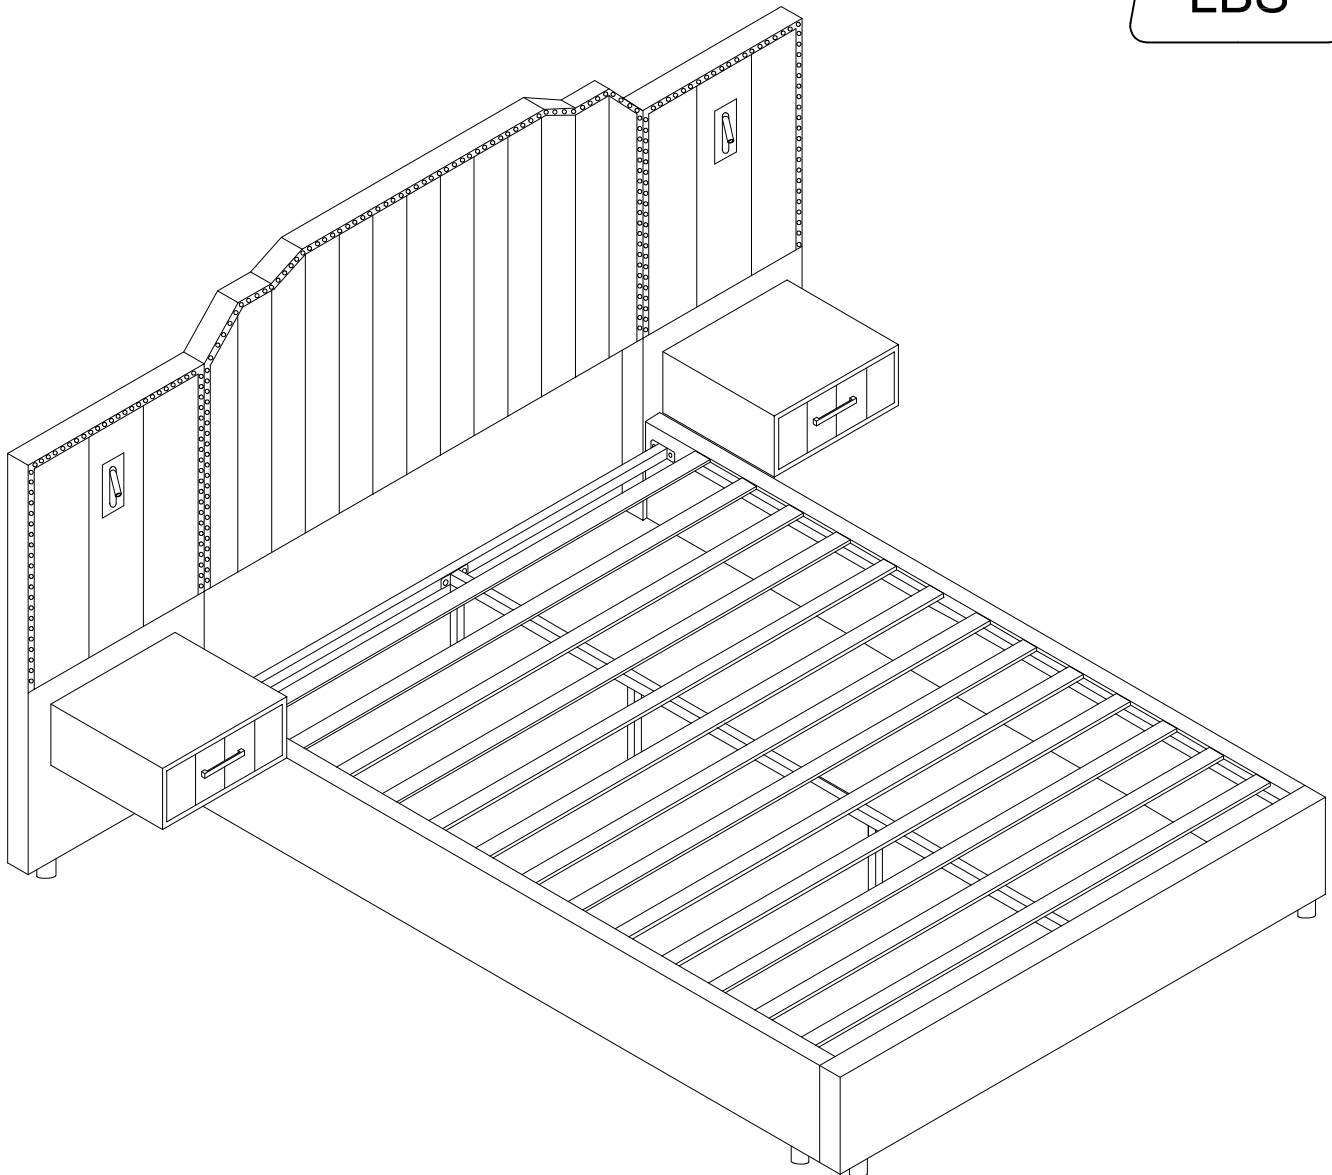
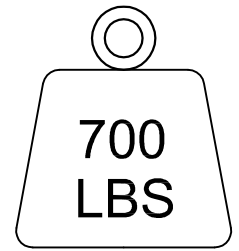


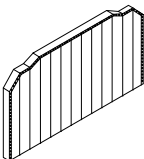
ASSEMBLY INSTRUCTIONS




2629Q

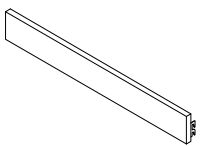
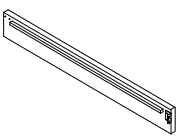











Install all screws according to the instructions, and then tighten them completely.

PACKING DETAILS:TOTAL 3 BOXES

1-3	
	1-(1pc)

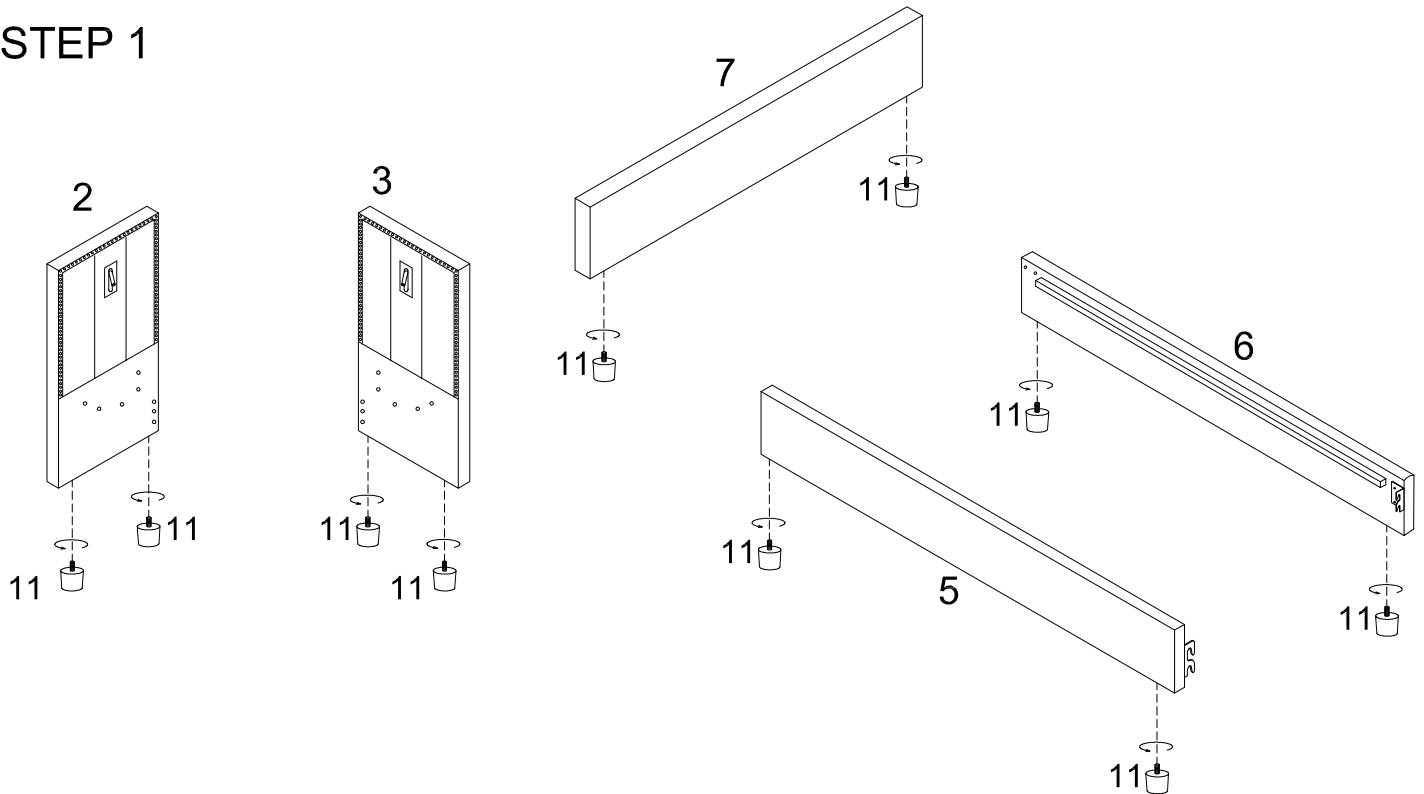
2-3	
	2-(1pc)
	3-(1pc)
	4-(2pcs)

3-3	
	5-(1pc)
	6-(1pc)
	7-(1pc)
	8-(1pc)
	9-(1pc)
	12-(1set)

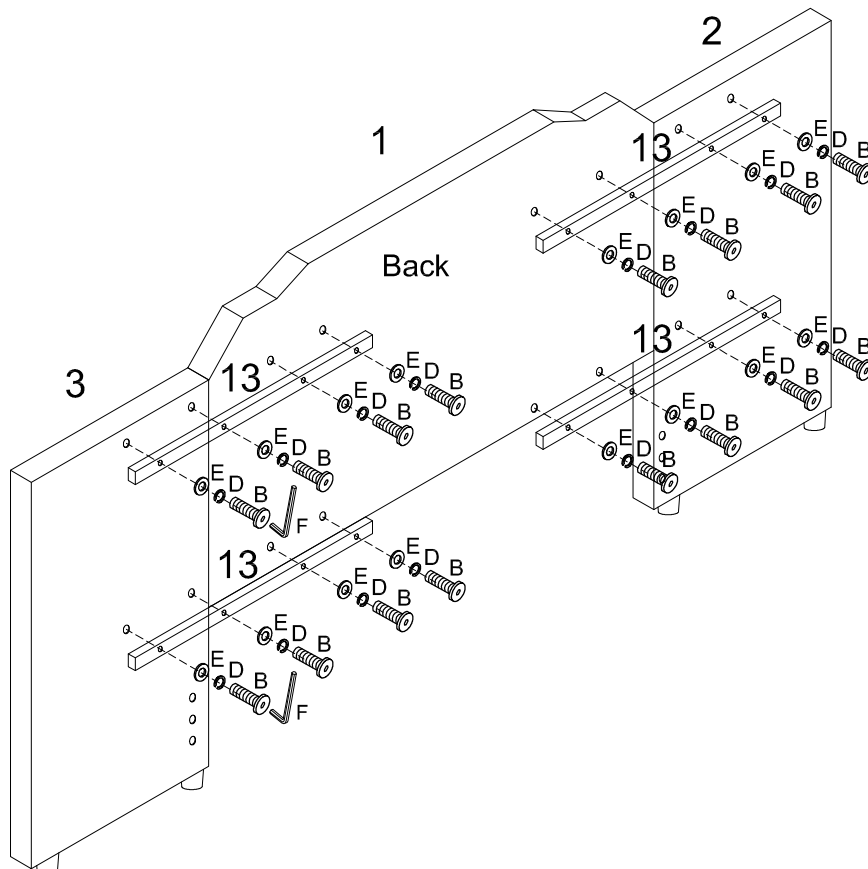
3-3	
	10-(3pcs)
	11-(10pcs)
	13-(4pcs)
	14-(1pc)
(Hardware Packet)	
 Bolt M8*75	A-(12pcs) +1
 Bolt M8*38	B-(16pcs) +1
 Bolt M8*25	C-(18pcs) +1
 M8	D-(46pcs) +2
 M8*16	E-(46pcs) +2
 M8	F-(1pc)
 M4*25	G-(6pcs) +1
 Ø3.5X50MM Ø3.5X25MM Anti-fall hardware	H-(2Set)

ASSEMBLY INSTRUCTIONS

STEP 1

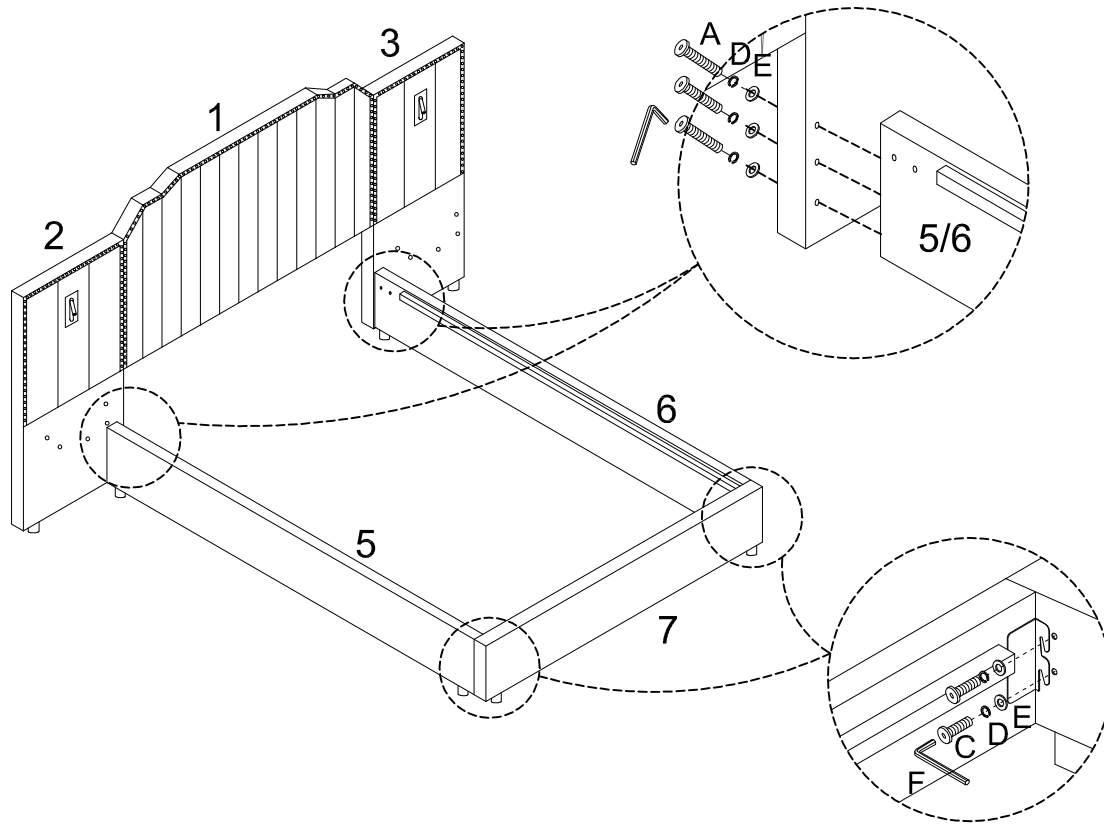


STEP 2

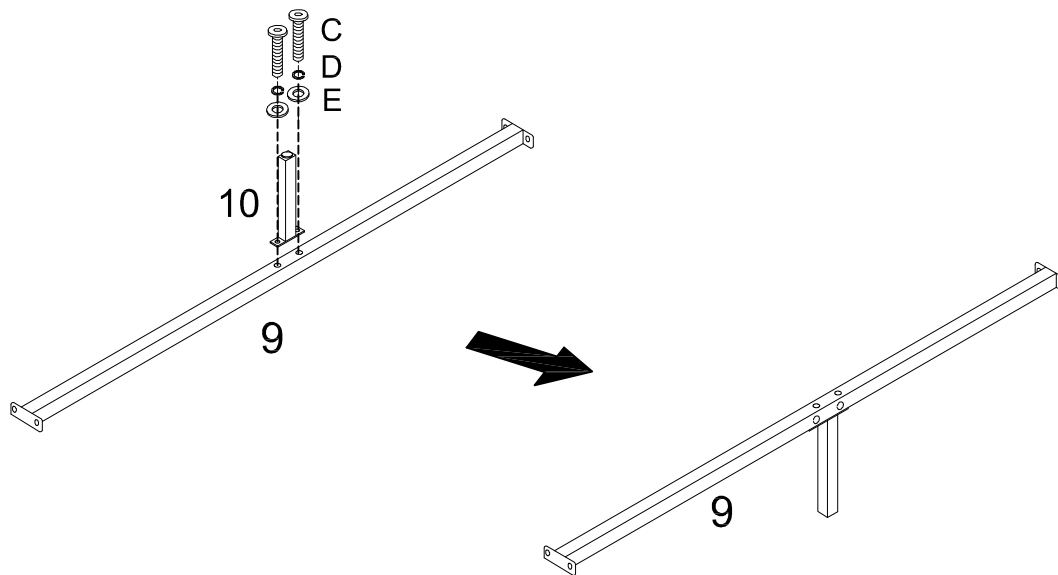


ASSEMBLY INSTRUCTIONS

STEP 3

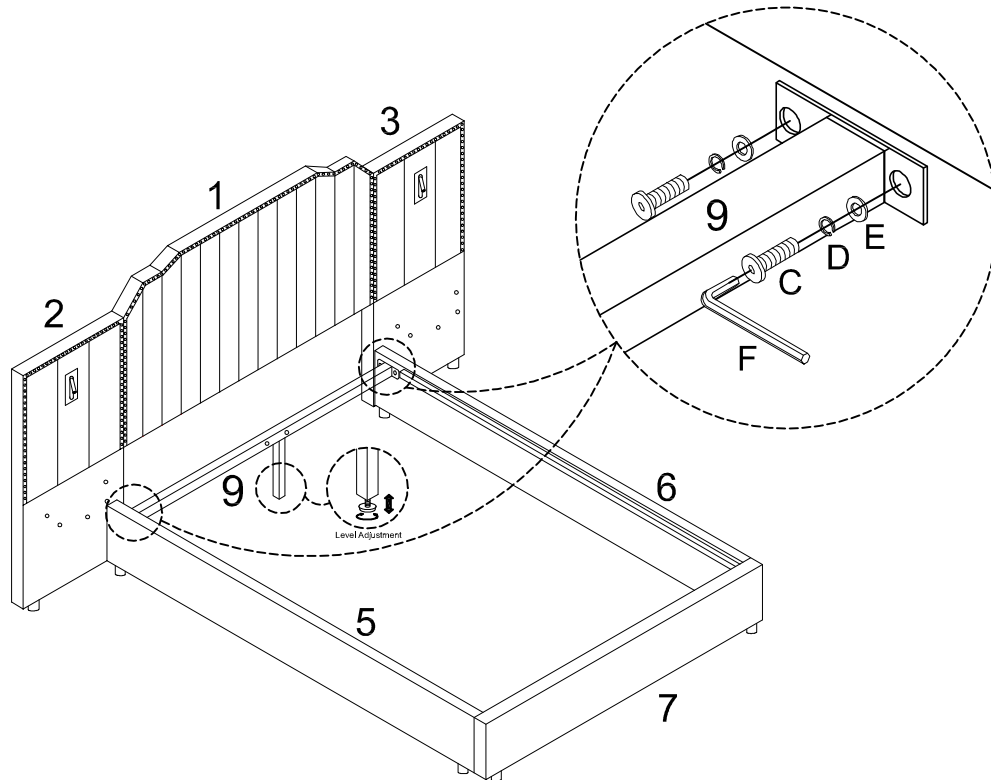


STEP 4

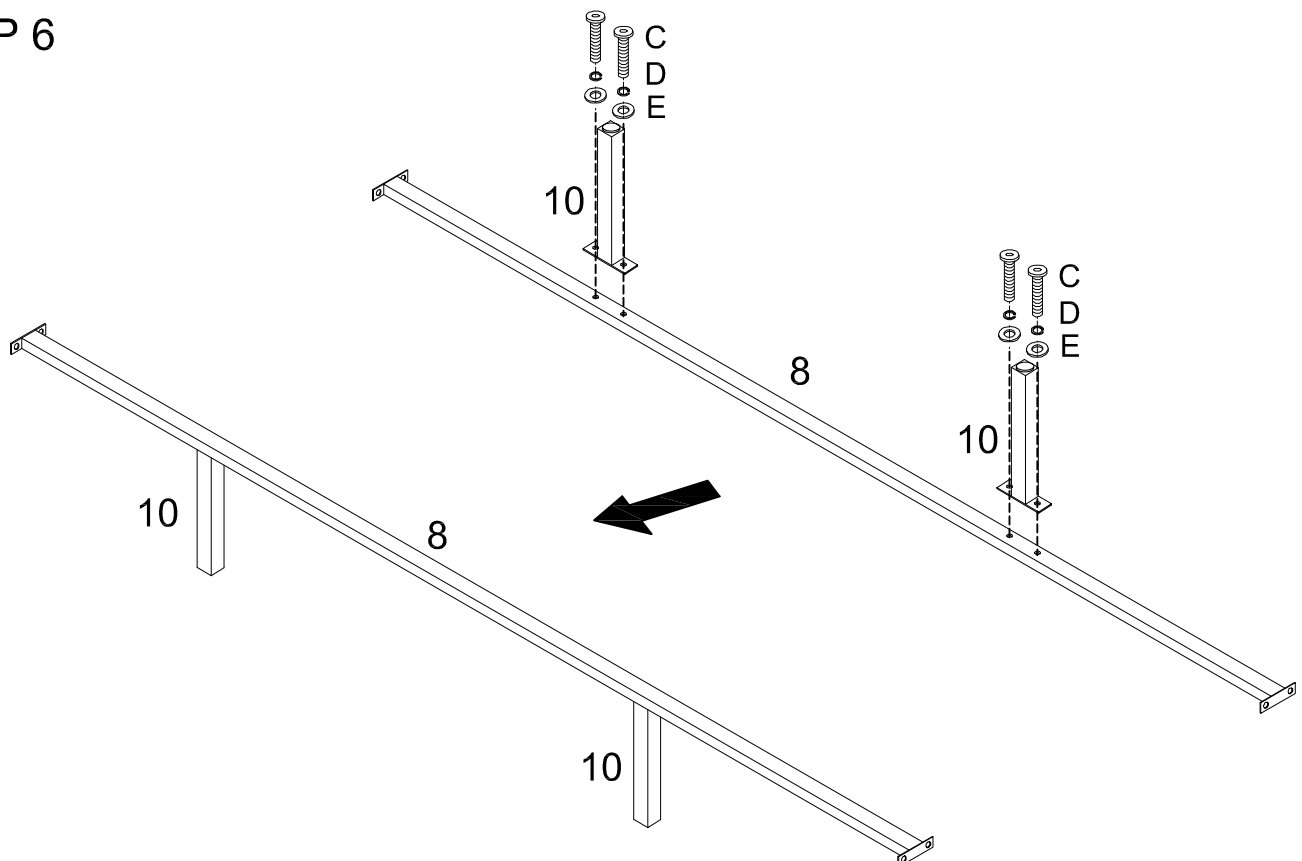


ASSEMBLY INSTRUCTIONS

STEP 5

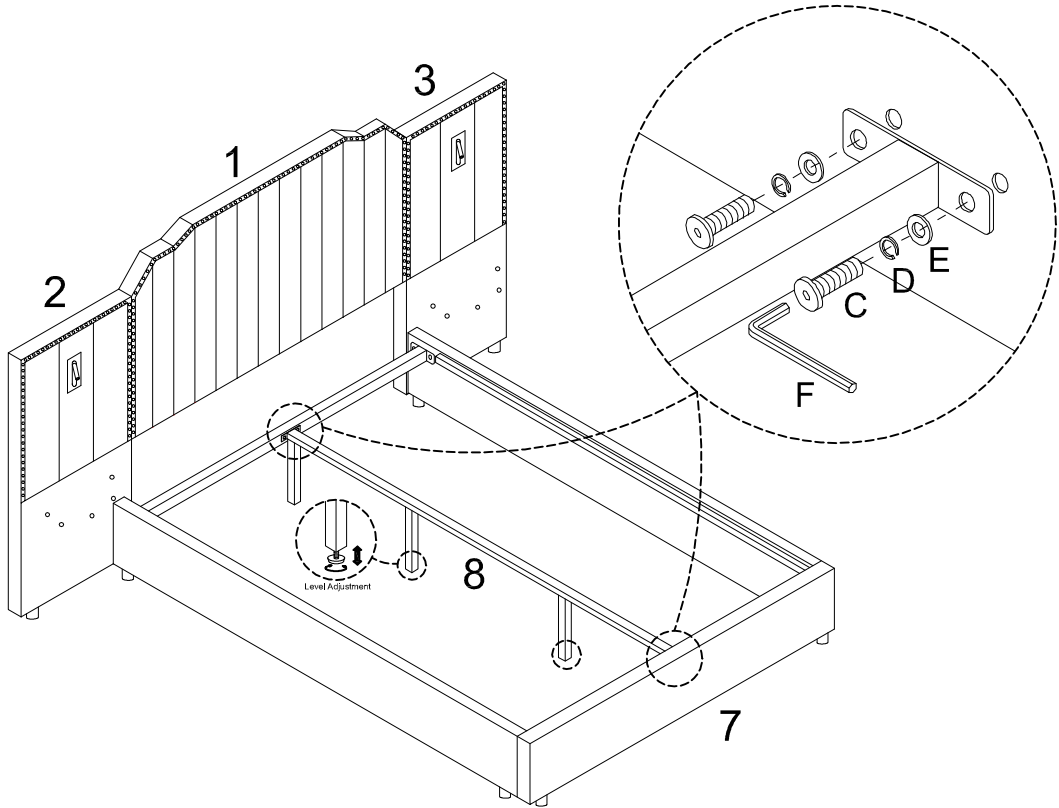


STEP 6

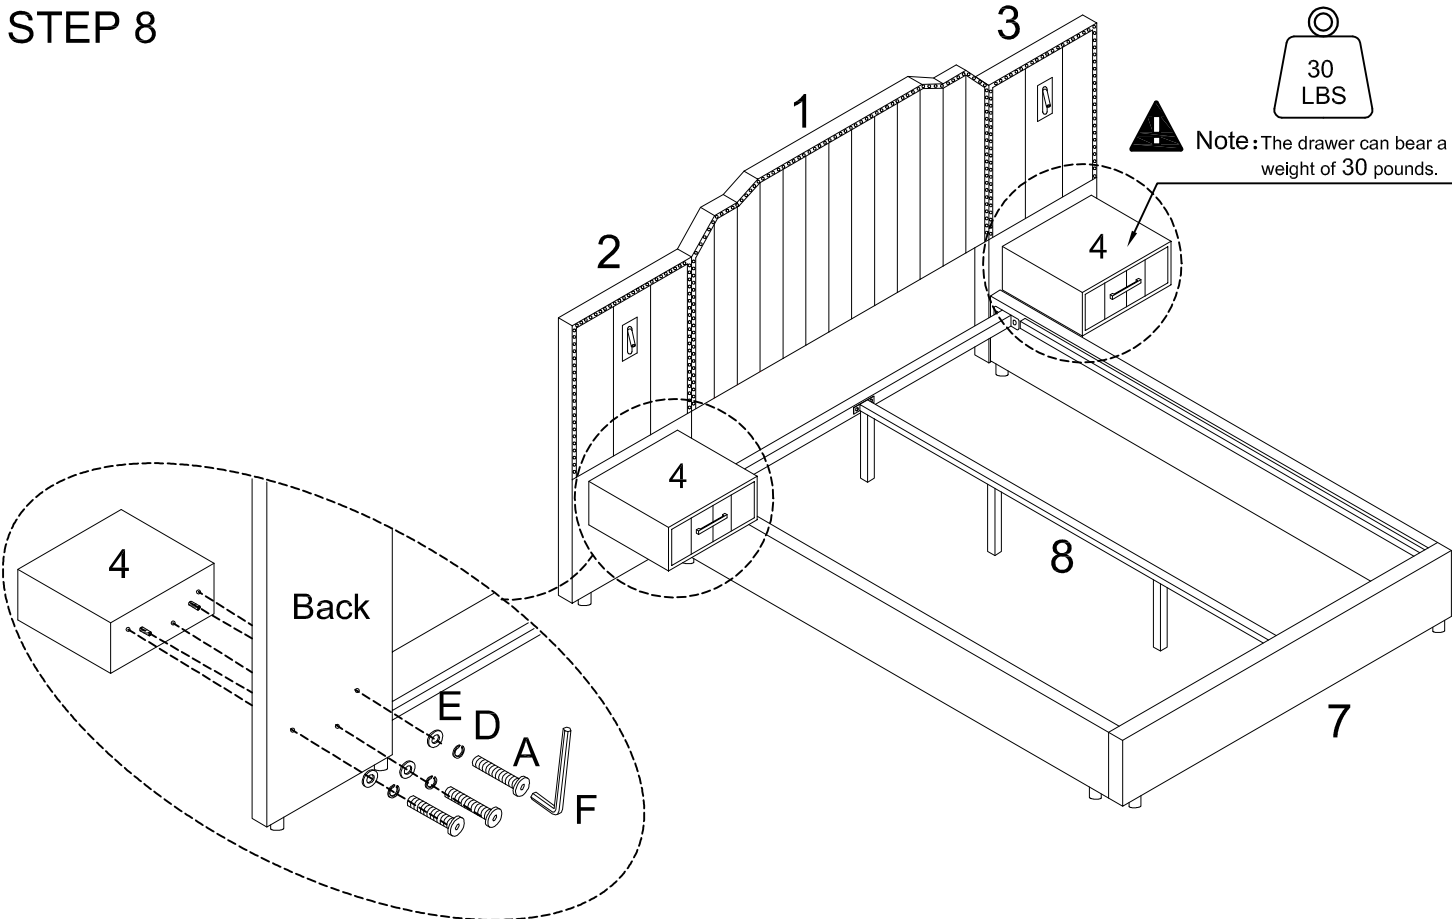


ASSEMBLY INSTRUCTIONS

STEP 7

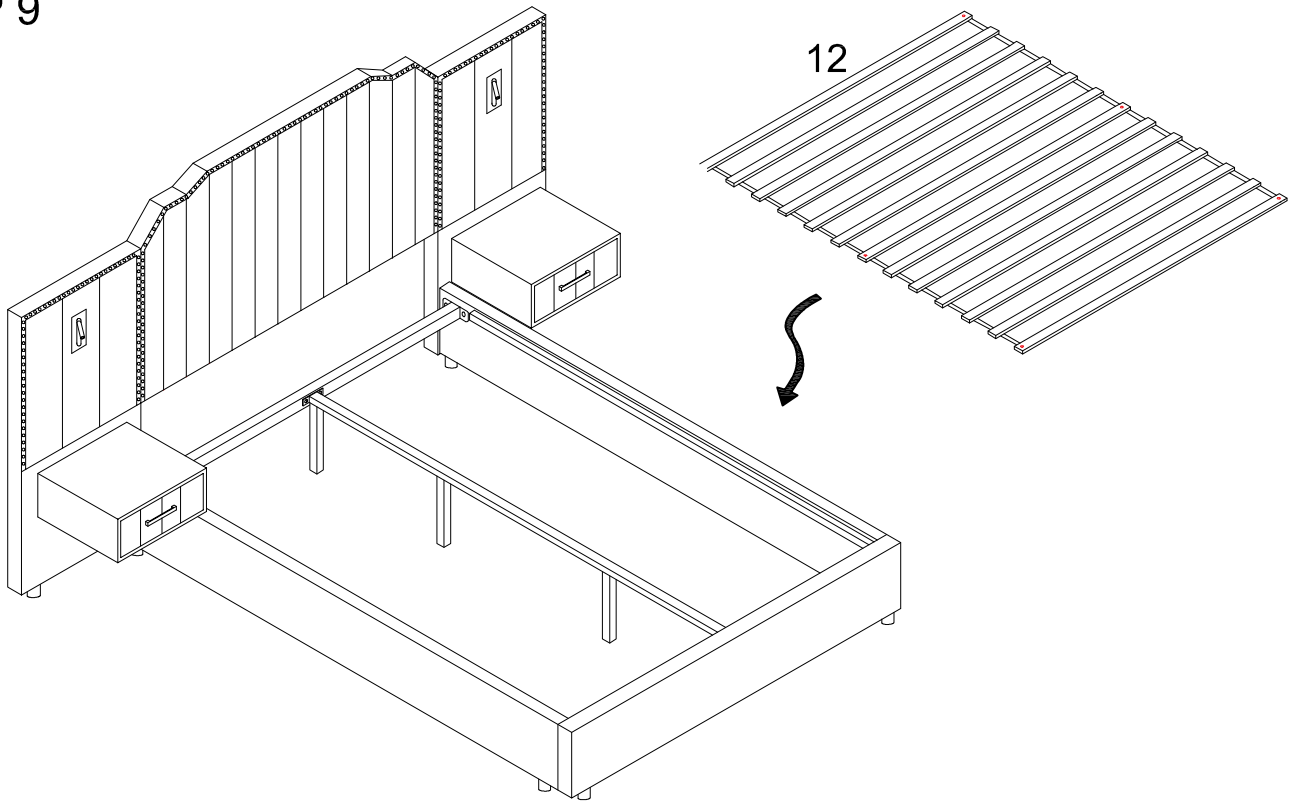


STEP 8

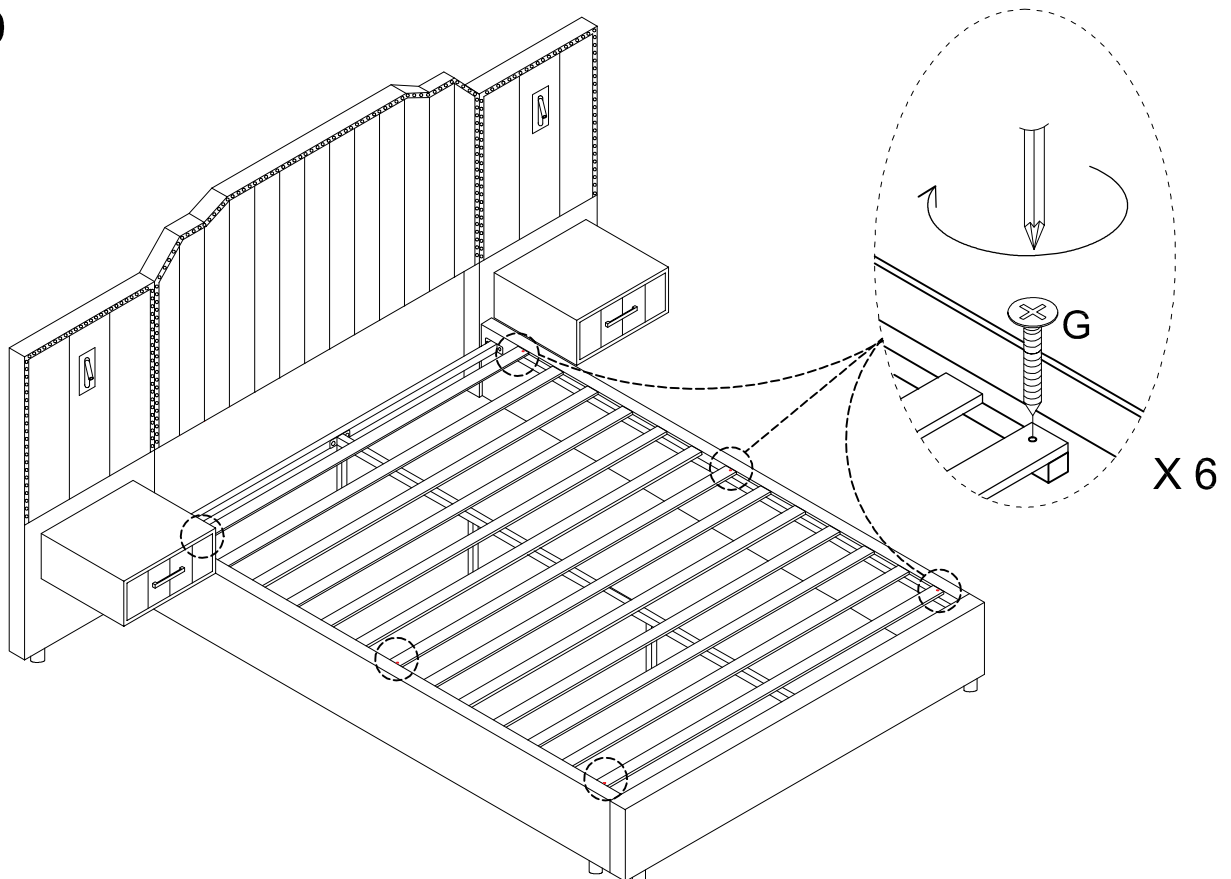


ASSEMBLY INSTRUCTIONS

STEP 9

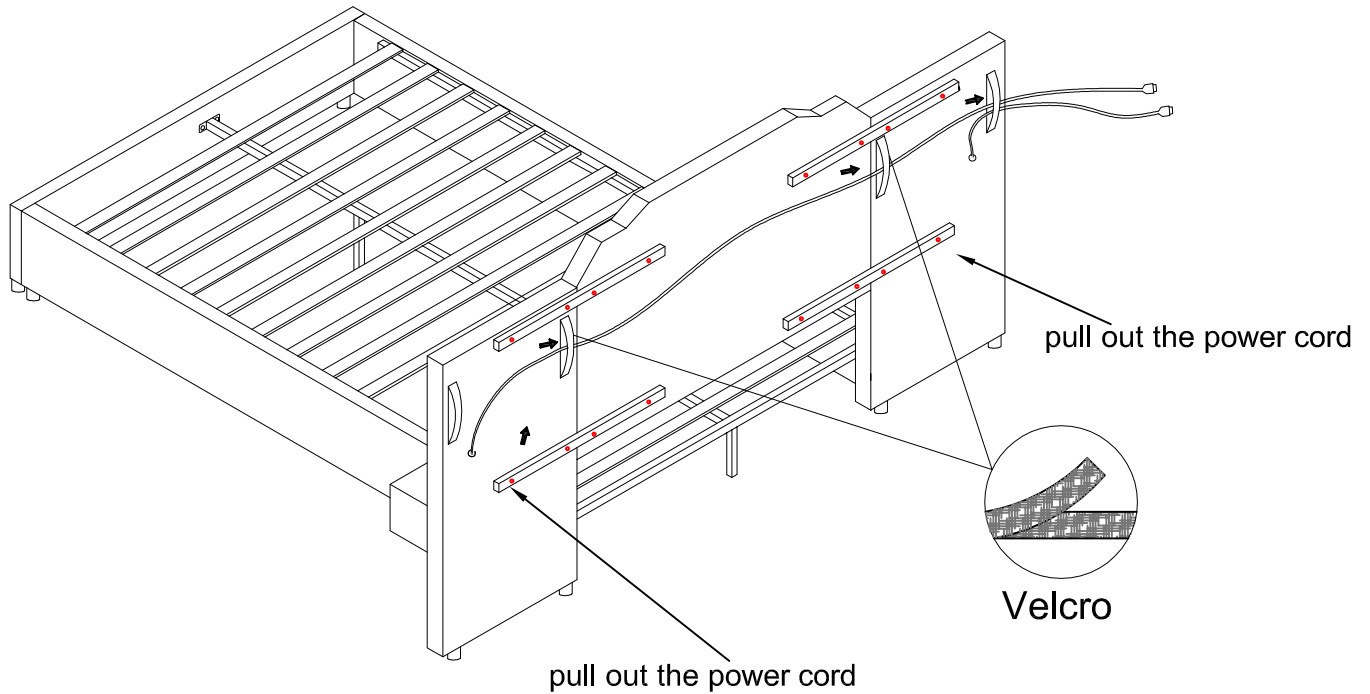


STEP 10



ASSEMBLY INSTRUCTIONS

STEP 11



STEP 12

Anti-fall hardware

