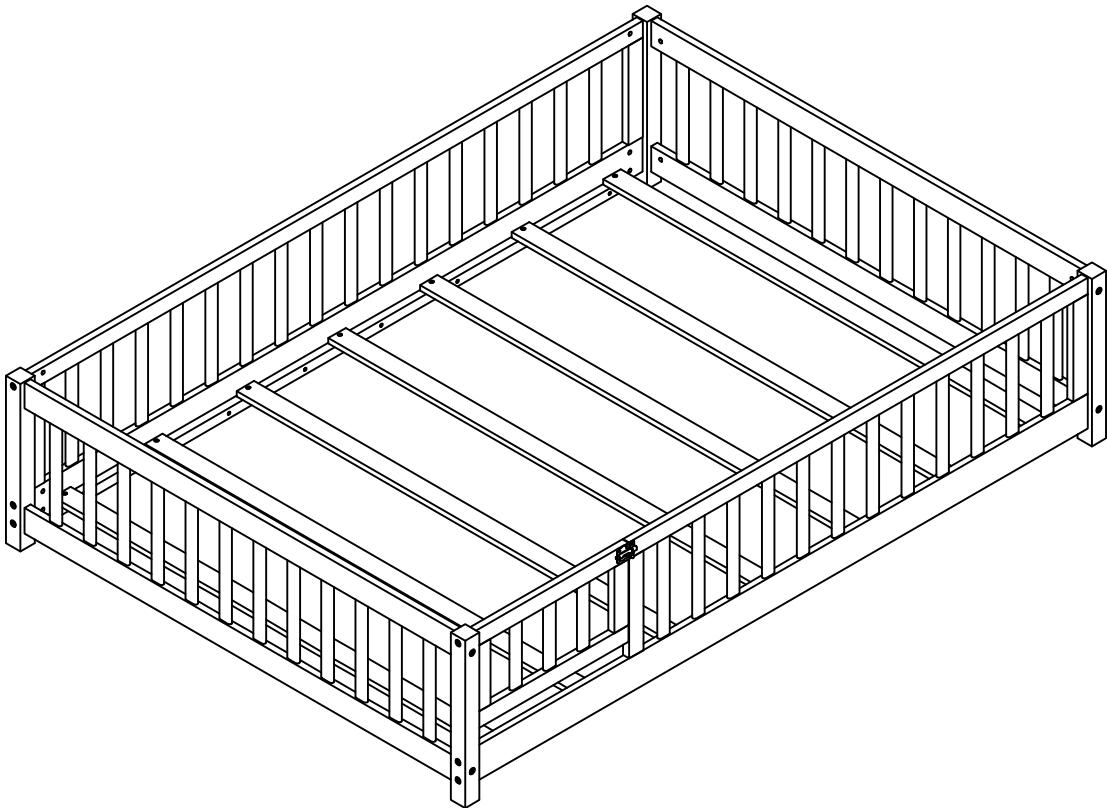



ASSEMBLY INSTRUCTIONS

FULL FLOOR BED WITH RAILINGS










DN33742




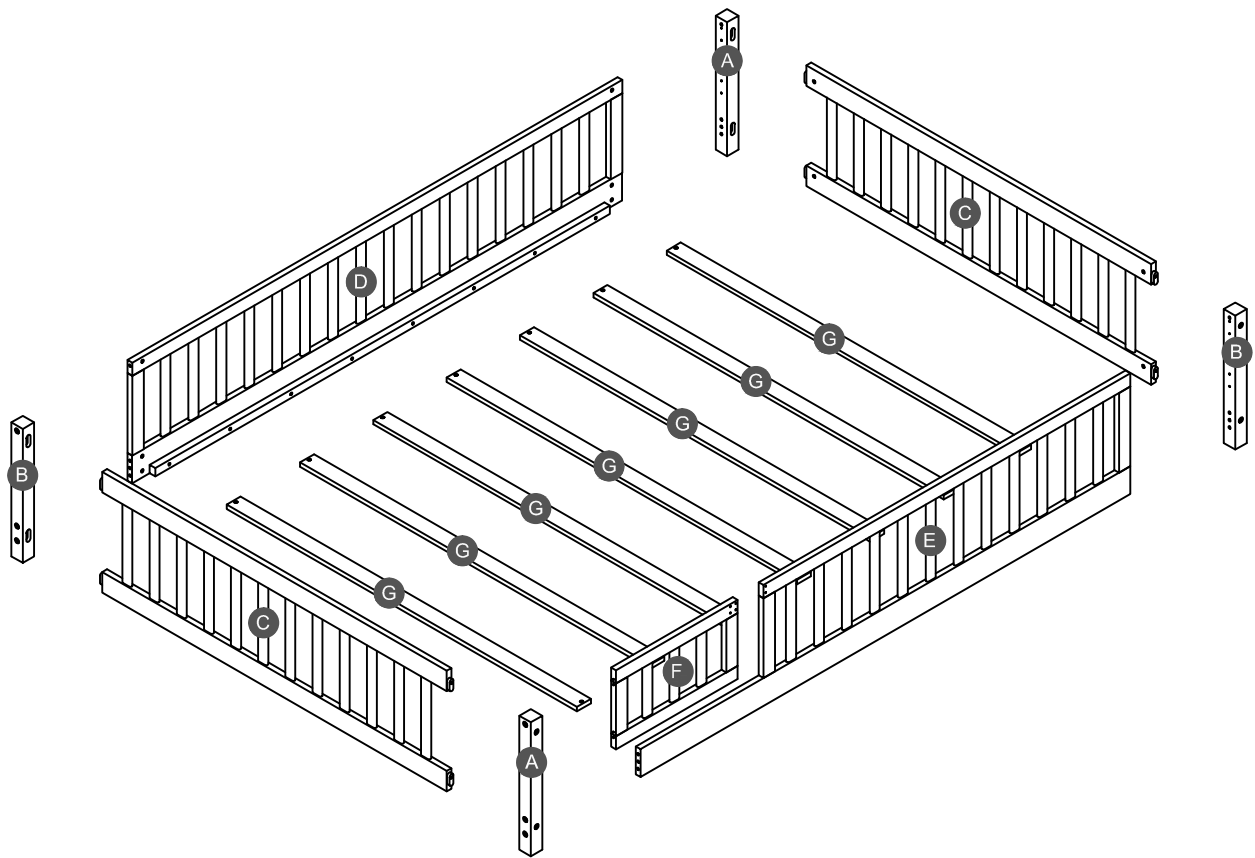
Detail View




Part List

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Right Front/Left Back) - 1pc	C  Frame HB & FB - 2pcs
D  Slat - 7pcs	E 	F 
G  Slat - 7pcs		

Hardware List


1  Ø8*30mm Wood dowel (4pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (11pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (8pcs)
4  1/4"*15 (9.5mm) Horizontal-Hole bolts(19pcs)	5  Ø4*30mm Wood screws (14pcs)	6  55*24*6mm(135°) Hinges (2pcs)
7  60*40*10mm Lock (1pc)	8  Ø3.5*15mm Wood screws (14pcs)	9  (1/4")4.5*58mm Allen key (1pc)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

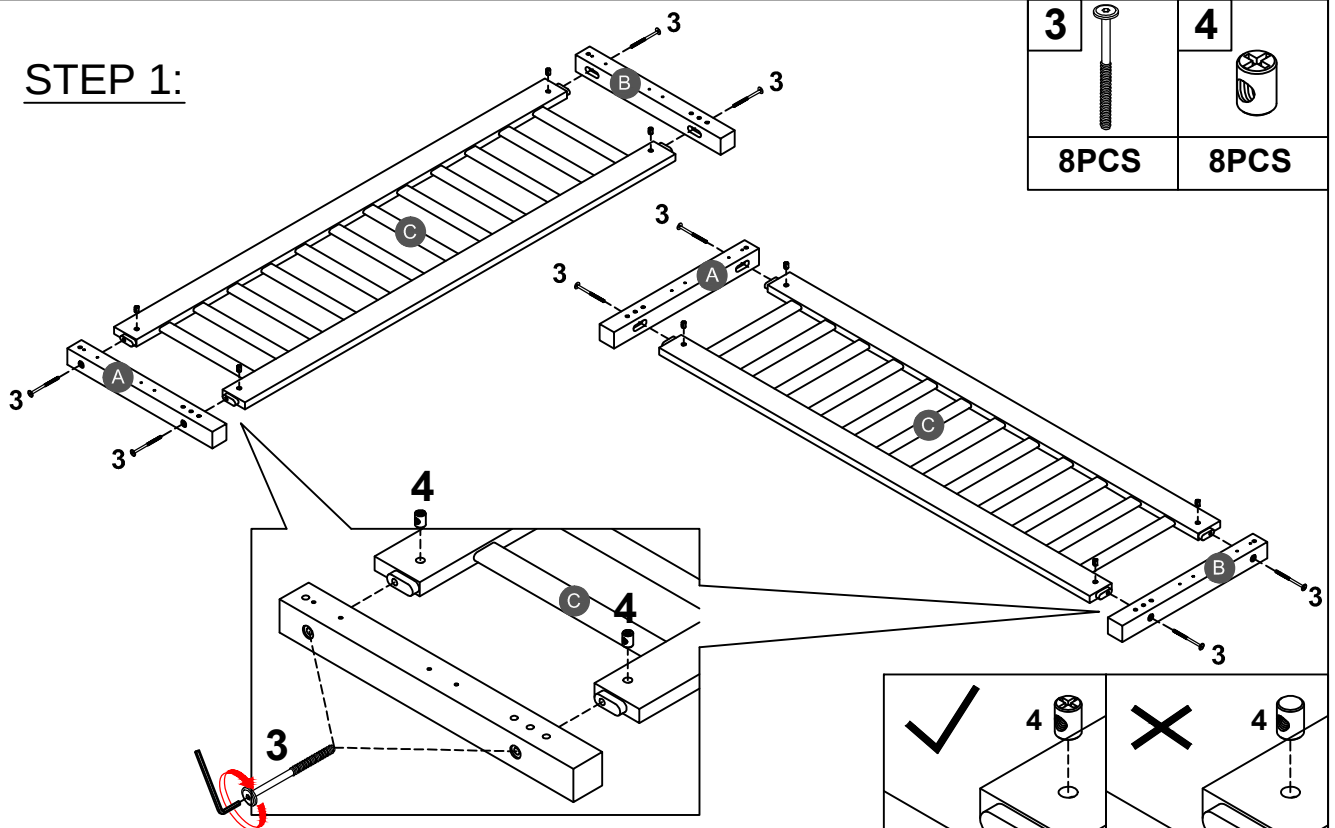STEP 1:





Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

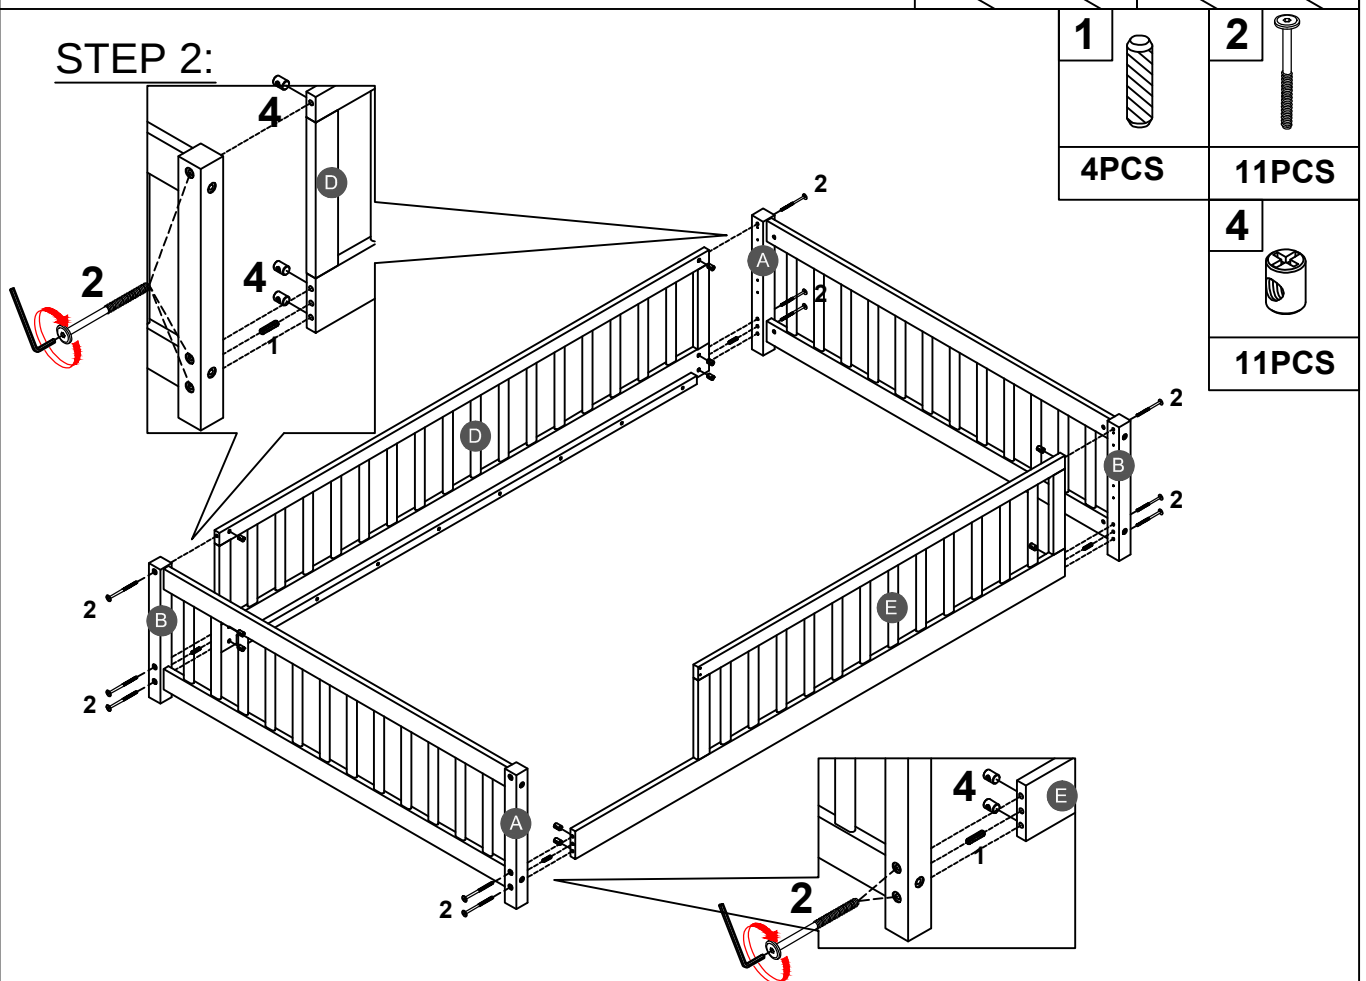STEP 2:



STEP 3:


6	8
	
2PCS	4PCS

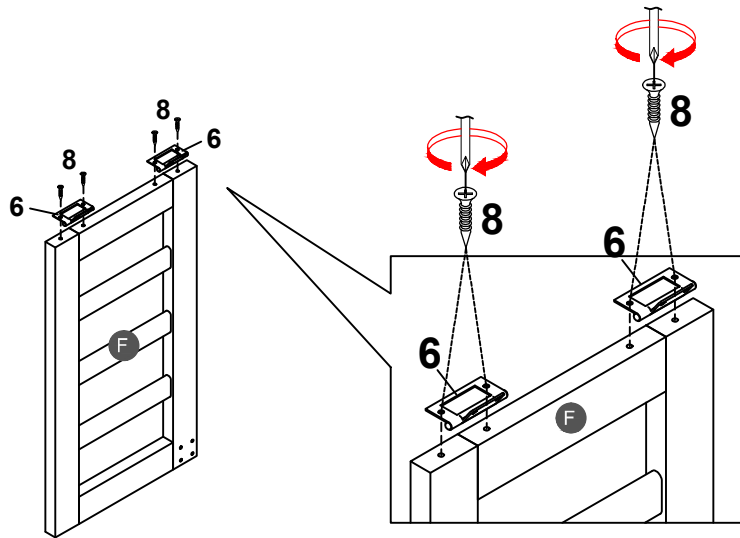


STEP 4:


8

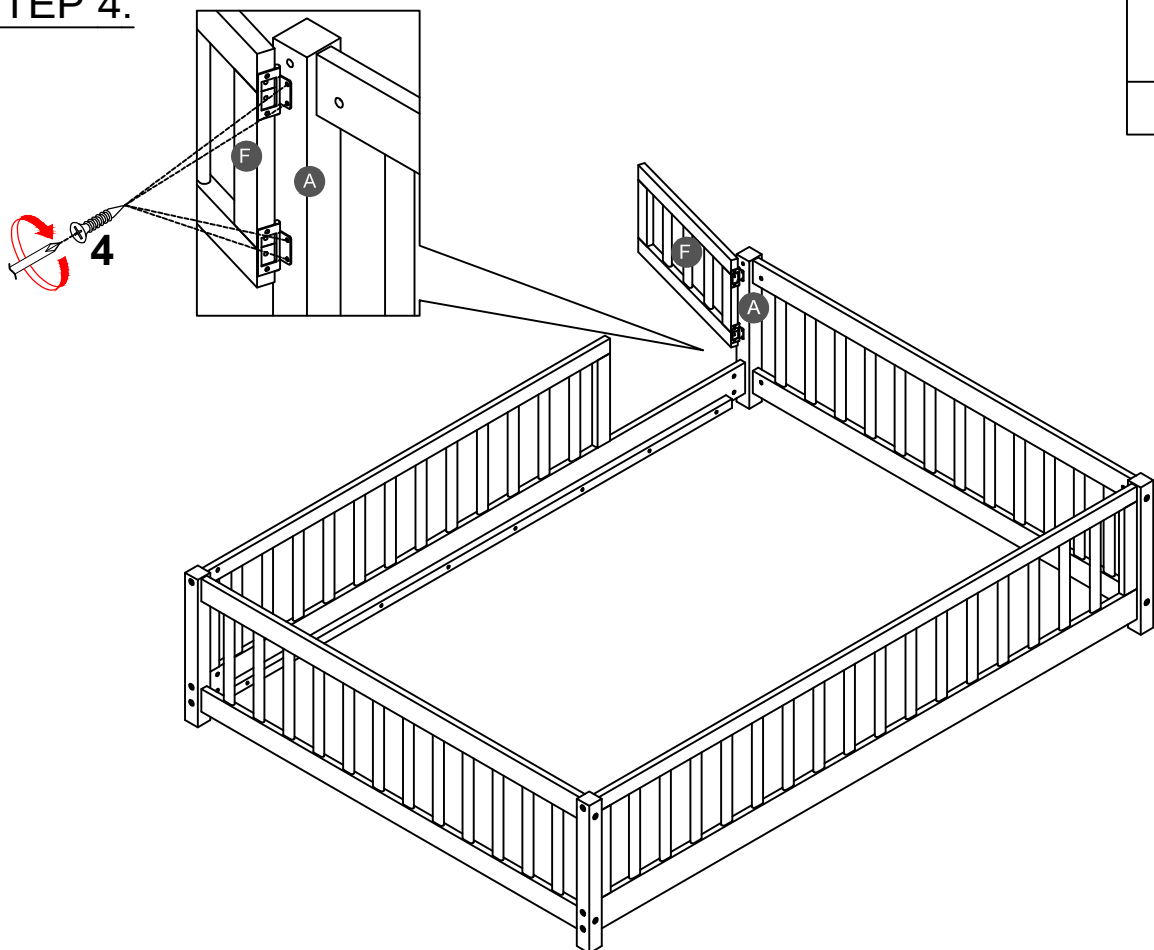4PCS





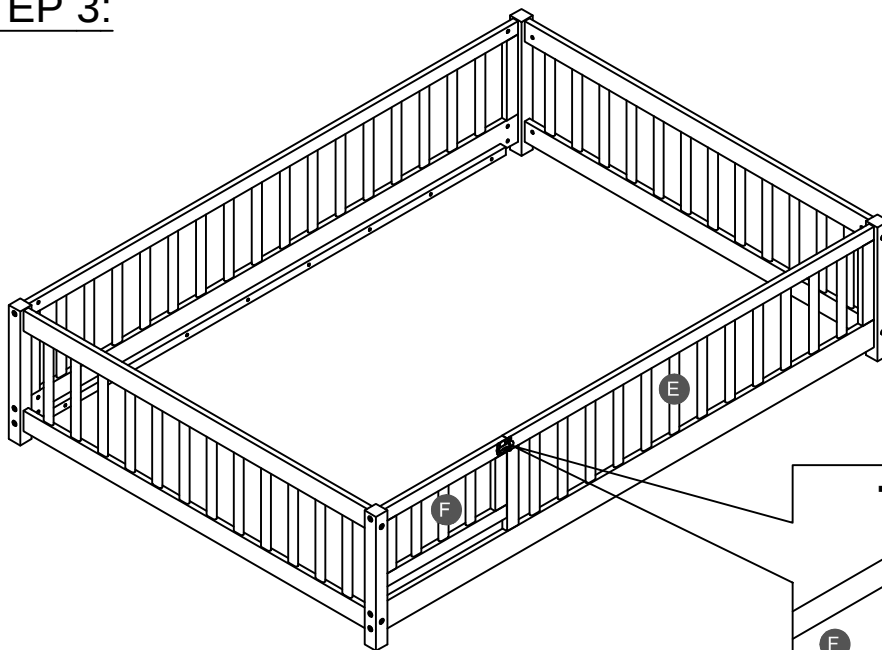STEP 3:




7	8
	
1PC	6PCS

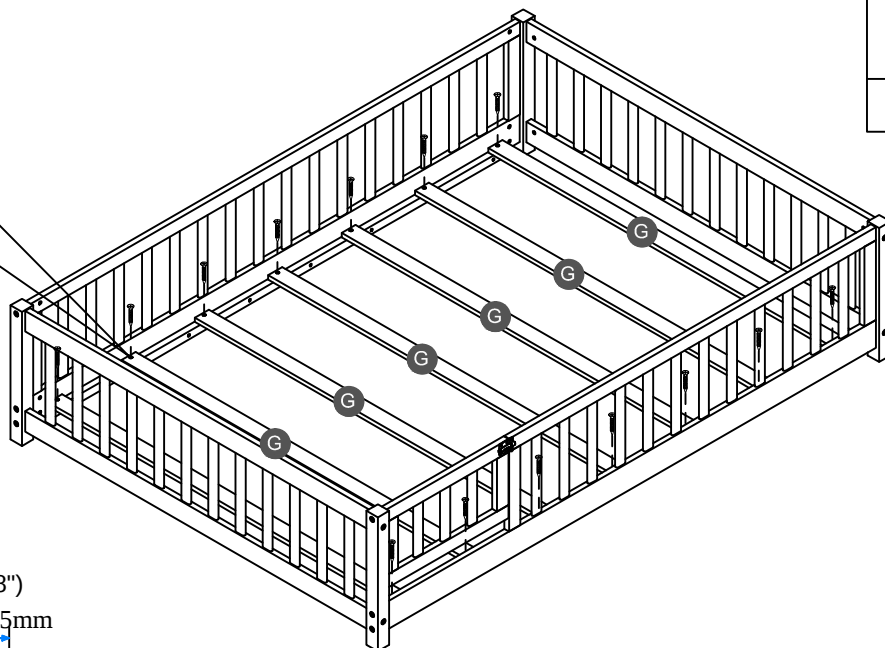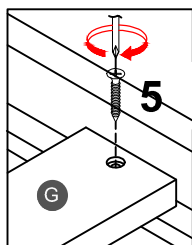STEP 4:



5

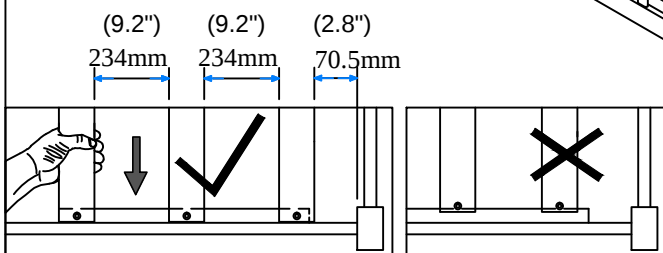14PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.