



Minimalist Bamboo Wood Triple Bowl Feeder Installation Instructions

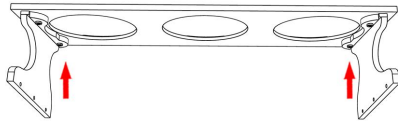


Step 1

Take the top panel, left leg, and right leg. As shown, align the top panel with the left and right legs. (Note: the right leg corresponds to the side with the groove on the panel.) Use 4 M4x16 flat head screws to secure.

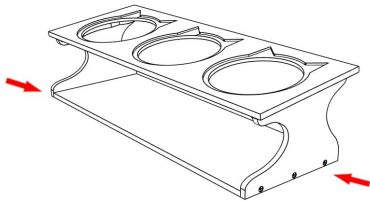









Step 2

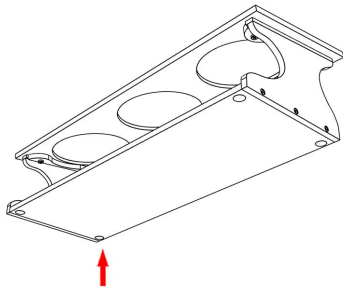Take the bottom panel and align it with the left and right legs as shown. Use 6 M4x25 round head screws to secure.



Step 3

Stick the non-slip pads to the four corners of the underside of the bottom panel as shown.

	Top Panel × 1 PC
	Left Leg × 1 PC
	Right Leg × 1 PC
	Bottom Panel × 1 PC
	Ceramic Bowls × 3 PCS
	M4x16 Flat Head Self-Tapping Screws × 4 PCS
	M4x25 Round Head Self-Tapping Screws × 6 PCS
	Non-Slip Pads × 4 PCS

Parts List

Step 4

Place the ceramic bowls into the holes on the top panel as shown. Installation complete.

