


# ASSEMBLY INSTRUCTIONS

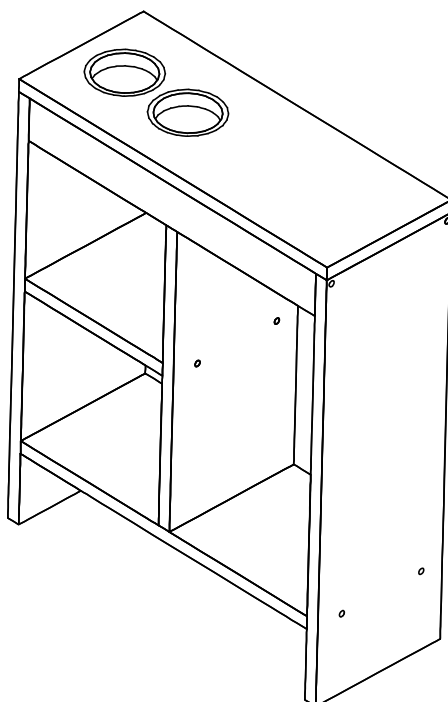

## NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- It is recommended that this item should be assembled by two adults.

## To insert a cam lock: (Please read below instructions before assembling)


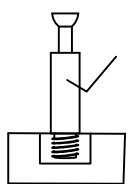


Diagram A

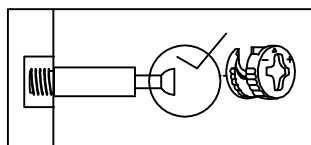

1. Insert cam screw into hole as shown in diagram A .


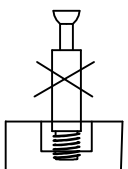


Diagram B

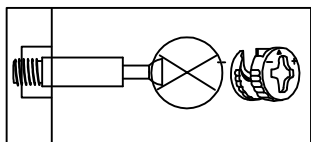

Make sure not to insert the cam screw:  
Too deep as shown in figure B as this will cause the  
cam screw to be misaligned and unable to  
interlock properly.



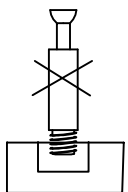



Diagram C

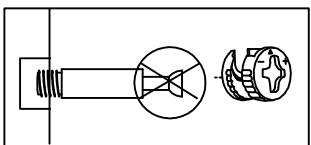


Also avoid inserting the cam screw too close to the  
surface of the hole as shown in figure C, as this will  
cause the cam lock to be too loose, and not interlock  
properly.

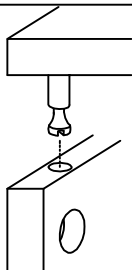



2. Connect the panels together.

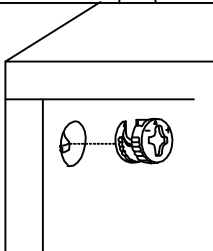

ARROW SIGN











3. When inserting the cam lock make sure the arrow  
of the cam lock faces the cam screw.

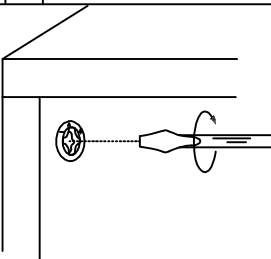





4. To tighten the cam lock turn the cam lock clockwise  
90-180 degree or until the arrow is facing opposite  
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC  
SCREWDRIVER TO TIGHTEN CAM LOCKS.**

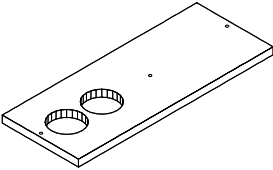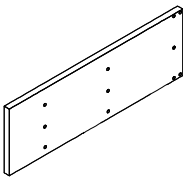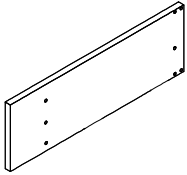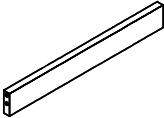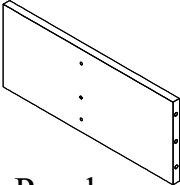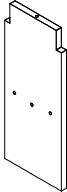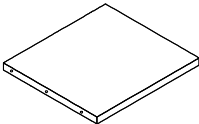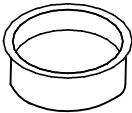
## Part List

<p>1</p>  <p>Quantity of 1</p> <p>Top Panel</p>	<p>2</p>  <p>Quantity of 1</p> <p>Front Panel</p>	<p>3</p>  <p>Quantity of 1</p> <p>Back Panel</p>
<p>4</p>  <p>Quantity of 2</p> <p>Apron</p>	<p>5</p>  <p>Quantity of 1</p> <p>Bottom Panel</p>	<p>6</p>  <p>Quantity of 1</p> <p>Divider</p>
<p>7</p>  <p>Quantity of 1</p> <p>Shelf</p>	<p>8</p>  <p>Quantity of 2</p> <p>Cup Holder</p>	
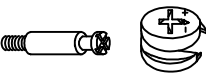
## Hardware List


<p>A</p> <p>Quantity of 3</p>  <p>Camlock</p>	<p>B</p> <p>Quantity of 9</p>  <p>1/4"*1.25"</p> <p>Wood Dowel</p>	<p>C</p> <p>Quantity of 14</p>  <p>1/4"*1.5"</p> <p>Screw</p>	<p>D</p> <p>Quantity of 1</p>  <p>Allen Wrench</p>
--	---	---	---

# Part List

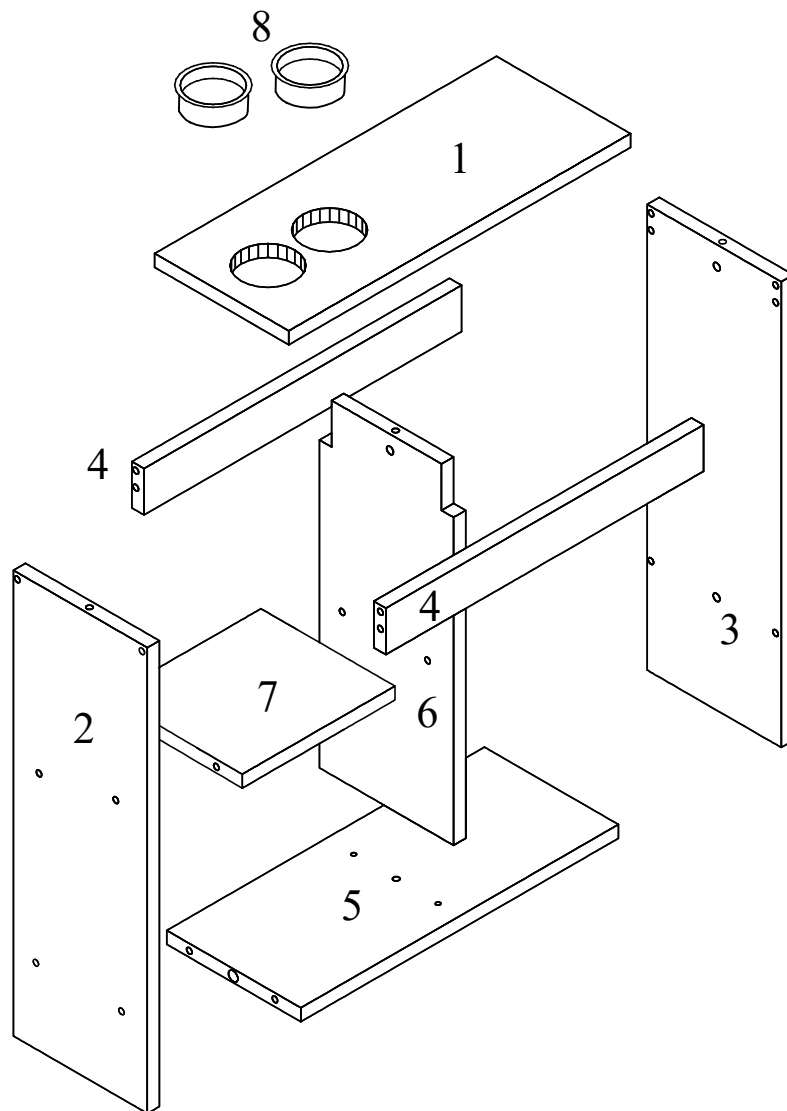

# Assembly instructions


## Step 1:

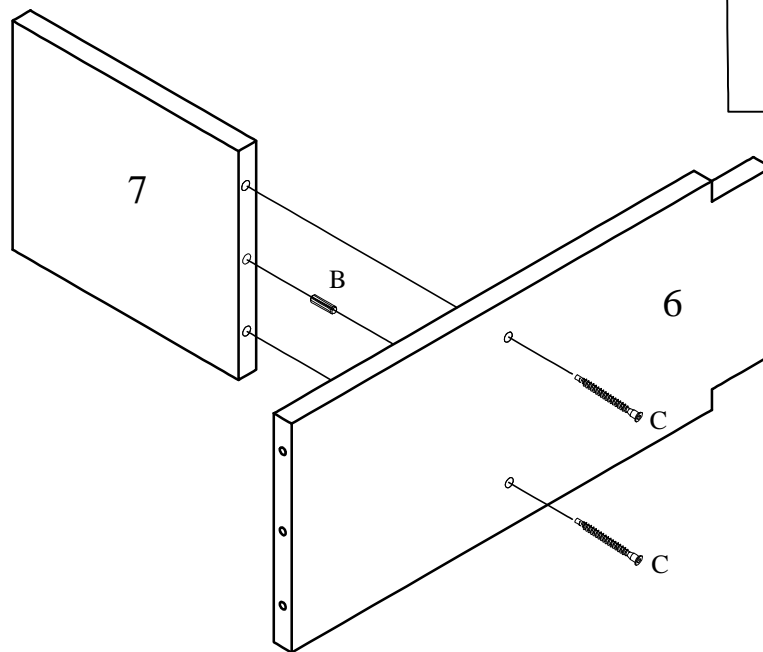

B		1PCS
C		2PCS
D		1PCS

Assemble Shelf (7) to Divider(6) using Wood Dowel (B) and Bolts (C).


## Step 2:

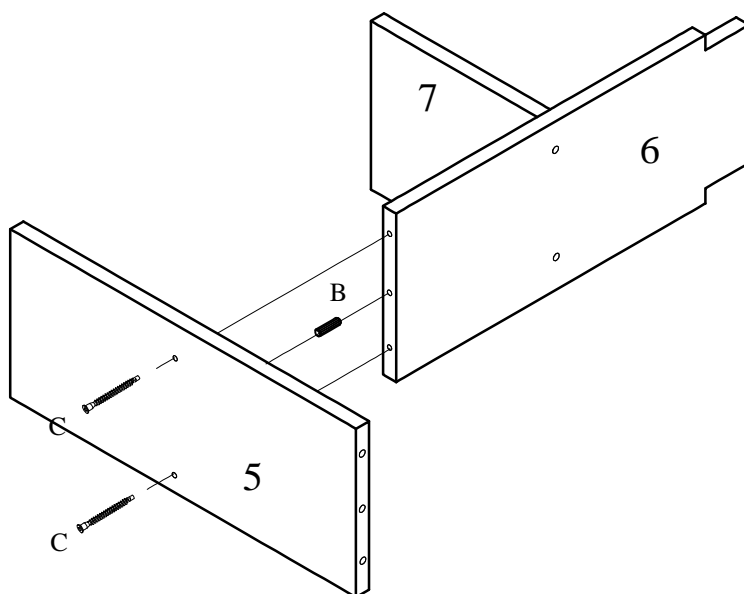

B		1PCS
C		2PCS
D		1PCS

Assemble Divider(6) to Bottom Panel using Wood Dowel (B) and Bolts (C).


## Step 3:

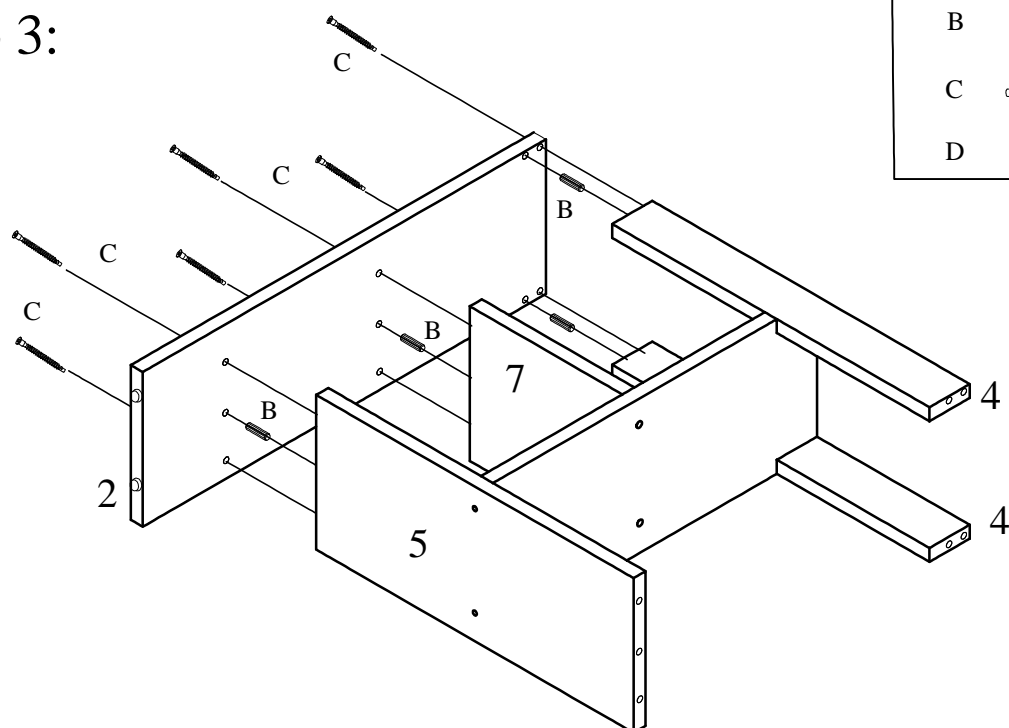

B		4PCS
C		6PCS
D		1PCS

Attach Aprons(4) to the grooves on Divider( 6), then assemble Bottom Panel(5), Shelf (7)and Aprons(4) to Front Panel (2) using Wood Dowels (B) & Bolts (C) as shown above.


## Step 4:

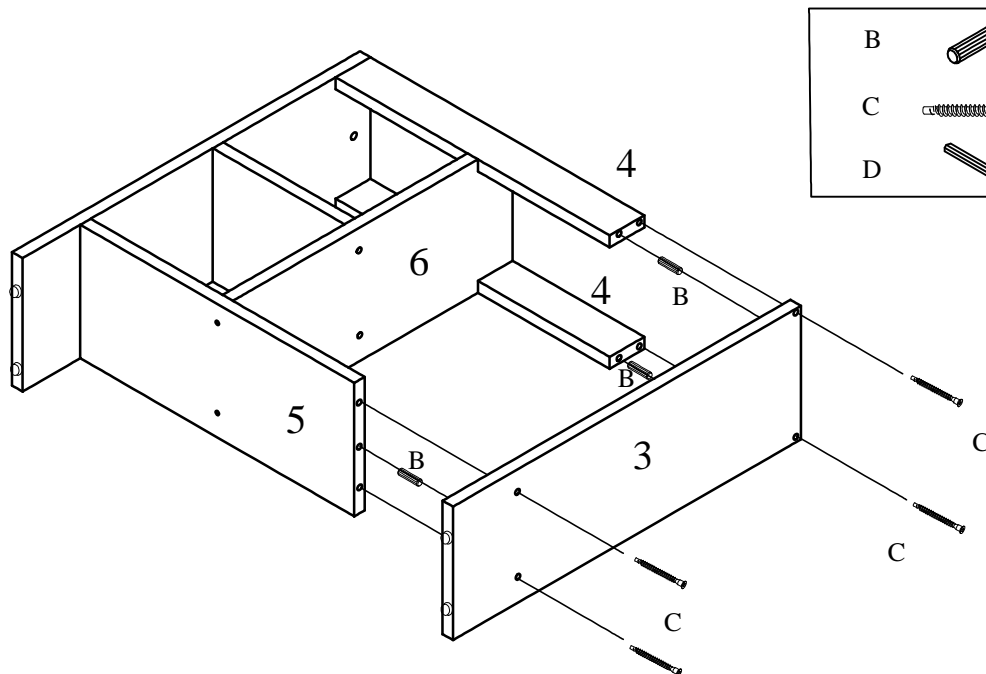

B		3PCS
C		4PCS
D		1PCS


Assemble Back Panel (3) to Bottom Panel(5), Shelf (7)and Aprons(4) using Wood Dowels (B) & Bolts (C) as shown above.

## Step 5:

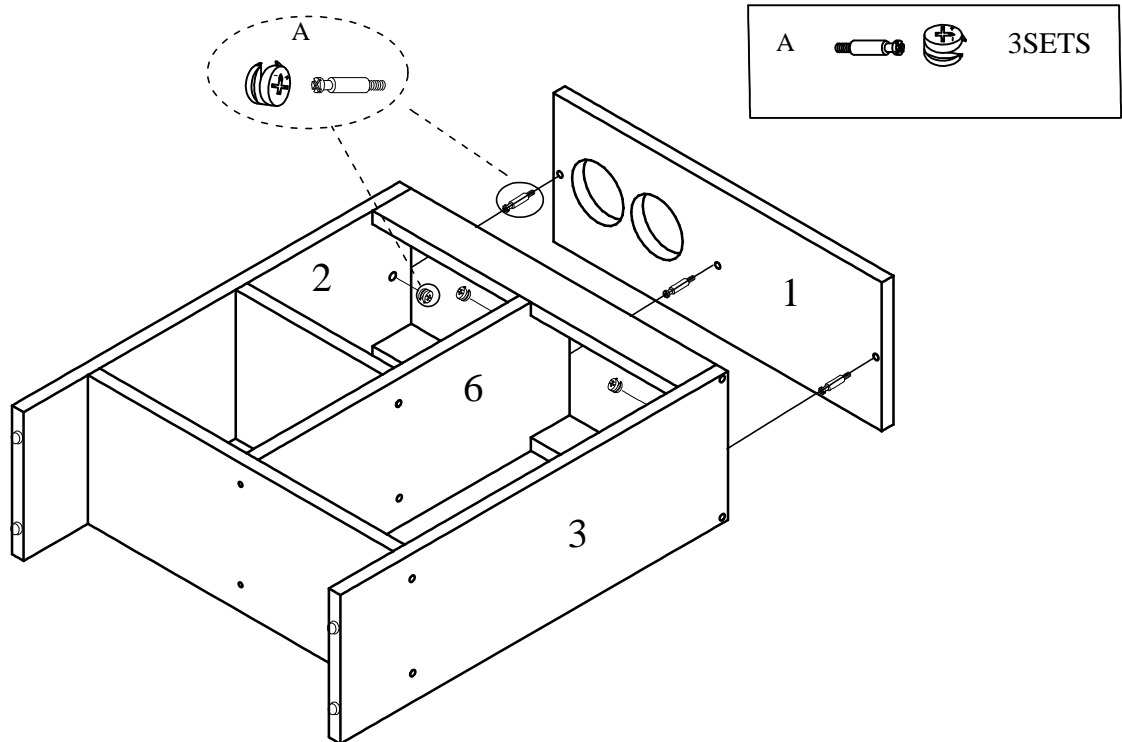

Assemble Top Panel(1) to Back Panel (3), Front Panel (2) & Divider (6) using Camlocks (A) as shown above.

## Step 6:

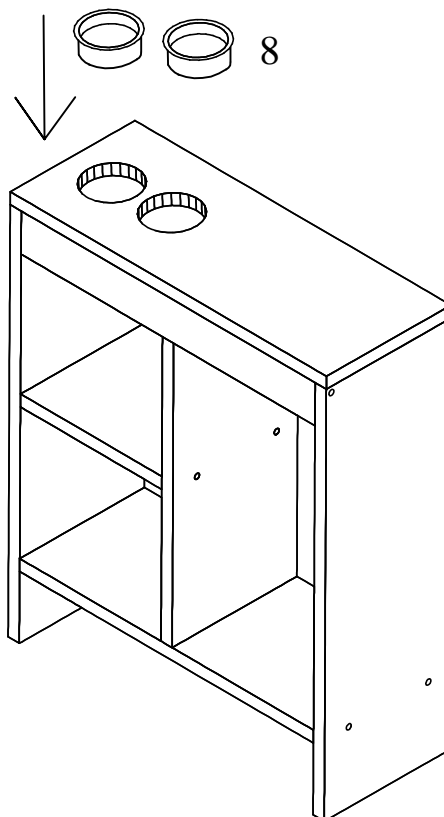

Attach Cup Holders( 8) to the top panel as shown above.