

Assembly Instruction

Assembly Instructions -Please keep for future reference



Dimensions


Width-30inch

Depth-15.7inch

Height-71.1inch

WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Assembly Instruction

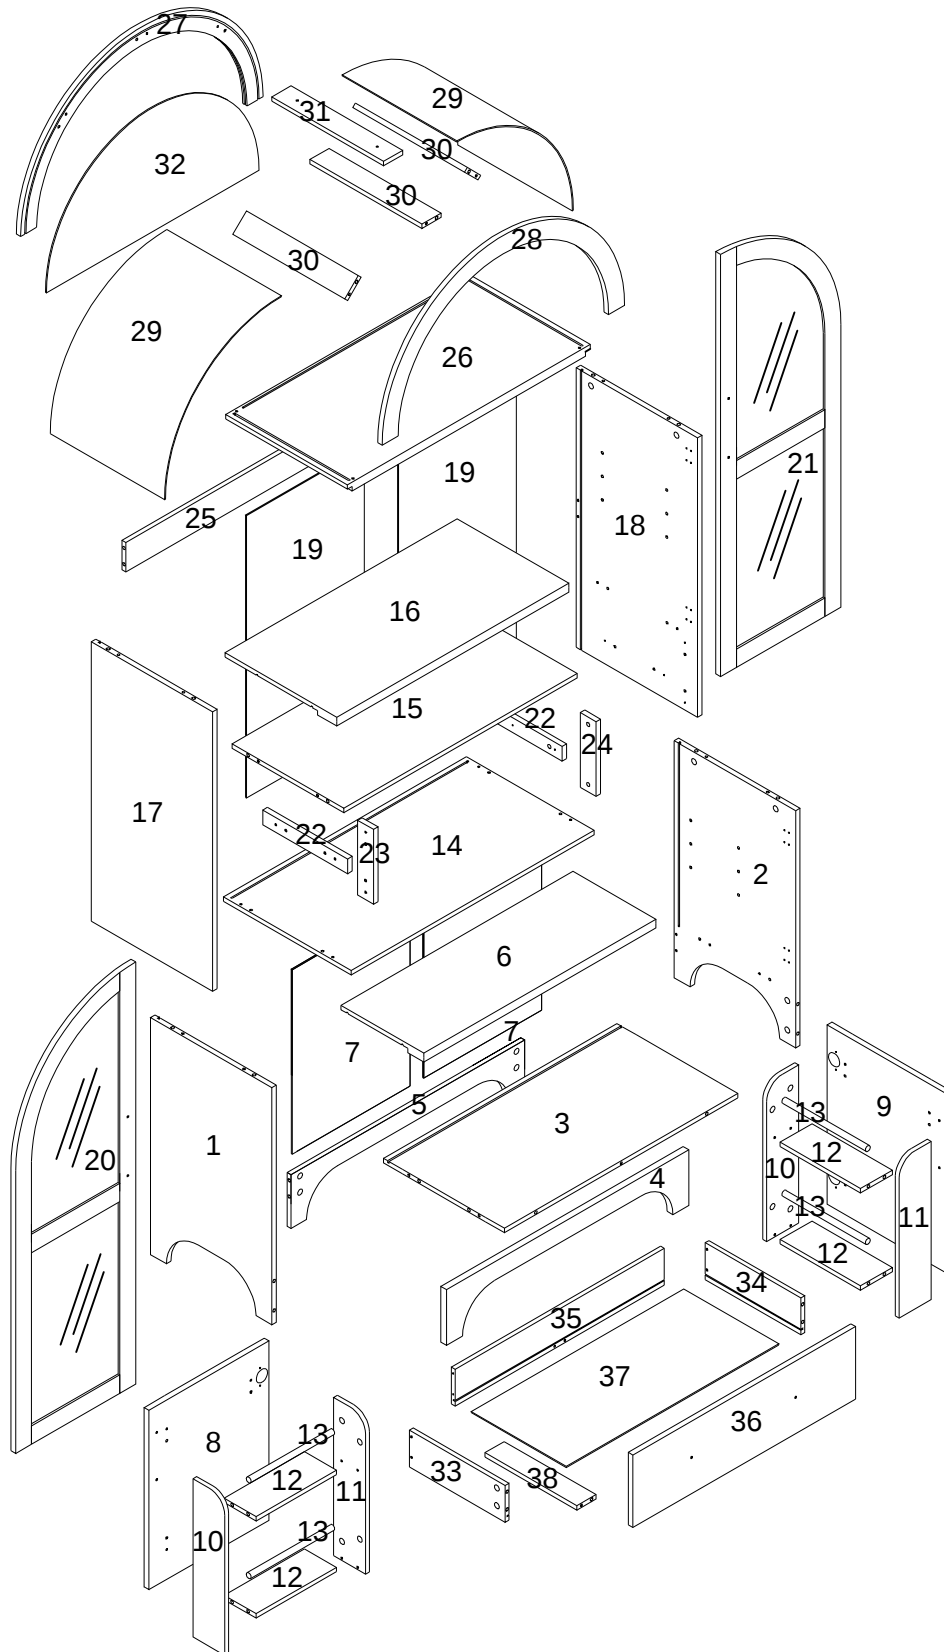




Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- . Check you have all the components and tools listed on the following pages.
- . Remove all fittings from the plastic bags and separate them into their groups.
- . Keep children and animals away from the work area, small parts could choke if swallowed.
- . Make sure you have enough space to layout the parts before starting.

- . During assembly do not stand or put weight on the product, this could cause damage.
- . Assemble the item as close to its final position (in the same room) as possible.
- . Assemble on a soft level surface to avoid damaging the unit or your floor.
- . Parts of the assembly will be easier with 2 people.

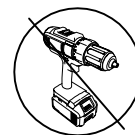

power drill is set on a low torque setting.

- . To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- . Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- . From time to time check that there are no loose screws on this unit.

- . This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- . Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

- . Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning - please follow these Instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)

Do not allow children to climb or hang on the furniture

Do not open more than one drawer at a time

Do not place heavy items in the top drawers

Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

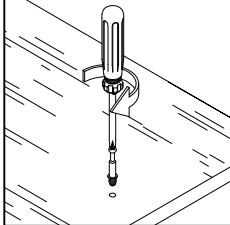

Step 2

Push the male camlock into the entry hole.

2

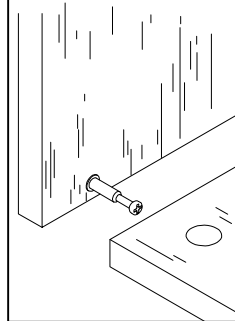


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

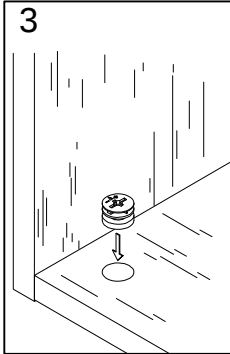


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.








4

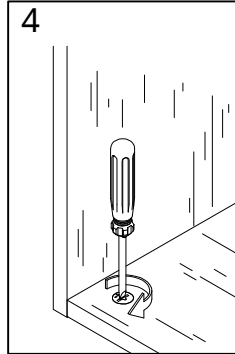

Components -Fittings















Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. in some cases, more fittings may be supplied than required.

















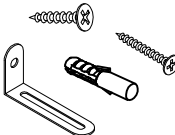


(A)  Ø6x33mm x65pcs	(B)  x65pcs	(C)  Ø4x40mm x8pcs	(D)  Ø3x12mm x10pcs	(E)  150mm x2pcs	(F)  Ø4x15mm x2pcs
(G)  250mm x2pcs	(H)  Ø4x22mm x8pcs	(I)  x8pcs	(J)  Ø3x16mm x8pcs	(K)  Ø6x30mm x36pcs	(L)  Ø4x30mm x6pcs
(M)  x8pcs	(N)  Ø4x14mm x48pcs	(O)  x8pcs	(P)  250mm x2pcs	(Q)  x1set	(R)  x2pcs
(S)  Ø6x20mm x8pcs	(T)  Ø4x20mm x8pcs	(U)  x1pc	(V)  Ø4x28mm x2pcs	(W)  x1pc	

Assembly Instruction


Box A

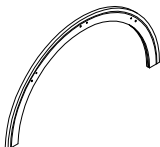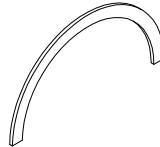					
1: 1pc	2: 1pc	6: 1pc	8: 1pc	9: 1pc	10: 2pcs
					
11: 2pcs	12: 4pcs	15: 1pc	17: 1pc	18: 1pc	19: 2pcs
					
20: 1pc	21: 1pc	27: 1pc	28: 1pc		


Box B

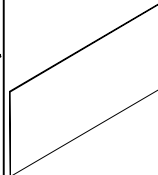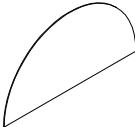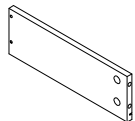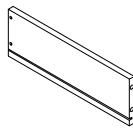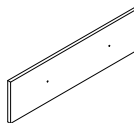							
3: 1pc	4: 1pc	5: 1pc	7: 2pcs	14: 1pc	13: 4pcs	16: 1pc	
							
22: 2pcs	23: 1pc	24: 1pc	25: 1pc	26: 1pc	29: 2pcs	30: 3pcs	
							
31: 1pc	32: 1pc	33: 1pc	34: 1pc	35: 1pc	36: 1pc	37: 1pc	38: 1pc


STEP1

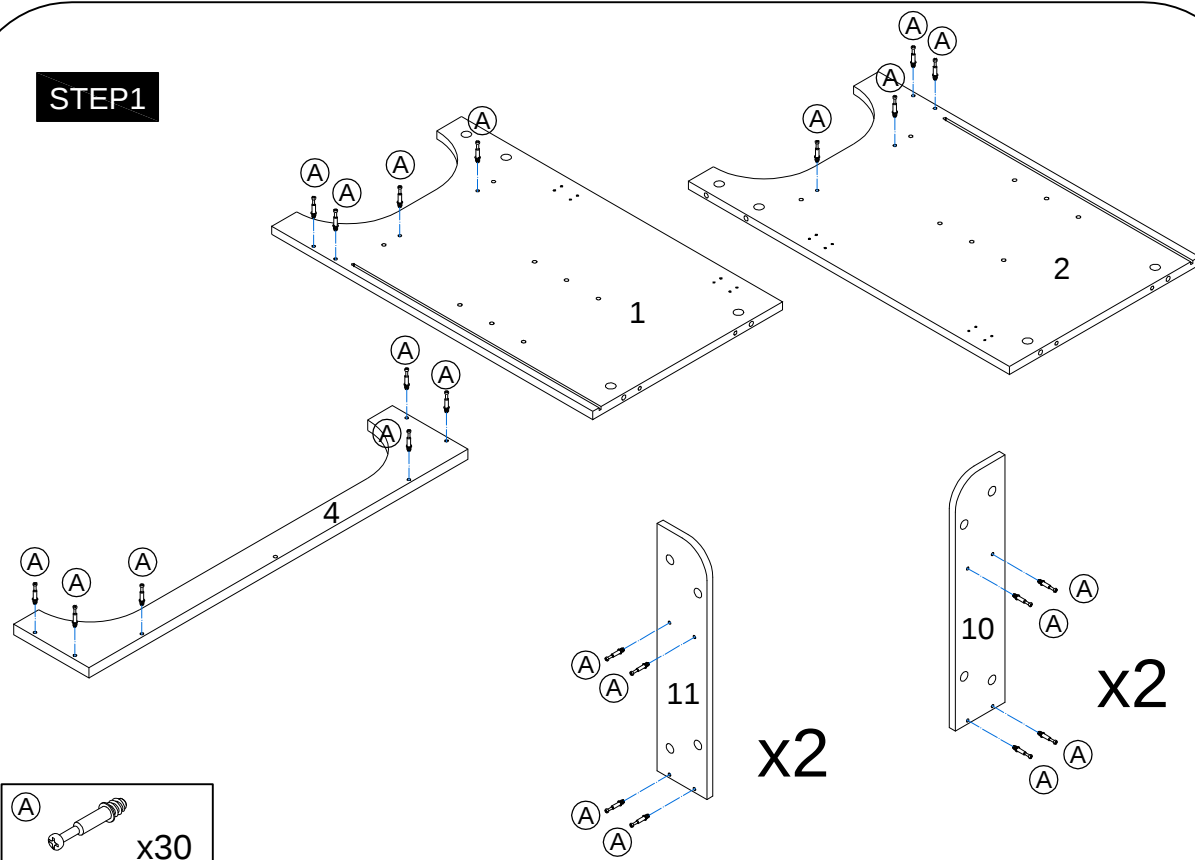

STEP2

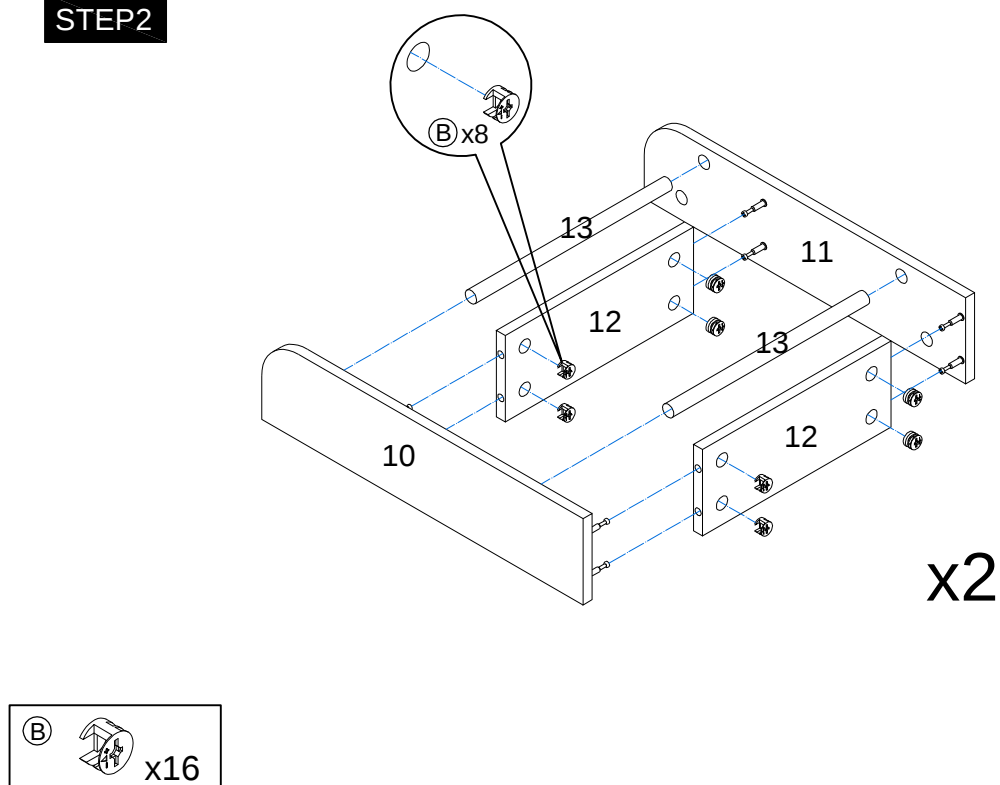

STEP3



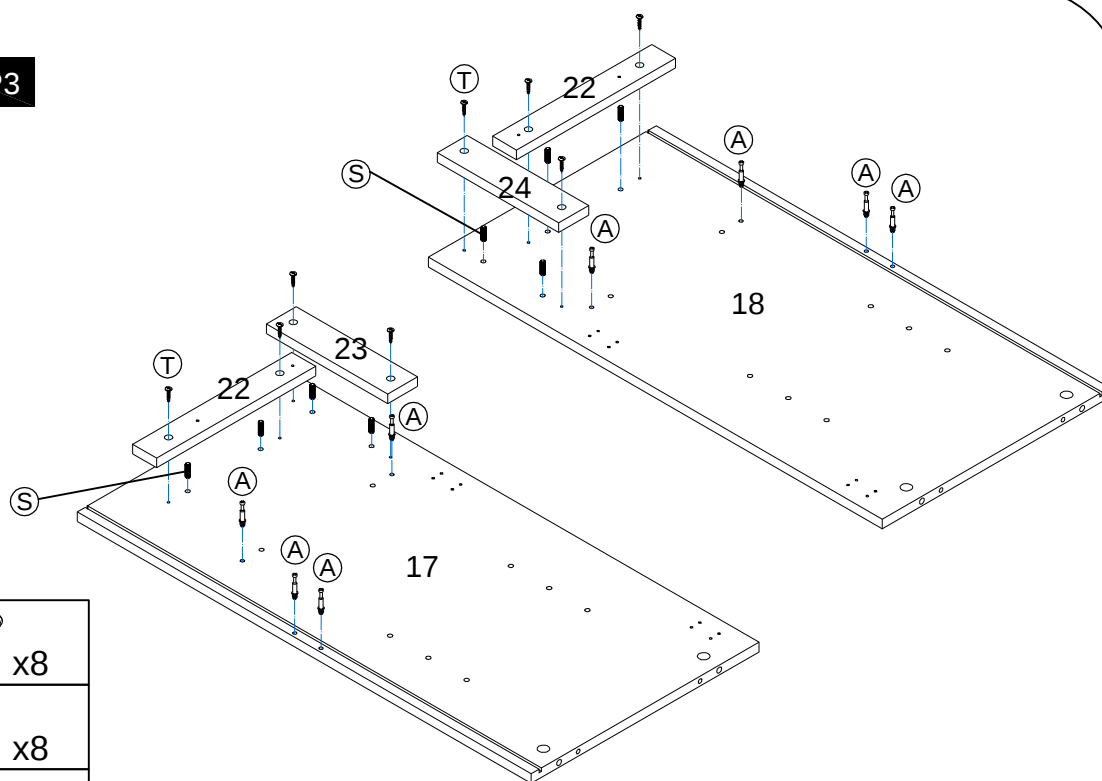


(A)		x8
(T)		x8 Ø4x20mm
(S)		x8 Ø6x20mm

STEP4


Detaching the Slide

Press lever to disconnect and separate the Extension Slide (K-2) from the Slide (K-1). Do this for both drawer Slides.

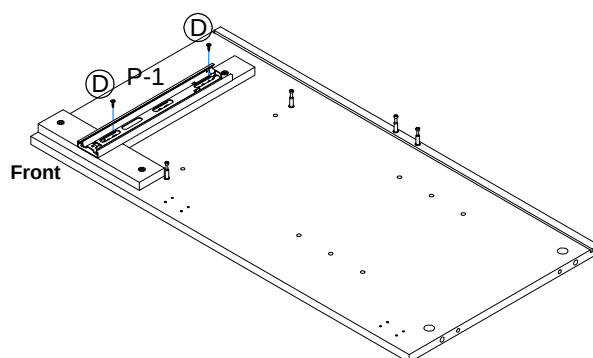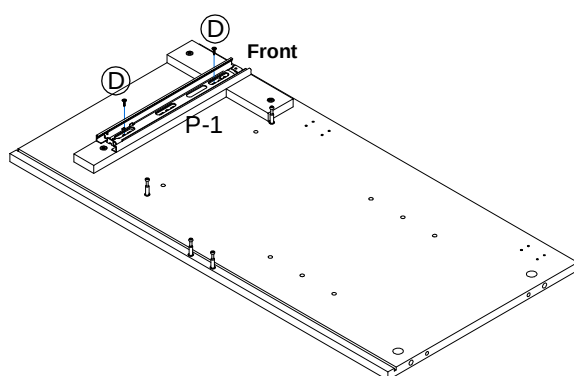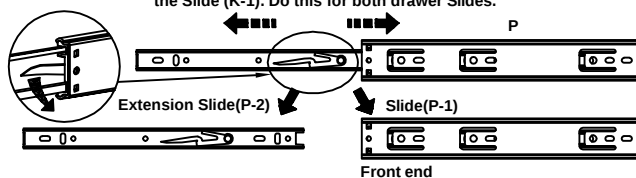





(D)		x4 Ø3x12mm
(P)		x2 250mm

Front end





Adjust SLIDE to align with the screw holes.


STEP5

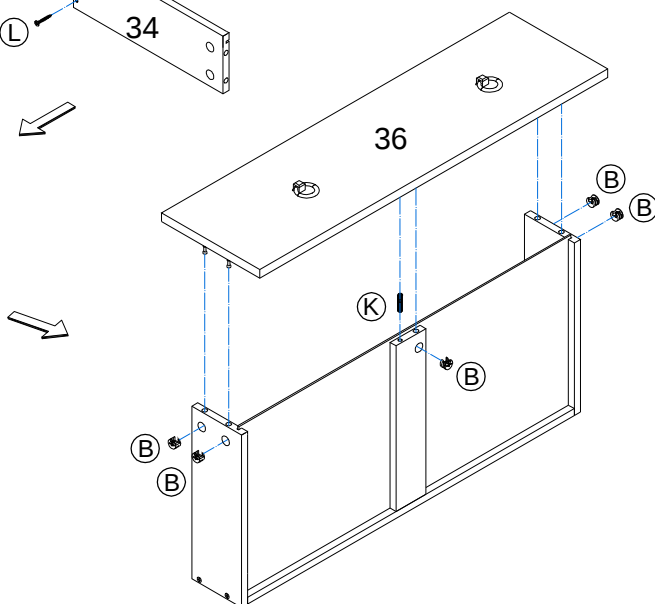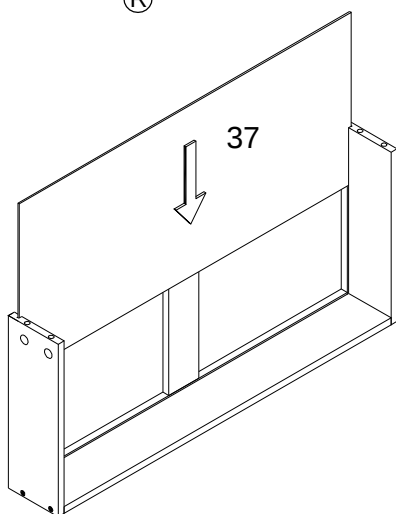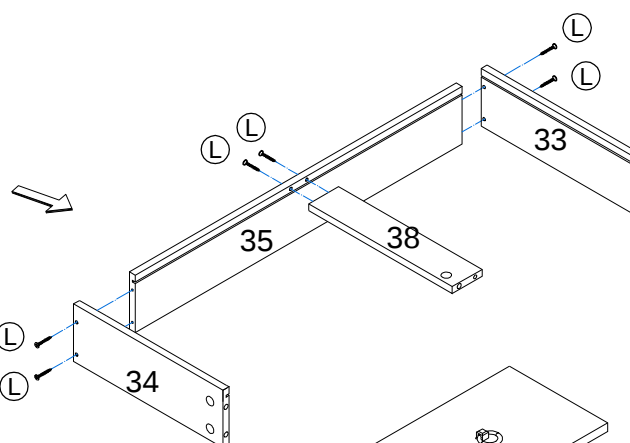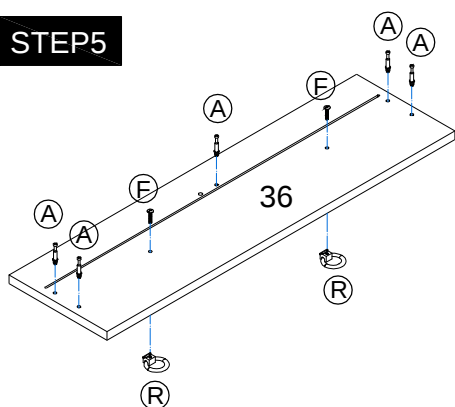

(A)		x5
(B)		x5
(D)	 Ø3x12mm	x4
(E)	 Ø4x15mm	x2
(K)	 Ø6x30mm	x1
(L)	 Ø4x30mm	x6
(R)		x2
(P)	 250mm	x2

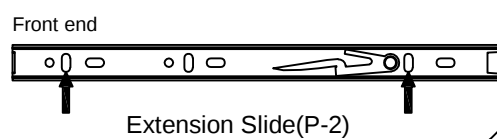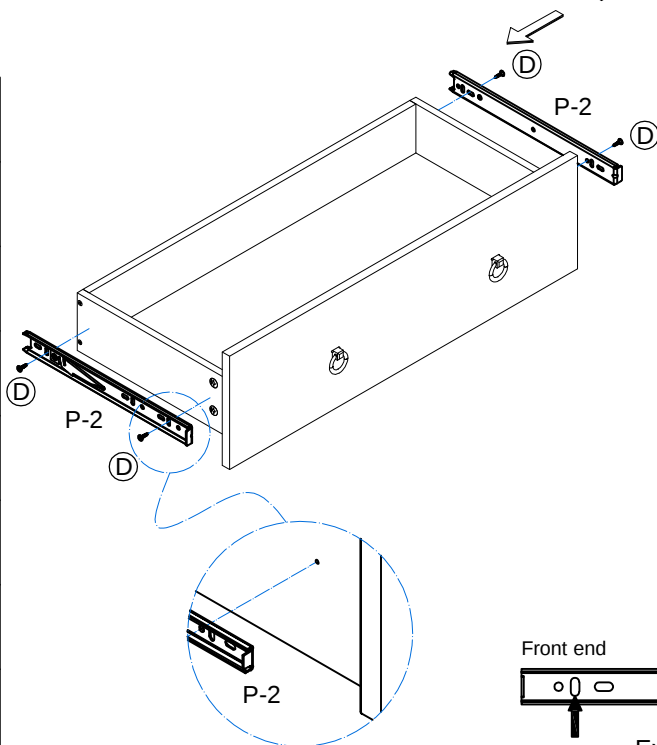


STEP6

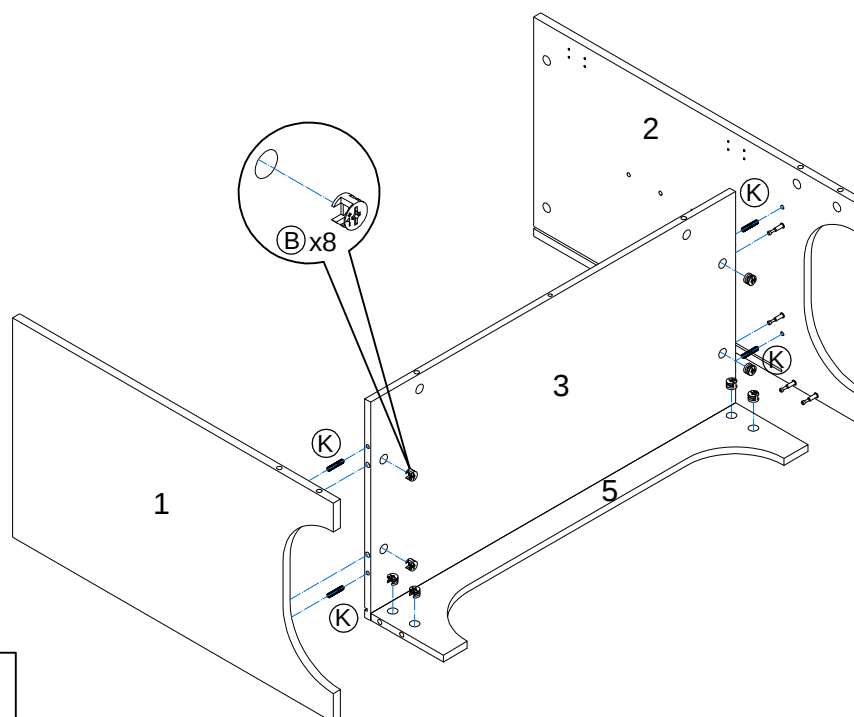


(B)		x8
(K)		x4 Ø6x30mm

STEP7

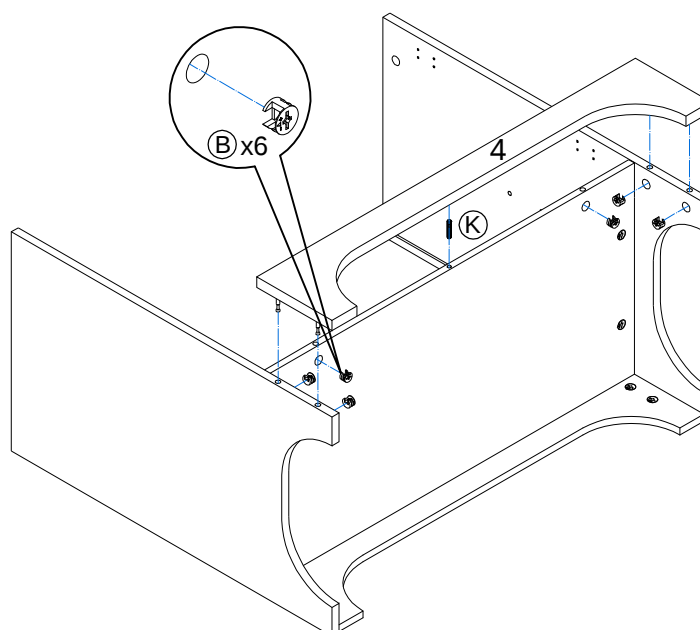


(B)		x6
(K)		x1 Ø6x30mm

STEP8

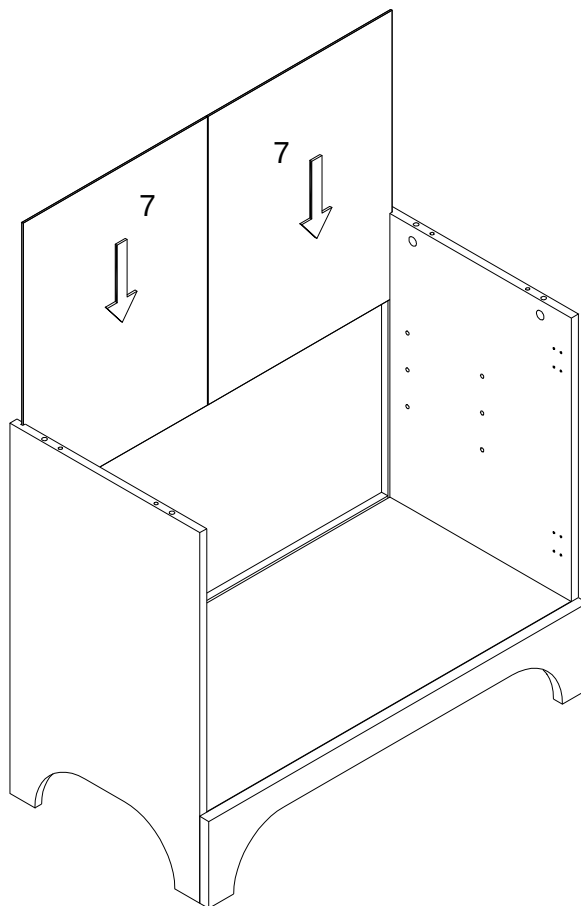


STEP9

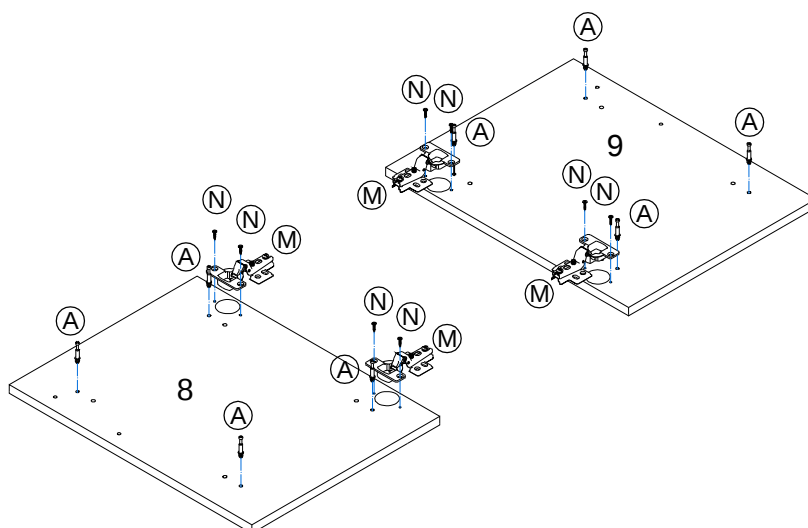

(A)		x8
(N)		x8 Ø4x14mm
(M)		x4


STEP10

(B)		x8
(K)		x8
Ø6x30mm		


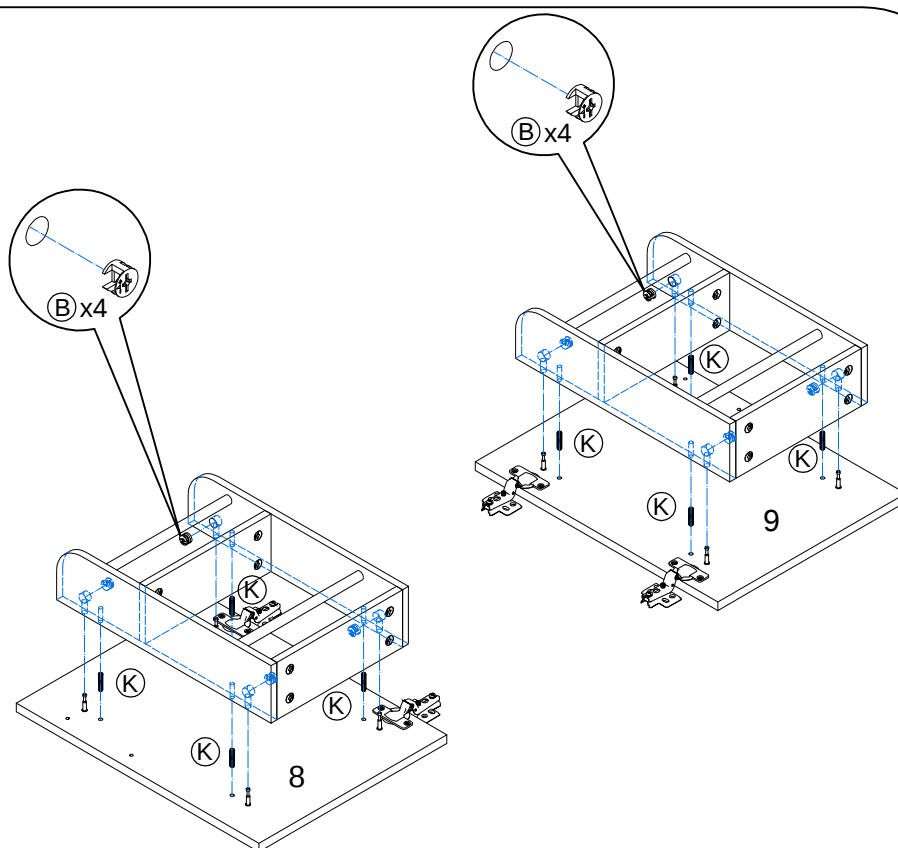


STEP11



(A)		x10
(D)		x2
Ø3x12mm		
(U)		x1

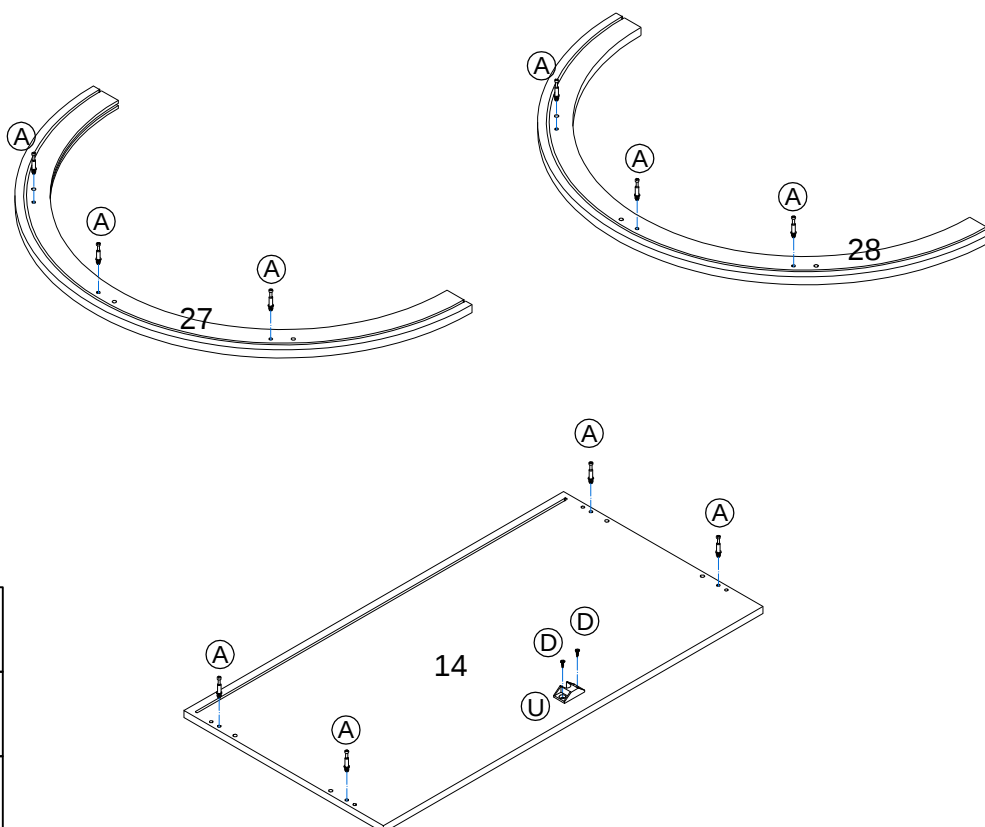


STEP12

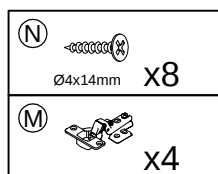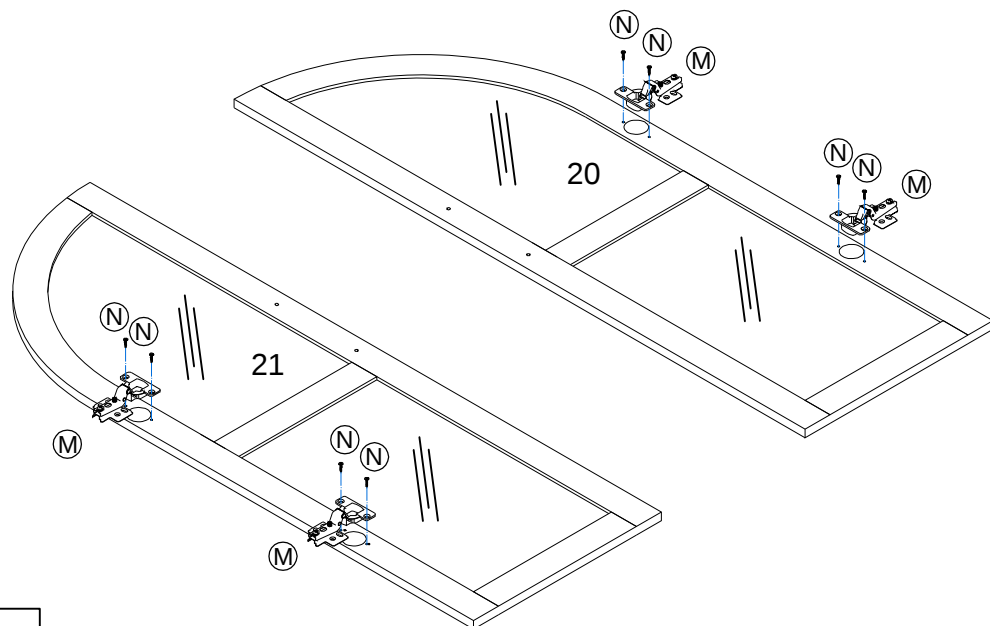


STEP13

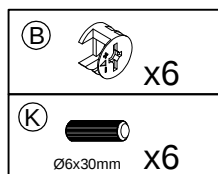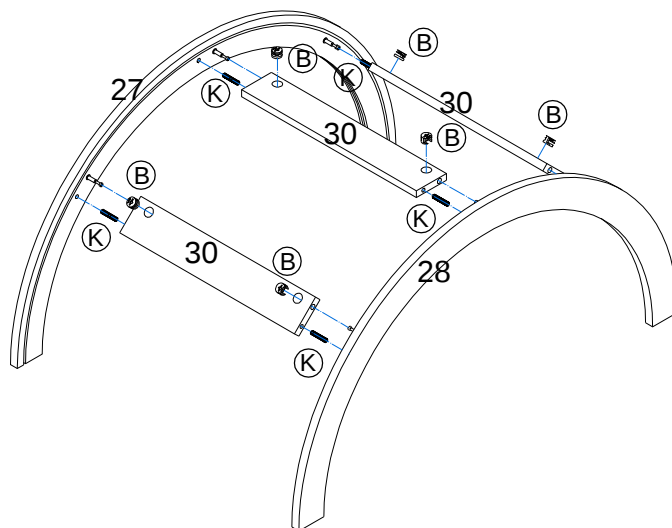



STEP14

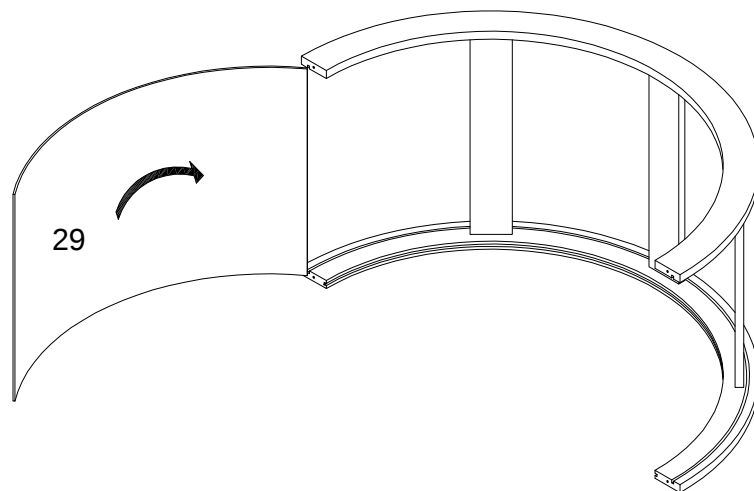



STEP15

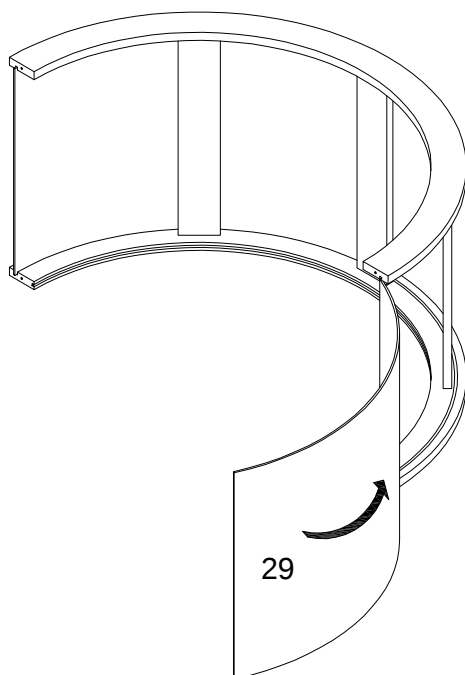



STEP16

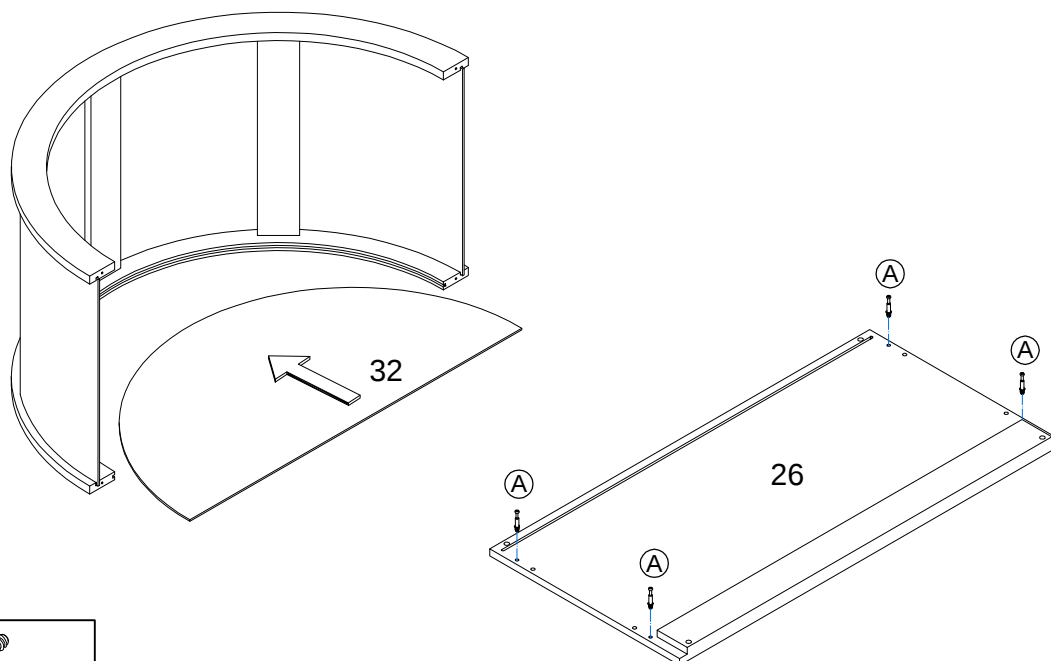



STEP17

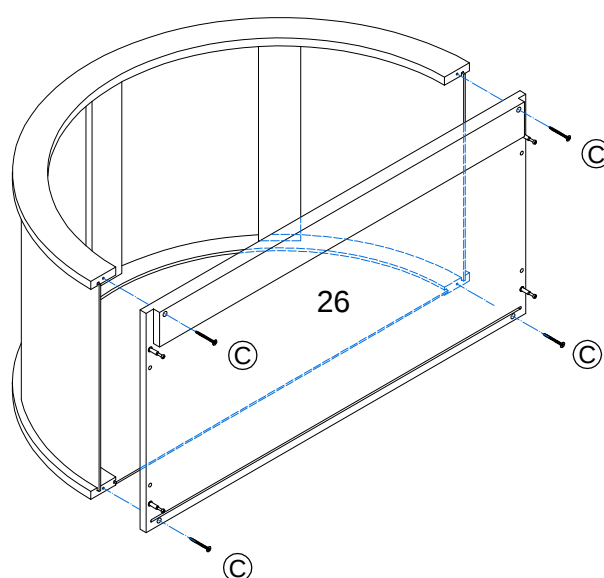



STEP18

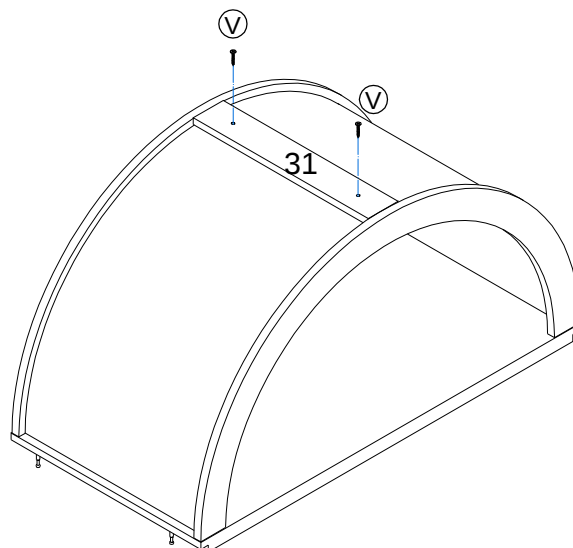


STEP19

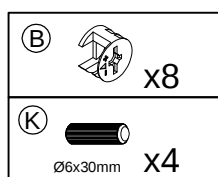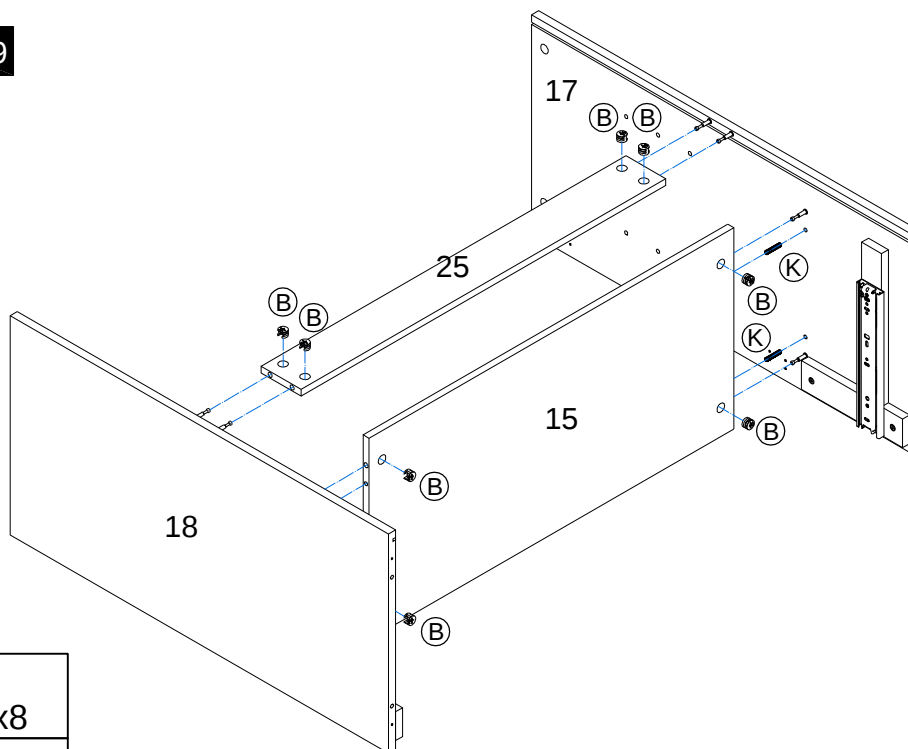



STEP20

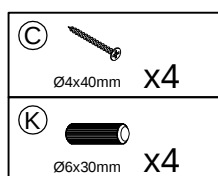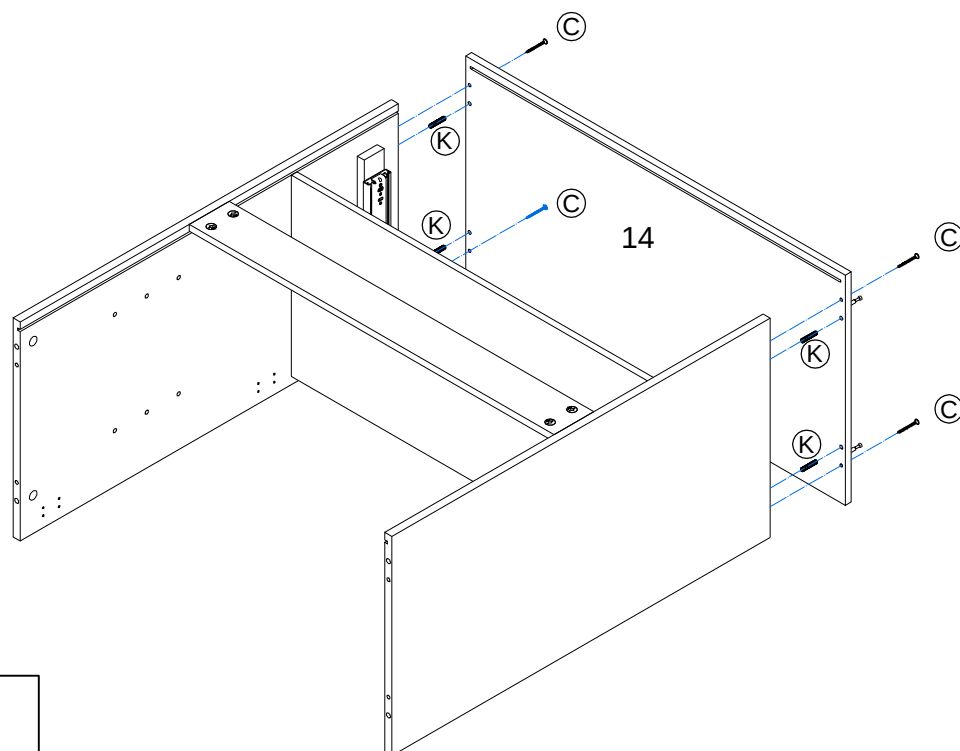



STEP21

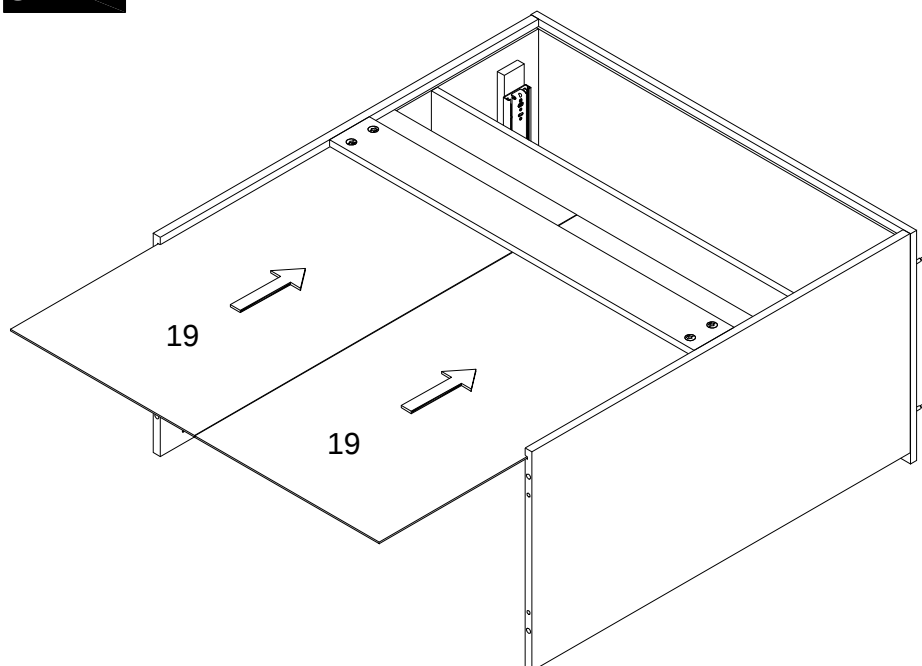



STEP22

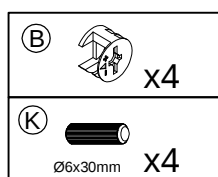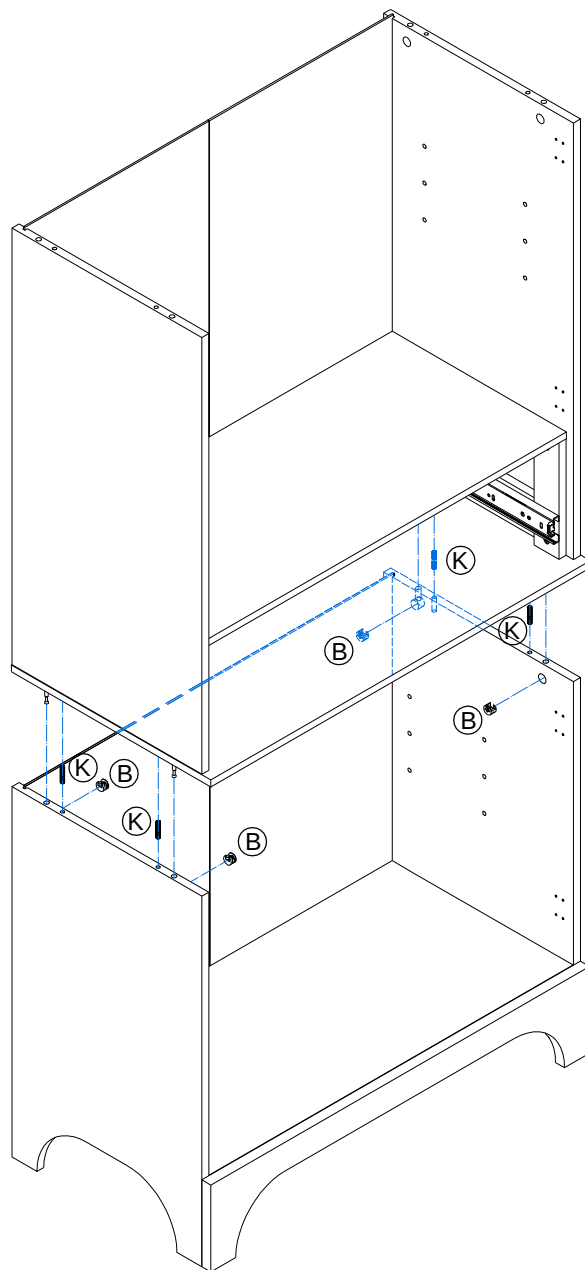


STEP23

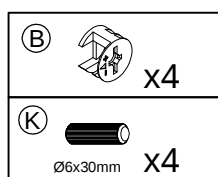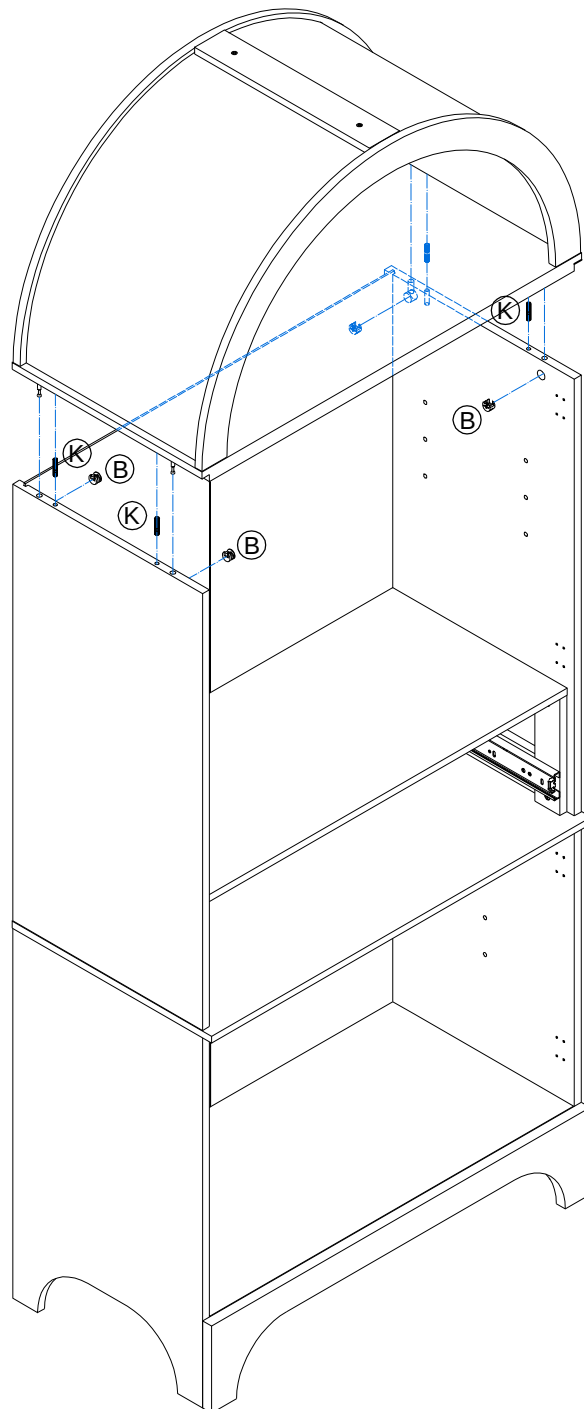



STEP24

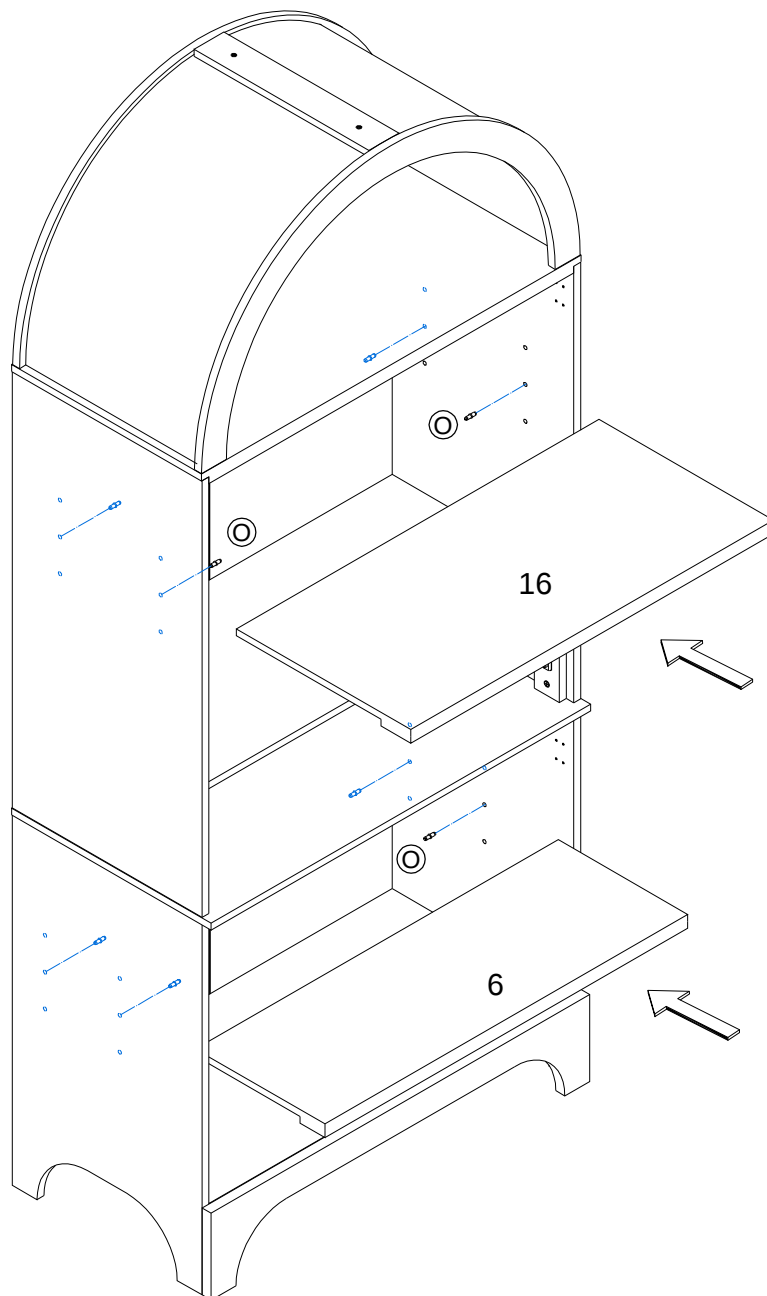

STEP25


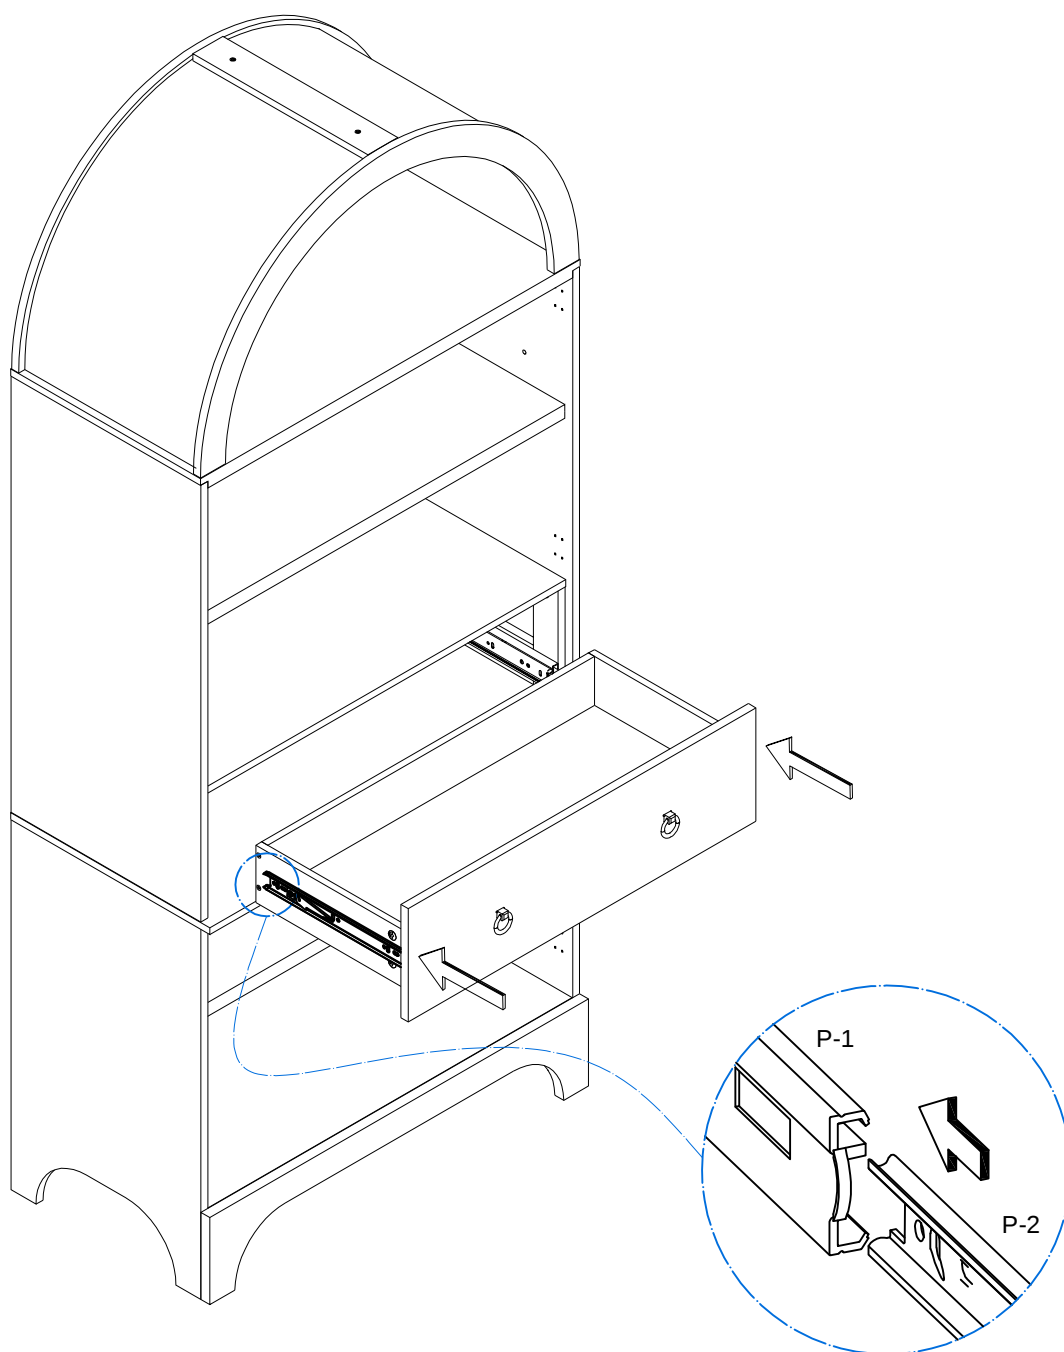


STEP26

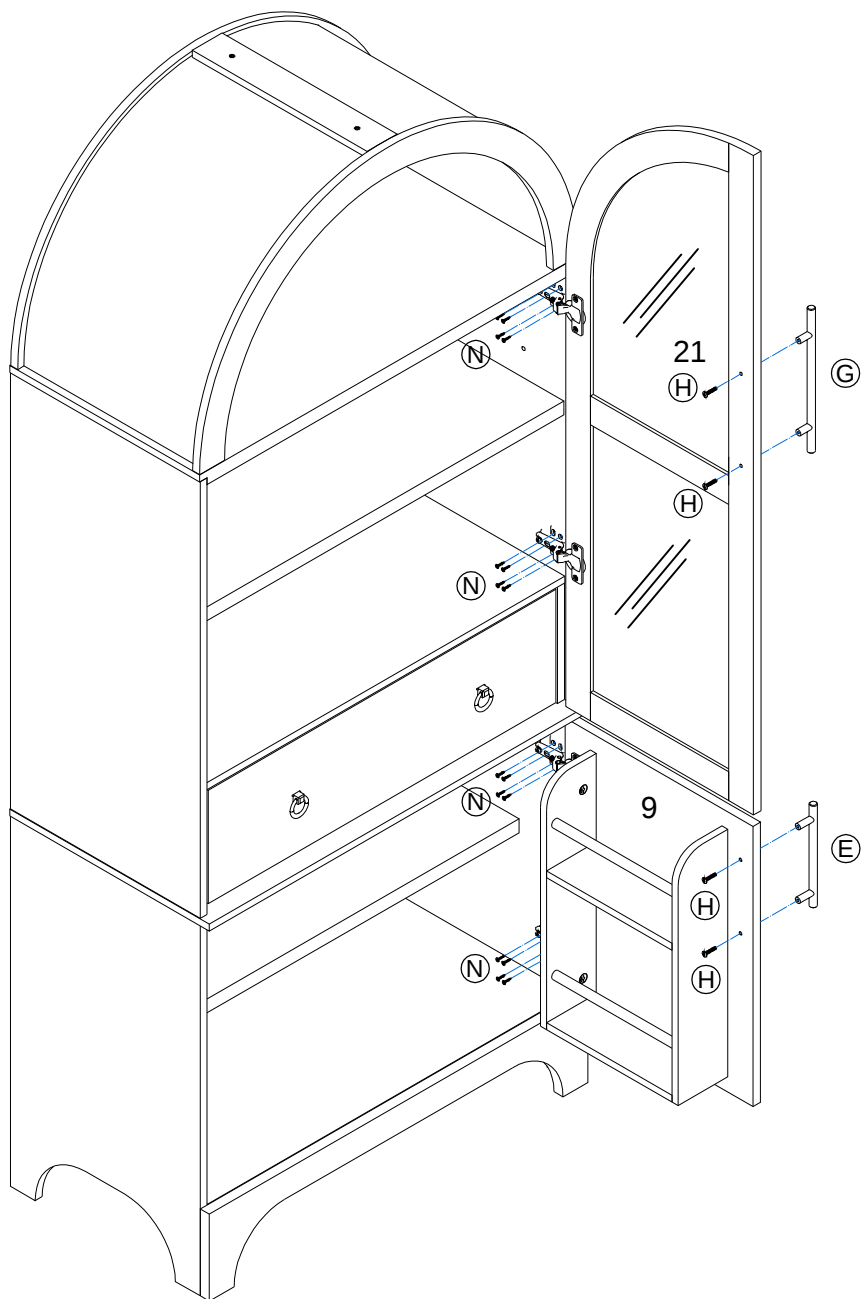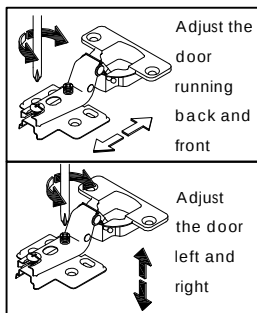



(E)		x1
(G)		x1
(H)		x4
(N)		x16

STEP27

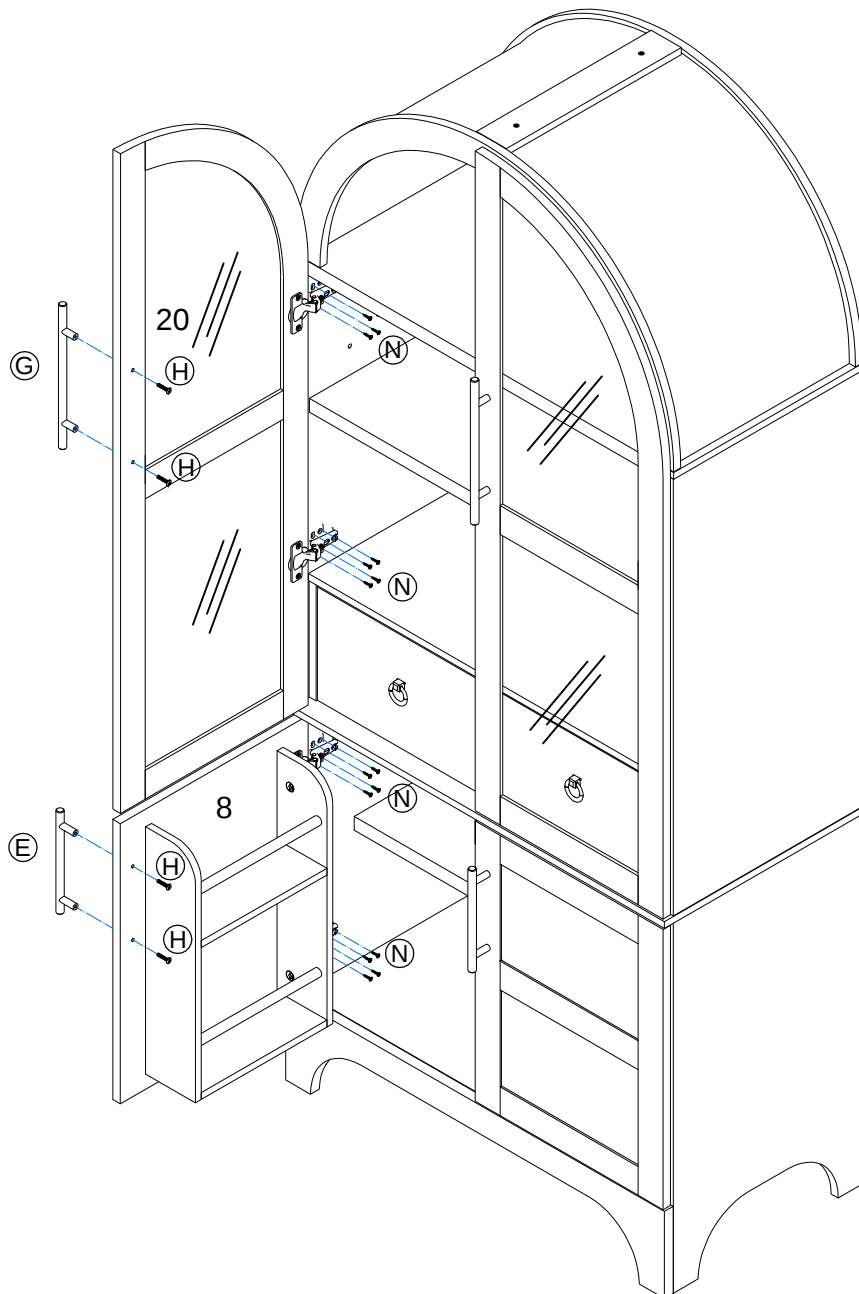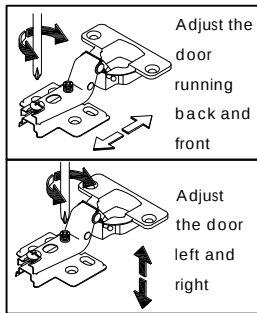

(E)		x1
(G)		x1
(H)		x4
(N)		x16


STEP28

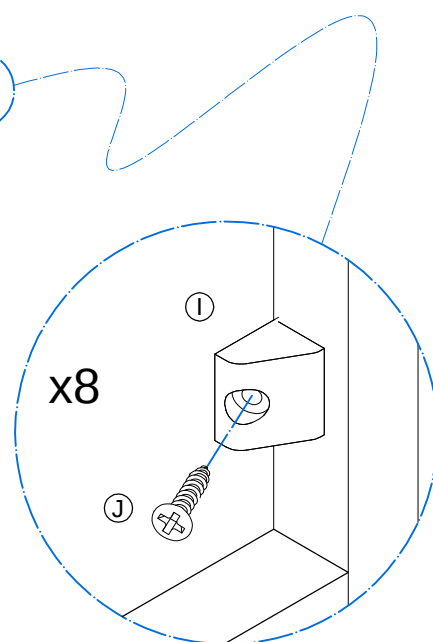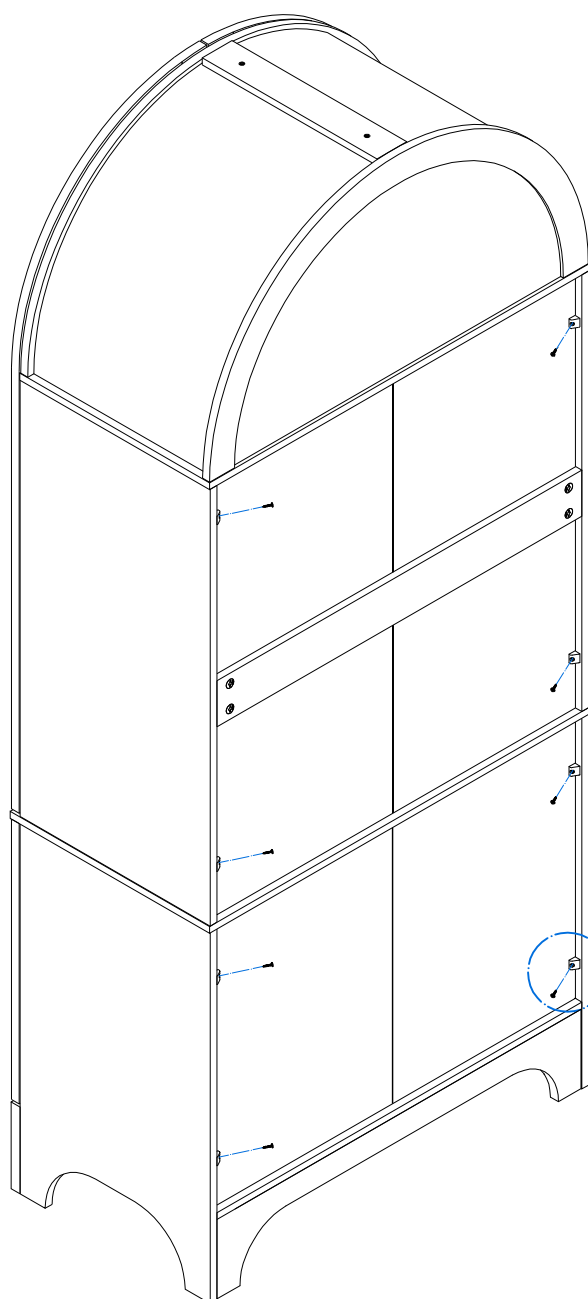

①		x8
②		x8

Ø3x16mm

STEP29

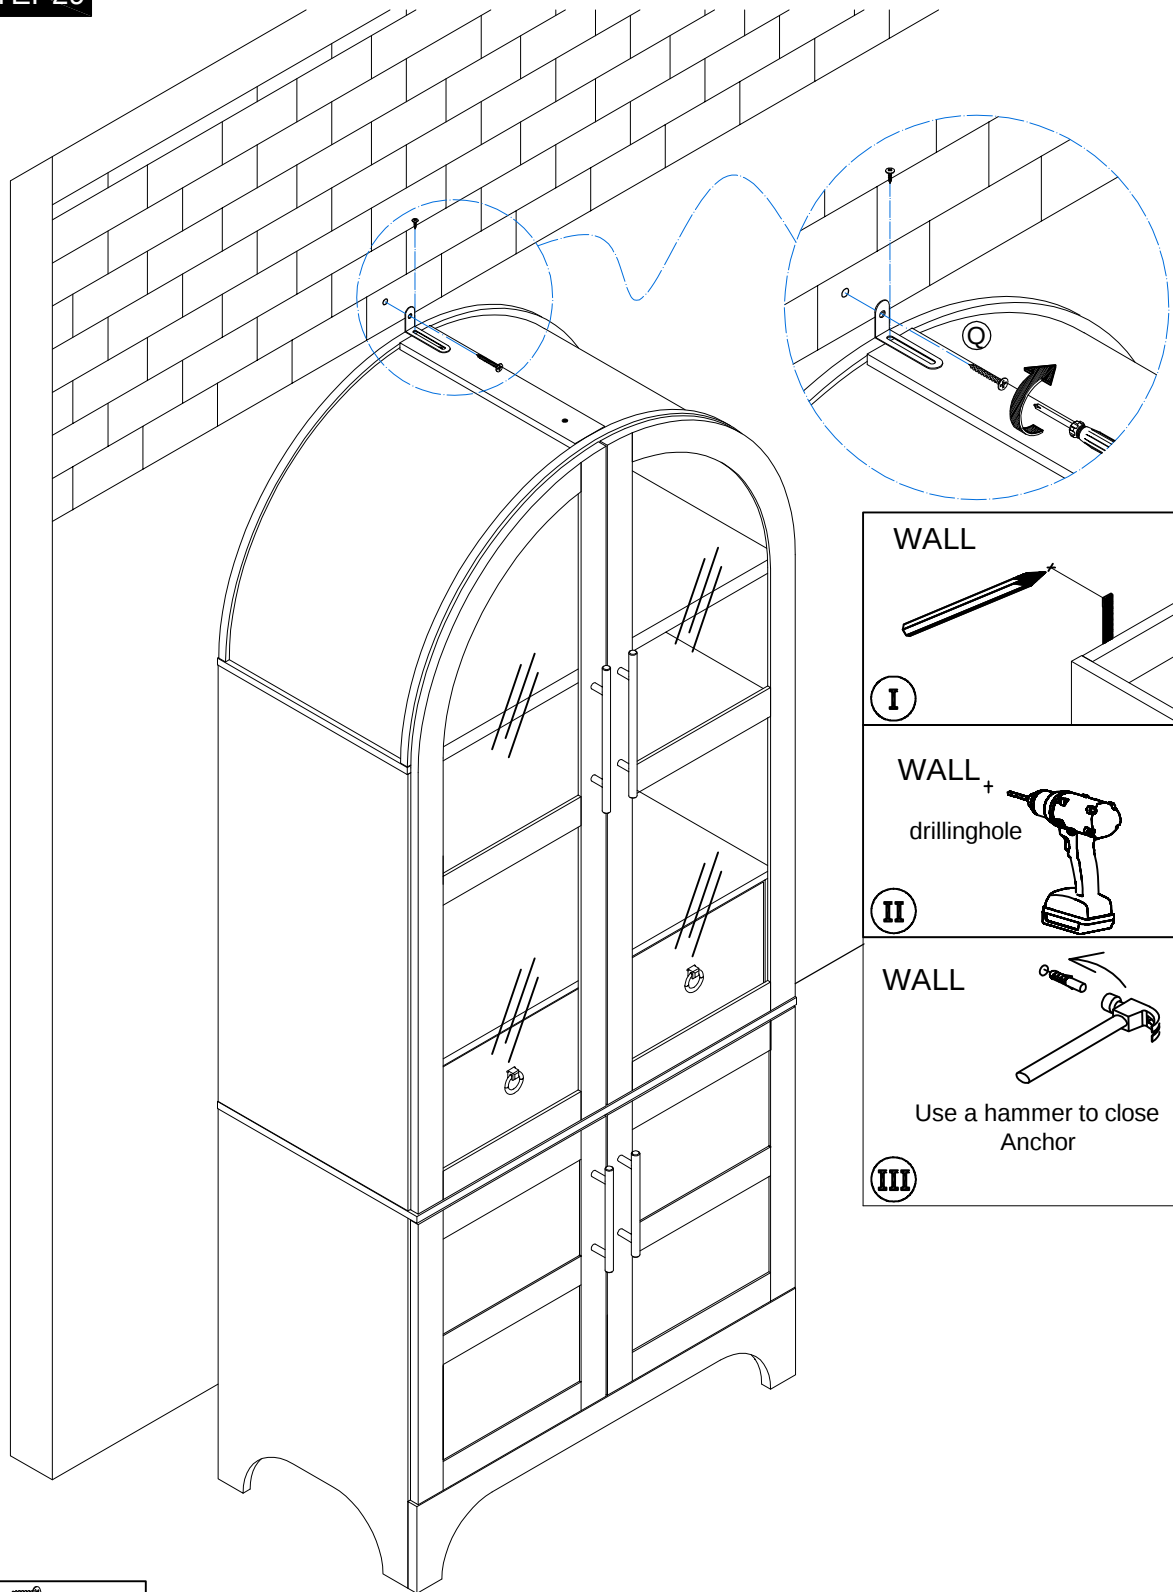


WALL



I


WALL +

drillinghole

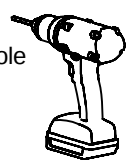

II

WALL

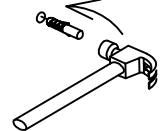

Use a hammer to close
Anchor

III

