


Assembly Instructions

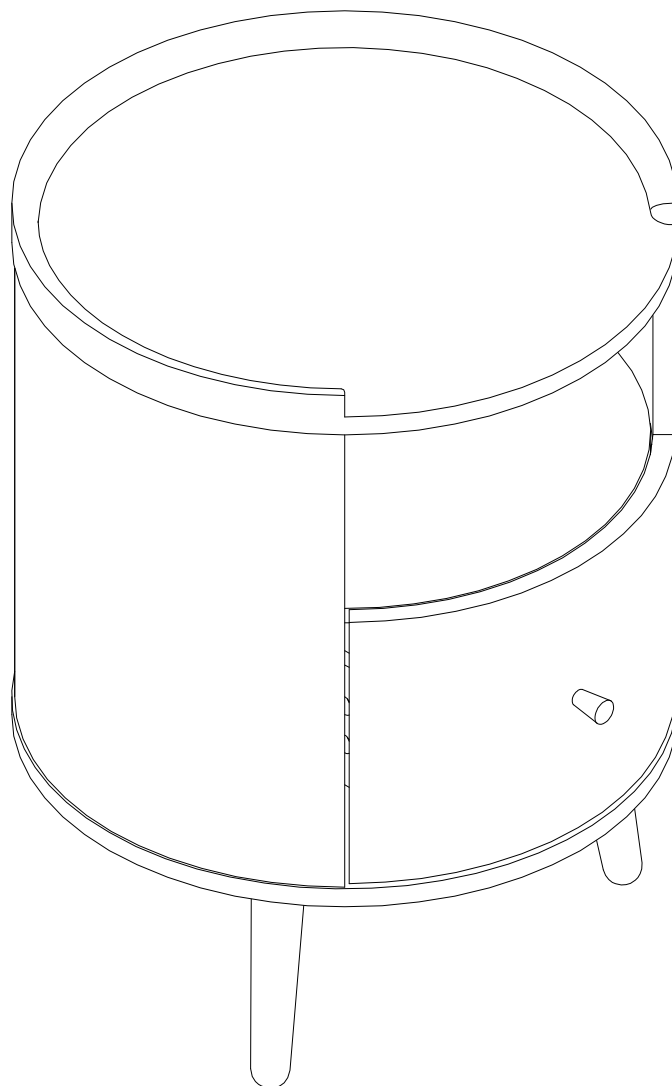

“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

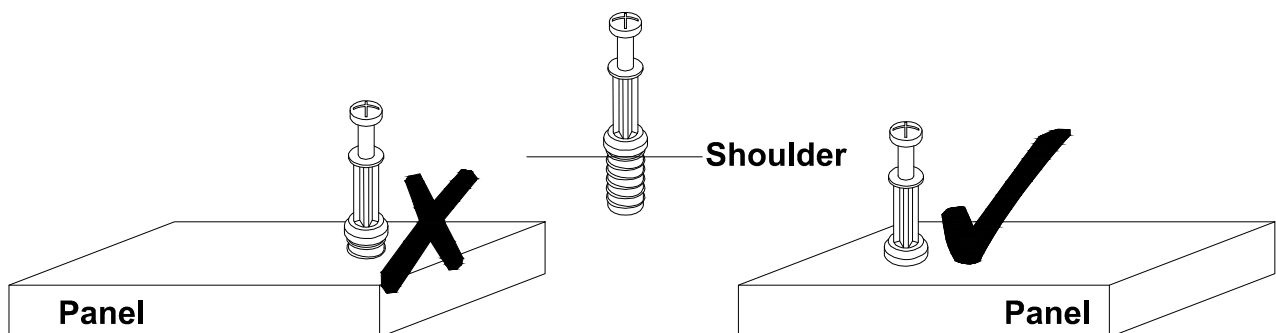


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

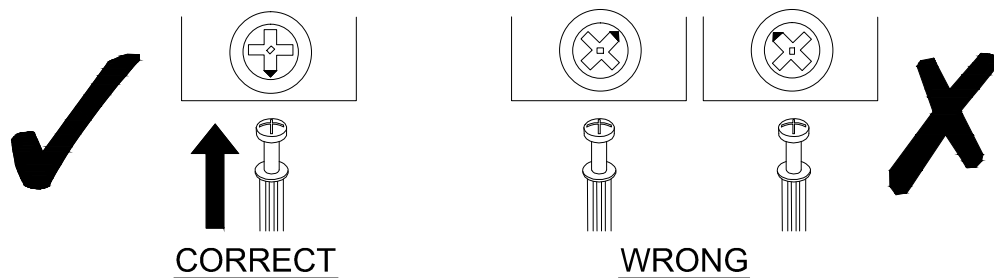


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

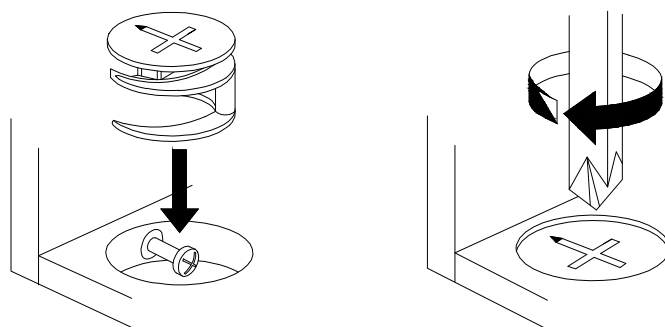

Turn cam lock clockwise to tighten.

Product structure





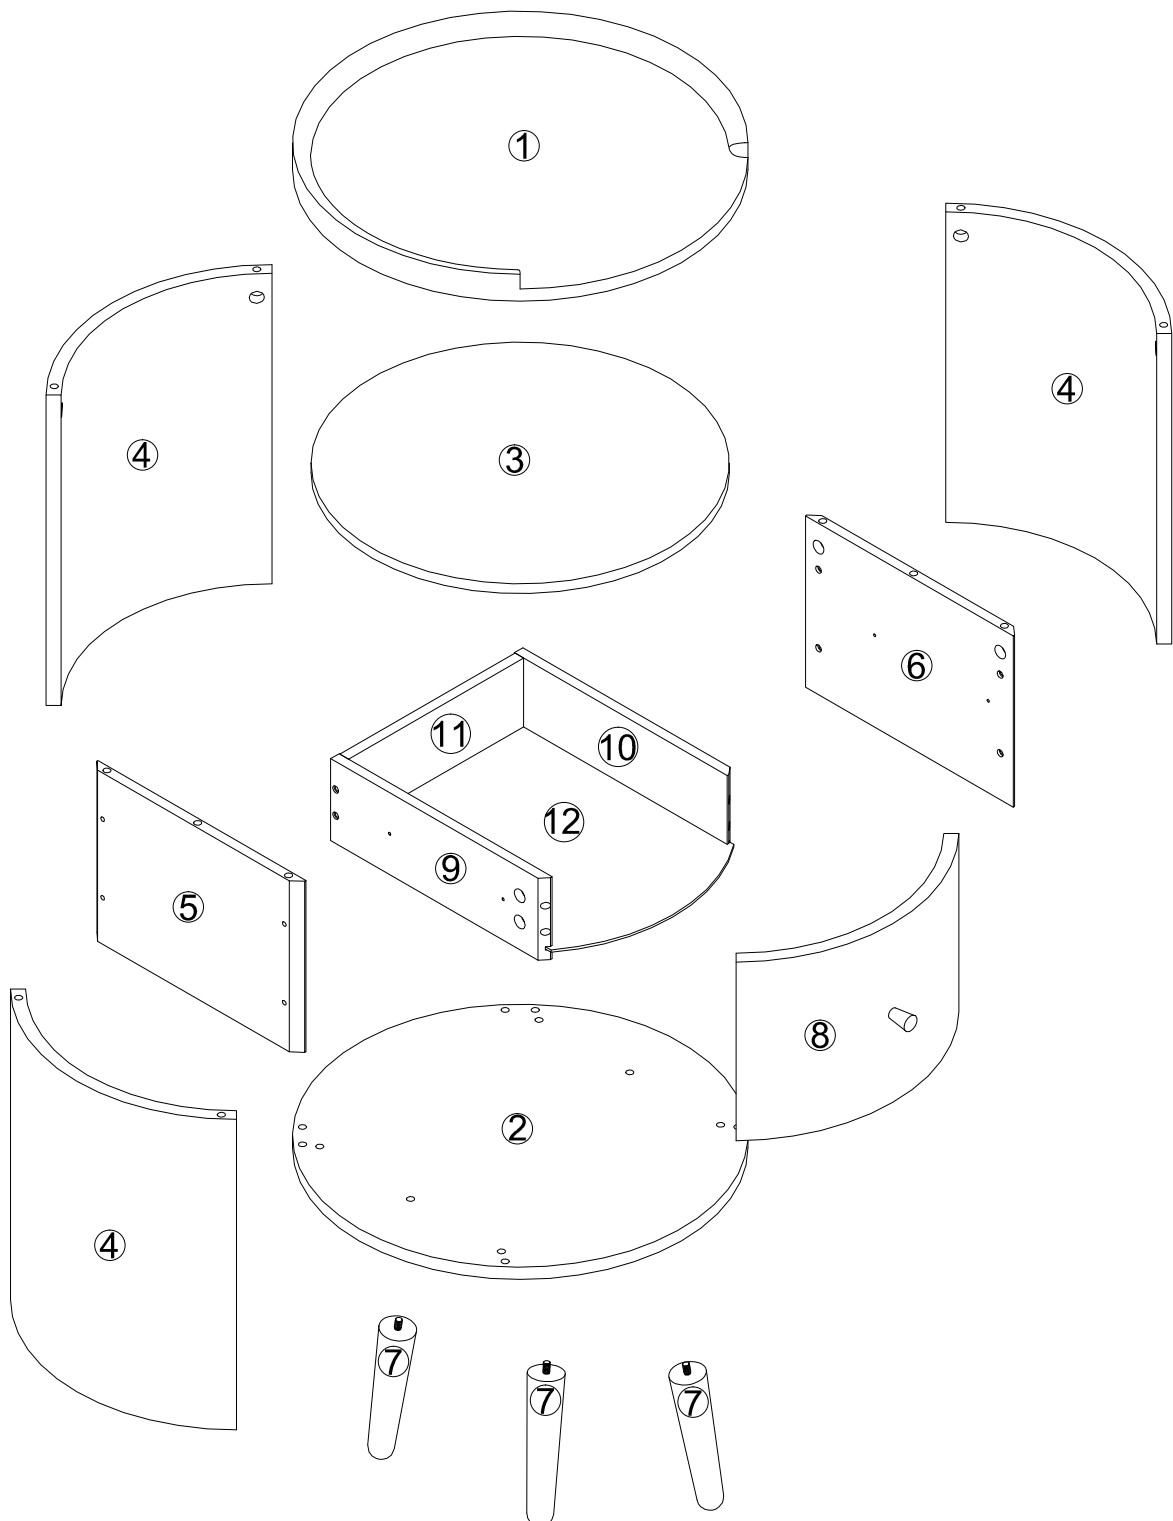


“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”

Part List




“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”

No. A Quantity: 14 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity: 14 Pcs Cam φ15 	No. C Quantity: 14 Pcs Sticker Ø20 	No. D Quantity: 4 Pcs Dowel 8*30mm 
No. E Quantity: 1 Sets Drawer Slider 10" 	No. F Quantity: 20 Pcs Screw M3.5*12mm 	No. G Quantity: 12 Pcs Screw M4*30mm 	No. H Quantity: 10 Pcs Screw M6*40mm 
No. I Quantity: 3 Pcs 	No. J Quantity: 1 Pc Handle 	No. K Quantity: 1 Pc Screw M4*20mm 	No. L Quantity: 1 Pc Allen Key 4# 


Preparatory steps for installing drawer slides;

please first locate and disassemble the drawer slide 'E' component for subsequent installation, Please follow the instructions below for disassembly.


How to separate the drawer slider:

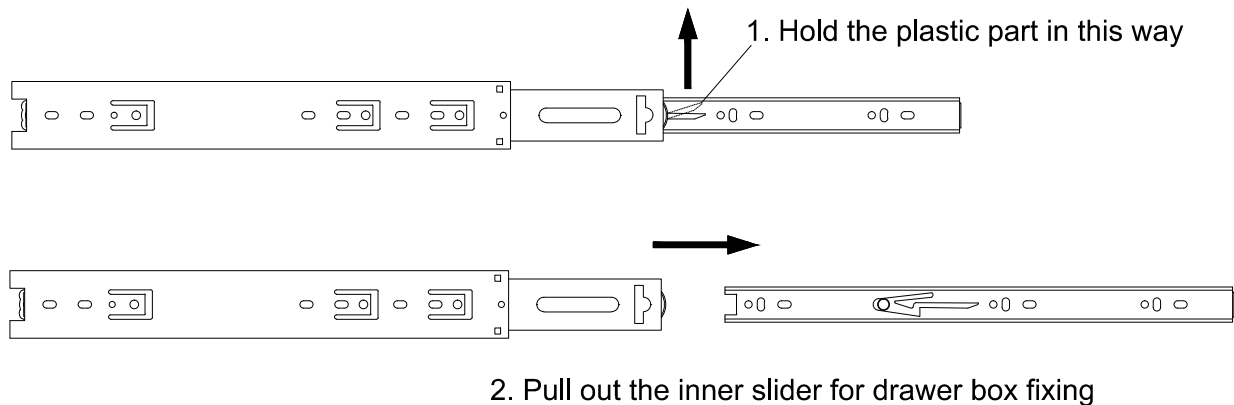

Drawer Front Alignment

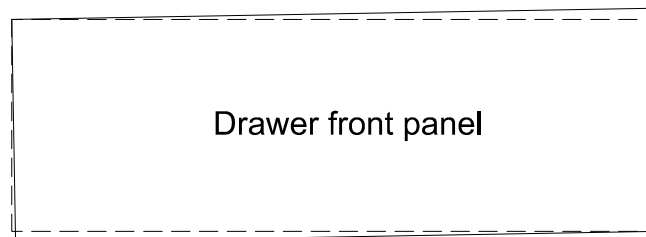


If the drawer front panel is NOT level after being assembled, then...

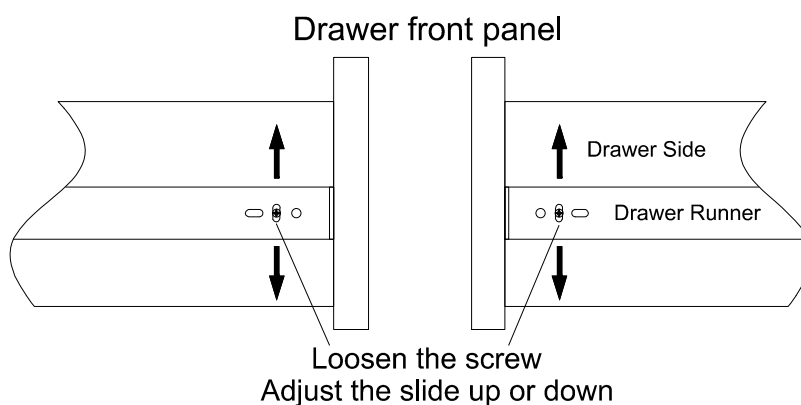


Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.

STEP 1

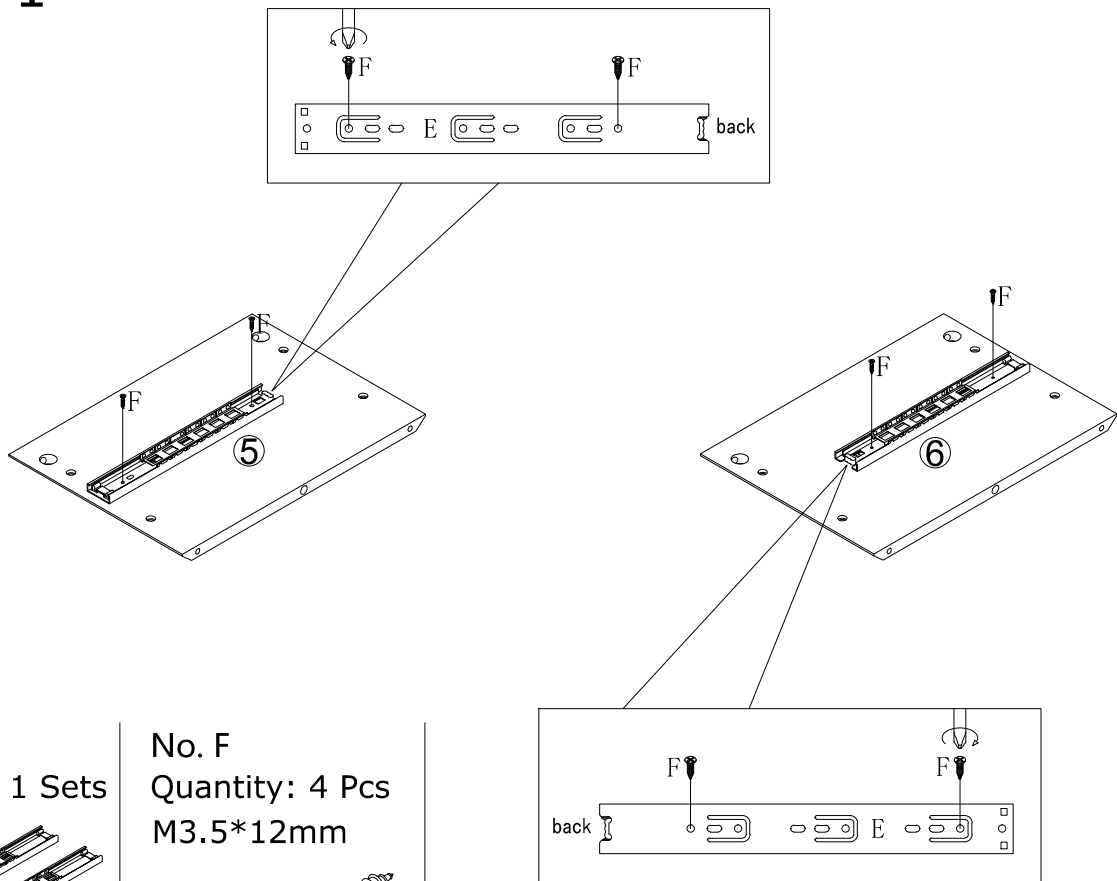


No. E
Quantity: 1 Sets
10"

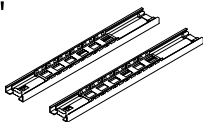

No. F
Quantity: 4 Pcs
M3.5*12mm




STEP 2

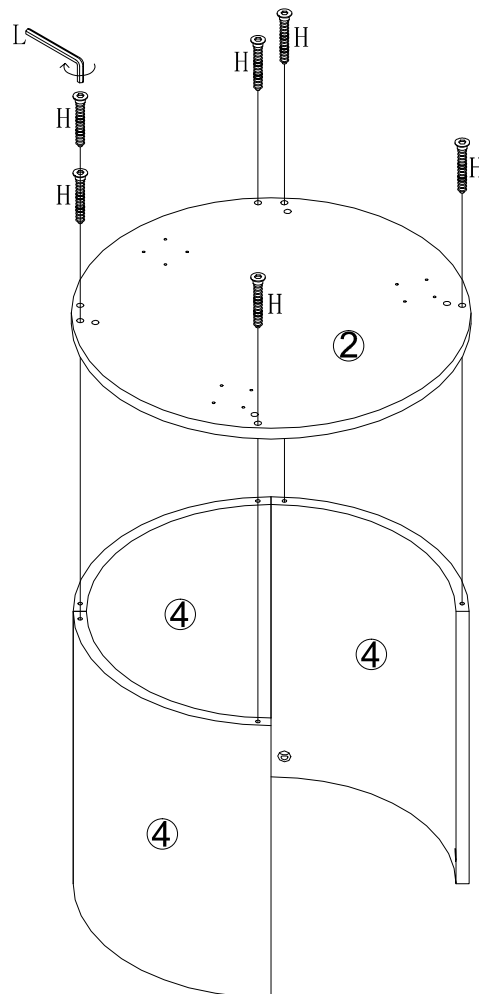

No. H
Quantity: 6 Pcs
M6*40mm




No. L
Quantity: 1 Pc
4#



STEP 3



No. D
Quantity: 2 Pcs
8*30mm



No. H
Quantity: 4 Pcs
M6*40mm



No. L
Quantity: 1 Pc
4#

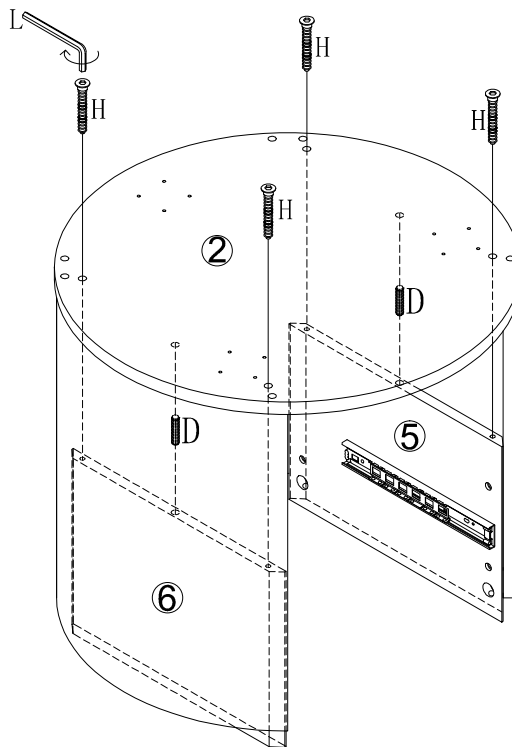



STEP 4

When installing hardware labeled 'I', be sure to pay attention to the orientation; the side with the lower angled surface should face outward.


No. F
Quantity: 12 Pcs
M3.5*12mm





No. I
Quantity: 3 Pcs

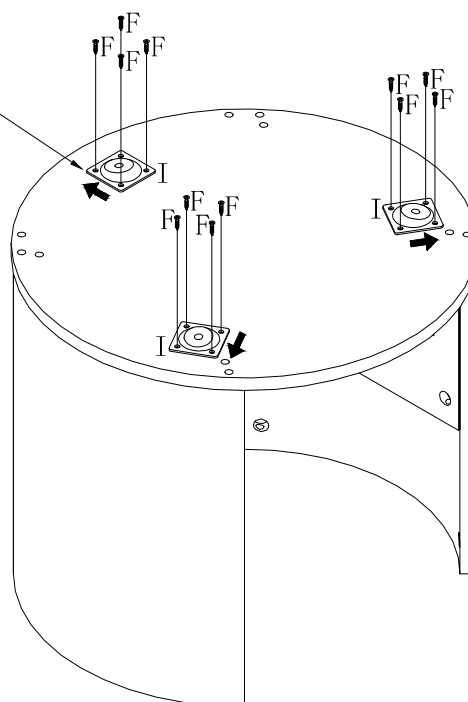


STEP 5

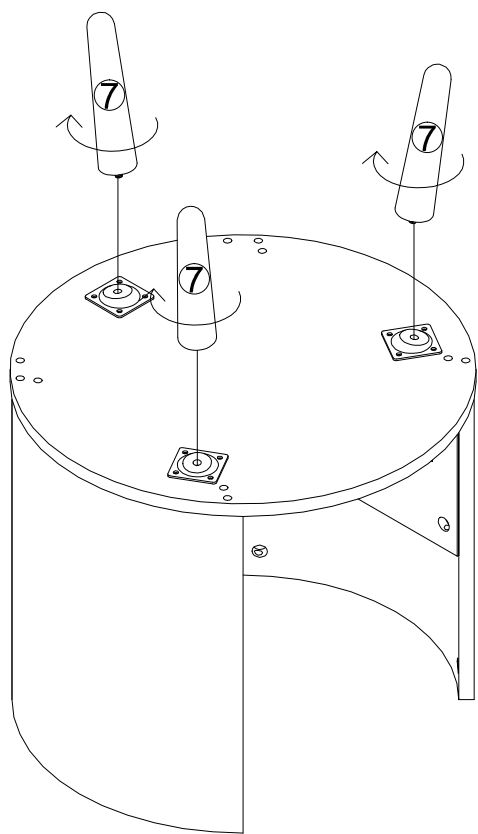

STEP 6

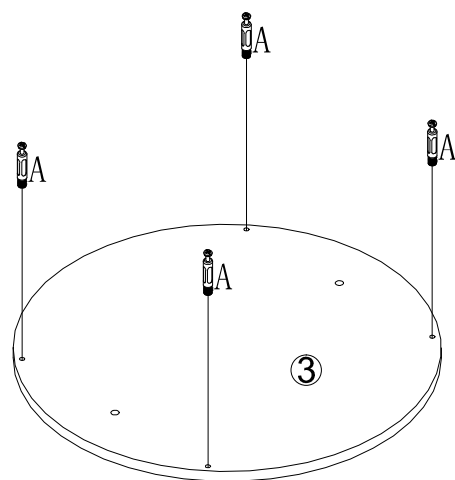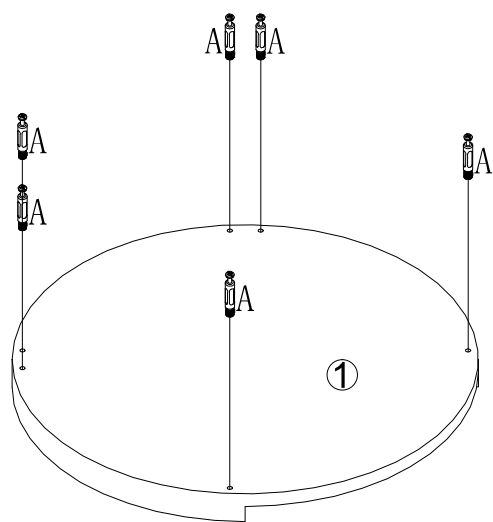

No. A
Quantity: 10 Pcs
8*28 mm



STEP 7



No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm

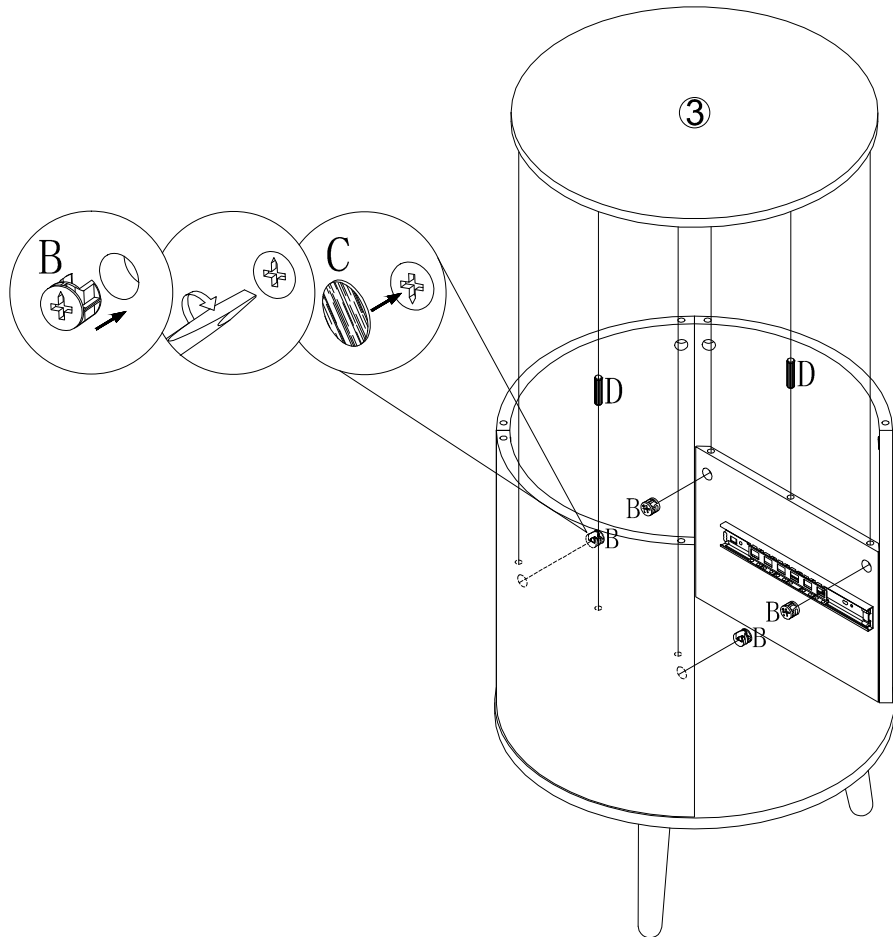


STEP 8


No. B
Quantity: 6 Pcs
Ø15




No. C
Quantity: 6 Pcs
Ø20

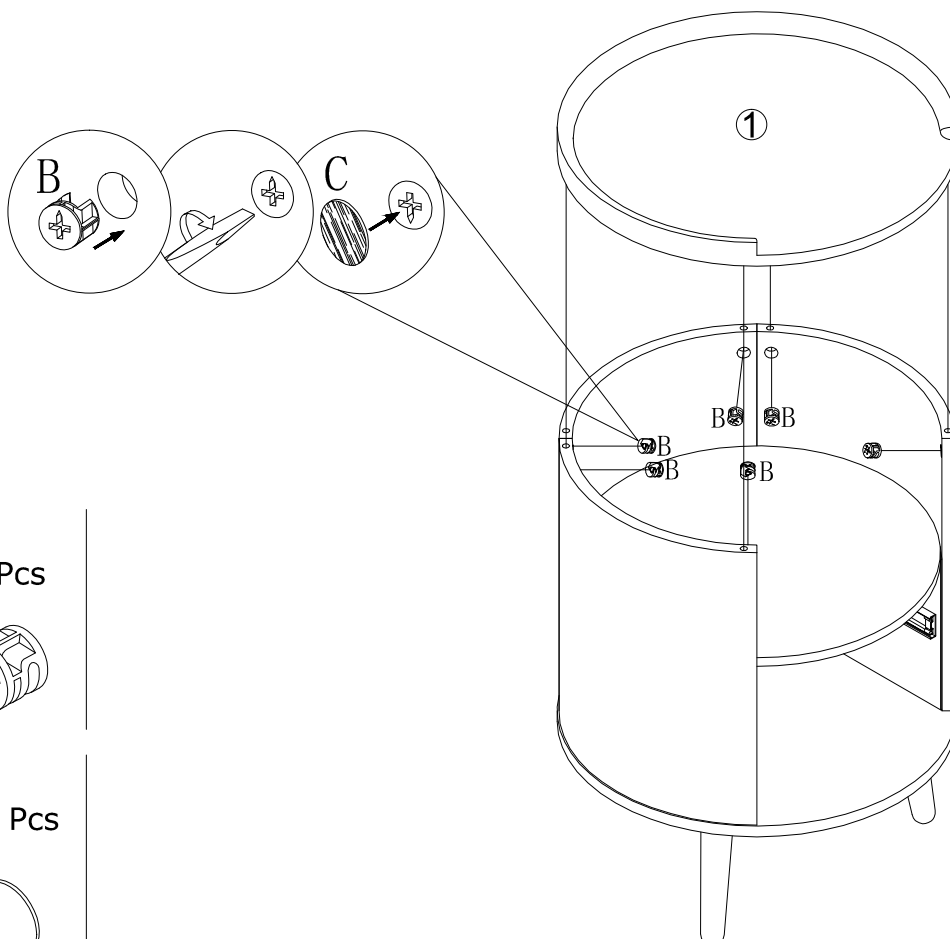


STEP 9

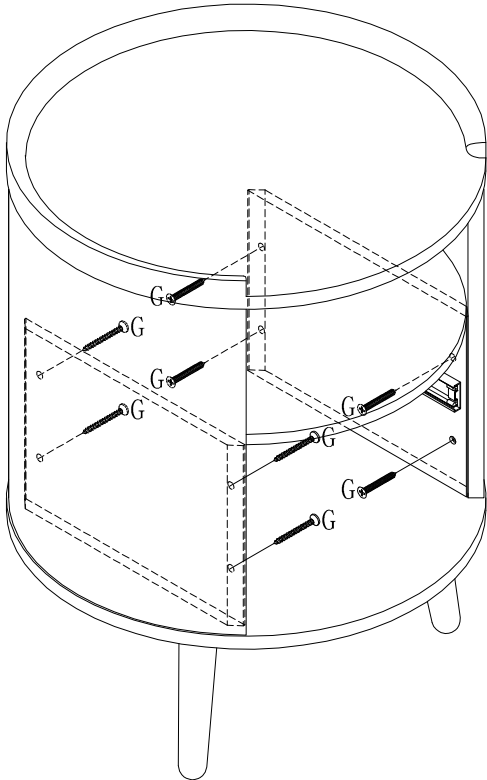


No. G
Quantity: 8 Pcs
M4*30mm



STEP 10

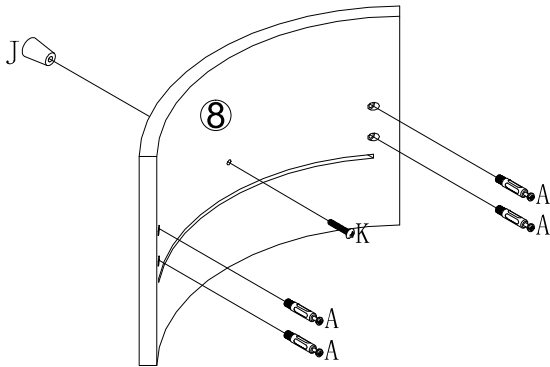

No. A
Quantity: 4 Pcs
8*28 mm




No. J
Quantity: 1 Pc




No. K
Quantity: 1 Pc
M4*20mm




STEP 11

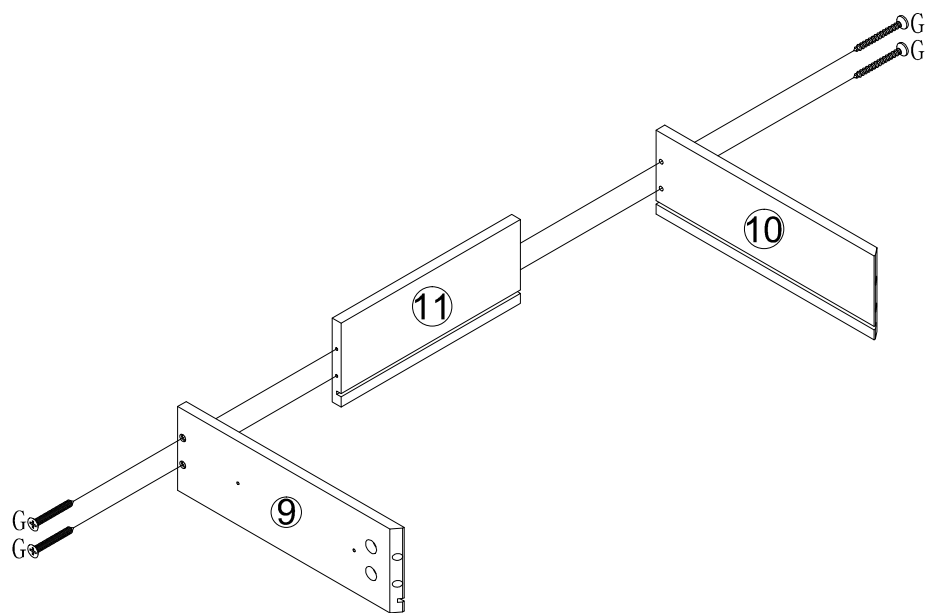


No. G
Quantity: 4 Pcs
M4*30mm



STEP 12

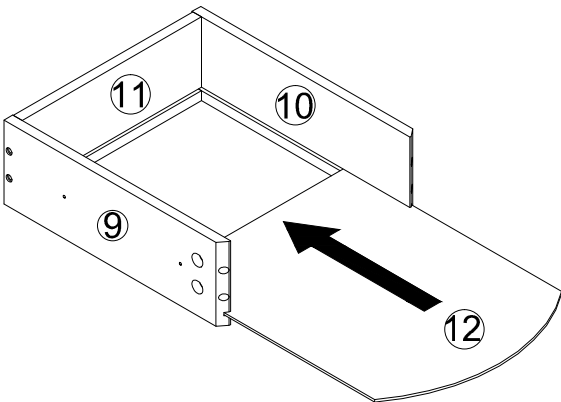

STEP 13

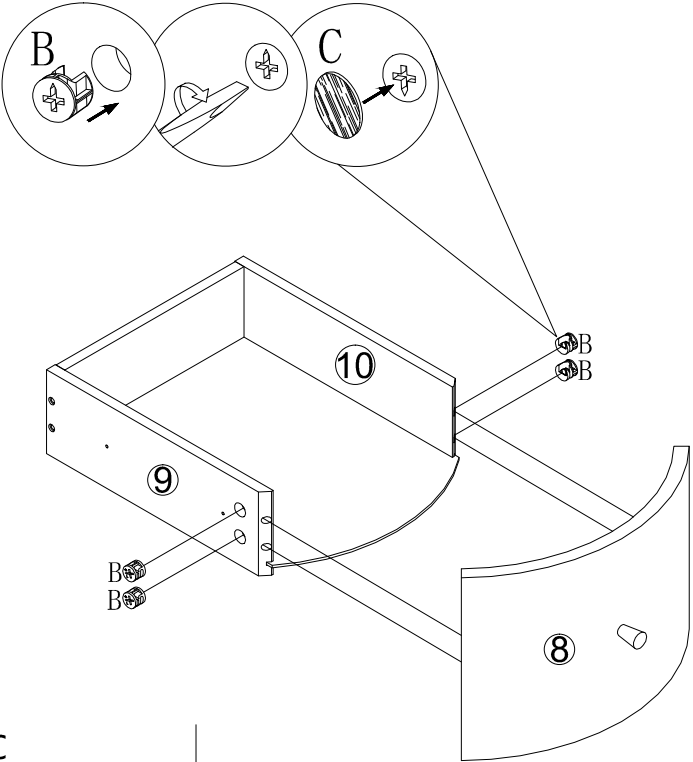


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20



STEP 14

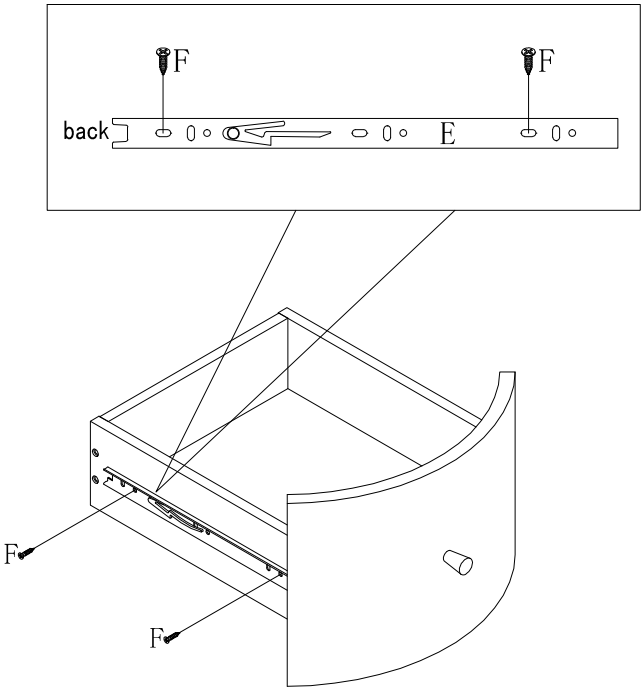


No. E
Quantity: 1 Sets
10"



No. F
Quantity: 4 Pcs
M3.5*12mm



STEP 15

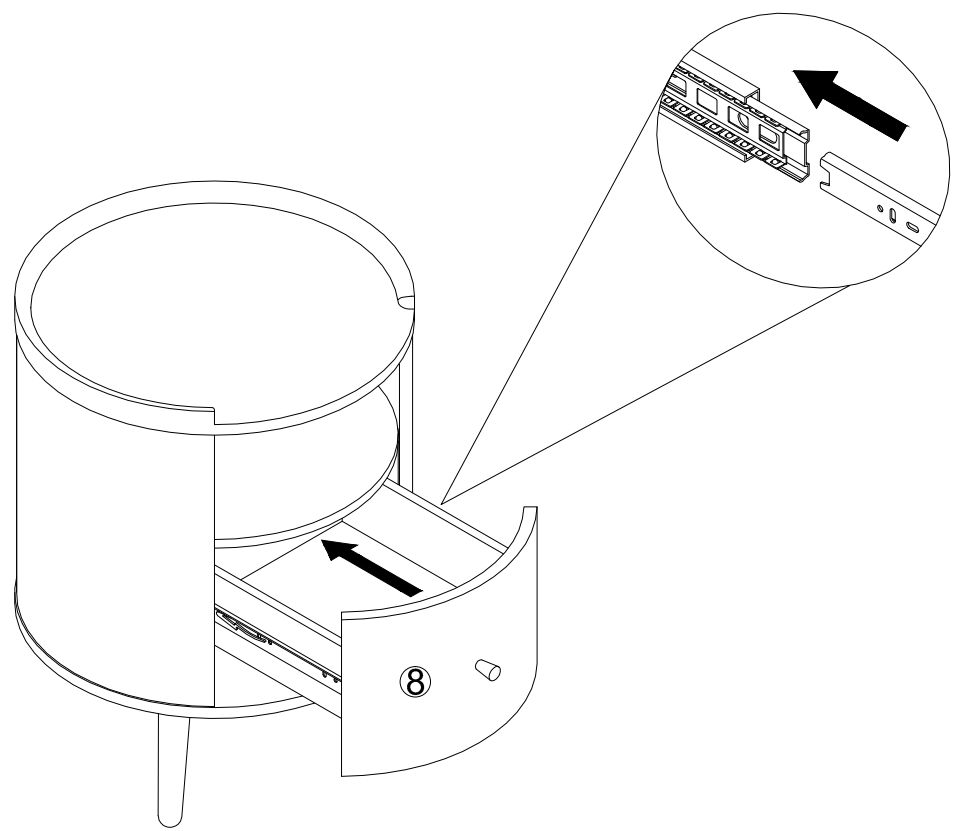

STEP 16

