


ASSEMBLY INSTRUCTIONS

FULL/FULL SIZE BUNK BED

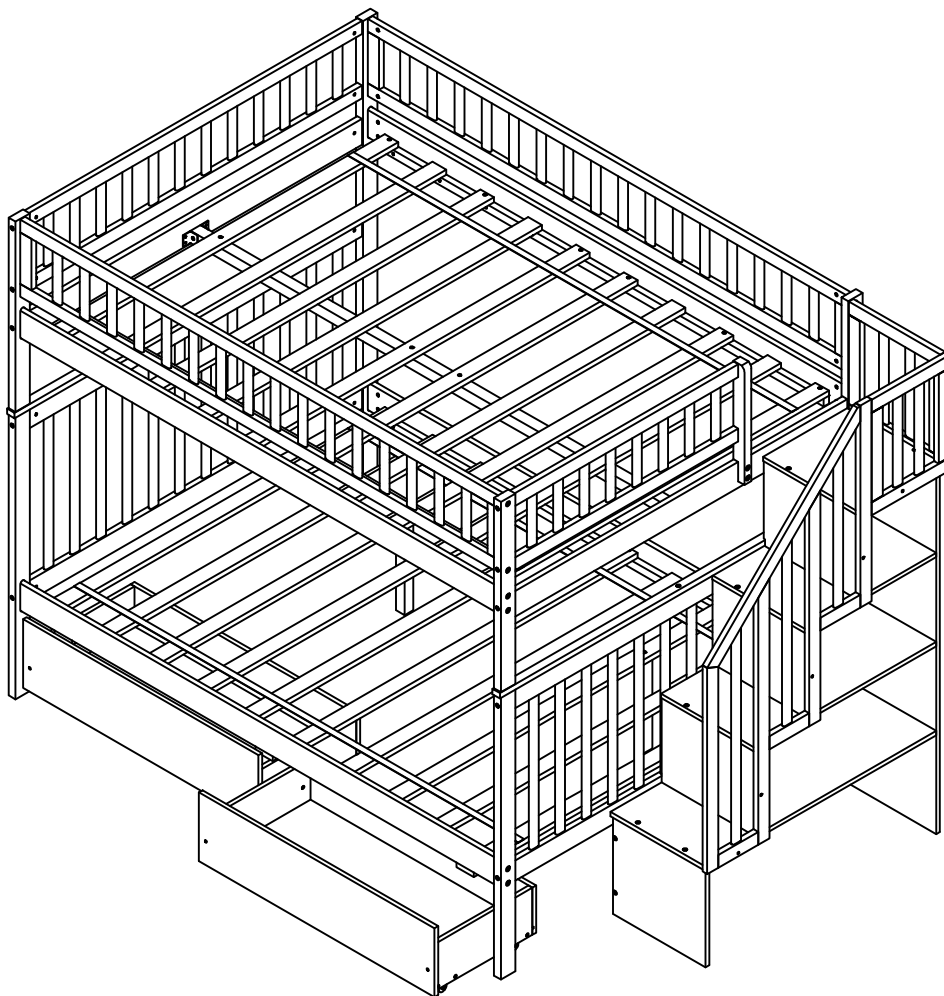

This set is included 3 boxes if don't receive full 3 boxes please contact our customer service team.


PLEASE DO NOT RETURN PRODUCT TO THE STORE.
If you have any problems or concerns, please feel free to contact our customer service department. We will reply to you at the first time.



E-Mail: csr@merax.com
Tel: 626-912-8886 Ext.100










WF193866/WF193867/WF193868

Detail View










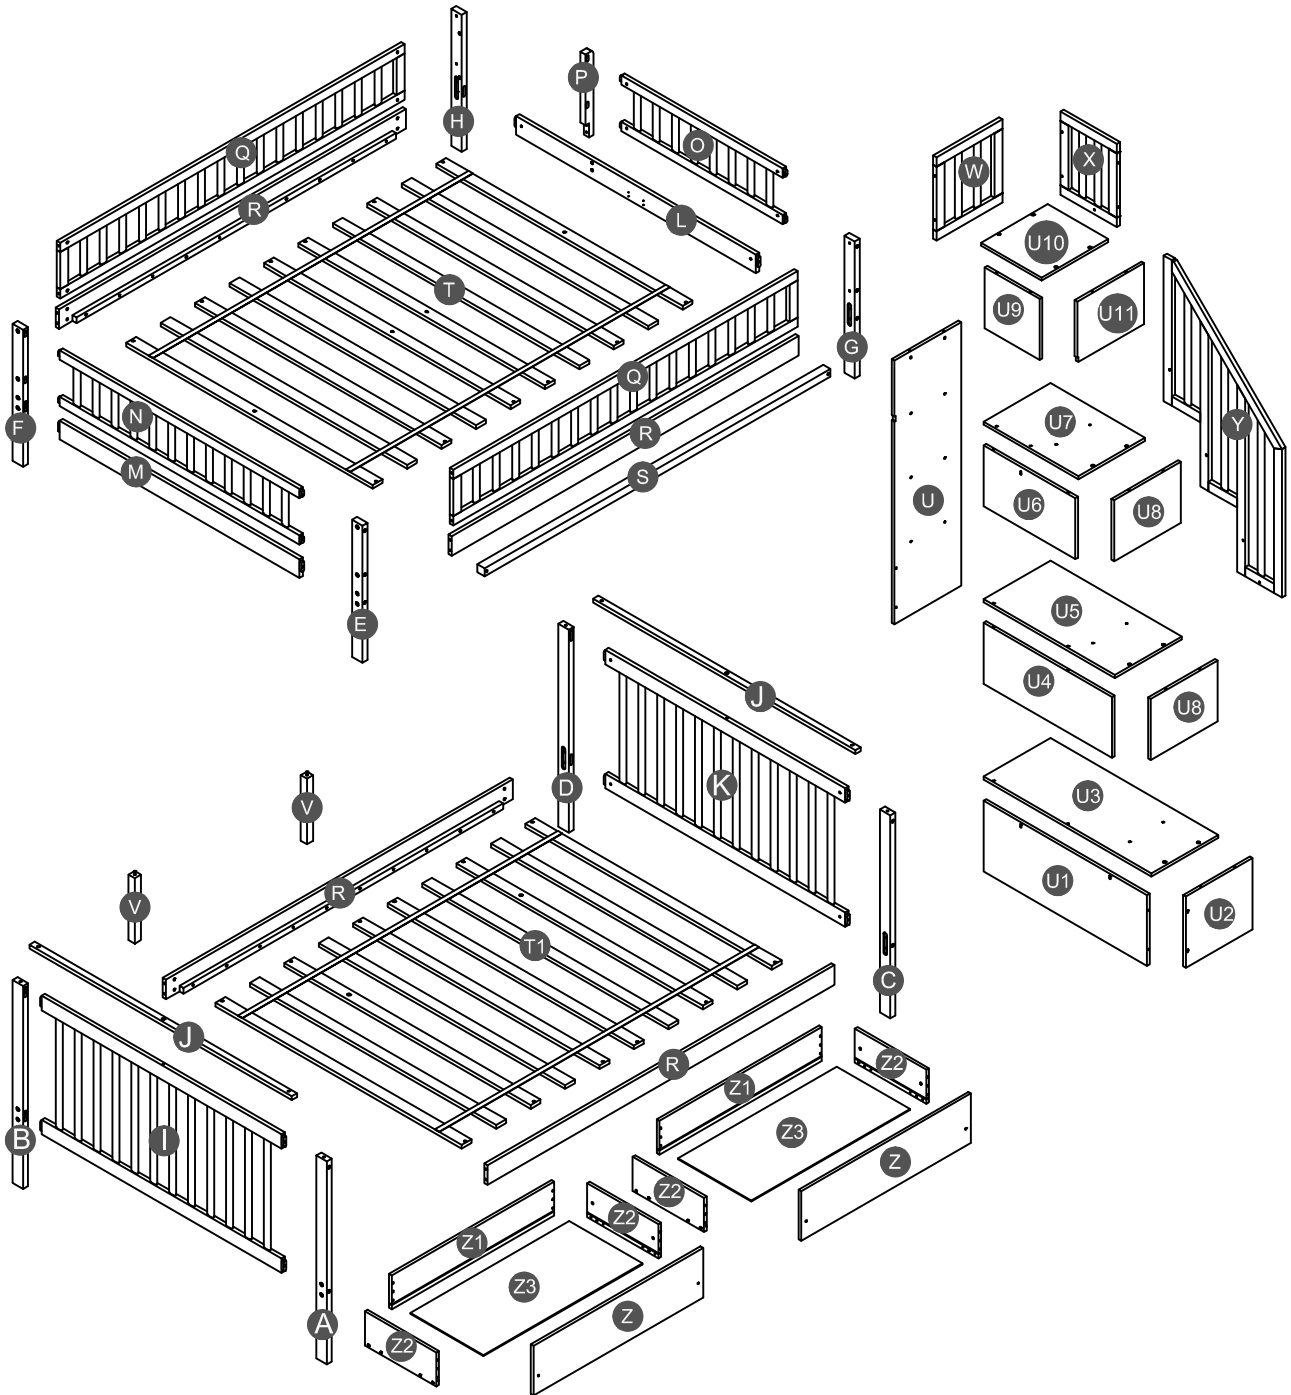


Part List

Hardware List WF193866


A		B		C	
Lower leg(Left front) - 1pc		Lower leg (Right back)- 1pc		Lower leg(Right front) - 1pc	
D		E		F	
Lower leg (Left back)- 1pc		Upper leg(Left front) - 1pc		Upper leg(Right back) - 1pc	
G		H		J	
Upper leg (Right front)- 1pc		Upper leg (Left back)- 1pc		Cap for lower HB&FB-2pcs	
Q		R		N	
Upper front & back side rail-2pcs		Lower&upper side rail - 4pcs		Upper HB - 1pc	
O		S			
Upper FB - 1pc		Slat support - 1pc			

WF193867

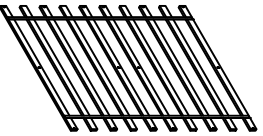U		U1		U2	
Back panel - 1pc		Lower left side panel - 1pc		Lower front panel - 1pc	
U3		U4		U5	
Lower step ladder panel - 1pc		Lower left side panel - 1pc		Lower step ladder panel - 1pc	
U6		U7		U8	
Lower left side panel - 1pc		Lower step ladder panel - 1pc		Lower front panel - 2pcs	
U9		U10		U11	
Upper left side panel - 1pc		Upper step ladder panel - 1pc		Upper front panel - 1pc	
T		Z		Z1	
Upper Slat - 10pcs		Drawer front - 2pcs		Drawer front - 2pcs	

Part List


Z2



Drawer (Left/Right)- 4pcs


WF193868

I

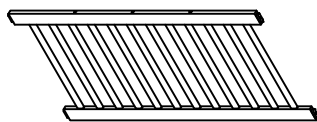


Lower HB - 1pc

K

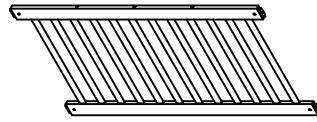


Lower FB - 1pc

L




Horizontal upper bar FB-1pc

M




Horizontal upper bar HB-1pc

P




Support guard rail - 1pc

T1

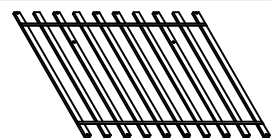


Lower Slat - (10pcs)

V



Lower slat support- 2pcs

W




Upper guard back - 1pc

X



Upper guard side - 1pc

Y











Guard side - 1pc

Z3





Drawer bottom - 2pcs

Hardware List

1	 Ø8*30mm Wood dowel (28pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (18pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (24pcs)
4	 (Ø12)1/4"*70mm Hex-Head bolts (2pcs)	5	 (Ø12)1/4"*60mm Hex-Head bolts (45pcs)	6	 (Ø12)1/4"*35mm Hex-Head bolts (2pcs)
7	 (Ø12)1/4"*30mm Hex-Head bolts (3pcs)	8	 1/4"*15 (9.5mm) Horizontal-Hole bolts(87pcs)	9	 Ø9*90mm Connecting bar (4pcs)
10	 (Ø12)1/4"*40mm Hex-Head bolts (2pcs)	11	 (1/4")4.5*58mm Allen key (2pcs)	12	 Ø4*30mm Wood screws (50pcs)
13	 Ø1/4"*19*2mm Flat Washer (3pcs)	14	 (Ø12)1/4"*40mm Hex-Head bolts (2pcs)	15	 Ø3.5*15mm Wood screws (8pcs)
16	 100*20*54mm Wheels (8pcs)	17	 116*40*27mm Hooks(2pcs)	18	 Ø10*20mm Wood dowel (8pcs)
19	 (Ø13)1/4" x 9/16" Hex Cap (2pcs)	20	 70*35*19 mm Wood support drawer (3pcs)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

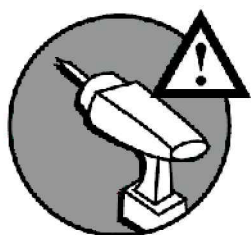


DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

Remark: We recommend you assemble your bed in the flat ground.

STEP 1:

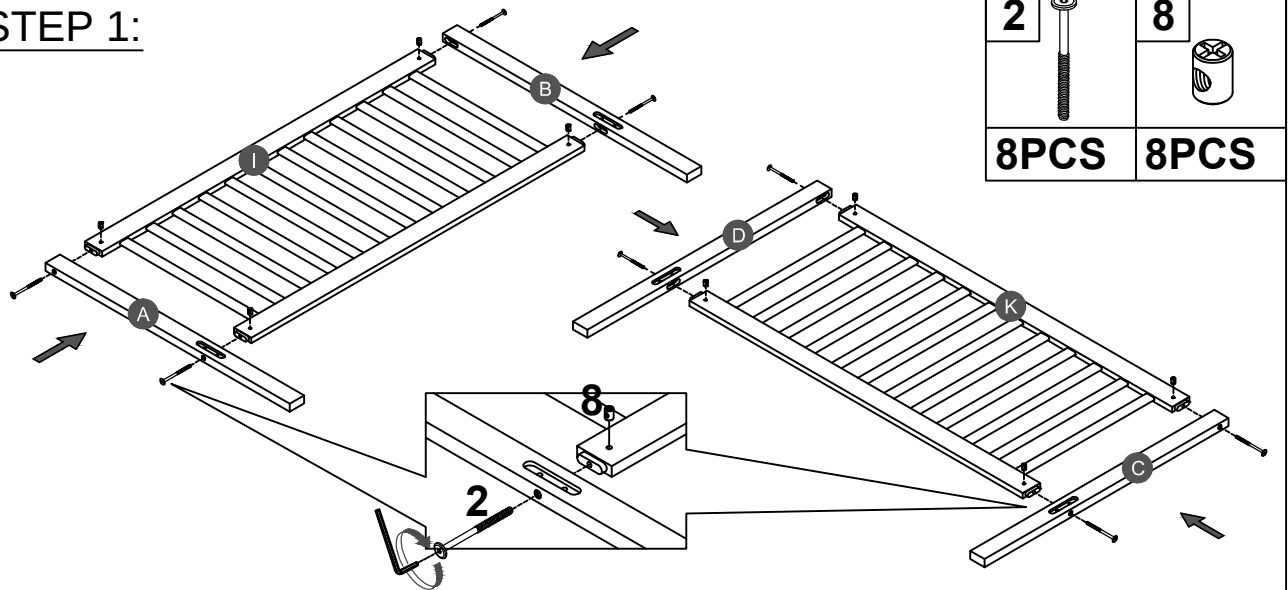


STEP 2:

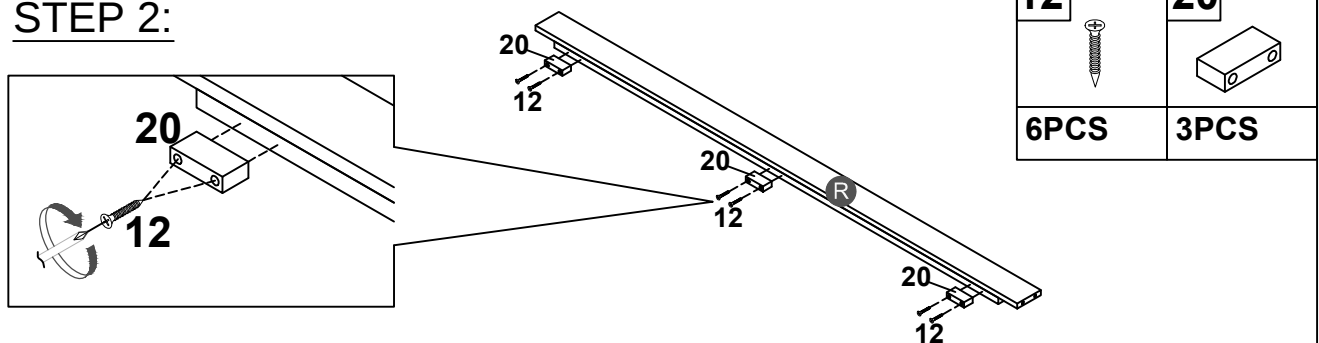


Wood support drawer (20) with lower side rail front (R) by using screw (9).

STEP 3:

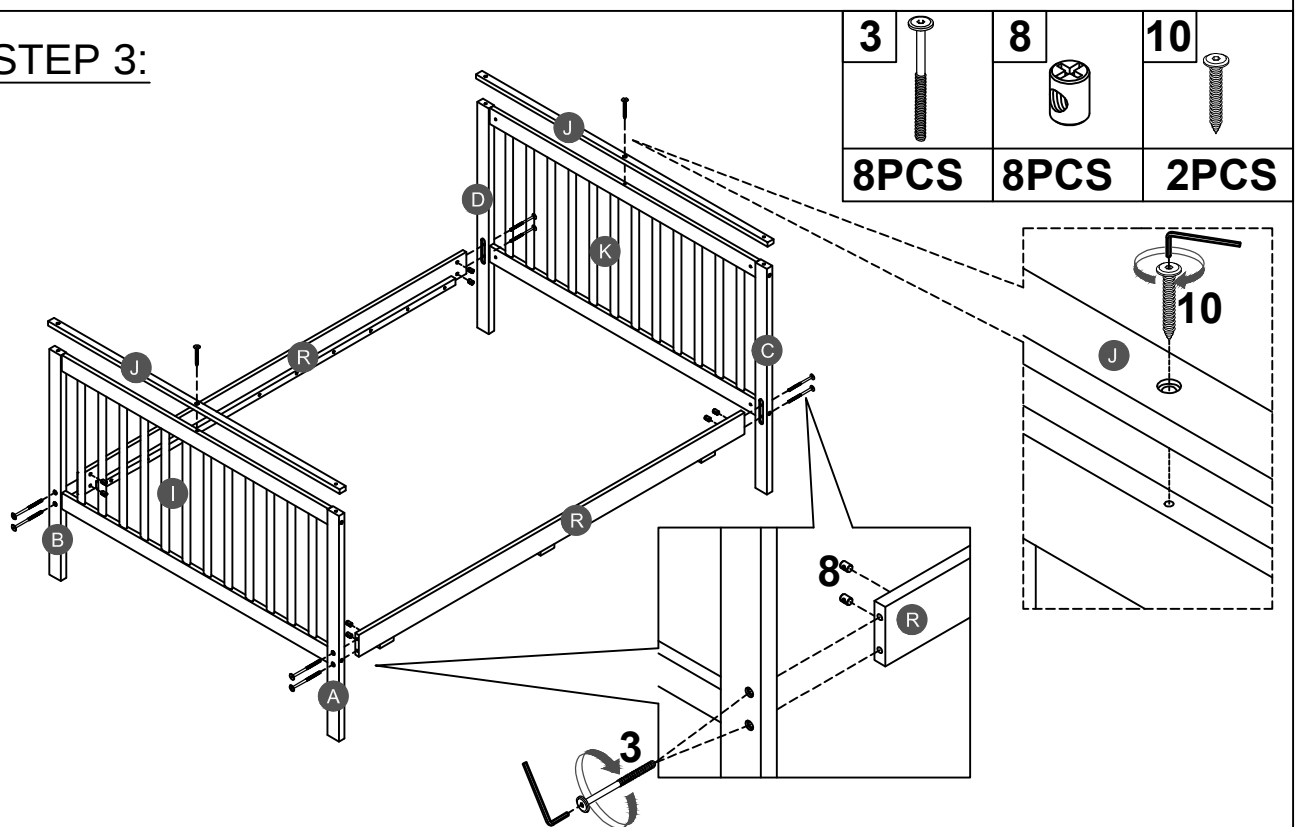


STEP 4:

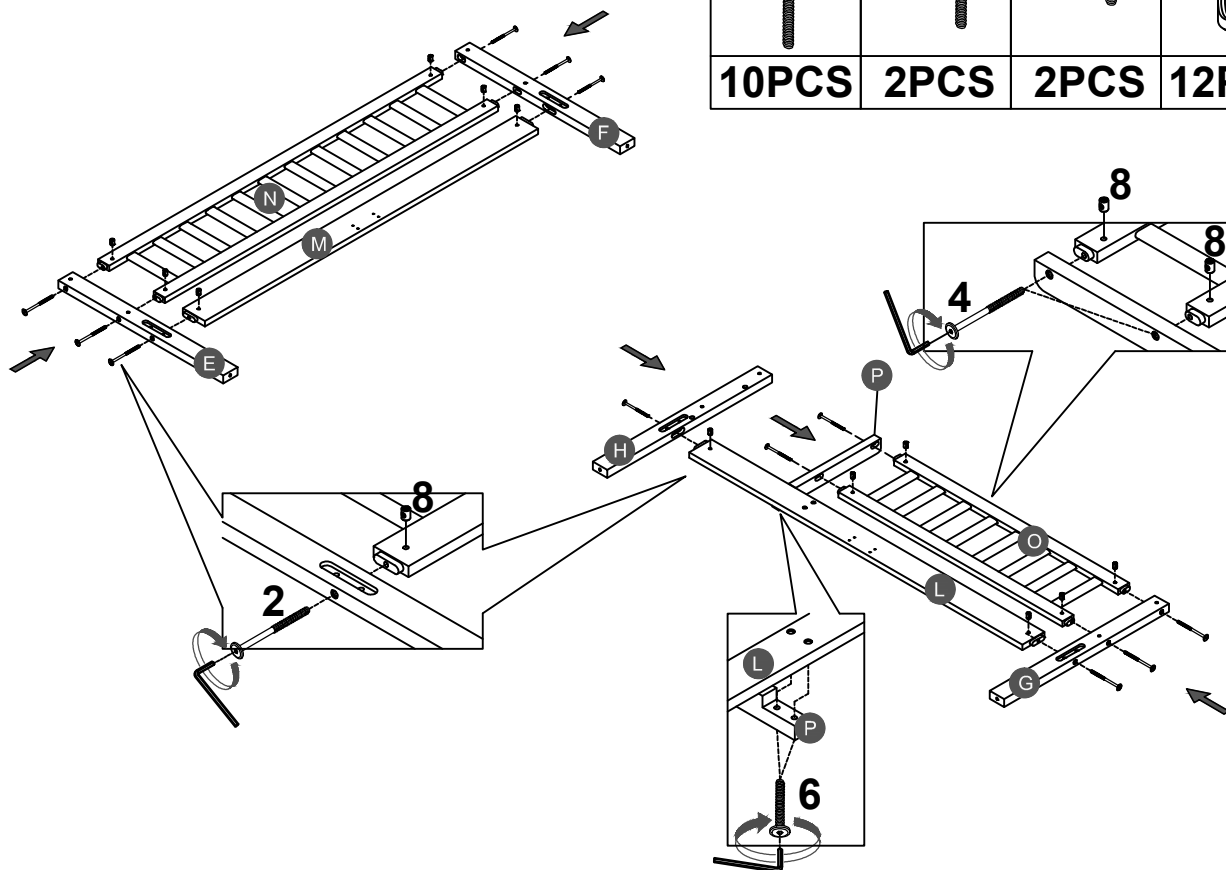

STEP 5:

Balcony don't tighten these yet . Leave them a bit loose to make fitting the lower side rail more easily.

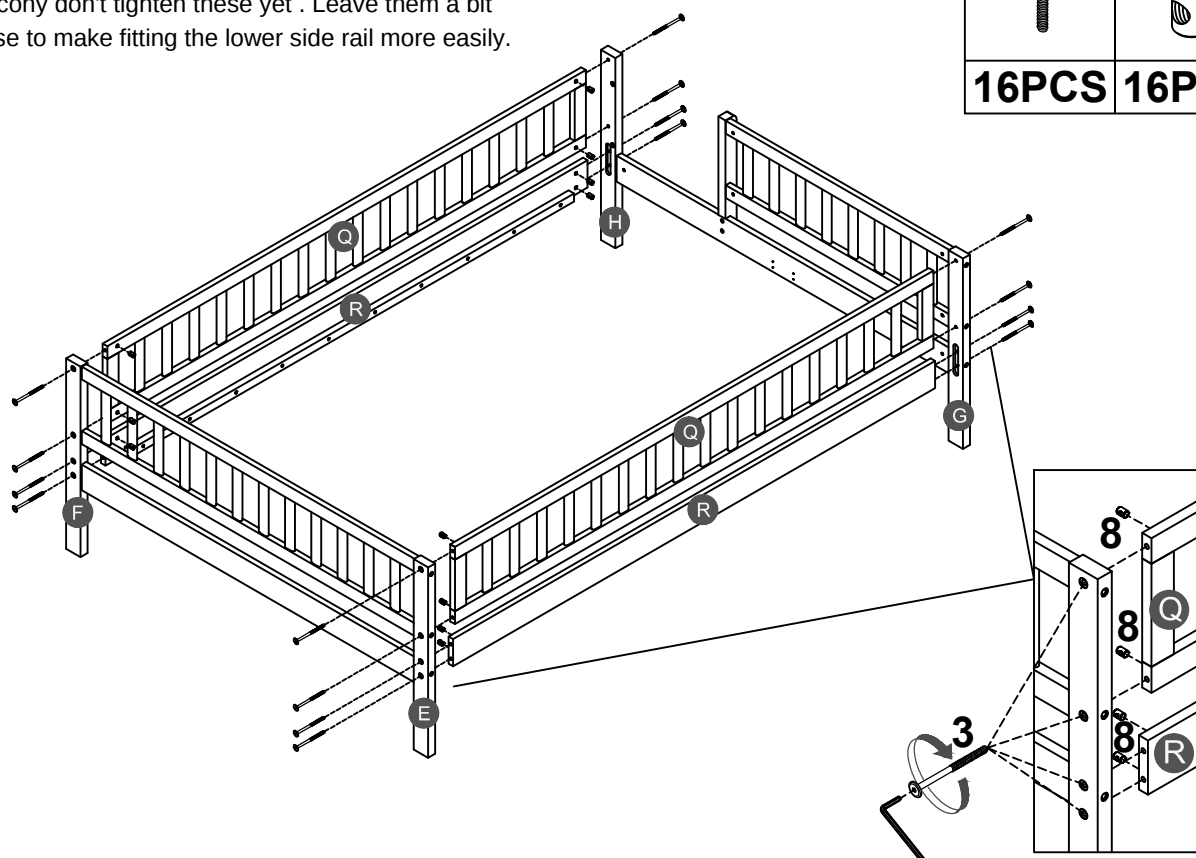


STEP 6:

9



4PCS

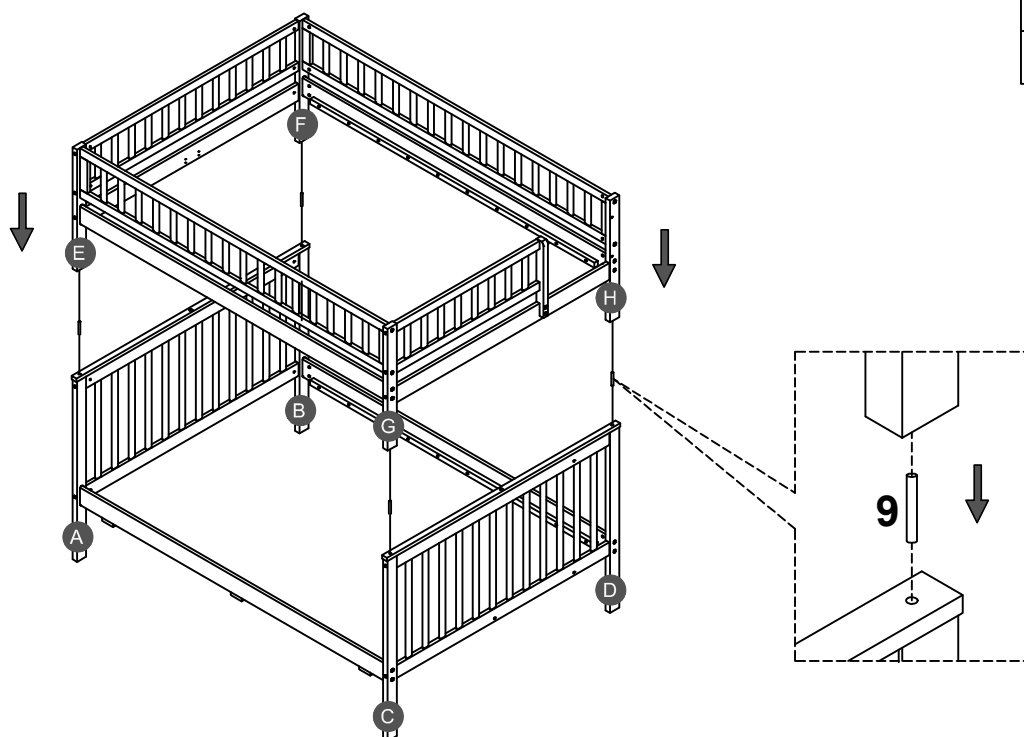

STEP 7:

14




2PCS

15



8PCS

17






2PCS

19




2PCS

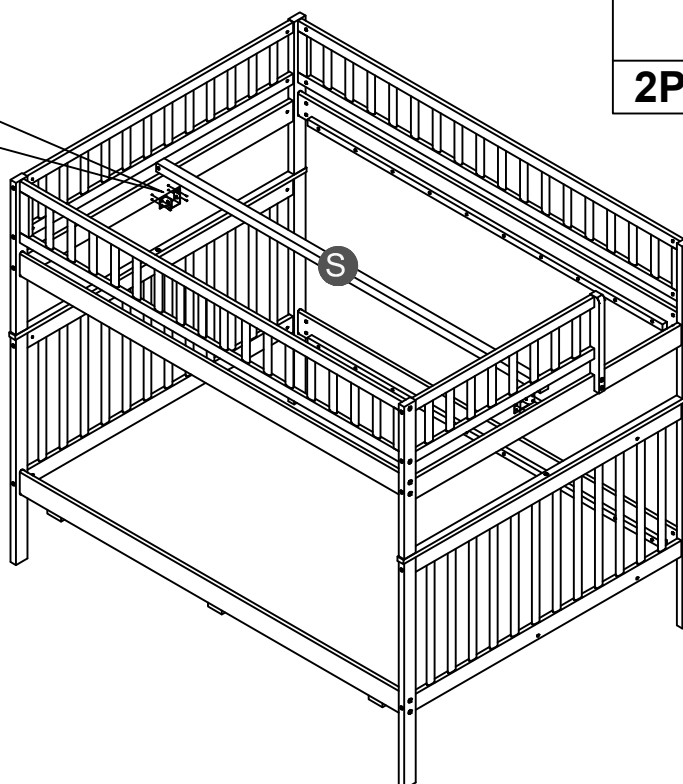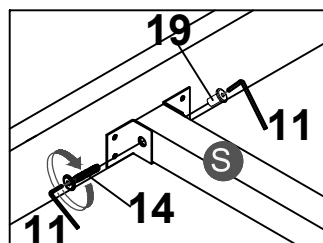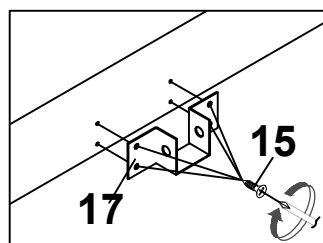


STEP 8:


1	5	8
		
12PCS	26PCS	26PCS

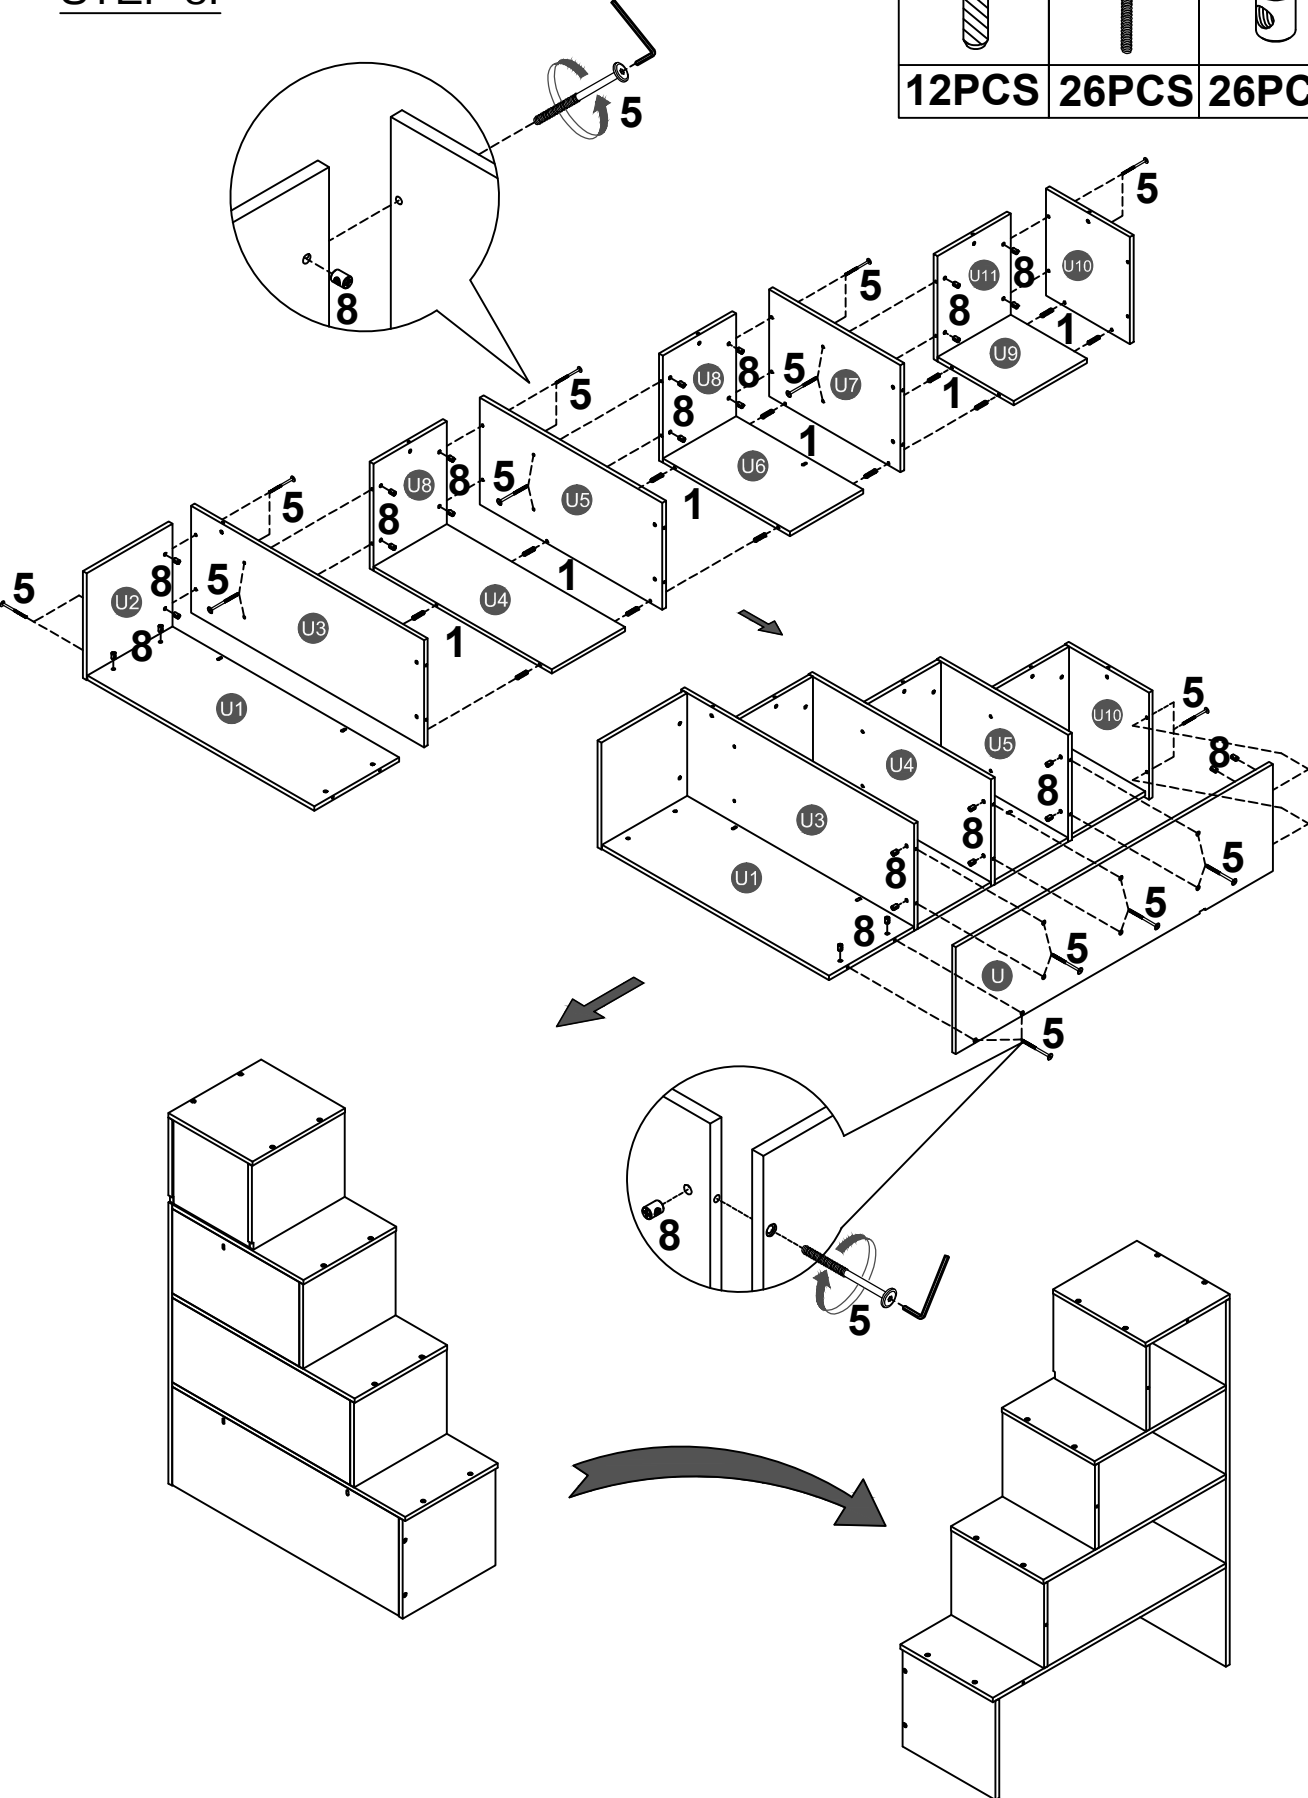


STEP 9:

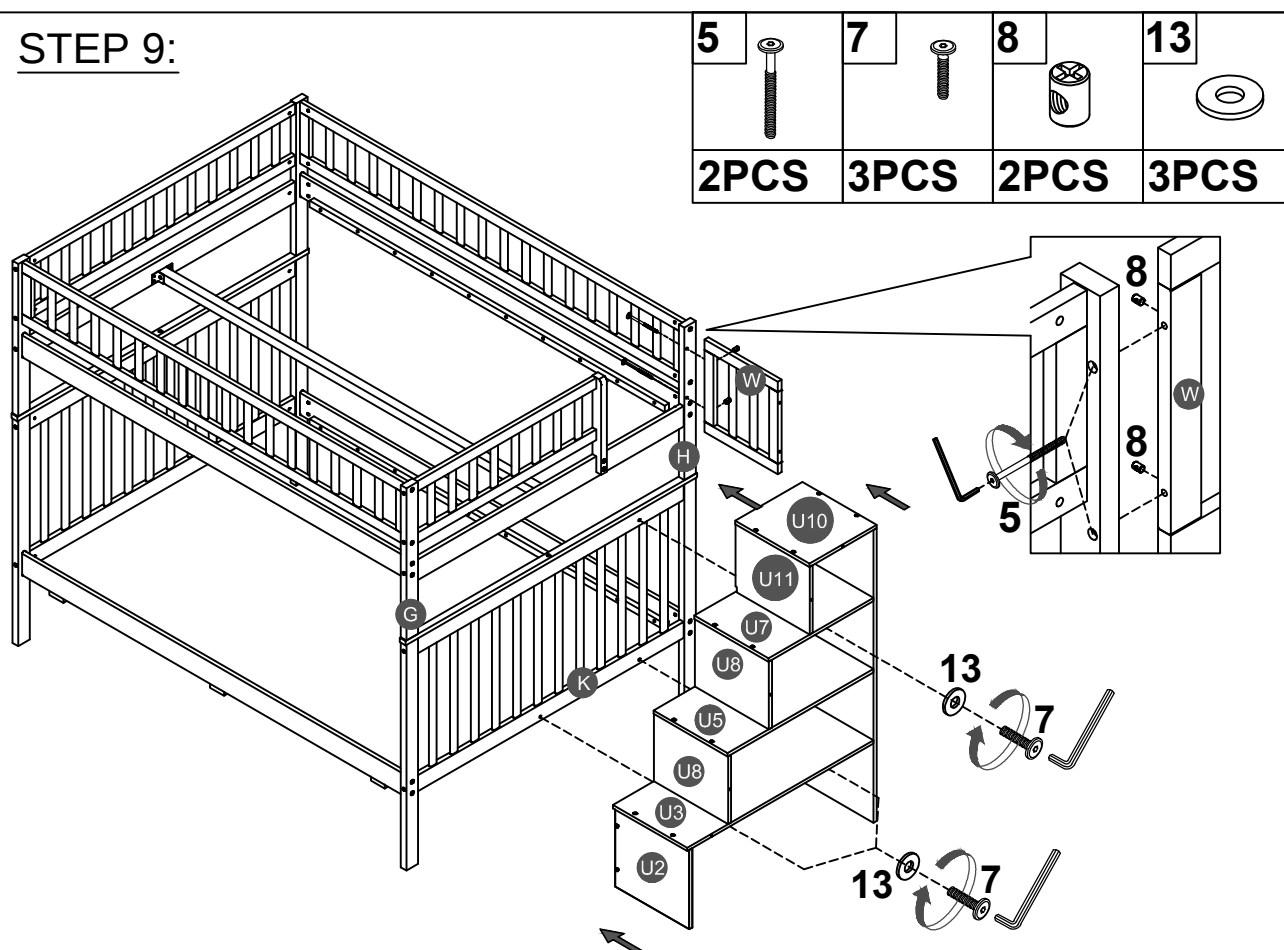


STEP 10:

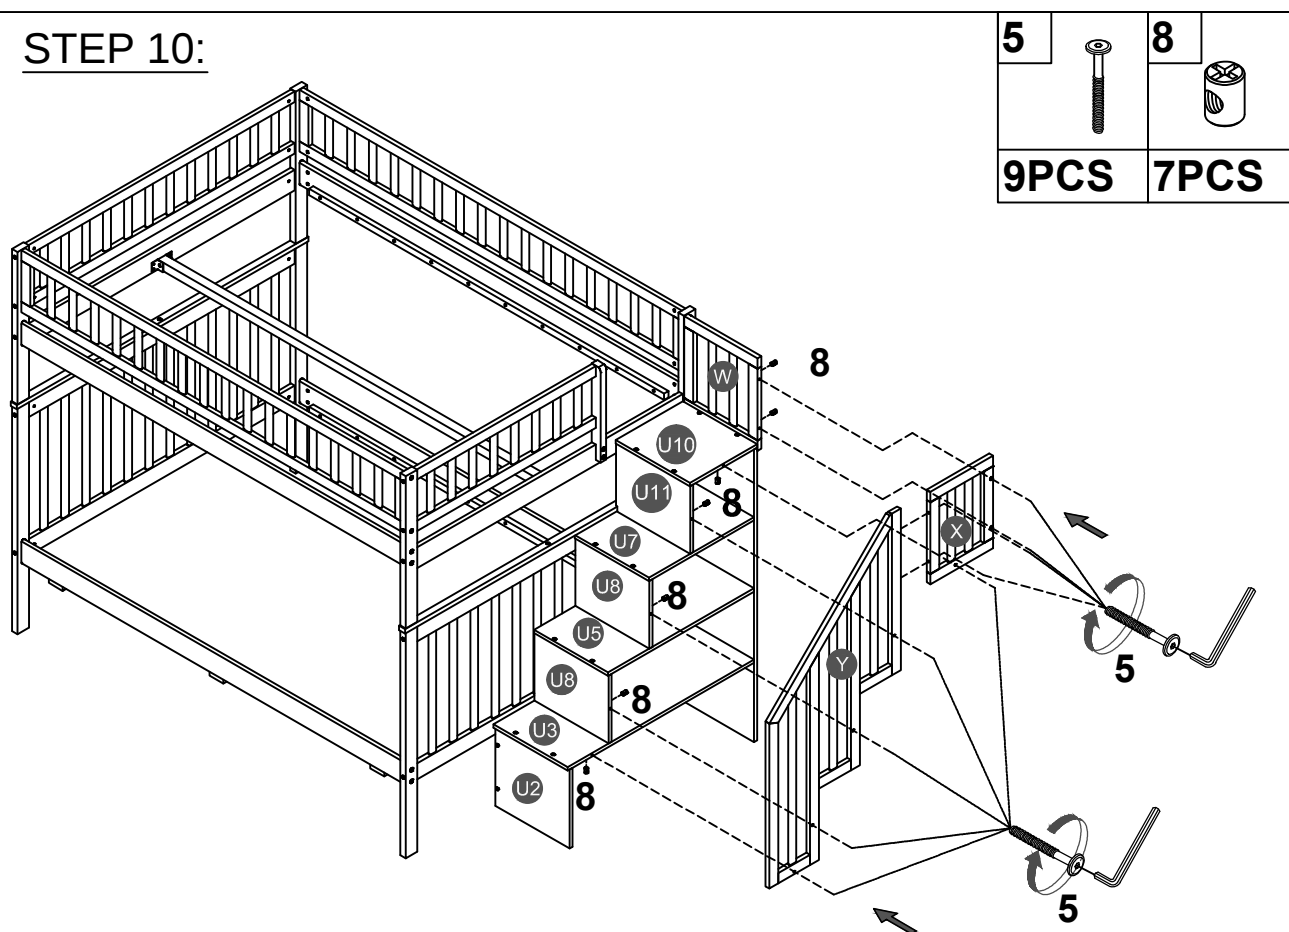

STEP 11:

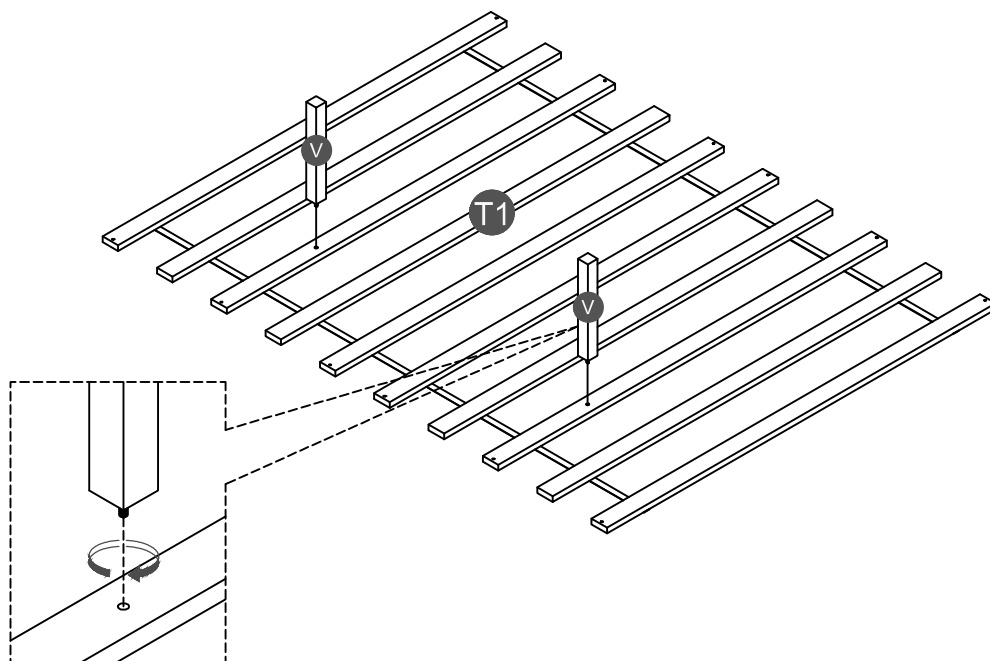

STEP 12:

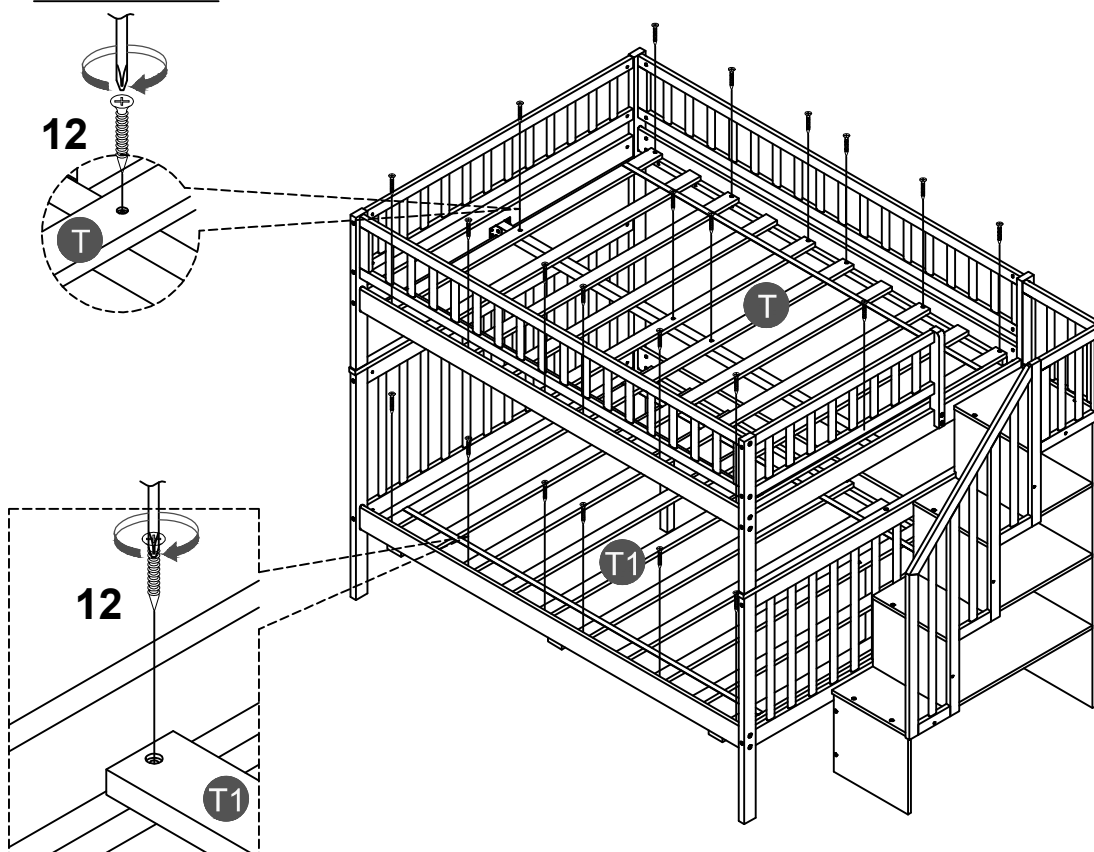


12




28PCS

STEP 13:

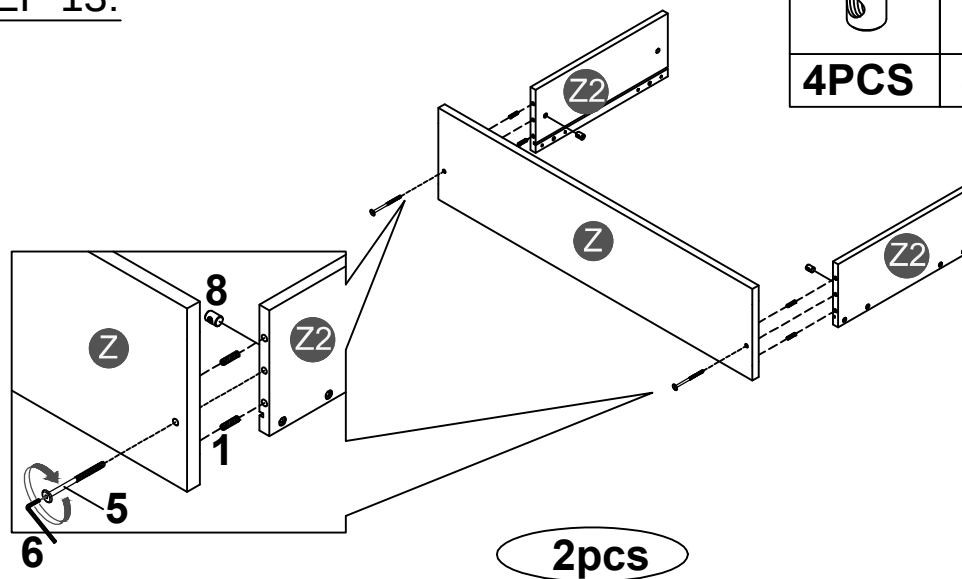


8	1	5
		
4PCS	8PCS	4PCS

STEP 14:

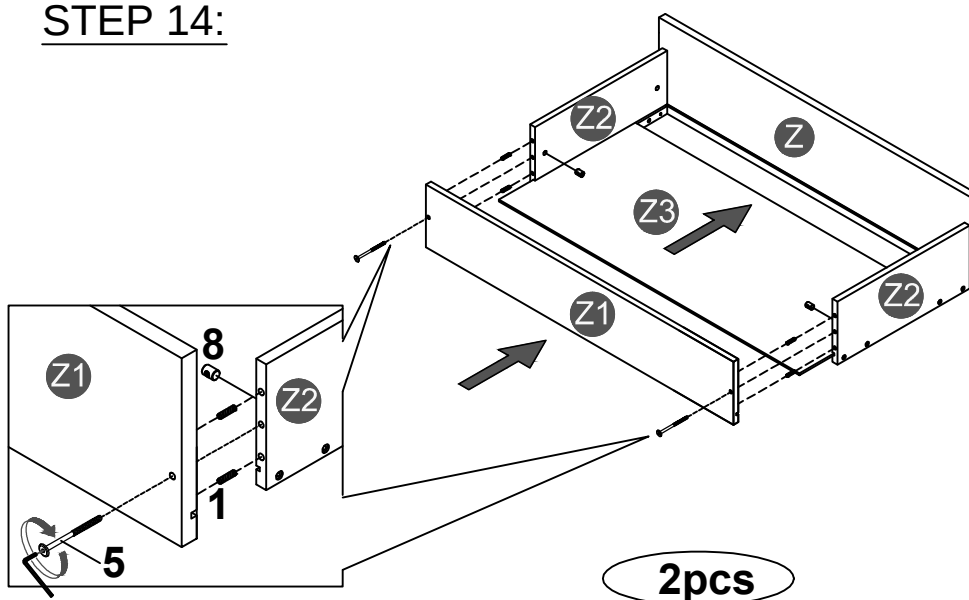


8	1
	
4PCS	8PCS
	5
	
	4PCS

STEP 15:

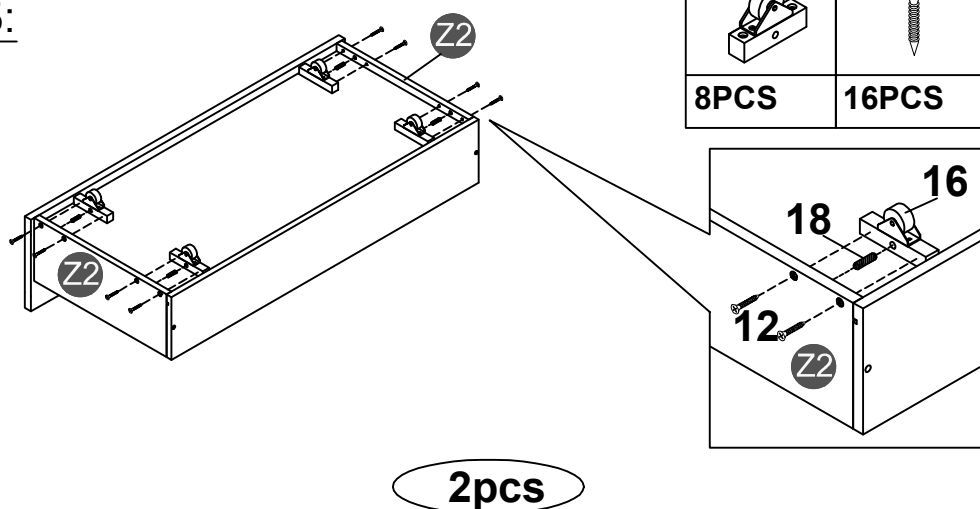

16	12	18
		
8PCS	16PCS	8PCS

STEP 16:

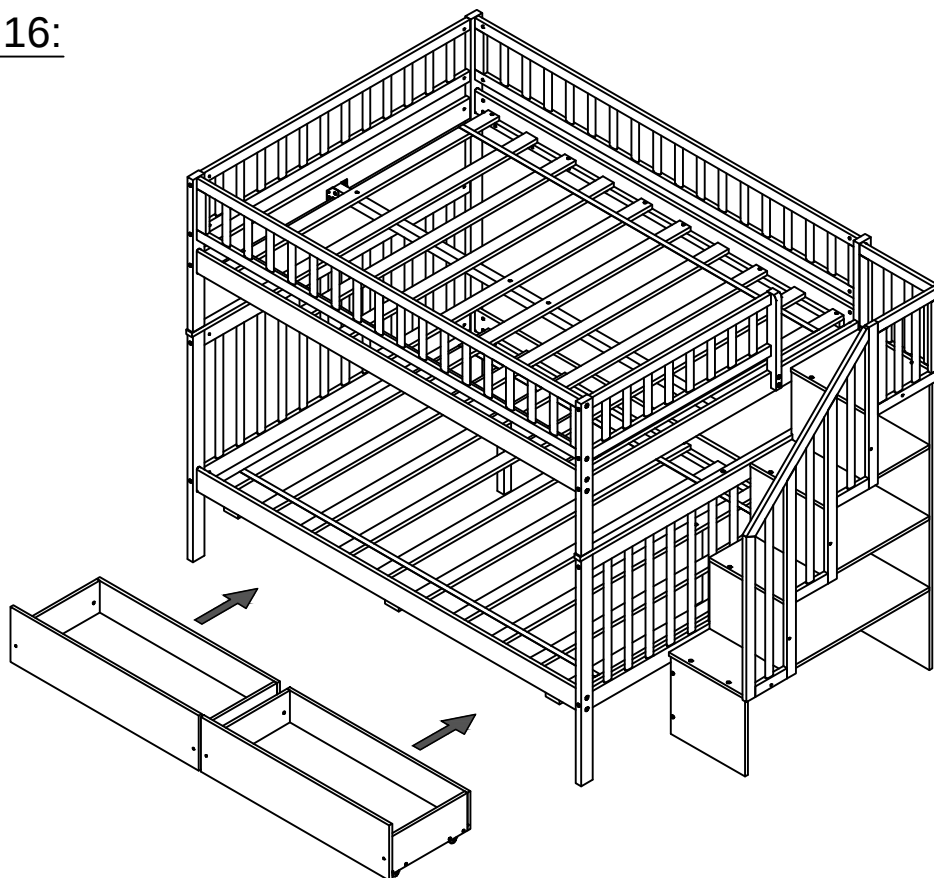

Push Drawer under the bottom of Bunkbed.

