



Assembly Instruction

HDPE Adirondack 2 Layer Side Table

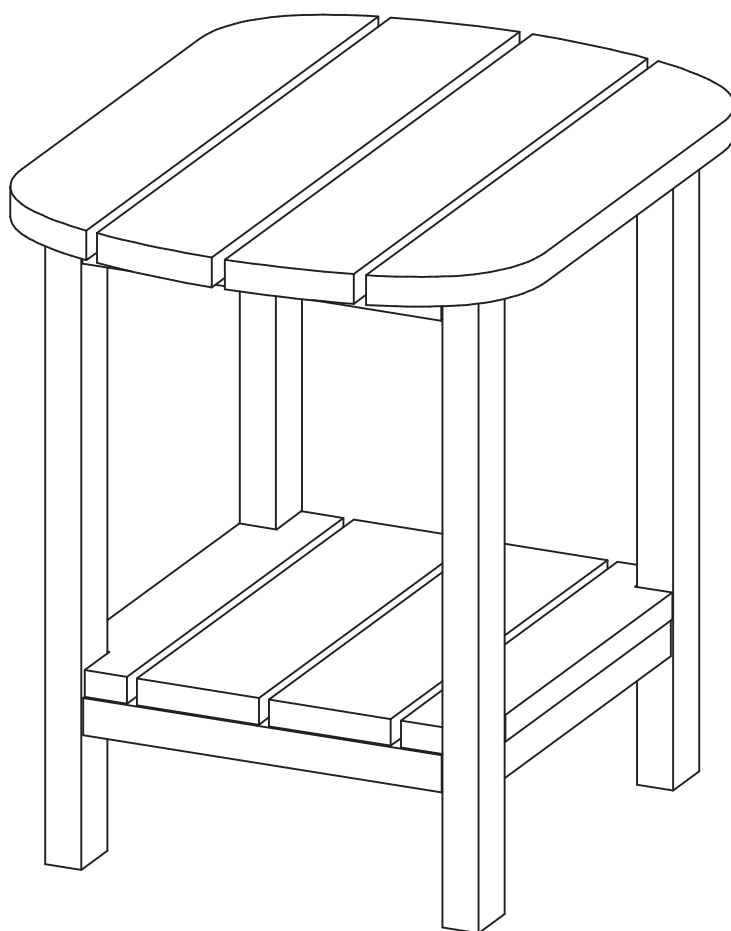

Parts:

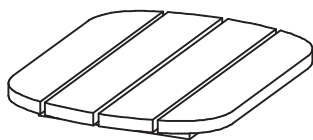


AX1



M6.3*50mm


1X8



BX2



2X1

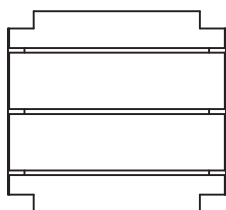


CX1




NOTE: UNIT SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
DO NOT TIGHTEN ANY BOLTS UNTIL ALL BOLTS HAVE BEEN STARTED!

PLEASE CONTROL THE DRILL SPEED SLOWLY WHEN ASSEMBLING ALL SCREWS, DON'T BE FAST!

STEP 1:

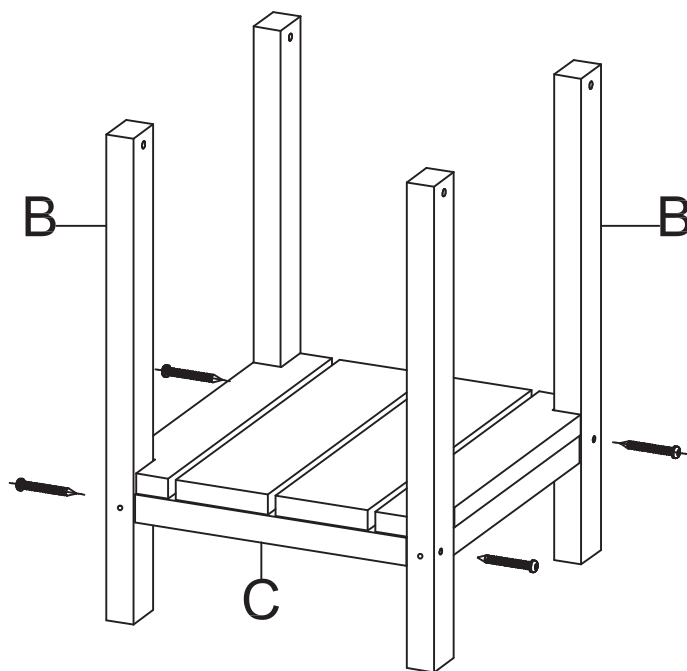

STEP 2:

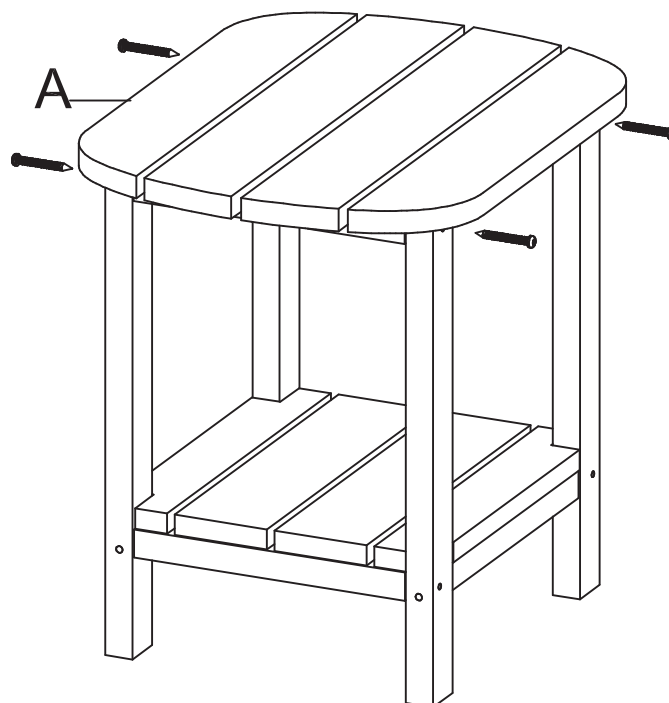

STEP 3:

