


FULL / QUEEN PANEL BED ASSEMBLY INSTRUCTIONS

BOX #1

- A. HEADBOARD 1PC
B. LEFT HEADBOARD LEG 1PC
C. RIGHT HEADBOARD LEG 1PC
D. FOOTBOARD 1PC

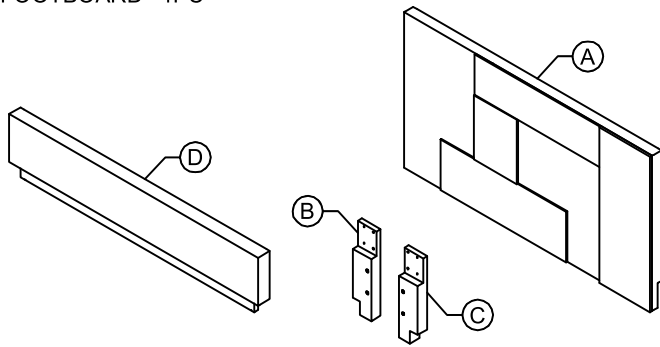


HARDWARE BOX #1

1	ALLEN BOLT (M6X40)		8 PCS
2	SPRING WASHER (M6)		8 PCS
3	FLAT WASHER (M6)		8 PCS
4	ALLEN KEY		1 PC

HARDWARE BOX #2


5	ALLEN BOLT (M8X25)		8 PCS
6	FLAT WASHER (M8)		8 PCS
7	WOOD SCREW (Ø8X30)		10 PCS
8	ALLEN BOLT (M6X40)		5 PCS
9	ALLEN KEY		1 PC

TOOL REQUIRED PHILLIPS
HEAD SCREW DRIVER
(NOT PROVIDED)




BOX #2


- E. LEFT SIDERAIL 1PC
F. RIGHT SIDERAIL 1PC
G. BED SLAT 5PCS
H. SLAT SUPPORT 5PCS

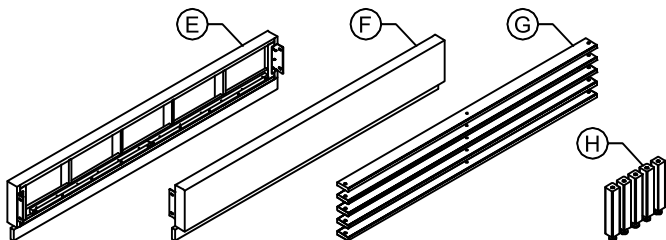

ASSEMBLY COMPLETE

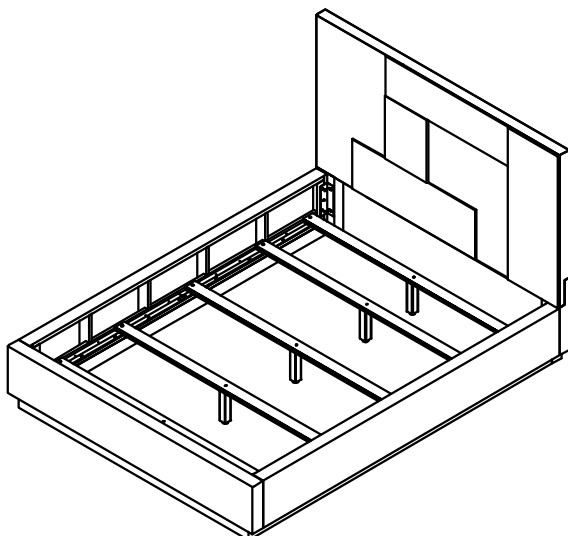


STEP 1 :

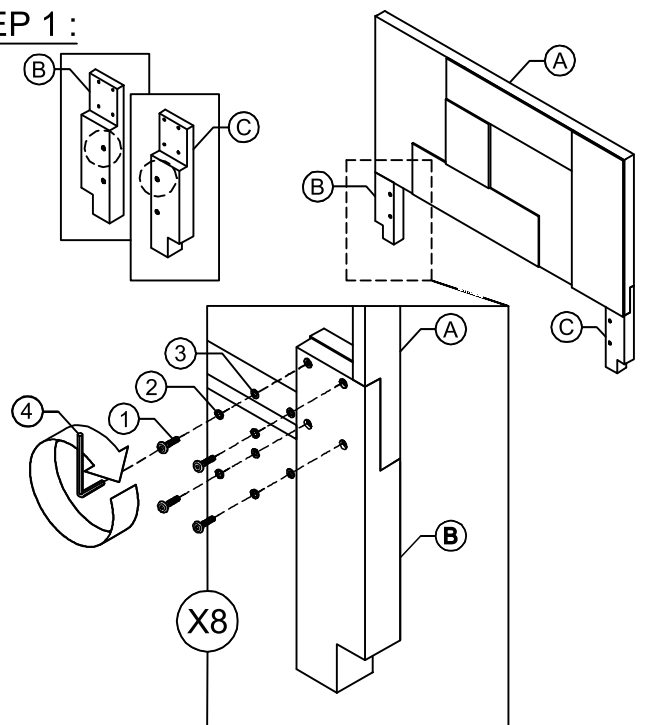


FULL / QUEEN PANEL BED ASSEMBLY INSTRUCTIONS


STEP 2 :

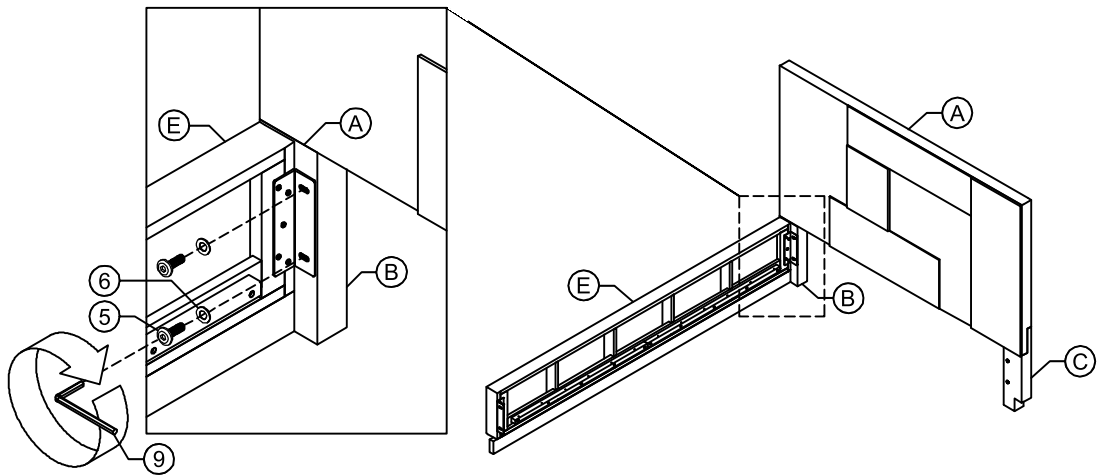

STEP 3 :

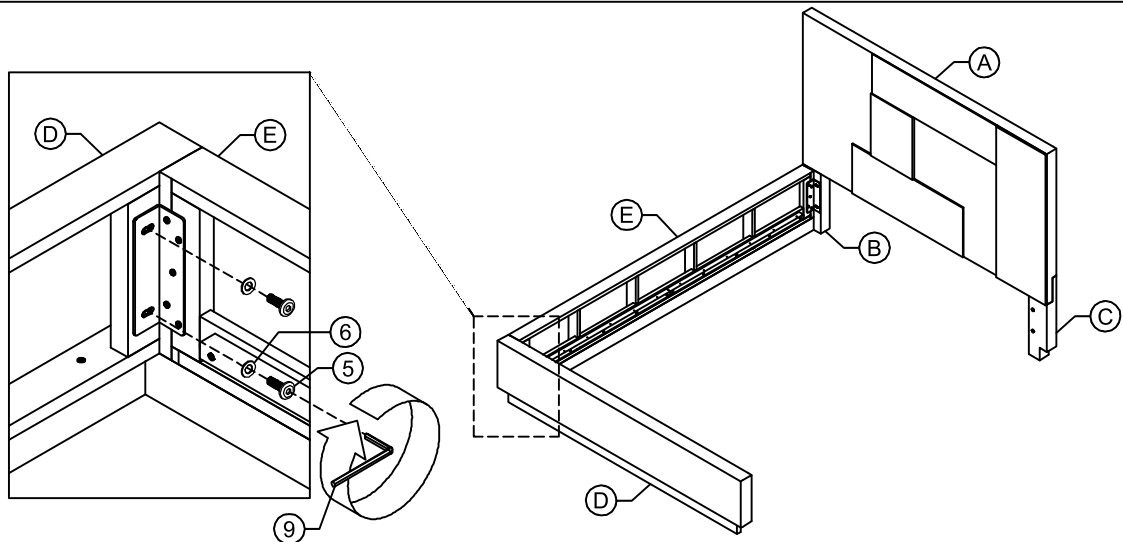

STEP 4 :

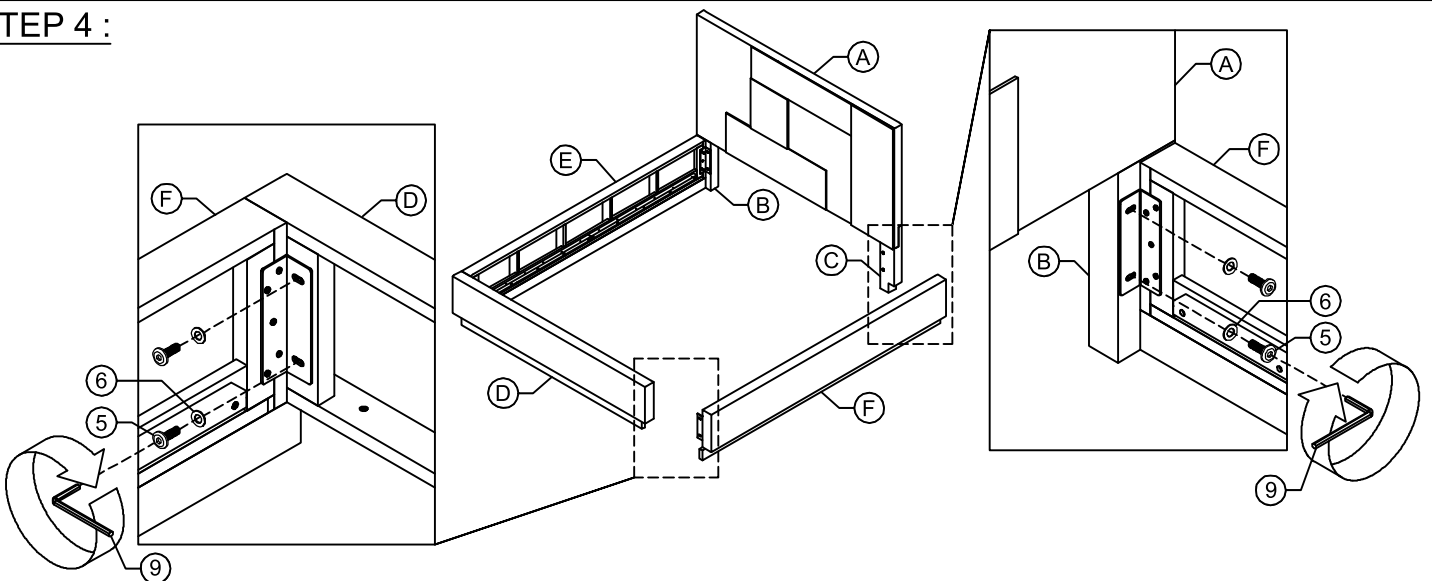


STOP


- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 5.

FULL / QUEEN PANEL BED ASSEMBLY INSTRUCTIONS

STEP 5 :

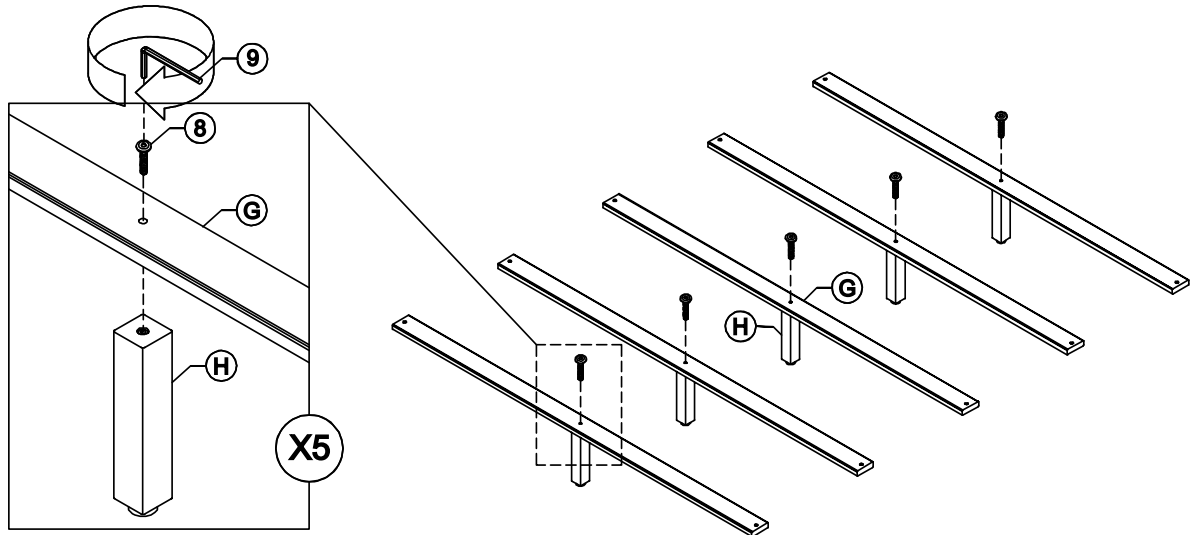

STEP 6 :

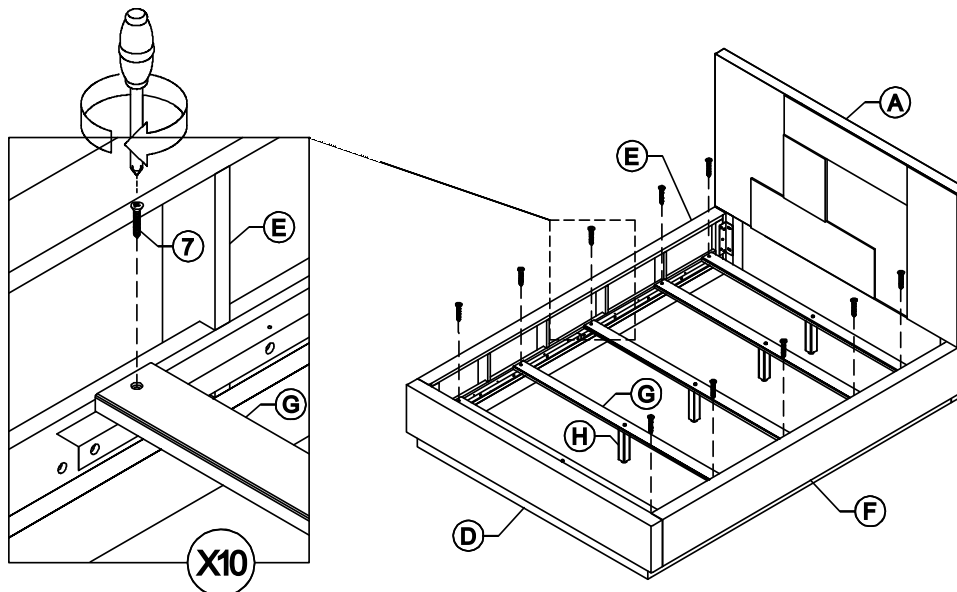


INSTRUCTIONS FOR ADJUSTING LEVELER :

Position the bed in your space and locate the leveler under each slat support (H).

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each slat support is applying equal, upward pressure on the bed slat support.

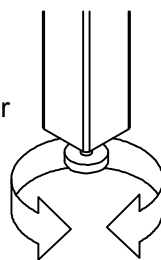

MAINTENANCE INSTRUCTION :

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it. Dragging can damage the slat support.
- Readjust levelers after moving your bed.

FULL / QUEEN PANEL BED

ASSEMBLY INSTRUCTIONS

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

G. BED SLAT

5 PCS

7. WOOD SCREW Ø8X30MM

10 PCS

H. SLAT SUPPORT


5 PCS

8. ALLEN BOLT 40MM

5 PCS

STEP 1 :

USE ALLEN KEY **(9)** TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

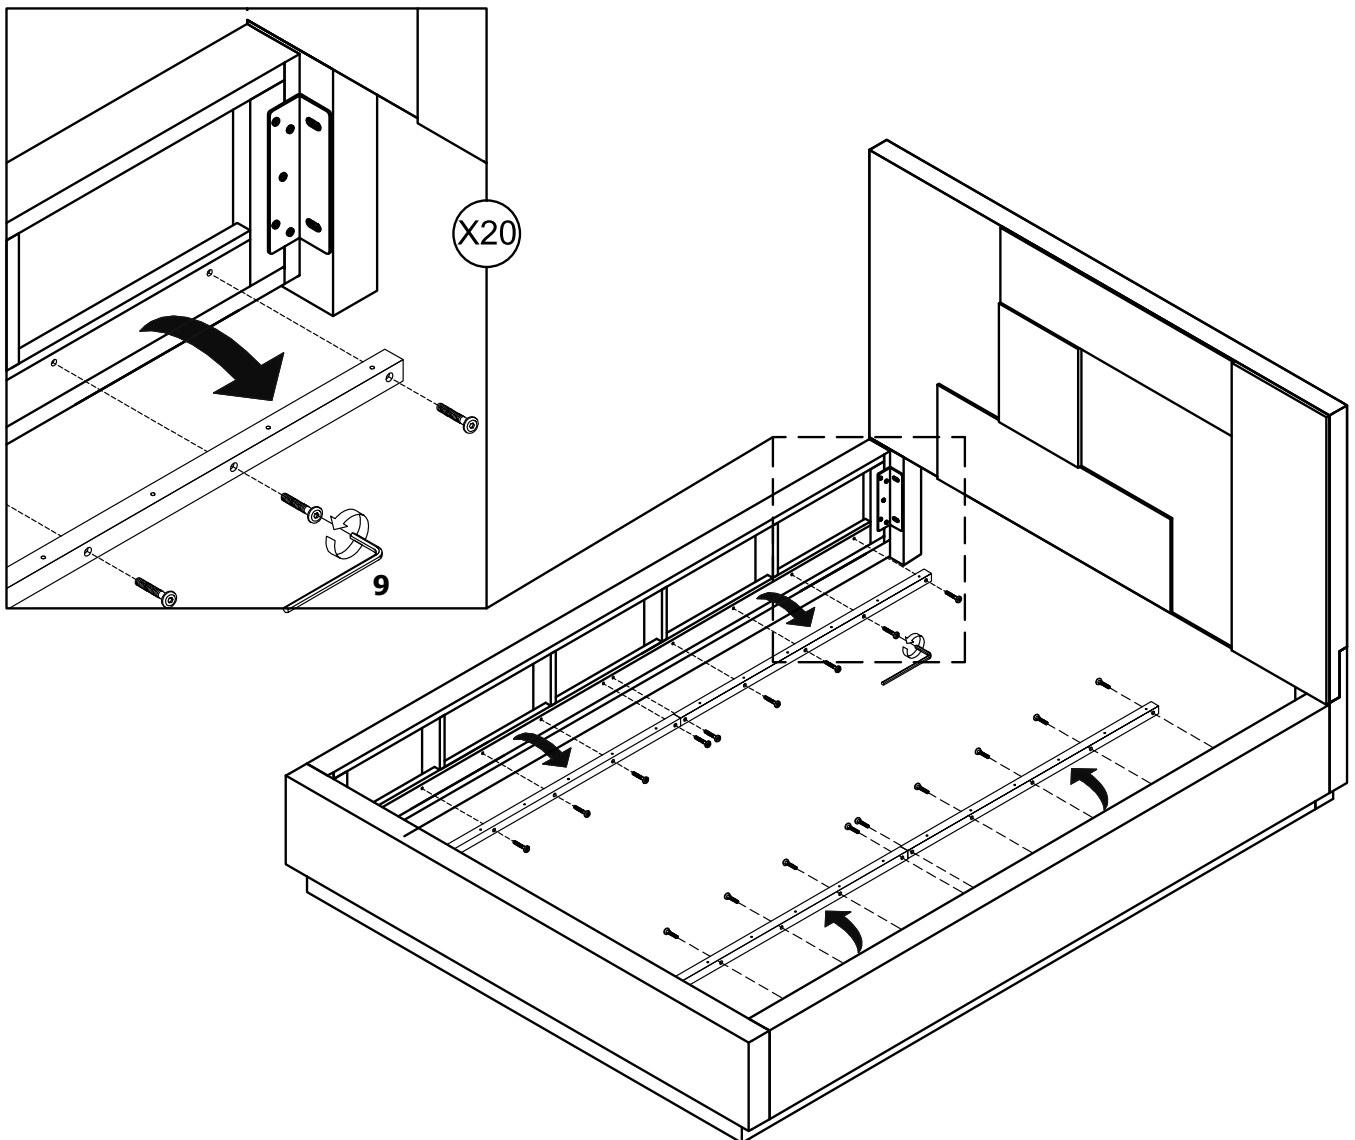

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

UPDATED : JANUARY 22ND, 2020